

OPUS Projektor Manual



1. Welcome	7
2. Quick Start Tutorial	13
2.1 Creating a Project	14
2.2 Designing Page Content	16
2.3 Simulate the Project	31
2.4 Preparations	33
3. User Interface	34
3.1 Convert Project	44
3.2 Copy and Paste	46
3.3 Drag and Drop	47
3.4 Image Library	50
3.5 Image Pool	58
3.6 Import Variables	63
3.7 Launcher	65
3.8 Licensing	67
3.9 New Project Format	68
3.10 Options	71
3.11 Page Editor	78
3.12 Project Properties	81
3.12.1 Image Handling	98
3.12.2 Languages	103
3.12.3 Units	103
3.12.4 Variable logging	105
3.12.5 Watchdog	113
3.13 Project Search	115
3.14 Project Versioning	131
3.15 Sample Projects	138
3.16 Start Page	147
3.17 Symbol Library	149
3.18 Undo/Redo	157
3.19 Variable View	161
3.20 Z-Order	163
4. Variables	165
4.1 Variable Owner Menus	172
4.2 Variable Menus	177
4.3 Pre-Defined Variables	186

5.	CAN	338
5.1	CANFreestyle	340
5.2	CANopen	360
5.3	J1939	374
5.3.1	J1939 Basic Settings	377
5.3.2	J1939 ECUs and Variables	381
5.3.3	J1939 PGN Mappings	392
5.3.4	J1939 DM1 and DM2	402
5.4	Import DBC File	413
5.5	Export DBC File	423
5.6	Visual CAN Mapping	429
6.	Object Reference	444
6.1	Common Object Properties	448
6.2	Events and Actions	463
6.3	General Objects	475
6.3.1	Page Object	475
6.3.2	Alarms	476
6.3.3	Virtual Keyboards	479
6.3.4	Softkey Frame	483
6.3.5	Softkey	485
6.4	Navigation Events	486
6.5	Palette Objects	491
6.5.1	2D Graph	491
6.5.1.1	Graph History Tool	500
6.5.2	Arched Bargraph	502
6.5.3	Button	504
6.5.4	Container	507
6.5.5	Frame	508
6.5.6	Gauges	509
6.5.7	Lamp	514
6.5.8	Linear Bargraph	516
6.5.9	List	517
6.5.10	Meter	521
6.5.11	Multimedia Player	525
6.5.12	Numeric Field	536
6.5.13	Picture Graphic	537
6.5.14	PDF Reader	540
6.5.15	Power Switch	540
6.5.16	Push Switch	542
6.5.17	Rocker Switch	544
6.5.18	Slider	546

6.5.19	String Field	548
6.5.20	Table	550
6.5.21	UT Primary View	553
6.5.22	UT Secondary View	553
6.6	Video Properties	553
7.	JavaScript	558
7.1	The JavaScript Editor	561
7.2	Assign a JavaScript file to an Event	571
7.3	JavaScript Basics	572
7.4	Custom JavaScript functions for device specific functionality	576
7.4.1	RS232 JavaScript Functions	609
7.5	Programming Guidelines	614
8.	Functionalities	616
8.1	Alarms	617
8.2	Animations	620
8.3	Day/Night Mode	625
8.4	ISOBUS Application	630
8.5	Object Themes	633
8.6	Visibility	641
8.7	UT Plugin	647
8.7.1	ISOBUS Ready Project	650
9.	Simulations	659
9.1	Simulation Settings	660
9.2	PClient Simulation	662
9.3	Variable Simulation Overview	665
9.3.1	Variable Simulation Toolbar	670
9.3.2	Variable Simulation Variable View	671
9.3.3	Variable Simulation - Value Operations	673
9.3.4	Variable Simulation - Variable Properties	678
9.3.5	Variable Simulation - Initialization Lists	678
9.3.6	Variable Simulation FAQ	680
10.	Device Software Update	681
10.1	Project Update	682
10.2	OS / PClient Update	717
10.2.1	Software Versions Overview	722
11.	Miscellaneous	724
11.1	Crash, Issue, Feedback reports	725

11.2	EULA	737
11.3	ISO 17215 Camera Configuration	739
11.4	Online Update	749
11.5	Open Source Information	759
11.6	Tutorial Videos	759
11.7	Welcome Projects	759
12.	How To	836
12.1	How to create switch buttons with changing colors	837
12.2	How to use one script for several buttons	837
12.3	How to create a drop down menu	837
12.4	How to use the automatic backlight dimming	838
12.5	How to set up SDO communication	838
12.6	How to remember variable values when the device is powered off	839
12.7	How to use the power management	839
12.8	How to use the digital outputs	842
12.9	How to process CAN messages with a multiplexer bit	843
12.10	How to create dynamic icons	844
12.11	How to communicate between an additional C++ program and the PClient	845
13.	FAQ	846
14.	Tips & Tricks	856
15.	Release Notes	858
16.	OPUS devices update manual	899
16.1	Overview	900
16.2	Contents of the software update	901
16.2.1	OS 1.x for A3 / A6G1	901
16.2.2	OS 2.x for A3 / A6G1	901
16.2.3	OS EGSPRO for A6G2 / A8	902
16.2.4	OS EGSCORE for B3 / B4 / B6	902
16.2.5	OS 1.x for B2 / B2+	902
16.2.6	OPUS Toolchain – PClient (and UT Plugin)	903
16.2.7	Codesys	903
16.2.8	ISO-VT (deprecated)	904
16.2.9	ISO-V2-Horizon	904
16.3	Updating the device	905
16.3.1	OPUS A3 / A6 G1	905
16.3.1.1	Updating from OS 0.x / 1.x to 2.x	907

16.3.1.2	Downgrading from OS 2.x to 1.x	907
16.3.2	OPUS A6 G2 / OPUS A8	907
16.3.3	OPUS B3 / B4 / B6	910
16.3.4	OPUS B2	912
16.3.5	ISO-V2-Horizon	914
16.3.6	Update via partition	916
16.4	Additional information	917
16.4.1	Connecting to the serial console	917
16.4.2	Using a different boot logo image	918
16.4.3	Manual update of the boot loader and service ramdisk (OS 1.x)	923
16.4.3.1	Manual update of the boot loader	923
16.4.3.2	Manual update of the service ramdisk	927
16.4.4	Touch Screen Calibration	928

Welcome

1 Welcome

If you are new to the OPUS Projektor, the best starting point is the [Quick Start Tutorial](#)¹⁴.

If you haven't downloaded the OPUS Projektor already, you can do that [here](#).

New content for this version

[Animations!](#)⁶²⁰
[Slider object](#)⁵⁴⁶

Many useful changes like:

[Object rotation](#)⁴⁵⁰
[Options to display too long texts in String Fields](#)⁵⁴⁹
[Alarm Frames can now be repositioned and resized](#)⁶²⁰
[Up to 4 PEAK dongles can be used for PClient simulation, 1 per CAN port](#)⁸⁶¹
[JavaScript repeat times down to min. 10 ms!](#)⁴⁶³
[ISOBUS Ready Project](#)⁶⁵⁰
[PDF Reader object](#)⁵⁴⁰

and much more...

Release Notes

[Here](#)⁶⁵⁹ you will find the release notes for the latest version of the OPUS Projektor.

i.MX 35 Support

Due to necessary internal changes in the device software, this version does not support i.MX 35 devices anymore. Projects for i.MX 35 devices can still be developed in version 2022.4.

Projects for i.MX 35 devices can be opened and a [project conversion](#)⁴⁴ is offered to one of the supported device types.

Version check!

Starting with version 2020.4, a version check is implemented in the PClient. Only if the major and minor version of the used development version and PClient version are the same, the project will be loaded. Otherwise a red warning screen will be shown that informs of the version discrepancy.

Important disclaimer!

Please note that for i.MX6 devices, installing the OS 2.x will prohibit a downgrade back to OS 1.x!

Once an OS 2.x is installed, there is currently no way to downgrade back to OS 1.x!

Limitations in the demo version

The demo version is limited to the creation of up to 2 pages and up to 5 user-defined variables.

Additional pages or variables cannot be created.

If a project is opened that exceeds one of these limitations, the project can not be downloaded to the device.

Read [here](#)⁶⁷ how to get a license!

Modification of images

It is not a good idea to modify images that are already located in the \original_images (bad idea) or the \terminal_files (very bad idea) sub-folders of your project folder.

If you want to modify images, please do so externally in another folder, and then drag & drop the image over the image you want to replace in the [Images node](#)⁵⁸ in the project tree.

Modifying the images in \terminal_files will lead to the deletion of them with the next save, because the program will realize that the image check sum isn't correct anymore, so it will re-generate the image.

Modifying the images in \original_images can lead to synchronization problems because the images are not refreshed "live", so the program will not show the modified image right away, which can lead to confusion.

Known issues

- GIF files can only be used as Image to Display for Picture Graphic objects, but not as background, needle, border etc. images
- For devices with multi touch, buttons should not be put too close together, especially for contrary functionalities (up/down or plus/minus). With distances < 1.5 cm a second press can sometimes not be recognized as such but will instead be registered as a false coordinate for the first finger, resulting in an unwanted release for the first button.
- Properties of objects should not excessively be changed before the modifications were actually seen on the screen.
- H.264 Ethernet camera streams might be buggy after returning from sleep mode
- Due to constraints in some OS's, the maximum value for the @RTC_Year variable has been reduced to 2037. Once new OS versions are released that have a higher maximum value, we will adapt the maximum variable value, as well.

All rights reserved, including translation.

No part of this operating manual may be reproduced, in any form, (print, photocopy, microfilm, or a different process), nor may it be processed, duplicated, or distributed using electronic systems, without written permission of the creator and distributor of the manual.

All previous versions are rendered obsolete with publication of this manual.

All information contained herein is subject to correction, manufacturer is not liable for any errors in this material.

This manual has 803 links, 156 chapters with ~196.000 words, ~987000 characters and 801 images.

Last change: 2025/04/25, revision 1283.

☐ List of changes:

- added new and modified video properties
- added PDF Reader object documentation
- added ISOBUS Ready project documentation
- added info about notification LED startup value storage button in welcome project
- added some remarks to CANopen chapter
- added animation pages in Welcome Project
- added reduced JavaScript repeat times
- added newest changes in Welcome Project
- added slider object
- added Animations chapter
- added example for Navigation Events (disable browse on touch)
- added ISOBUS functionality information
- added EULA information
- added information about removed JavaScript debugger in JavaScript page
- updated release notes for OPUS Projektor 2024.4.3
- updated release notes for OPUS Projektor 2024.4.1
- updated release notes for OPUS Projektor 2024.4.0
- added remark about saving javascripts
- added known issue about rtc hours
- remarks about JavaScript editor handling when closing project added in new project format chapter
- updated menu entries
- updated splash screen
- updated new project format information with latest changes
- Index/Subindex as parameter alternatives for JavaScript variable functions added
- New Project Format documentation added
- Power On/Off/Crash welcome screen added
- JavaScript Editor Find/Replace added
- Release Notes page added
- additional info added to UT Plugin page
- Program preparation page added to quick start tutorial
- Unit settings page added to welcome project documentation
- new gauge screen added to welcome project documentation
- ISO UT pages in welcome project documentation added
- Sample projects documentation added
- project coloring added to user interface
- updated crash report screenshot and information added
- some wrong topic links fixed
- updated Welcome Project pages documentation added

- UT Plugin page added
- JavaScript folders information added
- Commit options added
- new start page documented
- Navigation Events page added
- Watchdog page added
- new welcome project content added
- new event OnCancel added
- Search Tips & Tricks added
- new and changed welcome project screens added
- possibility to bulk-delete CAN mappings added in user interface
- validation information for J1939 DM1/2 translation files added
- language project properties updated with new functionality
- adjusted max. object width / height to 2 * max. device resolution
- new chapter Image Pool in User Interface
- new event OnValidStateChange
- video mirror information corrected and example images added
- Several small improvements
- Rounding up of power management timeout variables added to documentation
- New events OnProjektInitFinished and OnPageInitFinished
- New reporting features added
- JS function setVariableValid added
- Heartbeat page added to Welcome Project (2.3.9) documentation
- FAQ about PDF reader added
- known problem added
- remark about camera frame size and position added
- new screenshots for Welcome Project 2.3.1
- audio options in events and actions corrected
- copy buttons added in key/ encoder color page in Welcome Project
- New pages low power times and alarm logging in Welcome Project
- Error -93 in Updater FAQ for Ethernet transfer
- variable list updated
- multi touch added to known issues
- FAQ about screenshots added
- constraints of using GIF files added, incl. FAQ and known issues
- Updater CLI documentation added
- tradeshow dashboard added
- New screenshot for new themes
- Introduced text variables for pre-defined variables chapter device descriptions
- Update of Ethernet FAQ
- Updated some screenshots for updater settings in welcome project
- New screenshot for DayNight
- OS/PCClient update with partition in update manual
- New splash for pdf manual
- Icon reference in welcome project added
- New chapter for [project search](#)¹¹⁵
- New chapter for [versioning system](#)¹³¹
- New chapter for [undo-redo](#)¹⁵⁷
- New page multi language in Welcome Project
- Added font FAQ
- Added documentation for rsc JS command

- Corrections in variable logging chapter
- Touch Input property for list objects documentation added
- list object documentation improved
- runSystemCommand function added
- documentation for openPDFReader JS function added
- EEPROM page added to welcome project documentation
- CANopen PDO page added to welcome project documentation
- info about rtsp availability
- updated tour link
- known issues added on welcome page

Older Versions: [2024](#), [2023](#), [2022](#), [2021](#), [2020](#)

[Open Source Software Information](#) 

[EULA](#) 

[Imprint](#)

[Privacy policy](#)

© 2025 Topcon Electronics GmbH

All rights reserved. Unless otherwise specified, no part of this document may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the address below.

Topcon Electronics GmbH

Industriestraße 7

65366 Geisenheim

Germany

Phone: +49 6722 4026 0

E-Mail: opus-support@topcon.com

Web: www.topcon-electronics.com

Quick Start Tutorial

2 Quick Start Tutorial



Tour of the OPUS Projektor


<https://www.youtube.com/playlist?list=PLhLYlu1YL064ENX6BsFDBaUDtaBr6TD4L>

This quick start tutorial demonstrates the basic steps to create a display project. Start with [creating a project](#)¹⁴, then continue with [designing the page content](#)¹⁶, then [simulate the project](#)³¹.


If you haven't unpacked the program yet, check how to do that [here](#).

2.1 Creating a Project

To create a new project, click on the **New Project** button in the toolbar (1) or use the menu **File -> New Project...**

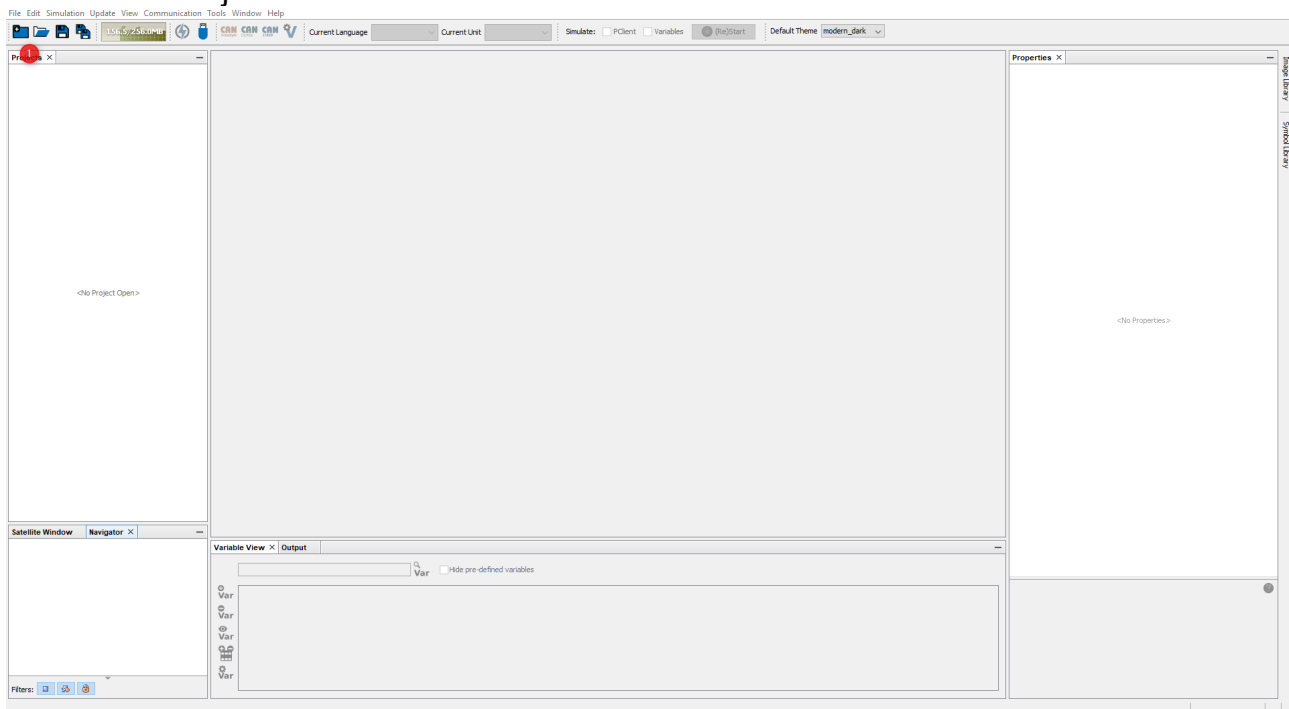

The **New Project** window opens. Stay on the General category and click the **Next** button (2) After you finished the tutorial, you are invited to check out some of the sample projects that you can access in this dialog.

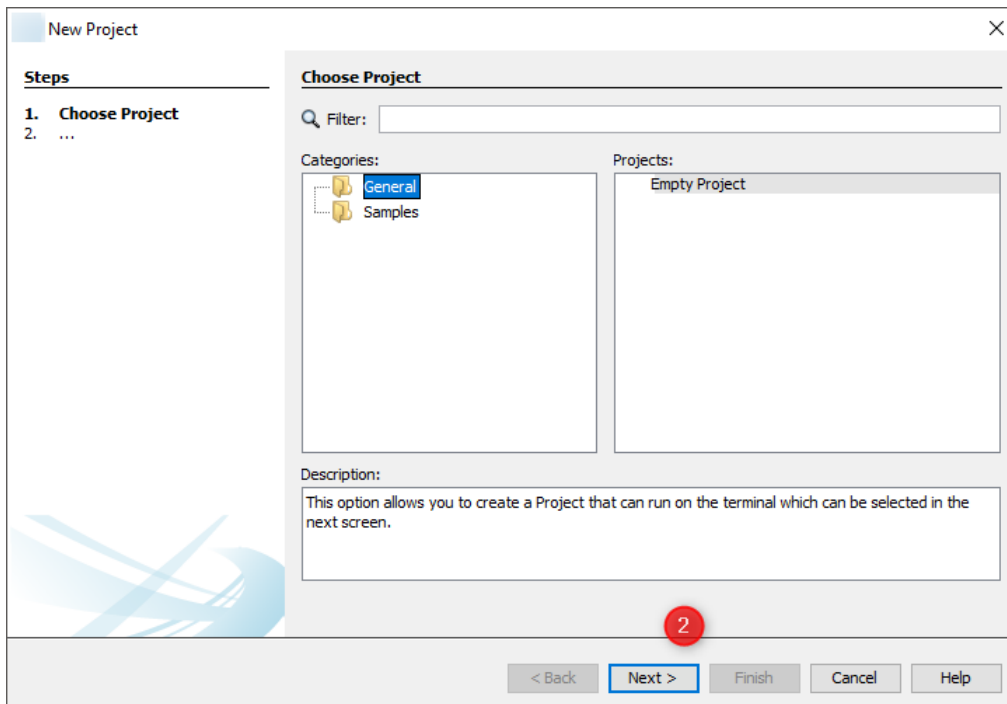

In the next step you have to provide the following information:


- The project name
- The directory where the project will be stored
- The project type. Default is correct for the tutorial.
- The display device and orientation the project shall run on (for the tutorial, leave the display that is selected by default)
- Versioning: For productive projects it's a good idea to activate [project versioning](#)¹³¹, for our tutorial project it's okay to disable it.
- Click **Finish** button to complete the project creation.

Continue with [designing page content](#)¹⁶.


2.2 Designing Page Content

A new project always comes with a page having a default page name. By following the next steps the page name can be changed.

- Check the name **Home Page** in the project tree. (8)
- The **Home Page** has been opened. (9)
- In the **Properties** window change the page name into **Gauges Page**. (10)

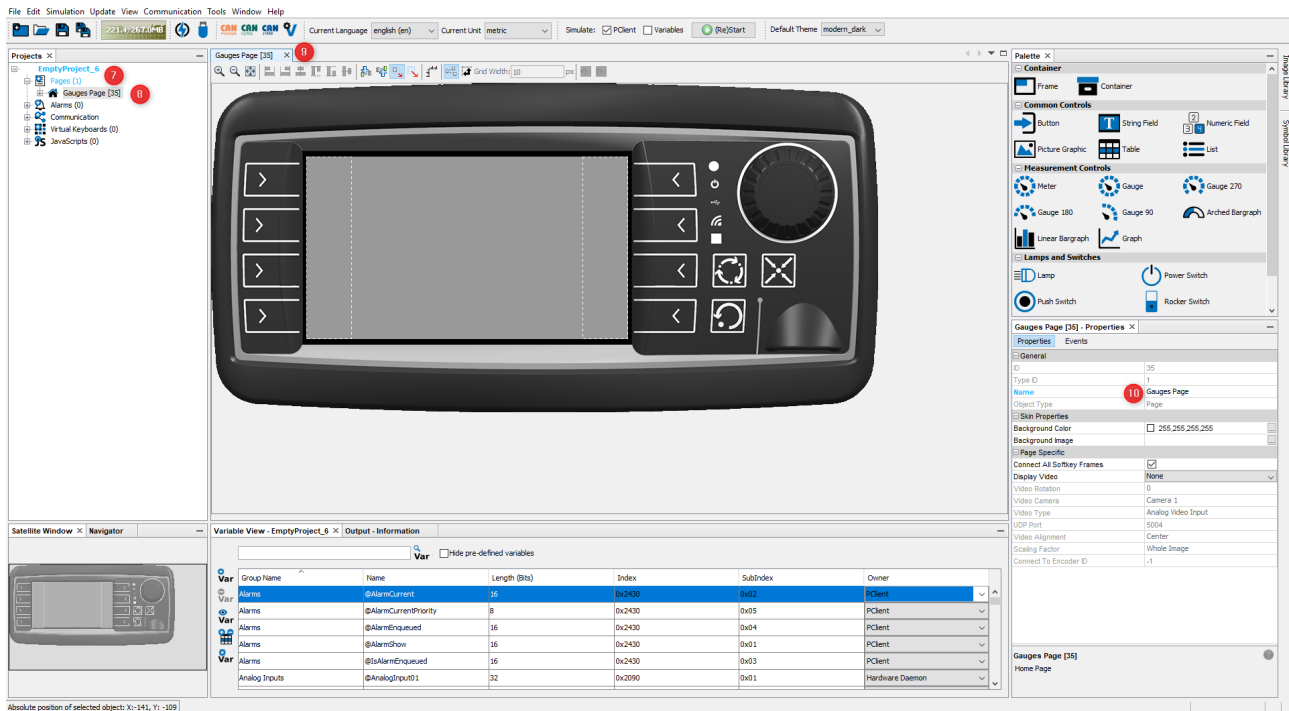

In this tutorial, the basic page layout is given by a background image. To add a background image, open the Image Library tab (11), and use the Browse button (12) to add the folder where the tutorial images were saved. Then select the image Training Background1.png (13) and drag & drop it onto the gray frame in the virtual device (14). Select the Frame 1 and then Background Image.

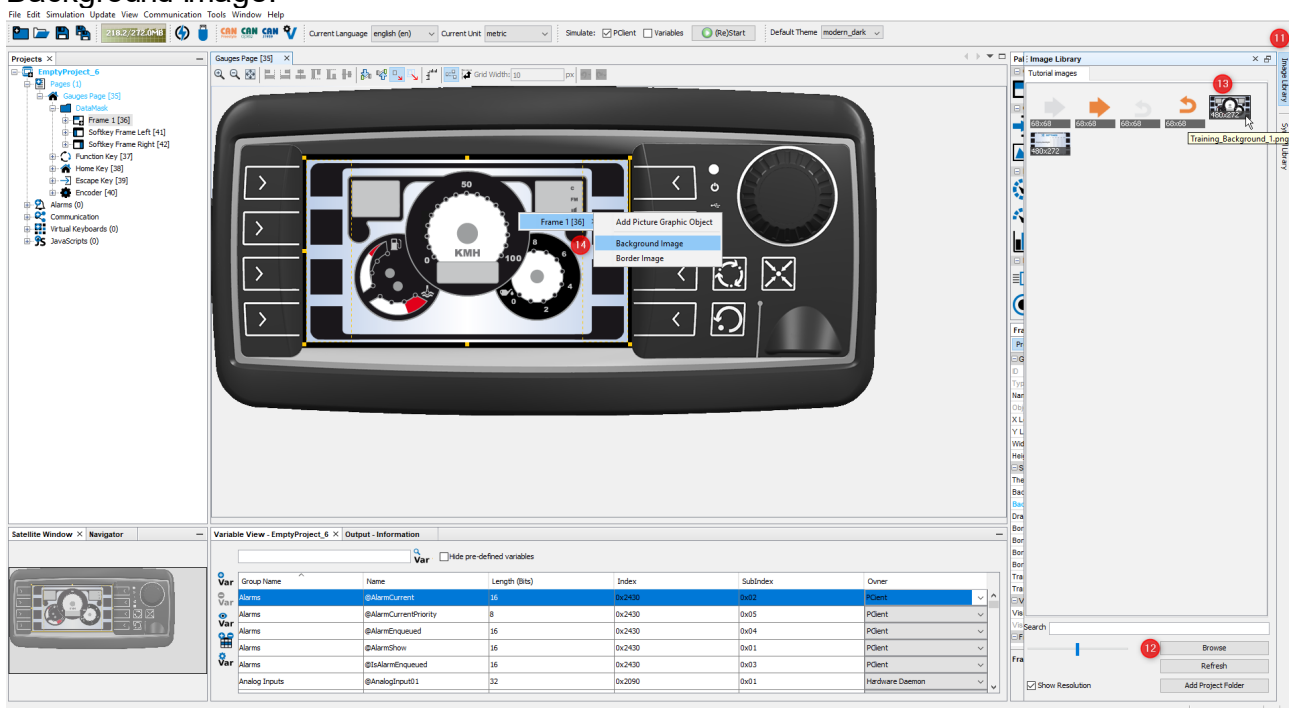

Note that the image now has a suffix _480_272 in the file name . A new instance of the image in this resolution is automatically created.

Visualization of Received Values

Adding a Gauges Needle

Now you're ready to add the **Meter** object.

- Drag the **Meter** object from the **Palette** (15) and drop it in the editor (16).




Now change the following properties of the **Meter** in the **Properties** window (for the min/max values use the exact order as listed here):

Make sure that the **Meter** object is selected in the scene!

- Select the **Theme Template** "modern_bright"
- **X Location**: 181
- **Y Location**: 51
- **Width**: 118
- **Height**: 118 (will be set automatically when you set the width)
- Check **Transparent**
- **Max Value**: 100
- **Absolute Max Value**: 100
- **Min Value**: 0
- **Absolute Min Value**: 0
- **Start Angle**: 325
- **End Angle**: 215
- Uncheck **Draw Ticks**


Here is what the result looks like:

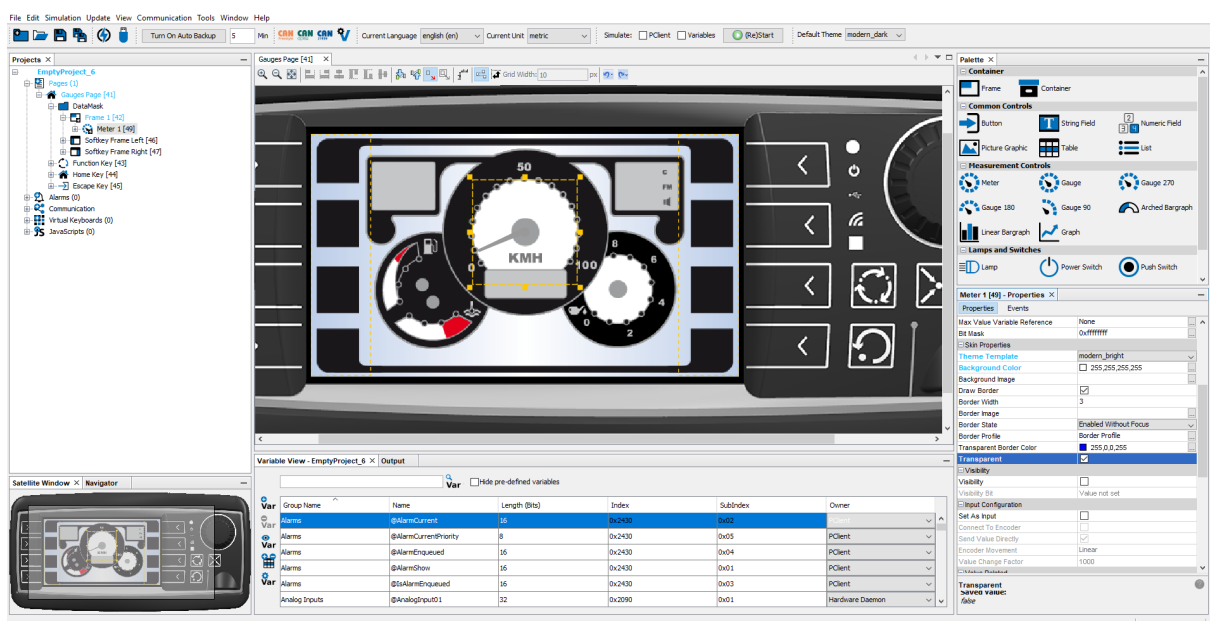

Attaching a Variable to the Meter

To be able to change the value shown by the meter, you need to create a variable and attach it to the meter:

- Click the **Add New Variable** button (17) of the **Variable View**.
- A new variable with name **New Variable_1** is created.
- Change the Variable **Name** of **New Variable_1** into **kmh** (18).

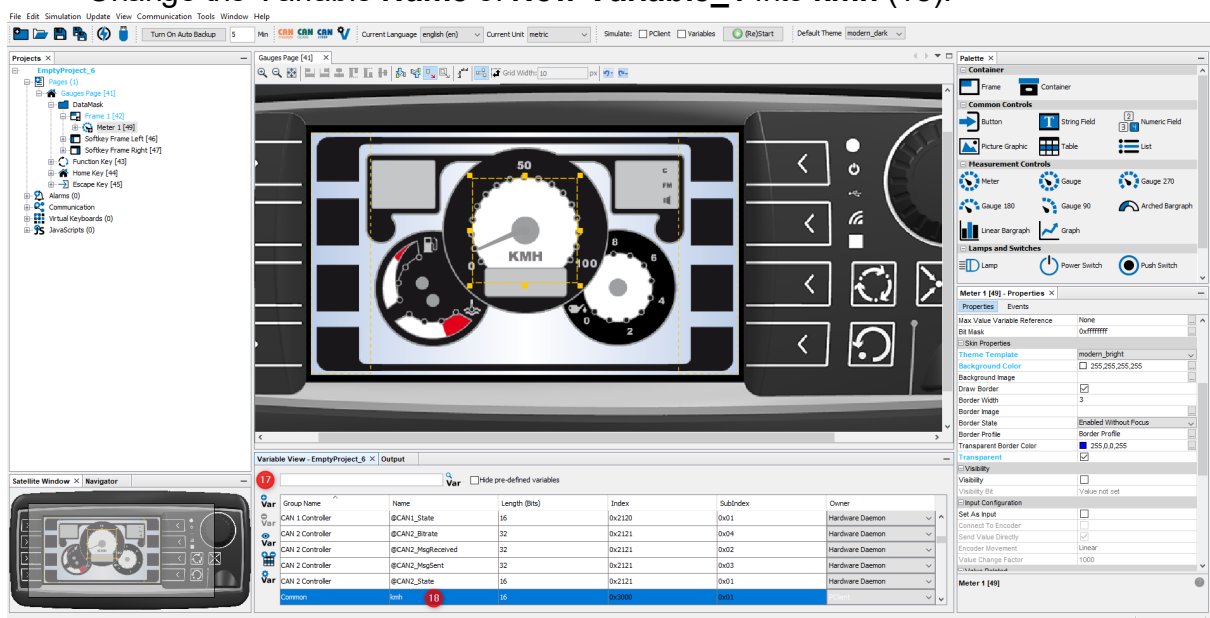


To make it easier to work with variables you have created, there are two possibilities to reduce the amount of variables shown in the **Variable View**:

- One option is to check the **Hide pre-defined variables** check box (19).
- A second option is to enter a search string (e.g. the variable name **kmh**) in the search area (20).
- In both cases, the amount of visible variables is reduced.


Now you need to attach the variable **kmh** to the meter:

- Click the **kmh** variable row to select it and drag & drop the variable over the meter. You can also drop the variable on the **Meter 1** in the project tree (22).
- A context menu appears. In the first level, select the Meter 1 object. In the second level, select the **Variable Reference** option (21).
- You can now check in the **Properties** window, that the variable **kmh** is referenced by the meter object (23).

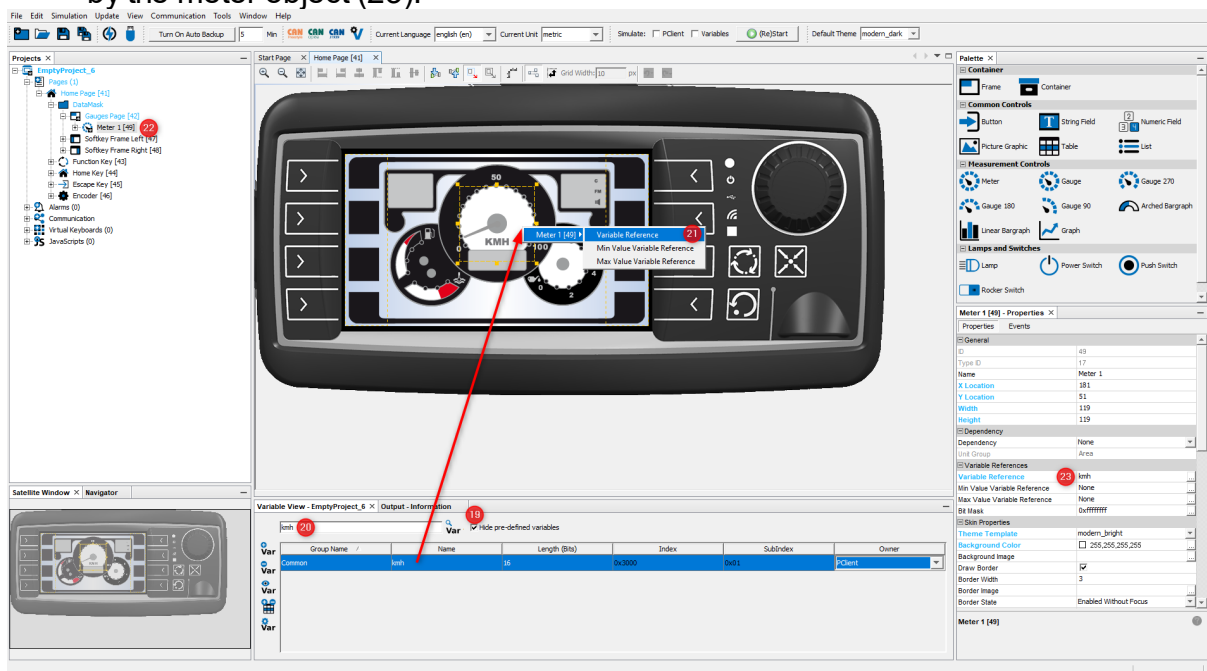

Later we will simulate the project. To be able to easily simulate the correct variable values, we have to set the minimum and maximum values of the **kmh** variable:


- Select the **kmh** variable in the **Variable View** (24).
- Open the right click context menu of the **kmh** variable and choose **Edit in Variable Manager** (25).

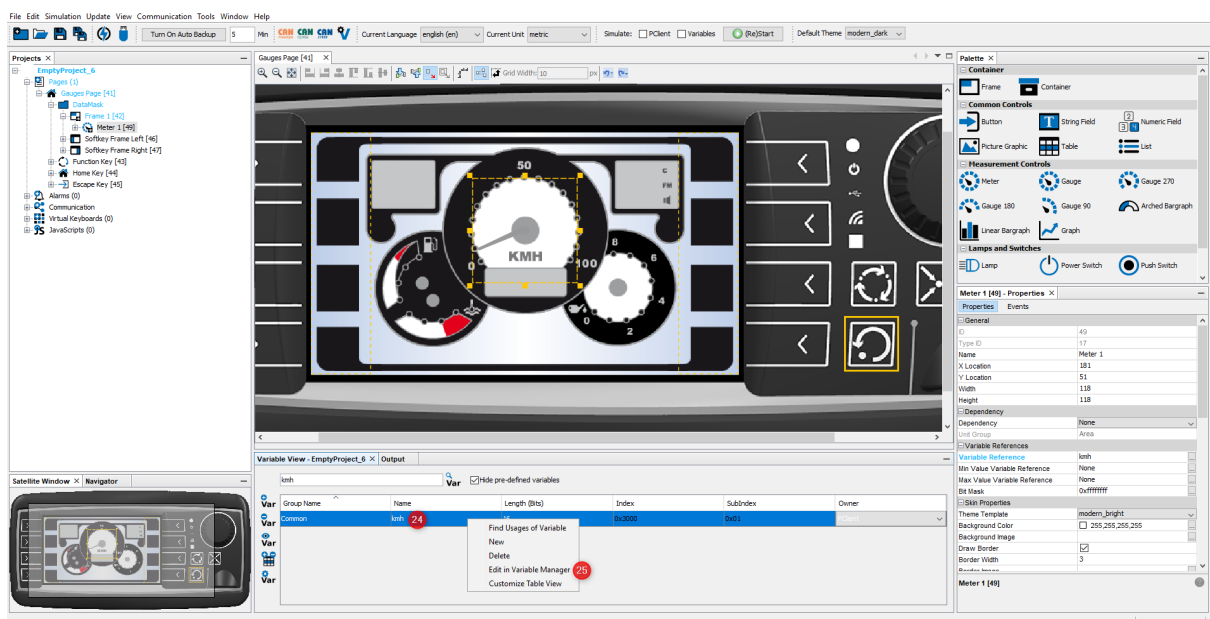

The **Variable Manager** window opens: Set the following properties:

- **Minimum Value:** 10
- **Maximum Value:** 170
- **Default Value:** 10

Then close the window by clicking the **OK** button (22).

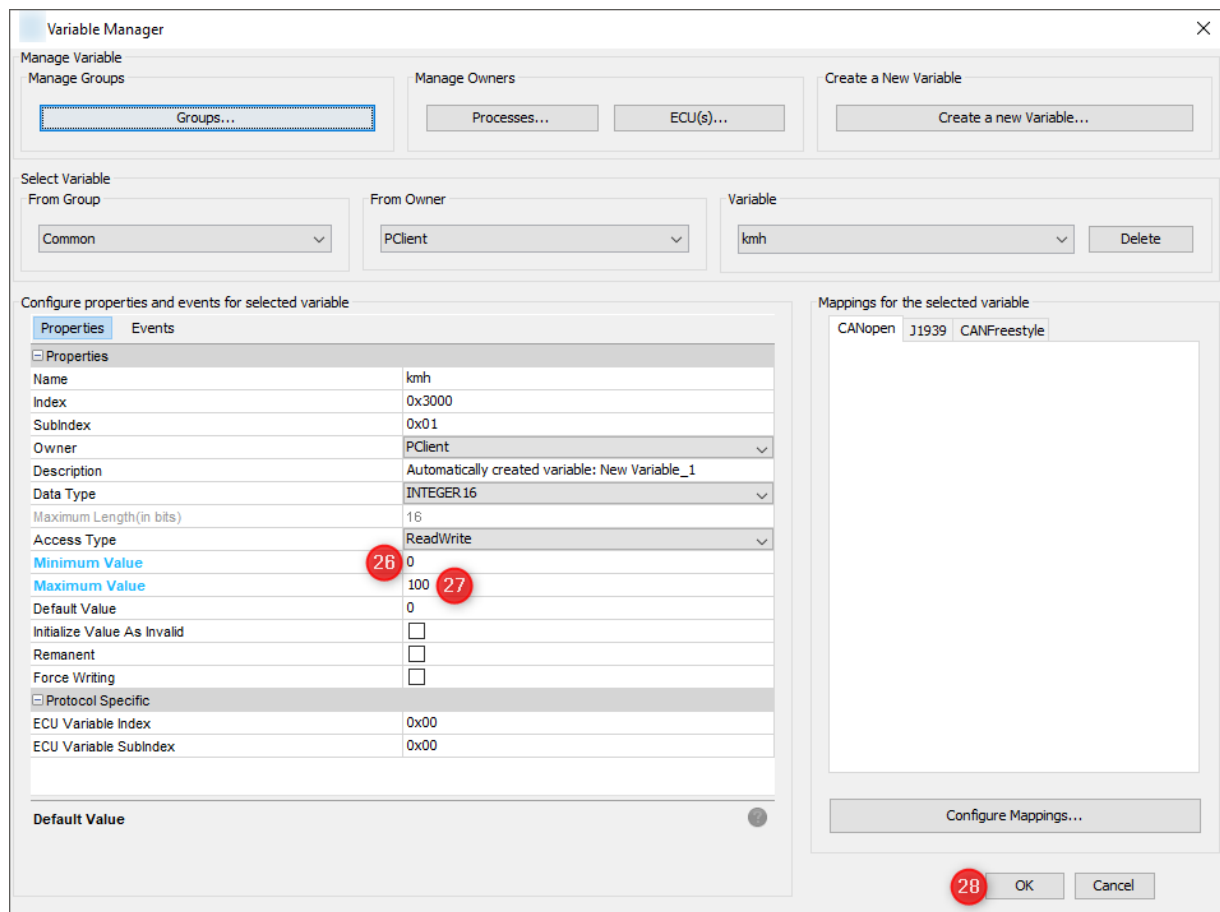


Configure How Variable KMH is Received via CAN

Setting up CAN communication start with the port configuration:

- Choose **Port Configuration...** from the menu **Communication** (29).

In the **Port Configuration** window:

- Select **CAN:1** (30).
- Set the Bus Speed to **250 kbps** (31).
- Close the window by clicking **OK** button (32).

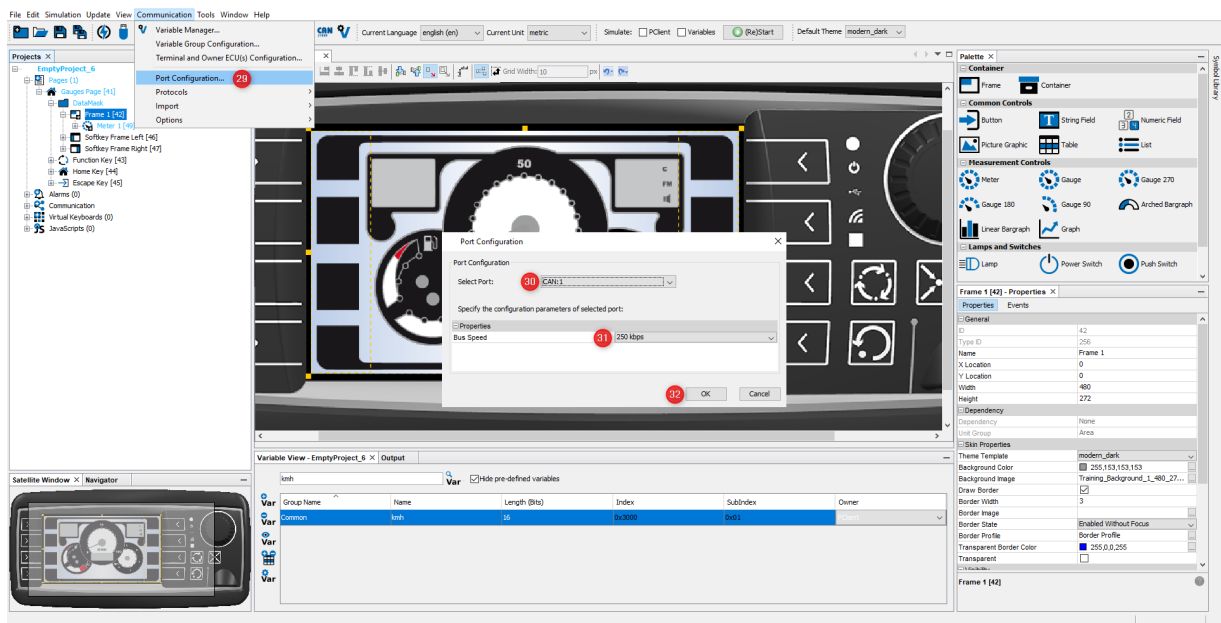


After configuring the CAN port, the CAN protocol and a communication partner, e.g. an ECU, must be defined:

- Click the **Terminal and Owner ECU(s) Configuration...** entry in the **Communication** menu (33).


The **Terminal and Owner ECU(s) Configuration...** dialog appears.

- Choose protocol **CANFreestyle running on CAN1** (34) and click the **Add** button (35).
- Choose **CANFreestyle running on CAN1** (36).
- Enter ECU Name **MyECU** (37) and click the **Add** button (38).
- Now the ECU is listed in the **Select ECU** dropdown menu (39).
- Close the window by clicking **OK** button (40).

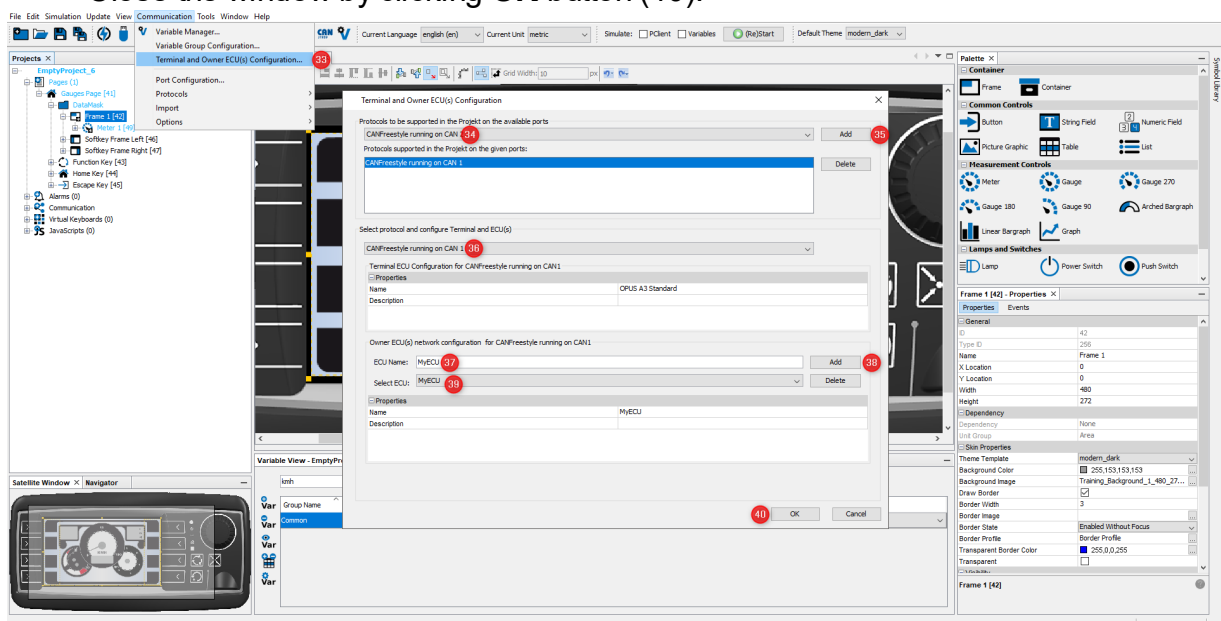


Now it's time to create a CAN mapping for the CAN message and add the **kmh** variable to this message:

- Click on the CANFreestyle shortcut button in the toolbar or, alternatively, go to the menu **Communication -> Protocols -> CANFreestyle -> Configure Mappings...** in the **Communication** menu.

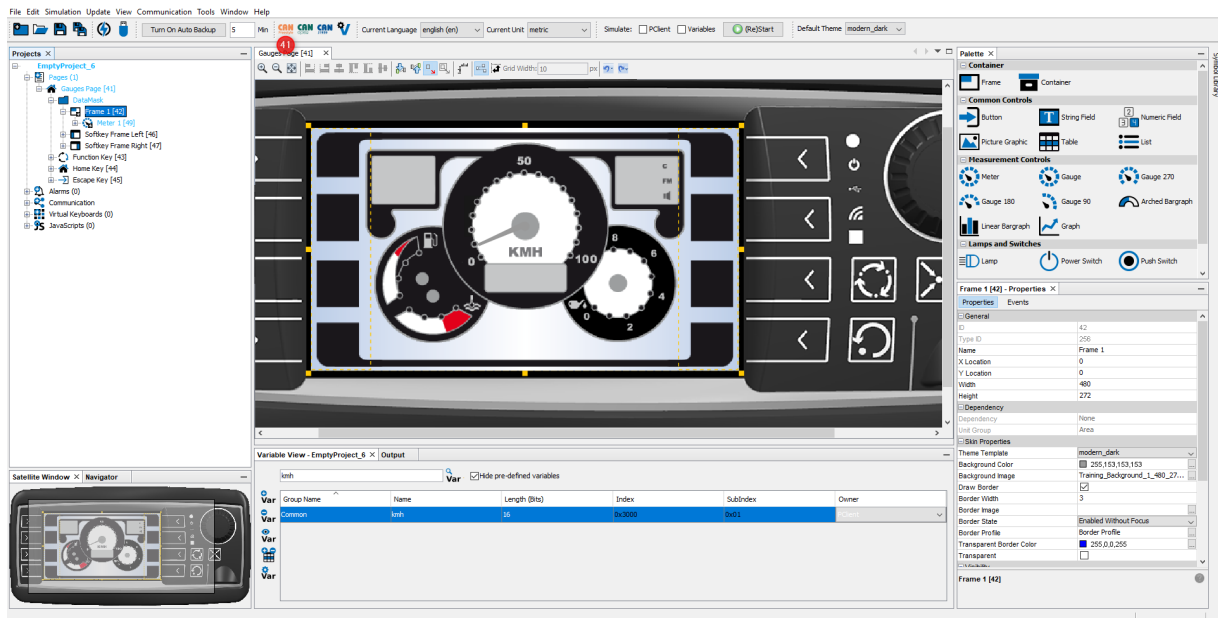


The **CANFreestyle Configure Mappings** dialog appears. Make the following settings:

- Enter **MessageFromMyECU** as the message name (41).
- Choose **Receive** to create a message that is received by the display (42).
- Click the **Add** button to create the receive message (43).
- Select **MessageFromMyECU** (44).
- Change the CAN ID Type to **29 Bit** (45).
- Enter the message CAN ID **0x4711** (46).
- Switch to **Visual CAN Mapping** (47).

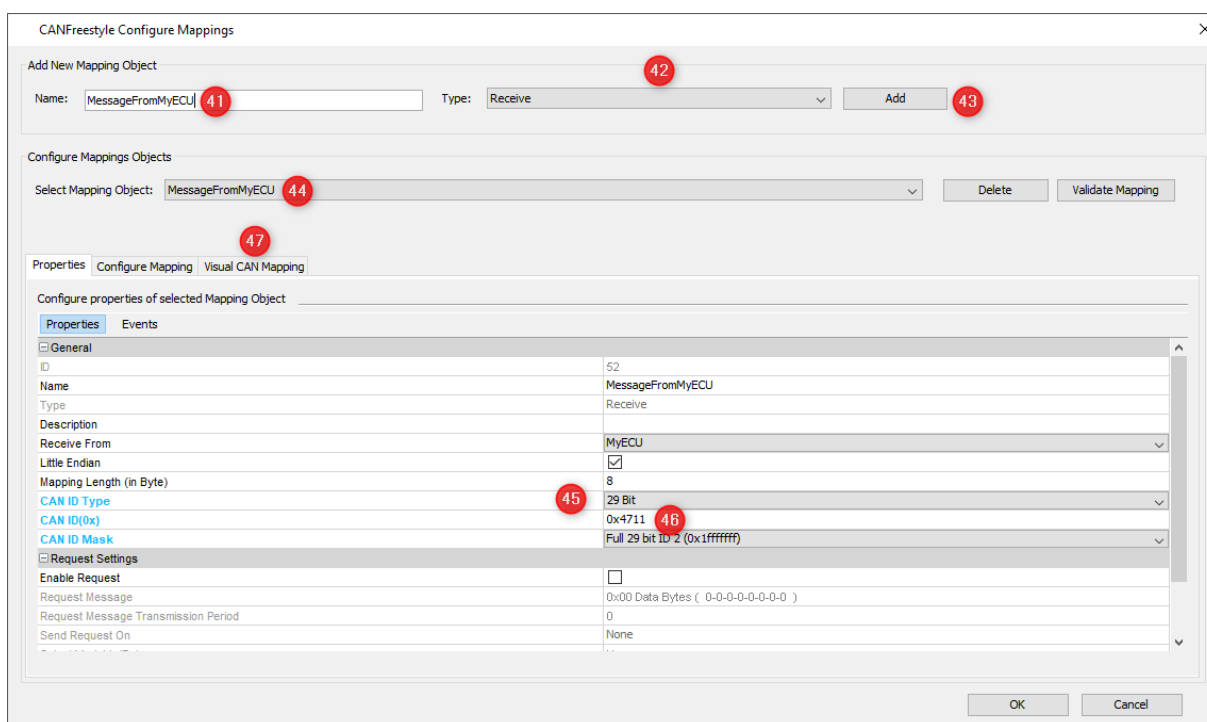

- In the search field on the right (47) type the name of the variable, **kmh**.
- Select the variable (23) and drag & drop it into Bit 1, Byte 1 of the CAN mapping (49).
- Close the window by clicking **OK** button.

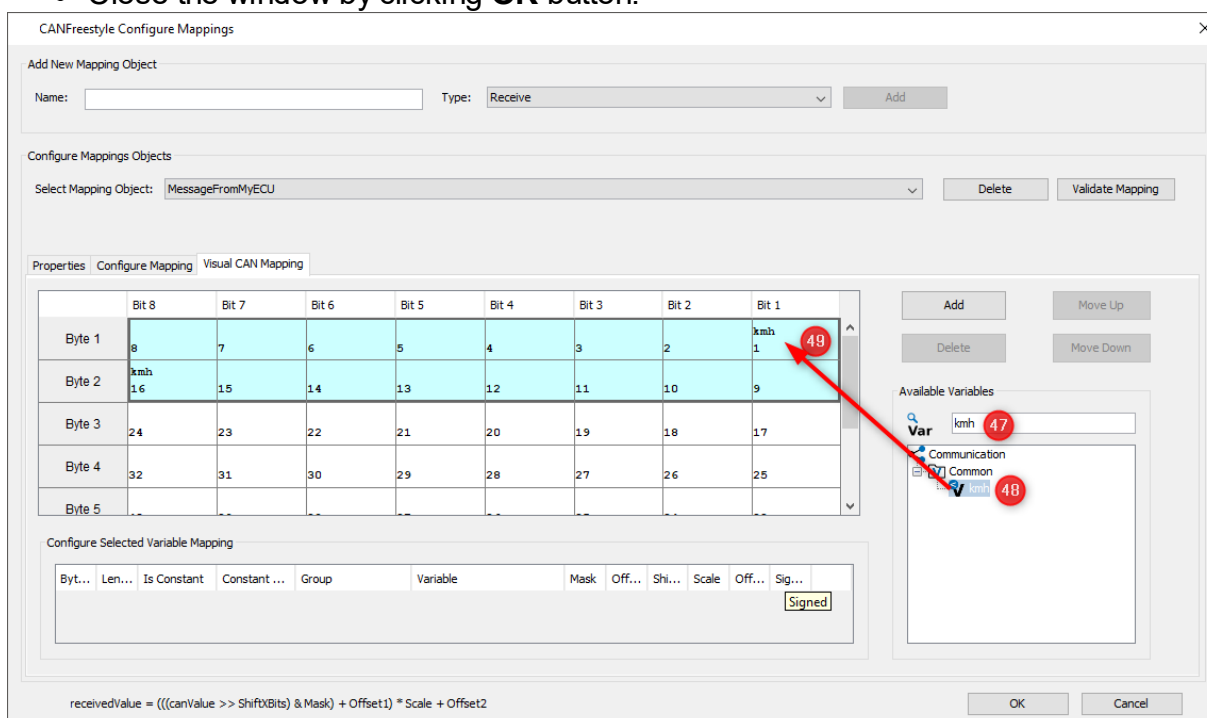

Now you have created a CAN message with CAN ID 0x4711 (Hex) that transmits 4 Byte of data. The data is used as value for variable **kmh**.


Whenever this message is received, the value of **kmh** variable is updated. Because the meter references the **kmh** variable, the meter needle will immediately show the received

value. It's important to remember that the message length has to be the same for the display and the ECU. If only parts of the message are needed, use a constant with mask set to 0 to extend the message.

Create a New Page

In a next step a new page is added. Further the navigation between the two pages is defined.

- To create a new page use the right click context menu and choose **New Page** (50).
- A new page with name **Page 1** is created (51).
- A new editor tab is opened showing the new page **Page 1** (52).

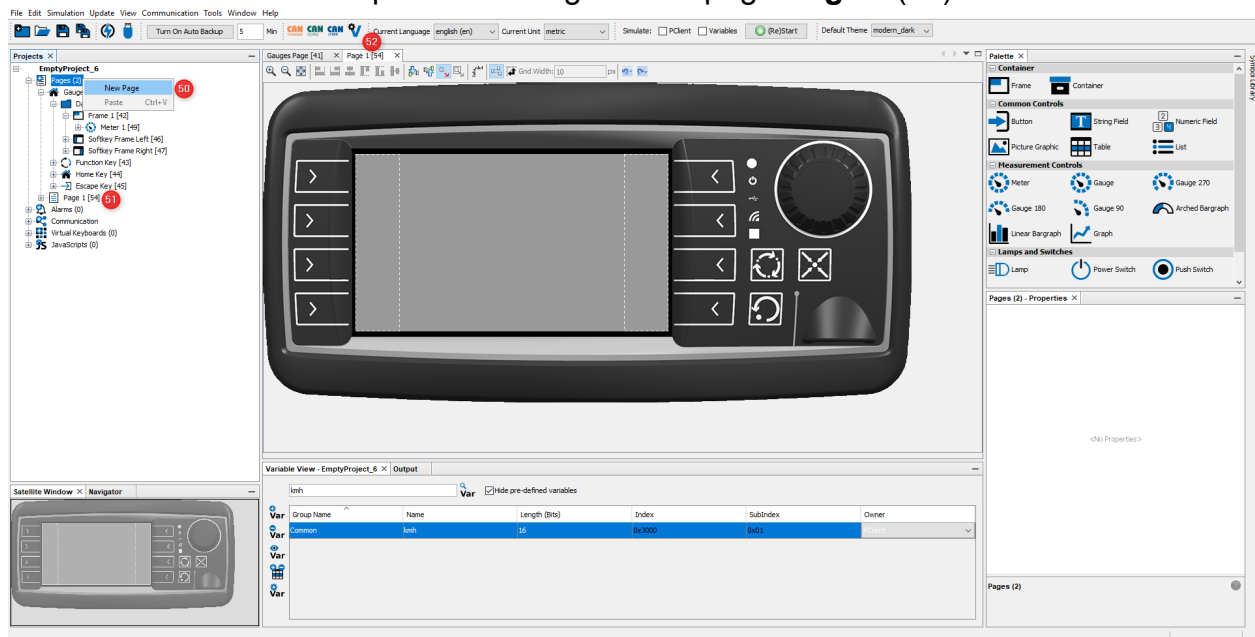

As you did [in the first page](#)¹⁶:

- In the **Properties** window of the page change the name into **Configuration** (53).
- Add the training background 2 image from the Image Library and add it as a background image for the frame (54).
- The new page now has the selected background picture (55).




Define Navigation Between Pages

The eight keys at the left and right screen border are called softkeys. You can place icons close to the softkeys into the **Softkey Frame** on the screen to describe the function of each softkey. The function can be triggered by pressing the appropriate key or by pressing the icon on the screen, if a touch screen is available. Softkeys will be used for the navigation between the pages.


The **Softkey Frames** for the row of softkeys at the left and right screen border were created automatically. But you still need to create a softkey level to configure the keys. We will start with the **Configuration** page:

- Open the right click context menu of **Softkey Frame Left** and choose **Create Softkey Level (56)**
- Alternatively you can right-click on the **Softkey Frame** itself and select **Create Softkey Level (57)**

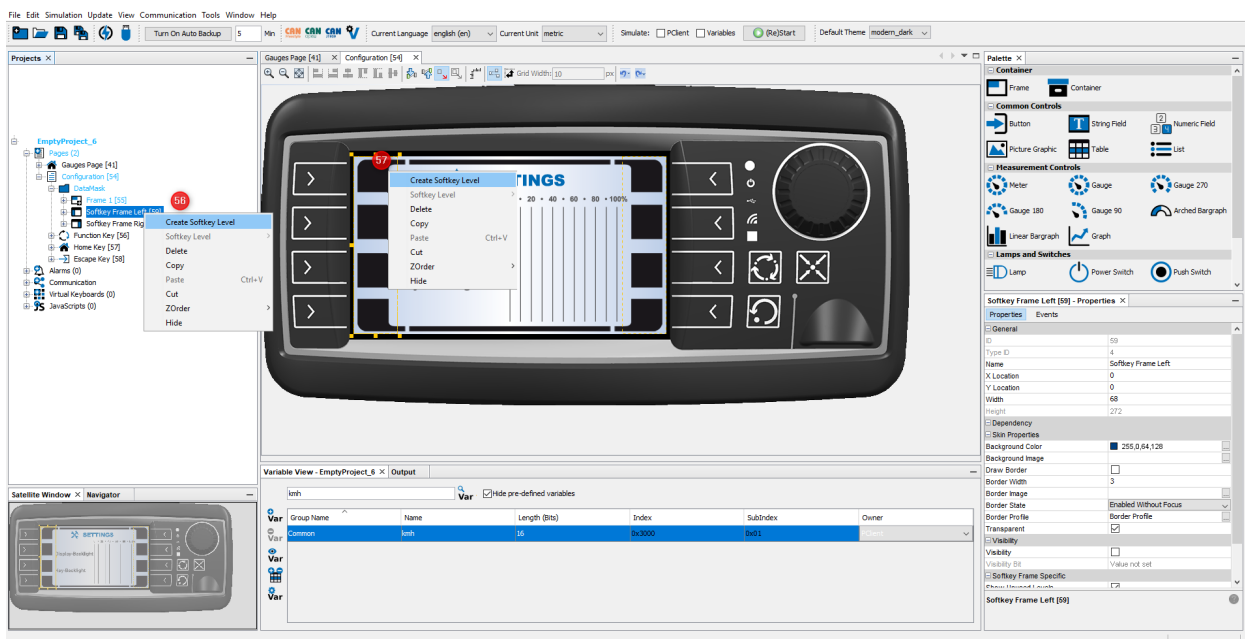

Now we can start configuring the softkeys:

- Select the first **Softkey** in the project tree (58) upper left or in the editor (59)
- Drag & drop the file **BUTTON_BACK.png** from the Image Library on the Softkey, and in the context menu, select the softkey and then **Released Image**.
- Drag & drop the file **BUTTON_BACK_pressed.png** from the Image Library on the Softkey, and in the context menu, select the softkey and then **Pressed Image**.

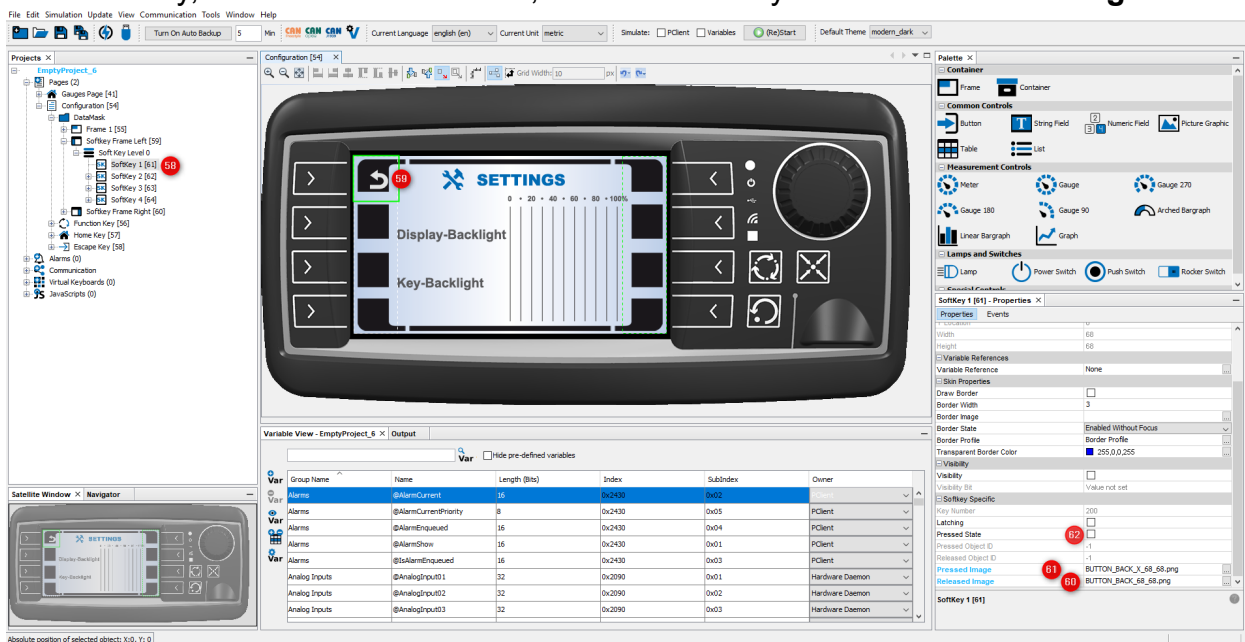

By switching the state of the **Pressed State** check box (62) you are able to view both softkey states in the editor. Make sure that the property is unchecked at the end.

Next step is to define a softkey event. The event should change to the **Gauges** page when the user presses (or rather, releases) the **Softkey** you just configured graphically:


- Select **Softkey 1** in the **Projects** tree (63).
- Open the **Events** tab by clicking **Events** in the **Properties** window (64).

- Click the "..." icon of the **OnRelease** event (65).



The **Configure Events and Actions** dialog opens.

- Un-check **No Action** (66).
- Select **Jump To Page** (67).
- Choose the **Gauges** page (67).
- Close window by clicking **OK** button (69).

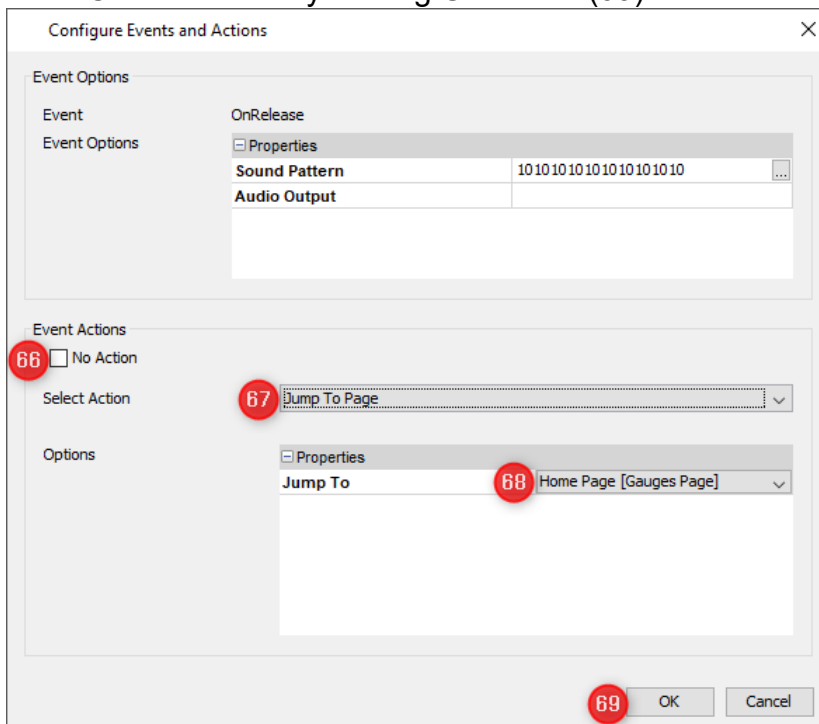

That's all for the page switch from the **Configuration Page** to the **Gauges** page.

We added two images, one for press and one for non-pressed state of the softkey. Further we defined the jump to page action for the softkey on the **OnRelease** event.


For the navigation from the **Gauges Page** to the **Configuration Page** please follow the same steps (56 to 69) to configure one of the softkeys of the **Configuration page**. The result should look like this:



Let the User change the value

The display user shall be able to change the display backlight intensity. Here is what needs to be done:

- Drag the **Linear Bargraph** from the **Palette** (70) to the page editor (71).

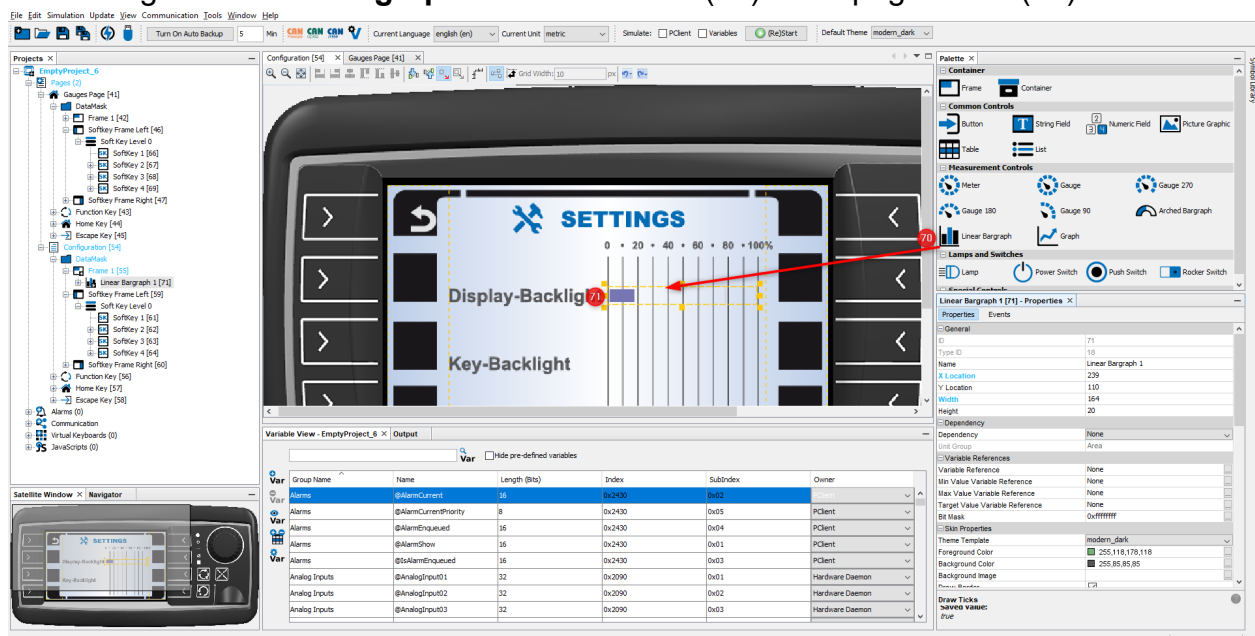

Change the following **Properties** of the **Linear Bargraph**:


- **X Location:** 239
- **Y Location:** 110
- **Width:** 164
- **Height:** 20

- Check **Transparent**
- Check **Set As Input**
- Uncheck **Draw Target Line**
- Uncheck **Draw Ticks**

To use the **Linear Bargraph** to change the display backlight intensity, we need to create a reference from the **Linear Bargraph** to the pre-defined variable

@DispBacklightIntensity:

- Uncheck **Hide pre-defined variables** in the **Variable View** (72).
- In the **Variable View** search filed enter: **disp** (73).
- Drag the variable **@DispBacklightIntensity** from **Variable View** (74) and drop it on the **Linear Bargraph** (75). Alternatively, you could drop it on the Linear Bargraph entry in the project tree (77)
- A context menu appears. In the first level, select the Linear Bargraph 1 object. In the second level, choose **Variable Reference** (76).
- You can now check in the Properties of the object that the variable is set as the Variable Reference (78).

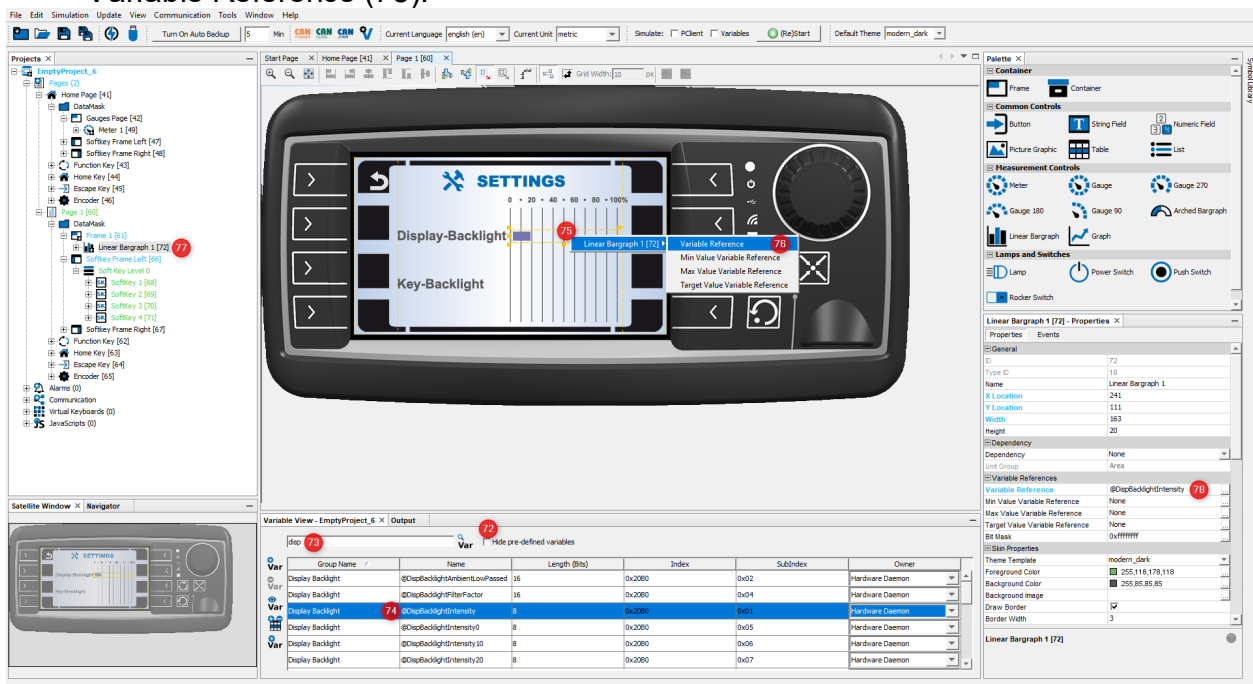


When running the project on a real display device, the user can use the encoder to change the display backlight intensity. The intensity is changed immediately when the user changes the value of the **Linear Bargraph**.

Continue [simulating and downloading the project](#) ^{D31}

2.3 Simulate the Project

You can simulate the project on the PC without a device, using our [PClient simulation](#) ^{D62}.

 
To do that, enable the checkboxes for both the PClient and the Variable simulation and then start by clicking the button (Re)Start.

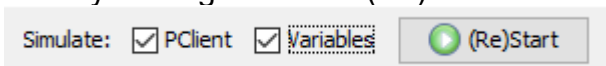

The project will be saved automatically before the simulation starts.

Open the **Gauges Page** in the **PClient** simulation, then follow these steps in the **Variable Simulation**:

- Enter **kmh** in the search filter (1).
- Select the **kmh** variable (2).
- Move the slider (3) and you will see how the meter in the **PClient** simulation will move (4).

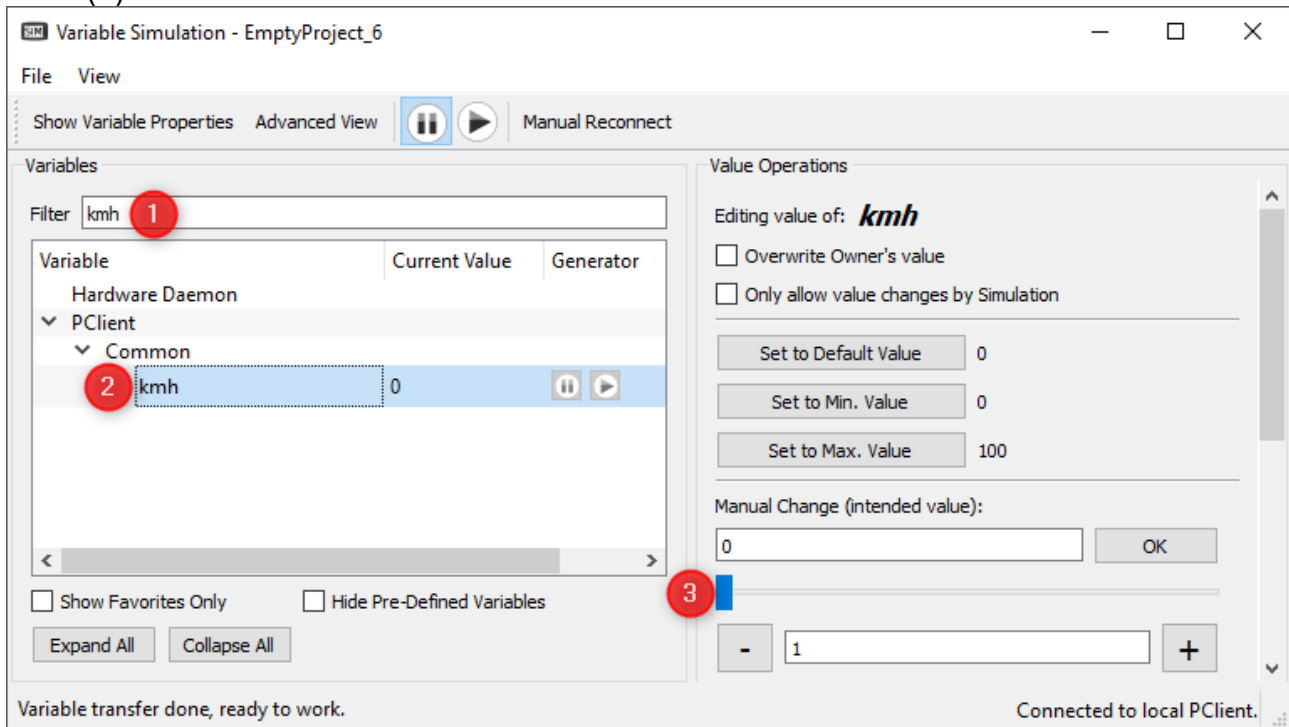

Download the project to the device

First you have to make sure that the software on the device is on the same level as the PC software. If in doubt, perform an update of OS and PClient on your device (there is a manual on how to update your device [here](#)⁹⁰⁰).

To download the project to the device, connect a USB stick (FAT 32 formatted) to your computer. There can be other files on the stick, they will be ignored.

Use the Project Update button in the toolbar (the project will be saved automatically), choose the drive letter of the USB stick and click "Transfer" to download the project to the USB stick. Once the download has finished, remove the USB stick from the PC and connect it to the (running) device. The project will automatically be installed and started.

I'm done. What do I do now?

Congratulations, you have now experienced the basic work flow of this software!

Now you can browse the manual to see what other possibilities there are. Also, check out some sample projects to see what is possible. Try to think of some small tasks to get started creating solutions and to get to know the features, but also the limitations of the software.

Especially take a look at the [JavaScript](#)⁵⁹ page; many advanced ideas can only be done with the help of some scripts. Get familiar with the language and the functions specific to our devices.

2.4 Preparations

To use the OPUS Projektor you need to unpack the downloaded ZIP file.

Please unpack the zip file into a "free" directory, i.e. a directory anywhere on your local hard drive that you have created yourself.

Do NOT unpack the zip file into any Windows controlled directory like C:\Program Files, as the program will not have full file rights for such a folder and it can't work properly.


Once you unpacked the program, start the .EXE file in the root directory of the unpacked content. The [launcher](#)⁶⁵ will start and after that the program will unpack all necessary modules.

Please note that the first start takes longer because all modules have to be unpacked. Subsequent starts will be much faster.

User Interface




3 User Interface

This chapter describes the main elements of the user interface:

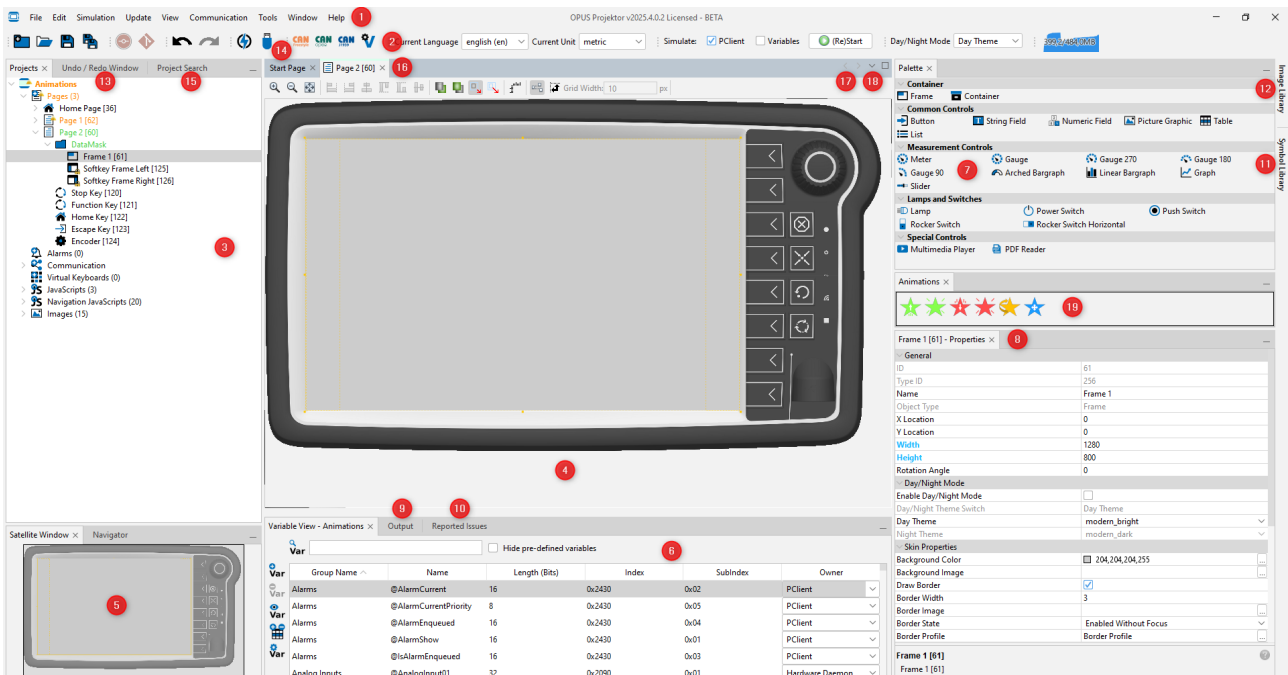

Menu Bar (1)

Menu	Description
File	
New Project...	New Project...: Create a new project. See Quick Start Tutorial ¹⁴ to see how to create a new project
Open Project...	Open Project...: Open an existing project.
Close Project (Welcome_Project_0)	Close Project (project name): Close the currently selected project.
Open in Encoding ...	Open in Encoding...: Opens a file in the JavaScript editor ⁵⁶¹ with the chosen encoding
Save In Encoding...	Save in Encoding...: Saves the file in the JavaScript editor ⁵⁶¹ with the chosen encoding
Project Properties (Welcome_Project_0)	Project Properties (project name): Edit the project properties ⁸¹ of the currently selected project
Create Sample Project	Create Sample Project: Create a new sample project. Read more ¹³⁸ .
Convert Project	Convert Project: Convert the current project to other display types. Read more. ⁴⁴
Save Project (Welcome_Project_0) Ctrl+S	Save Project (project name): Save the current project. Note that the entry is disabled if no changes were made to the project since the last save.
Save As (Welcome_Project_0)	Save As (project name): Save the current project under a different name.
Save All Ctrl+Shift+S	Save All: Save all currently open projects.
Commit (Welcome_Project_0)	Commit: Commit the currently saved project state to the versioning system ¹³¹ .
Print to HTML...	
Exit	

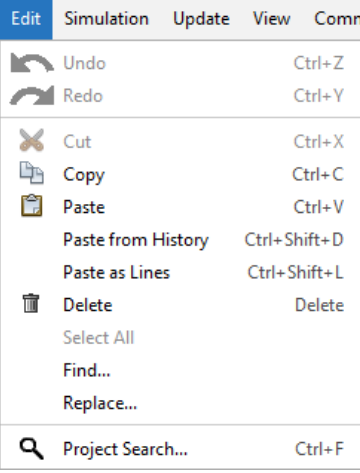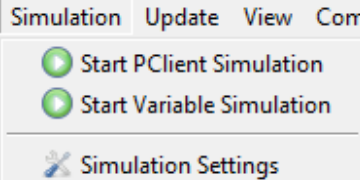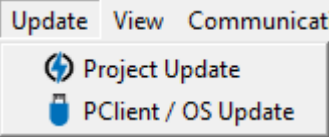Menu	Description
	<p>Print to HTML: Only for the JavaScript Editor^{□561}. Prints the currently opened JavaScript file into an HTML file.</p> <p>Exit: Close the OPUS Projektor.</p>
Edit 	<p>Undo: Reverts the last modification in the project. For a complete list of Undo/Redo steps check the Undo/Redo^{□157} tab.</p> <p>Redo: Re-does the last reverted modification in the project. For a complete list of Undo/Redo steps check the Undo/Redo^{□157} tab.</p> <p>Cut: Cut the currently selected object(s). Note that paste after cutting only works if the parent of the cut object changes.</p> <p>Copy: Copy the currently selected object(s).</p> <p>Paste -> Paste: Paste^{□46} the currently selected object(s). The parent object of the source object has to be selected.</p> <p>Paste -> Paste as Reference: Paste^{□46} the currently selected object(s) as references. All properties are identical. The parent object of the source object has to be selected.</p> <p>Paste -> Shallow Paste: Paste^{□46} the currently selected object(s). Children objects will be reference copies. The parent object of the source object has to be selected.</p> <p>Paste from History: Only for the JavaScript Editor^{□561}. Opens a popup with the last copied texts for pasting.</p> <p>Paste as Lines: Only for the JavaScript Editor^{□561}. Pastes multi-line copied text to one line per multi-cursor.</p> <p>Delete: Delete the currently selected object(s). There will be a confirmation dialog.</p> <p>Select All: Only for the JavaScript Editor^{□561}. Marks all text in the currently opened JavaScript file.</p> <p>Find...: Only for the JavaScript Editor^{□561}. Opens the search window in the JavaScript editor.</p> <p>Replace...: Only for the JavaScript Editor^{□561}. Opens the replace window in the JavaScript editor.</p> <p>Project Search...: Opens the project search^{□115}.</p>
Simulation 	<p>Start PClient Simulation: Starts the PClient Simulation^{□562}.</p> <p>Start Variable Simulation: Starts the Variable Simulation^{□565}.</p> <p>Simulation Settings: Settings^{□660} for the Simulation.</p>
Update 	<p>Project Update: Opens the Project Updater Dialog^{□682}.</p> <p>PClient / OS Update: Opens the PClient / OS Update Dialog^{□717}.</p>
View	<p>Toolbars: Provides customization options for the toolbar^{□39}.</p> <p>Show Breadcrumbs: Only for the JavaScript Editor^{□561}. Enables or disables the breadcrumbs bar in the JavaScript editor (only useful if classes and functions are used).</p>

Menu	Description
<div> <div>View</div> <div>Communication Tools Window</div> <div> <div>Toolbars</div> <div> <div>✓ Show Breadcrumbs</div> <div>✓ Show Indent Guide Lines</div> <div>✓ Show Inline Hints</div> <div>Show Only Editor Ctrl+Shift+Enter</div> <div>Full Screen Alt+Shift+Enter</div> </div> </div> </div>	<p>Show Indent Guide Lines: Only for the JavaScript Editor^{□561}. Enables or disables vertical indent lines in the code view.</p> <p>Show Inline Hints: Only for the JavaScript Editor^{□561}. Enables or disables displaying of function parameters.</p> <p>Show Only Editor: Maximizes the currently selected editor window.</p> <p>Full Screen: Switches to Full Screen view.</p>
<div> <div>Communication</div> <div> <div>Communication Tools Window Help</div> <div> <div>Variable Manager...</div> <div>Variable Group Configuration...</div> <div>Terminal and Owner ECU(s) Configuration...</div> <div>Port Configuration...</div> <div>Protocols</div> <div>Import</div> <div>Options</div> </div> </div> </div>	<p>Variable Manager...: Opens the Variable Manager^{□177}.</p> <p>Variable Group Configuration...: Opens the dialog to manage and add variable groups^{□177}.</p> <p>Terminal and Owner ECU(s) Configuration...: Opens the dialog to add / remove and configure CAN protocols^{□339} for the project.</p> <p>Port Configuration...: Opens the dialog to configure the bus speeds of the CAN ports^{□339} for the project.</p> <p>Protocols -></p> <p>-CANFreestyle-></p> <p>--Configure Mappings: Opens the Mapping Configuration dialog for CANFreestyle^{□349}.</p> <p>--Transmit Sequences...: Opens the dialog to configure Transmit Sequences^{□357}.</p> <p>--CAN ID Masks...: Opens the dialog to add / remove and configure CAN ID masks^{□347}.</p> <p>-CANopen -></p> <p>--Configure Mappings: Opens the Mapping Configuration dialog for CANopen^{□360}.</p> <p>--Generate EDS File: Creates an EDS file^{□360}.</p> <p>-J1939 -></p> <p>--Configure Mappings: Opens the Mapping Configuration dialog for J1939^{□362}.</p> <p>--DM1/DM2 Settings...: Opens the dialog to configure DM1 / DM2^{□402} support.</p> <p>Import-Export-></p> <p>-Import Variables: Opens the dialog to import variables^{□63} from another project or from a .CSV file.</p> <p>-Import DBC File: Opens the dialog to import a DBC file^{□413}.</p> <p>-Export DBC File: Opens the dialog to export a DBC file^{□423}.</p> <p>Options -></p> <p>-Data type definitions...: Create and manage variable data types^{□166}.</p> <p>-Process Configuration...: Create and manage processes as variable owners (only for additional C/C++ applications).</p>
Tools	<p>Generate Key File: Generate a key file to obtain a license file^{□67}.</p> <p>Load License File: Load a license file^{□67} to unlock the full version.</p> <p>Default Password: Opens the dialog to set a default password that will be used to unlock projects with a password^{□81}.</p> <p>Start Graph History Tool: Starts the Graph History Tool^{□500}.</p>

Menu	Description
<div>Tools Window Help</div> <div> Generate Key File Load License File Default Password Start Graph History Tool Reinstall Components > JavaScript > Camera > Import Export Language CSV Plugins Revision Browser Options </div>	<p>Reinstall Components: Opens the dialog to reinstall different external components of the program. Only needed if one of the elements listed is missing files.</p> <p>-JavaScript -> Check/Update JavaScript files - checks all scripts in a project and applies prefixes to our commands if necessary ⁵⁵⁹</p> <p>-Camera -></p> <p>-- ISO 17215 Camera Configuration: Opens the Ethernet Camera configuration tool ⁷³⁹.</p> <p>Import Export Language CSV: Opens the dialog to export / import a language CSV file ¹⁰³.</p> <p>Plugins: Opens the plugins management dialog. Read more ⁷⁴⁹.</p> <p>Revision Browser: Opens the project versioning ¹³¹ revision browser.</p> <p>Options: Opens the options ⁷¹ dialog.</p>
<div>Window</div> <div>Window Help</div> <div> Palette Properties Projects Ctrl+1 Files Ctrl+2 Navigator Output Ctrl+4 Reset Windows Close Window Ctrl+W Animations Project Search... Image Library Symbol Library Satellite Window Variable View Undo / Redo Reported Issues Start Page </div>	<p>Palette: Opens the object palette ⁴⁴⁵ window.</p> <p>Properties: Opens the object properties / events window.</p> <p>Projects: Opens the Projects Tree window.</p> <p>Files: Opens the project file view window.</p> <p>Navigator: Opens the JavaScript ⁵⁵⁹ code structure window.</p> <p>Output: Opens the output ⁴² information window.</p> <p>Reset Windows: Resets all windows of the program to the default sizes and positions.</p> <p>Close Window: Closes the currently selected window.</p> <p>Animations: Opens the animations ⁶²⁰ tab.</p> <p>Project Search...: Opens the Project Search ¹¹⁵ window.</p> <p>Image Library: Opens the Image Library ⁵⁰ tab.</p> <p>Symbol Library: Opens the Symbol Library ¹⁴⁹ tab.</p> <p>Satellite Window: Opens the Satellite window.</p> <p>Variable View: Opens the Variable View ¹⁶¹ window.</p> <p>UndoRedo: Opens the Undo/Redo ¹⁵⁷ window.</p> <p>Reported Issues: Opens the Reported Issues ⁷²⁵ window.</p> <p>Start Page: Opens the Start Page ¹⁴⁷</p> <p>Note that if the respective window is already open, the according menu entry doesn't do anything.</p>
<div>Help</div> <div>Help</div> <div> Start Page Report an issue or give feedback About Help F1 </div>	<p>Start Page: Opens the start page ¹⁴⁷ with Welcome text, release notes, RSS news and recent projects.</p> <p>Report an issue or give feedback: Opens the reporting dialog ⁷²⁵.</p> <p>About: Opens the version info dialog. Here you can see all software versions, get detailed information and read the list of open source licenses.</p>

Menu	Description
	Help: Opens this HTML help. By default, the online version of this help is loaded. If no internet connection is available, a local version of the help is loaded. Please note that the offline version is not refreshed as often as the online version.

Toolbar (2)


Icon	Description
	Create a new project.
	Open a project.
	Save selected project. Only active if changes have been made to the project.*
	Save all open projects.
	Commit the currently saved project state to the versioning system ¹³¹ .
	Opens the revision browser ¹³¹ .
	Undo / Redo ¹⁵⁷
	Saves the project and opens the Project Updater Dialog. Read more. ⁸⁸²
	Opens the PClient / OS Update Dialog. Read more. ⁷¹⁷
	Shortcuts to mapping dialogs for CANFreestyle ³⁴⁰ , CANopen ⁹⁶⁰ & J1939 ³⁷⁴ .
	Opens the variable manager ¹⁷⁷ .
Current Language english (en)	Change the language ¹⁰³ shown in the page editor ⁷⁸ .
Current Unit metric	Change the unit ¹⁰³ shown in the page editor ⁷⁸ .
Simulate: <input type="checkbox"/> PClient <input type="checkbox"/> Variables <input checked="" type="radio"/> (Re)Start	Select and start PClient and/or variable simulation ⁶⁶⁰ . The project will be saved before the simulation starts.
Day/Night Mode Day Theme	Switch between Day or Night mode view in the page editor ⁷⁸ .

*We are trying to be perfect, but it might be that some actions are not tracked and the save button stays disabled even though you changed something. In that case please

- contact us! Let us know what you did that wasn't tracked.
- Use the Save all button which will never be disabled.

Projects Tree (3)

The project tree shows the logical structure of the project.
Here is what you can read from the following tree:

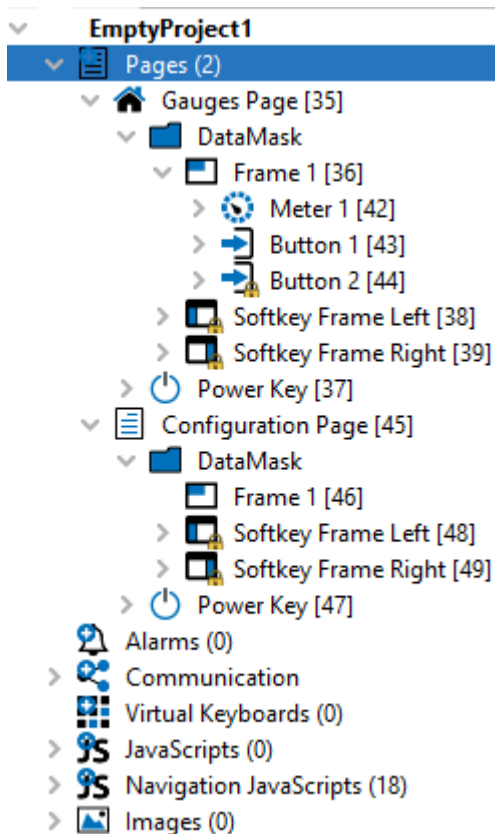

- The project name is **EmptyProject1**
- The project contains the categories **Pages**, **Alarms**⁶¹⁷, **Communication**³³⁹, **Virtual Keyboards**⁴⁷⁹, **JavaScripts**⁵⁵⁹, **Navigation JavaScripts**⁴⁸⁶ and an **Images Node**⁵⁸
- The project has two pages: **Gauges Page** and **Configuration Page**.
- The **Gauges Page** is the home page of the project (home icon).
- The **Gauges Page** has a **DataMask** (i.e. an empty drawing area) and a **Power Key**.
- In the **DataMask** (i.e. drawing area) there is a **Frame 1** and a **Left** and **Right Softkey Frame**.
- A **Meter 1** and two **Button** objects are located in the **Frame 1**.
- The second button object (ID 44) has been **locked in position and size**⁸⁰ (the Softkey Frames are as well, by default).


The tree shows a parent-child relationship. Example:

- The **Meter 1** is a child of the **Frame 1**.
- The **Frame 1** is the parent of the **Meter 1**.

The parent-child relationship defines how objects that are visible on screen are drawn. On the one hand, a child can never be drawn outside of its parent. I.e. the child is clipped at the parent borders. On the other hand, the order of children defines which object is in front of another object (this is called **Z-order**¹⁶³). For example:

- **Softkey Frame Right** is drawn in front of **Softkey Frame Left**.
- **Softkey Frame Left** is drawn in front of **Frame 1**.


We also provide additional information through colors and icons:

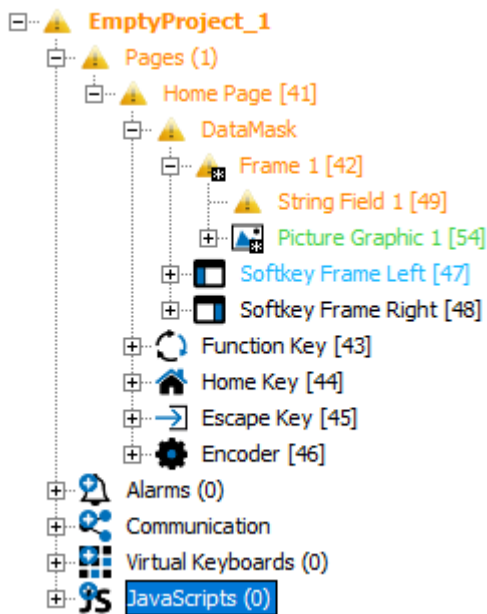

Green - This object has been created since the last save. Also indicated with a black asterisk next to the object icon.

Blue - This object has been modified since the last save (or a child object has been added). Also indicated with a black asterisk next to the object icon.

Orange - There is a problem with the properties for object. Select the object and then the colored property or event to see a description of the problem. Also indicated with the yellow warning icon.

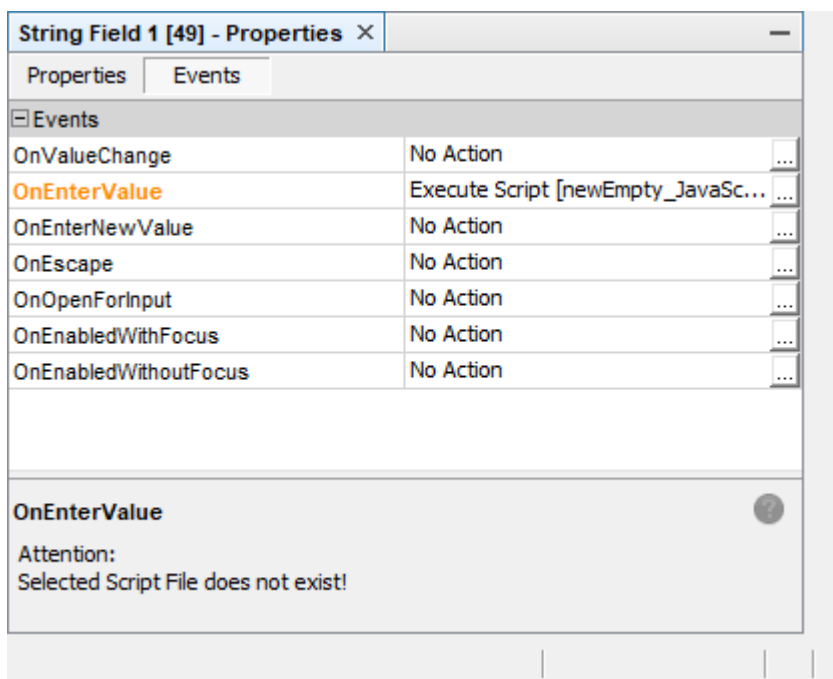

The colors will be passed to the parent objects up to the project name. Note that with a new object, only the object itself will be marked green. All parents will be marked blue, since for the parents the new object is a change, but the parents themselves are not new.

In case there is both a problem and an object modification, the problem will be shown in the project tree with higher priority.

When a project is loaded and the project contains warnings, the search tab will be opened automatically, showing all warnings in the project.

Don't discard these warnings! It might be nothing important, but more often than not something is not right in the project if warnings are shown, so please check them.

Objects can be renamed in the project tree by selecting them and pressing F2, or clicking on them again after selecting them.

Pages can be moved in the project tree to change their order for a better project overview. With <Alt> + <PgUp> / <Alt> + <PgDn> pages can be moved one step higher / lower. With <Alt> + <Pos1> / <Alt> + <End> pages can be moved to the top / bottom.

The **Alarms** category contains all [alarms](#)^{□617} in the project.

The **Communication** category contains all variables and CAN mappings sorted by owner / protocol. Note that CAN mappings can be deleted in bulk here.

The **Virtual Keyboards** category contains the [virtual keyboards](#)^{□479} used in the project.

The **JavaScripts** category contains all [Javascript](#)^{□559} files in the project. Files can be copied and deleted here as well as [dragged & dropped](#)^{□47} onto objects.

The **Navigation JavaScripts** category contains all [navigation script files](#)^{□486} in the project.

The **Images** category contains the [Image Pool](#)^{□58}, all images that are used in the project.

Page Editor (4)

The [Page Editor](#)^{□78} allows the design of the graphical user interface.

Satellite Window (5)

The satellite window shows the whole display device and the viewing part visible in the editor. It is useful for a fast navigation when the [page editor](#)^{□78} is zoomed in and only shows a small piece of the whole display.

Variable View (6)

The [Variable View](#) allows viewing, creation and editing of variables. Furthermore it can be used to easily link a variable with an object in the editor by dragging & dropping the variable to the object.

Palette (7)

The palette contains all the graphical [objects](#)^{□445} that can be dragged & dropped into the editor.

Properties Window (8)

The property window shows all the [properties](#)^{□448} available for the currently selected object.

Output (9)

The output window provides information, warnings and errors that occur while using the program. They might help finding the root cause if you run into trouble.

The following tabs are displayed by default:

- Exceptions - Here exceptions of the program will be displayed
- Information - Information about the doings of the program

The following tabs are displayed when the according action has been performed:

- Exceptions - When exceptions happen, they will be listed here. Additionally, depending on the kind of exception, a [report dialog](#) ⁷²⁵ might be opened.
- Information - low-prio information about the processings in the program, like project was saved / opened successfully
- PClient - Shows the output of the [PClient Simulation](#) ⁶⁶², system messages and prints from JavaScript
- Variable Simulation - Shows information from the Variable Simulation
- Translation Output - Shows the result of a J1939 DM1/DM2 translation file import / validation.
- Warnings - Shows warnings regarding the project
- Errors - Errors that came up when processing the project, e.g. if a project couldn't be saved or loaded properly

Reported Issues (10)

The reported issues tab provides an overview of the [reported issues](#) ⁷³⁵ from this installment of the program.

Symbol Library (11)

This button opens the [symbol library](#) ¹⁴⁹ tab.

Image Library (12)

This button opens the [image library](#) ⁵⁰ tab.

Undo/Redo (13)

This button opens the [Undo/Redo](#) ¹⁵⁷ tab.

Start Page (14)


The new [Start Page](#) ¹⁴⁷ shows the recently opened projects, information about the current version and an RSS feed with news and update information.

Project Search (15)

This button opens the [Project Search](#) ¹¹⁵ tab.

Project coloring (16)

Especially with several projects open it can be difficult to keep an overview of the different pages and/or JavaScript tabs. For this reason each project gets its own color, indicated in the icon next to the project name. Each page or JavaScript tab will be colored in that color.

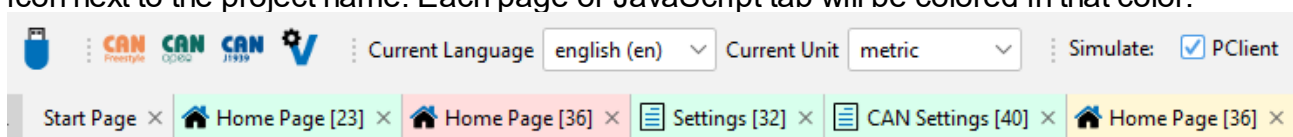


The colors are also used in the open tab list.

Tab scroll buttons (17)

With many tabs opened, not all of them can be listed in the opened tab row. With the scroll buttons all open tabs can be shown one after the other.

Open tab list (18)

The open tab list shows all opened tabs in a list overview. Any tab that is selected will be opened.

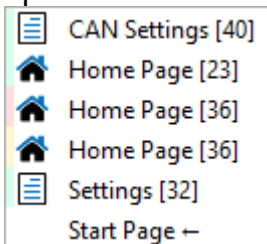



3.1 Convert Project

This chapter describes how a project can be converted between different devices.


The dialog can be opened via the menu File -> Convert Project or by right-clicking the project name and choosing Convert Project in the context menu.

Please note that for both actions you need to have a project marked in the project tree.

Please note that you should save the project before the conversion to include all changes.

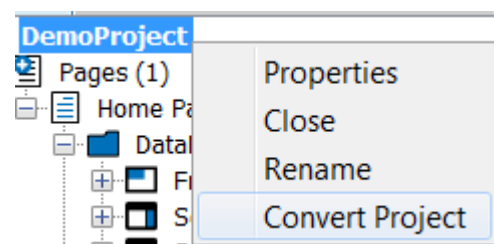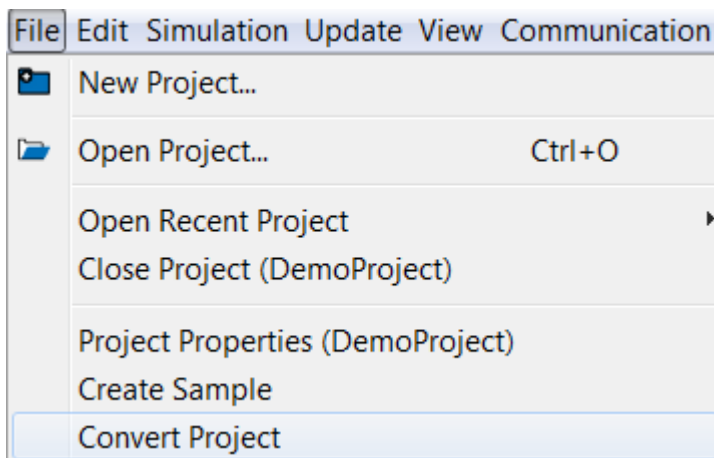

Step 1 - Conversion Configuration

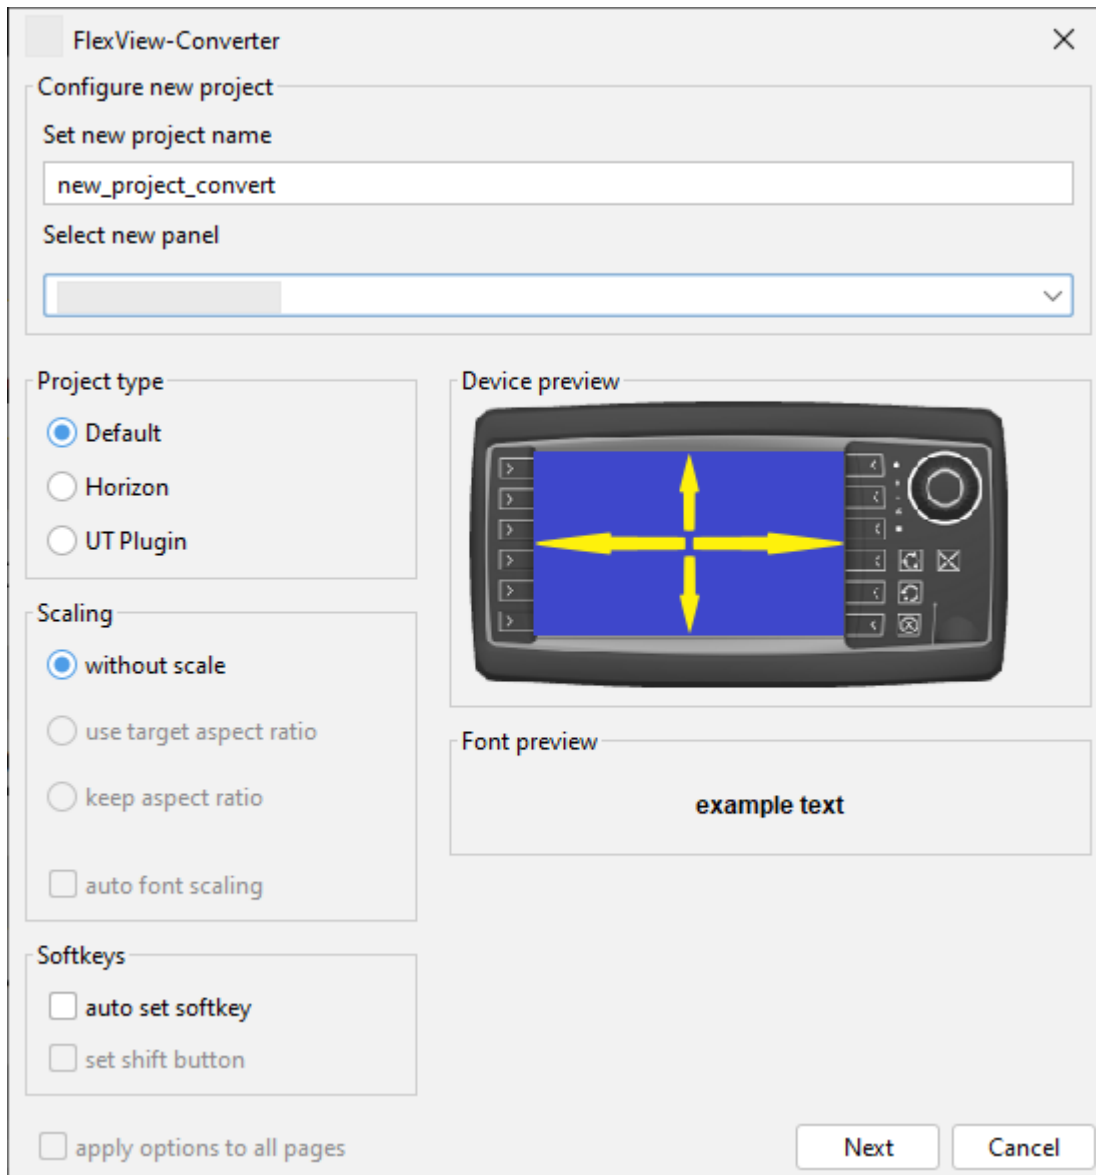

First, you can set the name of the converted project.

Next, you can choose the new device type that you want to convert to.

Third, you can set the type of the project, Default for normal projects and devices just running the PClient, Horizon for UT devices with the Horizon software, and UT Plugin for UT Plugin devices with a PClient plus [UT plugin](#)⁶⁴⁷.

Below that, you have three options to scale the page contents:

- without scale (keep the object sizes as they are) -> only available for some device types, since content for a larger device can't be displayed on a smaller device without scaling them
- use target aspect ratio (scale objects to the full screen, independent of the existing aspect ratio -> This will make content full screen, but it might look less good because the aspect ratio changes
- keep aspect ratio (scale objects to the full screen, but keeping the existing aspect ratio -> This will make content full screen, but with a bar on the bottom or side. The aspect ratio will be kept.

You can see an example preview of how the page content will be scaled in the Device preview.

Next, there is the option for the auto scaling of texts. This is not available if "without scale" has been selected above. A preview of how text will be scaled can be seen in the lower right.

Below that are options for the handling of the soft keys:

- auto set soft key (soft keys will be spread to the new layout automatically) -> Please note that when converting from a device with more soft keys to a device with less soft keys, several soft key levels will be created
- set shift button (if several soft key levels are created, shift up and shift down buttons will be added to be able to shift between the soft key levels)
- apply options to all pages (the Next button will change to Convert, and the project can be converted with one click, skipping Step 2).

Pressing Cancel cancels the conversion process and all settings are lost.

Step 2 - Soft Keys

In the second step, soft keys can be assigned to the keys of the new device of the conversion process. The new device type with its soft keys is displayed in the center of the dialog. The soft keys of the old device are displayed to the right and left (if available) of the new device type. Soft keys can be dragged and dropped to the new device soft keys or back out to change the order. By clicking the button Next Page, the next page in the project with configured soft keys will be shown. All pages need to be set to finish the conversion process. Press Convert to go to the final step. By clicking the Back button you can go back to previous pages. When the first page is shown, clicking Back will go to the first step of the conversion. By doing that, all existing soft key mappings will be lost! Also, all soft keys that were not mapped will be lost as well. Pressing Cancel cancels the conversion process and all settings are lost.

3.2 Copy and Paste



Tutorial video about copy & paste

<https://www.youtube.com/watch?v=2YMmZkwBMwI>

When using Copy & Paste, the pasted object will be put on the scene with an offset of 10 px to the right and bottom if the object is put on the same parent object (e.g. on the same frame). When pasting on a different parent object, the position will be the same as with the original object.

There are three types of copy & paste in the OPUS Projektor: Normal, reference and shallow.

Normal Paste

Objects can be copied and pasted by either right-clicking on the selected object(s) and selecting "Copy" and then right-click in the target parent object and select "Paste", or by pressing CTRL+C with the object(s) selected and pressing CTRL+V. This works multiple times which creates multiple copies of the same source object.

Please note: Pressing CTRL+C and then directly CTRL+V will not do anything for a copy between pages and when copying multiple objects at once. In this case the parent object has to be selected prior to pasting.

Please note: Direct copy & paste does NOT work for the objects [Container](#)⁵⁰⁷ and [List](#)⁵¹⁷, and also both object types cannot be pasted into each other, i.e. a list cannot be pasted into a list. Usually doing that will result in bad design, but if there is a good usecase for it, the user can paste on the parent object and move the list into the other list in the project tree.

Reference Paste

In addition to the normal paste there is also a reference paste. The difference is that with the normal paste, a new object will be created, with a new ID, its own set of properties, events etc. With reference paste, a carbon copy of the source object is created. The new object has the same ID as the source object and is identical in any way. Any change to one of the objects will reflect in the other, as well, with the exception of the position of the objects in their parent object.

This type of paste is to be used if you want the same content on several pages, e.g. a clock somewhere in a corner.

Shallow Paste

The last type of paste is called shallow paste. It only makes sense for objects that have child objects. The copied parent object will be a normal copy, whereas the child objects will be reference copies. This type of paste is useful e.g. for list objects with a set of images, like a set of warning / error icons. The list object will be a normal copy, so the copied one can show a different image than the source, but the images in the list should be identical for both lists.

If shallow paste is used with an object without children, the result will be a normal copy of the object.

3.3 Drag and Drop

This chapter describes the different ways drag and drop can be used to make workflows easier.

Objects from the [Palette](#)⁴⁴⁵ can be dropped

- on objects in the Page Editor
- in the project tree
- in a JavaScript file (if several objects are selected when dragging, the entry "Create JavaScript ID Array" is available, which creates a JavaScript line that initializes a JavaScript array with the ID's of the selected objects as elements of the array).

A new object will be created if it can be created as a child object at that place. Otherwise a "forbidden" symbol will be displayed.

Symbols from the [Symbol Library](#)¹⁴⁹ can be dropped

- on objects in the Page Editor
- in the project tree

JavaScripts from the Project Tree can be dropped

- on objects in the Page Editor
- on Page nodes in the project tree
- on the Project name in the project tree

Variables from the Variable View can be dropped

- on objects in the Page Editor
- in the project tree

Images from the [Image Library](#)⁵⁰ can be dropped



- on objects in the Page Editor
- in the project tree


Images from the [Image Pool](#)⁵⁸ can be dropped

- on objects in the Page Editor
- in the project tree



For variables, symbols, images and scripts, there is a two-level context menu when they are dropped somewhere. Because of the tree-like structure of the objects, it is not always obvious where the dragged element should be placed, e.g. with a List object containing a String Field. A symbol could be placed into the String Field or into the List object.

In the first level the user can select in which object the symbol should be used. In the second level the user can specify in which way the symbol should be added to the object.

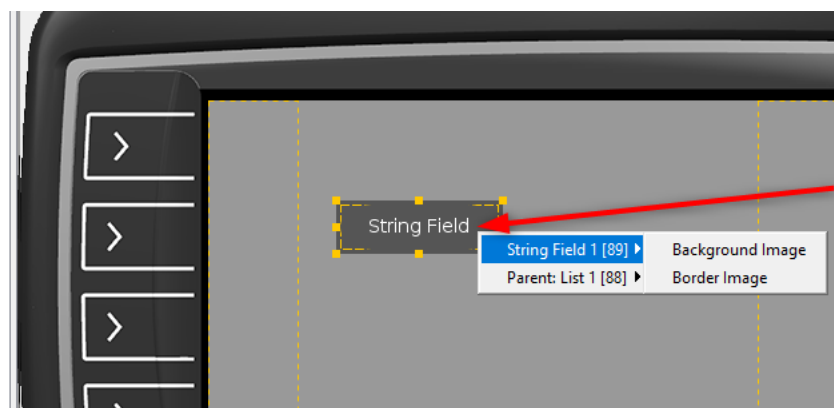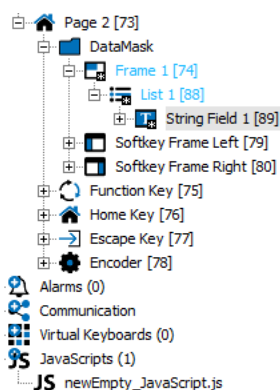


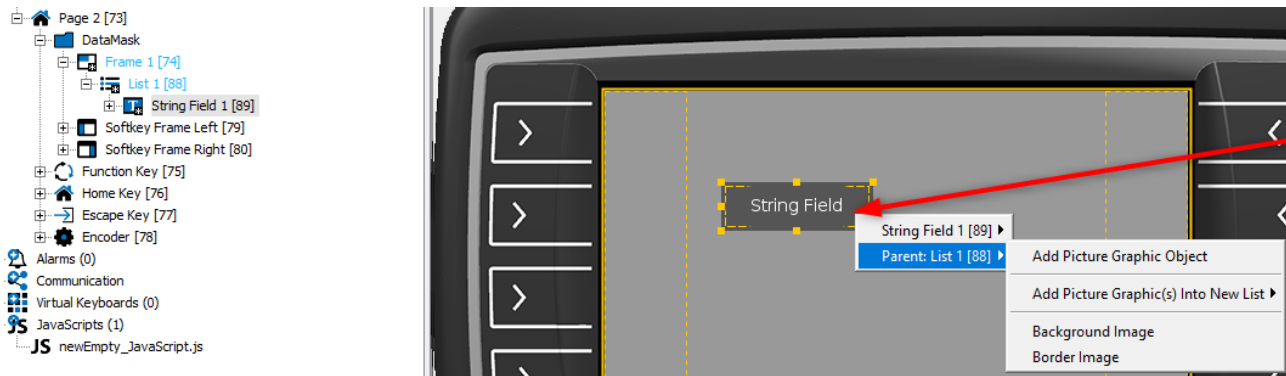

The same goes for JavaScripts. The first level of the context menu shows the object selection with the child object and, if applicable, the parent object, the second level will show the available events for the selected object.

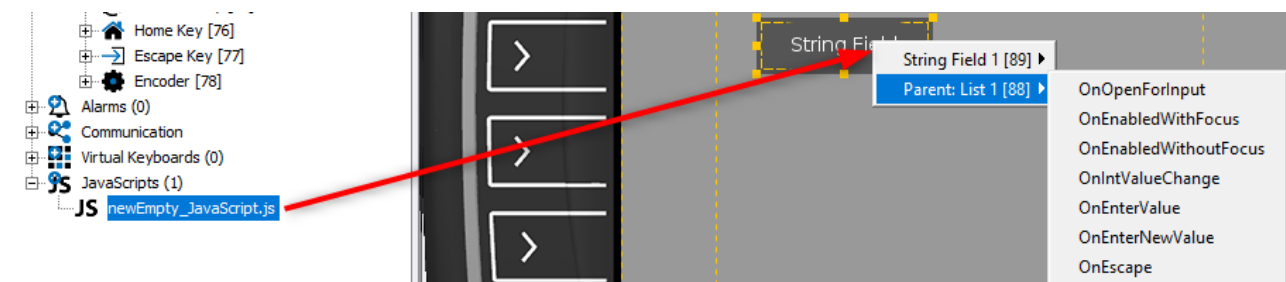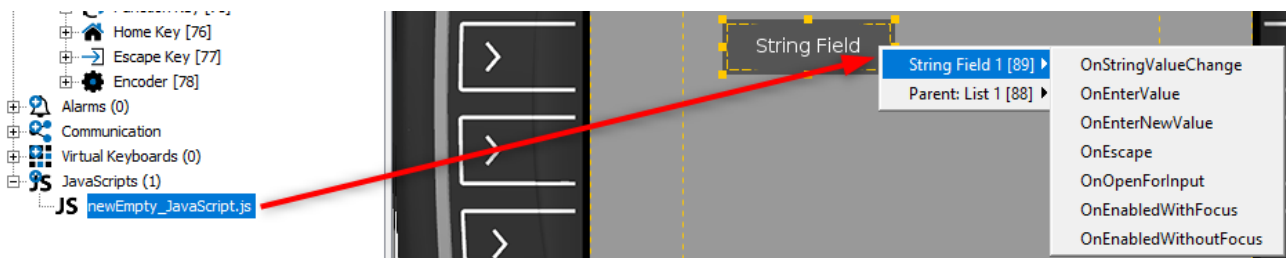

Similarly, when a variable is dropped from the Variable View, the first level of the context menu shows the object selection with the child object and, if applicable, the parent object, the second level will show the available Variable Reference options for the selected object.

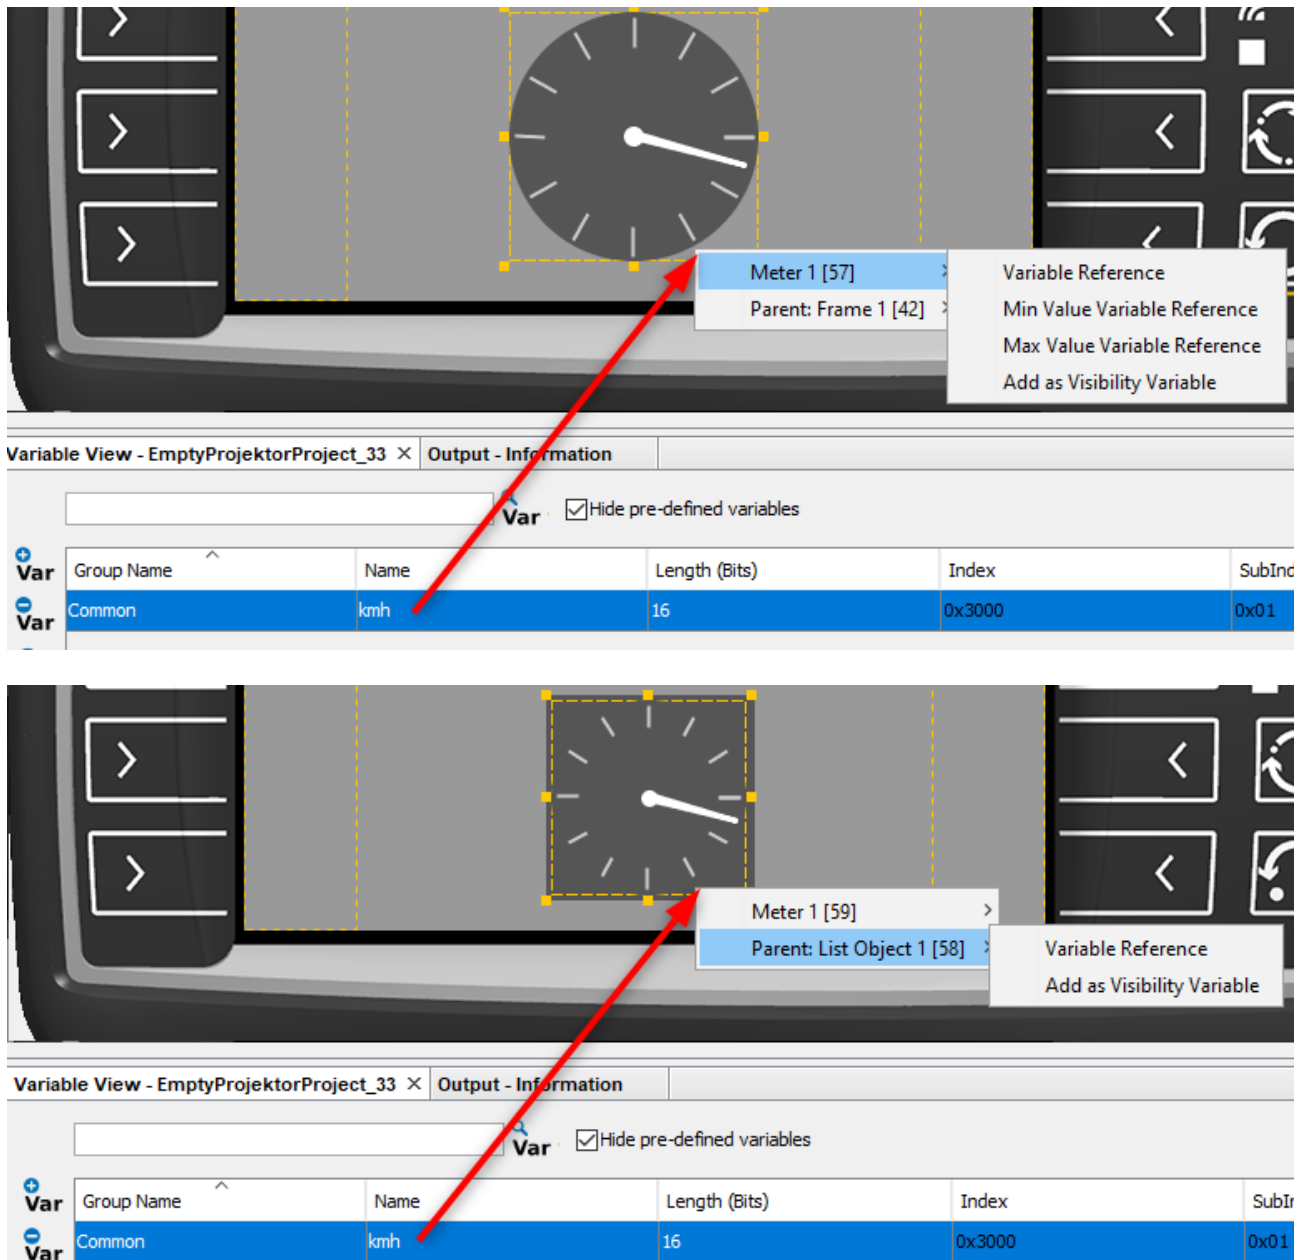

Please note that the context menu only covers the child object and the first parent, i.e. the parent of the list object itself is not included anymore. Objects that don't have the possibility to add the dropped element, will not be displayed in the first level of the context menu.

3.4 Image Library




Tutorial video of the Image Library


<https://www.youtube.com/watch?v=IjAdGKHiNks>

The image library can be used to quickly access images from folders, skipping the step to manually load images one by one with [Picture Graphic](#) ⁵³⁷ objects.

The image library can be accessed in the toolbar on the right side (in the default view).

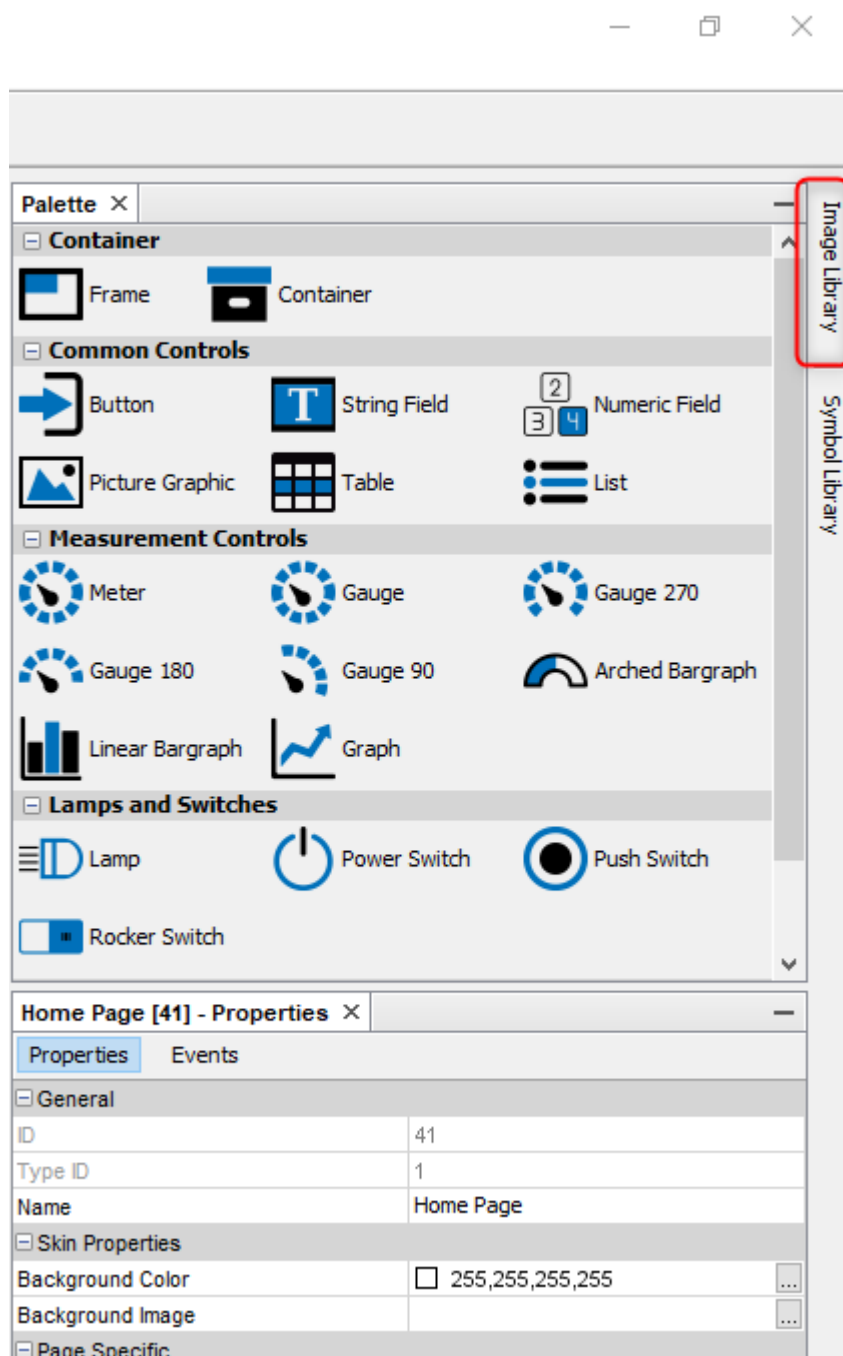


Click on the name to open the tab.

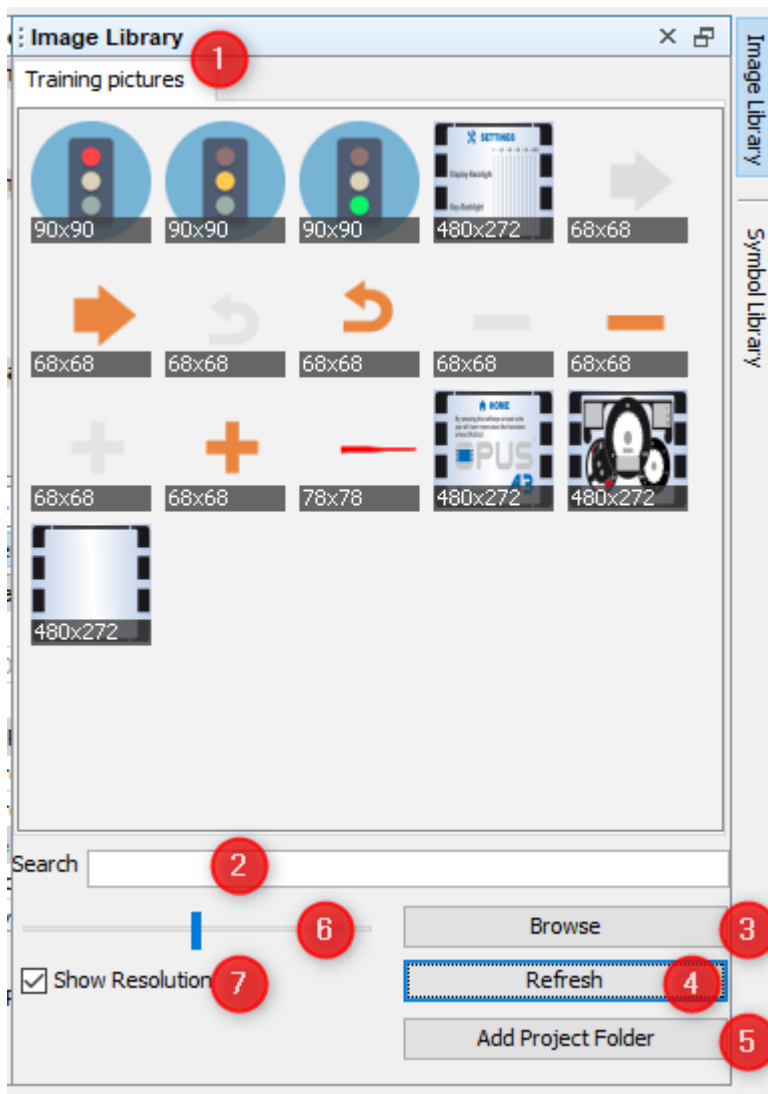

In the image above a folder named Training pictures was loaded. Several image folders can be loaded, they will be shown in tabs (1). Please note that when adding many folders with many images (especially high-res), showing the image library for the first time will take a while to cache the preview images.

Each image will be shown in a small squared symbol.

The opened image folders can be searched (2). The search will filter live, searching for the entered term in the file name of all images in all opened image folder tabs. Found images will be shown in an automatically created Search tab.

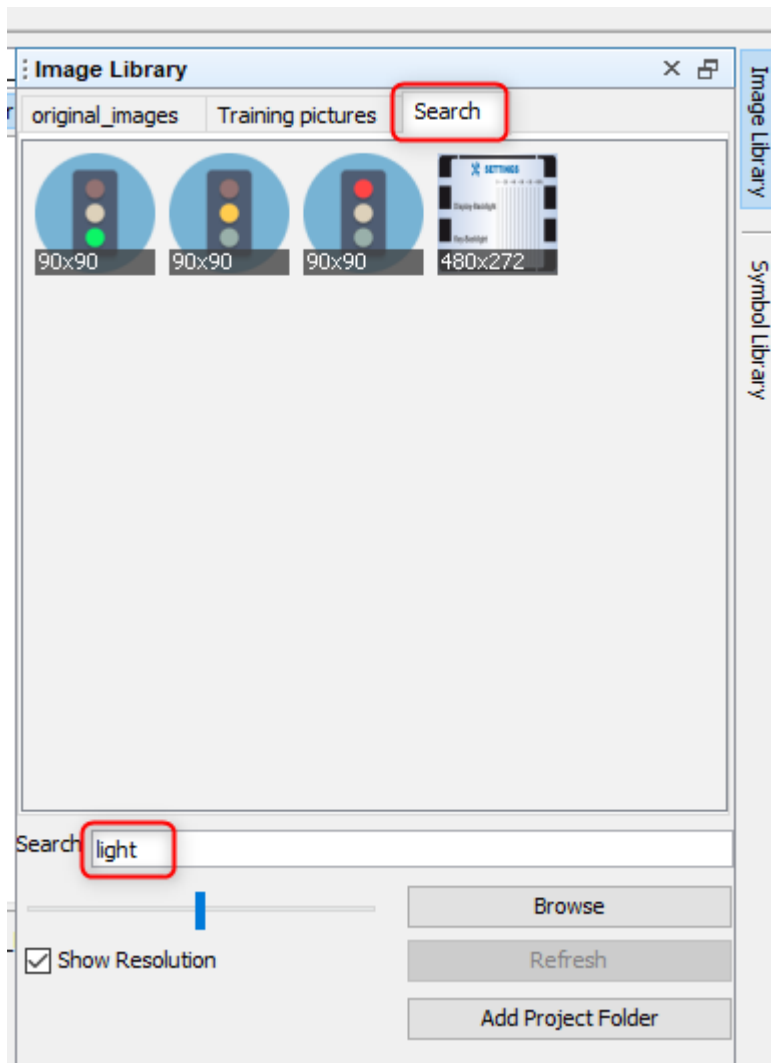

Note that the Search tab can't be closed directly. To close the Search tab, remove the search word from the Search field

A new folder can be added with the **Browse** button (3). Browse to a folder that contains images and confirm by clicking Open.


Note that folders aren't added recursively, i.e. only images directly in the selected folder will be added.


If the images in the currently selected folders have changed or new ones have been added, press the **Refresh** button (4) to refresh the preview.

To quickly add the original images folder of the currently selected project, click the **Add Project Folder** button (5).

Note that all opened folders will be visible no matter which project is selected in the OPUS Projektor.


With the zoom slider (6) the size of the preview images can be modified. Dragging it to the left means more, but smaller preview images, dragging it to the right means fewer, but larger preview images.

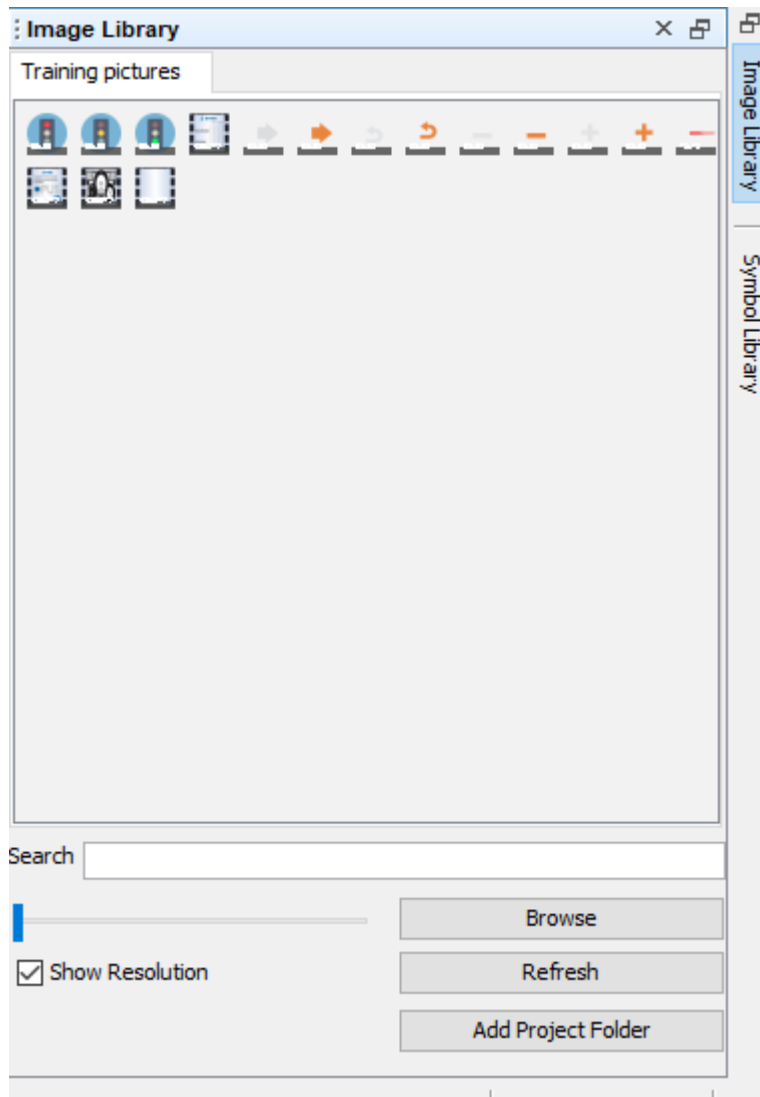

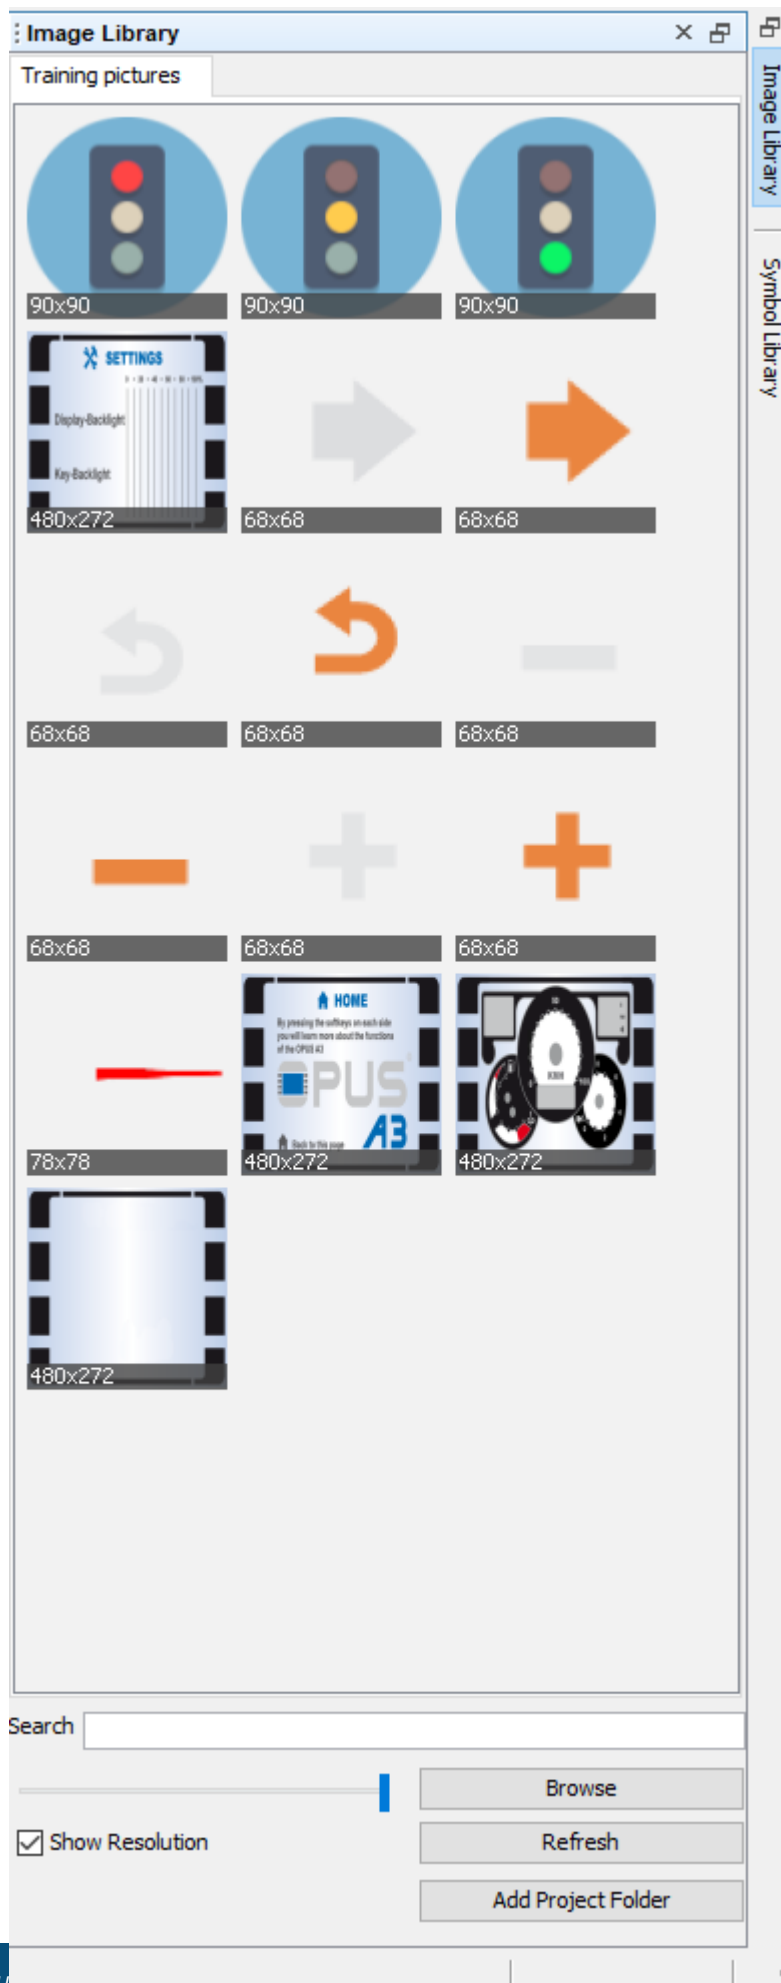


Uncheck the **Show Resolution** checkbox (7) to remove the resolution bar under the preview images.

The complete folder path will be shown as a tip when hovering on the folder tab.

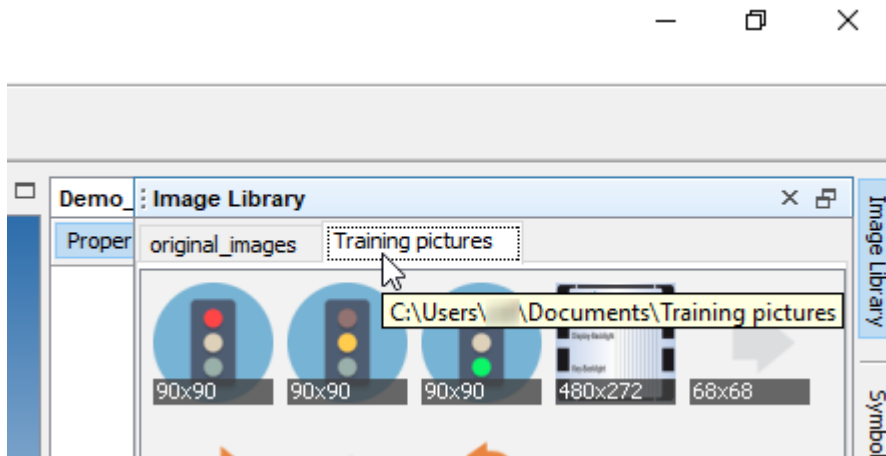


Hovering over the images will show the file name of the image.

Folder tabs can be closed by pressing the X icon next to the folder name in the tab, except for Favourites and Search tab.

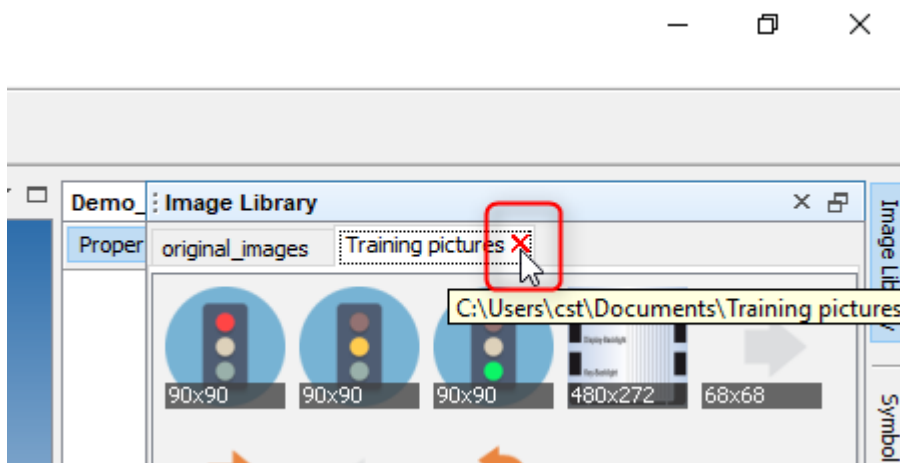

Alternatively, with a right-click on one of the tabs, a context menu with the following options opens

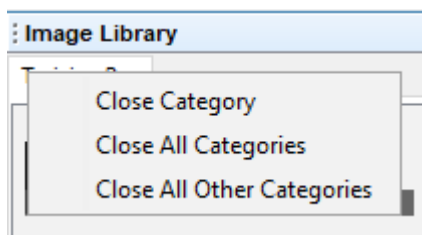


Close Category - closes the tab that was right-clicked on
 Close All Categories - closes all tabs

Close All Other Categories - closes all tabs but the one that was right-clicked on

Note that the Favourites and Search Tabs cannot be closed that way. The Search tab closes when the search field is emptied, the Favourites tab is removed when no images are selected as favourites.

Images can be dragged and dropped on objects in the Page Editor or in the project tree. See [Drag and Drop](#)^{D47} for details.

The preview image symbols provide a context menu which can be accessed with a right-click.

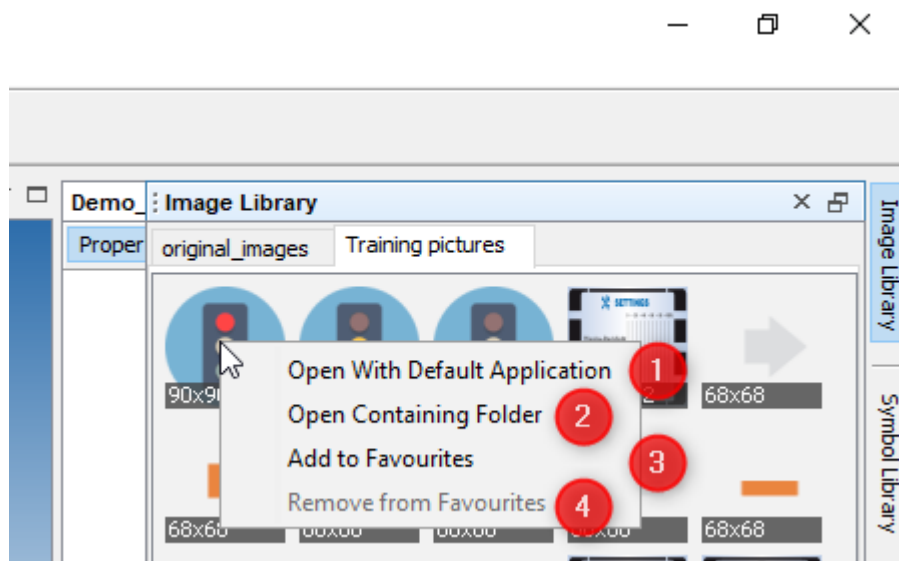

Open With Default Application (1) will open the current image with the application that is set as default in the PC operating system.

Open Containing Folder (2) will open the OS file manager with the current image folder.

Add to Favourites (3) will create a new tab called Favourites, where images can be collected that are used often.


Note that the images are not copied, there is no actual Favourites folder on the file system, the images are linked and only exist in their respective image folders.

To remove an image from the Favourites tab, right-click and select **Remove from Favourites** (4). This entry is only available in the Favourites tab.

The images in the Favourites tab and the opened folder tabs will still be available after closing and re-opening the program.

It is possible to select several images at once, to create a [list](#)^{D517} with them. To do this, press the CTRL key and click on the images you want to put in the list.

The images will be marked with a yellow overlay. They also get a number which represents the order in which they will be put into the list.

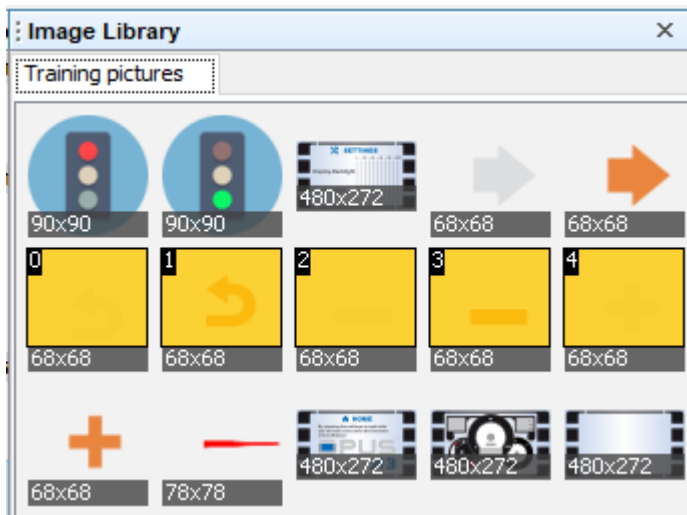


This order can be changed by scrolling the mouse wheel while hovering over one of the selected images with CTRL key being pressed.

This multi selection can also be used to select several images as favourites or to quickly empty (and thus close) the favourites tab.

3.5 Image Pool


The project tree now shows a new node called Images. This node shows all Original Images of the project as well as all Scaled Images of an Original Image.

The new Images Node is shown on the first hierarchy level below the JavaScripts Node.

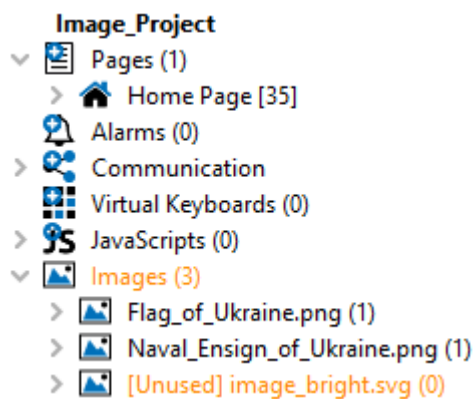

It also shows the number of images in the Image Pool in brackets (3 in the image above).


For each original image in the Image Pool, it shows the scaled images as they are used in the project as its children.

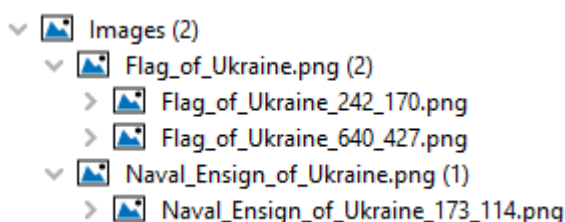


Unused Images

As you can see in the image above, the Image Pool also shows unused images. The image in the example was automatically included when a picture graphic object was added to the project, but when the image was set for the object, the default image was not used anymore.

Unused images can be deleted by right-clicking the Images (n) node and selecting Clean up Original Images...

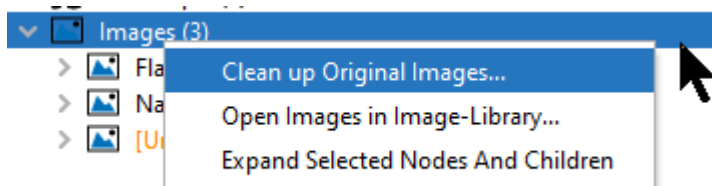

A dialog will appear asking if the following images should really be deleted.

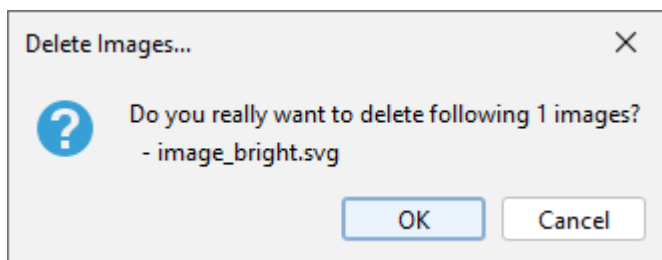

Up to 10 images will be listed in the dialog. If more than 10 images are to be cleaned, a ... indicates that there are more of them.

Press OK to remove the unused images. Press Cancel to cancel the process.

Updating Image Pool

The image pool and all its children will be updated immediately by every image change in the project.

Note that external file name changes are not tracked in the OPUS Projektor.


The corresponding node will not work fully as expected, i.e. it cannot be used to put the image on another Picture Graphic object.

When the project is closed and opened again, the original image is reinstated and the manually renamed image will be ignored, i.e. it does not appear in the image pool.

If an image in the image pool should be renamed, it should be renamed within the program.

Renaming images

To rename an image in the program, right-click it and select Rename...

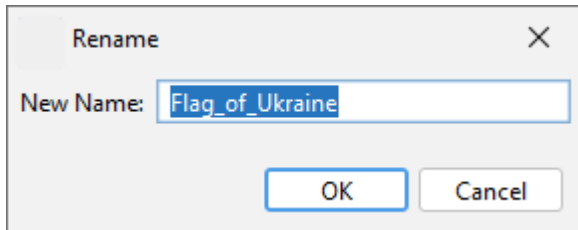

Type the new desired image in the dialog and press OK to confirm. Press Cancel to cancel the process.

All scaled images in the project will be updated.

Note that the image names are case insensitive, i.e. IMAGE.jpg and image.jpg (and Image and iImage and so on) will be treated as the same name and the renaming will not work.

Note that only alphanumerical characters A-Z (a-z), 0-9 and _ and - are allowed as image file names.


Note that only the image name itself can be changed, not the file type suffix.

Note that if the image name is used in JavaScripts, the references are not updated, this has to be done manually.


Updating and Replacing Images

If an original image should be replaced by a different one, i.e. all instances of the original image get the new image, there are three ways to do that.

1) Drag & drop from Windows Explorer

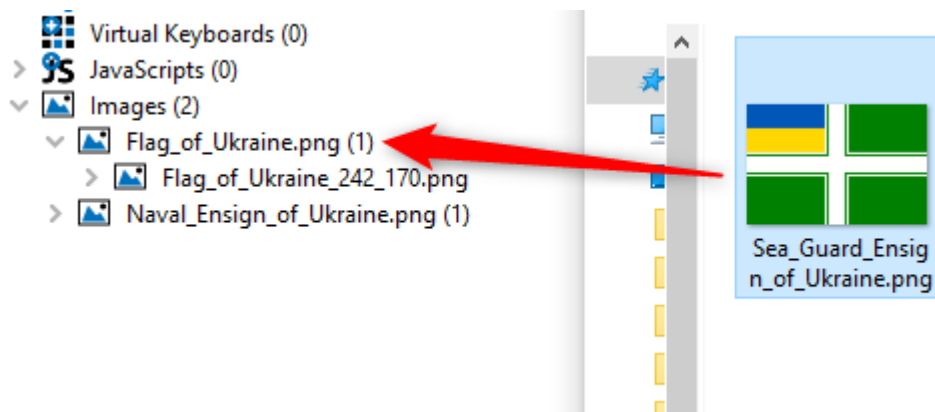


A dialog will be opened asking for confirmation.

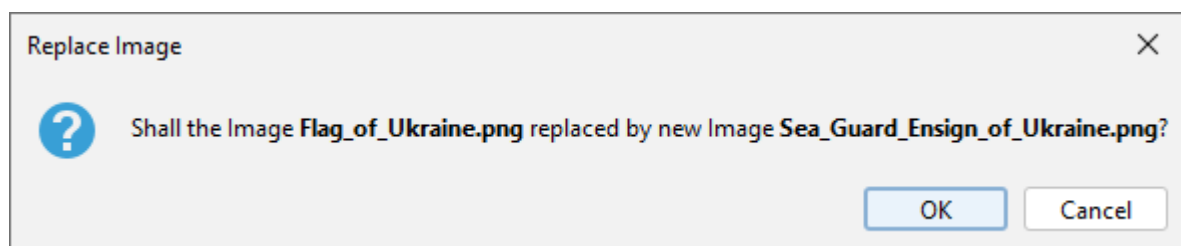


OK confirms the choice, Cancel cancels the process.

2) Drag & drop from the Image Library

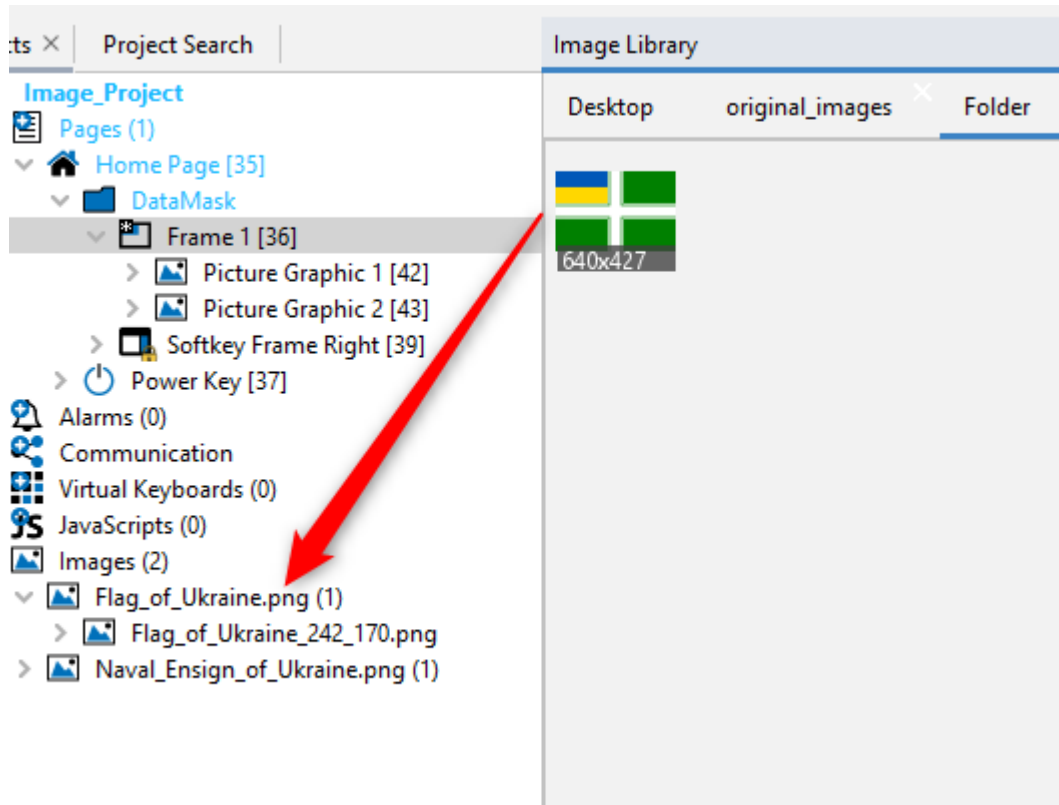


A dialog will be opened asking for confirmation.

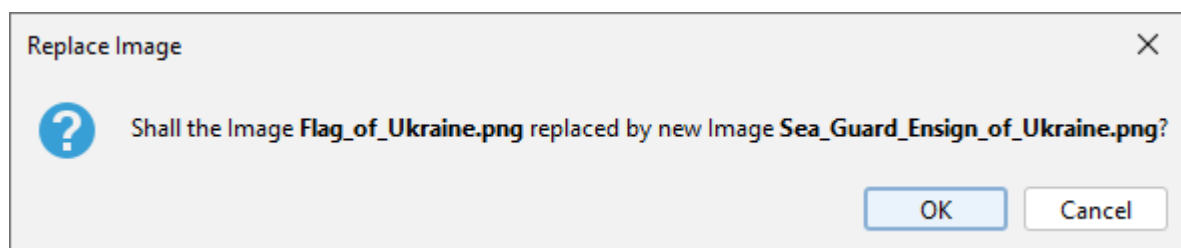

OK confirms the choice, Cancel cancels the process.

3) Context menu

Right-click on the original image and select Replace Image...

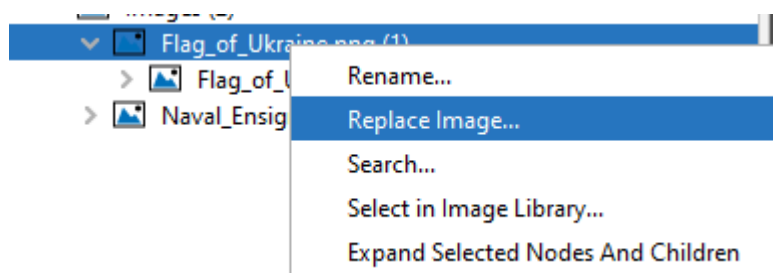

Then select a new image in the file browsing dialog.

Undo / Redo

All operations in the Image Pool can be undone and redone.

Tips & Tricks

If a double click is done on the Images (n) node, or a right-click with the selection Open Images in Image Library..., the original_images folder from the project will be added to the Image Library (which will be opened).

If a double click is done on an original image, or a right-click with the selection Select in Image Library..., the image will be selected in the Image Library.

If a double click is done on a scaled image, or a right-click with the selection Search..., the search is started for this scaled image, so each object that references this scaled image will be listed.

Note that a right-click selection Search... is also possible for an original image. Here the search is started for this original image, so each object that references one of the scaled image of this original image will be listed.

FAQ

What is the difference between the Image Pool and the Image Library?

The [Image Library](#)⁵⁰ can show the image content from folders on the computer. Images can be dragged & dropped from the Image Library onto objects to use them quickly.

The Image Pool only shows images that are or were already used in the project. It does not show images that are not or were not part of the project.

So an image from the Image Library, that is included in the project one way or another, will put the image into the Image Pool.

If I open the original_images folder in the Image Library, isn't that basically the same as the Image Pool?

No! The original_images folder can still contain images that are not part of the project. Those will be displayed in the original_images tab in the Image Library, but not in the Image Pool.

What can I actually do with the Image Pool?

You can use it as an easy overview of the images in your project. It not only shows you all images you are actually using, but also points to images you are not using.

And it shows you the exact usage of each image, i.e. where it is used in the project and at which resolution(s).

If you made modifications to images you use in the project, you can easily update all occurrences of the image by dragging & dropping it onto the image in the Images node.

Can I just leave the Image Pool be and not use it at all?

Sure. You will probably never have the necessity to use the Image Pool in any way. It is a tool for convenience, but you can build projects and do everything you need without using it. We hope, you will use it, though.


I have the same image with two different file names - why do I only see one?

The Image Pool calculates a check sum of the image. It will find that the two images are identical and it will only show the image that was first added to the Image Pool. On the other hand, since the images are the same anyway, it wouldn't make sense to have two of them in the project.

3.6 Import Variables

This chapter describes the process to import variables. The dialog can be reached via the menu Communication -> Import Export Variables -> Import Variables

Open File For Variable Import

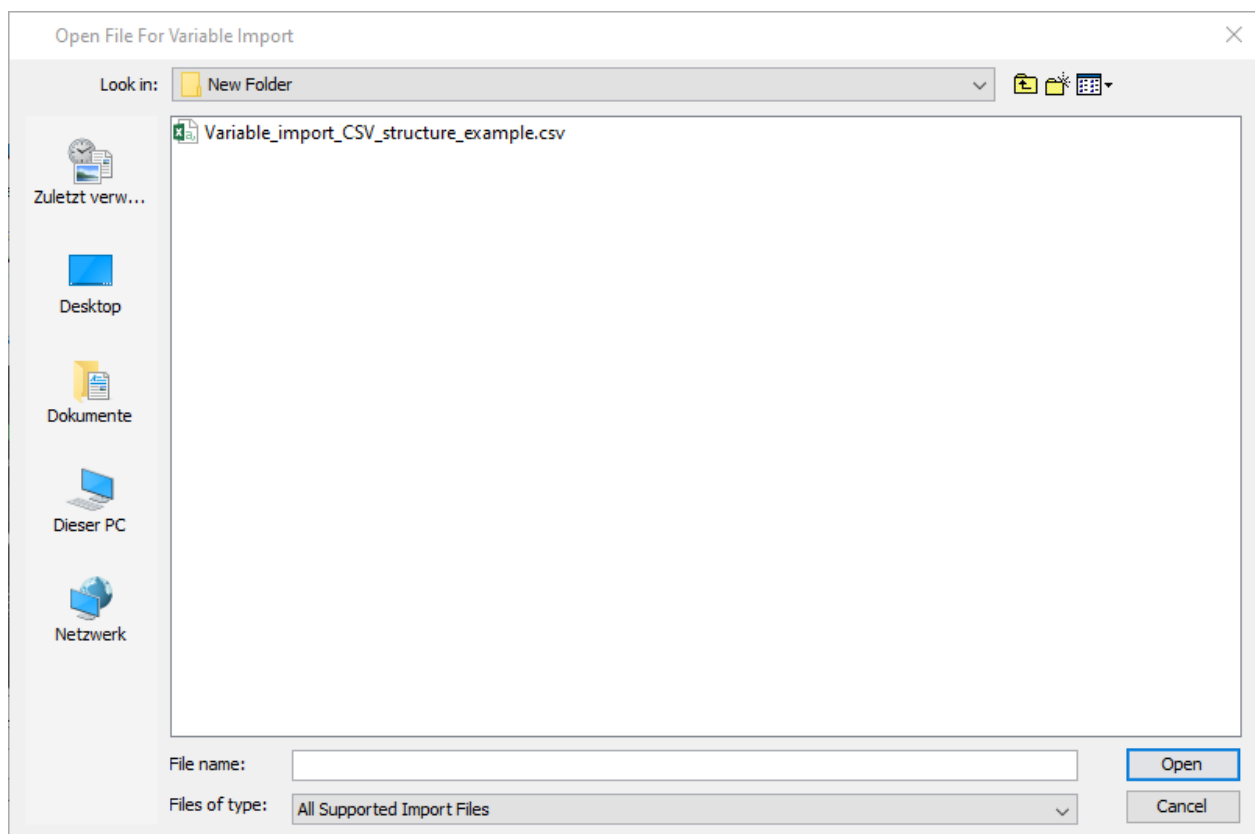


In the first dialog, a file can be chosen to import variables from. This can be

- a project.xml file from another project (located in the sub-folder \terminal_files of the project folder)
- a .CSV file containing variable information

Project.xml import

When variables are imported from a project.xml file, the Imported Variables step will be next.

CSV import

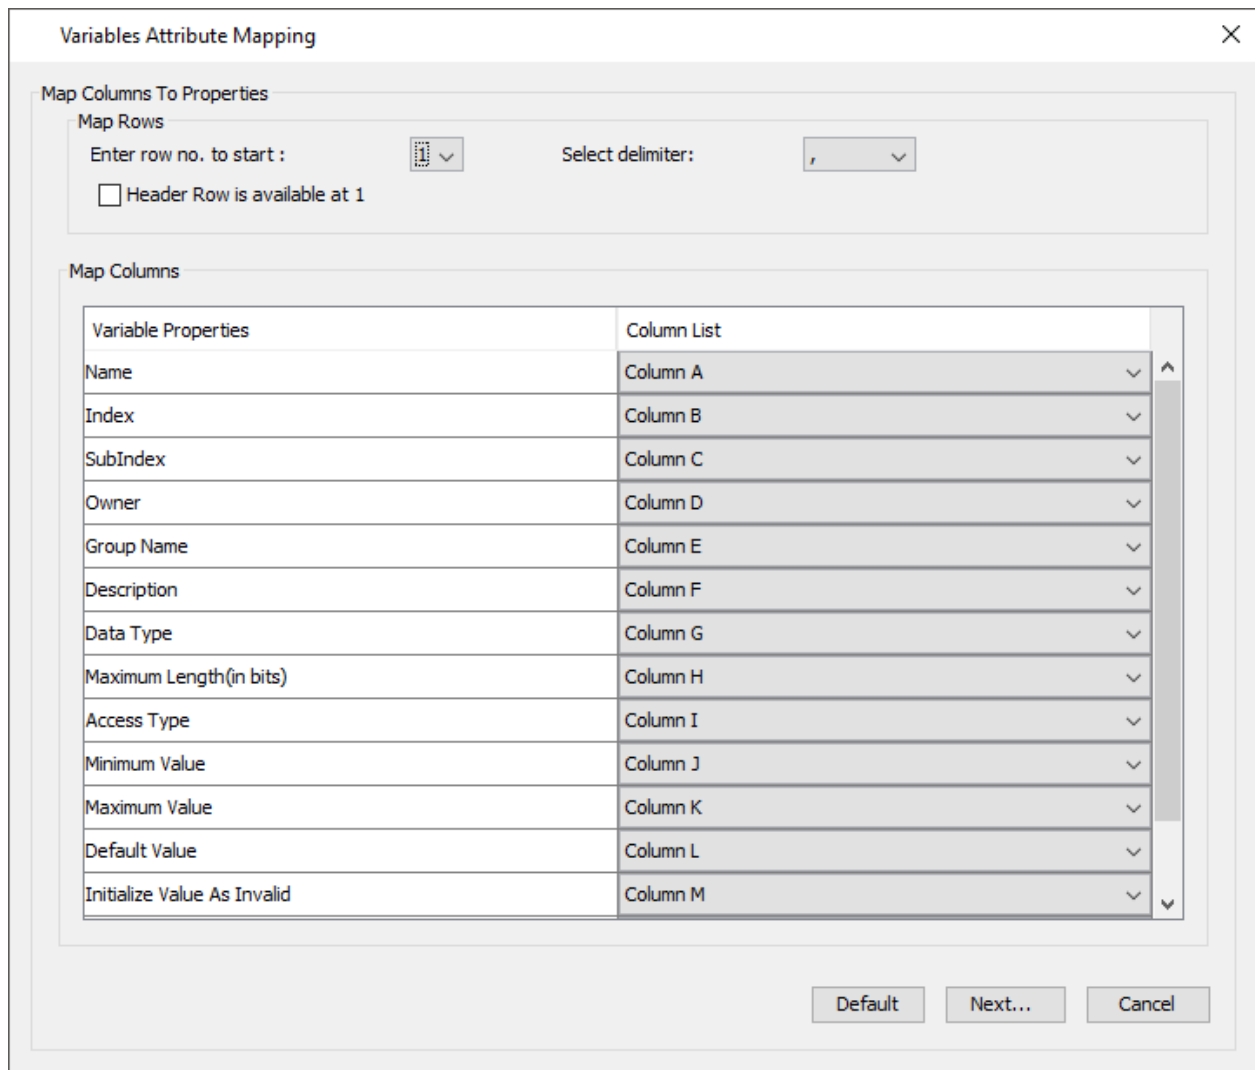

The dialog box is titled "Variables Attribute Mapping" and contains the following sections:

- Map Columns To Properties**
 - Map Rows**
 - Enter row no. to start : (with a dropdown arrow)
 - Select delimiter: (with a dropdown arrow)
 - ☐ Header Row is available at 1
- Map Columns**

Variable Properties	Column List
Name	Column A
Index	Column B
SubIndex	Column C
Owner	Column D
Group Name	Column E
Description	Column F
Data Type	Column G
Maximum Length(in bits)	Column H
Access Type	Column I
Minimum Value	Column J
Maximum Value	Column K
Default Value	Column L
Initialize Value As Invalid	Column M

At the bottom right, there are three buttons: "Default", "Next...", and "Cancel".

In this dialog the structure of the CSV file has to be specified.

- Enter row no. to start: Select the row in the .CSV file where the variable information starts.
- Header Row is available at 1: If the .CSV file contains a header, check this box. The row to start should include the header row
- Select delimiter: Select the delimiter used in the .CSV file.
- Map Columns: Match the columns of the .CSV file with the necessary variable properties. Press Default to revert the mapping to the default setting.


The default columns for the .CSV file are:

Variable;Index;Sub-Index;Owner;Group;Property_Description;Data-Type;Length;Access Type;Min Val;Max Value;Default Value;Initialize Value As Invalid;Remanant;Force writing

Press the button Next... to continue. Press Cancel to stop the process.

Imported Variables

In this dialog it can be specified which variables from the source should be imported. In the Tree view you can select the variables or variable groups for import.

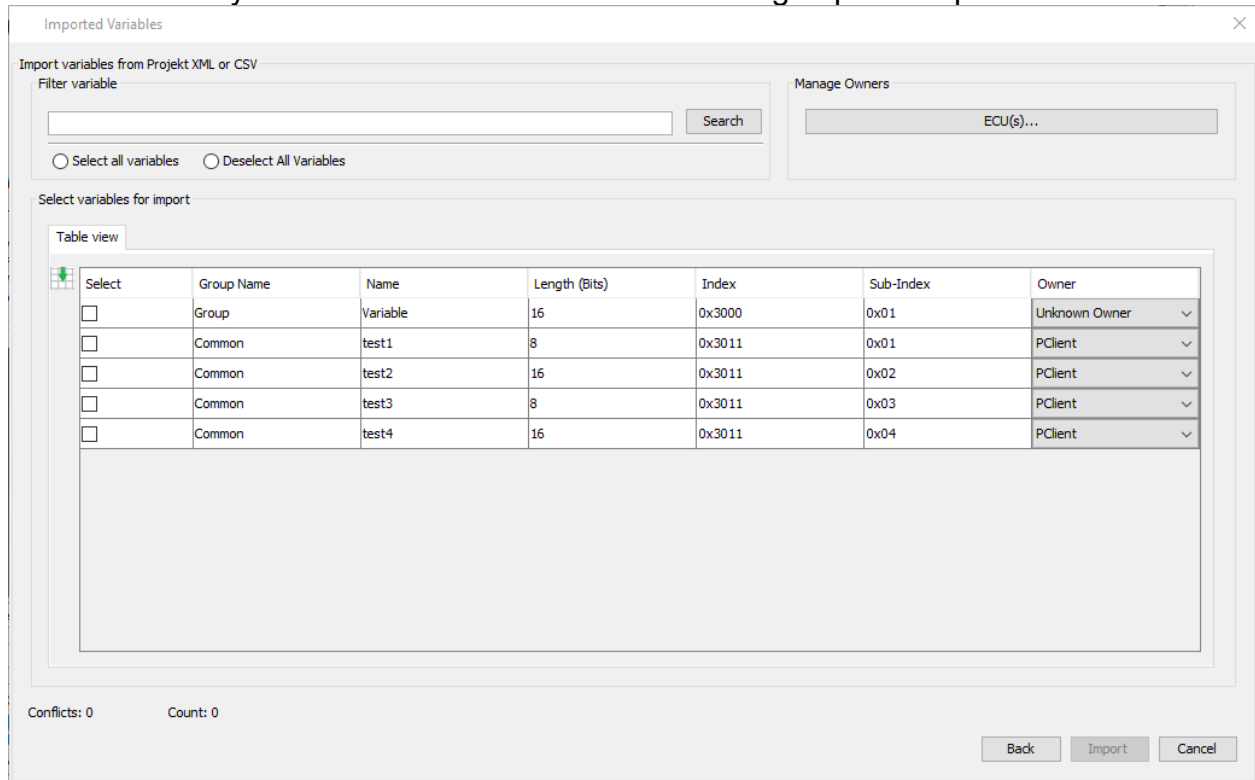

In the Table view tab you can see an overview of the variables with the most important properties.

In the Filter variable section you can search for variable names live. With the "ECU(s)..." button you can open the dialog to add ECUs / owners to the project.


Additionally you can modify the owner that the variables are assigned to.

You can select variables by checking the according checkboxes. Click the "Select all variables" radio button to select all available variables for import. Click the "Deselect all variables" radio button to deselect all variables for import.

By clicking the "Import" button the variable(s) will be imported. If there are conflicts with existing variables in the project, those conflicts will be shown in a dialog and the import process will be stopped. Solve the conflicts and restart the import process.

3.7 Launcher


Before the OPUS Projektor starts, a launcher is started which gives a number of options for the OPUS Projektor start.

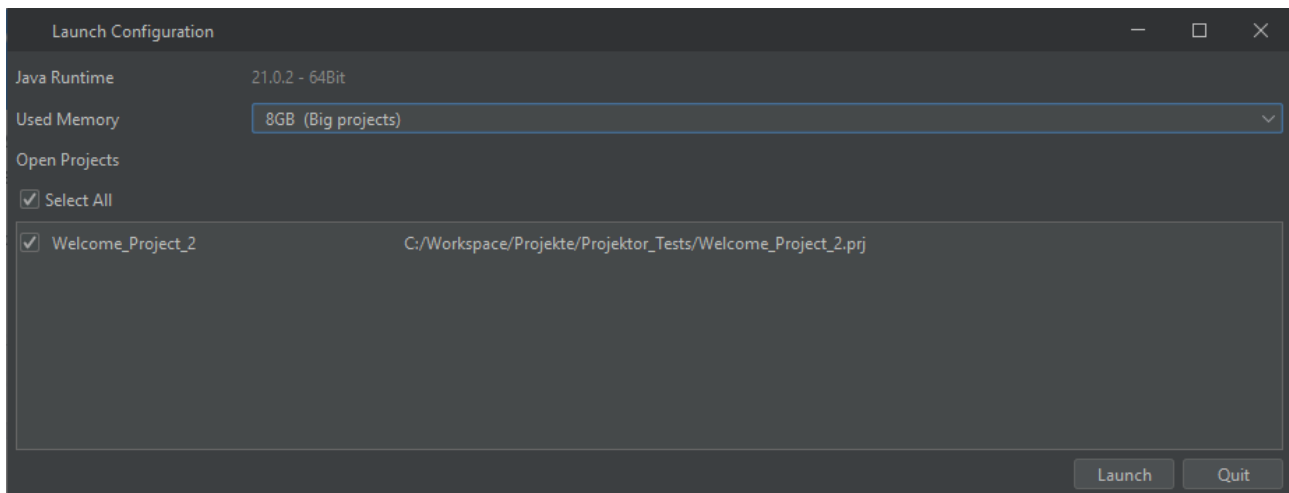

If nothing is done, the launcher automatically starts the program after a countdown of 5 seconds. Click anywhere in the launcher to stop that countdown.

In the first line, the used Java Runtime is displayed. This cannot and should never have to be changed.

In the second line, some heap memory settings for Java can be selected.

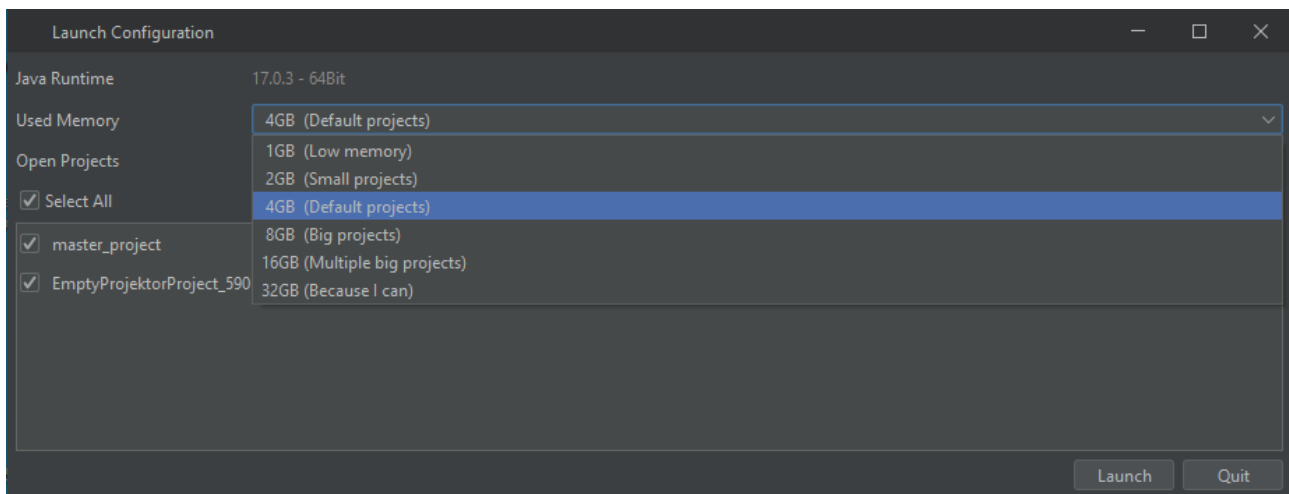

The default setting of 4 GB of RAM memory is sufficient for most cases. If limited RAM is available, 1 GB or 2 GB can be selected. This can be problematic with large projects, though. For larger and multiple large projects, especially when upgrading them from older versions, 8 and 16 GB can be selected. Please note that enough RAM memory needs to be available for those options to make sense.

32 GB can be selected, if you really want to show the program that you got it all.

The projects that were opened last time the program was running, are listed next. All projects are selected by default. Projects that should not be opened again can be deselected. With the Select All box all projects in the list can be selected or deselected. Please note that once the program starts with projects deselected, these projects will not appear in this list again. Instead, they will be listed in the recent projects pane in the [start page](#)¹⁴⁷.

3.8 Licensing



Tutorial video about how to get a license

<https://www.youtube.com/watch?v=LsO0v44J6YE>

The OPUS Projektor has to be licensed to be fully usable.

In the current version, the demo has the following limitations:

- Only up to 2 pages can be created
- Only up to 5 variables can be created



Projects that exceed these limitations can be opened, modified and saved, but they cannot be downloaded to the device / USB stick.

The license can also unlock all [>2400 ISO symbols](#)¹⁴⁹ to be used in the program, the [DBC file import feature](#)⁴¹³ and the [Ethernet Camera Tool](#)⁷³⁹. These licenses are sold separately.

To get a license, three steps are necessary:

1. Create a key file

Open the menu Tools -> Generate Key File

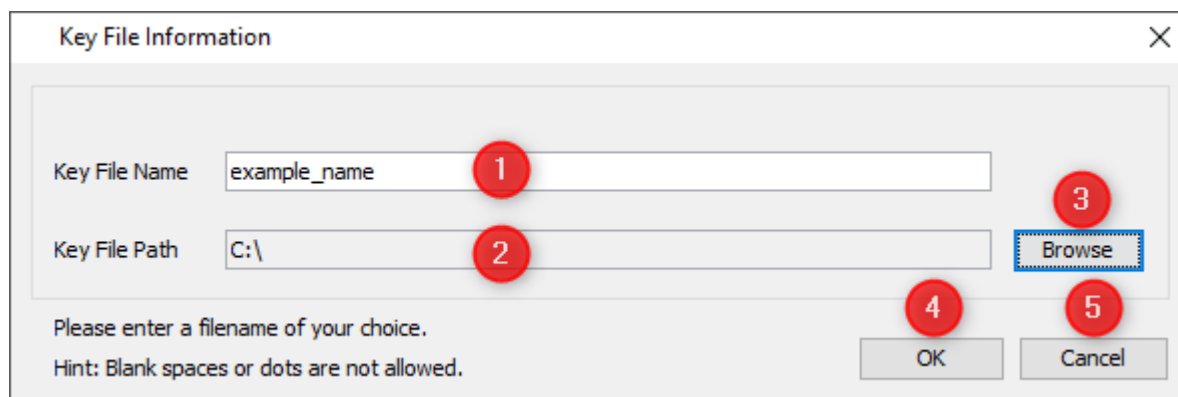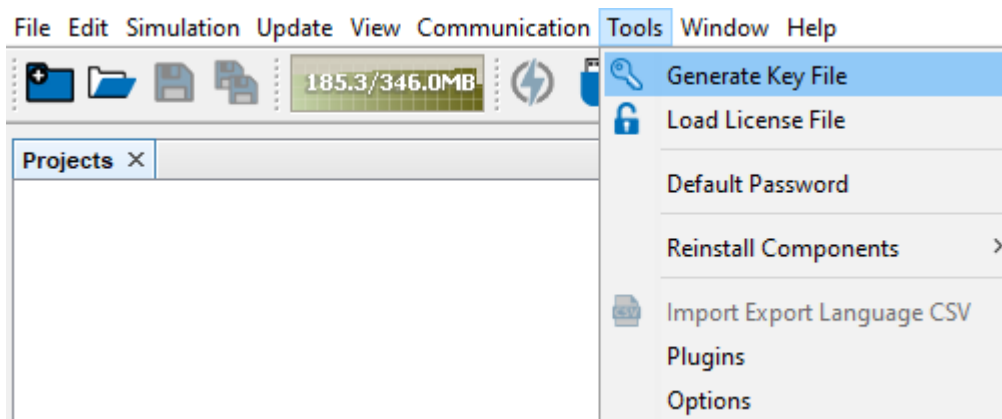


In the dialog, choose a filename (1) and select where the key file should be stored (2) by pressing the Browse button (3) and choosing a path. Confirm and close the dialog to create a key file with OK (4). Cancel (5) cancels the process and closes the dialog.

2. Get a license file

To get a license file, first the license needs to be purchased from your vendor. Then you can send the key file to your vendor and they will send you back a license file.

3. Load the license file

After the license file was received, open the menu Tools -> Load License File

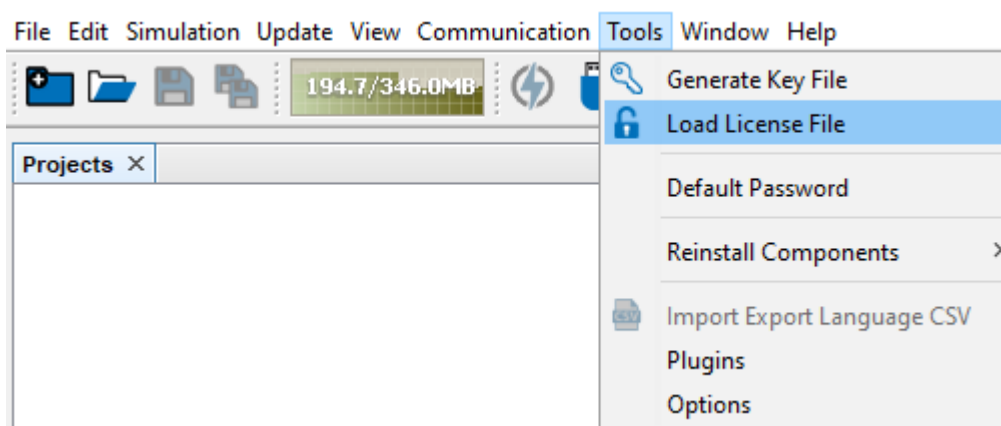

In the dialog, browse to the location of the license file, select it and confirm by clicking Select License File.

A confirmation dialog is shown. The dialog will also inform if one or more of the additional features were unlocked.

Close the dialog by clicking OK. Now the program is fully licensed. The title of the program in the title bar should have changed from Demo to Licensed.

3.9 New Project Format

With version 2024 of the OPUS Projektor we are introducing a new project format.

Before, our project was actually a folder, with several different project files and sub-folders in it.

Now, that really still hasn't changed, but at the same time, it has.

The project is now stored as a .prj file in your project location. The file is actually a renamed zip file, so you can open it up with e.g. 7zip if you want to take a look.

However, when such a project is opened, we will unpack this file in a working directory, so we still have the same structure as before.

When saving the project, the .prj file is newly created by zipping the working directory project folder.

New projects

In the new project dialog, the file name of the project will be shown according to the selected folder and project name.

Instead of a project folder \new_project, a file new_project.prj will be created at the selected location. The project folder will be stored in the [working directory](#)⁷⁵.

Opening "old" projects

When opening a project with the old folder structure, nothing is different at first. But in the background a project file is created at the location of the old project folder. The project folder is saved into the working directory. The [default working project folder](#)⁷⁵ will be used if no custom one is set. We recommend using the default folder.

In the [project properties](#)⁸¹, the location of the project file can be seen and browsed. Also the working project directory can be seen and browsed from there.

Why did you do this?

The reason is very simple: Network folders and cloud synchronized folders!

Our customers often had exceptions when trying to save a project that is located on a network drive or synchronized folder.

The reason for that is that the OPUS Projektor needs full and constant access to all project files. However, sometimes the cloud storage program or network folder management program blocks files while they are being synchronized. If that happens in the moment when the OPUS Projektor tries to access the file, then an exception can occur.

Rules for network drives and cloud storage folders

1. You can store your .prj file on a network drive or cloud storage synchronized folder.
2. You should **NOT** set your working directory in the OPUS Projektor [options](#)⁷⁵ to a network drive or cloud synchronized folder. This folder should be on your local hard drive without any synchronization.

What if I don't want to use this new format?

First of all, please let us know why you don't want to use it, as we can't really see any disadvantages.

You can't prohibit the creation of the project file when saving the project. What you can do is ignore this file and open your project folder as the project. The project file will still be created when saving, and the project folder will be moved to the working directory, so you have to copy it back to your location.

Sounds quite complicated, and you're right! So consider again to use the new project file, it's the better way.

Will my working directory get filled up with old projects?

That mainly depends on how many projects you are working with. If you work on one project, there will be only one project folder in the working directory. If you work with many and/or change project names a lot, there will be more. You can clean up the working directory in the menu [Options -> Projects](#)⁷⁵.

Is there anything to watch out for?


Maybe. One behavior is new: Let's say you have a project open, and you have a JavaScript editor open and you just typed something. Now you close the whole project. In the dialog that asks if you want to save or discard, you say discard. The project and the script will be closed. But the next time you open the project, the changes in the script are gone! Or even more extreme, let's say you have a project open and create a new script. Type something in it, close the project, discard, re-open - the JavaScript file doesn't even exist anymore.

The reason is simple: Only saved changes go into the project file. If you discard the changes in the project, the JavaScript file will actually be saved (to be able to close it automatically). But it's only saved in the working directory. If you re-open the project file, the working directory will be overwritten and the file is gone. So if you want to keep changes in your scripts, don't choose discard (duh).

3.10 Options

This chapter describes the available options that can be reached via the menu Tools -> Options.


General

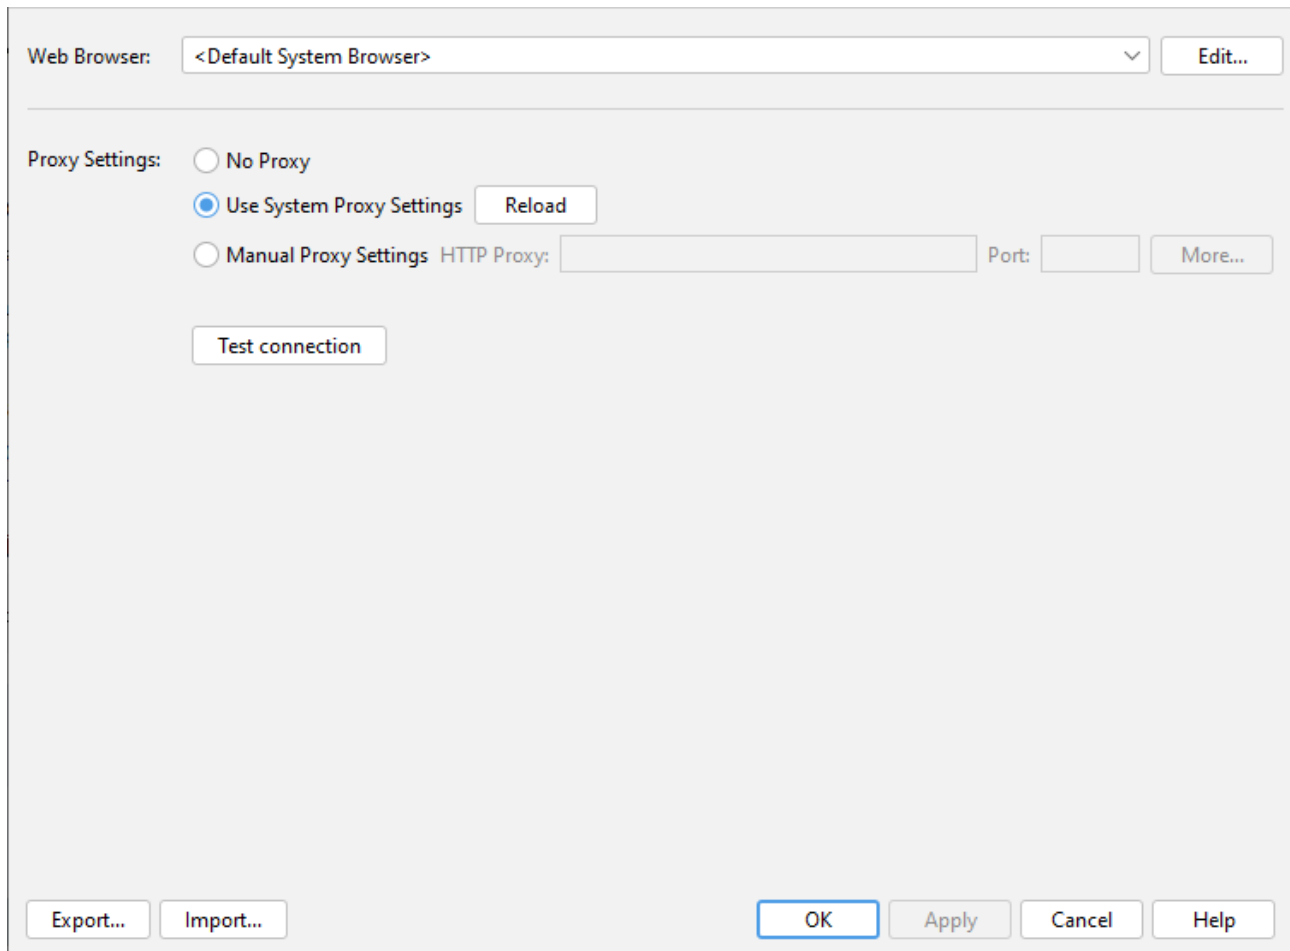

The screenshot shows the 'General' tab of the 'Options' dialog box. At the top, there is a 'Web Browser' section with a dropdown menu set to '<Default System Browser>' and an 'Edit...' button. Below this is the 'Proxy Settings' section. It contains three radio buttons: 'No Proxy', 'Use System Proxy Settings' (which is selected), and 'Manual Proxy Settings'. To the right of the 'Use System Proxy Settings' radio button is a 'Reload' button. To the right of the 'Manual Proxy Settings' radio button are two text input fields labeled 'HTTP Proxy:' and 'Port:', followed by a 'More...' button. Below these fields is a 'Test connection' button. At the bottom of the dialog, there are five buttons: 'Export...', 'Import...', 'OK', 'Apply', and 'Cancel'. The 'OK' button is highlighted with a blue border.


In the General tab the Web Browser used to open this HTML help can be selected. Additionally, proxy settings can be made for the [online update](#)⁷⁴⁹ and the [report](#)⁷²⁵ connection.

Editor

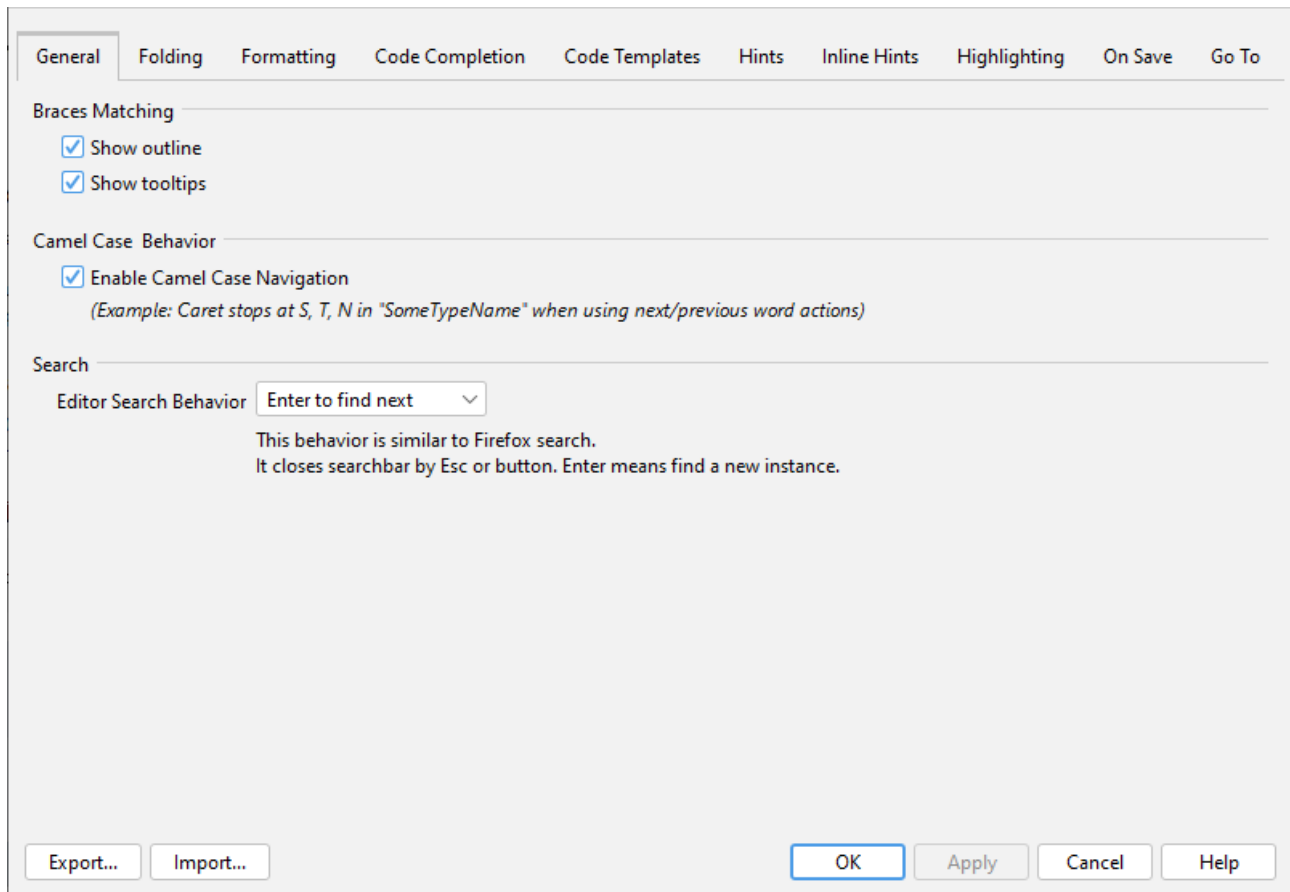


In the Editor tab the behavior of the JavaScript editor can be modified in great detail. Please refer to a Netbeans documentation for details, e.g. [here](#).

Fonts & Colors

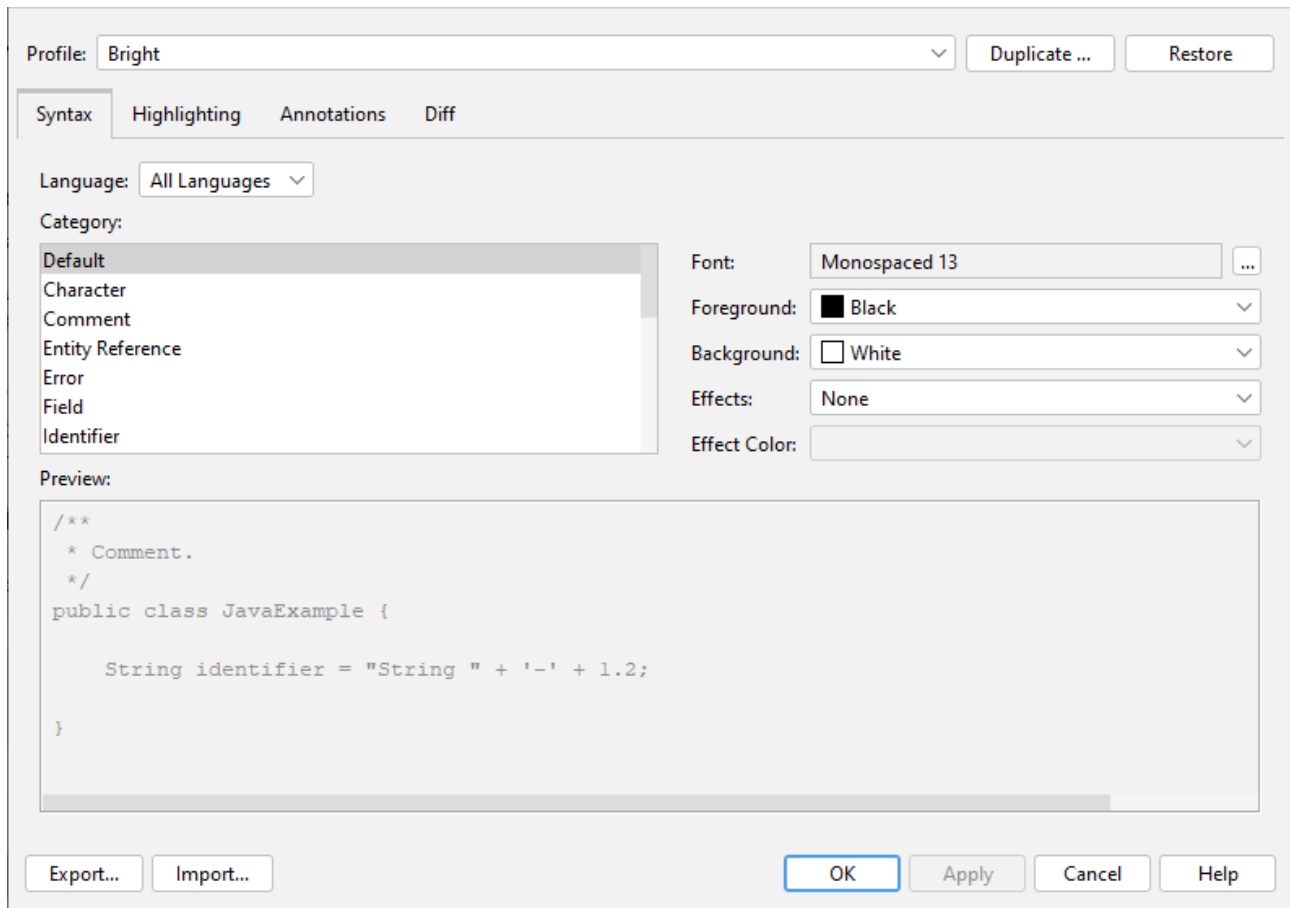

In the Fonts & Colors tab the appearance of the JavaScript editor can be modified in detail. Please refer to a Netbeans documentation for details.

Scene

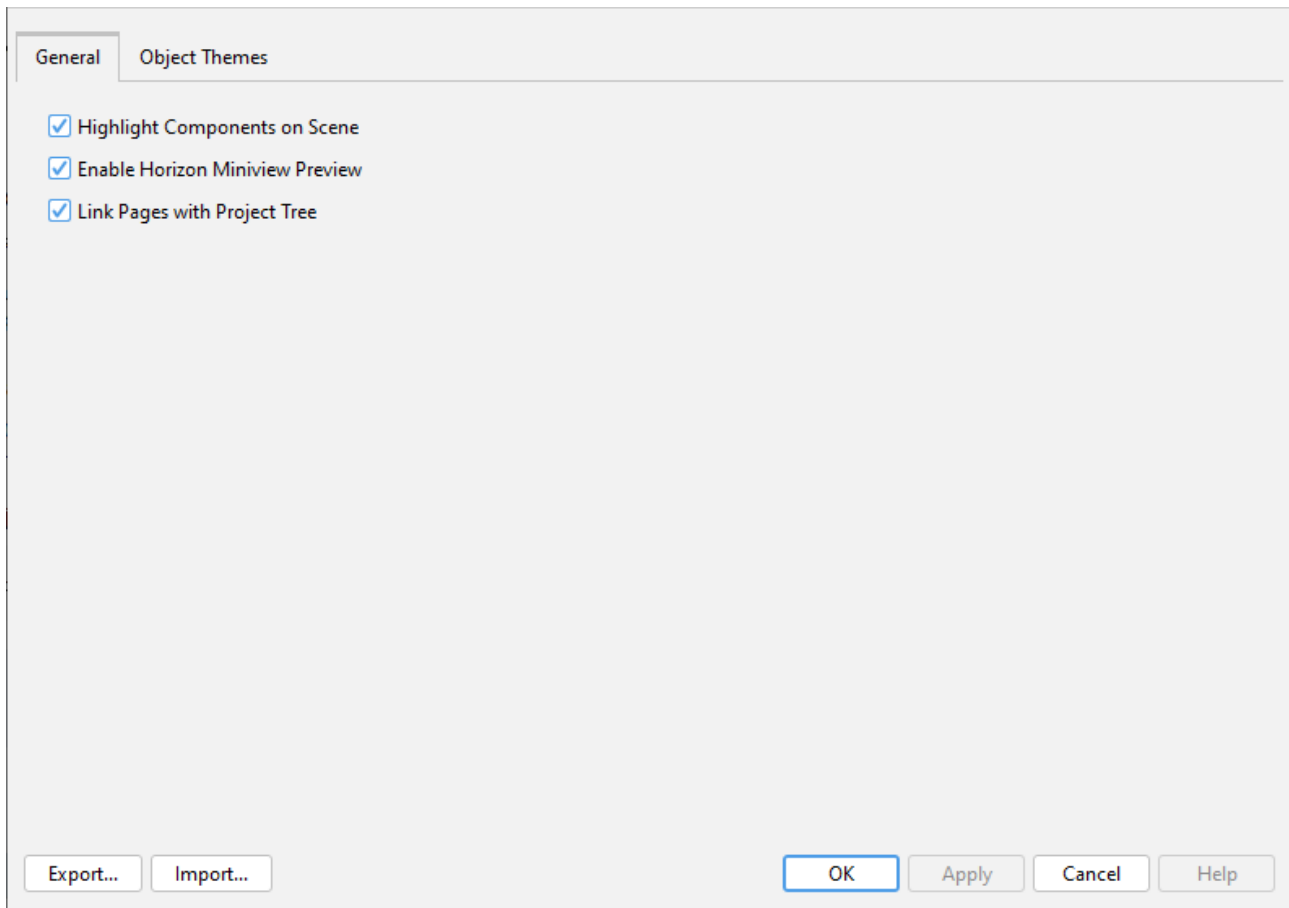


Highlight Components on Scene - Option to highlight components in the page editor when the mouse hovers over them.

Enable ISOBUS Miniview Preview - Miniview Preview in pages for ISOBUS projects.

Link Pages with Project Tree - When a tab is closed, the next open page will be selected in the tree with this option active.

For a description of the Object Themes please refer to the [Object Themes](#) ³³³ chapter.

Appearance

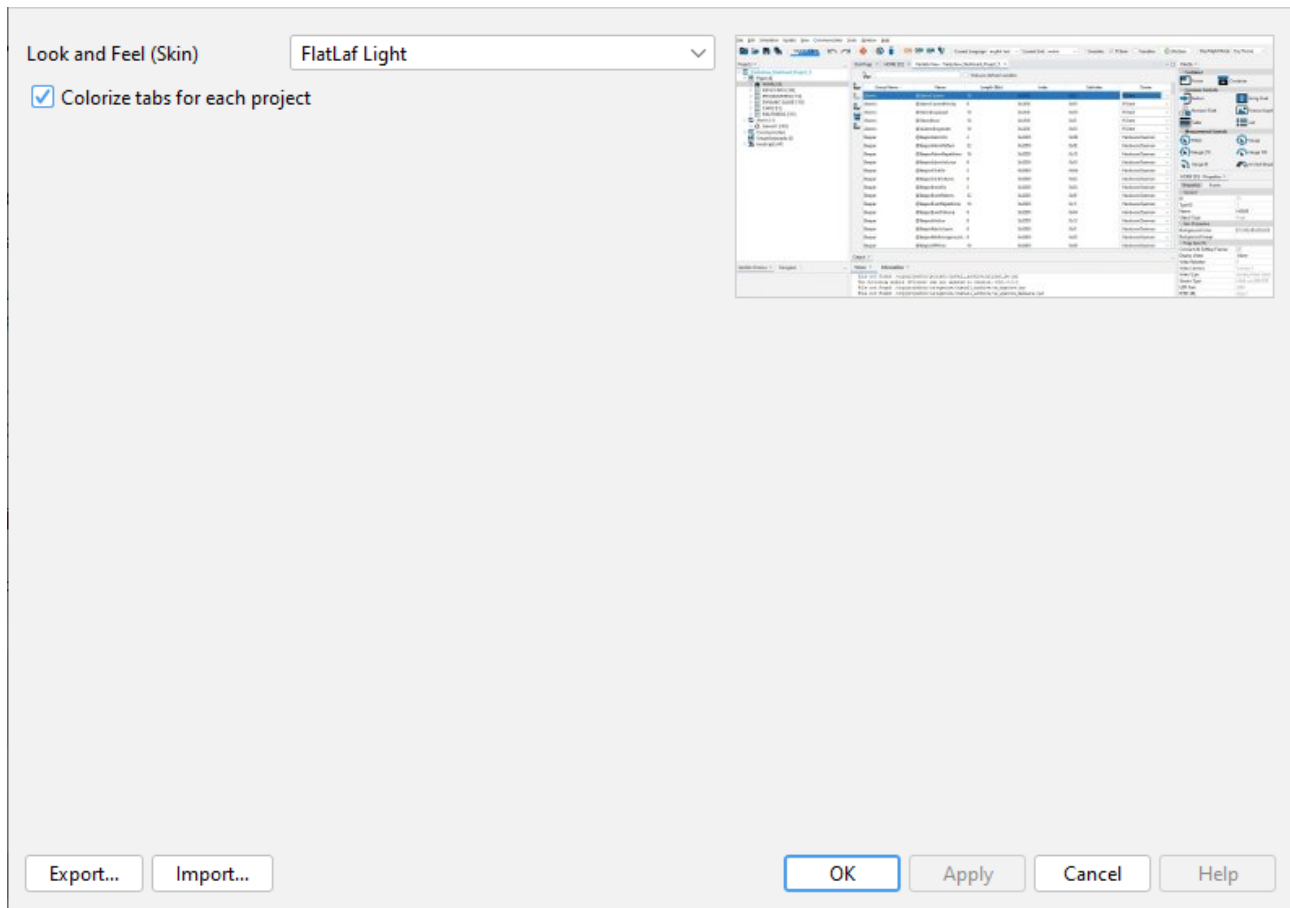

In the Appearance tab one of the available skins can be selected. The skins will be shown with a preview image.

Note that the OPUS Projektor has to be restarted for the new skin to be activated.

Projects

The screenshot shows a settings dialog box for OPUS Projektor. At the top, there is a section titled "Clear recent projects" with a "Clear" button. Below this are two checked checkboxes: "Auto-Save projects before Project Updater/Simulation starts" and "Use extended Windows file browser". A note below the checkboxes states: "(If there are performance issues in the file browser, deactivate this option to get a better performance. This is often caused by slow network connections.)". The main section is titled "Working directory" and contains the text "This directory is used for internal storage of your projects." Underneath, there is a "Location" section with two radio buttons: "Default" (selected) and "Custom". Below the radio buttons is a text input field and a "Browse..." button. At the bottom of the "Working directory" section is a "Clean up" button. The dialog box has a standard footer with "Export...", "Import...", "OK", "Apply", "Cancel", and "Help" buttons.

In the Projects tab the list of recent projects in the Welcome Page can be cleared.

It is also possible to enable/disable the auto-save of the current project when the Updater or the PClient simulation is started.


Also, the extended Windows file browser can be disabled. This will limit the view in file browsers to "My computer" and the current directory path. With the option enabled, Windows Explorer favorites and all drives including network drives will be shown. Disabling the option might help with a sluggish folder navigation.

Lastly, the working directory for projects can be set. Usually it is recommended to keep the default path.


With the Clean up button the current working directory can be cleaned, i.e. all working project folders that are not currently opened in the OPUS Projektor, as well as all other files and folders (so don't store anything in this folder) will be deleted.

Read more about the new project format [here](#)⁶⁸.

Reporting

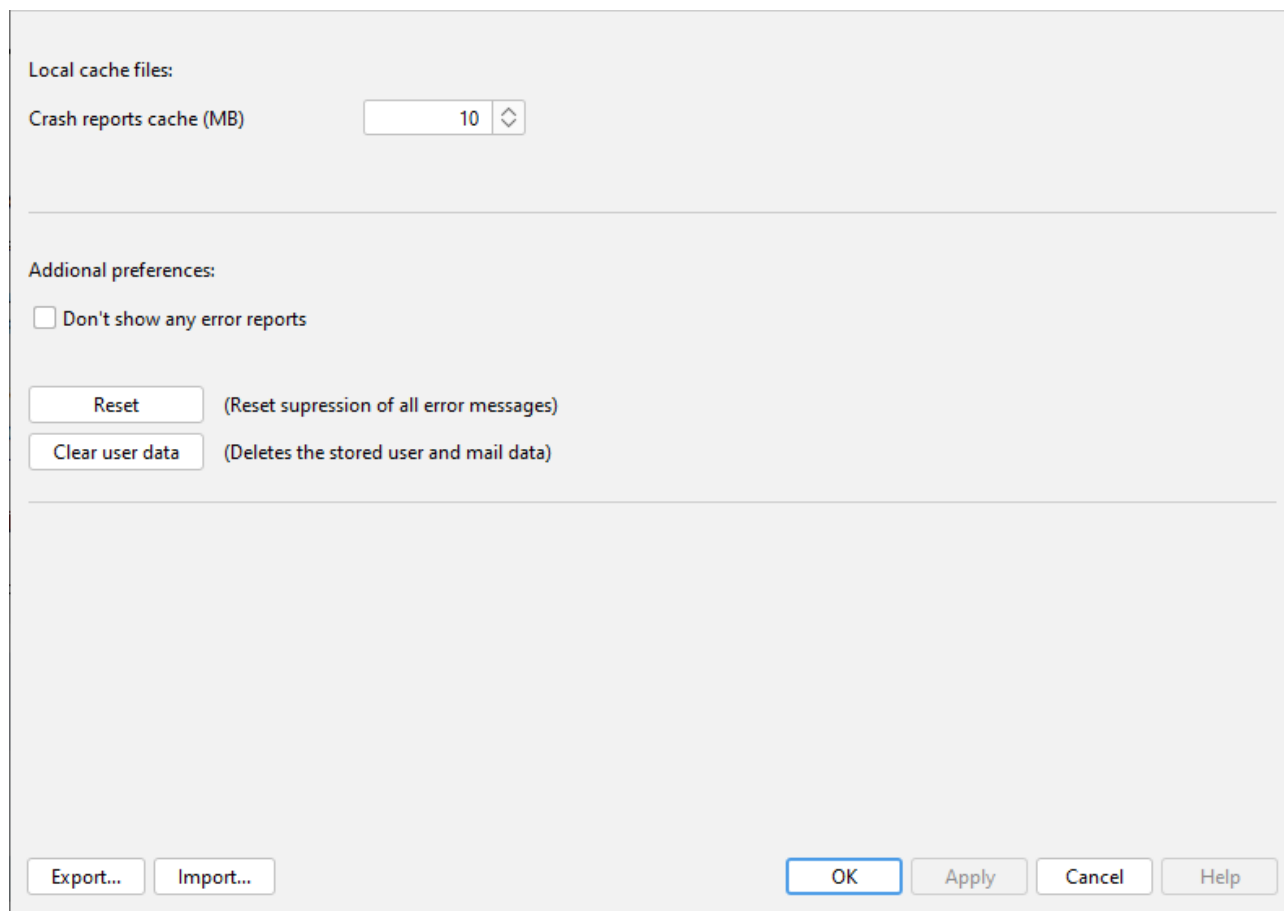

Local cache files:

Crash reports cache (MB) 

Additional preferences:

☐ Don't show any error reports

(Reset suppression of all error messages)

(Deletes the stored user and mail data)

In the Reporting tab settings regarding the [reporting feature](#)⁷²⁵ can be made.

The cache size for unsent reports can be set.

A general setting to not send any reports can be made here (which we don't recommend).

Also, the suppression of single exceptions which can be set in the crash report dialog, can be reset here.

Lastly, the stored user data for reports, in form of the name and email, can be cleared.

Versioning

The screenshot shows a dialog box with the following elements:








- Author name:** A text field containing "ckessner".
- Author email:** An empty text field.
- Commit Options:**
 - ☐ Auto commit on save
 - ☒ Commit on save
 - ☒ Commit on project download (start Updater)
 - ☐ Commit on simulate (start PClient / Variable Simulation)
- Buttons:** "Export...", "Import...", "OK", "Apply", "Cancel", and "Help".

The author fields will be used as committer information for each project commit. Enable auto commit on save means that the [commit dialog](#)¹³⁵ isn't shown when saving the project.

3.11 Page Editor

The Page Editor is the main window to design graphical content for the project. It has its own toolbar:


Menu	Description
	Enlarge view in editor.
	Reduce view in editor.
	100% scaled view in editor.
	Left alignment of multiple selected objects.
	Right alignment of multiple selected objects.
	Horizontally centered alignment of multiple selected objects.
	Top alignment of multiple selected objects.
	Bottom alignment of multiple selected objects.
	Vertically centered alignment of multiple selected objects.
	Move the selected object one step closer to the background (changes z-order).

Menu	Description
	Move the selected object one step closer to the foreground (changes z-order).
	When resizing an object, child objects are not resized.
	When resizing an object, children are resized too.
	Switch "Snap to object" on / off
	Shows/hides a horizontal and a vertical ruler.
Grid Width: <input type="text" value="10"/> px	Allows configuration of the grid width. Furthermore snap to grid can be enabled and disabled.
	Shows a list of the last undo steps. Disabled for this version.
	Shows a list of the possible redo steps. Disabled for this version.

Objects can be created by dragging and dropping from the [object palette](#)⁴⁴⁵ or by using [copy & paste](#)⁴⁴⁶ from other pages or projects.


Objects can be moved by modifying the X and Y position properties or by moving them with the mouse.

Object swim lanes help positioning objects at the correct distances:

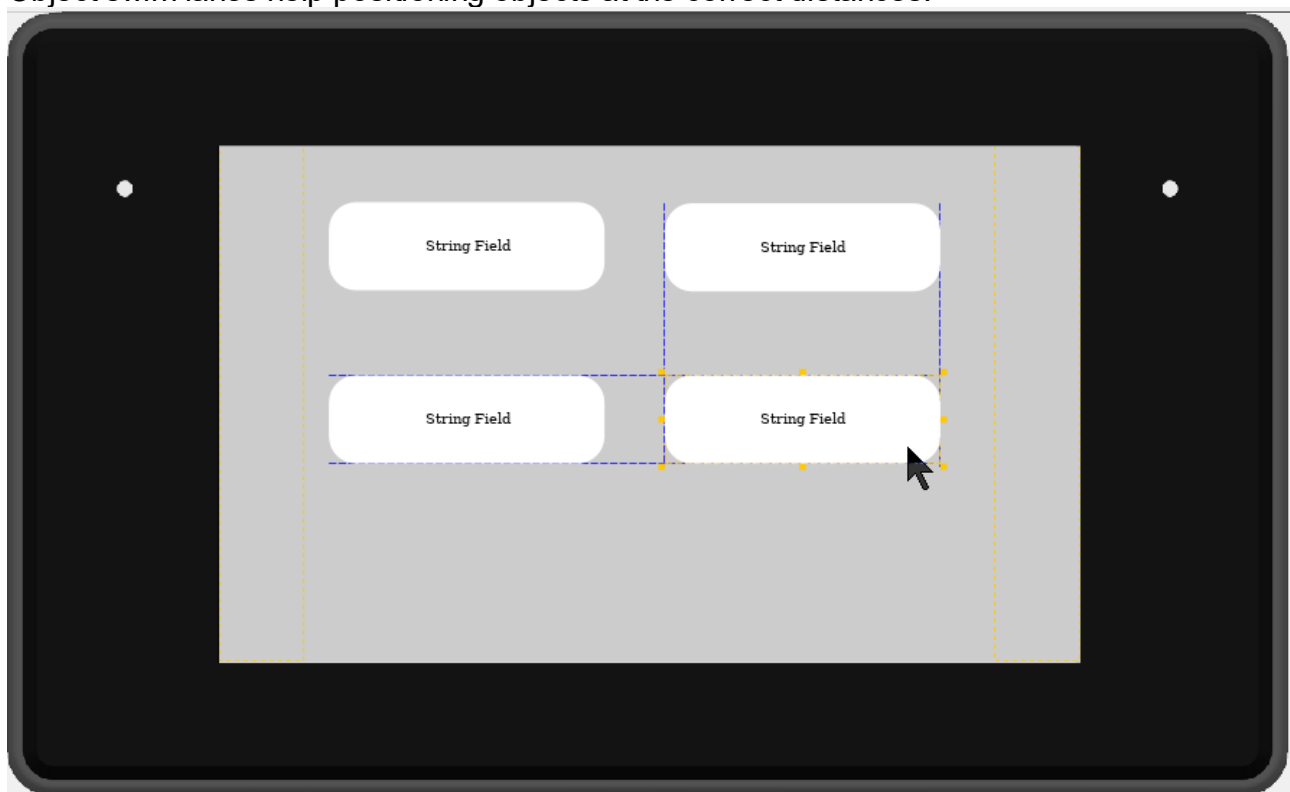

Those can be turned off with the Snap to Object switch in the Page Editor toolbar.


Objects can be resized by modifying the Width and Height properties or by using the orange squares in the corners and edges of the object.

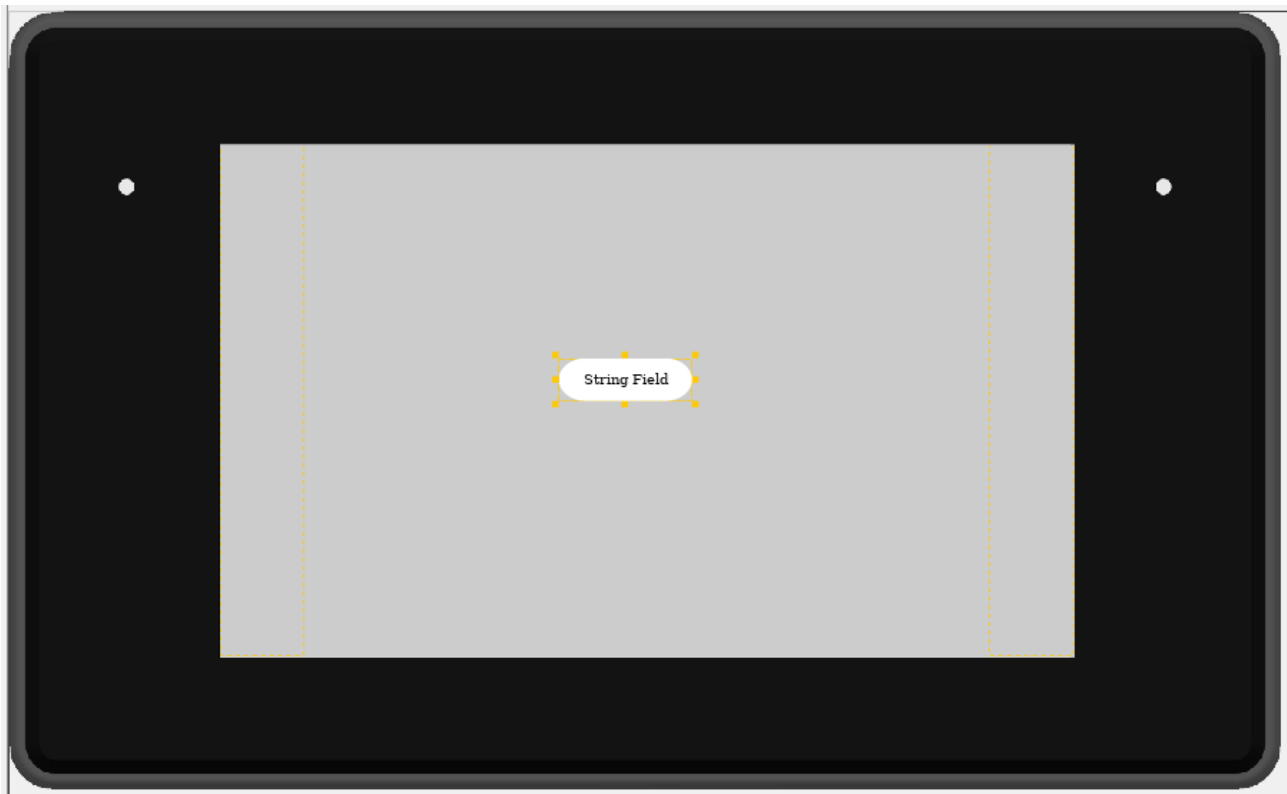

To resize an object and keep the aspect ratio (especially interesting for images), press the Shift key before clicking one of the corner squares or while resizing.


Objects can be locked in place to avoid accidental modifications with the mouse while editing other objects.

To lock an object, right-click on the object and select *Lock Position and Size -> Lock Object*.

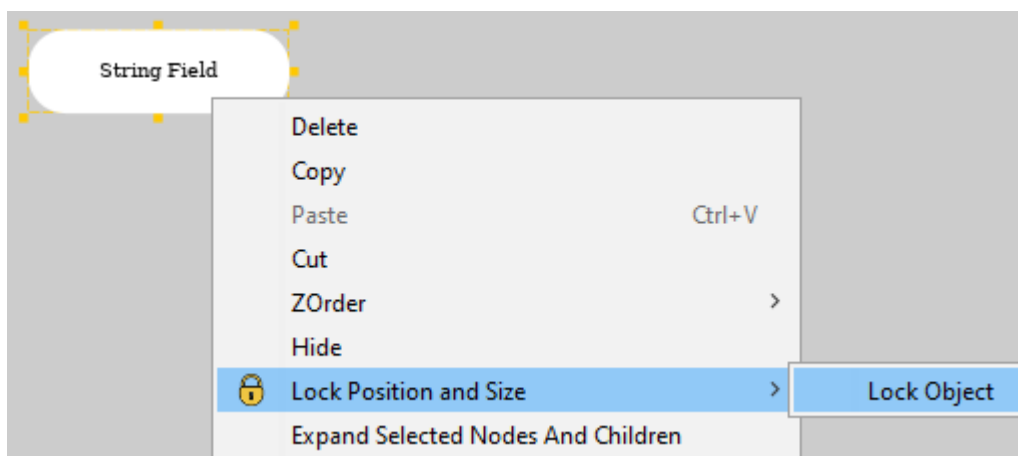

If the object is already locked, the menu will show *Unlock Object* instead.

Objects can also be locked / unlocked in the project tree.

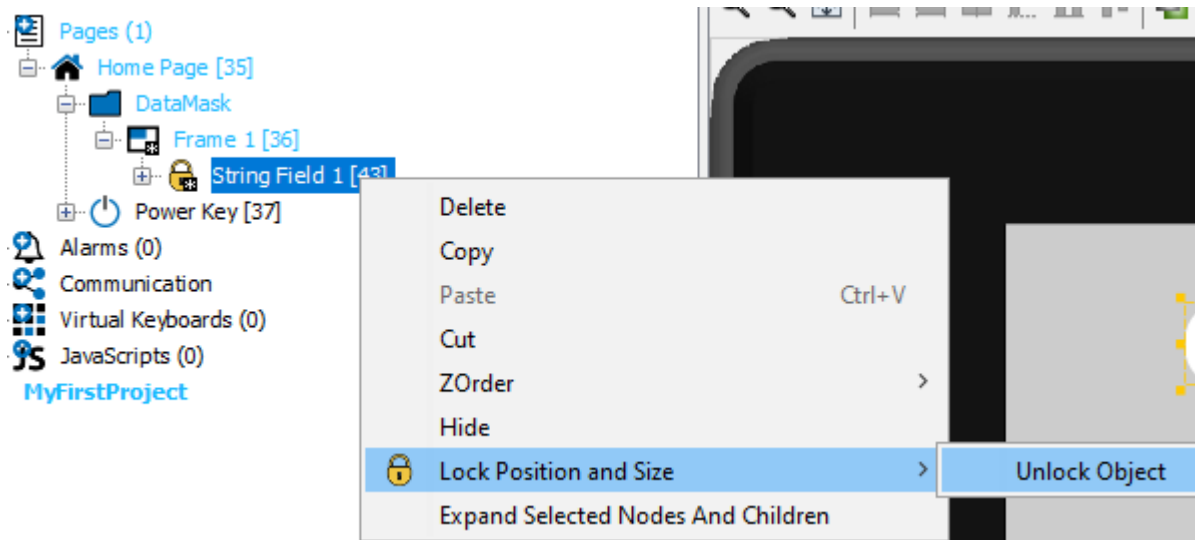

3.12 Project Properties


This chapter describes the various properties of a project.

The project properties can be opened in two ways:

- Using the **Properties** entry of the right click context menu of the project node in the **Projects** tree window.
- Using the **Project Properties** entry in the **File menu**.

Please note that not all properties are available at all times. Only the properties available for the device in the currently selected project are shown.

General Properties

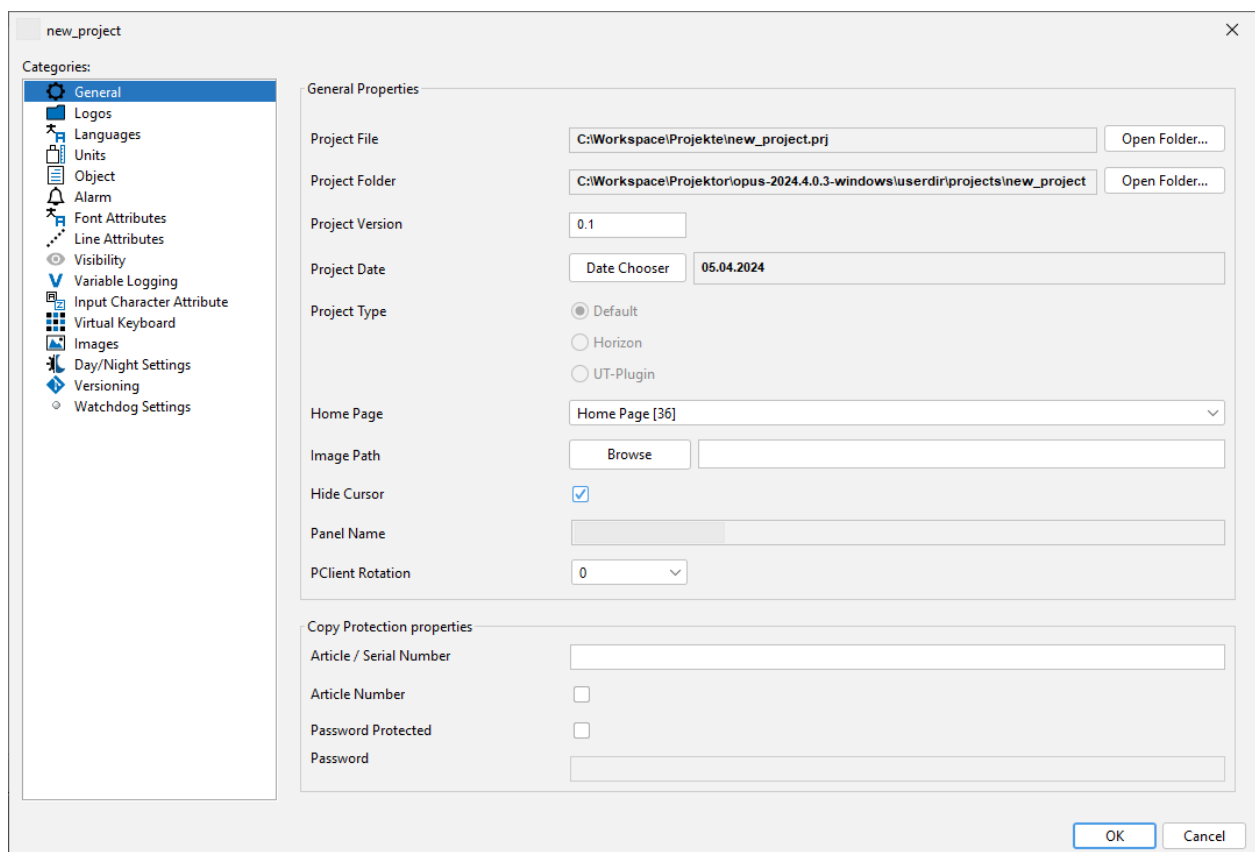

Project File

Shows the absolute path to the project file.

Please don't change the project name outside of the OPUS Projektor. This will not change the project name. Use "Save As" or "Rename Project" to save the project under a different name. This will also change the project file to the same name. Next to the file is an "Open Folder..." button which opens the OS file explorer at the location of the project file.

Project Folder

Shows the absolute path to the working project directory.

Note that this is a temporary path. When saving the project, the changes will be saved into the project file.

Please don't change the project directory name outside of the OPUS Projektor. This will not change the project name. Use "Save As" or "Rename Project" to save the project under a different name. This will also change the working project path to the same name. Next to the path is an "Open Folder..." button which opens the OS file explorer at the location of the working project directory.

Project Version

The version number of the project can be set here. The version can be displayed in the project with the variable [@ProjektVersion](#)¹⁸⁶.

Project Date

The project date (e.g. release date) can be set here. This date can be displayed in the project with the variable [@ProjektReleaseDate](#)¹⁸⁶.

Project Type

The project type of the current project.

Default - a normal PClient project

[Horizon](#)⁶³⁰ - a PClient project for UT devices

[UT Plugin](#)⁶⁴⁷ - a PClient project for UT Plugin devices

The type cannot be changed here. To change the type, use the [project conversion](#)⁴⁴.

Home Page

The selected page will be used as project home page. The project home page is the page which opens when the display starts. The Home Page can also be set via context menu in the project tree.

Image Path

Here the default path for images can be set. Whenever you open an image browser for opening an image, the browser starts using this path.

Hide Cursor

On display devices running X-Server, the mouse cursor is hidden when this property is enabled.

Panel Name

The panel name of the project is displayed.

PCClient Rotation

The project orientation can be changed here within the selected orientation, i.e. in a landscape project between 0 and 180 ° and between 90 and 270 °, respectively.

Copy Protection Properties

Note: This feature only works on supported devices!

The copy protection feature protects your project from being copied from one device to another. It prevents hackers from running your project on other devices.

The copy protection uses the serial or article number of the display to determine if a project is allowed to run on the display.

Article / Serial Number

Enter the serial or article number your project is allowed to run on.

Note: The serial number is device specific. When using a serial number, you have to update your project for each device the project shall run on. Using the article number, the project runs on all devices having the same article number. Note that this only makes sense if you have a specific article number, otherwise the project will run on all devices with the same article number.

Article Number

If you enable this property, the [Article / Serial Number](#)⁸¹ is treated as an article number. When disabled, it is treated as a serial number.

Select Copyright Protection Image

You can customize the image that is shown if a copyright violation is detected.

- Select an image file for using a customized image.
- Deselect the customized image and use the default copy protection warning.

Password Protected

To prohibit "hackers" extracting your project from a device and changing it (e.g. remove the copy protection), you can enable the password protection.

If password protection is enabled, you have to enter the password whenever you try to open the project.

Note: It is highly recommended to use password protection when copy protection is used!

Password

If Password Protected is enabled, you have to enter the password to use here.

Logos Properties

Logos			
Loading Screen Image	Select image	Deselect image	?
Boot Logo Image	Select image	Deselect image	
Copy Protection Image	Select image	Deselect image	
System Background Image	Select image	Deselect image	
Recovery/Service Boot Logo	Select image	Deselect image	

Note that not all image settings are available on all devices.

Loading Screen Image

The loading screen image is an image that will be displayed while the project is being loaded on the terminal. Showing a progress bar is possible.

The loading screen image should have the same resolution as the target device display and must be an image in PNG file format.

When selecting an image, the image will be renamed to 'loading_screen.png' and placed in the terminal_files/additional_files directory in the project folder.

How to Show a Progress Bar

To create a progress bar you only need to make parts of the loading screen transparent. the progress bar will become visible automatically. The only constraint is that the progress bar runs from the left to right of the display. It starts at 10% of the display resolution and ends at 90% of the display resolution. Example:


If your screen resolution is 480x272, the progress bar starts at

$$X = 48 = 480 * 0.1$$

and ends at

$$X = 432 = 480 * 0.9$$


You are free to define any height and vertical position of the progress bar on the screen.

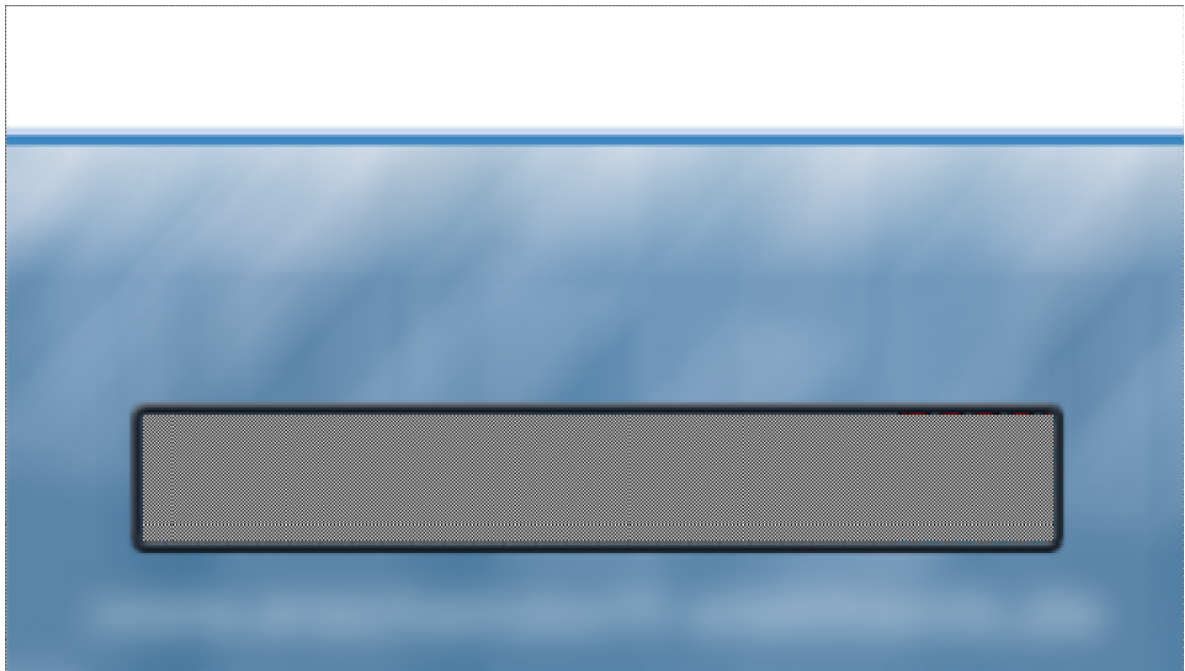


The image above shows an example loading screen image. The shaded area is transparent in the image and will be filled with a loading bar when the project loads. It provides a positive feedback for the end user that something is happening.

The progress bar will be drawn in black, filling a white area. So the colors of the loading screen image should be chosen accordingly.

The following image shows the progress bar using the above loading screen image.

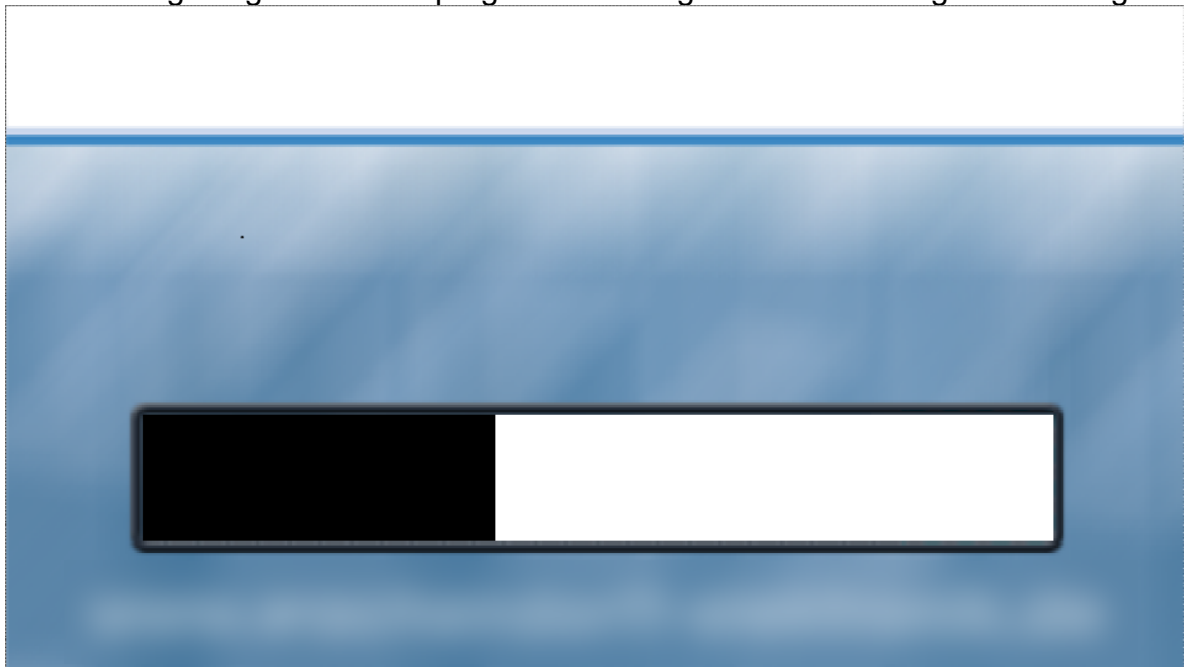

Here is another example:

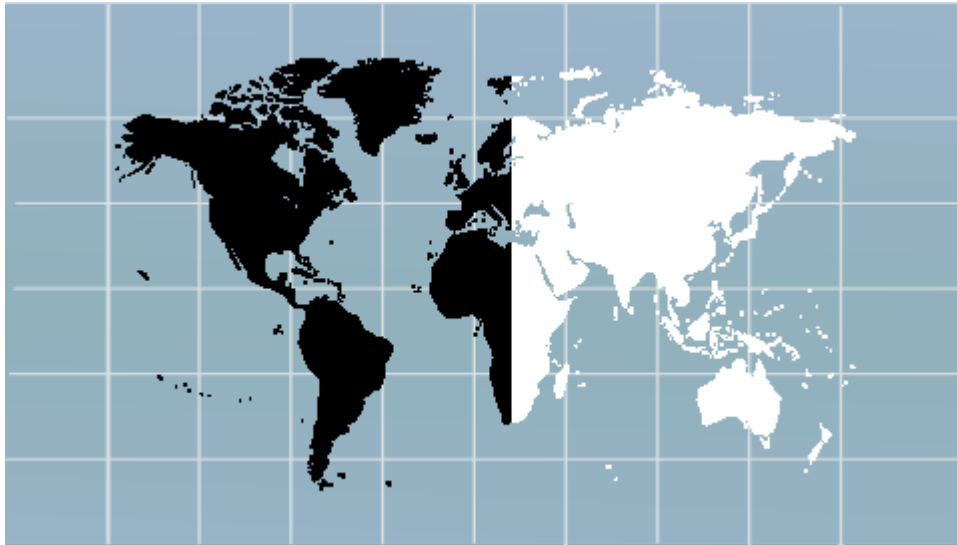

By Pressing on "Deselect image" , the image will be removed.

Boot Logo Image

The selected image will be directly displayed after the cold start of the display after the project is installed.

By pressing on "Deselect logo", the image will be removed.

Note that the deselected boot logo will not be removed from the device upon the next installation of the project.

System Background Image

The selected image will be displayed while the PClient starts and while the PClient shuts down.

By pressing on "Deselect image", the image will be removed.

Note that the deselected image will not be removed from the device upon the next installation of the

Recovery / Service Boot Logo

The selected image will be directly displayed after the cold start of the display in service mode after the project is installed.

By pressing on "Deselect logo", the image will be removed.

Note that the deselected boot logo will not be removed from the device upon the next installation of the project.

Project Icon Image

The project icon will be used on the applications running on the target device e.g. sunrise or

for PClient- and variables simulation applications running on windows operating system.

By pressing on "Deselect icon", the selected image will be removed.

Language Properties

The [Languages](#)¹⁰³ chapter describes these properties.

Unit Properties

The [Units](#)¹⁰³ chapter describes these properties.

Object Properties

"Send Value" default

☐ Send Value directly

☒ Send Value on Enter

Softkey Frame

Default Softkey Frame Width (1 - 640 px)

Default Softkey Frame Height

Key Properties

SoftKey frames to act as Input frames ☐

SoftKey frame Fadeout Time (set >= 100 to enable) (0 - 60000 ms)

Duration for "Long Press/Release" event (500 - 5000 ms)

Duration for "Double Click" event (0 - 500 ms)

Size of List object scrollbar (0 - 2000 px)

Border Profile

Transparent Border Color

Default Border Profile

☒ Update only Objects with old Border Profile ☐ Update All Objects

"Send Value" Default

This property changes the default setting for accepting variable changes. There are two possibilities available:

- Send Value Directly
- Send Value on Enter

Here is an example that describes the difference between them:

Lets assume your project uses an numeric field. The value of this numeric field is 1. The variable attached to the numeric field is called **FanSpeed**. The user uses the encoder to navigate to the numeric field. Then he presses the encoder to open the numeric field for editing. Now he rotates the encoder. The value shown in the numeric changes ..2..3..4..5..6..7..8..9..10. When reaching value 10, the user ends editing of the value by pressing encoder again.

Now the difference between the two possibilities is:

Send Value Directly: The variable value of variable **FanSpeed** changes nine times: 2, 3, 4, 5, 6, 7, 8, 9, 10. If the variable was mapped to a transmit CAN message which is sent on any value change, this message would be sent nine times, too. Another example: If the variable **@DispBacklightIntensity** would have been connected to the numeric field, the user could see the brightness changes while finding the proper value.

Send Value on Enter: the variable value of variable **FanSpeed** changes only one time (when the user accepts the value by pressing encoder): 10. If the variable is mapped to a transmit CAN message which is send on any value change, this message would be send only one time. Another example: If variable **@DispBacklightIntensity** would have been connected to the numeric field, the user wouldn't see any brightness change until he presses the encoder to accept the value.

Softkey Frame

Here you can change the default softkey frame width for landscape display orientation or height for portrait display orientation. whenever you create a new page, the default width / height is used for the softkey frames.

Key Properties

The screenshot shows the 'Key Properties' dialog box with the following settings and numbered callouts:

- 5** points to the checkbox for 'SoftKey frames to act as Input frames', which is currently unchecked.
- 6** points to the text input field for 'SoftKey frame Fadeout Time (set >= 100 to enable)', which contains the value '0'.
- 7** points to the text input field for 'Duration for "Long Press/Release" event', which contains the value '2000'.
- 8** points to the dropdown menu for 'Select the key to act as Home key', which is set to 'Home Key1'.
- 9** points to the 'Browse' button next to the 'Select Home Key designator' field.

Softkey frames to act as Input Frames (5)

When you enable this property, the user can use the encoder to navigate through the softkeys in the softkey frames.

Softkey frame Fadeout Time (6)

This value defines the delay time until the softkey frames are faded out (i.e. hidden). Softkey frames are shown again, when the user presses a softkey or if a java script shows them again.

A value of zero means: Disable fade out.

Duration for "Long Press / Release" Event

This time defines the time how long a user needs to press a key or touch the screen for triggering a long press event. The long release event will be executed immediately when a long press event was triggered and the user releases a key.


Select the Key to Act as Home Key (8)

Unused.

Select Home Key Designator (9)

Unused.

Border Properties (4)

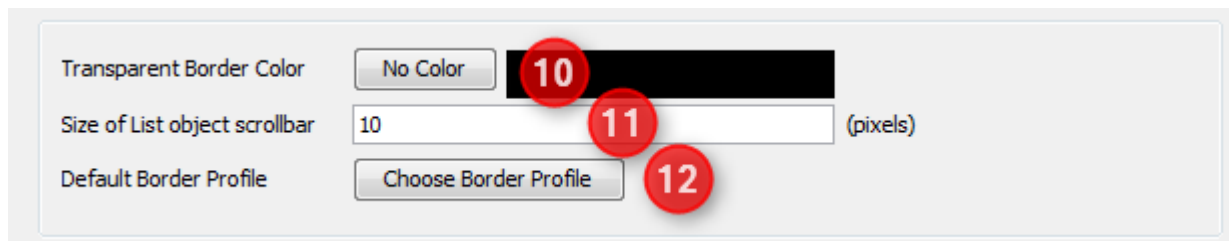

The screenshot shows a dialog box titled "Border Properties (4)". It contains three settings:

- Transparent Border Color:** A button labeled "No Color" is highlighted with a red circle containing the number 10. To its right is a black color swatch.
- Size of List object scrollbar:** A text input field contains the value "10", followed by the unit "(pixels)". This field is highlighted with a red circle containing the number 11.
- Default Border Profile:** A button labeled "Choose Border Profile" is highlighted with a red circle containing the number 12.

Transparent Border Color (10)

Allows changing the transparent border color. The color which is selected here will not be drawn on the screen, it will be drawn transparent.


It's also possible to disable transparent border color by clicking **No Color** button. Note: To get rid of the blue border around all objects that are created on the screen, set this property to blue (0,0,255).

Size of List Object Scrollbar (11)

When a list object contains more elements than can be displayed at once, a scrollbar appears. This property defines the scrollbar width.

Default Border Profile (12)

This property allows changing the border color profile. By clicking the button, the following window appears:

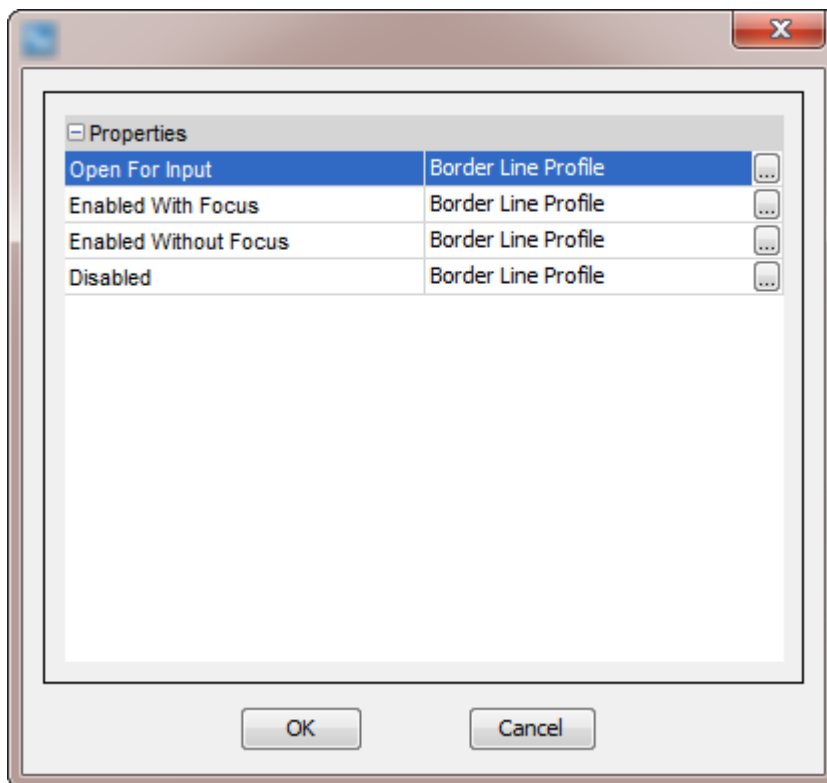

The following values can be configured:

Property	Description
Open For Input	The border color visible when the user is editing a value.
Enabled with Focus	The border color visible when the user has selected an object, but not started editing the value.
Enabled without Focus	The border color visible when the user has not selected an object.
Disabled	The border color visible when the value of an object is invalid. Note: This profile is obsolete and not used in this version.

Alarm Properties

The [Alarms](#)⁶¹⁷ chapter describes these properties.

Font Attribute Properties




Tutorial video about fonts and font attributes


<https://www.youtube.com/watch?v=tfkXFy-AQzM>

Using different font styles in a project is different than in common text writing applications. Each **Font Attribute** is a combination of font size, font style (italic and / or bold) and font

color. Only the combinations you have created as **Font Attributes** are available when creating your project pages. When designing your project pages you can use all the font attributes you have defined and combine them with the available fonts. Whenever you need a new combination of size, style and color, you need to create a new **Font Attribute**. This allows you to quickly change e.g. the size of the text for all String Fields that use the same Font Attribute.

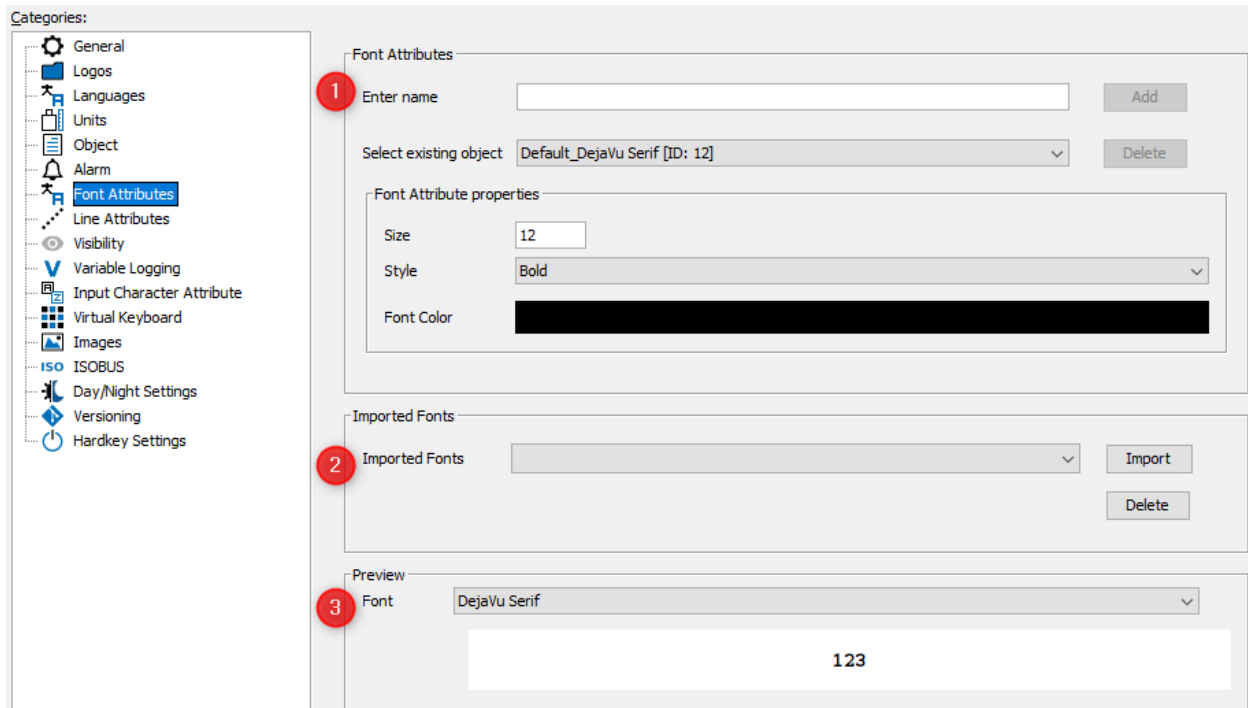

Font Attributes (1)

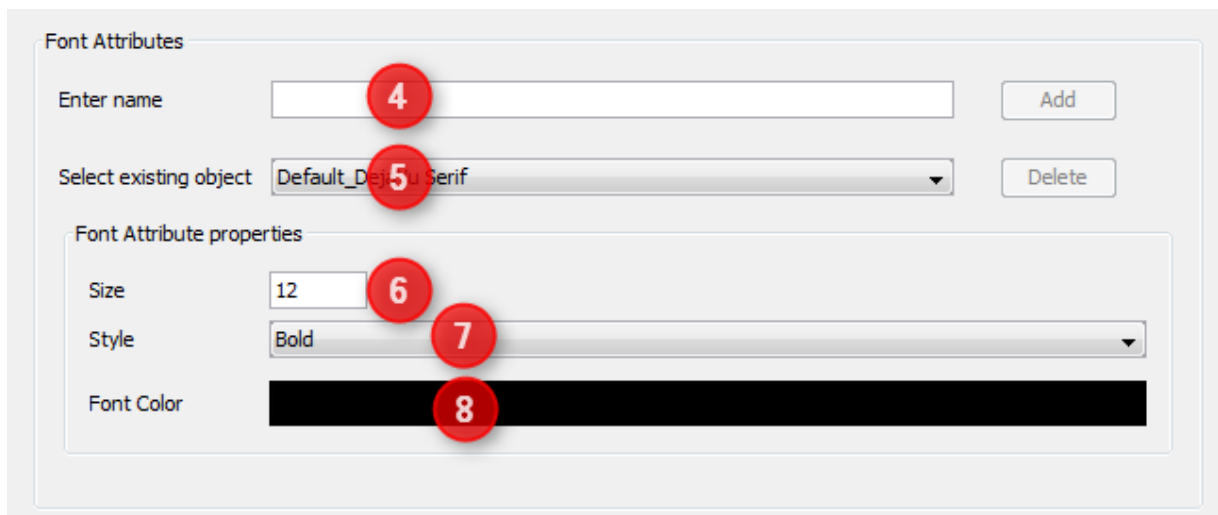

To create a new **Font Attribute**, enter a new font attribute name in (4) and click the **Add** button. The name entered here will be used to select a **Font Attribute** while creating the project pages. Afterwards you can configure the new **Font Attribute** as described below.

To change the properties of an existing **Font Attribute** select the **Font Attribute** (5). Then change the size (6), style (7) and color (8) according to your needs.

To delete a **Font Attribute** select the **Font Attribute** to delete (5) and click the **Delete** button.

Imported Fonts (2)



To make new font styles available you can import True Type Fonts here.
You also can delete fonts, because each font increases the size of the projects.

Note: It is highly recommended to delete unused custom fonts.



Note: Please be aware of the copyright situation of fonts.

Note: Font files have a lot of name metadata. The font file will only be used successfully if the font name is the same in as many places as possible. You can check and change these settings with a font editor like FontForge:

Bad example, doesn't work:

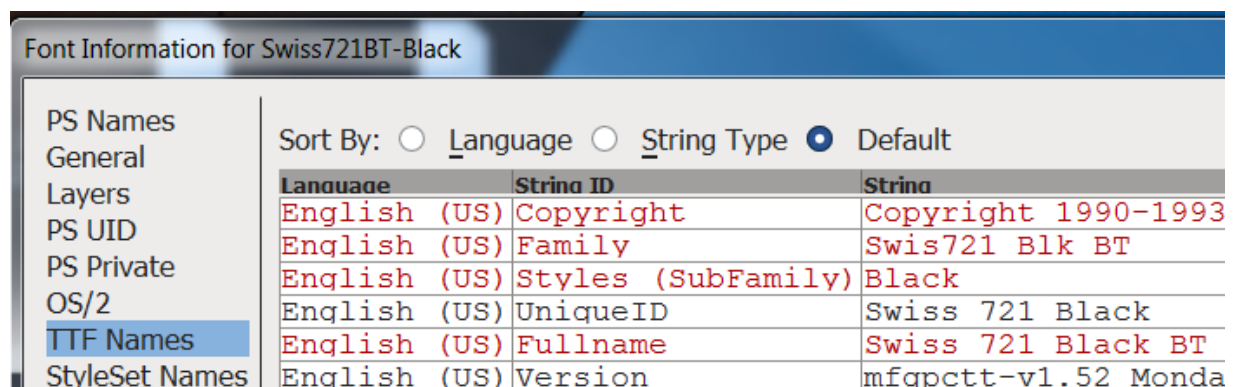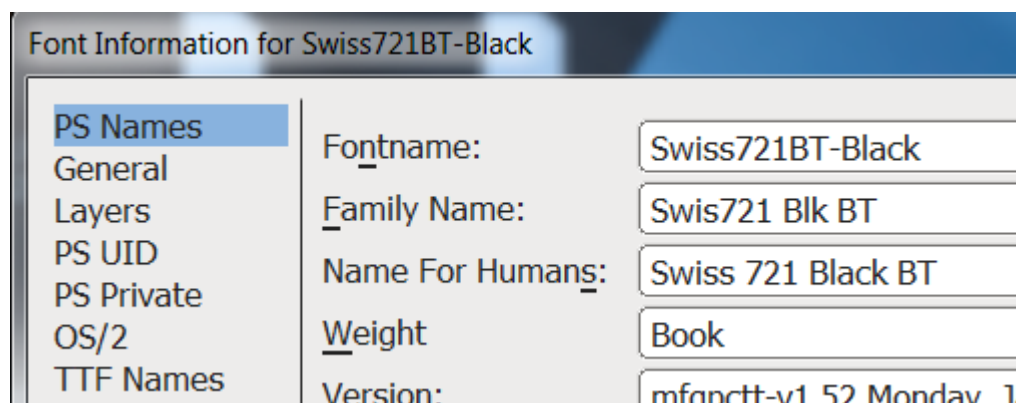

Good example, works:

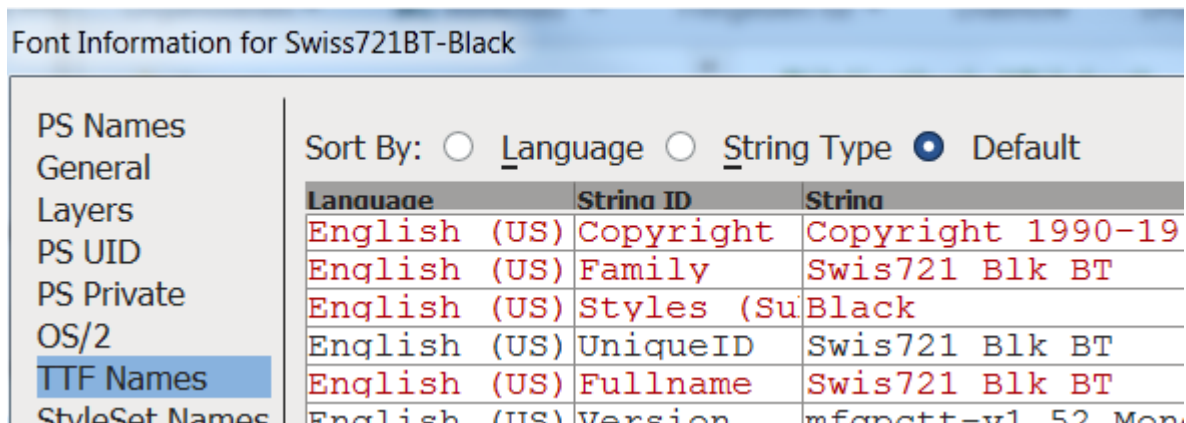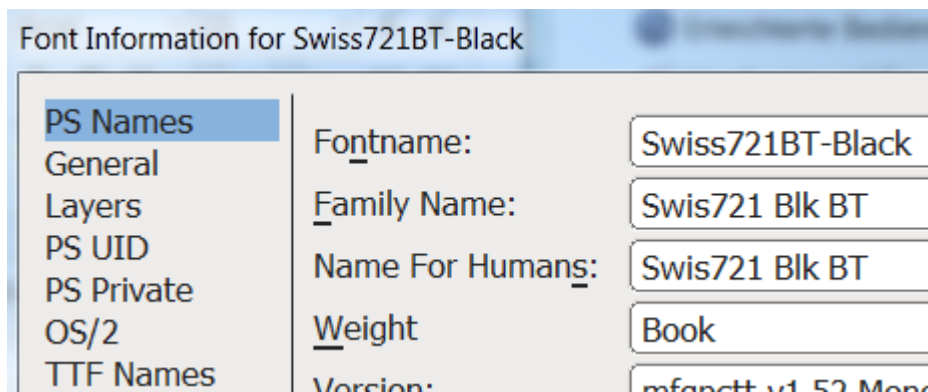

Preview (3)

You can use the preview to see how the selected font looks with the selected font attribute. The background will change color between black and white depending on the brightness of the set font color so it is always visible.

Line Attribute Properties

In this category line attributes for the [2D Graph](#)¹⁴⁹¹ can be created and modified. To create a new line attribute, enter a name in the Line Attribute Name field and press Add. A line attribute consists of:

- a color - click on the color bar and select a color
- a width - enter a width or change the value with the up/down buttons. Line widths between 1 and 255 pixels are allowed.
- a "Line Art", i.e. a dash pattern - click on the squares to change the dash pattern

There is a preview field showing the result of the settings made.

Visibility Properties

The [Visibility](#)⁶⁴¹ chapter describes these properties.

Variable Logging Properties


The [Variable Logging](#) chapter describes these properties.

Input Character Attribute Properties

When you offer the user the possibility to enter values with the encoder, you most likely want to restrict the characters he is able to use.

Example: When your project asks the user to enter his name, you might want to prohibit the possibility to enter special characters like !?_ and so on.

This is what the **Input character Attribute Properties** are used for. You can store a selection of allowed characters as an **Input Character Attribute**. While creating your project, you can assign these **Input Character Attributes** to string objects.

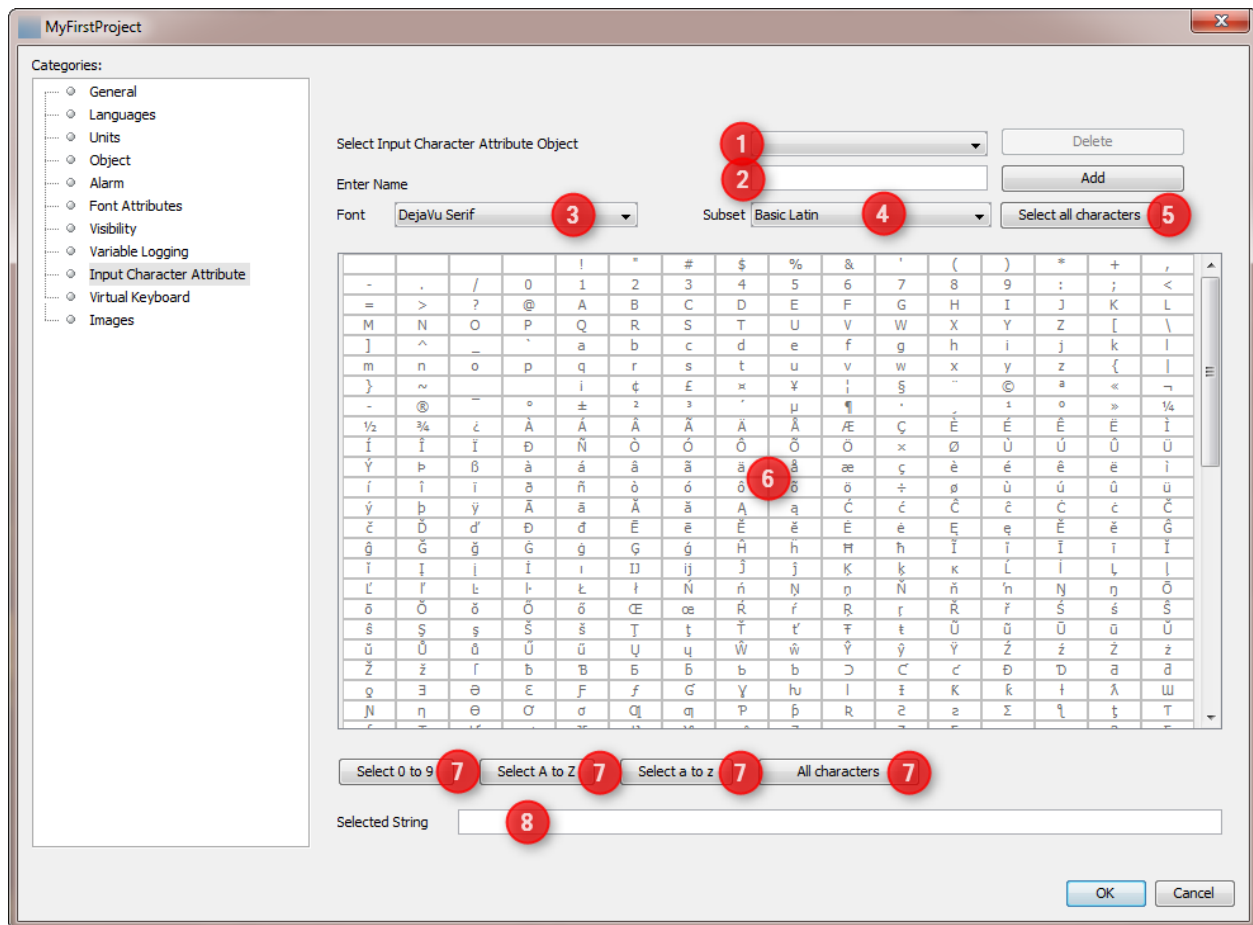

To delete an existing **Input Character Attribute** choose the one to delete (1) and click **Delete** button.

To create a new **Input Character Attribute** enter a name for the new attribute and click **Add** button. The name is used in the editor while creating project pages to make a string object use the **Input Character Attribute**.

To change the characters available for an **Input Character Attribute** choose the attribute to change (1). Then you can choose any of the fonts defined in the tool (3).

Now you can start selecting characters by clicking them in the table (6). The table shows the characters in Unicode (UTF-8 encoding form) code pages.

For faster selection of code pages, you can select the subset (4) (it contains a list of character blocks) and click **Select all characters** button. Using the same procedure, you can also unselect code pages by clicking the **Select all characters** button again.


Furthermore there are buttons available for fast selection of typical character ranges (7). They can also be used to unselect characters by pressing the buttons again.

The selected characters are further shown in the bottom of the window (8).

Note: For a complete listing of the normative character blocks in the Unicode Standard, see [here](#).


Virtual Keyboard

When your project uses virtual keyboards for entering values you should configure, which virtual keyboards have to be used for which language. Because the character set used by languages are very different, you most likely need to create one virtual keyboard per language used in your project.

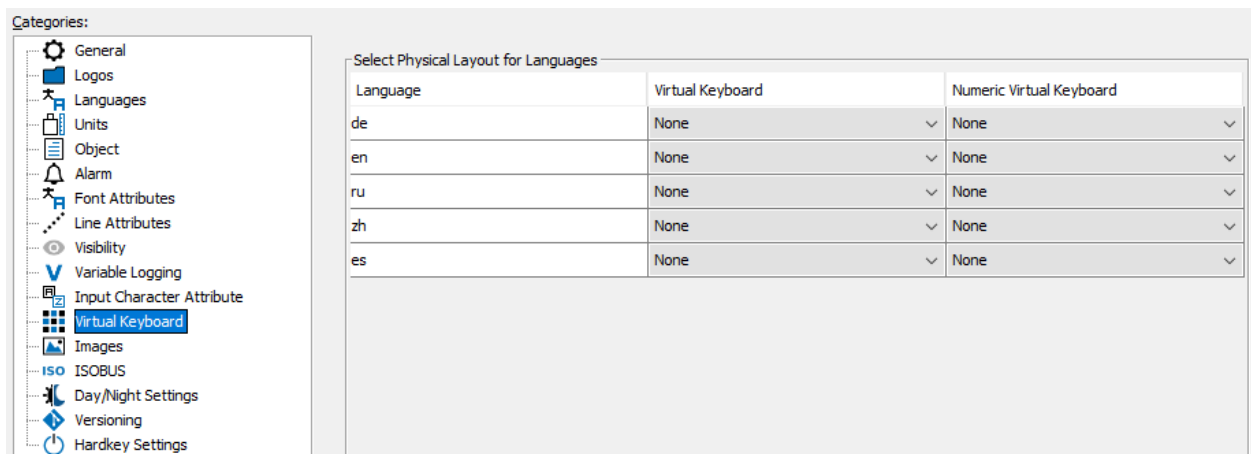

First you need to create the virtual keyboards. Then open the **virtual Keyboard** section of the project properties and select the virtual keyboards that have to be used for each language.

Images

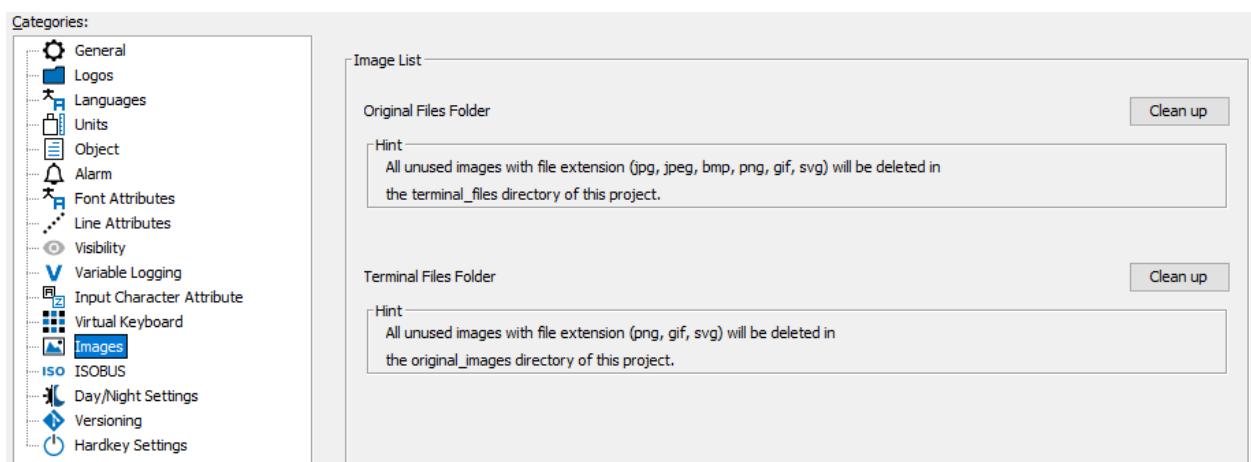

Here it is possible to clean up the folders "original_images" and "terminal_files" to delete unused images.

1. If an image is added to a project the original image will be added to "original_files" folder. Additionally the scaled or modified image is added to "terminal_files" folder. When the project is updated (objects are deleted) it could be that images will be removed from "terminal_files" folder and the original image is not used anymore.

In this case it could be helpful to delete unused original images.

2. Normally the "terminal_files" folder is automatically cleaned up. But if images have been manually copied to this folder, the user has the possibility to remove them.

NOTE: Please never manually copy images to "terminal_files" folder. This folder is completely maintained by the application.

If you do anyway please be aware that the files will not be used by the application and disk space is lost on the target device when project is downloaded.


HINT:

Original Files: On clicking "Clean up" (1) all unused images with file extension (jpg, jpeg, bmp, png, gif, svg) will be deleted in "original_images" folder.

Terminal Files: On clicking "Clean up" (2) all unused images with file extension (png, gif, svg) will be deleted.

For more information about "Image Handling" please refer to the [Image Handling](#)^{□98} Chapter.

ISOBUS

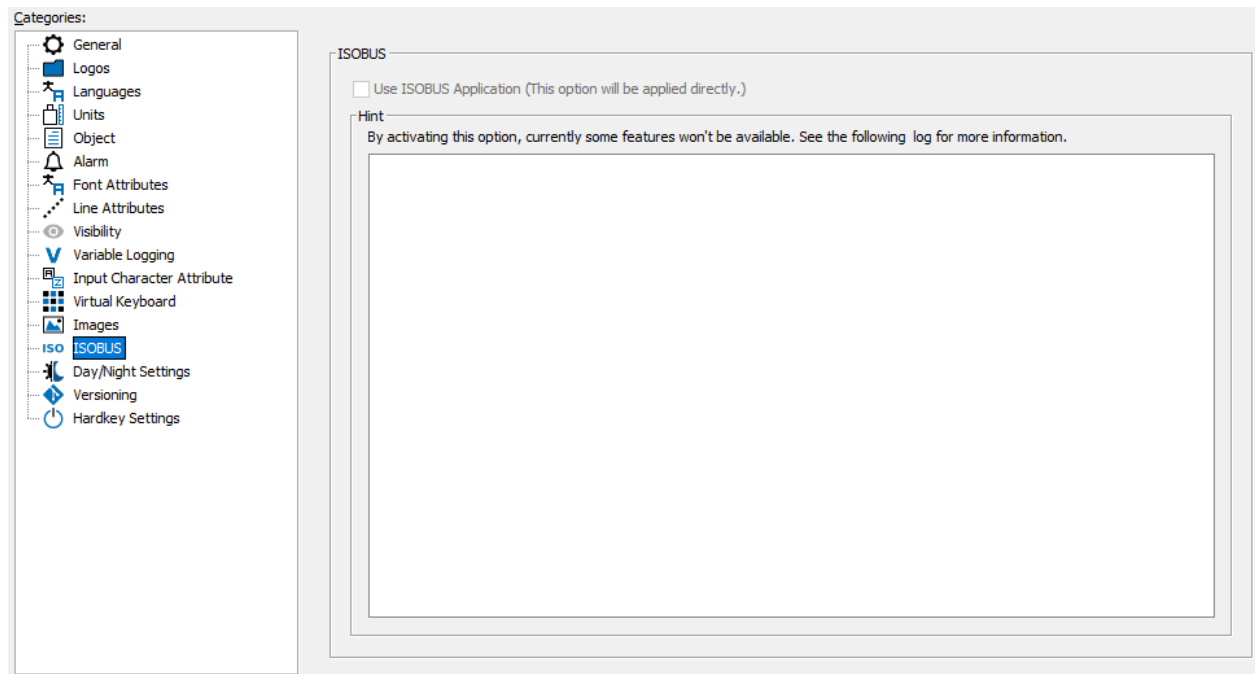

For OPUS A6G2, OPUS A8, OPUS B3, X18 and X40, ISOBUS projects can be created, [see here](#)^{□630}.

The ISOBUS functionality can be viewed in this category.

The media player and variables that are not available for ISOBUS devices will be deactivated when an existing project is converted to an ISOBUS project.


Day/Night Settings

The [Day/Night](#)^{□625} chapter describes these settings.

Versioning

The [Project Versioning](#)^{□131} chapter describes these settings.

Hardkey settings

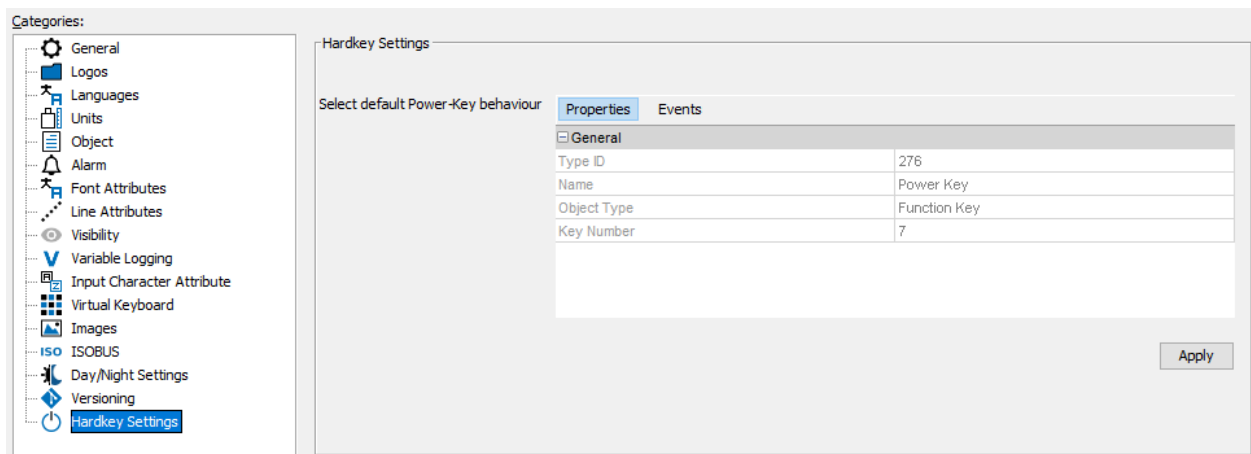

For devices with a power button, the project-wide behavior of that button can be defined. This behavior can be overridden by a per-page setting on each page.

On each page the same events can be configured specifically for that page.

Please note that if ANY event is configured for a specific page, NO action from the project properties will be executed while on that page, i.e. if you want a specific action OnPress but the general action OnRelease, you need to put that action into the page event configuration for the Power Key, as well.

On pages that have no event configured, the actions from the project properties will be executed.

Please note that a hard shut-off is configured for a press longer than 5 seconds.

3.12.1 Image Handling

This chapter describes how images are handled by the tool.

Thereby two definitions are very important to understand the **Image Handling**:

- Original Image
- Scaled Image

"Original Image" means the image which is added to the project via "Image chooser" dialog or [Image Library](#)¹⁵⁰. This image will be copied to "original_images" folder and will never be modified by the tool.

"Scaled Image" means the image which is created from "Original Image" with e.g. modified height and width. This image is saved in "terminal_files" folder.

Overview

For the **Image Handling** there is a separate file "image_list.xml" which stores all informations about the images in a project. The file is saved in the project folder.

During working on the project the Tool creates a temporary file called "image_list.tmp" which saves all image changes in the project. When project is saved the "image_list.tmp" file is saved to "image_list.xml" and the temporary file will be deleted.

All original and scaled image informations are stored in these file. Each image name is stored with the according MD5 checksum. The MD5 checksum is used to recognize if there are duplicate images. Additionally the "image_list.xml" file stores the assignment between image property and Object.

Purpose

The **Image Handling** shall help to avoid duplicate images in the project. The device has restricted resources and they should not be wasted with duplicate images.

This helps to keep the performance on the device (by loading the project) and save restricted disk space.

Image Naming

This chapter shall describe how the naming of images works in the Tool.

Original Image Naming

If an image is added to an Object, the image is added to "original_images" folder. The name of the original image is normally not modified except of 2 cases.

Case 1: The folder "original_images" contains already a file with same name, but different content.

The new image is added to "original_images" with an extension.

Example:

Original_images folder contains an image with name "**test.png**".

A new image is added with same name but different content. The new image will be renamed to "**test_1.png**".

Case 2: The folder "original_images" contains an image with same content, but different name.

The new image is **NOT** copied to "original_files" folder, because there is already an image with same content. For the scaled image the name of the already existing image will be used.

Example:

Original_images folder contains an image with name "**test.png**".

A new image with name "**myImage.png**" is added with same content. The image "myImage.png" is **NOT** added to "original_images" folder.

Scaled Image Naming

The scaled image contains the name of the original image with the extension of "Width" and "Height" and optional "Color of Transparency".

Example:

Original Image Name: **test.png**

Scaled Image Name: **test_100_80.png** (without transparency color)

Scaled Image Name: **test_100_80_0xffffffff.png** (with transparency color "white")

NOTE:

1. For original image files with extension JPG/JPEG and BMP the scaled images will be converted to PNG.

Example:

Original Image Name: **test.jpg**

Scaled Image Name: **test_100_80.png** (without transparency color)

Scaled Image Name: **test_100_80_0xffffffff.png** (with transparency color(argb) "white")

2. For original images files with extension GIF or SVG the SAME image will be used for original and scaled images. For these image formats the "Transparency Color" is **NOT** available.

Example:

Original Image Name: **test.svg**

Scaled Image Name: **test.svg**

 
ATTENTION:

The name of the images will be modified only when project is saved. That means if an image (test.png) is assigned to an Picture Graphic Object with Width = 100 and Height = 80 the Scaled Image Name is "test_100_80.png".


The name is immediately updated. **BUT** if now the size of the Picture Graphic is updated. e.g. to Width = 60 and Height = 40 the image name will not be updated to "test_60_40.png" until project is saved.

Adding an Image Example


(1) After Dragging and dropping the object on the canvas, click on Image Chooser Button to configure a new image.

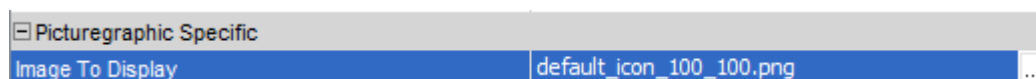


(2) The Image Chooser dialog is open with the currently configured image.

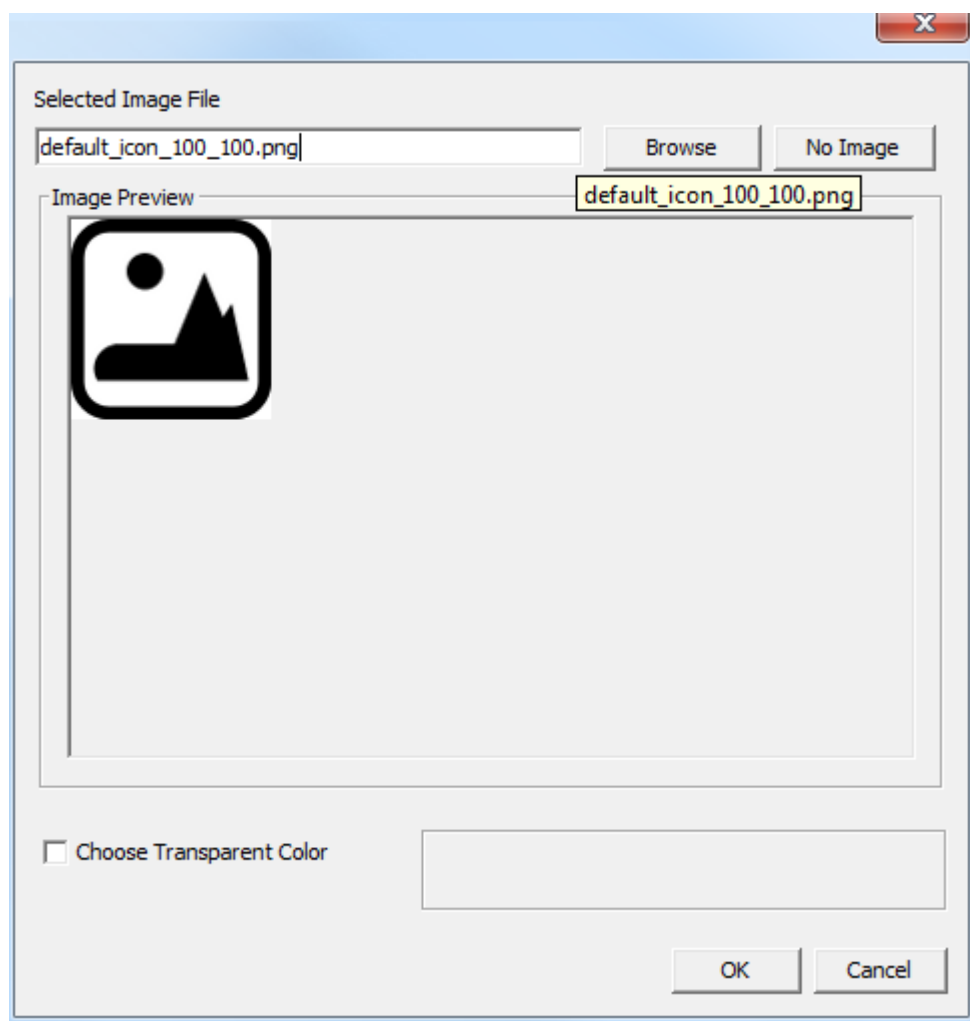

(3) Click on "Browse" to select a new image.

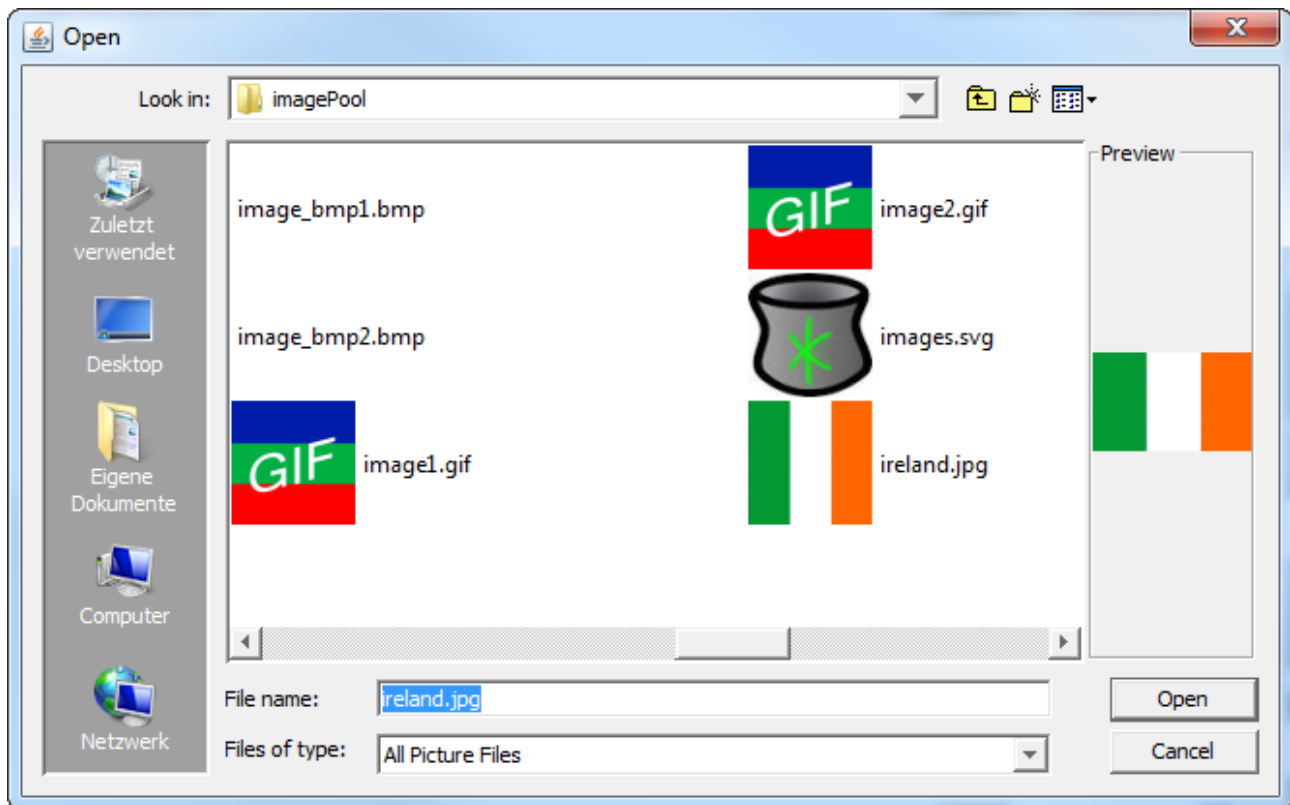

- (4) Select a new image
- (5) Click on "Open" to add new image.
- (6) Original Image name with path of new image
- (7) Preview of new Image

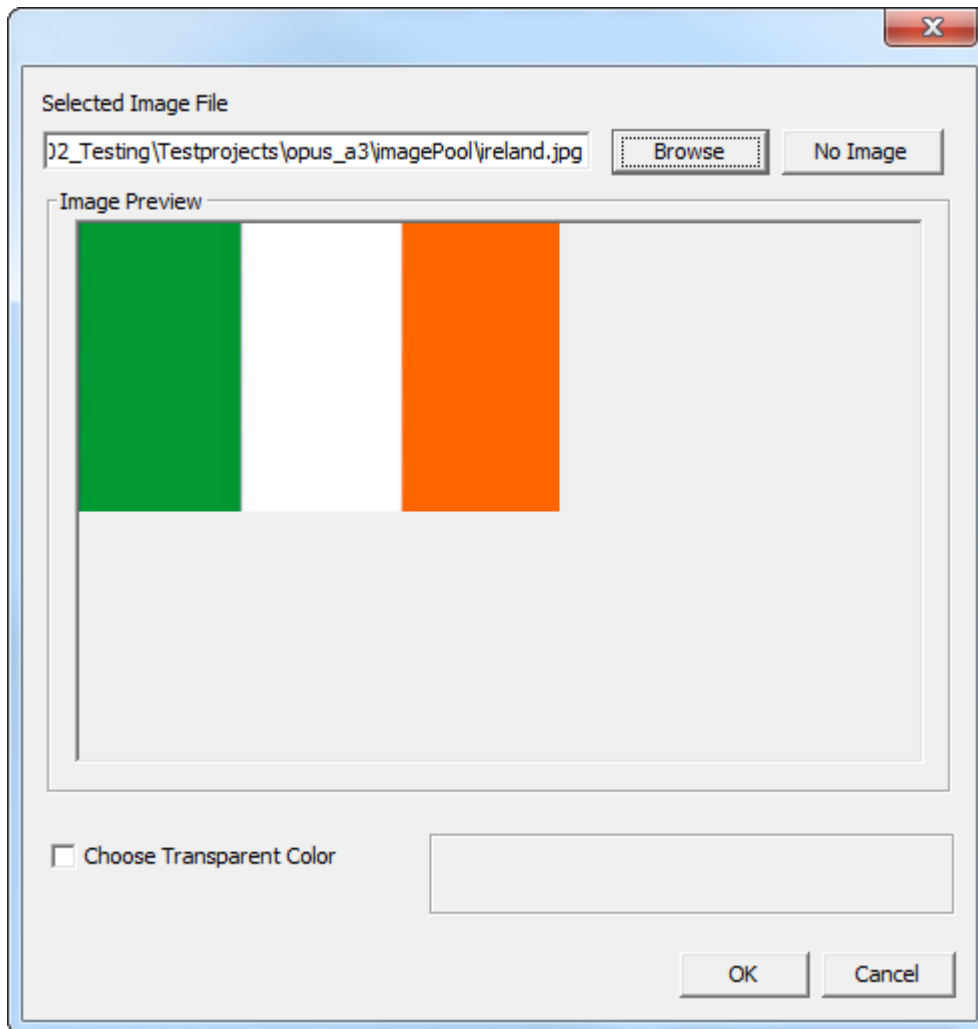

(8) Click on "Ok" to set new image.



(9) New image is shown in Designer for "Picture Graphic" object.

(10) The property "Image To Display" shows the name of new created scaled image "ireland_240_144.png"

(11) When property "Height" and "Width" are changed, a new scaled image is created with new name "ireland_100_100.png".

NOTE: The image name of property "Image To Display" is not changed until "Save" is performed.

Now, if a new Picture Graphic object is created with same "Height" and "Width" and the same original image is assigned again, the **Image Handling** recognizes that the scaled image is already used and doesn't create it again. The already existing scaled image is also used for the new Picture Graphic object.

Conversion of Old Projects (<1.9.x)

If the tool Version > 1.9.x is used and a project with a lower version (< 1.9.x) is opened the project is automatically converted for new **Image Handling**.

After the conversion of the project, all scaled images will be **recreated** and **renamed**. This step is necessary to avoid duplicate images.

For recreating the scaled images the original images must be available. By missing of the original images, the old scaled images are used but they will be renamed in any cases to new format according rules described in [Image Naming](#)⁵⁹⁹ Chapter.

Note:

If it is not desired that the scaled images are recreated, you can delete all images in the "original_images" folder before converting the project. Then all old scaled images are not recreated.

For performance reason, this step it is not recommended!

Consistency Check

The new **Image Handling** has a "Consistency Check" which is performed after every "Save" and "Load" actions. This Check ensures that all images which are used in the project are stored in "terminal_files" folder. If images are missing they will be created again. But the "Consistency Check" can only be performed properly if the original images are available in "original_images" folder. If a scaled image is not available in "terminal_files" folder, it will not be visible in the tool.


Supported Image Files

The supported image formats are listed [here](#)⁵³⁸.

3.12.2 Languages


3.12.3 Units

This feature is always a little bit misleading. The tool and the run time on the device do not offer any pre-defined calculations like Celsius to Fahrenheit and vice versa. You can see the groups of units in the project properties in the Unit category.

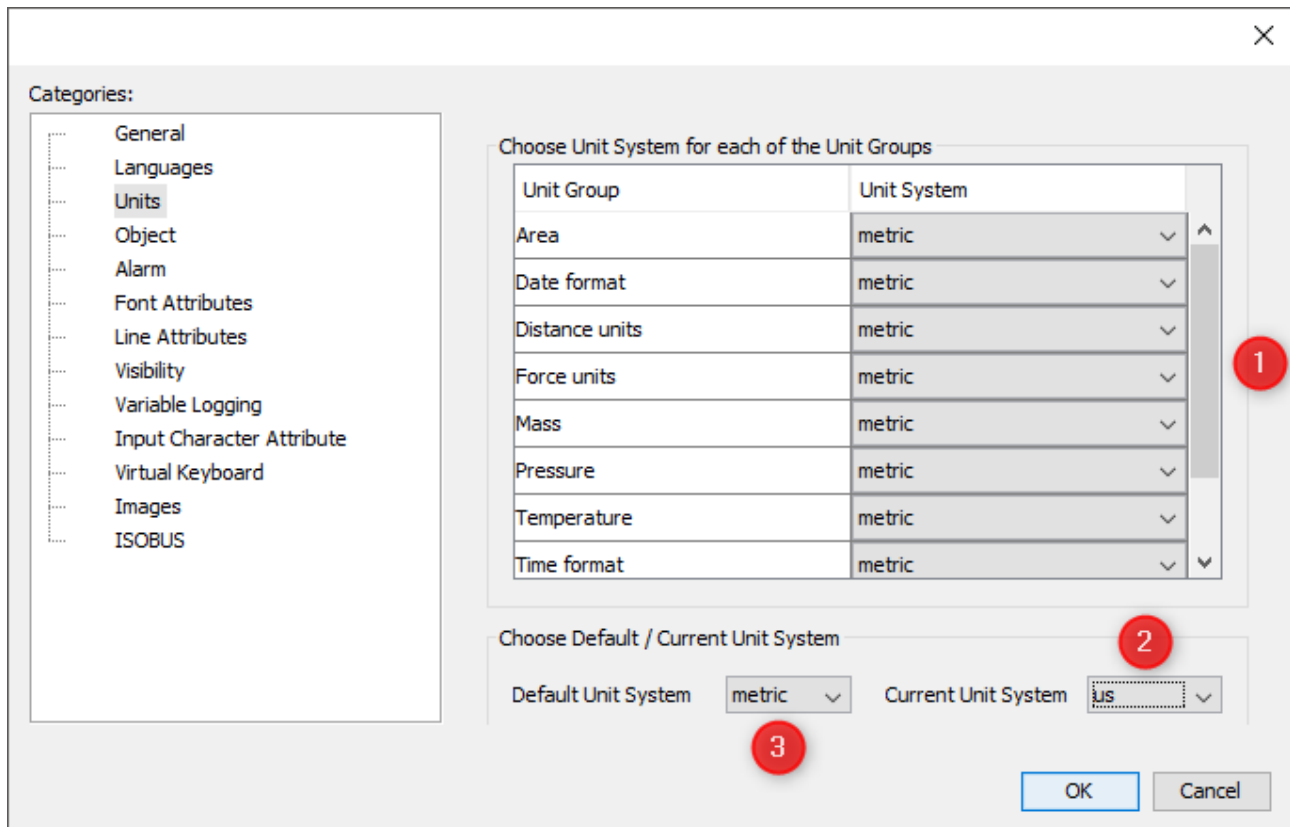


What you see here are possible groups of units which you can use. There are no automatic calculations done in the background. They all have to be defined within the tool and the properties of the objects. The current unit settings for the different unit categories (1) and the general unit setting (2) are only for the development phase. Setting the default unit system (3) does currently not have an effect.

 To enable this feature for an object you have to change the dependency property of an object.

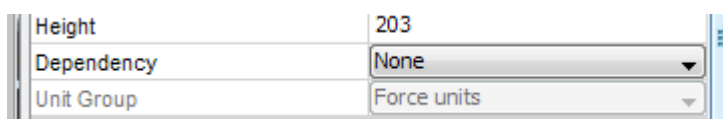

Change the dependency from "None" to "Unit" and you will see that some properties will get "... " buttons.

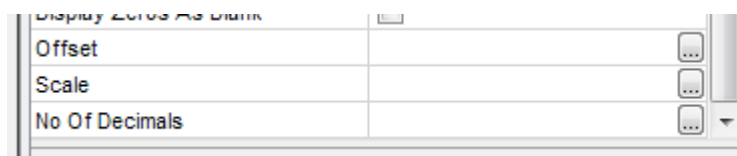

This is an example for a numeric object. These properties differ depending on the object selected (please see object reference for details). Usually you can enter only one value in "Offset", "Scale" or "No of Decimals". Now with the Unit dependency you can click the "..." button and get a new dialog.

Properties	
us	1.0
imperial	1.0
metric	1.0

This is the example for the "Scale". Here can now enter the values which shall be used for the scale depending on the unit which is currently chosen for the unit group.

Dependency	Unit
Unit Group	Force units

For example: You choose the unit group "Force Units". Per default this group is selected as metric, so the scale value entered in the metric field is used. To change this you can make use of two mechanisms. First you can set the "Current Unit System" within the project properties (this will only have an effect in the designer, not at run time). The second is that you can change it during run time with the @SettingsForceUnits variable. Please note that you can not choose all unit systems for all variables. Please see [the variables](#)¹⁸⁶ for details. For the force unit group you can choose, for example, only: similar to ISO 11783-7, A.23.5.8

0	metric [kN, N (Newton)]
1	imperial [pounds-force]


So what this feature does, in the end, is switch between different offset and scaling value sets for objects displaying numerics directly or graphically, and texts for String Fields.

3.12.4 Variable logging

Important note: If you have selected variables inside the variable logging dialog and delete them outside (e.g. variable list), the variables are not automatically updated. If you have deleted variables for example with the variable list, please go one time inside the variable logging dialog and save the project afterwards. Now the lists are up to date. Do not worry if any variable which is not available at runtime is still in the list, this is anyway handled at runtime of the device.


Please note: To start the logging on the device, the variable @LogLevel has to be set to a value >0.

Variable Logging provides the possibility to capture valuable process and sensor data, giving the insight into past process upsets and events. To configure the Variable Logging use the main menu tab File | Project Properties and select the Variable Logging category.

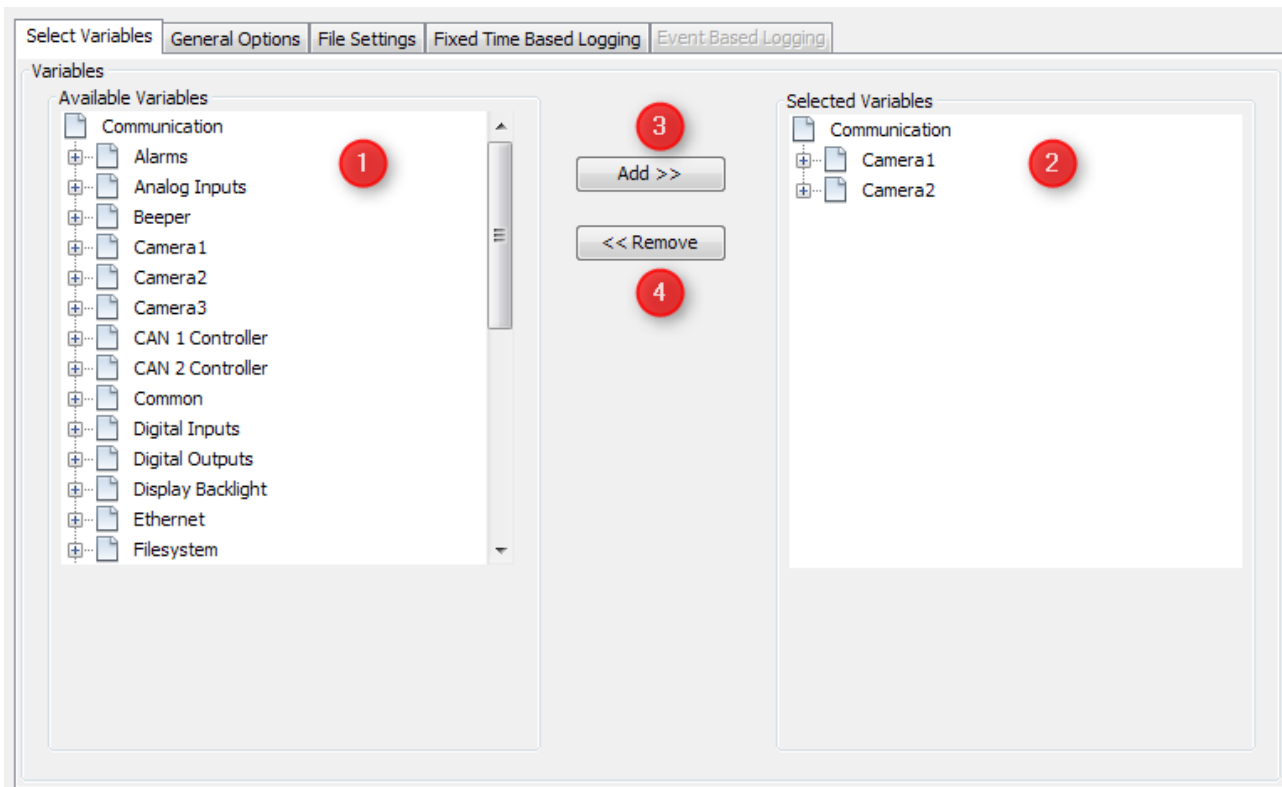

The tab provides you an overview of the current available variables (1). Now you can add (3) and remove (4) the variables which you like to log with the according labelled buttons. All selected variables you will find in the right tree view (2). Variables are written to a file. How the variables are written is defined by the method of logging. You basically have two choices "fixed time based logging" and "event based logging".

General Options

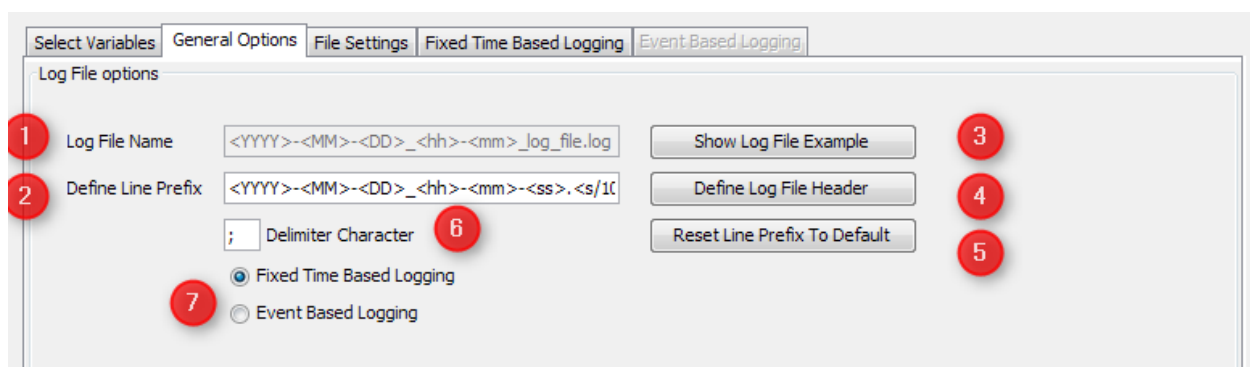

Changes to older versions: Log path and Copy/Move path can be set during runtime with the variables @LogPath and @LogCopyPath. The defaults are mentioned below.

Variable	Default
@LogPath	/opt/pclient/logfiles
@LogCopyPath	/disk/usbsda1

Configure the Log File Options

The option "Log File Name" (1) is disabled. The file name is chosen by the system and can not be changed.

Show Log File Example (3)

This shows an example of how a log file could look like. **Note: This is not a run time preview so the shown example will not change based on the changes you made to the settings.**

Define Log Header File (4)

When clicking the button Define Log Header File, a new dialog opens to insert the text that will be later printed in the log file at every start of the variable logger. The appearing dialog only consists of a text input field and an OK and Cancel button. The following example text is set by default:

Log File of Project Version

The following variables will be logged:

<LIST_OF_LOGGED_VARIABLES>

After finishing the input, use the OK button to store the log file header or the Cancel button to discard all changes. To see all tag options go to [Allowed tags for file header](#)¹⁰⁵.

Define Line Prefix (2)

Right besides the label Define Line Prefix (2), enter a string with which every line of the log file will begin. On the right side of the line edit field a button Reset Line Prefix is located. Clicking this button will set the following default text to the line edit field:

<YYYY>-<MM>-<DD>_<hh>-<mm>-<ss>.<s/10>

Define Delimiter Character (6)

On the right side of the label Delimiter Character, enter one character that will be inserted between each variable value (time based) or between variable name, event and value (event based). It is possible to enter only one character.

"Fixed Time Based Logging" or "Event Based Logging" (7)

You can choose the option which is right for you. The time based option writes all selected variables in one line. This makes it easy to transfer the data into a spreadsheet. The variable entries are sorted in the order you defined inside the time based logging tab.

```

2  2014-03-13_15-01-33.0 10;22;13;32;0;0;0;0;0;
3  2014-03-13_15-01-33.5 10;22;13;32;0;0;0;0;0;
4  2014-03-13_15-01-34.0 10;22;13;32;0;0;0;0;0;
5  2014-03-13_15-01-34.5 10;22;13;32;0;0;0;0;0;
6  2014-03-13_15-01-35.1 10;22;13;32;0;0;0;0;0;
7  2014-03-13_15-01-35.6 10;22;13;32;0;0;0;0;0;
8  2014-03-13_15-01-36.1 10;22;13;32;0;0;0;0;0;
9  2014-03-13_15-01-36.6 10;22;13;32;0;0;0;0;0;
10 2014-03-13_15-01-37.1 10;22;13;32;0;0;0;0;0;
11 2014-03-13_15-01-37.6 10;22;13;32;0;0;0;0;0;
12 2014-03-13_15-01-38.1 10;22;13;32;0;0;0;0;0;
13 2014-03-13_15-01-38.6 10;22;13;32;0;0;0;0;0;
14 2014-03-13_15-01-39.1 10;22;13;32;0;0;0;0;0;

```

The event based option writes one line per variable per event. By default it includes the variable name and the event when the variable is written. If you like to have shorter entries please refer to the chapter [Event based logging](#)¹⁰⁵.

```

2 2014-03-13_15-39-22.9 New Variable_3;LOG_TIMER1_EXPIRED_EVENT;0
3 2014-03-13_15-39-22.9 New Variable_7;LOG_TIMER1_EXPIRED_EVENT;0
4 2014-03-13_15-39-22.9 New Variable_2;LOG_TIMER2_EXPIRED_EVENT;0
5 2014-03-13_15-39-22.9 New Variable_4;LOG_TIMER2_EXPIRED_EVENT;0
6 2014-03-13_15-39-22.9 New Variable_6;LOG_TIMER2_EXPIRED_EVENT;0
7 2014-03-13_15-39-22.9 New Variable_8;LOG_TIMER2_EXPIRED_EVENT;0
8 2014-03-13_15-39-22.9 New Variable_1;LOG_TIMER3_EXPIRED_EVENT;0

```

File settings

It is possible to select between two options that will effect the creation of new log files:

- Continuous Logging
- New File at Restart

The user can select one of the options by clicking one of the radio buttons with the respective labeling. When selecting continues logging only two files are created. You can see this at the log file name it changed to

"data_log_file.log". When the filesize is reached one backup is created and a new "data_log_file.log" is created. When using the "New File at restart" a circular buffer is used for the variable logging. It is based on maximum file size and number of files.

To define the maximum file size of one logging file, enter the size in kilobytes right besides the label Maximum File Size. A Size of 0 will stop logging when no more disk space is available. Default value is set to 1000 kilobyte. During runtime it is possible to adjust the maximum file size with the variable `@LogMaximumLogFileSize`. **Please note that this variable is also checked at runtime. You can only set the file size between the range of 100 kilobyte up to 50000 kilobyte. Please also note that this variable is remanent. That means that the value on the device always overwrites the value coming from the project. To reinitialize all variables please re-install the runtime on the device.**

"Continuous Logging" and "New File at restart". Both options have main impact on the file based ringbuffer of the logging mechanism. For both options you can set the maximum filesize. If you do that the maximum filesize on the device is calculated. The image above

shows the second option. With "Continuous Logging" you have a maximum of two files of the file size in the memory, which you can see above. The number of files field is not changed accordingly, it is only changed by the "new file at restart" option.

"New file at restart" opens new options (as seen in the screenshot). Now the option "Number of files" is enabled and you can set the number of files in the ringbuffer. Please note that this is a file based ringbuffer not a variable based one. As you can see here the maximum filesize is calculated with Number of files + 1. The reason is because we open a new file and delete afterwards.

For variable logging you can use half of the available mass storage of your device. The usage is indicated by two fields. One is the current disk usage and the two color coded fields with the 512MB and 1GB label. These are in first place indicators. At runtime the real available space is checked. If the space is not sufficient older data is overwritten. This is shown by the error variable @LogCopyError (codes 20 and 25).

Fixed Time Based Logging

Select Variables General Options File Settings **Fixed Time Based Logging** Event Based Logging

Time based Logging options

Logging Interval: 500 (milliseconds) 1

Variable Group 3	Variables 2
Camera2	@Cam2Contrast
Camera2	@Cam2CropAutoDetect
Camera2	@Cam2CropHeight
Camera1	@Cam1Contrast
Camera1	@Cam1CropHeight
Camera2	@Cam2CropLeft
Camera1	@Cam1CropTop

Here is only one option for the time based logging. It is a timer value (1) that can be defined in the line edit field besides the Logging Interval label. The lowest number, the user can enter shall be 500. You can sort the variables by drag and drop. The shown order will be the order in the log file. The header columns can not be used for sorting.

Event Based Logging

Select Variables General Options File Settings Fixed Time Based Logging **Event Based Logging**

Event Based Logging

Define Timers: Timer 1: 500 Timer 2: 500 Timer 3: 500 (All in ms) 1

☒ Log Variable Name 2 ☒ Log event name 3

Variable Gr...	Variables	Log Level (...)	OnPageInit	OnPageExit	OnProjektInit	OnProjekt...	OnValueCh...	OnTimer 1	OnTime
Camera1	@Cam1Brig...	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Camera1	@Cam1Cont...	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Camera1	@Cam1Crop...	1 4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Camera1	@Cam1Crop...	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Camera1	@Cam1Crop...	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Timer settings (1)

When doing event based logging, the user can select three timers. He can enter the timers in milliseconds besides each label (Timer X:). A variable can be assigned to one of these timers (then it will be logged each time the timer expires).

To shorten the log lines you can use option (3) and (4). Per default everything will be logged.

Sorting the table

You can sort the table by clicking on column headers.

Please note: Event based logged variables are logged when an event occurs! They can not be logged in an user specific order even if you changed the sorting of the table.

Log Level must be switched at runtime between the 0 (no logging), and 1 to 9 (logging the variable up to the defined level only) with the internal variable `@LogLevel`. The default value of the `@LogLevel` is set to 0 on the terminal, so it shall be changed to activate the logging. To change the log level variable you can use a numeric field or set the variable via Java Script. The other columns define the triggers for logging the selected variable. By clicking the editable cells they are marked as selected (like a check box). Multi select is possible.

+ Starting and Stopping the logging at runtime

The logging on the device is controlled by the variable `@LogLevel`¹⁸⁶. By default, this variable has the value 0 (logging off). To start the logging in either mode, set the variable to a value >0.

Copy/Move the logged files

The copy/move is started with the variable `@LogCopyNow`.

Variable	Value	Description
<code>@LogCopyNow</code>	1	Copy current log File from <code>@LogPath</code> to <code>@LogCopyPath</code>
<code>@LogCopyNow</code>	2	Move current log File from <code>@LogPath</code> to <code>@LogCopyPath</code>
<code>@LogCopyAllNow</code>	1	Copy all log Files from <code>@LogPath</code> to <code>@LogCopyPath</code>
<code>@LogCopyAllNow</code>	2	Move all log Files from <code>@LogPath</code> to <code>@LogCopyPath</code>

Please note: When you start a copy / move process and the variable logging is already started, the variable logging is stopped. When copy / move are finished the variable logging is resumed. The best way to start a copy / move is to use a Java Script and bind it to an "onRelease" action of a button or softkey. The copy / move path could be also changed to runtime setting the internal variable `@LogCopyPath`. Please note that `@LogCopyPath` information (USB Stick / SD Card) is depending on the display you are currently operating. In some cases it could be that the path information will not meet the actual pathes on the device. In such a case it is recommended to change the `@LogCopyPath` information at runtime to the right path. Please contact the support if you need further information.

Please note: If `@LogCopyPath` do not exist, the copy / move feature is not creating a folder.

Please note: The runtime is running on a full featured Linux system. In some cases the mount point of the external devices (SD, USB, etc.) are different from the default. In those cases it is needed to change the `@LogCopyPath`. The `@LogCopyPath` is not updated

automatically when plug in an USB stick. If you plug a USB after the device is powered on you have to set the @LogCopyPath accordingly.

Variable	Default
@LogPath	/opt/pclient/logfiles
@LogCopyPath	/disk/usbsda1

Use the @LogCopyProgress to show the overall progress when copy / move the log files to an external memory. Connect this variable to a linear bargraph and you have a nice progress bar.

To copy and move files, we are using a sync write to avoid data loss, when the user un-plug an external storage. This is more secure than a usual write, but is slower, too. The reason why using sync write is simple: If the progress bar shows 100% you can be sure that the write progress is nearly finished. Please wait for 2 seconds before unplugging the external memory.

For a better usage we introduced two new variables: @LogCopyFinished and @LogCopyError. The first variable goes to 1 when the internal copy / move process is finally finished. You will see on the device that the progress bar shows 100% and the finish variable will update somewhat later (< 1 second).

The second variable shows an error code. If everything is ok the Error Code is 0. The [error code table](#)¹⁰⁵ show the detailed codes.

Everything OK:

Variable	Expected value
@LogCopyProgress	100
@LogCopyFinished	1
@LogCopyError	0

Something went wrong:

Variable	Expected Value
@LogCopyProgress	<= 100
@LogCopyFinished	1
@LogCopyError	> 0

Please note: After the copy process is finished the external device is not unmounted from the file system, but you can unplug without an explicit unmount or eject. Please wait for 2 seconds after the copy/move finished.

To make sure the USB stick is mounted correctly, you can use a Java Script like this for your copy/move event:

```
var usb_mounted = getVariableValue("@USBMemStatus"); //check
if a USB stick is mounted

if (usb_mounted == 1)

{
    var usb_path = getVariableValue("@USBMountPath"); //get
    path of mounted usb stick
    setVariableValue("@LogCopyPath",usb_path); // Set the
    path of the USB stick
    setVariableValue("@LogCopyAllNow",1); // Copy LogData to
    the selected path (move is 2 instead of 1)
}
```

Allowed Tags for file header and line prefix

Description	Tag
Year	<YYYY>
Year short	<YY>
Month	<MM>
Day	<DD>
Hour	<hh>
Minute	<mm>
Seconds	<ss>
Milliseconds	<s/10>
List of variables	<LIST_OF_LOGGED_VARIABLES>
Any string variable content	<variable_name>

Changes from older version

If you have an older version it is necessary that you load the project with the new version and save it once. Only new data is added all other settings stay as they are. There is one major change when you previously used "New file at restart". With this option the maximum number of files is set to 10. That means if you have more than 10 files on your system and you update the GUI, the oldest file will be deleted and a new one is created.

Error codes

Co de	Explanation
16	File Error. Can happen in two ways. First a file was not found or something went wrong during writing on external storage

Code	Explanation
20	The already used disk space plus the new file will exceed the reserved disk space (half partition). The oldest File will be deleted. (only for "new file at restart")
25	The available disk space is not sufficient for the next new logFile. The oldest File will be deleted. (only for "new file at restart")
41	No Directory. This happens if one of the directories set for copy / move are wrong or do not exist. Or if target and destination are the same. Note: Directories are not created if they are not existing!
42	Directory empty. Nothing to copy, because source directory is empty.
43	This code shall not occur in normal operation. If you see this code it could be that the operation is started twice. In that case the operation is terminated.

3.12.5 Watchdog

What is a watchdog?

A watchdog is either integrated in hardware or a separate software process that is used to monitor if an application is alive (e.g. did not crash or does not hang).

The monitored application needs to "feed" the watchdog within a configured timeout.

When using a hardware watchdog, typically only one application can be monitored. If that application does not feed the watchdog within the configured timeout, a hard system reset is performed.

When using a software watchdog, it can be implemented to support multiple applications at once and it can be configured what the reaction to a timed-out application should be.

What our watchdog support on our devices looks like

On our devices we provide a mixed approach to the possibilities described above. A so called watchdog daemon is running on the system. It uses the hardware watchdog functionality to make sure that a system reset is performed if itself would crash.

Other applications can subscribe to that watchdog daemon with a configurable timeout and what to do if that application times out (e.g. restart the application or restart the device).

Like this it is possible to monitor the state of multiple applications which can prevent a (partially) not working system that could only be escaped from manually (e.g. switch off/on supply voltage or switch off ignition until the device shuts down (which can take a long time if a long low-power or sleep timeout was configured)).

With enabled watchdog support it can be made sure that a hanging or crashed application is automatically restarted to make sure that the end user does not need to manually restart the system and minimize possible down times.

If there is a need for a custom application to subscribe to the watchdog daemon please contact support for more information.

Setting up watchdog support in the project properties

Watchdog Settings

☒ Enable Watchdog Support

WARNING:
Make sure to properly test the complete functionality of the project on the device.
Every operation that blocks the execution of the application can lead to a restart.
Especially check entering complex pages and JavaScript functions that might block for a longer time (e.g. synchronous file operations).

Timeout: s

On Timeout: ☒ Restart Application ☐ Restart Device

OK Cancel

"Watchdog Support" can be enabled in the project properties. A timeout can be configured with which the watchdog daemon will determine if an application hangs or has crashed. Additionally it can be configured if the application shall just be restarted when a timeout happens or if the whole system shall be restarted.

Things to consider when enabling watchdog support:

- All functionality of the project needs to be tested and validated with the configured watchdog settings before shipping
- The application will tell the watchdog daemon that it is alive in its main loop. If the project has functions that will block the main loop for longer than the configured timeout, the watchdog will consider the application to be dead and will execute the configured timeout action. Especially check:
 - Entering complex pages (with many objects and/or containing video / multimedia objects)
 - Complex JavaScripts. Be careful with loops and take care of blocking functions like `writeToFile`, `writeEEPROM`, `readEEPROM`, `copyFileOrDirectory`, `moveFileOrDirectory`, `syncFilesystem`, `runSystemCommand`, `RS232Handler.writeFromBuffer`, `RS232Handler.readIntoBuffer`
 - For testing, only enable the "Restart Application" action and check if everything works as expected. It is fairly easy to break a "restart loop" (e.g. if the application blocks for too long in a repeat script) like this. If "Restart Device" is configured, a restart loop can only be broken by re-installing PCClient (or if the timeout is long enough to log into the device and stop the watchdogDaemon). To break a restart loop, the watchdogDaemon can be stopped with `killall watchdogDaemon` on console. It might be necessary to restart the downloader application (via `/opt/etc/init.d/04_ud4 restart`) so that a fixed project can be installed.

Available Properties

- Enable Watchdog Support
 - Switch on/off watchdog support for this project
- Timeout
 - min: 1s, max: 30s
 - Timeout in seconds within which the application has to "feed" the watchdog. If the main loop is blocked for longer than this timeout, the action configured below will be executed
- On Timeout
 - Configure what shall happen when timeout occurs
 - Restart Application: Application will be killed (if it hangs) and then started again
 - Restart Device: A reboot will be executed

Notes

The PClient will send a heartbeat to the watchdog every timeout / 4 seconds. Depending on the concrete situation that can mean that the PClient is restarted a bit before the set timeout, so be sure to test your system accordingly and adjust the timeout time if necessary.

3.13 Project Search

The OPUS Projektor has a very powerful project-wide search feature.

General

The search can be accessed:


Manually:

1. by pressing CTRL-F
2. by clicking into the menu Window - Project-Search...
3. by clicking into the menu Edit - Project-Search
4. by using Variable View/Project-Tree - Variable Context-Menu - Find Usage of Variable
5. by using Project-Tree - JS-Node - Context-Menu - Find Usage of JavaScript

Automatically:

1. During load of Project - if the loaded project has warnings
2. If a variable should be deleted and the variable is used in JS- files or in other DDO-objects/CAN mappings. The search will show its usages.
3. If a JS file should be deleted and the script is used in other JS files or in DDO-objects/CAN mappings. The search will show its usages.


The default position of the project search component is a tab next to the project tree tab.

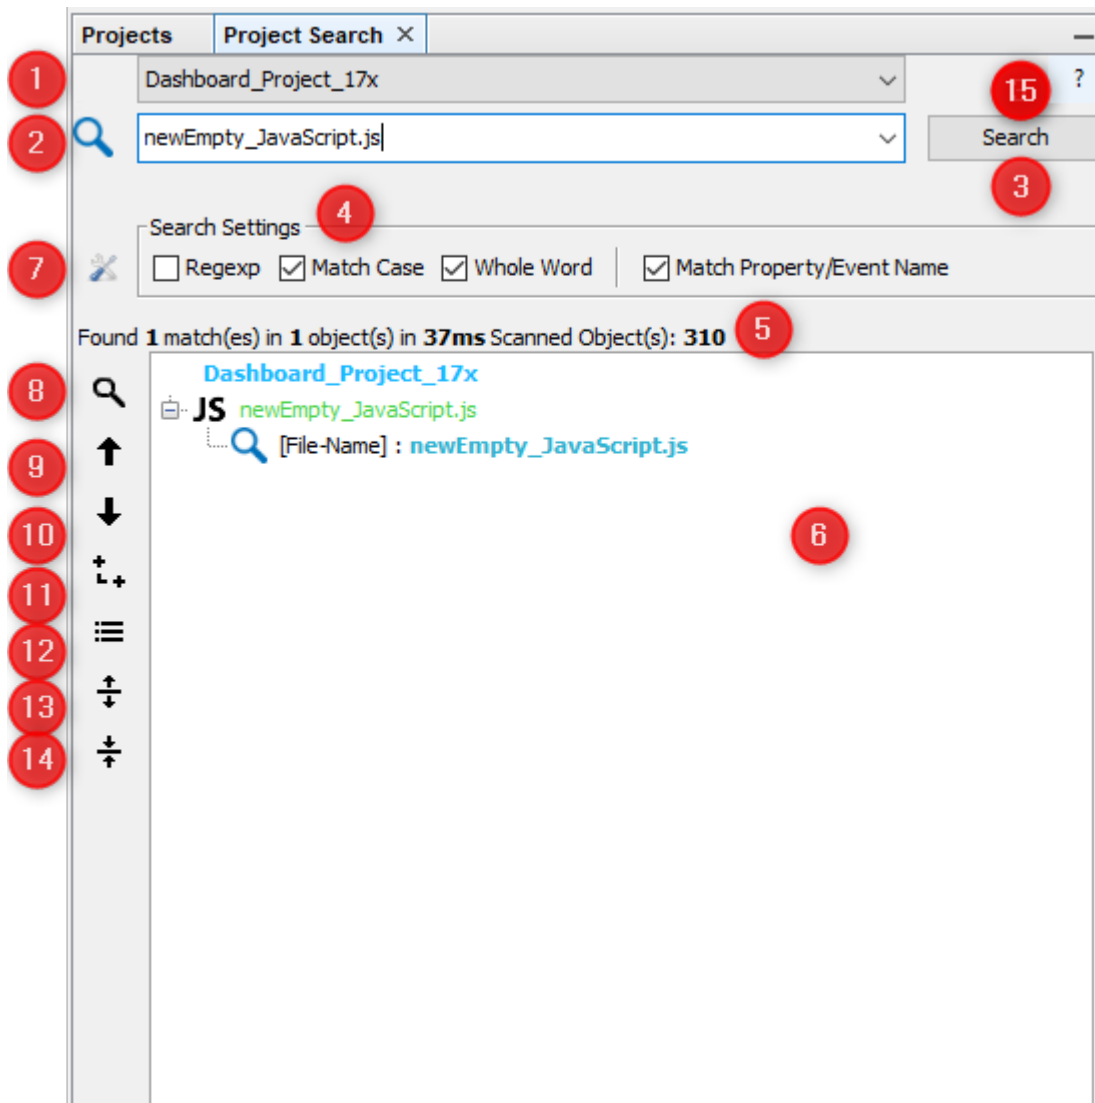


1. Combo-Box: list of all opened projects
2. Text box/Combo box: search command
3. Button: search
4. Check boxes: search settings
5. Label: search details
6. Tree: search results
7. Latching button: show all search settings
8. Latching button: show detailed search results. (property/event matches)
9. Button: go to previous search result node (with rollover)
10. Button: go to next search result node (with Rollover)
11. Latching button: show search results as a tree (similar to project tree)
12. Latching button: show search results as a list
13. Latching button: expand search tree
14. Latching button: collapse search tree
15. Search Tips & Tricks

Explanation of the elements

 
1. Combo-Box: list of all opened projects
 - List is **empty** if no project is available
 - List is **always enabled**
 - The **selected project** is used for the search
2. Text box/Combo box: search command
 - Combo-Box is **always enabled**
 - Combo-Box contains the **last 10** search commands
 - The last 10 search commands will be **saved and restored** after start of the OPUS Projektor.
 - If the search command is invalid the border will be painted in red and an info message will be shown below the combo-box with detailed information.

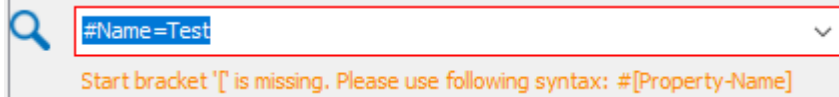

 - If a searched was performed and the appropriate project is closed and no other opened project exists, a message will be shown that the project was closed and the search-tree(6) will be cleared.

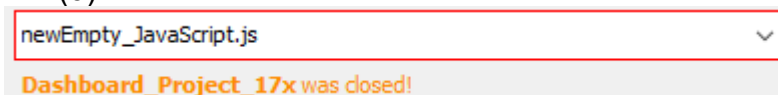

 - If more than 5000 search hits are found the an error is shown. This is currently necessary because otherwise expanding the tree takes too much time.

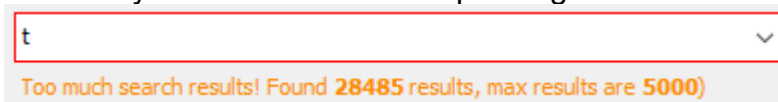

3. Button: search
 - Button is only enabled if at least one opened project exists and the search command is not empty
 - The Button starts the search and the results are shown in the search tree(6)
 - The search can also be started if the Enter key is pressed while the search command text field has focus.
4. Check boxes: search settings
 - Regexp: Use Regular-Expressions for search command
Default-State=Deselected
 - Match Case: Lower/Upper case must match
Default-State=Deselected
 - Whole Word: The search expression must be a separated word.
Default-State=Deselected
 - Match Property/Event Name: The named Property/Event must match exactly => example is shown later
Default-State=Selected
5. Label: search details
 - Found objects and found matches, search time and count of all searched objects => Only if at least one match was found
Found 4836 match(es) in 1600 object(s) in 201ms Scanned Object(s): 2502

- No Matching objects found! search time and count of all search objects => if no match was found


No matching objects found! Search Time: 104ms Scanned Objects: 2502

6. Tree: search results

- Shows the Project-Node of the current selected project and the search results
- If no match was found only the Project-Node is visible.
- If no opened project exists the following message is shown: No current search!

7. Latching button: show all search settings

- Shows/hides the detailed search settings panel

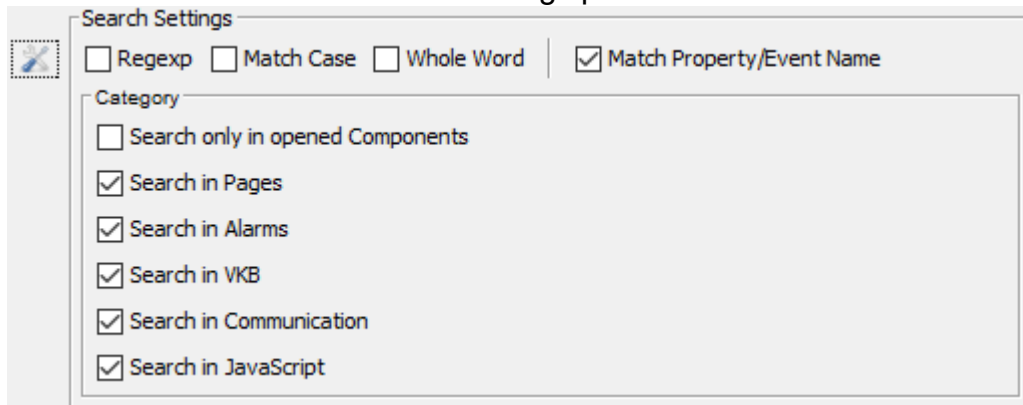

- Default states:


All check boxes are selected except of the first

If a check box will be deselected, the according project part won't be considered for the search.

Pages does also include [MiniView](#)⁶³⁰-Pages.

The Project itself with its properties/events will be always considered for the search.

- If the first check box is selected (Search only in opened components) the other check boxes will be deselected and disabled

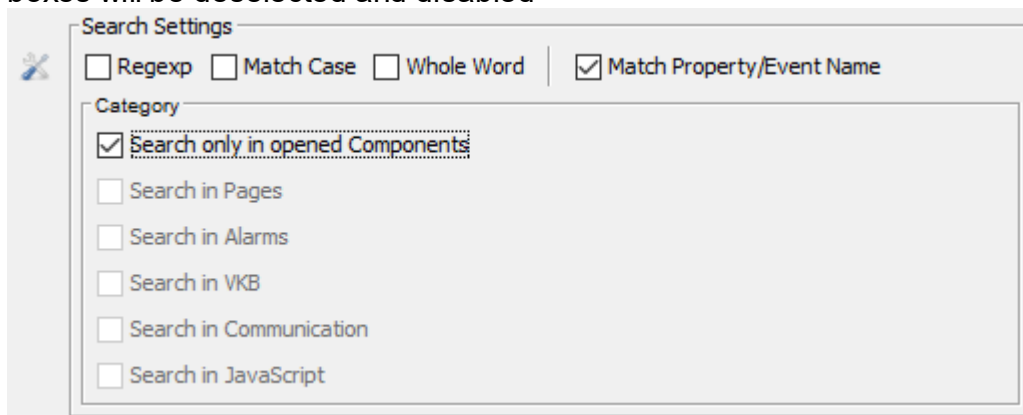

- If the first check box is deselected the other check boxes will be selected and enabled again.

- If **no** check-box is selected a **warning** is shown

Search Settings

☐ Regexp ☐ Match Case ☐ Whole Word ☒ Match Property/Event Name

Category

☐ Search only in opened Components

☐ Search in Pages

☐ Search in Alarms

☐ Search in VKB

☐ Search in Communication

☒ Search in JavaScript

Please select at least one checkbox!

8. Latching button: show detailed search results. (property/event matches)
 - Shows/Hides the detailed search results (Default is Enabled/Selected)
 - Enabled

Search Settings


☐ Regexp ☐ Match Case ☐ Whole Word ☒ Match Property/Event Name

Found 22 match(es) in 10 object(s) in 222ms Scanned Object(s): 2502

Welcome_Project_11


- simulation test [1697]**
 - [Property] Type ID: 9
 - [Property] Name: simulation test
 - [Property] Variable Reference: Simulation_Test
- String Field 3 [1698]**
 - [Property] Type ID: 8
 - [Property] Preview Value: Test Variable Simulation_Test
 - [Property] Preview Value: Test Variable Simulation_Test
- String Field 1 [998]**
 - [Property] Type ID: 8
 - [Property] Preview Value: SDO Test
- String Field 3 [1170]**
 - [Property] Type ID: 8
 - [Property] Preview Value: Connect CAN1 and CAN2 for this test\nThe ECU will
- String Field 3 [1009]**
 - [Property] Type ID: 8
 - [Property] Preview Value: CAN - CANopen - SDO Test
- String Field 3 [1030]**
 - [Property] Type ID: 8

- Disabled

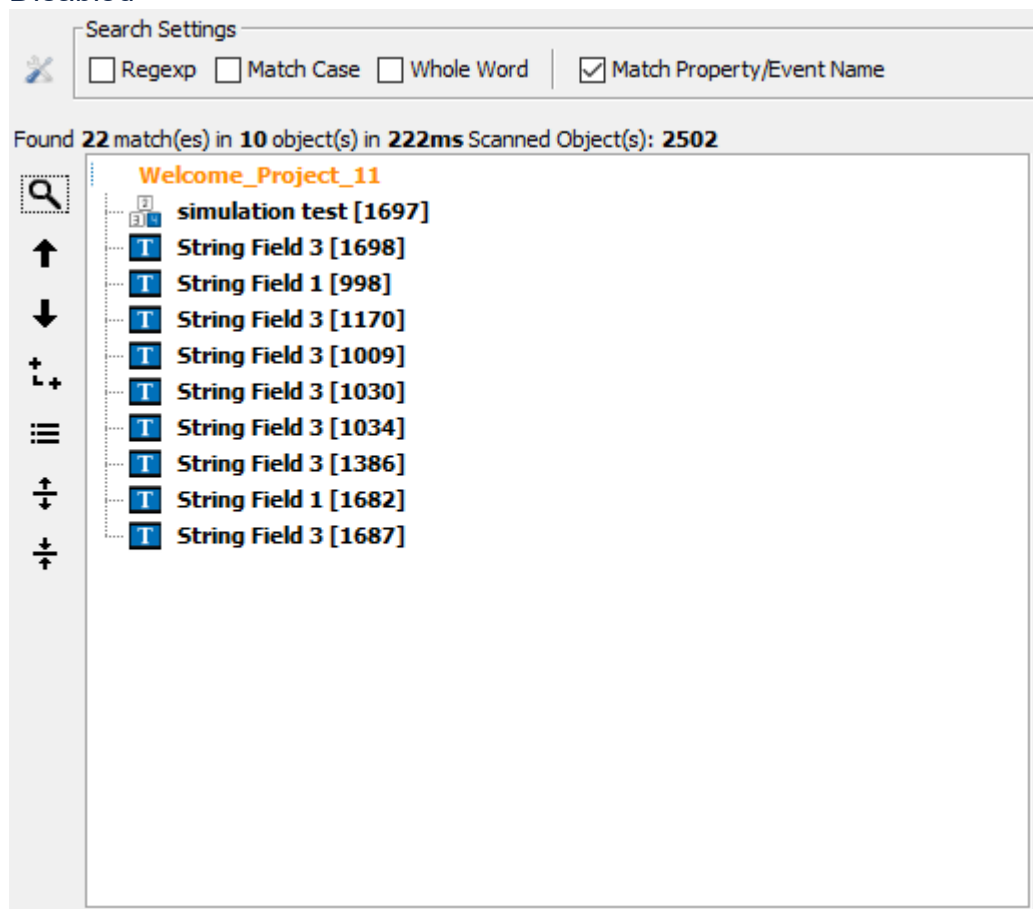

9. Button: go to previous search result node (with rollover)
 - Selects the previous search result object and opens the appropriate page/alarm/VKB and selects the object in the scene.
 - For communication objects nothing special happens
 - For JS files the file will be opened.
 - If currently the first object is selected and the button is pressed, it jumps to the last object in the list (roll over)
10. Button: go to next search result node (with Rollover)
 - same as for previous button, only the other direction
11. Latching button: show search results as a tree (similar to project tree)
 - Switches between List/Tree View (Default is List-View)


- Tree view:

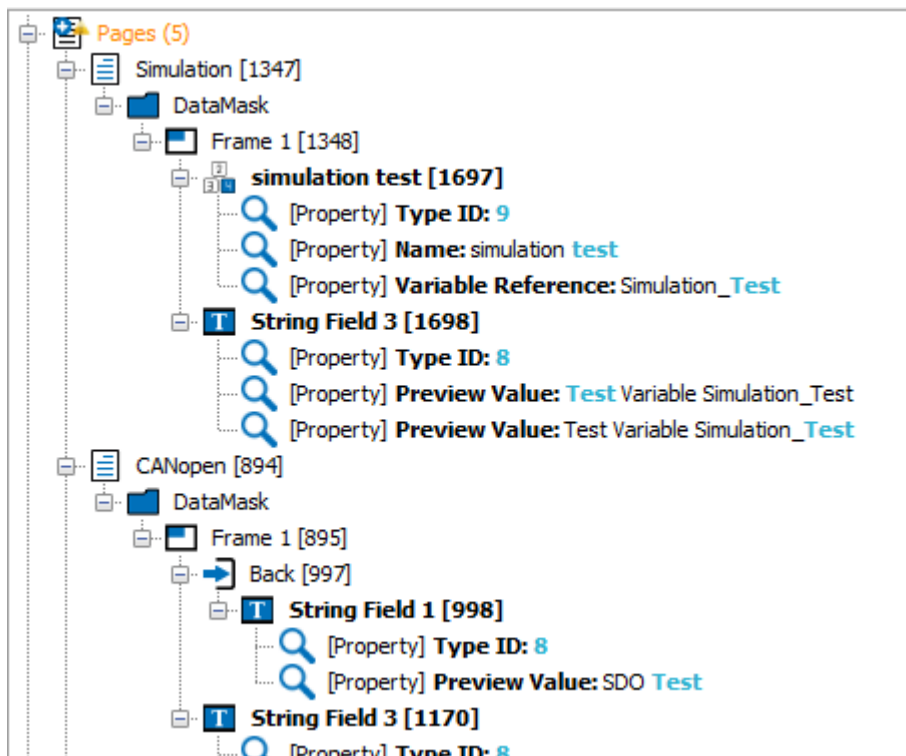

12. Latching button: show search results as a list

- Switches between List/Tree View (Default is List-View)
- List view:

- List view:

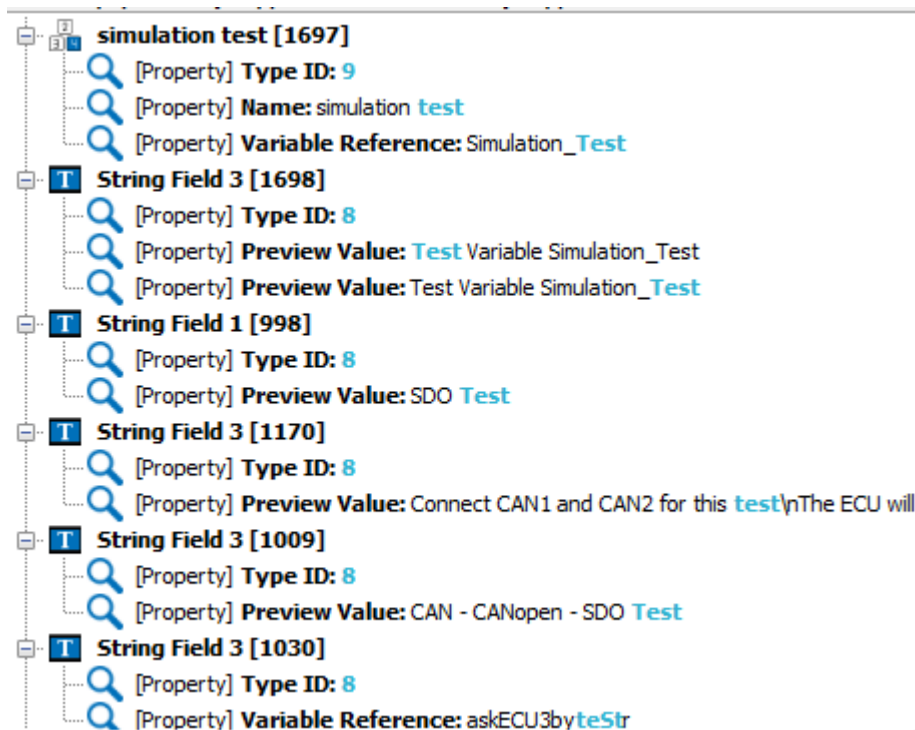


13. Latching button: expand search tree

- Expands search tree (Default state: selected)
Should only be used if tree view is enabled (makes no sense otherwise)

14. Latching button: collapse search tree


- Collapse Search-Tree (Default State: Deselected)

Should only be used if Tree-View is enabled (makes no sense otherwise)
The tree will be collapsed, till the Pages

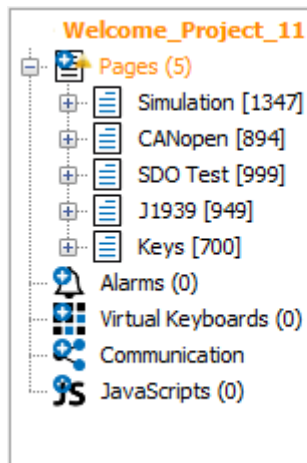

15. Search Tipps & Tricks

- Shows a Dialog with many useful Search commands in different categories

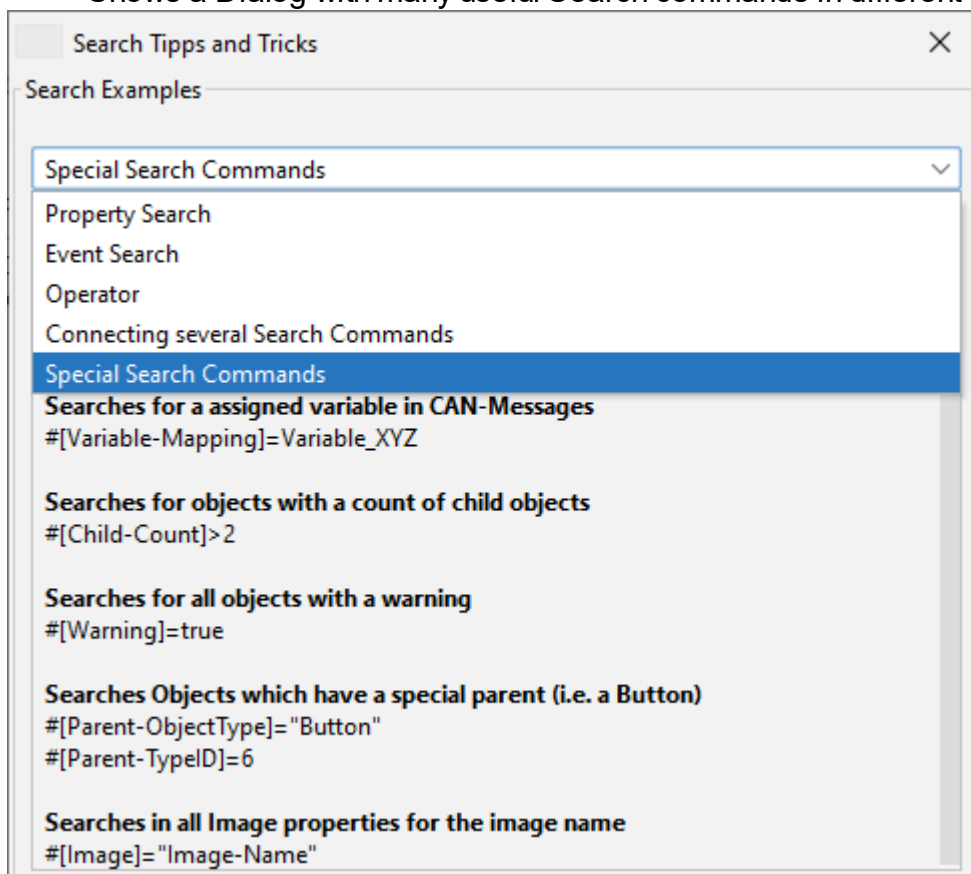

The search command

The Search-Command-Text-Box can be used in many different ways.
For the current examples the Welcome-Project with default search settings are used.

Possible syntaxes:

- Simple String (see Example 1)

- Property Search (see Example 2)
- Number (see Example 3)
- Combination of String and Property (see Example 4)

General syntax rules:

Property - Operator - Value

#[Property-Name]=Value

Additionally several search expressions can be connected with && or ||

#[Property-Name]=Value && #[Property-Name]<=Value

Additionally brackets () can be used:

(#[Property-Name]=Value && #[Property-Name]!<=Value) || #[Property-Name]>Value

For property searches the following operators are available:

For Strings and Numbers:

- [Equal/Contain] = or ==
- [Not Equal] != or <>

Only for Numbers:

- [Greater] > or >=
- [Lower] < or <=

Example 1 => Simple String:


Search Command:

test

For the 1st example the simple word **test** is typed into the search command box.

The String **test** is now search in every property/event of all Objects of all Pages/Alarms and VKBs in the Welcome-Project. Beside it will be searched in all Communication Objects

(Variables, CAN-Messages and Owners) and in all JS-Files.

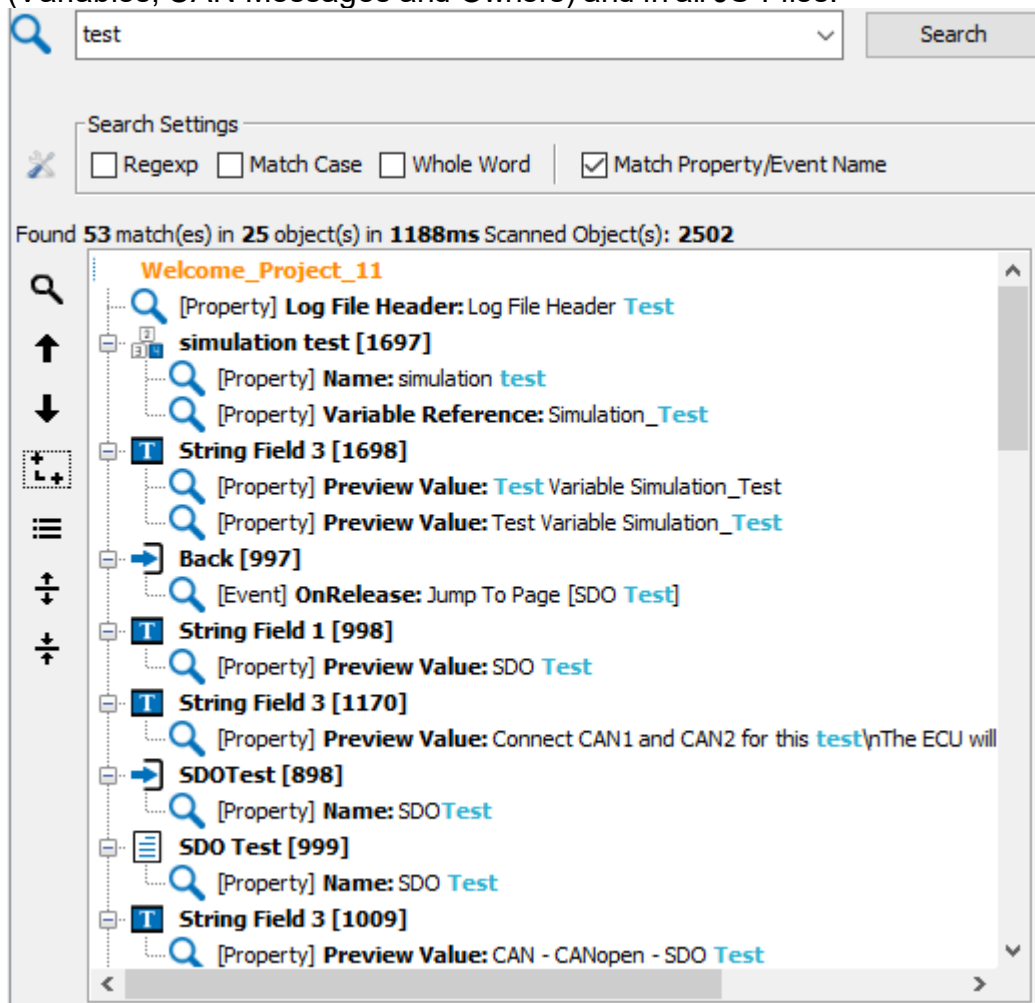

Example 2 => Property Search:


Search Command:

#[Name]=test

The 2nd example shows a search where the simple word **test** is searched only in Name properties. All other properties will be ignored.

The String **test** is now searched in every Name property of all Objects in all Pages/Alarms and VKBs in the Welcome-Project. It will also be searched in all Name properties of the Communication Objects (Variables, CAN-Messages and Owners) and in all JS file names.

If the property NAME is searched, the JS file names will also be considered. For all other properties the JS files will be ignored, because they don't have properties.

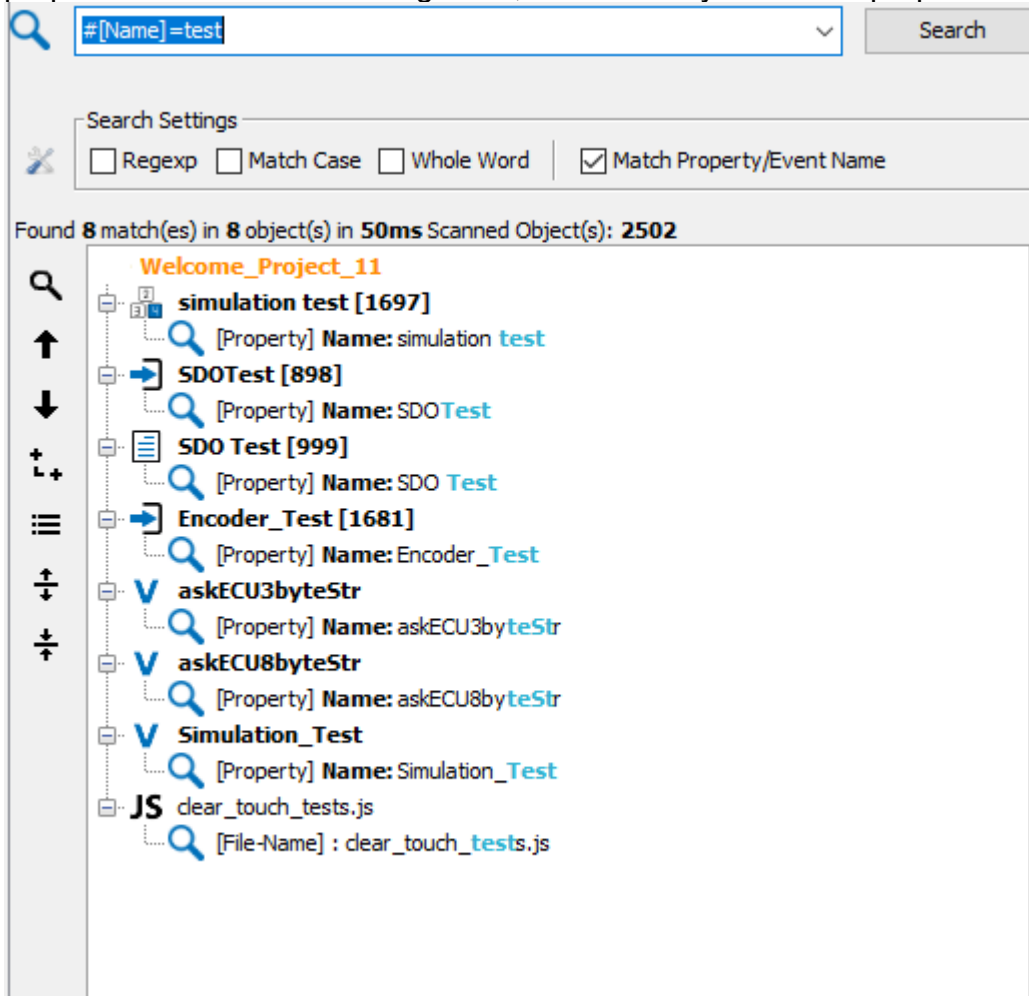

Example 3 => Simple Integer search:

Search Command:

12

For the 3rd example the number **12** is typed for the search.

The number **12** is now searched in every property/event of all Objects of all Pages/Alarms and VKBs in the Welcome-Project. It will also be searched in all Communication Objects (Variables, CAN-Messages and Owners) and in all JS files.

If the data type of the property is a number (Integer, Float, Double) the value must match exactly.

E.g.

Property: Width = 123 => would not match, but


Property: Height = 12 => would match

If the data Type of the property is a string the value must contain the string value **12**

E.g.

Property: Name = 1200 bits

=> would match

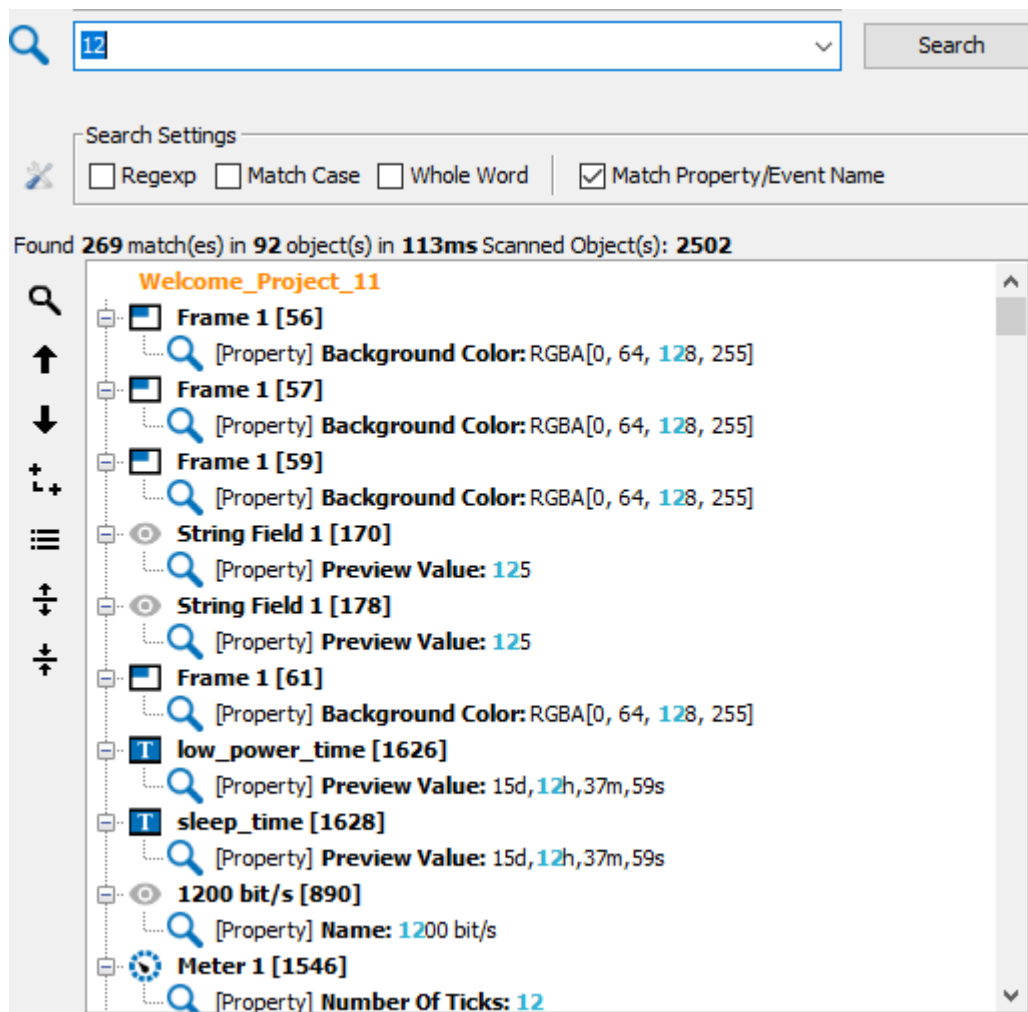


Example 4 => Connecting search commands

Search Command:

(#[Type ID]=8 || #[Type ID]=9) && test

In the 4th example it is searched for the word **test** again, but now the [Type ID](#)⁴⁴⁸ of the found object(s) must be 8 or 9 (String Field or Numeric Field)

The String **test** is now searched in all properties of all Objects in all Pages/Alarms and VKBs in the Welcome-Project. It will also be searched in all properties of the Communication Objects (Variables, CAN-Messages and Owners).

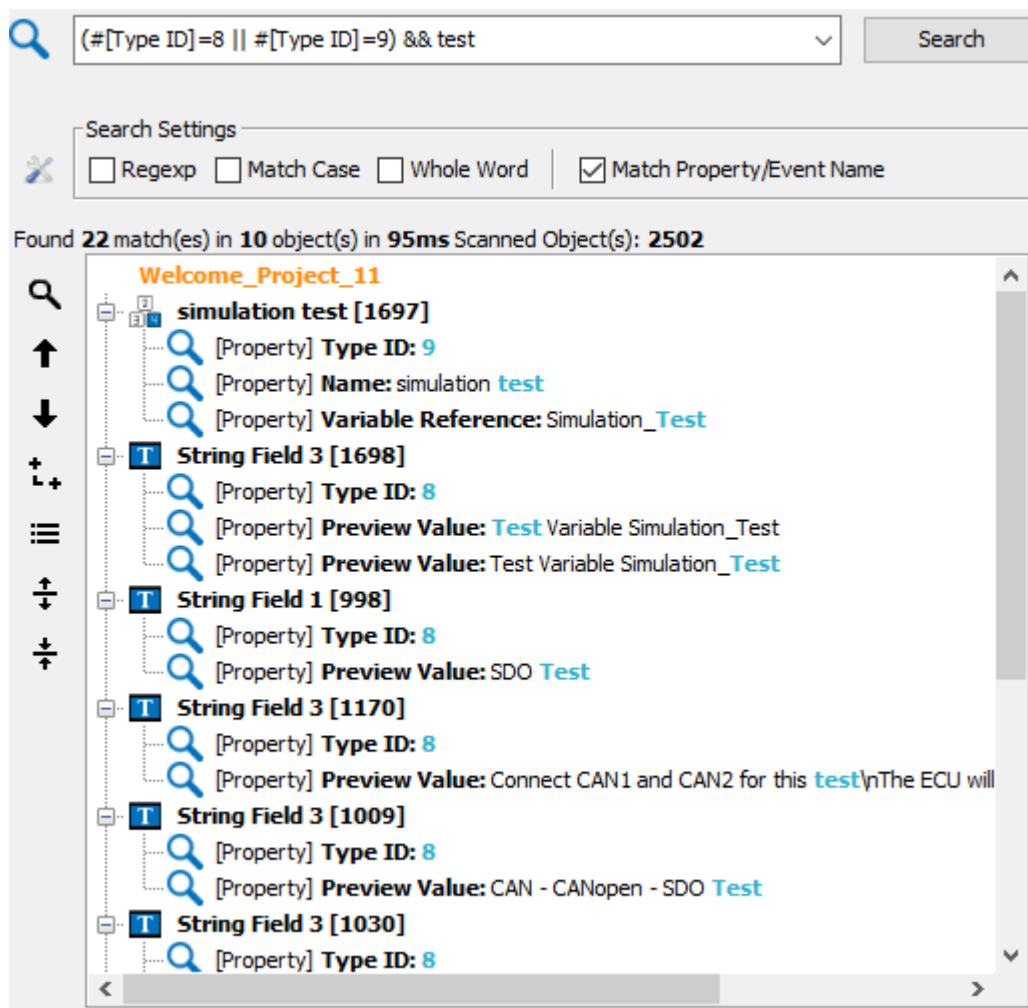**Note:**

All properties and events can be used for the search.

Exceptions are only:

- Border Profile and
- List-Items

For the Project the following properties are searchable:


- General
- Object
- Alarm
- Variable Logging
- ISO-Bus
- Day-/Night

Currently it is not possible to search for properties of an event, e.g. the Property Periods (100 ms) of the event OnProjectRepeat.

Example 5 => Searching for all input objects on Page X

Open the page(s) you want to search in

Settings:

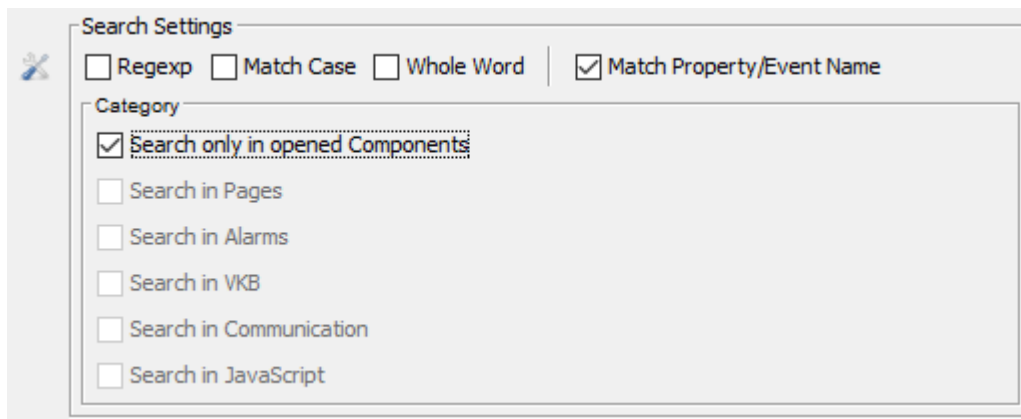


Search Command: **#[Set As Input]=true**

Example 6 => Exchange the Font property for all String Fields with DejaVu (bulk property editing)

Here it is searched for all String Fields that don't have language dependency that use the Font DejaVu


Search command: **#[Font]=DejaVu Sans && #[Type ID]=8 && #[Dependency]=None**

Now the Font property of all found objects can be selected, by right-clicking the Font property of one of the found objects:

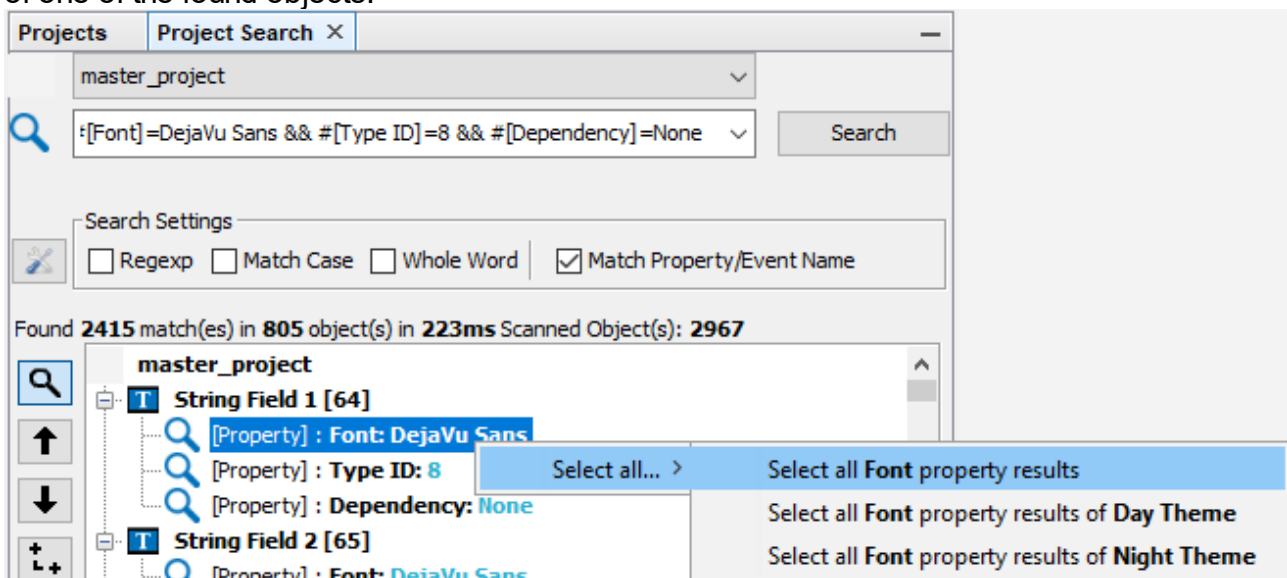

Note that either ALL objects that use this font can be selected, or only all results in day theme or night theme, respectively.

With clicking Select all Font property results, all the objects will be selected and in the property window the Font property can be changed for all objects at once:

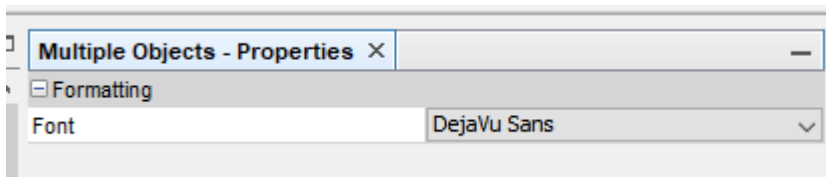

Example 7 => Find all Function Keys that don't have an action on the event OnLongPress

Search command: `#[OnLongPress]=="No Action" && #[Type ID]==276 && #[Name]=="Function Key"`

Tips & Tricks

Special commands for #():

- With the search command `#[Event]!=No Action` it can be searched for all configured events in a project.
- It is also possible to search for a specific event, e.g. `OnPress: #[OnPress]!=No Action`
- It is possible to search for special actions, e.g. for Jump to Page: `#[Jump To Page]!=No Action`
- With the search command `#[References]>1` it can be searched for all objects that have reference copies of itself in the project.
- The search command `#[Warning]=true` shows all objects that have a warning

Check box Match Property/Event Name

- If the check box is activated, the Property / Event name must match exactly. If e.g. `#[name]` is typed instead of `#[Name]`, the search will not find the property.
- If the check box is de-activated, the lower and upper cases will be ignored and the above example would match with the property Name. Internally, the `String` method `contains()` is used, which means, that a search with `#[ame]` would also work.

Keyboard Shortcuts

If the search result tree has focus, the following keyboard shortcuts can be used:

- **F3** - go to the next search result node
- **Alt + F3** - go to the next detailed search result node
- **F5** - go to the previous search result node
- **Alt + F5** - go to the previous detailed search result node
- In all cases, for graphical objects, when double-clicked, the appropriate page will be opened with the object selected.
- If **F5** (or **Alt + F5**) is used for JavaScript search results, the JavaScript file will be opened and the matching part will be selected.

Result order

The result order of the search results can be changed for list view by opening the context menu of the project node in the search tree.

The following search orders are available:

- Projekt-Tree (Default)
- Name (Ascending, Descending)
- ID (Ascending, Descending) -> only makes sense for objects that have an ID

Update a property for several objects

If e.g. the font property can be updated for all String Fields on a certain page with these steps

1. Open the page where the fonts shall be changed and close all others.

2. Go to the detailed search settings and select the check box **Search only in opened**

Components

3. Type the following text in the search command line (to find all String Fields with font DejaVu that don't have a dependency): **#[Font]=DejaVu Sans && #[Type ID]=8 && #[Dependency]=None**

4. Open the context menu of a font search detail node and choose **Select all Font property results**

5. Go to the property sheet and select a different font.

The changed font will be updated in the search tree.

Other important things to know:

FindUsage

For FindUsage of Variables and Find Usage of JS File the following gui elements will be updated automatically in the search component:

- The appropriate project of the variable / JS file will be set
- The variable name will be set in the search command text box
- Match Case and Whole Word will be selected
- Selection to search in Pages/Alarms/VKBs, Communication and JavaScripts is activated

Updating a property / event of an object which is visible in search tree

If a property value is updated which is present in the current search tree, the following things happen:

- the old value stays visible and the new value will be shown with green font
- an attention icon will be added in the upper right corner of the search icon (magnifier) of the updated property
- an updated icon (asterisk) will be added to the parent object of the updated property
- If the value is reverted to the original value, all named changes will also be reverted

Deleting an object present in the search tree

If an object is getting deleted which is present in the search tree, the following things happen:

In list view:

- Object stays visible in the list view
- The icon is updated to a red cross (which is the symbol for a deleted object)
- The property/event sheet is not visible anymore

In tree view:

- The deleted object will be removed from the tree.

3.14 Project Versioning

Sometimes users would like to have an old state from some months ago of the project to do some edits for a special customer who shouldn't get the latest changes.

Sometimes it happened that a project had an error and could not be opened anymore in the OPUS Projektor.

For these use cases and others we are introducing a simple, yet powerful project versioning system.


We used JGit, a Java library implementing the widely known Git version control system.

Please note that we did NOT implement branches or merging of different project revisions.

How can I start using this feature?

New projects

In the new project dialog, an option appears in the second screen.

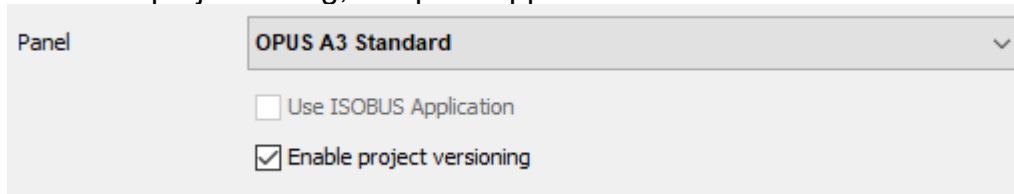


If this check box is checked (default setting), project versioning is enabled for this project.

Existing projects

For existing projects, the versioning will not appear upon project opening.

When you save the project for the first time, this dialog will appear.

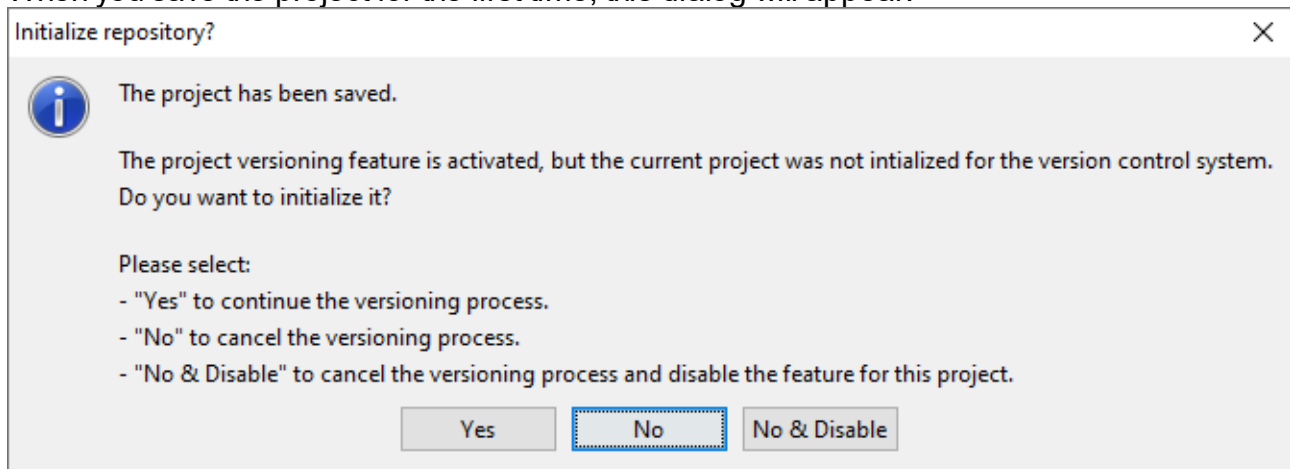

Choose yes to start using the versioning system for the project.


Choose No to not start using the versioning system for the project at the moment, i.e. you will be asked the same question at the next save.

Choose Cancel not start using the versioning system for the project and disable versioning for

this project, i.e. you will not be asked this question again (but you can enable the versioning again in the project properties).

How can I turn versioning on / off later on?

Versioning can be turned on / off in the project properties of each project.

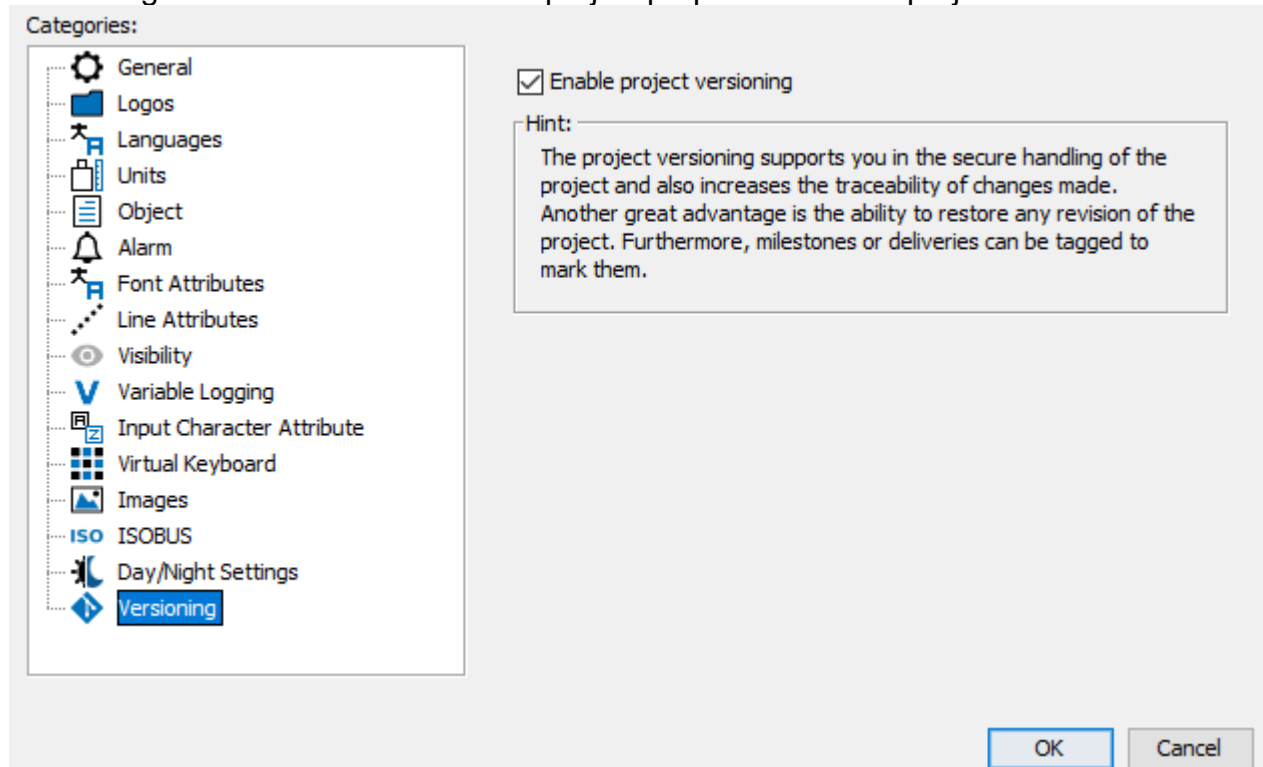


If versioning is turned off, the existing revision data is kept, so if versioning is enabled again, all existing revisions are still available.

It is also possible to still open the revision browser to see all existing revisions. Tags can also still be managed.

What happens in my project folder?

If you enabled versioning for a new or existing project, a folder and a file will be added to the project folder.

 .git

 .gitignore

In the .git folder all necessary information and data for the project versioning is located.

Please don't edit this folder or anything of its content in any way and don't delete it.

The file .gitignore states some files that are excluded from the versioning. These are files that are not necessary for project loading.

At the moment, these files are listed in there.


- /terminal_files.zip
- /imported_fonts.zip
- /log.0
- /log.1

- /log.2

As with the .git folder, please don't edit or remove this file.

How can I access the different stages of my project?

When opening a versioned project, you will see a dialog like this:

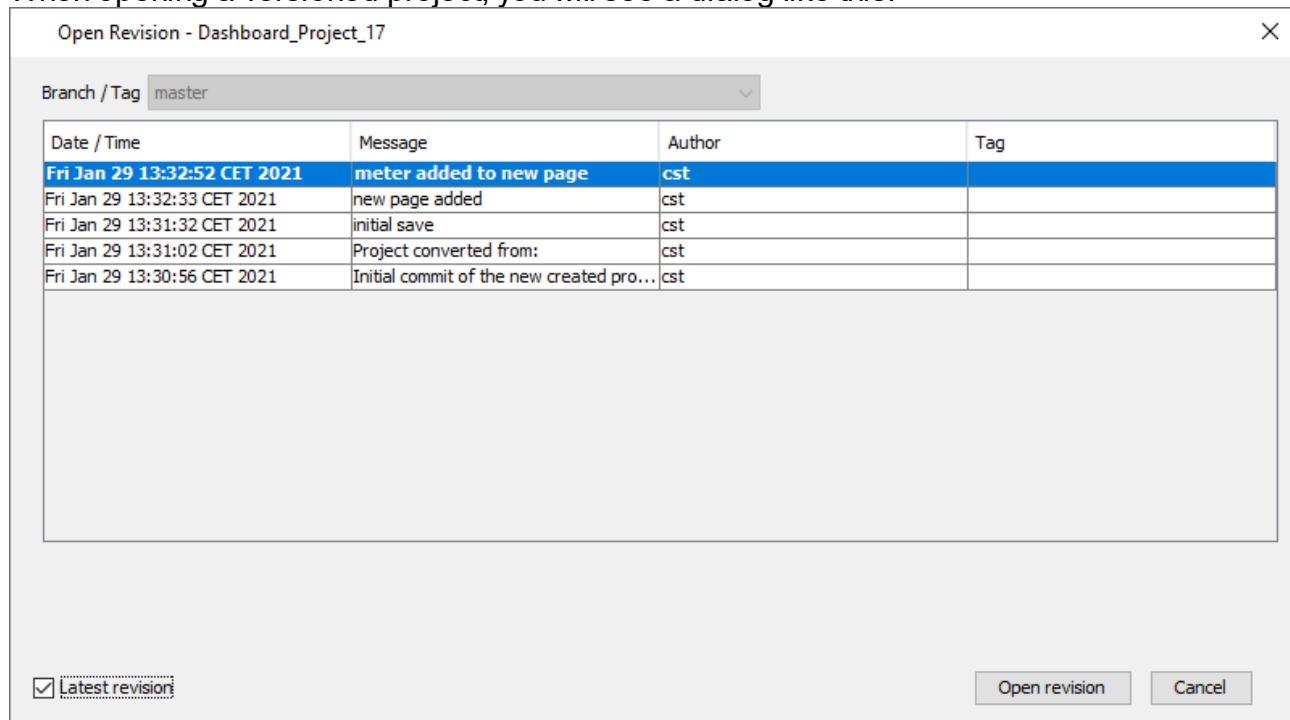

The dialog shows the different revisions of this project. A revision is a certain state of the project, defined usually by a project save or a conversion.


If you just click "Open revision", it will open the latest revision of the project (probably the most important use case).

If you want to access one of the older revisions, you need to uncheck the "Latest revision" check box. Then you can select any of the revisions and load these by clicking "Open revision".

Cancel stops opening the project.

Will I lose newer stages of my project if I open an old revision?


If you open an older revision and then try to save the project, this dialog will appear:

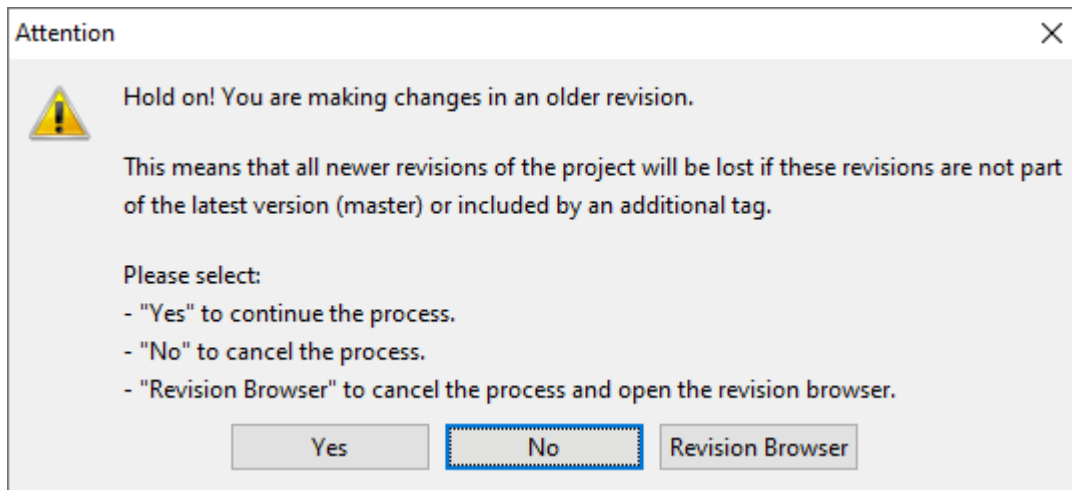

So yes, if you click yes now, all newer revisions of the project will be deleted (unless they have been [tagged](#)¹³⁵).

If you click No, nothing happens. If you click Revision Browser, the revision browser will be opened and you can manage your revisions.

How do I use the revision browser?

You can access the revision browser by clicking on the toolbar item  or through the menu item Tools -> Revision Browser

Revision browser - Dashboard_Project_17x
×

History

Branch / Tag
▼
Add Tag
Delete Tag

Date / Time	Message	Author	Tag	ID	Path
Mon Feb 01 14:46:46 CET 2021	String Field added	cst		d64c0377c2e31db...	refs/heads/master
Mon Feb 01 14:44:04 CET 2021	button added	cst	build1_0	b5d0b556b436deb6...	refs/heads/master
Mon Feb 01 13:31:13 CET 2021	Project SaveAs	cst		f24c6bd76ef944cd4...	refs/heads/master
Fri Jan 29 13:32:33 CET 2021	new page added	cst		8e8255c1af91f8aaf...	refs/heads/master
Fri Jan 29 13:31:32 CET 2021	initial save	cst		e86c7018784a713e...	refs/heads/master
Fri Jan 29 13:31:02 CET 2021	Project converted from:...	cst		2ac1752fcbba247e4...	refs/heads/master
Fri Jan 29 13:30:56 CET 2021	Initial commit of the ne...	cst		ce4fd9f731e79fac37...	refs/heads/master

Files

Description

Diff to parent

In the revision browser the different revisions of the currently selected project can be viewed. Additionally, tags can be created, moved and deleted.

What are tags?

If you open an older revision of a project, make changes to it and try to save it, you will be warned that all newer revisions will be lost if the save is completed.

However, it might be interesting to conserve certain project states, e.g. as delivery states as they went to the customers.


For this purpose tags can be used.

Tags can be added to any project revision in the revision browser.

Additionally, a tag can be set in the commit dialog that appears during a project save.

Note: If you move a tag, it is possible that revisions are deleted, if they are not part of that tag, another tag or the latest version ("master").

What is this dialog that appears upon saving the project?

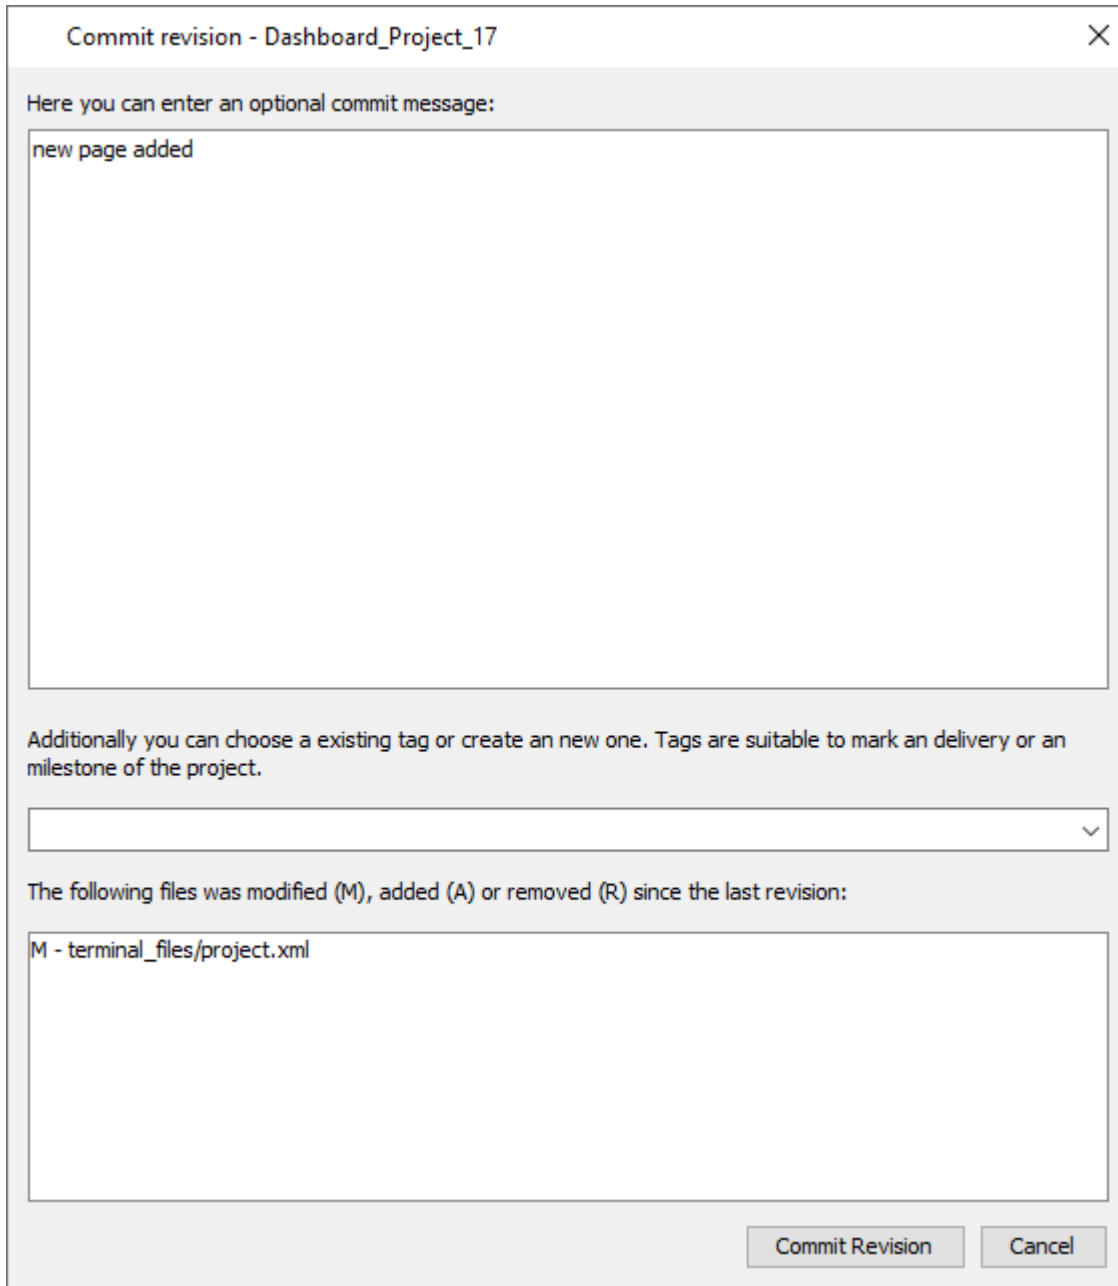

Commit revision - Dashboard_Project_17

Here you can enter an optional commit message:

new page added

Additionally you can choose a existing tag or create an new one. Tags are suitable to mark an delivery or an milestone of the project.

The following files was modified (M), added (A) or removed (R) since the last revision:

M - terminal_files/project.xml

Commit Revision Cancel

When a versioned project is saved, a revision commit dialog appears. Here the user can add a comment to a commit and choose or create a new tag.

A click on Commit Revision commits the currently saved revision to the versioning system.

Cancel cancels the commit process.

Note: The project has already been saved at that point. The save process is not canceled by clicking Cancel here.

Can I use versioning but not have this pesky dialog at each save?

It is possible to enable auto-commit in the [options](#)⁷⁷.

Note that enabling this means that no commit messages can be added to project revisions which can reduce clarity.

It is still possible to add tags to project revisions in the revision browser.

When do I risk losing a revision?

The versioning system only deletes revision that do not have a reference to the "master" (i.e. the latest state of a project) or to a tag.


Let's look at an example:

A first save of a project



Revision 1 (Master)

Some edits to the project, delivery to a customer

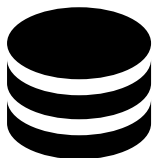

Revision 1



Revision 2 (Master)
Tag
Delivery_2021_02_03

More edits to the project



Revision 1



Revision 2
Tag
Delivery_2021_02_03



Revision 3 (Master)

At this stage, revision 1 and 2 are referenced by the tag "Delivery_2021_02_03".
Revisions 1, 2 and 3 are referenced by the latest revision ("master").

Now we load Revision 1 of the project, make changes to it and save the project (agreeing to the warning that is shown when committing the save).

What happens?


Tag "Delivery_2021_02_03"



Revision 1



Revision 2

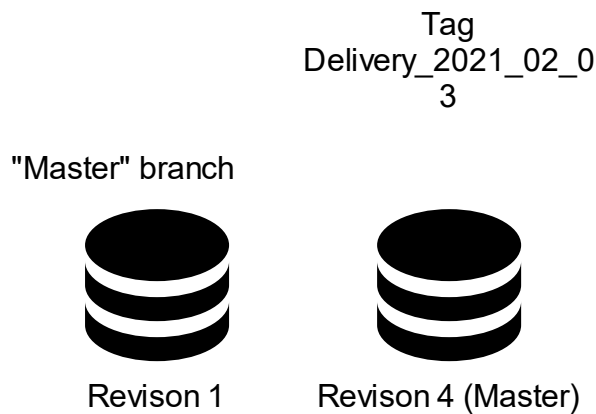

Note that by doing the above work flow, revision 3 was deleted, because it did not have any reference, not by the tag "Delivery_2021_02_03" nor by the "master".

My save process was interrupted, my computer crashed or something, my project is broken, what do I do now?

When opening the project, uncheck the "Latest revision" check box and load the second revision from the list (assuming that the first one is the one that is broken).

What if I don't want to commit with every save?

There are options in the [Versioning](#)⁷⁷ tab of the [Options](#)⁷¹ menu. It is possible to enable or disable automatically committing on

- saving the project
- [downloading](#)⁶² the project
- starting the [PClient simulation](#)³¹

If you disable all three options, committing has to be done manually in the [tool bar](#)³⁹.

3.15 Sample Projects

In the first step of the dialog to create a new project, it is possible to use a Sample project instead of the standard empty project.

Sample projects have pre-configured content. They will be created for the chosen device automatically by an automatic project conversion. The layout may not always be perfect. Most sample projects will look better in landscape orientation.

The number of sample projects included in the OPUS Projektor may vary.


For all samples we suggest to look behind the curtain to see how things are done. This way you will learn a lot from them.

Bar graph project



This project shows 7 different ideas how to use bar graphs in many different ways.

Calculator project

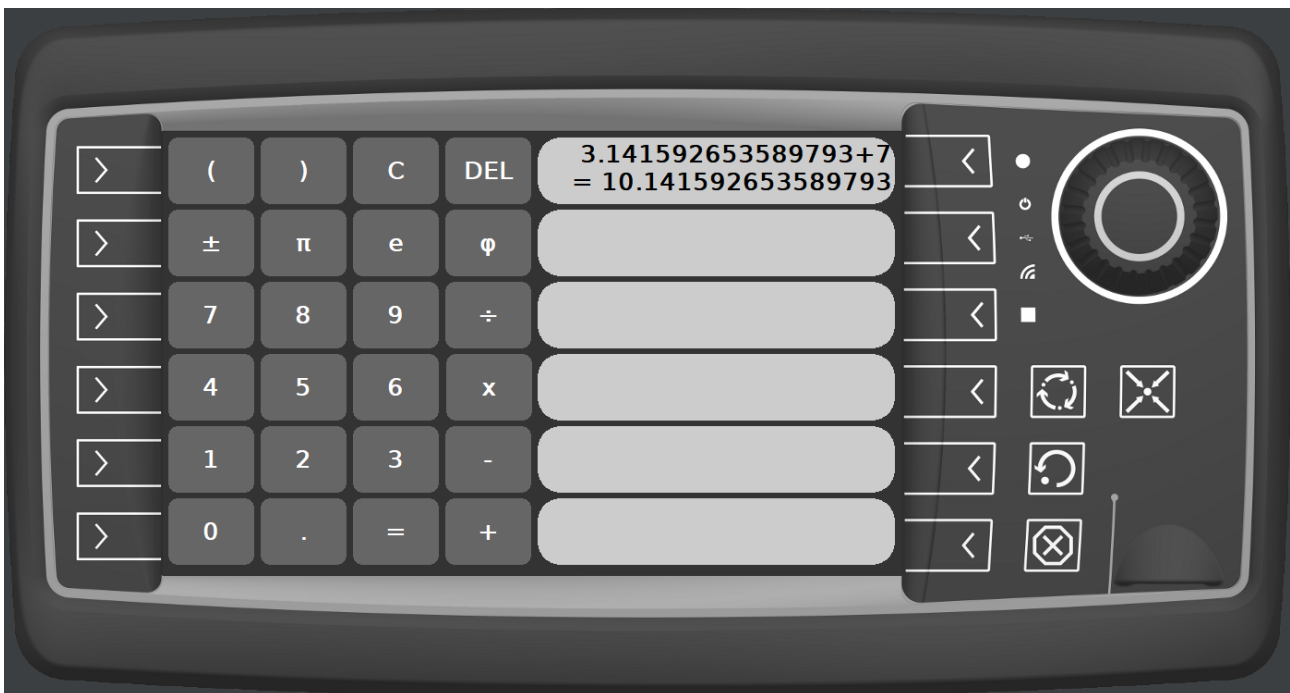


This project implements a working calculator. Use with caution, horrible accidents that happen because of erroneous calculations with this calculator are not our responsibility.

Dashboard project




This project shows a simple vehicle dashboard. The project is not automatically moving, so it needs scripts or an external data source to "come alive".

ISOBus project

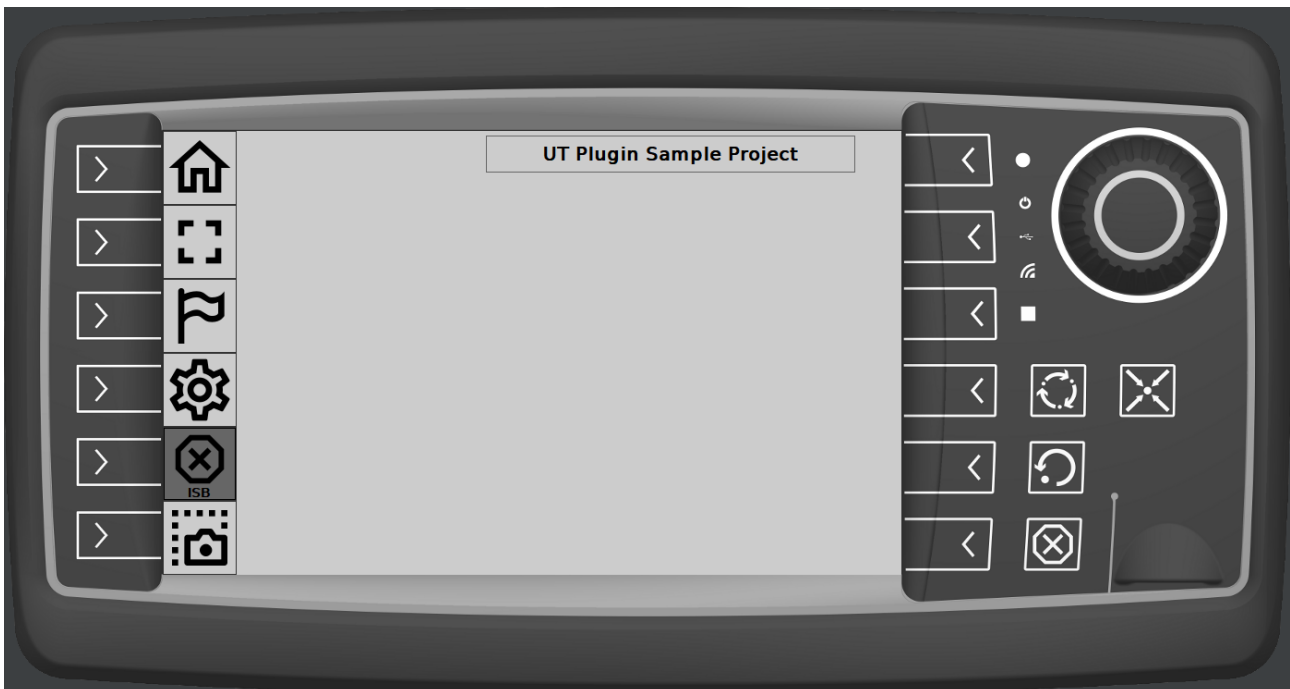

This project shows an exemplary implementation of the new [UT plugin](#)⁶⁴⁷ functionality. Check the [UT variables documentation](#)¹⁸⁶ to learn how everything works.


Pong project

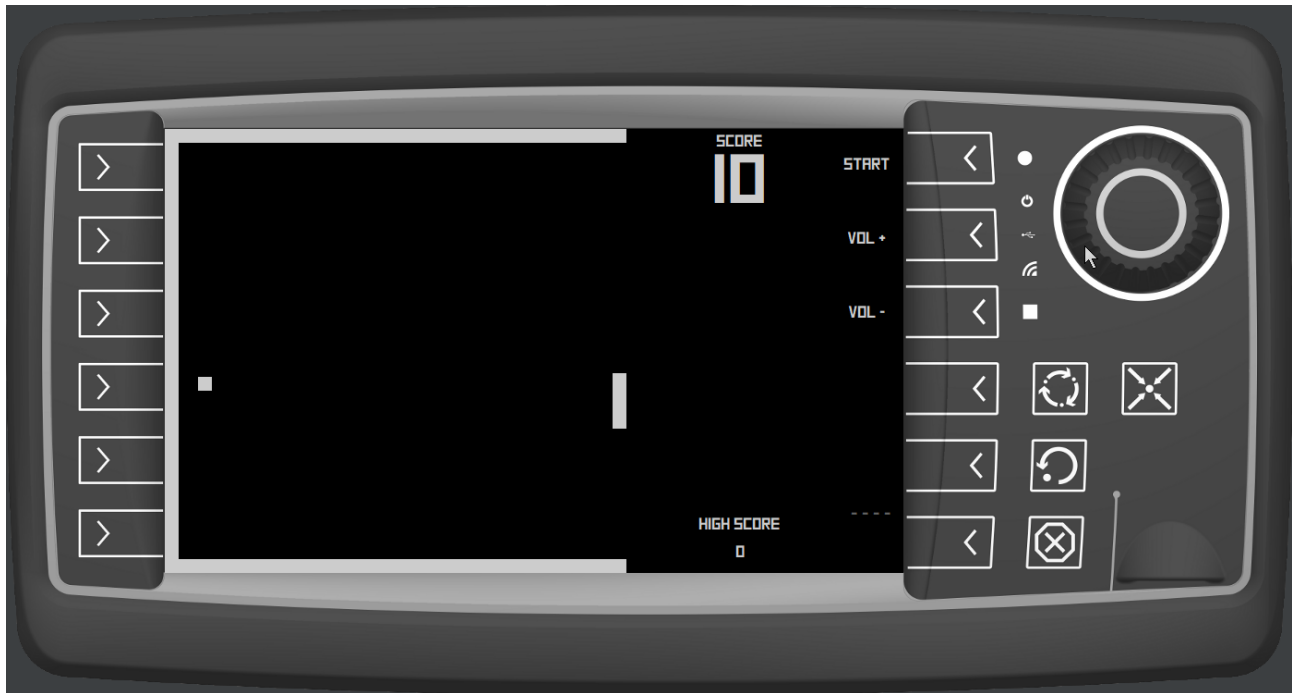

It's the latest in gaming technology, opening doors to the future. Welcome to 1972 on the OPUS devices. Keep the "ball" in the "field" to keep playing. But be careful, it gets faster and faster.


You need a device with Encoder to be able to play this. Or, alternatively, you implement a good control for touch screens and we will integrate it in future versions of the sample. Deal?

Simon Says project

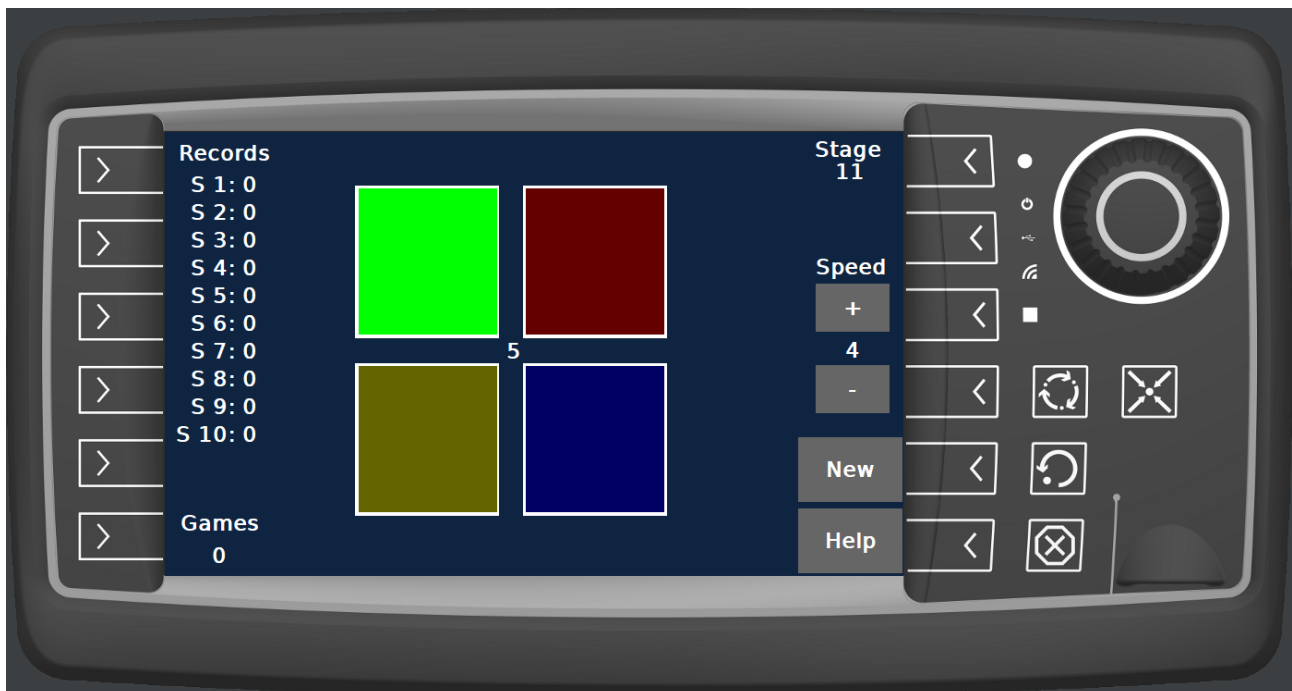

And here comes another blazing new title in the OPUS gaming software series. In this game you have to follow the series of colors by pressing them in the right order.

Sums game project

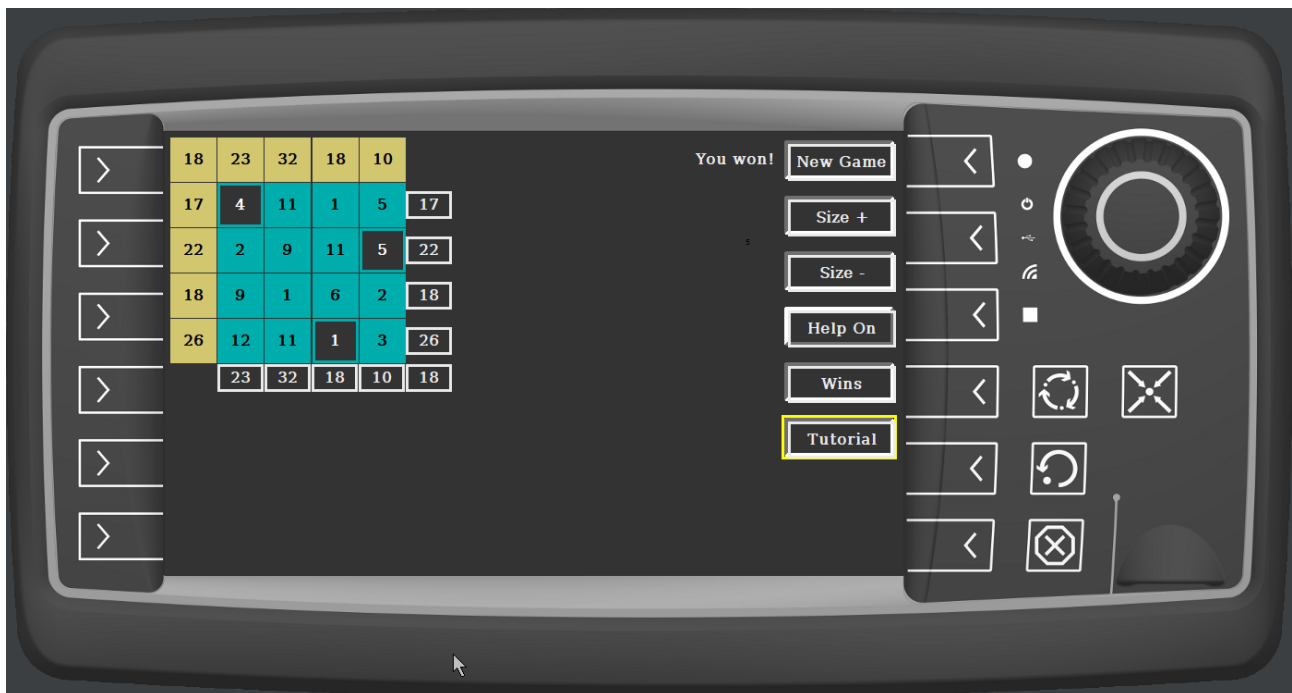

For the final installation in the OPUS game sample series finally a game that you actually might not know. The yellow numbers indicate the sums in the rows, columns and the diagonal. Each (turquoise) number can be selected or de-selected to be part of the corresponding row / column / diagonal.


If the sum is correct, the yellow number will light up. If all numbers are correct, the game is won. For users that would need the calculator project at the same time, the sums of the currently selected numbers can be shown (with the Help On button).

Tradeshow Dashboard project




This project is a ready-to-use dashboard for a trade show, complete with moving needles and blinking icons. There are 6 pages, with a hardware and a software programming information screen, a dynamic gauge to see the flexibility of our objects, a camera page and a multimedia player that can play back a video. The project works for all devices, with the main focus on the B-series.

Welcome project

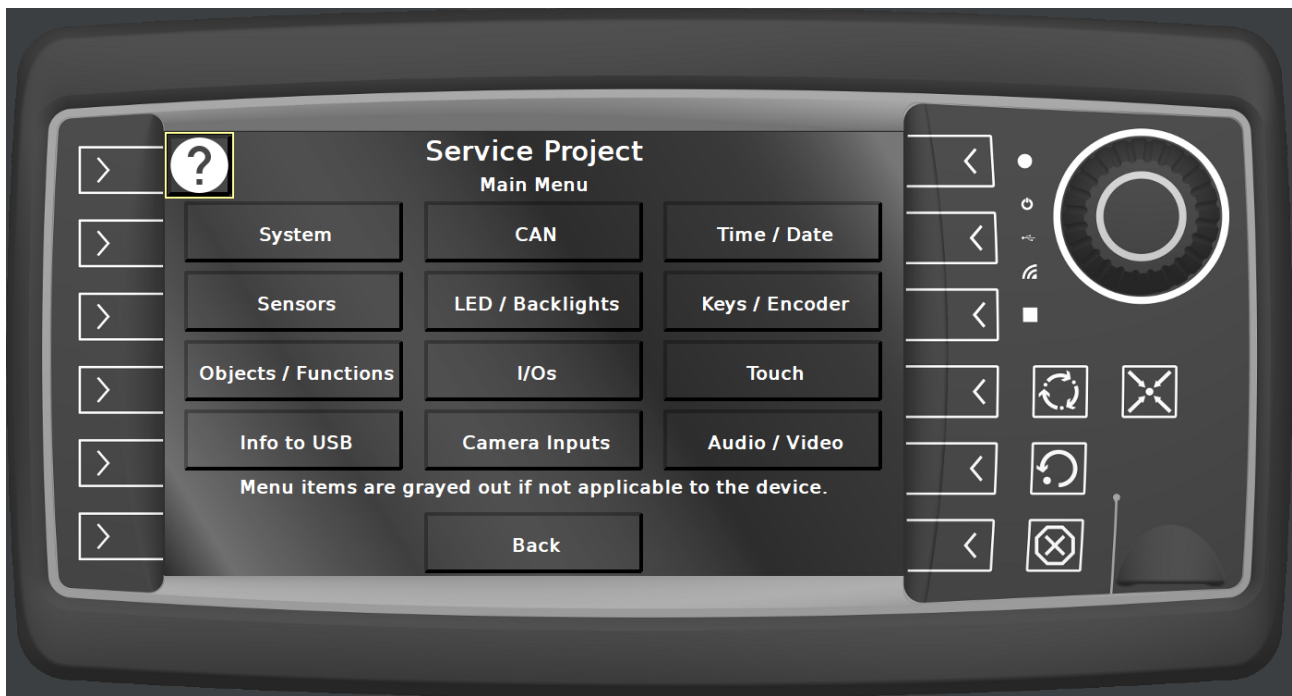

The [Welcome Project](#)⁷⁵⁹ is installed by default with each PClient on the devices. It contains updater settings and a service project which offers access to (almost) all functionalities of the device and the Projektor / PClient.


ISOBUS Ready Project

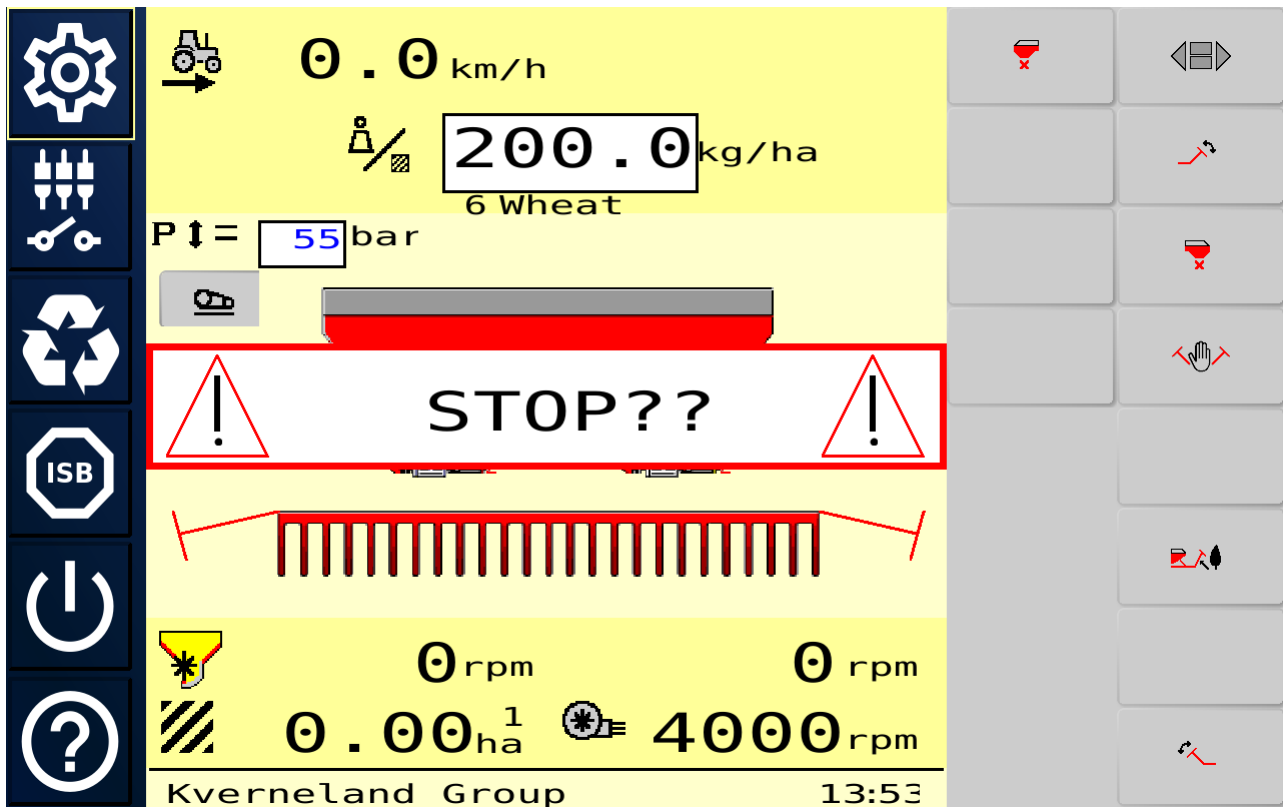


The [ISOBUS Ready Project](#)⁶⁵⁰ is installed by default on ISO devices.

User Sample projects


Users can also create their own sample projects as a starting point for new project. To create a sample project, select a project in the project tree and click the menu File -> Create Sample

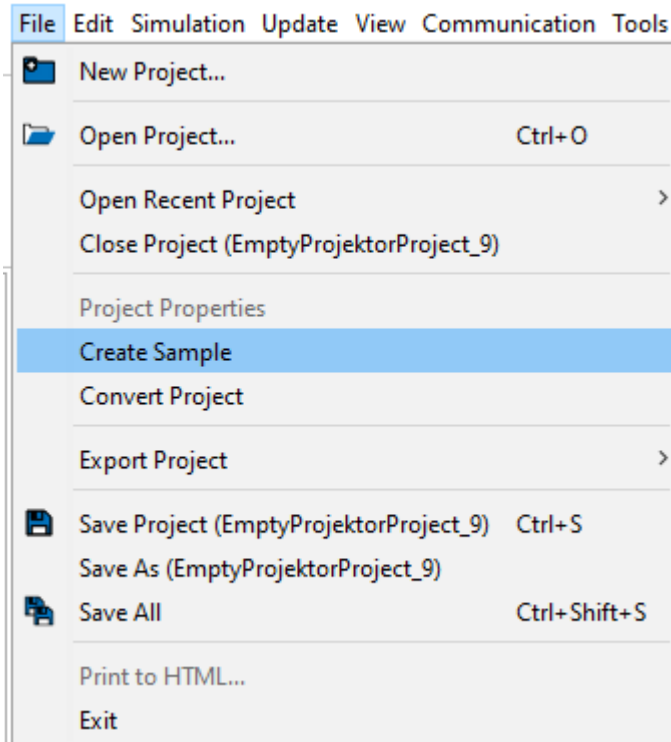


In the dialog, choose one of the sample project slots, give a name and, optionally, a description, and click **Create**.

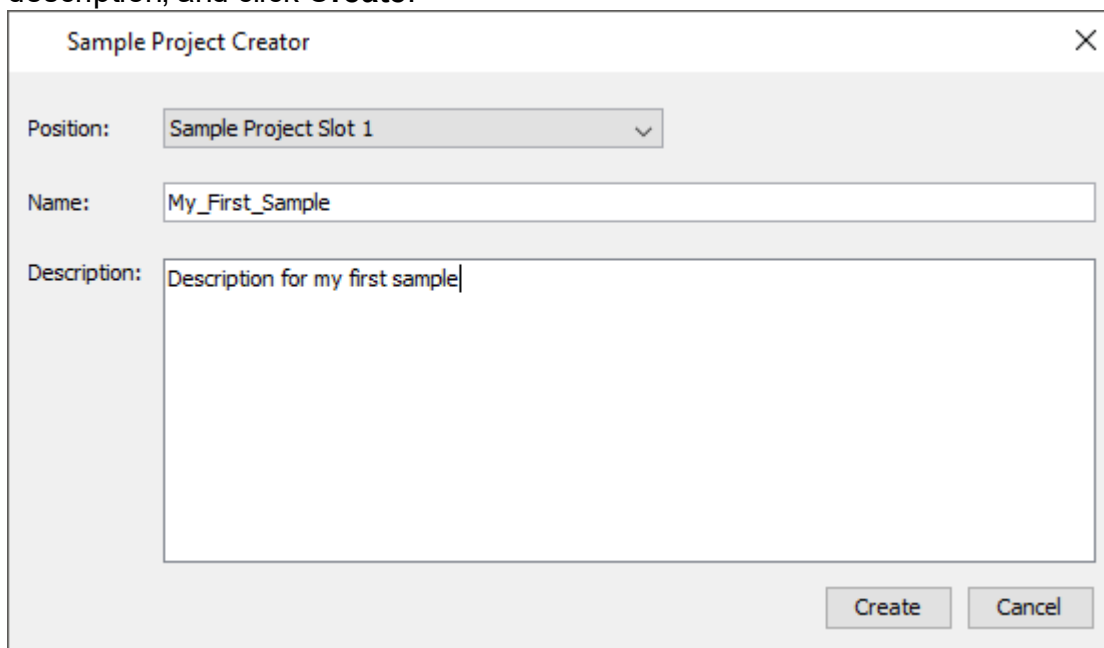

The creation of the sample project will be confirmed in a dialog.

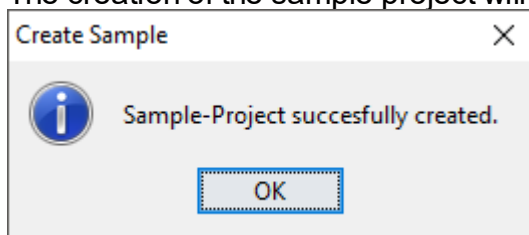


If a custom sample project slot is already used, the dialog will warn that the old sample project will be overwritten.

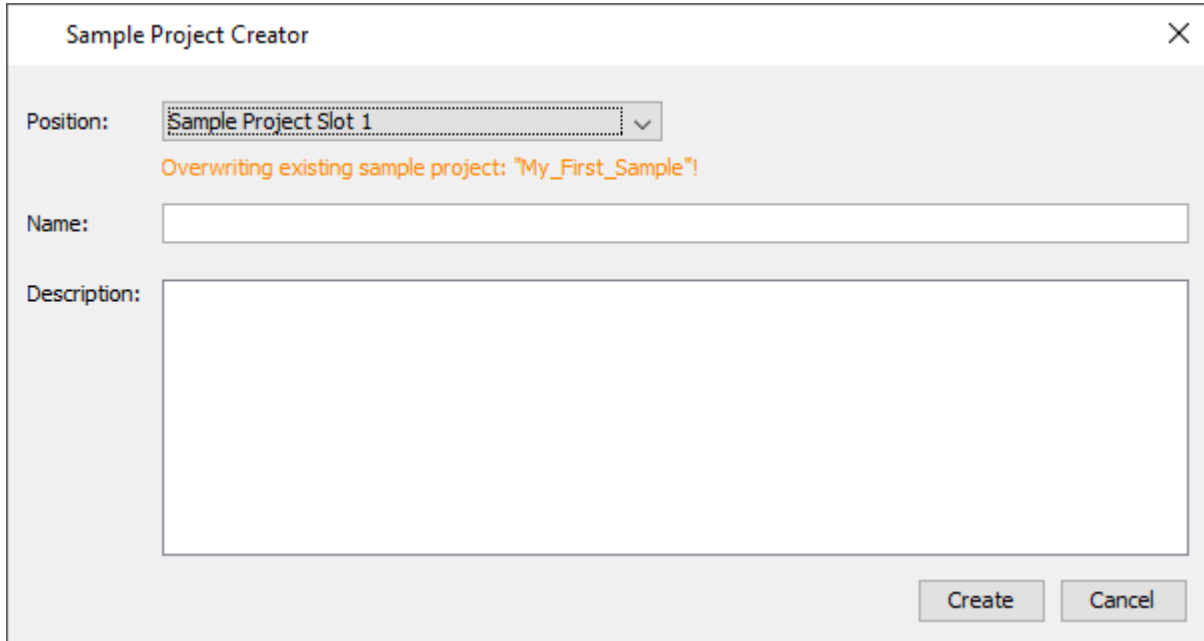

The **Sample Project Creator** dialog box is shown. It has a title bar with a close button (X). The main area contains three fields: **Position:** a dropdown menu showing "Sample Project Slot 1"; **Name:** an empty text input field; and **Description:** a large empty text area. Below the **Position:** dropdown, there is an orange warning message: "Overwriting existing sample project: 'My_First_Sample'!". At the bottom right, there are two buttons: **Create** and **Cancel**.

Now, a Custom folder is displayed in the new project dialog that contains the custom sample projects.

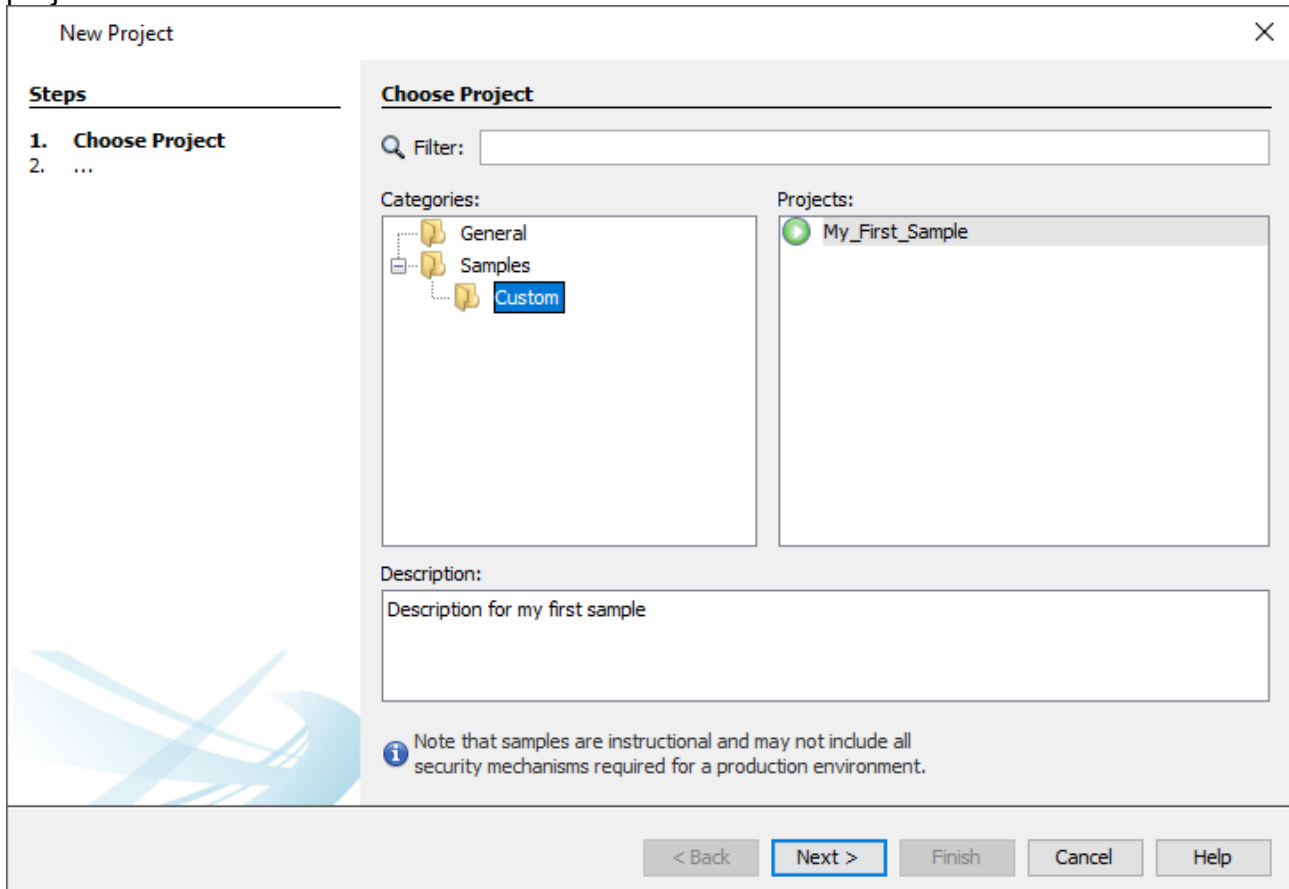


The **New Project** dialog box is shown. It has a title bar with a close button (X). The main area is divided into two panes. The left pane, titled **Steps**, shows a list of steps: **1. Choose Project** and **2. ...**. The right pane, titled **Choose Project**, contains a **Filter:** text input field. Below the filter, there are two sections: **Categories:** showing a tree view with **General**, **Samples**, and **Custom** (highlighted with a blue box); and **Projects:** showing a list of projects with **My_First_Sample** (highlighted with a green circle). Below these sections is a **Description:** text input field containing the text "Description for my first sample". At the bottom, there is a note with an information icon: "Note that samples are instructional and may not include all security mechanisms required for a production environment." At the bottom right, there are five buttons: **< Back**, **Next >** (highlighted with a blue border), **Finish**, **Cancel**, and **Help**.

Please note: Depending on the exact version of the program, it is possible that a backup of the project is made when a sample project is created. This backup is created because of technical reasons. It can be deleted.

3.16 Start Page

The new Start Page will show the different information in four tabs.

Welcome Tab

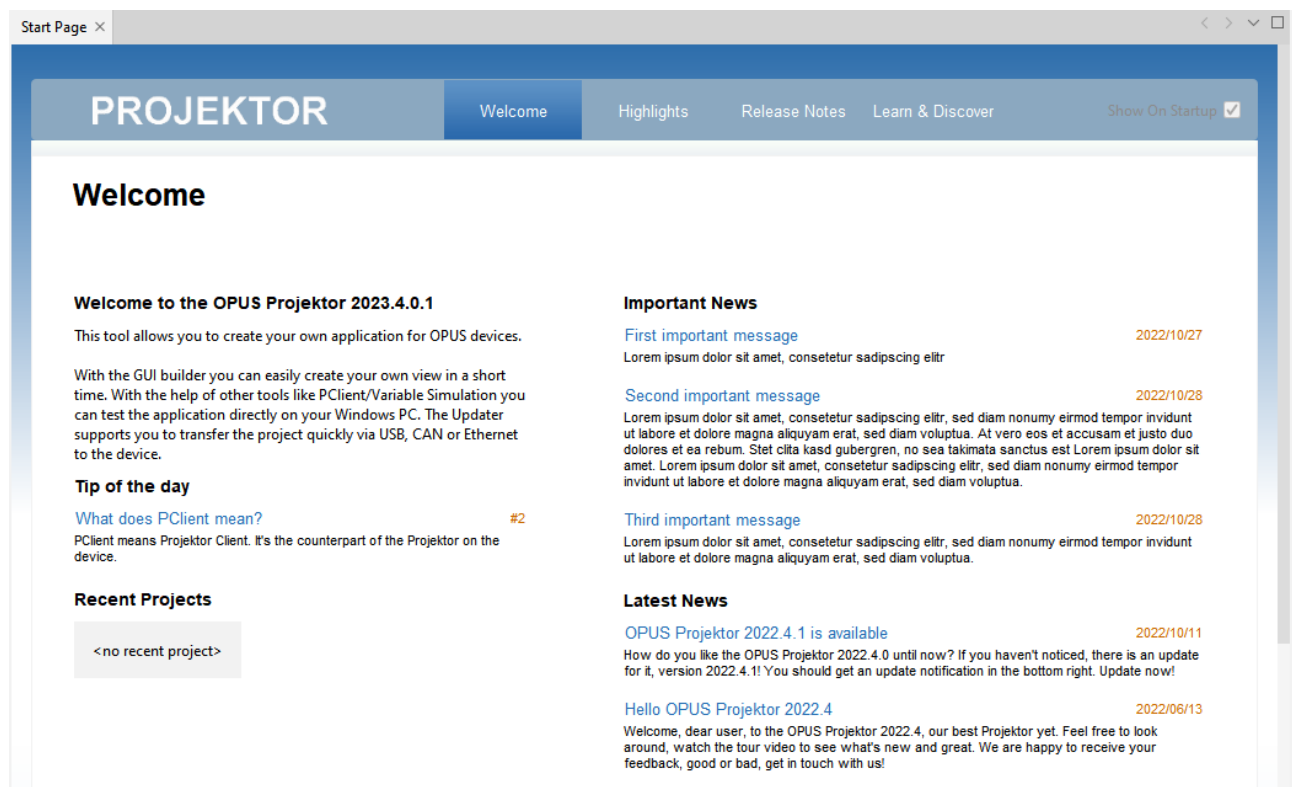


Important News


In the top of the right column you will see Important News. These are important messages from us to you (e.g. informing about very serious bugs or a new major version). These messages will also trigger a notification bubble and an icon in the lower right of the OPUS Projektor.



These messages are so important that we ask you to confirm them. Even if you close the bubble, the notification icon will still be there. If you click on it, you can see a preview of the message(s).

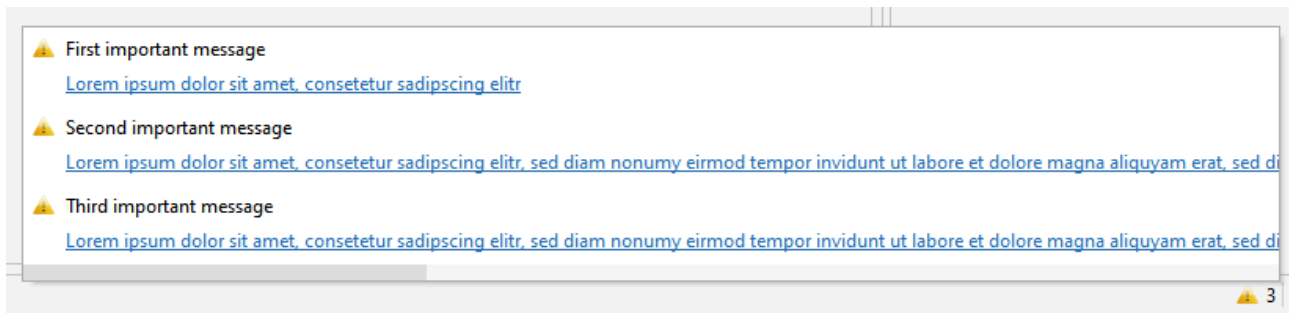

If you click on one of the messages, a popup with the full message will appear.

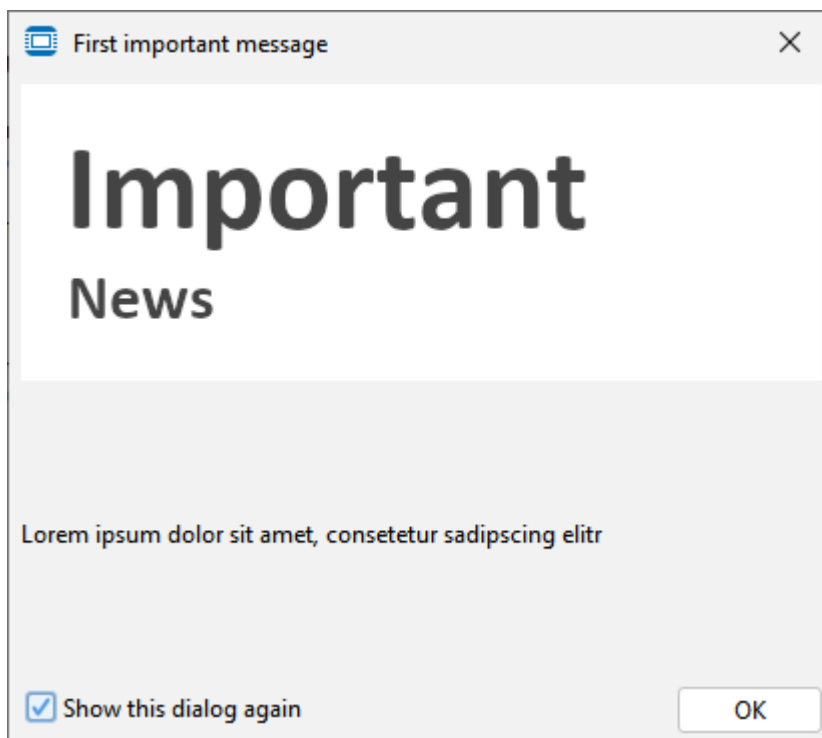

Click on the check box next to the text Show this dialog again and press OK to close the message. Only then the message will not appear again.

And, of course, please actually read the message before doing that and carefully consider its content.

Lastly, be sure that we will not misuse this system to spam you with advertisements or trivial things. This will only pop up if it's actually something important for the average OPUS Projektor user.

The news refresh every hour. If there are any problems reaching our server, a notification will be shown that there was an error loading the feed. Additionally, a reload button appears. At this point the news will not refresh automatically. Only when the feed can be loaded again after reload has been pressed, the automatic refresh will start again.

RSS Feed / Latest News

Below the important news you will find the RSS feed (Latest News) which will notify you of OPUS Projektor updates and other important information. Don't worry, we will not spam you. The feed refreshes every hour. If there are any problems reaching our server, a notification will be shown that there was an error loading the feed. Additionally, a reload button appears. At

this point the feed will not refresh automatically. Only when the feed can be loaded again after reload has been pressed, the automatic refresh will start again.

Below the RSS feed, a Tip of the day feed is shown. Here you can find a random tip regarding the OPUS Projektor and the PClient and our devices. Some might be trivial to you, as an expert, but some will surely give you a tiny bit of new and helpful information.

The feed refreshes every hour. If there are any problems reaching our server, a notification will be shown that there was an error loading the feed. Additionally, a reload button appears. At this point the feed will not refresh automatically. Only when the feed can be loaded again after reload has been pressed, the automatic refresh will start again.

Tip of the day

Here you will find a little snippet of information that refreshes each day. It might be something you've known for years, but it might also surprise you and give you a small piece of new information regarding the OPUS Projektor.

Recent projects

Here you will see the last projects that were opened with the program. You can clear this list in the menu Tools -> Options and then the tab Projects.

Highlights

In this tab the most important new features of this version are presented.

Release Notes

In this tab the release notes of this version of the program are shown.

Learn & Discover

In this tabs you can find links to different documentation offerings.

3.17 Symbol Library

We offer three sets of symbols in the OPUS Projektor:

[2425 ISO 7000 symbols](#)

[4391 Material Design symbols](#)

[1433 Remix symbols](#)

Material Design Symbols

These symbols can be used for free.

The files were modified from its original state to be used with the blend color feature.

The original files are available [here](#).

The files are distributed with the [Apache license 2.0](#) and the [SIL Open Font license](#).


Remix symbols


These symbols can be used for free.

The files were modified from its original state to be used with the blend color feature.
The original files are available [here](#).
The files are distributed with the [Apache license 2.0](#).

ISO 7000 Symbols

We are offering a collection of over 2400 symbols from the ISO 7000 catalog to be used within projects.

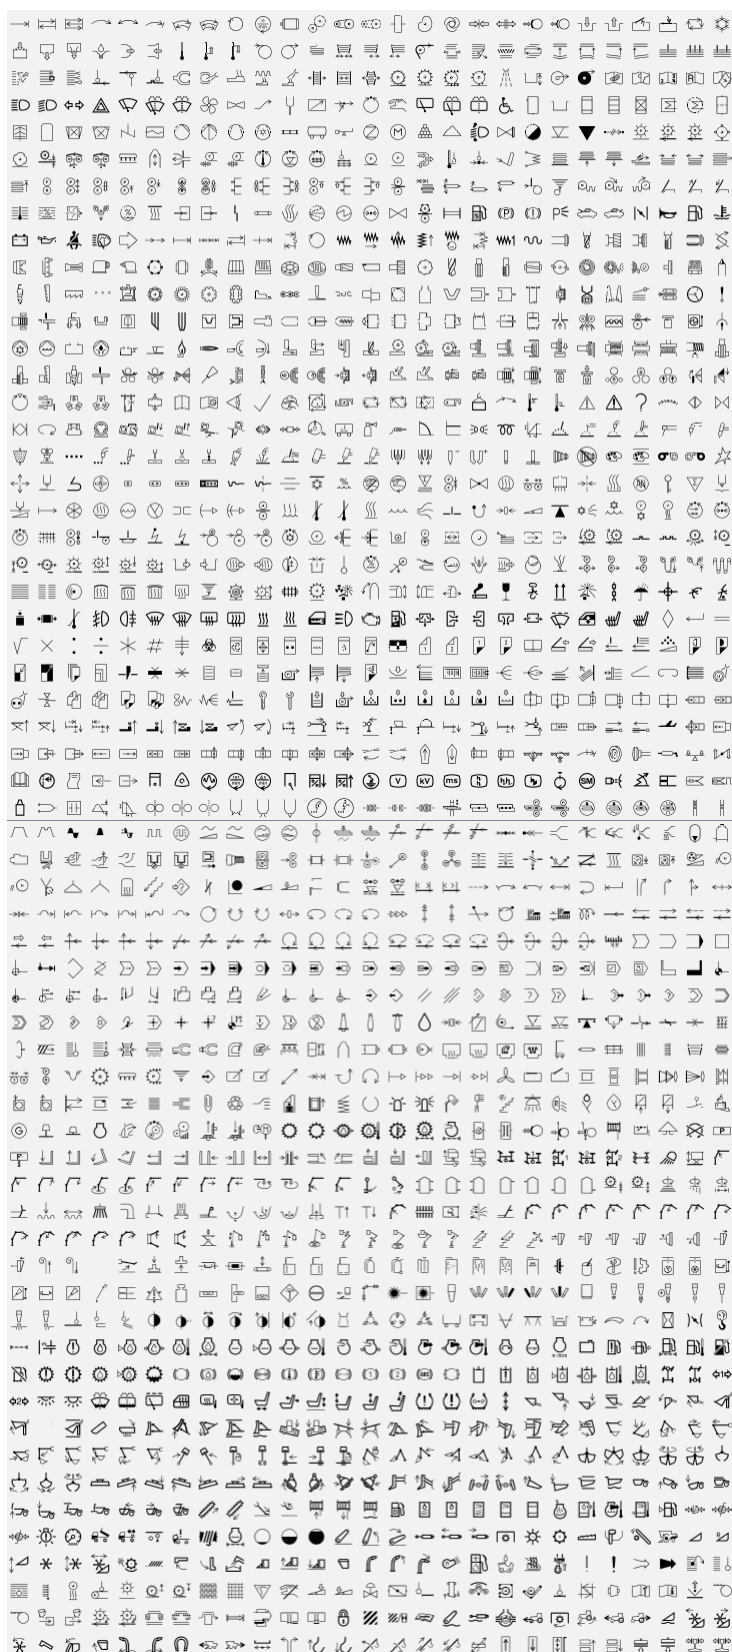

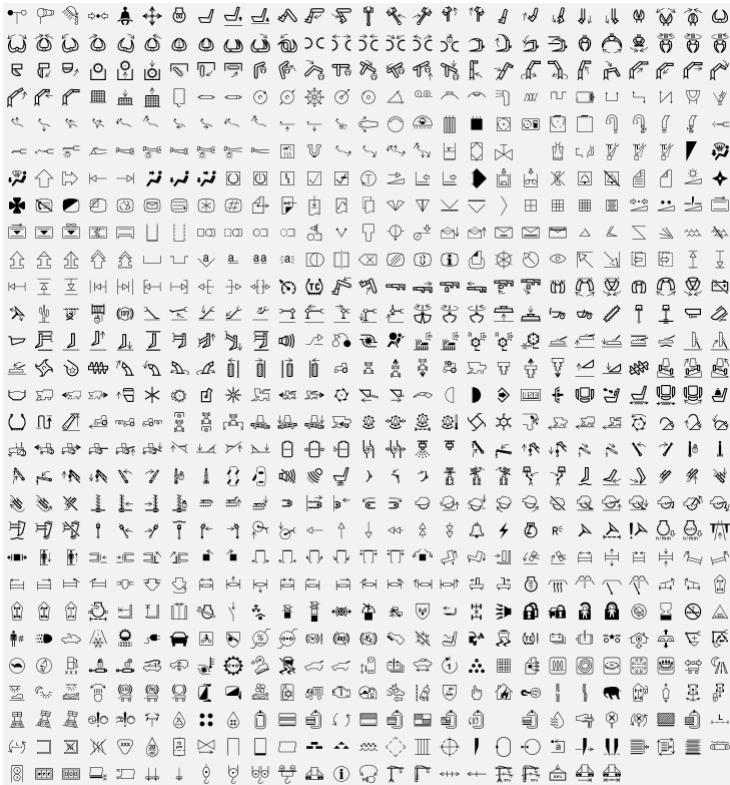


You are not allowed to use these symbols outside of projects for our devices!


The full symbols package has to be purchased. Please contact your vendor for more information.

General


You can access the symbols by opening the Symbol Library toolbar on the right side (in the default view).

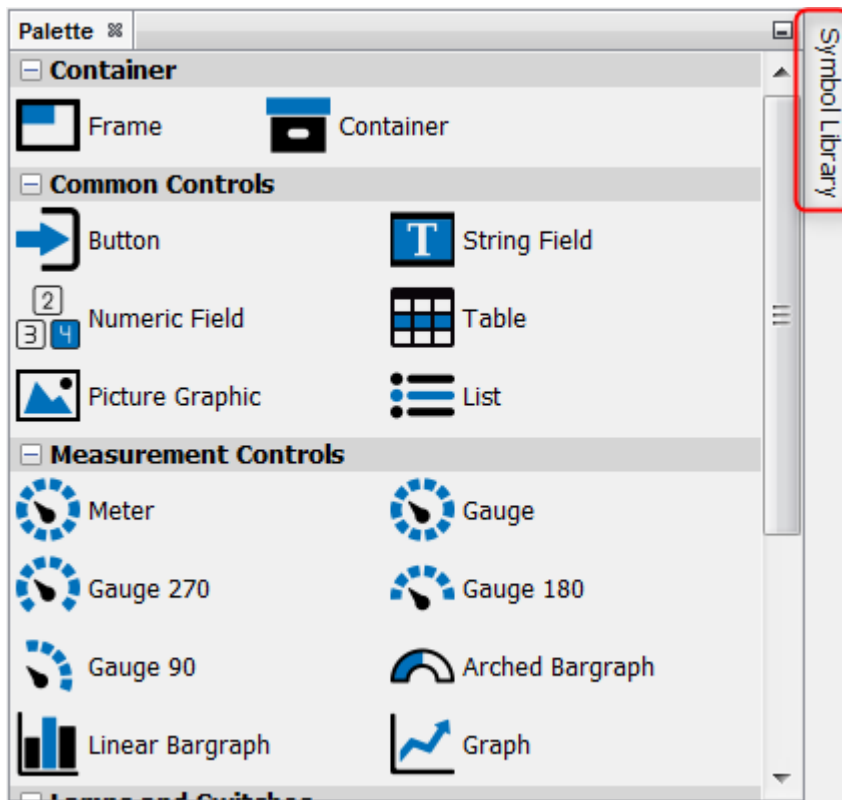


You can also (re-)open the window by clicking the menu Window -> Symbol

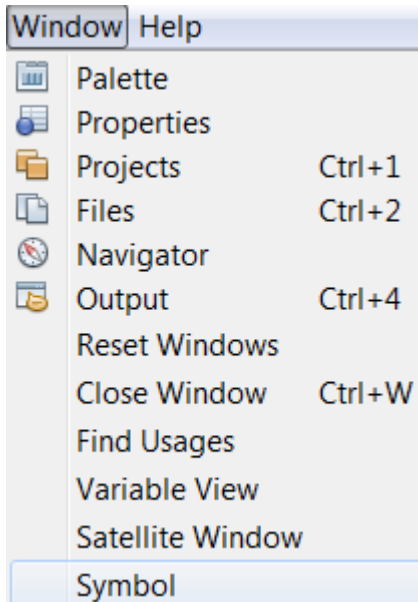

 When the library is opened for the first time after the OPUS Projektor was started, it takes a while to load the preview images.
You will see a loading pop-up

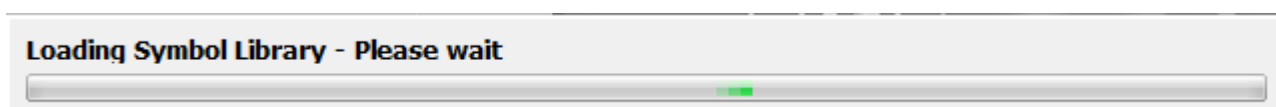

 
and you can see the loading progress in the lower right corner of the program.

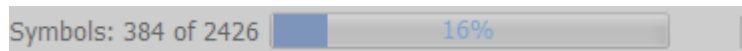


Once the previews are loaded, they are instantly available as long as the program stays open. Changing the zoom level requires a reloading of the preview symbols.

UI elements

In the bottom of the symbol library window there are some UI elements

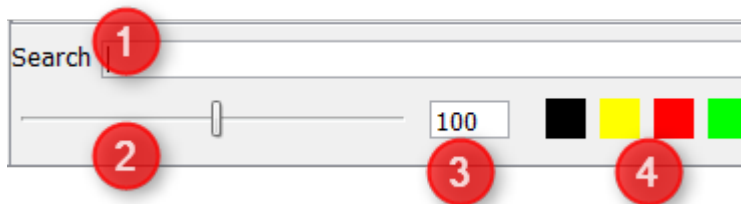

1 - Search bar. Here you can enter search words to filter the symbols. The symbols will be filtered live and all images containing the words will be shown in a new tab called Search. The search will go through all available symbol sets.

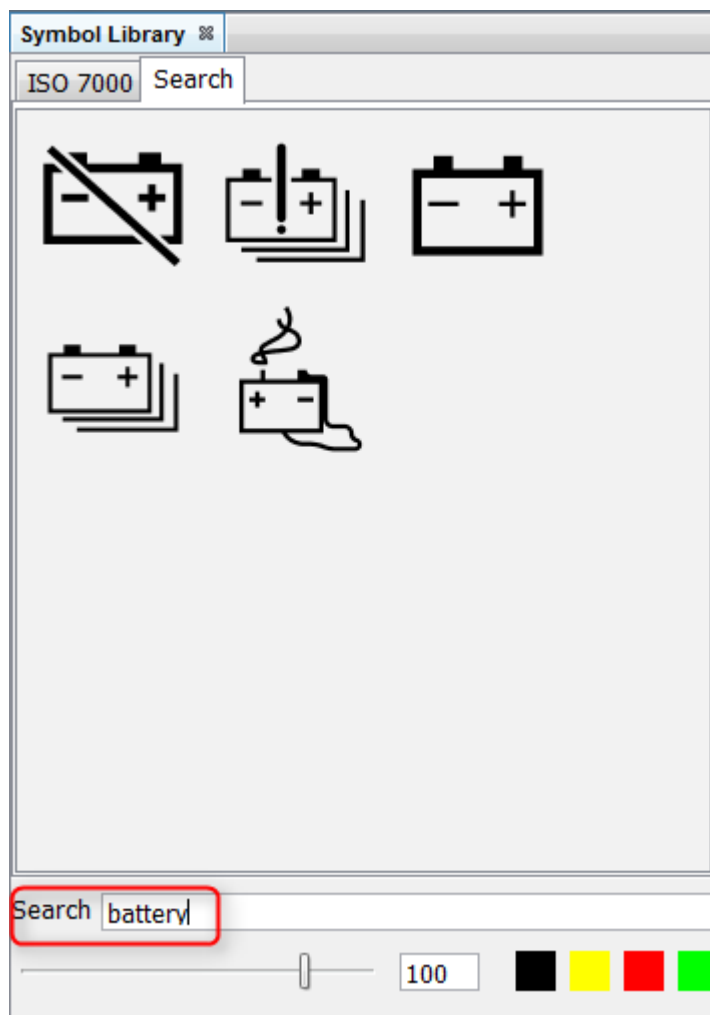

2 - Zoom slider. Here you can change the zoom level of the preview images in the symbol library window. Sliding to the left shows more smaller preview images, sliding to the right shows less larger preview images.

3 - Image size. Here you can set the size of the image in pixels, with which the image will be created. The image will be square, so the size will be X times X. This is only true if the image is not used within another object, e.g. as a background image. Then the size of the parent object determines the size of the image.


4 - Blend colors. Here you can set 4 different blend colors for the creation of the images in your project. The first color is the color of the object in most cases. See [here](#)¹⁵⁶ for the use of the other colors.

Using the symbols


You put the symbols into your project with [Drag & Drop](#)⁴⁷. This works both on the scene as well as on the project tree.

Depending on where you drop the image, you will get a context menu with different options how to use the image, e.g.


Frame:

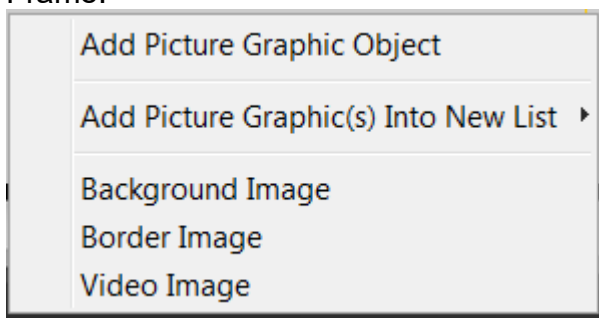

Meters & Gauges:

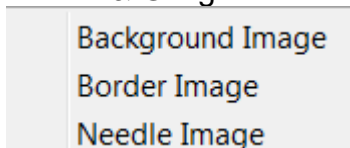

Buttons:

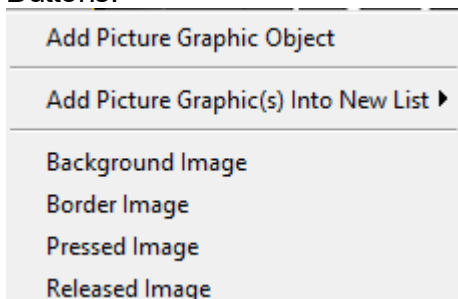

Add Picture Graphic Object - This will create a new Picture Graphic Object with the symbol image as the Image To Display

Background Image - This will use the image as the background image of the object that it was dropped on

Border Image - This will use the image as the border image of the object that it was dropped on

Video Image - This will use the image as the placeholder image for a video frame

Needle Image - This will use the image as the needle image of the object that it was dropped on


Pressed Image - This will use the image as the pressed state image of the button that it was dropped on

Released Image - This will use the image as the released state image of the button that it was dropped on


Add Picture Graphic(s) Into New List

When dropping a symbol image on a frame or container, the option Add Picture Graphic(s) Into New List is offered.

Opening the sub context menu shows 3 different options:

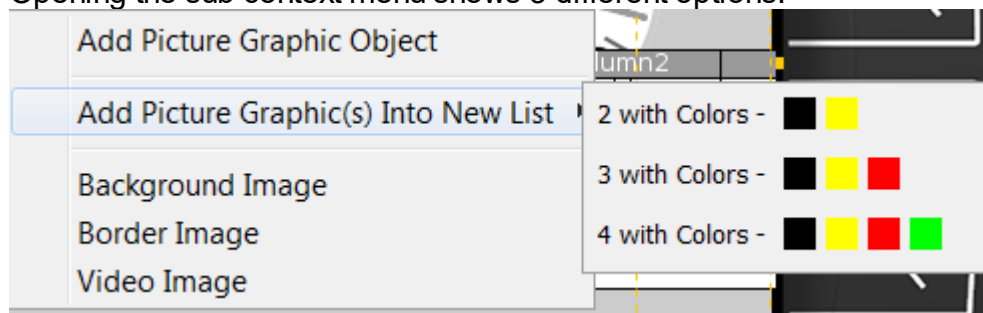

These options will create a new [list object](#)⁵¹⁷ with 2 to 4 instances of the symbol with up to 4 different colors. The colors can be set in the UI interface of the symbol library window by clicking on one of the 4 color fields and choosing a color.

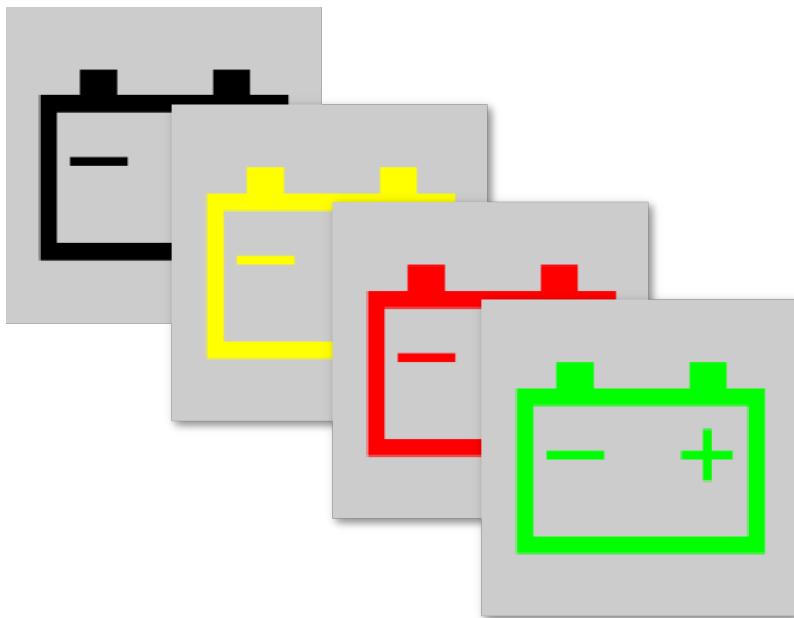


Please note that the blend colors are project-independent and will be saved and kept even after the program was closed.

You can NOT change the color(s) of symbol images at runtime!

Favourites

Symbol images can be set to favourites to be found easier.

This can be done by right-clicking on a symbol image and choosing Add To Favourites in the context menu:

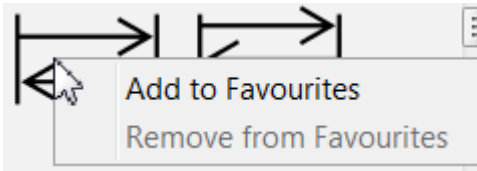

This will create a new tab Favourites where this and all other images set to favourites are displayed.

Images can also be removed from this tab by right-clicking and choosing Remove from Favourites.

Please note that the favourites are project-independent and will be saved and kept even after the program was closed.

3.18 Undo/Redo

Undo/Redo can be triggered in several ways:

- Keyboard shortcuts
 - CTRL-Z (undo)
 - CTRL-Y (redo)


The OPUS Projektor needs to have focus for this to work. It doesn't matter which component in the program has focus. The step is performed in the currently active project.

- Toolbar





Press the arrow to the left to undo, press the arrow to the right to redo. Undo is only enabled when at least one action has been performed. Redo is only enabled when an undo step is selected.

- Menu Edit -> Undo/Redo

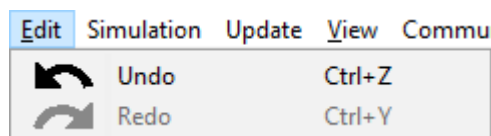

- Undo/Redo list in Undo/Redo window

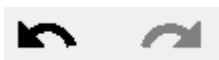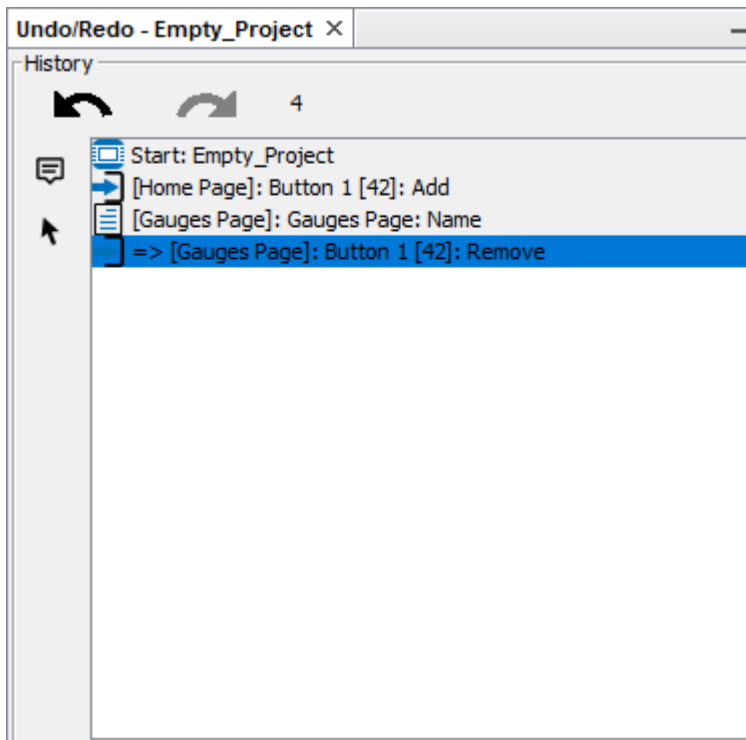 

The undo/redo buttons are only enabled if actions were done (undo) and undo steps were selected (redo).



The number next to the undo/redo buttons show how many steps were recorded since starting the program / opening the project.



This toggle button enables/disables tooltips of undo entries in the undo history list



This toggle button enables/disables mouse navigation in the undo history list

The undo history list always starts with "Start: <project name>".

All modifications in the project create an entry in this list. If you happen to find an action that does NOT create an entry even though it should, let us know.

The list is currently limited to 1000 entries. If the 1001st action is made, the first entry in the list will be deleted and so on.

The following actions create an entry in the undo history:

- Graphical Object changes (all objects in the project tree) in the category:
 - Pages (MiniView-Pages)
 - Alarms
 - VKBs
 - All Property/Event and Move/Resize changes
- Communication Object changes (all objects in the project tree) in the category
 - Communication (Add/Remove/Update Communication objects)
 - All Property/Event changes
- JS changes (all JS files in the project tree) in the category
 - JavaScripts (Add/Remove/Rename/Update JS files)

- Project-Properties/Project-Event changes
- All dialog changes which modify the project
 - Simulation-Settings
 - Variable-Manager
 - Terminal and Owner(ECUs) Configuration...
 - Port Configuration
 - Configure Mappings Dialog
 - CAN-Freestyle: Transmit-Sequences
 - CAN-Freestyle: CAN-ID Masks
 - J1939: DM1/DM2 Settings
 - Import Variables
 - Import DBC-File
 - DataType definitions
 - Process Configuration
- Current/Default Language/Unit changes
- Hide/Show object changes
- Day/Night Mode changes

Each list entry contains 3 elements:

1. Icon
2. Presentation Name
3. Tooltip

Icon

- For graphical objects the icon of the object is used which was updated.
- For communication objects the icon of the appropriate object is used
- For JS changes the JS icon is used.
- For Project-Property changes, the project icon is used.
- Simulation-Settings the PClient icon is used
- For Day/Night Mode changes the Day/Night Icon is used
- For CAN-Mapping changes the Mapping Icon is used.
- For Protocol changes the Network icon is used.
- All other changes uses the Project icon

Presentation Name

- Graphical Objects
 - Property-Changes: [<Page-Name>]: <Object-Name>: <Property-Name>
 - Event-Changes: [<Page-Name>]: <Object-Name>: <Event-Name>
 - Move-Changes: [<Page-Name>]: <Object-Name>: Move
 - Resize-Changes: [<Page-Name>]: <Object-Name>: Resize
 - Add/Remove: : [<Page-Name>]: <Object-Name>: Add/Remove
- Communication Objects
 - Property-Changes: [Project]: <Object-Name>: <Property-Name>
 - Event-Changes: [Project]: <Object-Name>: <Event-Name>
- JS-Objects
 - Add: [JavaScripts]: <JS-FileName>: Add
 - Remove: [JavaScripts]: <JS-FileName>: Remove

- Rename: [JavaScripts]: <New-JS-FileName>: Rename
- Dialog changes
 - Update: [Project]: <Dialog-Name>: updated

Tooltip

- Graphical Objects
 - Property/Event changes: Old-Value and New-Value is shown
 - Move changes: Old-Location and New-Location is shown
 - Resize changes: Old-Location/Size and New-Location/Size is shown
- Communication Objects
 - Property/Event changes: Old-Value and New-Value is shown
- JS-Objects
 - Rename: Old-Name and New-Name is shown
- Dialog changes
 - Common: No specific informations
 - DBC-Import: Import-Count of Variables/CAN-Mappings/ECUs is shown
 - Variable-Import: Variable-Count is shown + Variables-Names (only 10)

Note: The Time-Stamp (TS) is always shown in the tooltip for all Undo-entries.

JavaScript Undo-Edits

Like mentioned before, all JS changes on the File System can be reverted by Undo/Redo.

Each JS (and each version) will be saved in folder <Project-Folder>/tempScripts

The folder tempScripts will be deleted when the project is closed.

The JavaScriptHandler creates MD5 sums of all JS-Files and saves each version in tempScripts folder (the syntax is: <js_name>.js_<md5>).

It doesn't matter if a JS file is added/removed or updated in the project or on the FS, the JavaScriptHandler tracks all changes and creates the appropriate Undo-Edits in the UndoRedoHandler.

The JS files will be scanned each second on the FS for updates.

If a JS file is opened in JavaScript-Editor, the editor will be closed if the js file gets deleted by the UndoRedoHandler. (This can take a few seconds ~2s)

If the UndoRedoHandler restores an older JS file version, and the JavaScript-Editor of the restored file is opened, it takes at least 2 seconds until the editor is refreshed.

Note: If a JavaScript-Editor has focus and Ctrl+Z or Ctrl+Y is pressed, the UndoRedoHandler of the JavaScript-Editor will be called (not the OPUS Projektor-UndoRedoHandler)

Graphical-Object Undo-Edits

- Pages/Alarms and VKBs

Creating/Deleting a Page/MiniViewPage/Alarm/VKB creates an Undo-Edit.

If the UndoRedoHandler deletes a Page/Alarm or VKB the appropriate TopComponent-Window will be closed as well.

If the UndoRedoHandler restores a Page/Alarm or VKB the TopComponent-Window won't be opened again.

- Other objects (Frames, String Fields, Buttons, Softkeys,...)

If the UndoRedoHandler adds/removes or updates one of these objects, the appropriate page will be opened and the object will be selected on the scene.

=> If more than one object is affected all objects will be selected

- Moving/Resizing Objects on the scene

If one or more objects are moved or resized on the scene, only one undo edit will be created
 => The undo edit will be created when mouse release event occurred.
 => The edit is directly created when the first update occurs, but all following updates/undo edits will be merged into the first undo edit.

Communication-Object Undo-Edits

If Undo/Redo for Communication-Objects is performed, the appropriate change will be undone/redone but the engaged objects won't be selected in project tree or variable view.

Automatic Merge

The UndoRedoHandler has an automatic merge mechanism of undo entries. If several undo entries are triggered within 500ms, these entries will be merged to one entry. This mechanism is used e.g. if the the property Dependency of a String Field is updated from None to Language. All Language dependent properties(Preview Value, Font, ...) are changed now (from Single Value to a Value-Map) and these changes will be merged. If that wasn't done, the user would be able undo each single Property-Change-Edit, which would lead to an inconsistency.

The same mechanism is used if e.g. the data type of a Variable is changed. Consequently, all data type dependent properties are updated (Min-,Max- and Default-Value) and will be merged to one undo entry.


Another example for the automatic merge is creating a VKB. During the creation a lot of objects will be created. With the automatic merge the whole creation process will be merged to one undo entry.

Popup Undo/Redo Window

If the keyboard shortcut CTRL+X or CTRL+Y is pressed and the Undo/Redo Window is not opened, it will open automatically to show the last Undo/Redo entries.

3.19 Variable View


The variable view is meant for an overview of all variables in a project, quickly adding a variable to the variable list and assigning a variable via drag and drop to a user interface object.

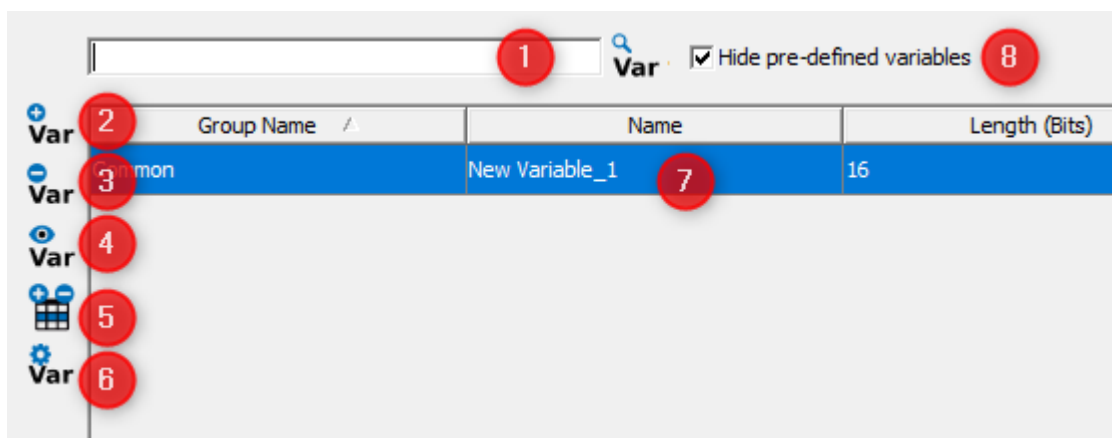

- | | |
|---|---|
| 1 | Full live search field. You can search for "Group Name", "Name", "Index" and "SubIndex". Results will be filtered live as you type |
| 2 | Add a variable quickly. If you press this button a variable is added with a default name with increasing name index and the default owner is "PCClient" |

1	Full live search field. You can search for "Group Name", "Name", "Index" and "SubIndex". Results will be filtered live as you type
3	Delete a variable. First you have to choose a variable or more variables and then delete them. Pre-defined (system) variables ¹⁸⁶ can not be deleted.
4	Find usage. Select a variable and press this button. The search ¹¹⁵ opens and shows the connected GUI elements and CAN message mappings.
5	Additional columns. Here you can choose to show more than the default columns.
6	Variable View Config.
7	Main list. If you click on the header of the columns you set the order of the entries. Please note that you can only sort by one column.
8	Hide / Show pre-defined variables.

If you have selected a variable within the list and click right you will get the following context menu.

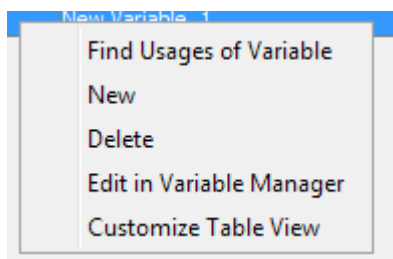

New	The same like you press the add variable icon
Delete	The same like the delete icon
Edit in Variable Manager	Here is the quick jump to the variable manager where you can do more detailed settings for the variable
Find Usages of Variable	Select a variable and search for the connected GUI Elements and CAN Mappings.
Customize Table View	Here you can choose to show more than the default columns.

Variable View Config

The dialog box 'Variable View Config' contains the following elements:

- Variable name prefix:** A text field containing 'New Variable' (annotated with a red circle 1).
- Reset Variable count:** A button located to the right of the text field.
- Fill Index gaps:** A checked checkbox (annotated with a red circle 2).
- Fill SubIndex gaps:** A checked checkbox (annotated with a red circle 3).
- SubIndex start from:** A text field containing '0x1'.
- Enable variable tooltip:** A checked checkbox (annotated with a red circle 4).
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

The variable view configuration is mainly for setting up the quick adding of variables. You can define a prefix (1) which is filled up with a number. This is causing names like "New Variable1", "New Variable2" and so on. The number count can be reset by pressing the button "Reset Variable Count". This reset has nothing to do with the variable id or other indexes. Within the next section you can define how to deal with the index. Fill Index gaps (2) enables the creation of variables with free indices between already existing indices. Fill SubIndex gaps (3) enables the creation of variables with free sub indices between already existing sub indices. for a given index. SubIndex start from: sets the starting sub index when a variable with a new index is created. Please note that the index and subindex is needed by the OPUS Projektor and the runtime on the display, but with these default settings you do not really need to take care about this. (4) With this check box it is possible to enable/disable the tooltip of the variables in the Variable View.


Drag and drop variables

All variables can be selected and dragged and dropped onto the designer area and appropriate objects in the project tree. Drag and drop of multiple variables is not supported. Read more about Drag and Drop in the chapter [Drag and Drop](#)⁴⁷.

3.20 Z-Order

Objects have a certain order in each page.

The order is represented by the order in the project tree:

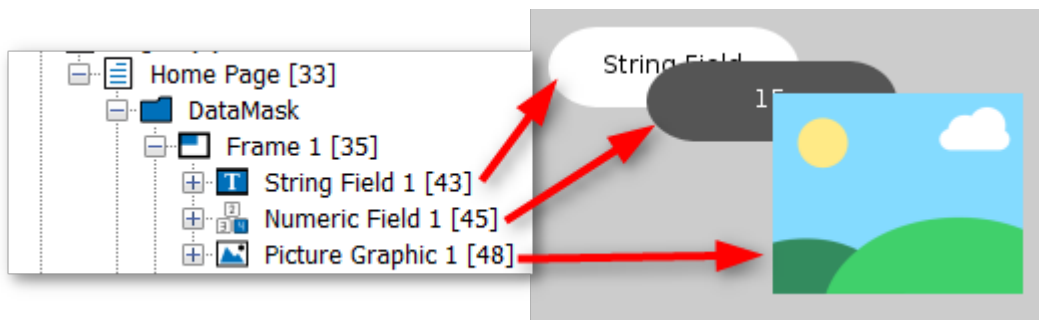

The bottom of a level in the project tree represents the foreground, the top represents the background.

Newly created objects are always put at the bottom of the project tree / in the foreground of the scene.

The Z-Order can be changed in several ways:

1. By right-clicking the object in the project tree or in the scene and choosing the category Z-Order.

Then the object can be set


- one step to the front (Level Up)
- one step to the back (Level Down)
- into the background (Bring To Back)
- into the foreground (Bring To Front)

- 2.

By using the Level Down  and Level Up  buttons in the page editor.

3.

By dragging and dropping an object in the project tree.

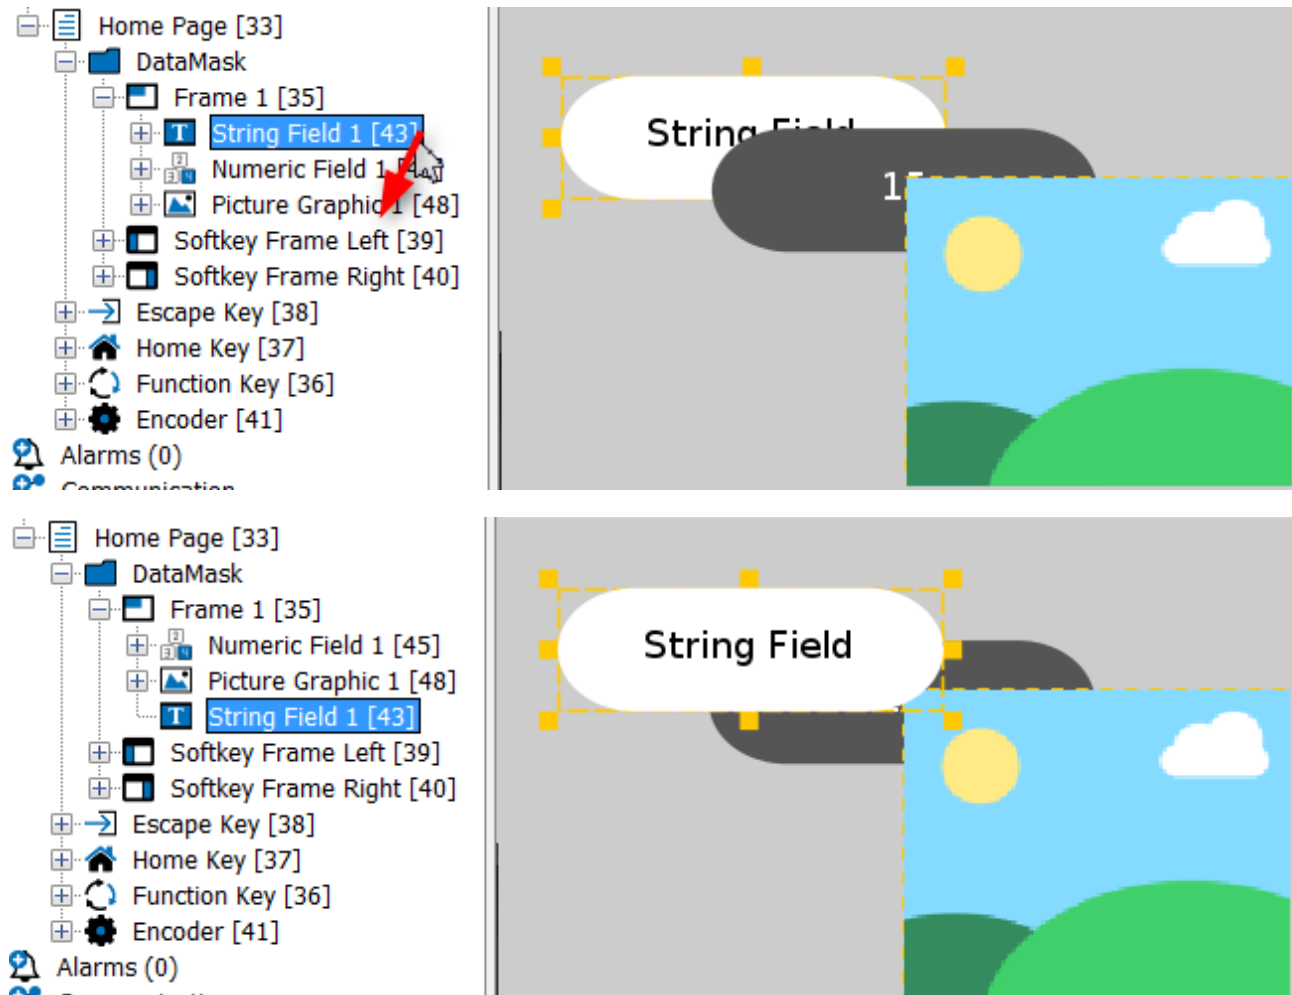

The Z-Order in a page also influences the order that input objects are selected with the encoder.

There is a property called "Roll Over" that can be accessed with JavaScript. If set to true for input objects like Numeric Fields, turning the encoder beyond the absolute value limit will roll the value over to the absolute minimum value. For frames, it will switch from the "last" object on the page back to the first one.

Variables

4 Variables

The main approach followed in the OPUS Projektor is to create pages and the navigation between them which is a more static definition.

The dynamics come in with variables changing their values. Other tools use the term "signal" instead of "variable" to describe the same thing. A CANopen "object" also describes what we call a "variable" here. The same is true for J1939 "Suspect Parameter Numbers (SPNs)".

This page provides an overview of the general concept behind the variables.

There are follow-up pages explaining the menus and dialogs to create and manage [variables](#) ¹⁷² and [variables](#) ¹⁷⁷.

Owner Concept

Every variable in the GUI designer has to have an owner assigned. The owner is the only one controlling the value of the variable.

If somebody else tries to write the value of the variable this is considered a write request which is forwarded to the owner of the variable.

Only if the owner confirms the new value by providing an update of the variable it is considered changed.

If the variable is expected to be frequently updated by the owner e.g. via CAN bus message then they can also be considered invalid if the update does not arrive in time.

Types of Owners

Generally there are two different types of owners:

- Remote ECUs connected via CAN bus
- Other programs/processes running on the display.

Examples of the second type are "Hardware Daemon" providing all of the hardware related predefined variables and "UD4" used for updates of the GUI definition on the display.

If considering to add your own process to communicate with PClient please contact our support team and expect to include some C++ libraries for the communication between the two in your program.

PClient as Owner

If PClient itself is the owner of a variable generally the same rules apply as for other owners. PClient has no built-in knowledge about which values of a variable are acceptable and which are not - except for the absolute minimum and maximum values. Therefore PClient basically accepts and confirms all write requests to its variables. Since PClient is active as long as the GUI is shown, PClient variables are valid if they ever got a valid value.

Which Owner should be assigned to a variable?


Generally the idea is to assign the variable to the owner knowing the system's limits and measuring its state. This means that e.g. engine coolant temperature should be owned by engine ECU.

On the other hand there may be some setpoints and GUI internal variables which should be owned by PClient.

A decision has to be made if a variable has to be considered a measured value as well as a setpoint.

Assume engine speed is a measured value coming from engine ECU but at the same time the operator can set a new desired engine speed by applying a new value to the engine speed variable.

Then there are (at least) two different sources for new values of the same variable. If engine ECU is the owner of engine speed in this example, then the following will happen:

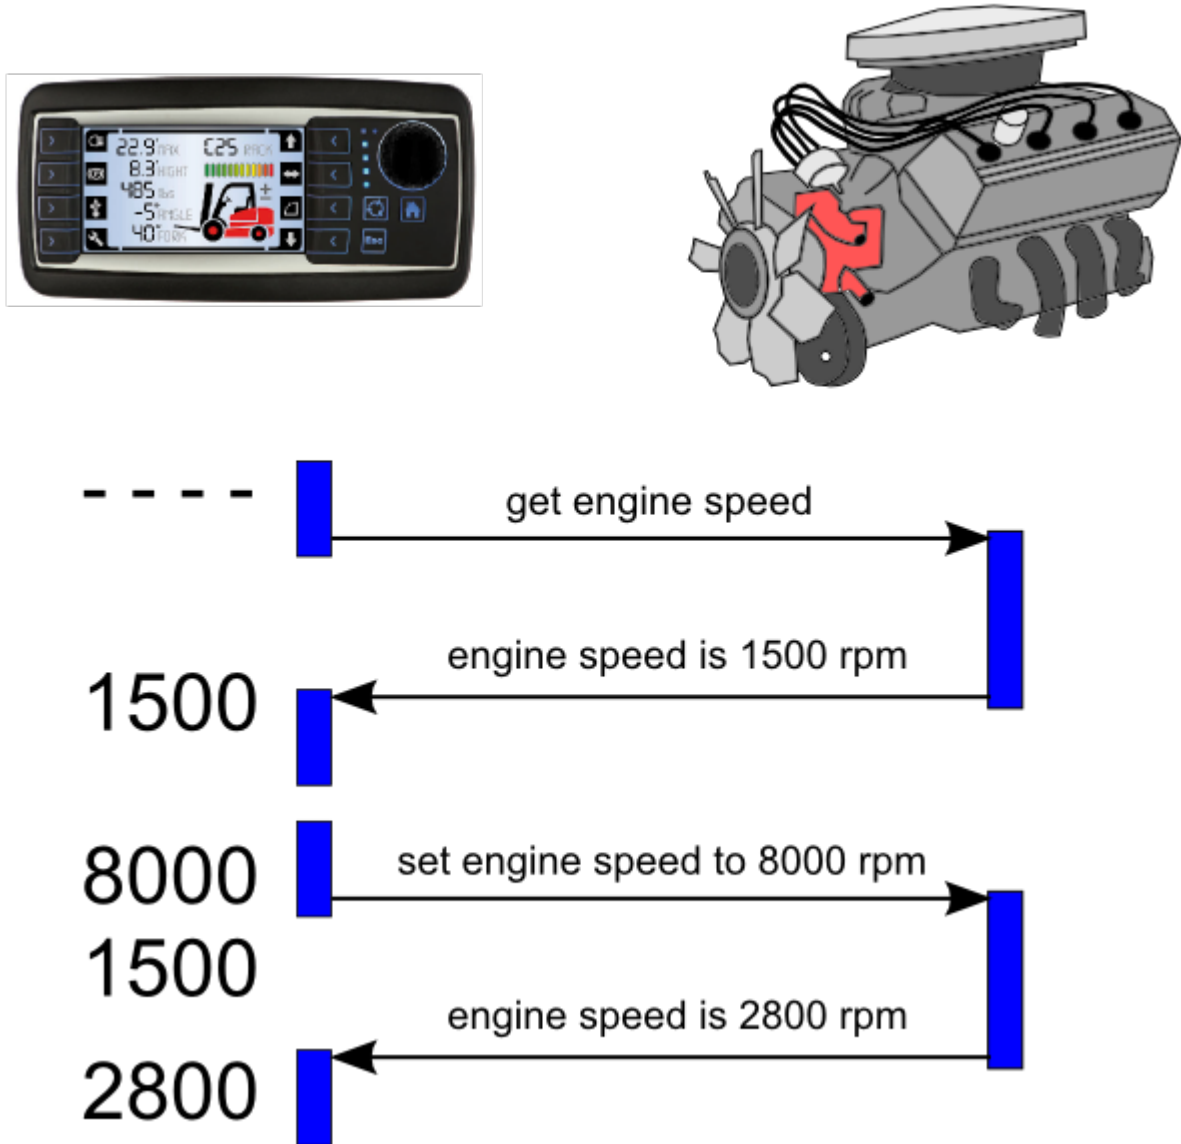

One can see three effects here:

1. Typically the value is invalid until the owner provides the first value - there is an option though to avoid that.
2. After providing the new setpoint the value shown will switch back to the last value provided by the owner.
3. Since the owner is in control it may limit the value provided in the write request to something reasonable in current conditions.

If the display should e.g. forward the engine speed to another bus than the one where engine ECU is connected then it will only forward values confirmed by the owner.

If flickering back to last known value is not acceptable and the GUI can make sure that all settings made are valid then PClient could become the owner which would mean that any value of the variable is valid and variable will stay valid at any point of time. If display should forward the value owned by PClient to different busses it will forward each and every value modification made by anyone - because it considers all modifications valid.

Remanent Variables

Remanent variables keep their values over power cycles. They get re-initialized whenever a new PClient is installed on the display.

Remanent variables are intended for operator settings and other values which will change but whose last value should be remembered when PClient is started again.

Predefined Variables

On the display there is a variety of [predefined variables](#)¹⁸⁶ you can directly use in your GUI. They provide e.g. hardware states such as I/O values for digital and analog ports or CAN bus status as well as display specific properties e.g. the part number and serial number. Predefined variables are also used to e.g. configure camera interfaces, display backlight or beeper activity and obtain and set current time as provided by real time clock (RTC). Other predefined variables provide information specific to your GUI, e.g. dealing with virtual keyboards and alarms and visibility. There are also variables showing the recent pages visited and the time a page was active.

ISO-VT Variables

There is a range of indices reserved for ISO-VT. These variables are not existing by default but you can create them as they are defined in the variable table.

This approach allows to save the resources if you don't use ISO-VT on your display while still providing the information in a standardized manner not interfering with your user defined variables.

Data Types

Every variable has to have a type. By default character strings and numeric types are supported.

Numeric types are either signed or unsigned and have a length in bits.

In order to support the minimum requirements of CANopen there are a few predefined data types which can not be deleted or modified.

Additionally both two bit types are provided which are used for some predefined variables representing booleans with an additional "undefined / unknown / don't care" state required e.g. for J1939 protocol.

Note: String variables are intended to carry readable strings. Therefore their value is considered to end where a "\0" character occurs.

Note: If string values should be shown on display they are interpreted as UTF-8 format which is the same as ASCII for the first 127 characters only.

Organizing principles

The program provides two separate means of variable organization:

- Variable groups are supposed to support the designer in keeping variables where he will find them again. These groups are not relevant for the device.
- Index and subindex are used to identify a variable even on display side. This concept was mainly introduced for CANopen support but is used for all variables.

Variable Groups

It is suggested to create variable groups for all variables belonging together in one way or the other. One option would be to create one variable group per ECU. Another would be to find variables belonging to a certain subject and create a group for them.

Anyways each variable has to belong to exactly one variable group and if you don't create your own groups all your variables will end up in "common" group.

Note: In main screen variables can be handled and searched using [variable view](#)¹⁶¹ but when choosing a variable in a dialog it can really be helpful to have them ordered in meaningful groups.

Index and Subindex

CANopen organizes all variables as "objects" in its "object dictionary". From this object dictionary definition we "borrowed" the index and subindex approach. And since the display does not follow any of the predefined CANopen "device profiles" we had to move them all into the CANopen index range of 0x2000 ... 0x5FFF where proprietary objects have to reside.

Within this range we reserved index 0x2000 ... 0x2FFF for our predefined variables whereas user defined variables are located in the 0x3000 ... 0x5FFF range.

CANopen (and our program) allow two approaches to handle subindices: Either the subindex 0 is the only variable defined for an index or subindex 0 defines the highest subindex existing for an index.

It is recommended to use the latter approach and create subindices starting from 1. If you really want to use CANopen, the program will calculate the correct value of subindex 0 in this case.

Similar to variable groups you can use index as a grouping mechanism for many sub-indices. It would probably be a good idea to store all variables with the same index in the same variable group.

Organization of predefined variables

For the predefined variables every variable group contains exactly one index with all its sub-indices.


Variable import

It is possible to import variables from another project or via a .csv file with parameters for variables. This way large amounts of variables can be created quickly. The .csv file has to look like this:


```
Variable;Index;Sub-
Index;Owner;Group;Property_Description;Data-
Type;Length;Access Type;Min Val;Max Value;Default
Value;Initialize Value As Invalid;Remanant;Force writing
test1;0x3011;0x01;;;INTEGER;8;;;TRUE;FALSE;FALSE
test2;0x3011;0x02;;;INTEGER;16;;;TRUE;FALSE;FALSE
test3;0x3011;0x03;;;INTEGER;8;;;TRUE;FALSE;FALSE
```

```
test4;0x3011;0x04;;;INTEGER;16;;;TRUE;FALSE;FALSE
```

To import variables, click in the menu Communication -> Import Export Variables -> Import Variables

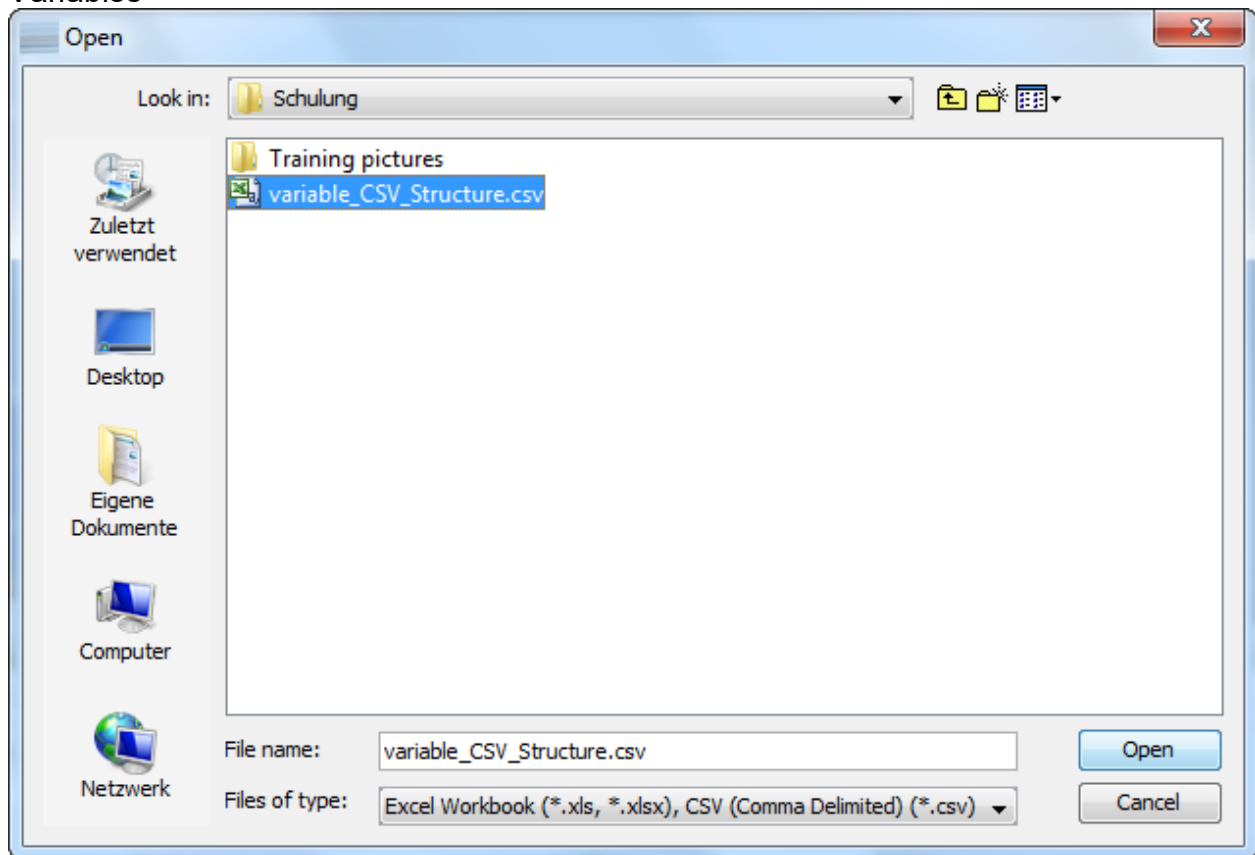


In the file dialog, choose the according file type (project xml or CSV) and the file from which you want to import the variables and click Open.

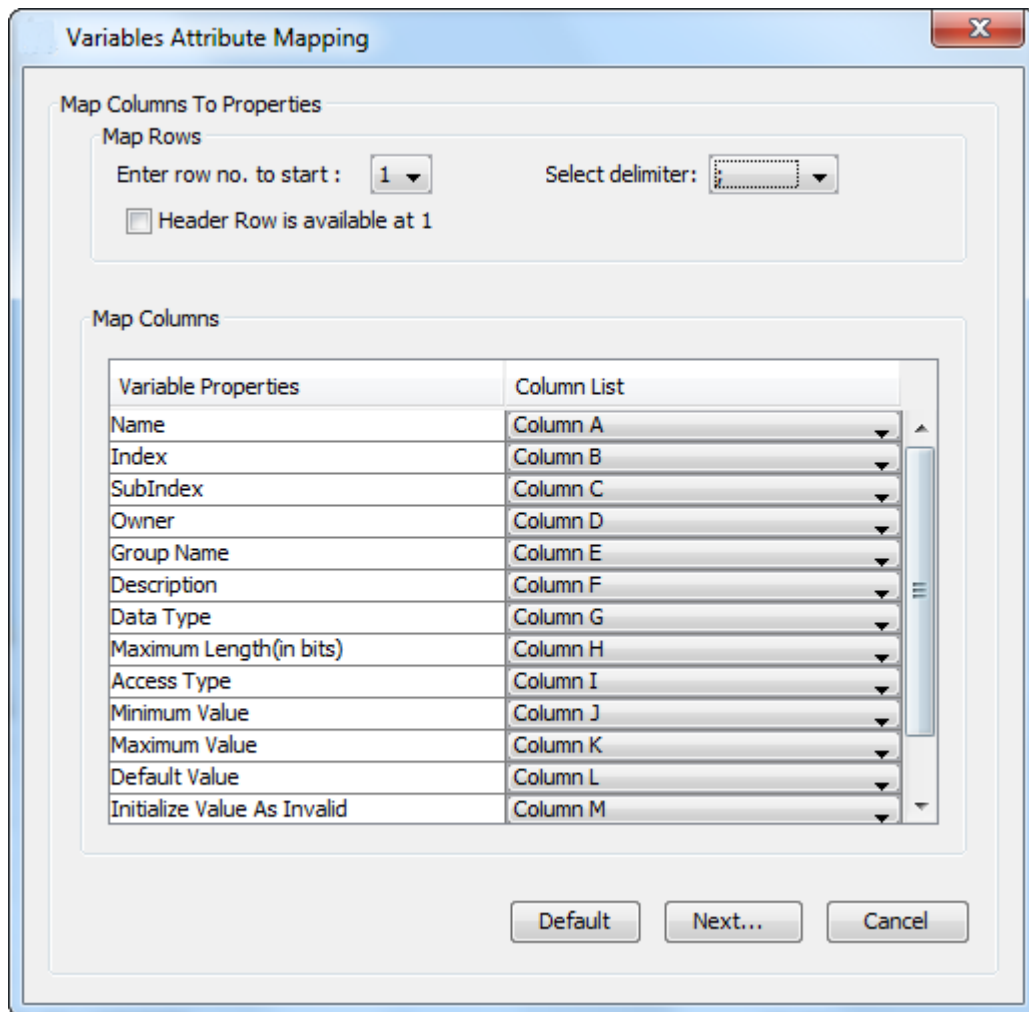

In this dialog you can choose the appropriate delimiter, the row where the program should start reading the variable data, and a table where you can tell the program which column contains which property for the variables. If you have used the format shown above you can use the default values and click Next...

If you haven't given all properties for all variables, the program will show dialogues and suggest default values for these properties. After confirming these a last dialog will be shown where you can choose which variables you actually want to import.

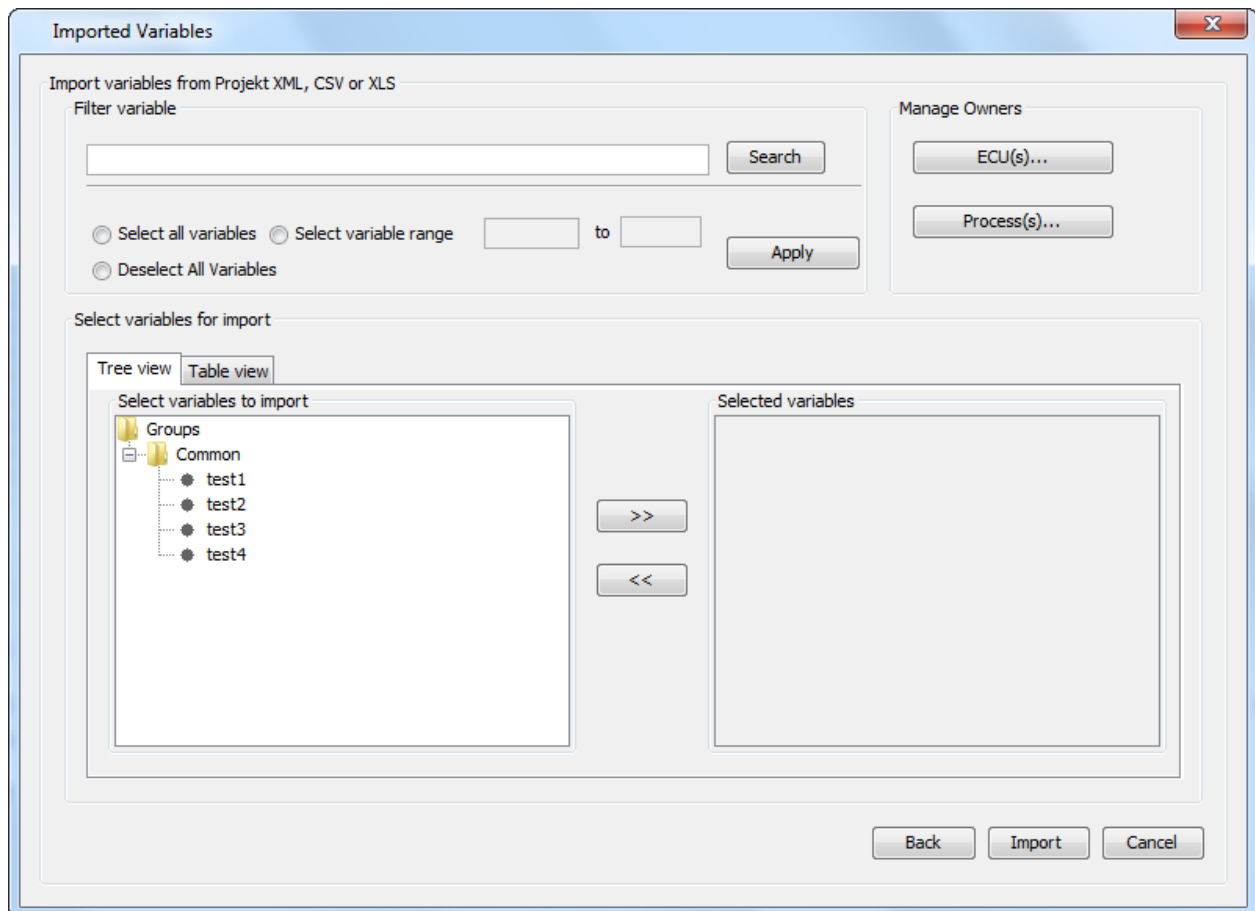

You can select single variables or all variables. Click on the button >> to choose variables for import. Click import to create all the chosen variables in your project.

4.1 Variable Owner Menus


On this help page, the user interfaces to create and manage variable owners are handled. It is based on the [general concept of variables and owners](#)¹⁶⁶ but concentrates on the specific properties one can define for variable owners.

There is one follow-up page explaining the creation and maintenance of [variable properties](#)¹⁷⁷.

Creating a Variable Owner on CAN Bus


There are two options to open the variable owner dialog:

Open Terminal and Owner ECU(s) Configuration from Menu

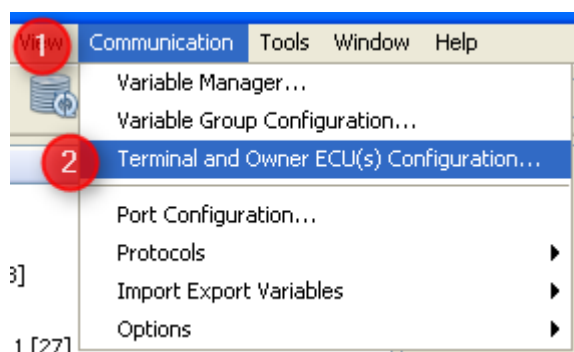


1. Open "Communication" menu.
2. Select "Terminal and Owner ECU(s) Configuration ...".

Open Terminal and Owner ECU(s) Configuration from Variable Manager

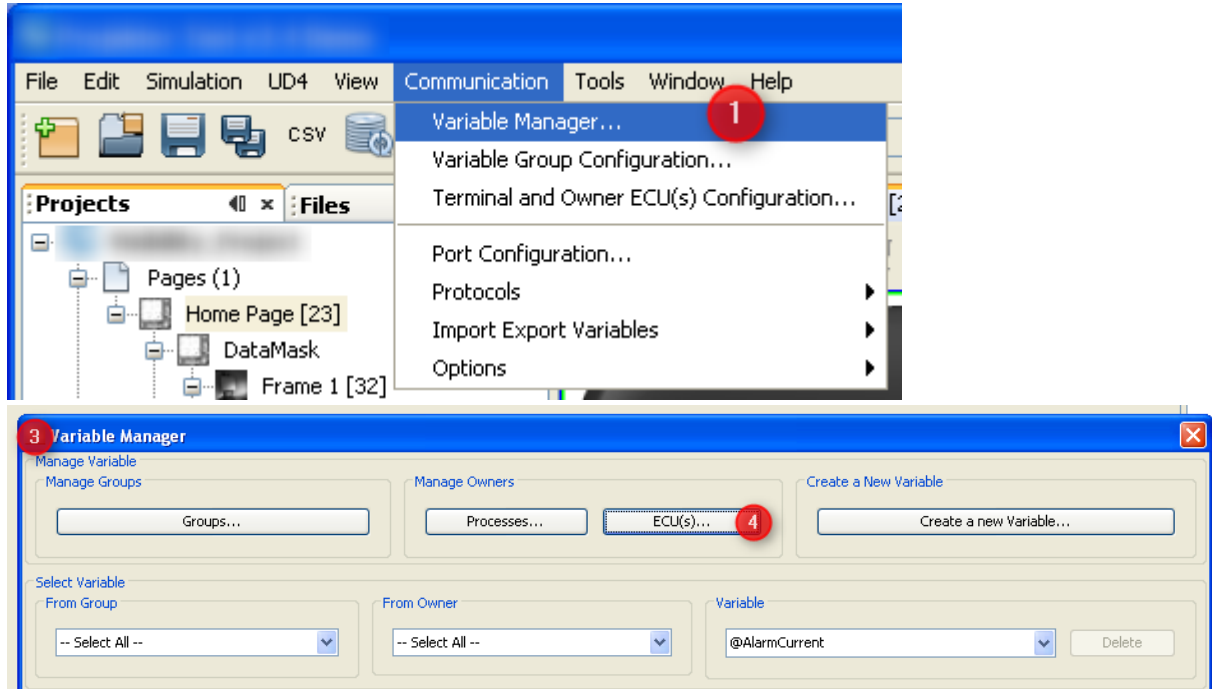

1. Open "Communication" menu.
2. Select "Variable Manager ..."
3. The Variable Manager dialog opens which could stay open for all variable creation and management.
4. Press button "ECU(s)...".

Terminal and Owner ECU(s) Configuration

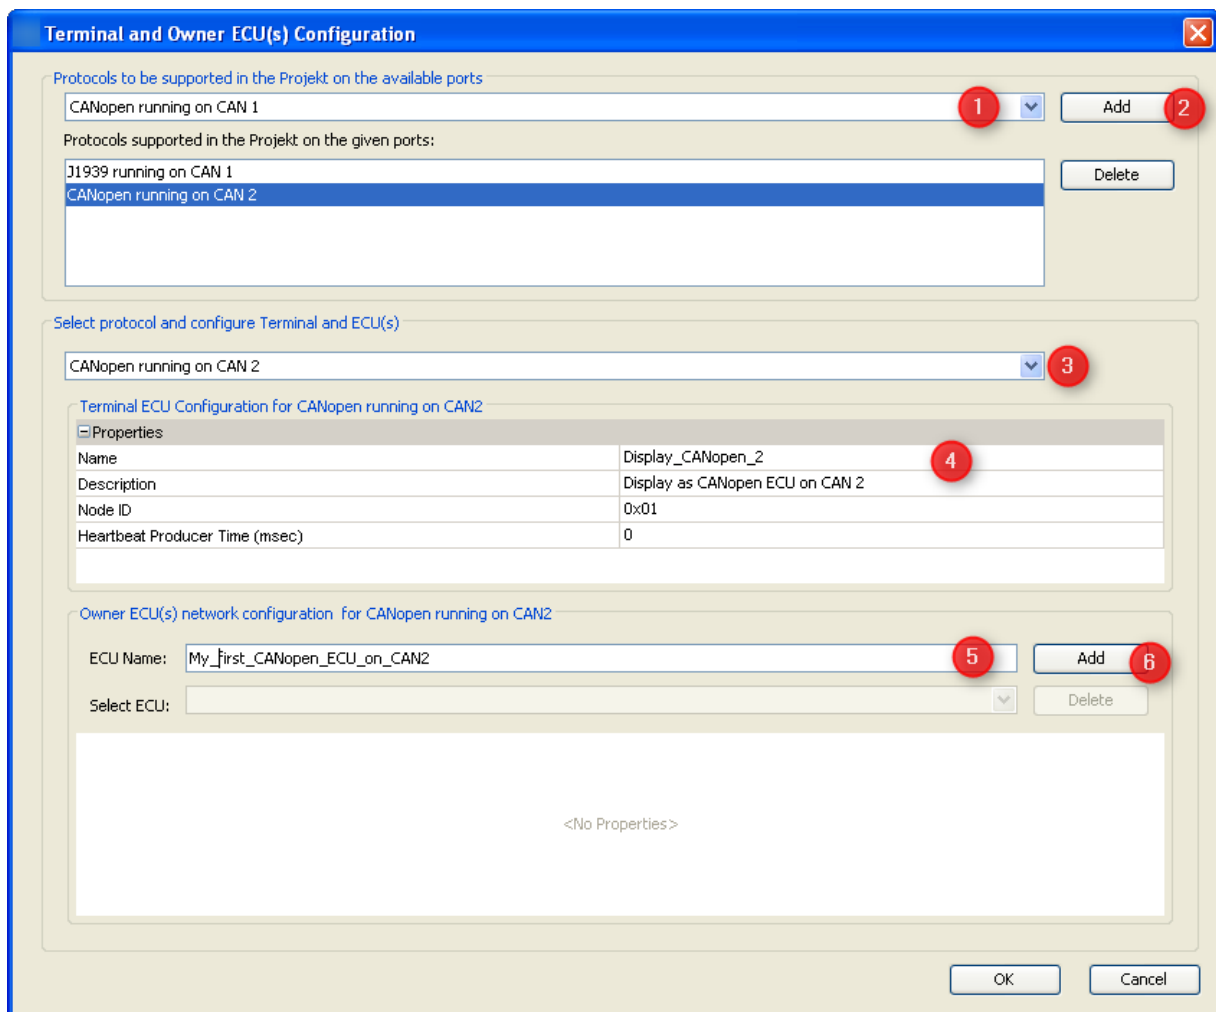

1. Select additional protocol and port it should run on.
2. Press "Add".
3. The new protocol will be selected automatically. In order to modify settings of an existing protocol select it here.
4. Edit display's properties for the protocol - these typically define how the display can be identified on the bus.
5. Type name of an ECU
6. Press "Add" in order to add new ECU to the protocol selected.
7. Edit properties of new ECU

Note: This only describes the general approach of adding CAN ECUs as variable owners. Detailed descriptions about their properties can be found in the pages of the respective protocols: [CAN Freestyle](#)³⁴⁰, [CANopen](#)³⁶⁰ and [J1939](#)³⁷⁷.


Processes as Variable Owners

The description above describes remote variable owners providing their variables via CAN bus.

Another source of variables are other programs running on the display. These are configured in "Process Configuration" dialog.


Again there are two ways to open this dialog.

Open Process Configuration from Menu

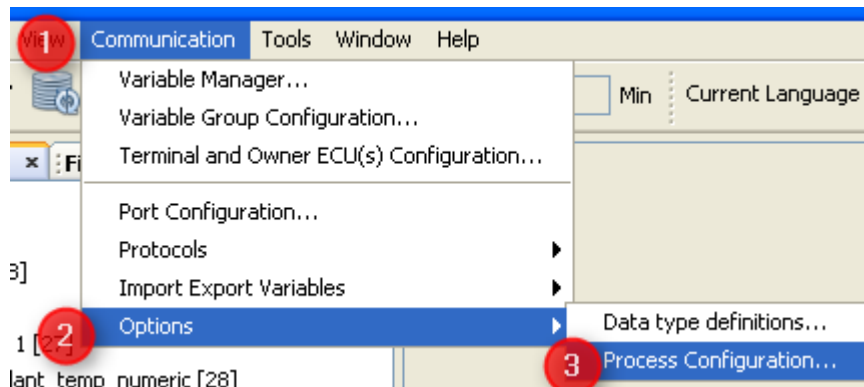


1. Open "Communication" menu.
2. Select "Options".
3. Choose "Process Configuration..."

Open Process Configuration from Variable Manager

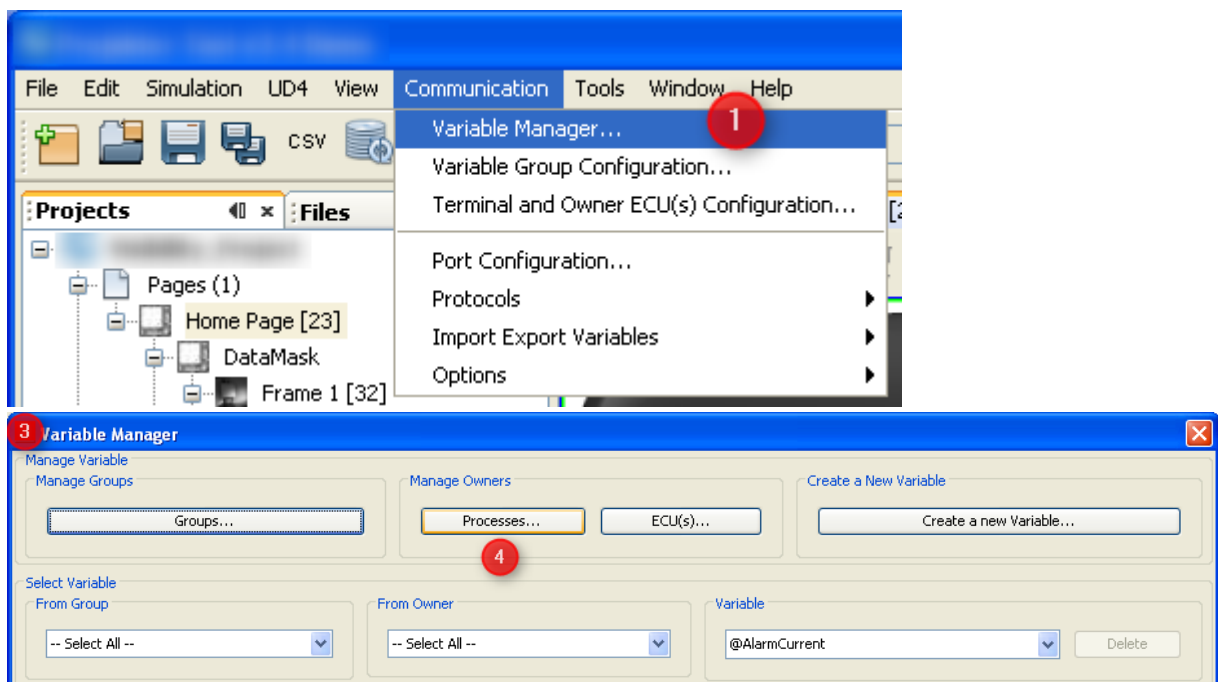

1. Open "Communication" menu.
2. Select "Variable Manager..."
3. Variable Manager dialog opens which provides all the links to create and maintain variables.
4. Press button "Processes..."


Processes Configuration

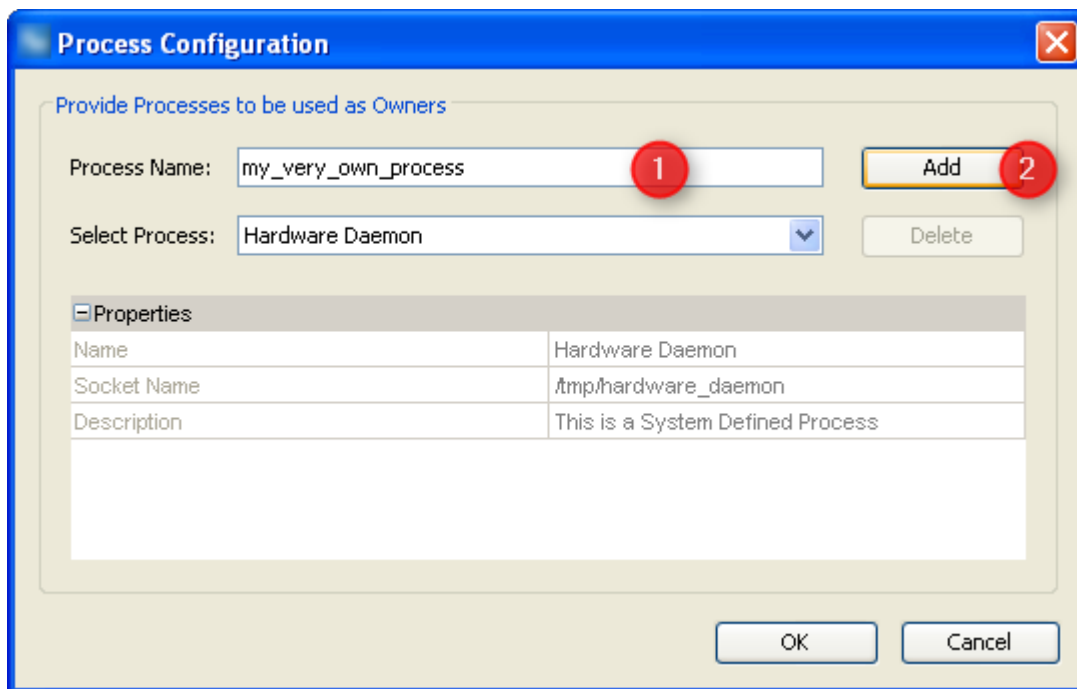

1. To add another process type the name of the program here.
2. Press "Add" button to add it to the GUI definition.

Once you have added the process or selected an existing one you can edit their properties.

Note: System defined processes can only be viewed but not edited or deleted.

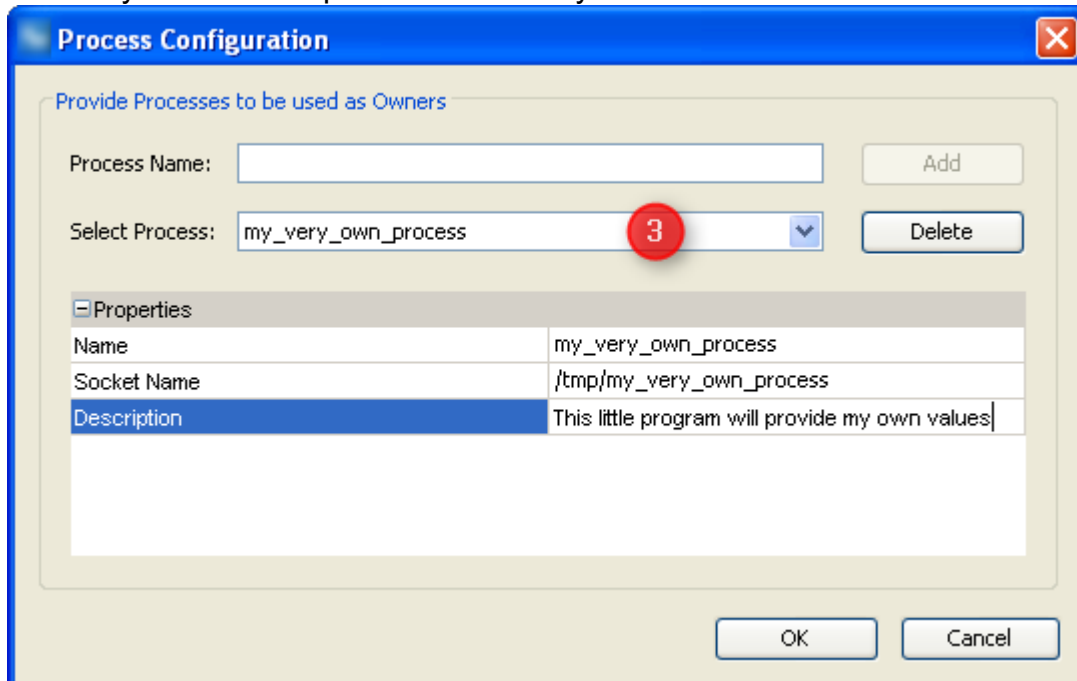

3. If you didn't just add the process you have to select it here.

Name

The name of the program to communicate to. This should be the name of the executable as you would type it on command line in order to run the program.

Socket Name

This describes the interface PClient will use to communicate with the process. By default this is the same as the program's name but located in folder "tmp".
If you should not know what a socket is: Consider it a kind of file which is used to exchange variable values.

Description

As with all the description properties this mainly exists for your convenience (especially when re-opening your GUI definition after a longer period of time).
So take the time to add a sensible description of what this process should do and why it was created. Then it could be helpful for others looking into your GUI definition, e.g. our support team.


4.2 Variable Menus

This is a page describing variable creation and maintenance.
It is based on the concepts described in [general variable approach](#)¹⁶⁶ and also uses settings explained in [variable owner configuration](#)¹⁷².

Definition of Data Types


Data types can be created and maintained in the "Data type definitions" dialog.

Open Data Types Definitions Dialog

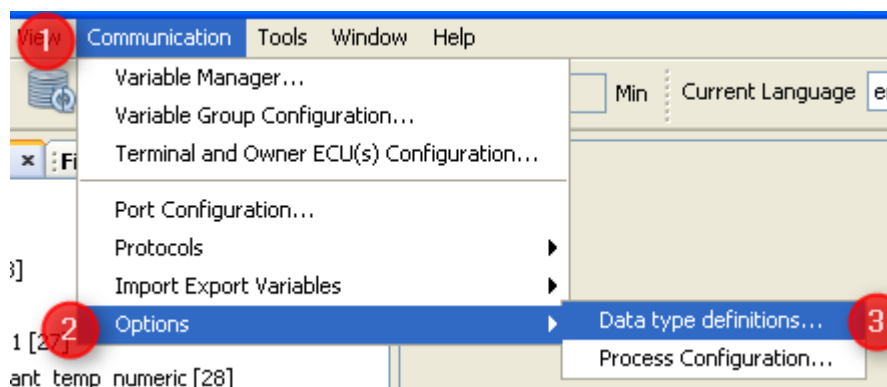

1. Open menu "Communication".
2. Select "Options"
3. Choose

Use Data Type Definitions Dialog

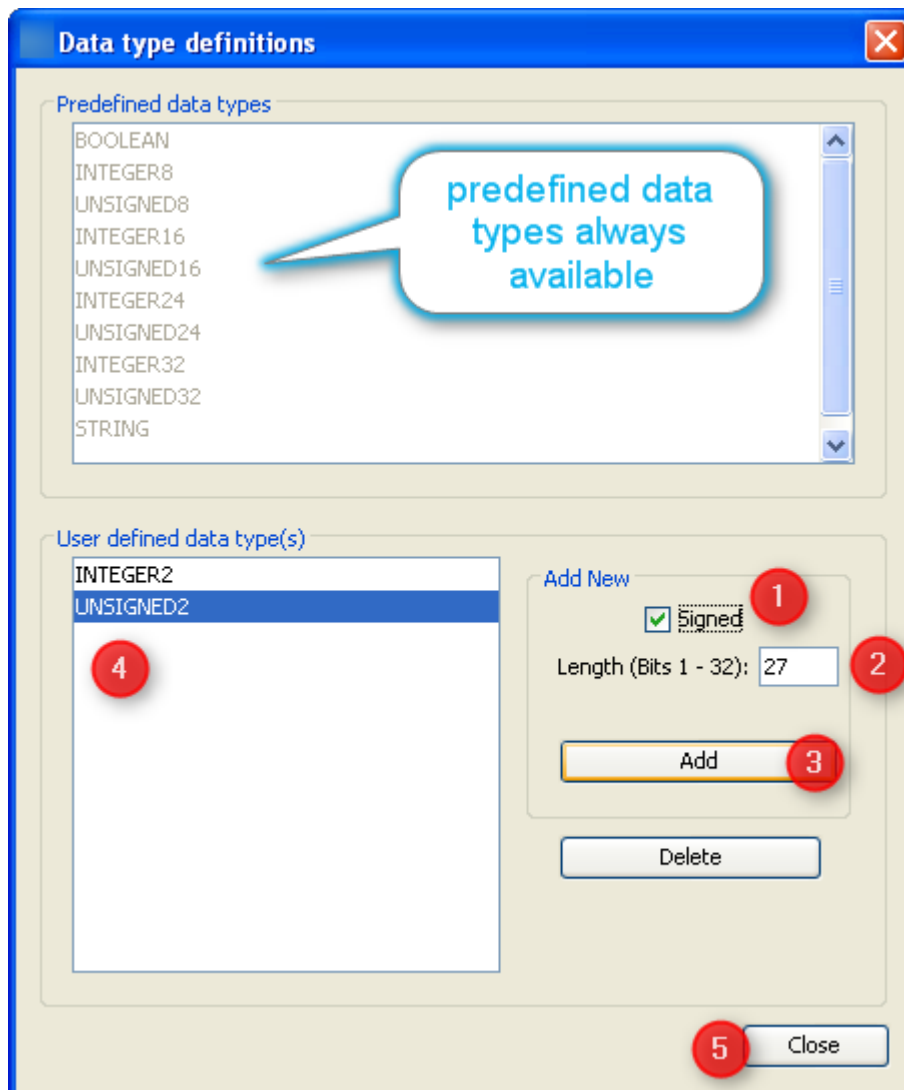


1. Check "Signed" if you need an additional signed data type.
2. Type the length of the new data type in bits.
3. Press "Add" button to add your new data type to the GUI definition.
4. New type will appear in this list (for our example it would be "INTEGER27").
5. Press "Close" button once you're finished adding and deleting variable data types.

Create and Maintain Variable Groups

As stated in [general description](#)¹⁶⁶ it is good practice to organize variables in groups to support maintenance once there are more than a few of them.


There are two ways to open the "Variable Groups Configuration" dialog.

Open Variable Groups Configuration from Menu

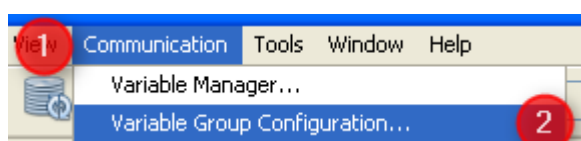


1. Open "Communication" menu.
2. Select "Variable Group Configuration..."

Open Variable Groups Configuration from Variable Manager

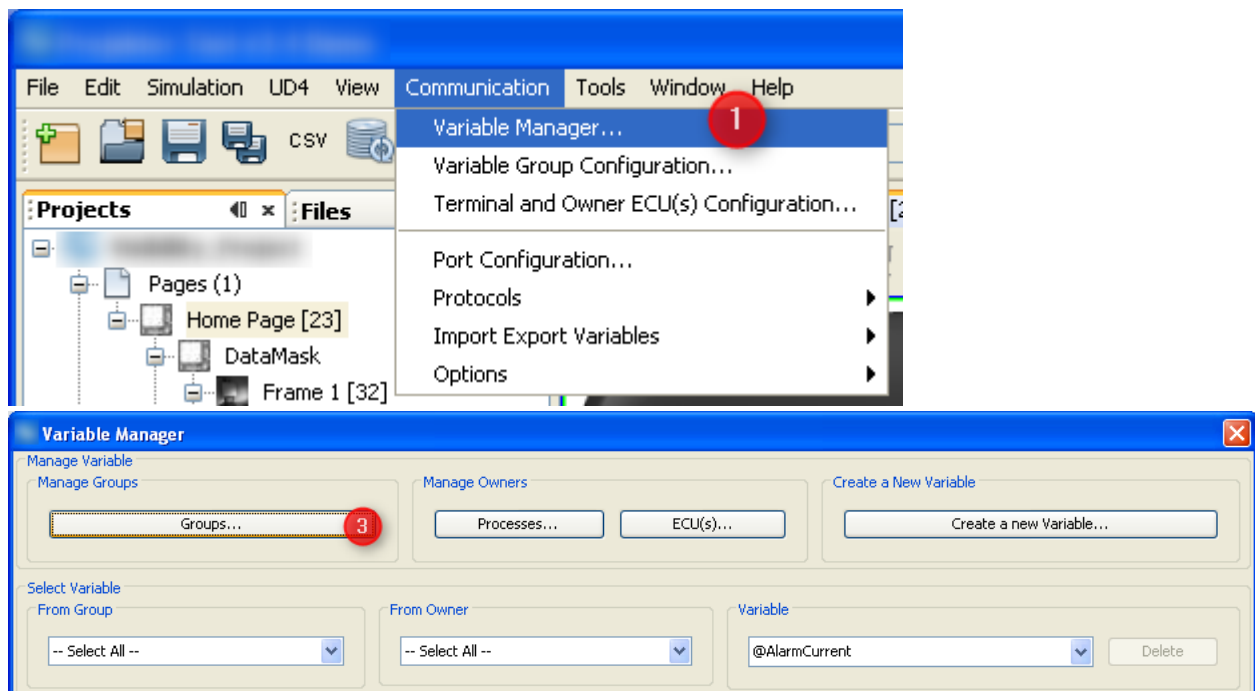

1. Open Menu "Communication".
2. Select "Variable Manager..."
3. Press button "Groups..."

Variable Group Configuration

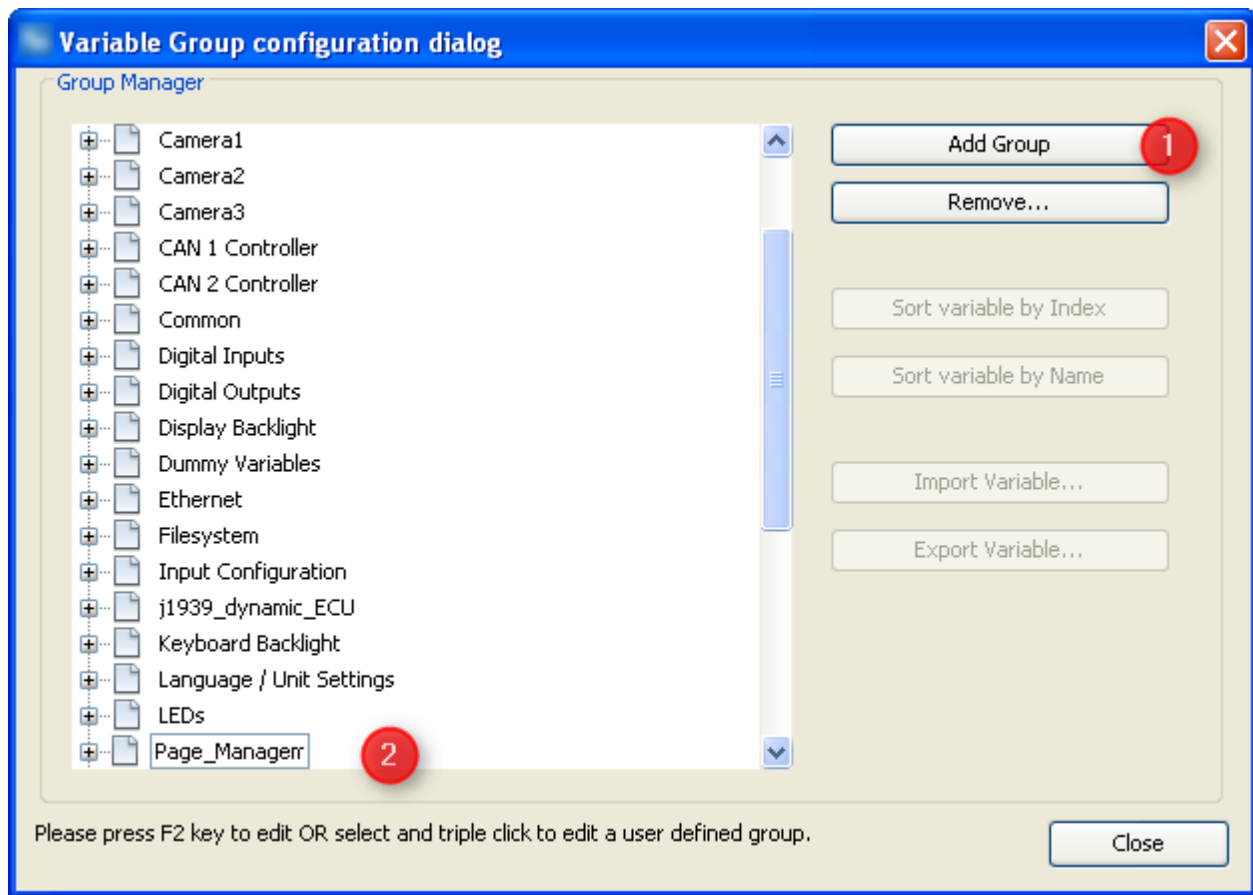

Initially the dialog only shows the predefined variable groups which can not be modified or deleted.

In order to add your group(s)

1. Press "Add Group" button
2. Type the name of your group in the box that appears and press "Enter".

The new group will be moved where it belongs alphabetically in the list of variable groups. Like that it could move out of the visible part of the list.

You can create more groups by repeating the steps above.


In order to modify the name of one of your groups, follow the instruction on the bottom of the dialog.

Press the "Remove..." button in order to delete one of your groups. If it should already contain variables they will be moved to "Common" group.

Variable Manager



The variable manager dialog is the main place to create and maintain variables.

Open Variable Manager Dialog

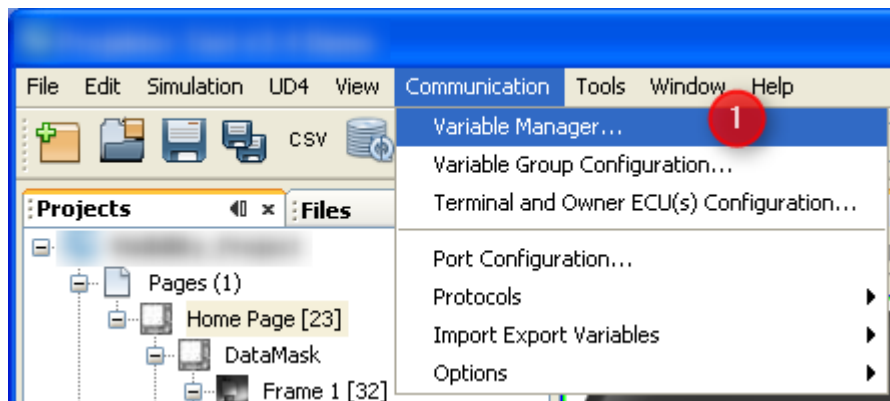

1. Open "Communication" menu.
2. Select "Variable Manager..."

Create New Variable

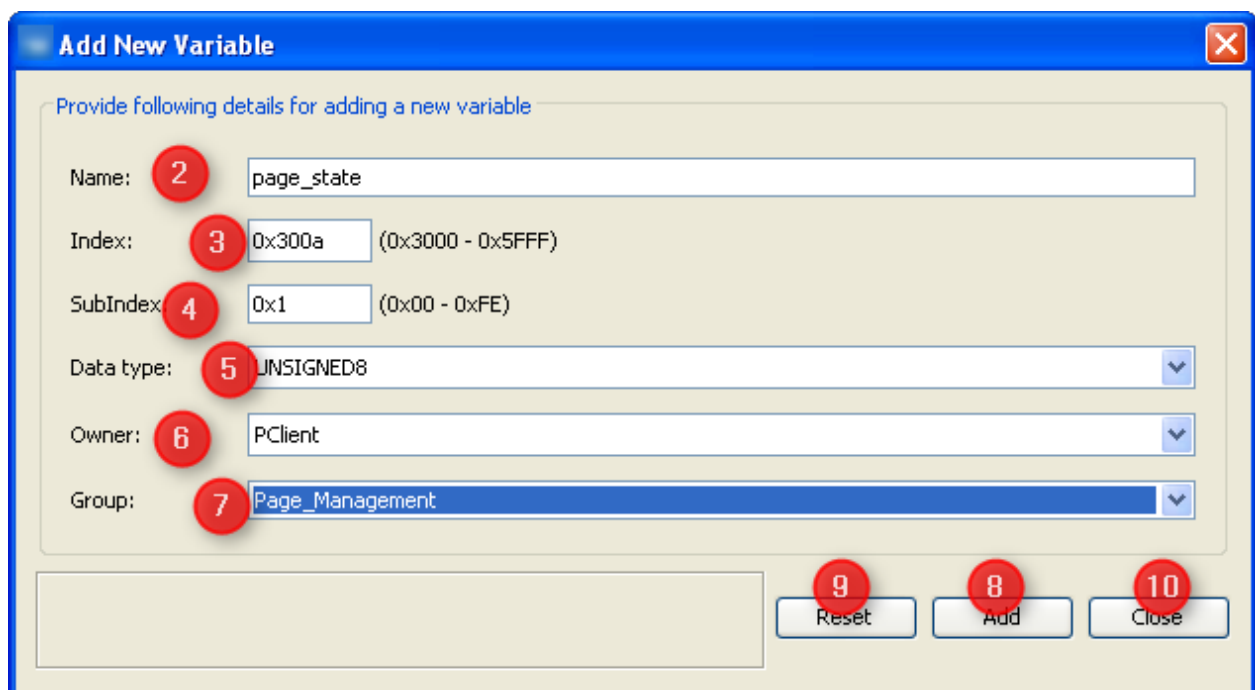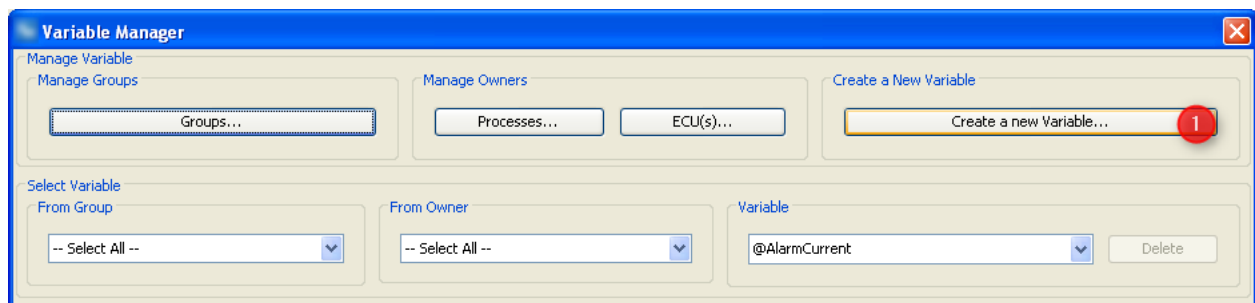

In order to add a new variable to the GUI definition

1. Press button "Create a new Variable..." in Variable Manager dialog. This opens the "Add New Variable" dialog.
2. Type a valid name that you will recognize when you want to attach this variable to DDOs later or when you want to use it in a script.


3. Define the index for the variable. If you should use CANopen this will be the index published in EDS file.
4. Define subindex for the new variable. See [dedicated section of variable concept](#)¹⁶⁶ for recommendations on index and subindex.
5. Choose data type for your variable only for CANopen you can not reduce the size in CAN messages. Otherwise main criteria is to make the variable big enough for all values it should transport.
6. Select owner of the variable. See section [owner concept](#)¹⁶⁶ in base document for criteria about which owner a variable should get.
7. Select a group for the new variable. See section [organizing principles](#)¹⁶⁶ in base document for some recommendations on group definitions.
8. Press "Add" button to add the new variable to GUI definition. Every press on "Add" will create a new variable - as long as name and index/subindex combination are unique.
9. If you want to create more than one variable you can either directly modify your settings OR press "Reset" first to get the dialog cleaned up first.
10. When you are finished creating variables, press "Close" button to leave the dialog and return to "Variable Manager".

Maintain and Modify Variables

Variable manager provides all the properties of all variables so that you can check the predefined ones and modify or delete your own variables.

Before actually deleting a variable it is recommended to make sure that it isn't used anymore in [variable view](#)¹⁶¹.

Variable manager provides the following options and properties to maintain variables.

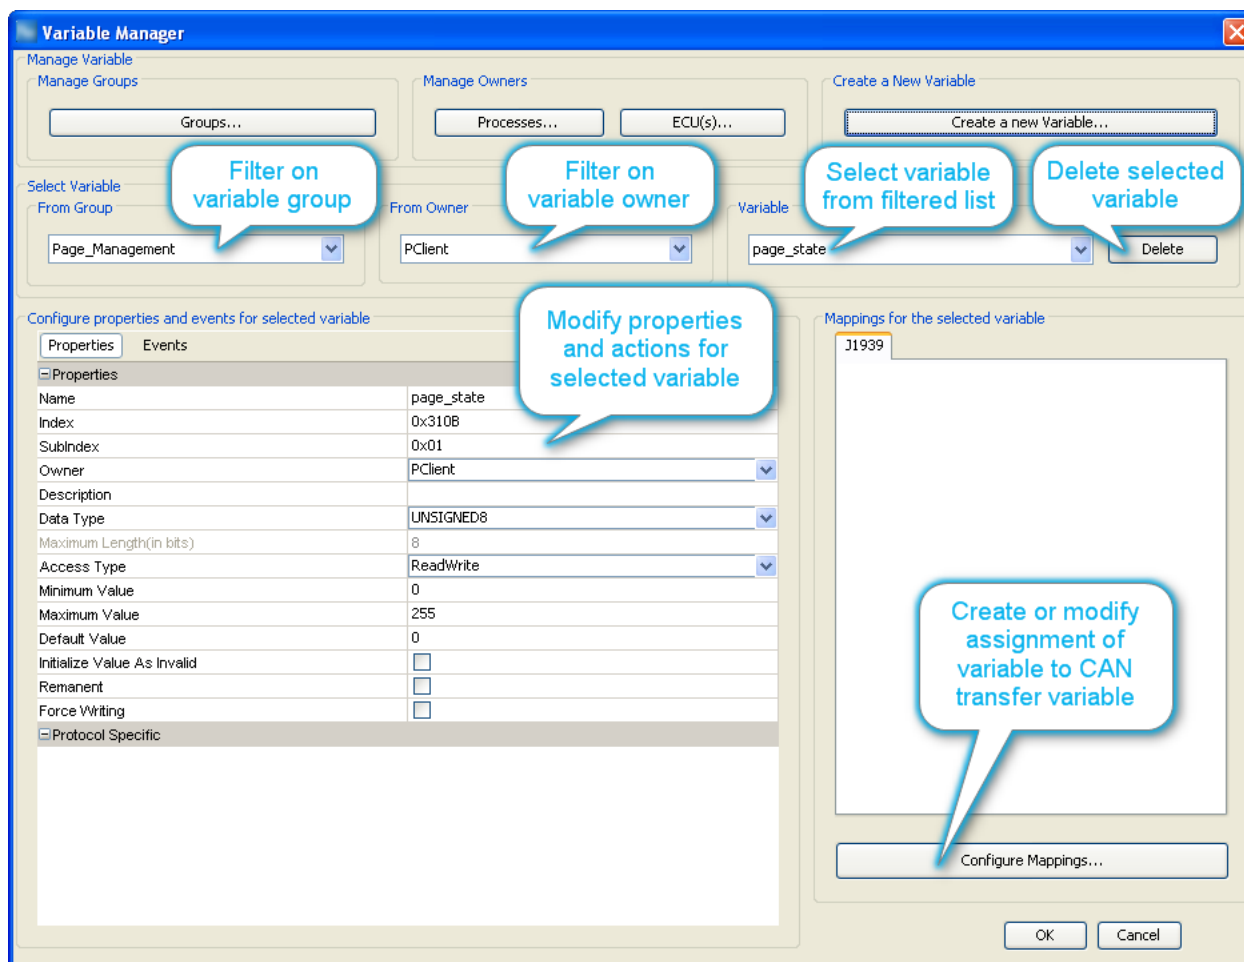

The rest of this page explains properties and actions for variables.

The filters mentioned in the image above should be self-explanatory.

The configuration of CAN mappings is explained with the CAN protocols, see [CAN Freestyle](#)³⁴⁰, [CANopen](#)³⁶⁰ and [J1939](#)³⁶².

Properties

Name

The name of a variable is used to identify the variable within the OPUS Projektor mainly. In order to find a variable in this dialog, attach it to an object or use it in a script this name is required.

Therefore it is recommended to use a logic naming convention that will support working with variable. This will not only help you in your work but also others using it in the future - think of maintenance and maybe even our support team helping you with this GUI definition at some point of time.

Index

On the display side index and subindex are the main criteria to identify a variable - so it has to be unique within the GUI definition.

If you should use CANopen this value is directly exposed in the EDS file describing the object dictionary. Therefore the value range for index is limited to the proprietary range of CANopen indices. Range 0x2000 ... 0x2FFF is reserved for predefined variables so that your own variables can occupy the range 0x3000 ... 0x5FFF.

Like using variable groups proper selection of index and subindex can help to keep the GUI definition maintainable. See [dedicated section of variable concept](#)¹⁶⁶ for recommendations on index and subindex.

Warning: Although one can change index and subindex here they render all references to this variable useless. I.e. if you have to modify index or subindex after assigning the variable anywhere (DDO, mapping, action ...) you have to re-visit all these assignments and assign them again.

SubIndex

Subindex is directly tied to index - every subindex can only occur for one variable per index.

If you set subindex to 0 then this is the only variable for this index. If you skip subindex 0 you can define up to 254 (0x01 ... 0xFE) subindices per variable thus using the index like a group definition containing subindices that also belong together logically.

See property "index" above and [dedicated section of variable concept](#)¹⁶⁶ for recommendations on index and subindex.

Owner

Every variable needs an owner and only the owner is allowed to actually change the value of the variable. Here you can assign either one of the predefined or your self defined owners.

There is an extra page for [creation and maintenance of owners](#)¹⁷². Recommendations about owner assignment can be found on [general variable page](#)¹⁶⁶.

Description

This property exists for documentation and maintenance - please take the time to provide a short comment about the purpose and specific use of this variable.

Like that this property can make it easier to understand the GUI definition - especially for persons not involved in its development, e.g. maintainers or our support team.

Data Type

For CANopen this is how the variable will be maintained in object dictionary, mapped to PDOs and published in EDS. For other protocols or internal use you should choose a format covering the variable's purpose while avoiding to waste space in CAN messages.

Internally all numeric variables are stored as 32 bit anyways - so if in doubt and not using CANopen "INTEGER32" or "UNSIGNED32" should work for most applications. When adding the variable to mappings you may have to reduce its mapped size because default is to reserve the amount of bits defined here.

Custom data type creation is explained at the [top of this page](#)¹⁷⁷.

Maximum Length (in bits/bytes)

For numeric data types the length in bits is part of the data type and just shown here - i.e. this property is not editable for numeric types.

For strings this property defines the maximum length in bytes. This length is only enforced for user input in the program as well as on the device. Otherwise longer strings can be written to and read from string variables.

Please note that the display internally uses UTF-8 encoding which uses up to four bytes for special characters e.g. used in Russian or Asian language. So if you want the string to contain such characters you should make sure there is enough room. If you stick to

basic ASCII encoding (values 0 ... 127) then UTF-8 is the same as ASCII and every character takes exactly one byte.

Access Type

This property allows some optimization and is required for CANopen support. Generally the owner of a variable has full access and can modify its value whenever he needs to. Access type describes what others can do with the variable: If you e.g. set the variable as "ReadOnly" then a write request will not even be sent to the owner but the attempt to write will directly fail.

Full access to the variable is provided with access type "ReadWrite" - so if the variable should not need limitations this is the value to choose.

Default Value

The variable is initialized with this value - depending on "Initialize Value As Invalid" below you may never actually see this value on screen.

Initialize Value as Invalid

Set this property to consider the variable value invalid until a first value is provided by the owner. DDOs typically appear disabled (grey mask on top) while the value is invalid.

If you want to consider the "Default Value" above a valid value of the variable even though it was not set by the owner you should uncheck this property.

Remanent

Set this property if variable value should persist over power cycles. This property only actually modifies user defined variables owned by PClient. For predefined variables it's an information about what the owner does.

Force Writing

Normally there is some optimization in place which only forwards "new" variable values if the value was modified. I.e. PClient only forwards write requests to the variable owner if the value is different from the current one. The other way around it only forwards the "new" value sent by the owner if the value differs from the last one received.

This is helpful in most cases where e.g. the value is periodically transferred in a CAN message.

There are use cases though where every update or write request has to be forwarded i.e. the write itself is more meaningful than the value it transports. An example from the predefined variables is "@BeeperRepetitions" which should start a beeper sequence which could have the same amount as repetitions as the last one. For these cases "Force Writing" should be checked.

Protocol Specific

Based on the CAN protocol use to communicate with variable owner there could be additional properties required. These properties would appear here.

One example for these additional properties is index/subindex of the variable in the owner's object dictionary. This is currently only used if the owner is a CANopen ECU. Protocol specific properties are explained on the pages of the protocols, see [CAN Freestyle](#)³⁴⁰, [CANopen](#)³⁶⁰ and [J1939](#)³⁷⁴.

Events

The "Events" tab allows to assign actions to specific events. By default no actions are assigned.

OnChangeByOwner

This event is triggered whenever the owner of the variable changes its value i.e. really sends a different value or "Force Writing" is true.

If you should see any "Event Options" for this event - ignore them like PClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to another variable, e.g. to reset a counter or trigger something attached to a variable where "Force Writing" is true.
- "Scale Value" allows modifying the new variable value before it is distributed within the display. The following calculation will be applied using integer arithmetics:

$\text{variable_value} = (((\text{received_value} + \text{offset1}) * \text{multiplier}) / \text{divisor}) + \text{offset2}$
--

- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third variable update. This action should only be used for variables which are rarely updated since otherwise it could slow down PClient.

OnChangeRequest

This event is triggered whenever an entity that is NOT the owner of the variable tries to write a value to the variable. The event is only triggered if the value differs from the one the variable currently has or "Force Writing" is true for the variable.

If you should see any "Event Options" for this event - ignore them like PClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to another variable, e.g. to reset a counter or trigger something attached to a variable where "Force Writing" is true.
- "Scale Value" allows modifying the value to be written before it is forwarded to the owner. The following calculation will be applied using integer arithmetics:

$\text{value_to_forward_to_owner} = (((\text{requested_value} + \text{offset1}) * \text{multiplier}) / \text{divisor}) + \text{offset2}$

- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every sixth write request to the variable. This action should only be used for variables where write requests are applied rarely since otherwise it could slow down PClient.

4.3 Pre-Defined Variables

Hardware Daemon

Terminal Hardware

@TerminalHardware_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as	Default Value	Min Value	Max Value

							Invalid			
0x2000	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	13	13	13

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Terminal

"Contains the name and variant of the current device"

Name and variant of the current device

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0x3	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PartNumber

"Vendor Part Number"

32 byte string as stored in EEPROM

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0x4	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BrandOwnerPartNumber

"Brand Owner's Part Number"

32 byte string as stored in EEPROM

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

							Invalid			
0x2000	0x5	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SerialNumber

"Serial number of the terminal"

12 byte string as stored in EEPROM. Format is usually YYWWNNNHH where YY is the manufacturing year, WW is the manufacturing calendar week NNN the sequence number in that week and HH the hardware revision.

For EGScore devices the structure is TTT-YYWWNNNHH-SS, where TTT is the device type and SS is the software revision, i.e. the versions of OS and application installed in the production. The rest is the same as above.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0x6	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SystemOperatingTime

"Operating Time of the device"

The operating time of the device in seconds. The time is only updated every 6 minutes.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0x7	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CPULoad

Total CPU load of the system in %

This variable contains the CPU load of the complete system of the last second. If the device has multiple CPU cores, this CPU load is the combined load (e.g. dual core cpu with one core running at 50% and one core running at 20% will result in a total CPU load of 35%)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0x8	Integer	8 Bit	Read Only	disabled	disabled	enabled	-1	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FreeRAM

Amount of free RAM of the system in MegaByte

Amount of free RAM of the system in MegaByte

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0x9	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@TotalRAM

Amount of total RAM of the system in MegaByte

Amount of total RAM of the system in MegaByte

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0xa	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PowerOnCycles

How many times the device was powered on

This variable counts how many times the device was turned on (from off state, not from sleep or low power mode). The counter is also increased when a reboot is performed.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0xb	Unsigned	32 Bit	Read Only	disabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PowerOffCycles

How many times the device was turned off correctly

This variable counts how many times the device was turned off correctly via ignition or software shutdown. Removing supply voltage while the device is running is not considered a correct power off. The counter is also increased when a reboot is performed.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0xc	Unsigned	32 Bit	Read Only	disabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CrashCount

How many times the supply voltage of the device was removed while it was running

This variable counts how many times the device was incorrectly turned off by removing supply voltage (KL30). A correct power down would be with ignition or software shutdown.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2000	0xd	Unsigned	32 Bit	Read Only	disabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

SD Card and USB Stick

@SDUSB_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2010	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	12	12	12

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@USBMemStatus

Check status of USB memory stick. Write 0 to this variable to trigger unmounting USB stick. Wait until variable reads as '0' before actually removing the stick.

Bit 0:

1 = memory stick inserted

0 = no memory stick present

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2010	0x9	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@USBMemSize

"Memory size of first partition of USB stick inserted."

Resolution: 1 MB (e.g. 512 refers to a 512 MB card)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2010	0xa	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@USBMemUsed

"Memory size used for files on first partition of USB stick inserted."

Resolution: 1 MB (e.g. 51 refers to a 51 MB used on card)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2010	0xb	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@USBMountPath

"Filesystem path to where the USB stick is mounted"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2010	0xc	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Terminal Software

@TerminalSoftware_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2020	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	16	16	16

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SystemUptime

"Time elapsed since Terminal was started"
Time in ms since Terminal was started.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2020	0x1	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@EnableServiceMode

0: Service Mode Disabled1: Enable service Mode (after reboot OS update process will be started)

With this variable the OS update process can be started. Write a 1 to it to enable service mode. Service mode will only start after the device was rebooted (write value 0xb007 to @PWR_CurrentPowerMode). Note that the service mode can only be exited by a) installing something or b) disconnecting Ignition (clamp 15).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2020	0x4	Integer	2 Bit	Read/Write	disabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@OSKernelVersion

"Kernel version active in this terminal as reported by OS."

Complete Linux Kernel version as a string.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2020	0x8	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Power Modes

@PowerModes_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	19	19	19

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_TimeToSleepMode

"Define time in low power mode after which terminal switches to sleep mode (processor off, only RAM refreshed)"

Time in seconds.

Terminal switches to sleep mode after it spent this time in low power mode.

In low power mode processor keeps running, only a configurable set of components (e.g. display, backlights) can be switched off.

In sleep mode only the RAM gets refreshed while the rest of the processor is switched off.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x1	Integer	32 Bit	Read/Write	enabled	disabled	enabled	60	-1	2332800

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_TimeToPowerOff

"Define time in sleep mode after which terminal is switched off. "

Time in seconds.

Terminal switches off after it spent this time in sleep mode.

In sleep mode only the RAM gets refreshed while the rest of the processor is switched off.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x2	Integer	32 Bit	Read/Write	enabled	disabled	enabled	120	-1	2332800

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_LowPowerDisplayState

"State of the display in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x3	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_LowPowerDisplayBacklightState

"State of the display backlight in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x4	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_LowPowerKeypadBacklightState

"State of the keypad backlight in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x5	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	Yes

@PWR_LowPower_RGB_LED_State

"State of the multi color RGB LED functionality in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x7	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_LowPowerBeeperState

"State of the Beeper functionality in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x8	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	No	Yes

@PWR_LowPowerKeypadState

"State of the Keypad in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x9	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	Yes

@PWR_LowPowerEncoderState

"State of the Encoder in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0xa	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerTouchState

"State of the touch screen in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0xb	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_LowPowerConsoleState

"State of the serial console in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0xc	Integer	8 Bit	Read/Write	enabled	disabled	enabled	1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	Yes

@PWR_LowPowerOutput1State

"State of the 1st digital output in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0xd	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerOutput2State

"State of the 2nd digital output in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0xe	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerOutput3State

"State of the 3rd digital output in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0xf	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerCamOutputState

"State of the camera supply voltage in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x10	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	No	No

@PWR_LowPowerVideoState

"State of the video decoder in low power mode. Note that on devices with an i.MX6 based CPU only the 1st and 3rd video input is suspended."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x11	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_CurrentPowerMode

"Current Power Mode. See detailed description."

0: On. Can only be set if Ignition (clamp 15) is connected.

1: Low Power Mode. WARNING: Timer for going into sleep mode will only start if Ignition (clamp 15) is disconnected!

2: Low Power Mode with timer to automatically switch to sleep mode is enabled (write-only, after setting this value, the power mode will be set to 1). See @PWR_TimeToSleepMode. Only supported on certain devices.

3: Silent-on mode (read-only, can not be enabled via variable)

0xb007: Reboot. This does a complete cold reboot of the device (decimal value: 45063)

0x4a17: Halt the device (decimal value 18967). The device will shut down but the power supplies are not switched off as long as ignition is on.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x12	Integer	32 Bit	Read/Write	disabled	enabled	enabled	0	-1	45063

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_SleepModePropagationTime

"This time in seconds is added to the @PWR_TimeToSleepMode before going into sleep mode."

With this variable it is possible to delay going into sleep mode so that the application can do something (e.g. sending special CAN messages before sleep, switch off video streams, etc.).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x13	Integer	8 Bit	Read/Write	enabled	enabled	enabled	1	1	30

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PWR_LowPowerEncoderBacklightState

"State of the encoder backlight in low power mode."

0: Off

1: On

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x14	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerDigitalInput1State

"State of the 1st digital input in low power mode."

0: Off

1: On

Only available on devices with digital inputs.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x15	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerDigitalInput2State

"State of the 2nd digital input in low power mode."

0: Off

1: On

Only available on devices with digital inputs.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x16	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerDigitalInput3State

"State of the 3rd digital input in low power mode."

0: Off

1: On

Only available on devices with digital inputs.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x17	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPowerDigitalInput4State

"State of the 4th digital input in low power mode."

0: Off

1: On

Only available on devices with digital inputs.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x18	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPower1stStatusLEDState

"State of the 1st status LED functionality in low power mode."

0: Off

1: On

Only available on devices equipped with such a status LED

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x19	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_LowPower2ndStatusLEDState

"State of the 2nd status LED functionality in low power mode."

0: Off

1: On

Only available on devices equipped with such a status LED

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x1a	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@PWR_TimeFromSilentOnToLowPower

"Define time spent in silent-on mode while no other wake source is enabled until power mode is switched to low power. "

Time in seconds.

When device starts in silent-on mode it will automatically switch to low power mode after this time if no other wake source is enabled (e.g. ignition). Only functional on devices that support booting into silent-on mode.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2030	0x1b	Integer	32 Bit	Read/Write	enabled	disabled	enabled	65	-1	2333280

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

LEDs**@LED_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2040	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	14	14	14

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LED_MultiColor

"The value of this variable represents a RGB color value"

0xffffffff means white color, 0xff0000 red, 0x000000 off, 0x888888 is grey and so on.

For more details see user manual: FAQ -> How can I use the multicolor LED?

Index	Subindex	Storage	Length	Access	Remanent	Force Writing	Initialize as	Default	Min Value	Max Value
-------	----------	---------	--------	--------	----------	---------------	---------------	---------	-----------	-----------

		Type		Type		g	Invali d	Value		
0x204 0	0x2	Integer	32 Bit	Read/ Write	disabl ed	disabl ed	enable d	0	-1	16777 215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LED_MultiColorStartupColor

Set the (24 bit RGB) color that the multi color LED shall have when starting the device from off mode.

This color will be used early in the startup process by the bootloader to set the initial color of the multi color LED.

At runtime the color can be adjusted with @LED_MultiColor.

This variable is not supported on all devices / OS versions.

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x204 0	0x3	Integer	32 Bit	Read/ Write	disabl ed	disabl ed	enable d	65280	-1	16777 215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@LEDMultiColorRepetitions

"Number of repetitions of @LEDMultiColorPattern"

Number of intervals to perform. For more details see user manual: FAQ -> How can I use the multicolor LED?

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x204 0	0xd	Integer	32 Bit	Read/ Write	disabl ed	disabl ed	enable d	0	0	21474 83647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LEDMultiColorPattern

"Run a blink pattern on MultiColorLED"

When setting a value to this variable, a blink pattern is played on the device's multi color LED. The pattern is bitwise encoded into the value of this variable (20 values for on and

off).

This pattern will be played with color set in @LED_MultiColor

e.g.: value is 5, bitwise: 0000000000000000101 resulting blink pattern:

100ms on

100ms off

100ms on

1700ms off

The pattern will be repeated for @LEDMultiColorRepetition times.

For more details see user manual: FAQ -> How can I use the multicolor LED?

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2040	0xe	Integer	32 Bit	Read/Write	disabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Sensors

@Sensors_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2050	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	6	6	6

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SensorTerminalTempC

"get estimated °C temperature inside terminal"

°C value as measured by internal temperature sensor. Value is in °C.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x2050	0x1	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-2000	2000
--------	-----	---------	--------	-----------	----------	----------	---------	----	-------	------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SensorAmbientLight

"Standardized ambient light value"

Percentage of ambient light intensity in 10th of % (0: complete darkness (0.0%), 1000: full brightness (100.0%))

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2050	0x3	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	1000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SensorSupplyVoltage

"Input voltage of power supply in mV"

Input voltage on permanent power supply (clamp 30) in mV e.g. 13294 means 13.294V

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2050	0x5	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	60000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

Digital Inputs

@DigitalInputs_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x208 0	0x0	Integer	8 Bit	Read Only	disabl ed	disabl ed	enable d	11	11	11
------------	-----	---------	-------	--------------	--------------	--------------	-------------	----	----	----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalInput01

"Get state of digital input 01"

Only valid for terminals equipped with such an input

0: low voltage on input pin

1: high voltage on input pin

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x208 0	0x2	Integer	2 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalInput02

"Get state of digital input 02"

Only valid for terminals equipped with such an input

0: low voltage on input pin

1: high voltage on input pin

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x208 0	0x3	Integer	2 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalInput03

"Get state of digital input 03"

Only valid for terminals equipped with such an input

0: low voltage on input pin

1: high voltage on input pin

Index	Subin dex	Stora ge	Lengt h	Acces s	Rema nent	Force Writin	Initiali ze as	Defaul t	Min Value	Max Value
-------	--------------	-------------	------------	------------	--------------	-----------------	-------------------	-------------	--------------	--------------

		Type		Type		g	Invali d	Value		
0x208 0	0x4	Integer	2 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalInput04

"Get state of digital input 04"

Only valid for terminals equipped with such an input

0: low voltage on input pin

1: high voltage on input pin

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x208 0	0x5	Integer	2 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

Analog Inputs

@AnalogInputs_NoOfEntries

"Number of entries in this group"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x209 0	0x0	Integer	8 Bit	Read Only	disabl ed	disabl ed	enable d	10	10	10

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@AnalogInput01

"Get value of analog input 01"

Only valid for terminals equipped with such an input.

Software supports voltage on the respective input in 10 millivolts, e.g. a value of 1234 corresponds to 12,34 V.

Please refer to the hardware documentation to find out which value range and precision is supported by a specific hardware.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2090	0x1	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@AnalogInput02

"Get value of analog input 02"

Only valid for terminals equipped with such an input.

Software supports voltage on the respective input in 10 millivolts, e.g. a value of 1234 corresponds to 12,34 V.

Please refer to the hardware documentation to find out which value range and precision is supported by a specific hardware.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2090	0x2	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@AnalogInput03

"Get value of analog input 03"

Only valid for terminals equipped with such an input.

Software supports voltage on the respective input in 10 millivolts, e.g. a value of 1234 corresponds to 12,34 V.

Please refer to the hardware documentation to find out which value range and precision is supported by a specific hardware.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2090	0x3	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@AnalogInput04

"Get value of analog input 04"

Only valid for terminals equipped with such an input.

Software supports voltage on the respective input in 10 millivolts, e.g. a value of 1234 corresponds to 12,34 V.

Please refer to the hardware documentation to find out which value range and precision is supported by a specific hardware.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2090	0x4	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

FrequencyInputs**@FrequencyInputs_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2091	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	1	1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@FrequencyInput01

Measured frequency of input 1 in Hz

This variable represents the measured frequency of input 1 in Hz.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x209 1	0x1	Unsign ed	16 Bit	Read Only	disabl ed	disabl ed	enable d	0	0	10000
------------	-----	--------------	--------	--------------	--------------	--------------	-------------	---	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

Input Configuration

@Inputconfiguration_NoOfEntries

"Number of entries in this group"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x209 5	0x0	Integer	8 Bit	Read Only	disabl ed	disabl ed	enable d	22	22	22

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@InputConfiguration01

"Configure input 01 for digital/analog (voltage sensor) or for current sensor operation."

Configure input 01 for digital/analog (voltage sensor) or for current sensor operation. Value 0 and 1: digital and analog operation (measured value in @DigitalInput01 and @AnalogInput01); Value 2: current sensor operation (measured value in @AnalogInput01).

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x209 5	0x1	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	0	-1	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@InputConfiguration02

"Configure input 02 for digital/analog (voltage sensor) or for current sensor operation."

Configure input 02 for digital/analog (voltage sensor) or for current sensor operation. Value 0 and 1: digital and analog operation (measured value in @DigitalInput02 and @AnalogInput02); Value 2: current sensor operation (measured value in @AnalogInput02).

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as	Defaul t	Min Value	Max Value
-------	--------------	---------------------	------------	--------------------	--------------	----------------------	-------------------	-------------	--------------	--------------

		Type		Type		g	Invali d	Value		
0x209 5	0x2	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	0	-1	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@InputConfiguration03

"Configure input 03 for digital/analog (voltage sensor) or for current sensor operation."

Configure input 03 for digital/analog (voltage sensor) or for current sensor operation. Value 0 and 1: digital and analog operation (measured value in @DigitalInput03 and @AnalogInput03); Value 2: current sensor operation (measured value in @AnalogInput03).

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x209 5	0x3	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	0	-1	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@InputConfiguration04

"Configure input 04 for digital/analog (voltage sensor) or for current sensor operation."

Configure input 04 for digital/analog (voltage sensor) or for current sensor operation. Value 0 and 1: digital and analog operation (measured value in @DigitalInput04 and @AnalogInput04); Value 2: current sensor operation (measured value in @AnalogInput04).

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x209 5	0x4	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	0	-1	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Input1hysteresese

"On devices with i.MX 35 CPU one step is approx. 11mv. On devices with i.MX 6 CPU one step is 1mV."

The hysteresis when the analog input shall signal a value change.

For devices with i.MX 35 CPU: This is a digital value of the 10Bit A/D converter between 0

and 1023. One step is about 11mV.

For devices with i.MX 6 CPU: The value represents 1mV directly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2095	0xb	Integer	16 Bit	Read/Write	enabled	disabled	enabled	1	-1	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Input2hysteresis

"On devices with i.MX 35 CPU one step is approx. 11mv. On devices with i.MX 6 CPU one step is 1mV."

The hysteresis when the analog input shall signal a value change.

For devices with i.MX 35 CPU: This is a digital value of the 10Bit A/D converter between 0 and 1023. One step is about 11mV.

For devices with i.MX 6 CPU: The value represents 1mV directly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2095	0xe	Integer	16 Bit	Read/Write	enabled	disabled	enabled	1	-1	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Input3hysteresis

"On devices with i.MX 35 CPU one step is approx. 11mv. On devices with i.MX 6 CPU one step is 1mV."

The hysteresis when the analog input shall signal a value change.

For devices with i.MX 35 CPU: This is a digital value of the 10Bit A/D converter between 0 and 1023. One step is about 11mV.

For devices with i.MX 6 CPU: The value represents 1mV directly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2095	0x11	Integer	16 Bit	Read/Write	enabled	disabled	enabled	1	-1	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Input4hysteres

"On devices with i.MX 35 CPU one step is approx. 11mv. On devices with i.MX 6 CPU one step is 1mV."

The hysteresis when the analog input shall signal a value change.

For devices with i.MX 35 CPU: This is a digital value of the 10Bit A/D converter between 0 and 1023. One step is about 11mV.

For devices with i.MX 6 CPU: The value represents 1mV directly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2095	0x14	Integer	16 Bit	Read/Write	enabled	disabled	enabled	1	-1	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

Digital Outputs**@DigitalOutputs_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	10	10	10

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutput01

"Set state of digital output 1"

Only valid for terminals equipped with such an output.

The output is an open drain / open collector output. This means that when the output is set to 1, ground is connected to the output. If set to 0, the output is disconnected.

0: disconnect output

1: connect to ground

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x1	Integer	2 Bit	Read/Write	disabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutput02

"Set state of digital output 02"

Only valid for terminals equipped with such an output.

The output is an open drain / open collector output. This means that when the output is set to 1, ground is connected to the output. If set to 0, the output is disconnected.

0: disconnect output

1: connect to ground

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x2	Integer	2 Bit	Read/Write	disabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutput03

"Set state of digital output 03"

Only valid for terminals equipped with such an output.

The output is an open drain / open collector output. This means that when the output is set to 1, ground is connected to the output. If set to 0, the output is disconnected.

0: disconnect output

1: connect to ground

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x3	Integer	2 Bit	Read/Write	disabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutputLoopback01

"Value of the Digital Output 1 Loopback connection"

New generation of devices have a loopback connection for the digital outputs which can read back the real set value and detect errors with this (see @DigitalOutputFailure0x).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x10	Unsigned	2 Bit	Read Only	disabled	disabled	enabled	-1	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutputLoopback02

"Value of the Digital Output 2 Loopback connection"

New generation of devices have a loopback connection for the digital outputs which can read back the real set value and detect errors with this (see @DigitalOutputFailure0x).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x11	Unsigned	2 Bit	Read Only	disabled	disabled	enabled	-1	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutputLoopback03

"Value of the Digital Output 3 Loopback connection"

New generation of devices have a loopback connection for the digital outputs which can read back the real set value and detect errors with this (see @DigitalOutputFailure0x).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x12	Unsigned	2 Bit	Read Only	disabled	disabled	enabled	-1	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutputFailure01

Shows if digital output 1 has detected a failure (set value != loopback value)

If the value of @DigitalOutput0x and @DigitalOutputLoopback0x is not the same, this variable signals the failure.

0: No failure

1: Failure detected

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x20	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	0	0	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutputFailure02

Shows if digital output 2 has detected a failure (set value != loopback value)

If the value of @DigitalOutput0x and @DigitalOutputLoopback0x is not the same, this variable signals the failure.

0: No failure

1: Failure detected

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20a0	0x21	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	0	0	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@DigitalOutputFailure03

Shows if digital output 3 has detected a failure (set value != loopback value)

If the value of @DigitalOutput0x and @DigitalOutputLoopback0x is not the same, this variable signals the failure.

0: No failure

1: Failure detected

Index	Subindex	Storage	Length	Access	Remanent	Force Writing	Initialize as	Default	Min Value	Max Value
-------	----------	---------	--------	--------	----------	---------------	---------------	---------	-----------	-----------

		Type		Type		g	Invali d	Value		
0x20a 0	0x22	Unsign ed	8 Bit	Read Only	disabl ed	disabl ed	enable d	0	0	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

Display Backlight

@DisplayBacklight_NoOfEntries

"Number of entries in this group"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x20b 0	0x0	Integer	8 Bit	Read Only	disabl ed	disabl ed	enable d	17	17	17

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity

"Set display backlight intensity directly or activate automatic mode"

0 ... 100: set backlight intensity constant to this percentage

else: Automatic backlight algorithm is active

To make it clear: To activate the automatic backlight dimming based on the ambient light:

Set a value that is NOT between 0 and 100 (e.g. -1). To deactivate the auto backlight

dimming simply set the static value between 0 and 100.

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x20b 0	0x1	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	80	-1	101

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightAmbientLowPassed

"Value calculated from @SensorAmbientLight using @DispBacklightTimeConstant and @DispBacklightFilterFactor. "

@DispBacklightAmbientLowPassed is calculated any @DispBacklightTimeConstant milliseconds as

$$(\text{@DispBacklightAmbientLowPassed} * \text{@DispBacklightFilterFactor}) + (\text{@SensorAmbientLight} * (1000 - \text{@DispBacklightFilterFactor}) / 1000$$

Any manual write to this variable will be ignored.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x2	Integer	16 Bit	Read/Write	enabled	disabled	enabled	80	0	1000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightTimeConstant

"Defines how often @DispBacklightAmbientLowPassed is calculated"

Value in milliseconds how often the low passed ambient light sensor is calculated for the automatic display backlight dimming. See @DispBacklightAmbientLowPassed.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x3	Integer	16 Bit	Read/Write	enabled	disabled	enabled	500	100	1000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightFilterFactor

"Defines balance of old and new values incorporated into

@DispBacklightAmbientLowPassed"

see @DispBacklightAmbientLowPassed

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x4	Integer	16 Bit	Read/Write	enabled	disabled	enabled	800	-1	1000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
--------------------	------------------	---------

Yes	Yes	Yes
-----	-----	-----

@DispBacklightIntensity0

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 0%"
 Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x5	Integer	8 Bit	Read/Write	enabled	disabled	enabled	10	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity10

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 10%"
 Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x6	Integer	8 Bit	Read/Write	enabled	disabled	enabled	15	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity20

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 20%"
 Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x7	Integer	8 Bit	Read/Write	enabled	disabled	enabled	20	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity30

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 30%"
Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x8	Integer	8 Bit	Read/Write	enabled	disabled	enabled	30	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity40

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 40%"
Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x9	Integer	8 Bit	Read/Write	enabled	disabled	enabled	40	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity50

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 50%"
Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0xa	Integer	8 Bit	Read/Write	enabled	disabled	enabled	50	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity60

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 60%"
Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0xb	Integer	8 Bit	Read/Write	enabled	disabled	enabled	60	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity70

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 70%"

Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0xc	Integer	8 Bit	Read/Write	enabled	disabled	enabled	70	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity80

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 80%"

Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0xd	Integer	8 Bit	Read/Write	enabled	disabled	enabled	80	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity90

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 90%"

Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

							Invalid			
0x20b0	0xe	Integer	8 Bit	Read/Write	enabled	disabled	enabled	90	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightIntensity100

"Intensity of display backlight when @DispBacklightAmbient-LowPassed == 100%"

Display backlight intensity between specified values is linearly interpolated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0xf	Integer	8 Bit	Read/Write	enabled	disabled	enabled	100	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightOffset

"Offset to be configured by end user (in case values above are fixed by brand owner)"

see @DispBacklightAmbientLowPassed

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20b0	0x10	Integer	8 Bit	Read/Write	enabled	disabled	enabled	0	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DispBacklightStartupIntensity

"Backlight Intensity that is set by the bootloader at cold boot until hardware daemon is started."

This value is directly stored in the EEPROM of the device.

The intensity will be overwritten by the value in @DispBacklightIntensity once the project is loaded.

Index	Subindex	Storage	Length	Access	Remanent	Force Writin	Initiali ze as	Default	Min Value	Max Value
-------	----------	---------	--------	--------	----------	--------------	----------------	---------	-----------	-----------

		Type		Type		g	Invali d	Value		
0x20b 0	0x12	Integer	8 Bit	Read/ Write	disabl ed	disabl ed	enable d	80	5	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@MinDispBacklightIntensity

"This is the Minimal Backlight Intensity of the display which the hardware daemon allows to set."

The variable is set to 5 by default to prohibit accidentally turning off the display by setting the @DispBacklightIntensity to 0 without a "way back". To be able to set

@DispBacklightIntensity to 0, set this variable to 0 first.

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x20b 0	0x13	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	5	0	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Keyboard Backlight

@KeyboardBacklight_NoOfEntries

"Number of entries in this group"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x20c 0	0x0	Integer	8 Bit	Read Only	disabl ed	disabl ed	enable d	1	1	17

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	Yes

@KeybBacklightIntensity

"Manually set Keyboard Backlight intensity."

0 ... 100: set keyboard backlight intensity constant to this percentage

Automatic keyboard backlight dimming is not supported.

On devices that support @KeyBacklightColor, this variable will dimm the selected color linearly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20c0	0x1	Integer	8 Bit	Read/Write	enabled	disabled	enabled	100	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	Yes

@KeyBacklightColor

Change color of display keyboard backlight

New device generations support the changing of the color of the keyboard backlight. Any RGB value can be set here to change the color. This will then be treated as the master color which can be dimmed with @KybBacklightIntensity.

Value examples:

0xffffffff: white

0xff0000: red

0x00ff00: green

0x0000ff: blue

0x00ffff: cyan

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20c0	0x2	Unsigned	32 Bit	Read/Write	enabled	disabled	enabled	16777215	0	16777215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@EncoderBacklightIntensity

"Manually set Encoder Backlight intensity."

0 ... 100: set keyboard backlight intensity constant to this percentage

Automatic encoder backlight dimming is not supported.

On devices that support @EncoderBacklightColor, this variable will dimm the selected color linearly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x20c0	0x3	Integer	8 Bit	Read/Write	enabled	disabled	enabled	100	-1	100
--------	-----	---------	-------	------------	---------	----------	---------	-----	----	-----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@EncoderBacklightColor

Change color of encoder backlight

New device generations support the changing of the color of the encoder backlight. Any RGB value can be set here to change the color. This will then be treated as the master color which can be dimmed with @EncoderBacklightIntensity.

Value examples:

0xffffffff: white

0xff0000: red

0x00ff00: green

0x0000ff: blue

0x00ffff: cyan

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20c0	0x4	Unsigned	32 Bit	Read/Write	enabled	disabled	enabled	16777215	0	16777215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@KeyBacklightStartupIntensity

"Keypad Intensity that is set by the bootloader at cold boot until hardware daemon is started. This value is directly stored in the EEPROM of the device."

Keyboard Backlight Intensity that is set by the bootloader at cold boot until hardware daemon is started. This value is directly stored in the EEPROM of the device.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20c0	0x12	Integer	8 Bit	Read/Write	disabled	disabled	enabled	100	0	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	No	No

@KeyBacklightStartupColor

Change color AND intensity of keyboard backlight at cold boot.

New device generations support the changing of the color of the keyboard backlight at cold boot. The value that is set represents a 24Bit RGB value for color AND intensity. After application startup the variables @KeyBacklightColor, @KeyBacklightIntensity, @EncoderBacklightColor and @EncoderBacklightIntensity will be the master values for the backlight intensity and color

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20c0	0x13	Unsigned	24 Bit	Read/Write	disabled	disabled	enabled	255	0	16777215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

Beeper

@Beeper_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	17	17	18

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperMaxVolume

"Maximum volume to be used for any beep. Also applied as maximum volume for ISO-VT." Percentage of maximum volume the beeper can provide to be used in combination with @BeeperClickVolume and @BeeperAlarmVolume. Typically set by end user based on ambient noise and personal preferences.

0: beeper completely deactivated

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x1	Integer	8 Bit	Read/Write	enabled	disabled	enabled	40	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperClickVolume

"Volume to be used to acknowledge keypresses with a short beep"

Percentage of @BeeperMaxVolume to be used to when a key is pressed.

0: no beep on key click

If the value is greater 0, a click sound will appear whenever a hard-/softkey or the touch screen is pressed.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x2	Integer	8 Bit	Read/Write	enabled	enabled	enabled	0	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperAlarmVolume

"Volume to be used for alarm beeps"

Percentage of @BeeperMaxVolume to be used to alarm user. Typically set at runtime based on severity of an alarm.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x3	Integer	8 Bit	Read/Write	enabled	enabled	enabled	100	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperEventVolume

"Volume to be used for beep pattern assigned to events"

Percentage of @BeeperMaxVolume to be used to when a beep pattern of an event is played.

This could be a user setting or a variable setting in the script triggered by the event.

0: no beep on events

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x20d 0	0x4	Integer	8 Bit	Read/ Write	enable d	enable d	enable d	100	-1	100
------------	-----	---------	-------	----------------	-------------	-------------	-------------	-----	----	-----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperMinEmergencyAlarmVolume

"Require minimum alarm volume for emergency alarms"

Percentage of maximum volume the beeper can provide. If an emergency alarm with a sound attached occurs, the beeper volume is the maximum of this value and the one calculated from @BeeperMaxVolume and @BeeperAlarmVolume.

Set this value to 0 to have full control about the alarm volume with the variables mentioned above.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d 0	0x5	Integer	8 Bit	Read/ Write	enable d	enable d	enable d	0	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperFrequency

Frequency in Hz of the beeper. Used for all following beeper activations. Only available for devices equipped with a beeper (not for speaker devices)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d 0	0x6	Integer	16 Bit	Read/ Write	enable d	disabled	enable d	1000	0	10000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	No	Yes

@BeeperOnTime

"On time in one beeper interval"

Time in interval where beeper is switched on [ms]

One interval consists of @BeeperOnTime + @BeeperOffTime

Note: On devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x7	Integer	16 Bit	Read/Write	disabled	enabled	enabled	0	-1	32767

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperOffTime

"Off time in one beeper interval"

Time in interval where beeper is switched off [ms]

One interval consists of @BeeperOnTime + @BeeperOffTime

Note: On devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x8	Integer	16 Bit	Read/Write	disabled	enabled	enabled	0	-1	32767

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperRepetitions

"Writing: Number of intervals to perform Reading: Beeper active/non-active"

Beeper will repeat sequence of @BeeperOnTime followed by @BeeperOffTime for @BeeperRepetitions times

This will only succeed if beeper is not occupied by higher priority beeps originating from alarms.

Beeper priorities are:

- Key click (lowest)
- Event based beep patterns
- these variables
- Control audio command (sent to ISO VT)
- Alarms (with respect to their beep priority, highest)

Value is 0 if the beeper is not active. Value is -1 if the beeper is active.

Note: On devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	---------------	---------------	-----------	-----------

							Invalid			
0x20d 0	0x9	Integer	16 Bit	Read/ Write	disabled	enabled	enabled	0	-1	32767

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperClickOn

"Switch beeper on or of for a click"

There should be no need for customers to use this variable. To enable the "click" feature, just apply a proper value to @BeeperClickVolume variable.

The click sound can be enabled by setting this variable to 1 with the volume set in @BeeperClickVolume. But only if it was not turned on by a higher priority before (higher priorities are: event -> VT -> Alarm).

The sound will automatically be switched off after 200ms (this variable will be reset to 0).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d 0	0xa	Integer	2 Bit	Read/ Write	disabled	enabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperAlarmOn

"Switch beeper on or of for an alarm"

Setting to 1 will switch the beeper with volume @BeeperAlarmVolume on. Switching this variable to one will turn all other "@BeeperXXXOn" variables to 0.

Setting 0 to this variable will switch the beeper off.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d 0	0xb	Integer	2 Bit	Read/ Write	disabled	enabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperEventOn

"Switch beeper on or of for an event"

Setting to 1 will switch the beeper with volume @BeeperEventVolume on, but only if it was not turned on by a higher priority before (higher priorities are: VT -> Alarm).

Setting 0 to this variable will switch the beeper off (if no higher priority variable is == 1).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0xc	Integer	2 Bit	Read/Write	disabled	enabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperVariableVolume

"Set beeper volume to be used by @BeeperRepetitions"

Percentage of @BeeperMaxVolume to be used for @BeeperRepetitions

0: no beep on repetitions

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0xd	Integer	8 Bit	Read/Write	enabled	enabled	enabled	0	-1	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperAlarmPattern

"Run an alarm's beep pattern"

When setting a value to this variable, a beep pattern is played on the device's beeper. The pattern is bitwise encoded into the value of this variable (20 values for on and off).

This pattern will be played with volume set in @BeeperAlarmVolume.

e.g.: value is 5, bitwise: 00000000000000000101 resulting beep pattern:

100ms on

100ms off

100ms on

1700ms off

The pattern will be repeated for @BeeperAlarmRepetition times.

Note: On devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

		Type		Type		g	Invali d	Value		
0x20d 0	0xe	Integer	32 Bit	Read/ Write	disabl ed	enable d	enable d	0	-1	16777 215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperEventPattern

"Run an event's beep pattern"

When setting a value to this variable, a beep pattern is played on the device's beeper. The pattern is bitwise encoded into the value of this variable (20 values for on and off).

This pattern will be played with volume set in @BeeperEventVolume.

e.g.: value is 5, bitwise: 00000000000000000101 resulting beep pattern:

100ms on

100ms off

100ms on

1700ms off

The pattern will be repeated for @BeeperEventRepetition times.

Note: On devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x20d 0	0xf	Integer	32 Bit	Read/ Write	disabl ed	enable d	enable d	0	-1	16777 215

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperAlarmRepetitions

"Writing: Number of intervals to perform. Reading: Beeper active/non-active" Note: On

devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Defines how often @BeeperAlarmPattern will be repeated.

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x20d 0	0x10	Integer	16 Bit	Read/ Write	disabl ed	enable d	enable d	0	-1	32767

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperEventRepetitions

"Writing: Number of intervals to perform. Reading: Beeper active/non-active" Note: On devices with a speaker, short interval times (less than 300ms) might not trigger the speaker at the beginning of the pattern.

Defines how often @BeeperEventPattern will be repeated.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x11	Integer	16 Bit	Read/Write	disabled	enabled	enabled	0	-1	32767

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@BeeperIsActive

"Provides the current state of the beeper processing."

Returns:

-1: Read Error

0: Beeper not active

1: AlarmPattern active

2: AlarmOn active

3: Repetition active

4: EventPattern active

5: EventOn active

6: ClickOn active

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x12	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	-1	6

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VolumeLevelSpeaker

Set the master volume of the internal speaker.

Use this variable to set the master volume level of the internal speaker (0% to 100%).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x13	Integer	8 Bit	Read/Write	enabled	enabled	enabled	100	0	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@VolumeLevelLineOut

Set the master volume of the audio line out.

Use this variable to set the master volume level of the line out channel (0% to 100%).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20d0	0x14	Integer	8 Bit	Read/Write	enabled	enabled	enabled	100	0	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

RTC

@RTC_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	7	7	11

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_Year

"Local date: Year"

Current year from the device's RTC chip. Note that the max. year is currently restricted to 2037 until all OS versions have proper support for dates beyond Jan 19th 2038.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x1	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	2037

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_Month

"Local date: Month"

Current month from the device's RTC chip.

1: January

2: February

...

12: December

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x2	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	12

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_Day

"Local date: Day"

Current day from the device's RTC chip.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x3	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	31

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_Hours

"Local time: Hours"

Current hour from the device's RTC chip.

writing to this variable will also change @RTC_HoursAMPM and @RTC_AMPM accordingly

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x5	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	23

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_Minutes

"Local time: Minutes"

Current minute from the device's RTC chip.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x6	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	59

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_Seconds

"Local time: Seconds"

Current second from the device's RTC chip.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x7	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	59

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_HoursAMPM

"Same as @RTC_Hours, but in am/pm format"

Current hour in AMPM format from the device's RTC chip.

writing to this variable will also change @RTC_Hours accordingly

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x8	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	12

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RTC_AMPM

"Am/pm flag for @RTC_HoursAMPM"

writing to this variable will also change @RTC_Hours accordingly

0: AM, 1: PM

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2100	0x9	Integer	8 Bit	Read/Write	disabled	disabled	enabled	-1	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

CAN 1 Controller**@CAN1Controller_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2120	0x0	Integer	32 Bit	Read Only	disabled	disabled	enabled	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
--------------------	------------------	---------

Yes	Yes	Yes
-----	-----	-----

@CAN1_State

State of CAN controller 1

The following values describe the state of the CAN controller:

0x00: Controller switched off

0x01: Controller is active, no errors

0x02: Error active state

0x03: Error passive state

0x04: Bus off state

0xff: Device Error

It is possible to write the values 0 to this variable to switch the CAN controller off and 1 to switch it on.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2120	0x1	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN1_MsgReceived

"Messages received by terminal in last second."

Counter of messages read from the bus during the last second.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2120	0x2	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN1_MsgSent

"Messages sent by terminal in last second."

Counter of messages sent to the bus by the PCClient during the last second.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x212 0	0x3	Integer	32 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	21474 83647
------------	-----	---------	--------	--------------	--------------	--------------	-------------	----	----	----------------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN1_Bitrate

Read or set the CAN bitrate of CAN Port 1. The value is in Bit per second.

If the bitrate is changed while the CAN controller is running, it will be shut down and the new bitrate will be set. If this was successful, the CAN controller will be started again with the new bitrate.

If the new bitrate could not be set, the old bitrate will be set again.

If the CAN controller is off when setting the new bitrate, it will not be started after setting the bitrate.

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x212 0	0x4	Unsign ed	32 Bit	Read/ Write	disabl ed	enable d	enable d	25000 0	20000	10000 00

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

CAN 2 Controller

@CAN2Controller_NoOfEntries

"Number of entries in this group"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x212 1	0x0	Integer	32 Bit	Read Only	disabl ed	disabl ed	enable d	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN2_State

State of CAN controller 2

The following values describe the state of the CAN controller:

0x00: Controller switched off

0x01: Controller is active, no errors

0x02: Error active state
 0x03: Error passive state
 0x04: Bus off state
 0xff: Device Error

It is possible to write the values 0 to this variable to switch the CAN controller off and 1 to switch it on.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 1	0x1	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN2_MsgReceived

"Messages received by terminal in last second."

Counter of messages read from the bus during the last second.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 1	0x2	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	21474 83647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN2_MsgSent

"Messages sent by terminal in last second."

Counter of messages sent to the bus by the PClient during the last second.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 1	0x3	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	21474 83647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CAN2_Bitrate

Read or set the CAN bitrate of CAN Port 2. The value is in Bit per second.

If the bitrate is changed while the CAN controller is running, it will be shut down and the new bitrate will be set. If this was successful, the CAN controller will be started again with the new bitrate.

If the new bitrate could not be set, the old bitrate will be set again.

If the CAN controller is off when setting the new bitrate, it will not be started after setting the bitrate.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 1	0x4	Unsigned	32 Bit	Read/Write	disabled	enabled	enabled	250000	20000	1000000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

CAN 3 Controller

@CAN3Controller_NoOfEntries

"Number of entries in this group"

Only supported on devices with 3 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 2	0x0	Integer	32 Bit	Read Only	disabled	disabled	enabled	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN3_State

State of CAN controller 3

The following values describe the state of the CAN controller:

0x00: Controller switched off

0x01: Controller is active, no errors

0x02: Error active state

0x03: Error passive state

0x04: Bus off state

0xff: Device Error

It is possible to write the values 0 to this variable to switch the CAN controller off and 1 to switch it on.

Only supported on devices with 3 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2122	0x1	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN3_MsgReceived

"Messages received by terminal in last second."

Counter of messages read from the bus during the last second.

Only supported on devices with 3 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2122	0x2	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN3_MsgSent

"Messages sent by terminal in last second."

Counter of messages sent to the bus by the PClient during the last second.

Only supported on devices with 3 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2122	0x3	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN3_Bitrate

Read or set the CAN bitrate of CAN Port 3. The value is in Bit per second.

If the bitrate is changed while the CAN controller is running, it will be shut down and the new bitrate will be set. If this was successful, the CAN controller will be started again with the new bitrate.

If the new bitrate could not be set, the old bitrate will be set again.

If the CAN controller is off when setting the new bitrate, it will not be started after setting the bitrate.

Only supported on devices with 3 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 2	0x4	Unsigned	32 Bit	Read/Write	disabled	enabled	enabled	250000	20000	100000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

CAN 4 Controller

@CAN4Controller_NoOfEntries

"Number of entries in this group"

Only supported on devices with 4 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x212 3	0x0	Integer	32 Bit	Read Only	disabled	disabled	enabled	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN4_State

State of CAN controller 4

The following values describe the state of the CAN controller:

0x00: Controller switched off

0x01: Controller is active, no errors

0x02: Error active state

0x03: Error passive state

0x04: Bus off state

0xff: Device Error

It is possible to write the values 0 to this variable to switch the CAN controller off and 1 to switch it on.

Only supported on devices with 4 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

							Invalid			
0x2123	0x1	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN4_MsgReceived

"Messages received by terminal in last second."

Counter of messages read from the bus during the last second.

Only supported on devices with 4 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2123	0x2	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN4_MsgSent

"Messages sent by terminal in last second."

Counter of messages sent to the bus by the PClient during the last second.

Only supported on devices with 4 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2123	0x3	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@CAN4_Bitrate

Read or set the CAN bitrate of CAN Port 4. The value is in Bit per second.

If the bitrate is changed while the CAN controller is running, it will be shut down and the new bitrate will be set. If this was successful, the CAN controller will be started again with the new bitrate.

If the new bitrate could not be set, the old bitrate will be set again.

If the CAN controller is off when setting the new bitrate, it will not be started after setting the

bitrate.

Only supported on devices with 4 or more CAN controllers.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2123	0x4	Unsigned	32 Bit	Read/Write	disabled	enabled	enabled	250000	20000	100000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

Filesystem

@Filesystem_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	8	8	8

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CurrentDirectory

"Currently selected directory (full qualified file path)"

e.g.: "/opt/user_files/"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x1	String	255 Byte	Read/Write	enabled	enabled	enabled	/proc		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CurrentFile

"Currently selected file (file name only)"

e.g.: "test.txt"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x2	String	255 Byte	Read/Write	enabled	enabled	enabled	cpuinfo		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DestinationDirectory

"The destination directory where @CurrentDirectory and @CurrentFile can be copied or moved to"

e.g.: "/disk/usb_sda1/".

Should not be written manually unless it's secured that the directory exists.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x3	String	255 Byte	Read/Write	enabled	enabled	enabled	/tmp		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CopyFileOrFolder

Copy or move directory or file. Also use '@USBMemStatus' variable if USB stick is involved.

0: No action

1: Copy @CurrentDirectory/@CurrentFile to @DestinationDirectory

2: Move @CurrentDirectory/@CurrentFile to @DestinationDirectory

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x4	Integer	8 Bit	Read/Write	disabled	disabled	enabled	0	-1	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FilePath

"A valid full qualified file system path"

e.g.: "/opt/user_files/"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x5	String	255 Byte	Read/Write	enabled	disabled	enabled	/opt		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UsedMemoryPartition

"Shows the used memory in kilobytes of the partition on which @FileSystemPath is located"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x6	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FreeMemoryPartition

"Shows the free memory in kilobytes of the partition on which @FileSystemPath is located"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2130	0x7	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CurrentFileSize

"Shows the file size of @CurrentFile in kilobytes"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

							Invalid			
0x2130	0x8	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Ethernet

@Ethernet_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	21	21	23

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet0_IPAddress

Currently set IpAddress (default 192.168.135.6).

Last IP address set via hardware daemon.

Please note that there are other sources for IP address such as start scripts and UD4 update via Ethernet.

The one set in a script may differ from this one but anyways be active.

So if more than one of the IP mechanisms should be used they should all be configured to the same IP address and netmask.

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x1	String	15 Byte	Read/Write	enabled	disabled	enabled	192.168.135.6		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet0_Netmask

"Currently set Netmask, can be set via Variable (default 255.255.255.0)"

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x2	String	15 Byte	Read/Write	enabled	disabled	enabled	255.255.255.0		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet0_Gateway

"Currently set Gateway for Internet Connections (default 192.168.135.1)"

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x3	String	15 Byte	Read/Write	enabled	disabled	enabled	192.168.135.1		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet0_UpAtStart

"Should the adapter be started at device startup? 1 = yes 0 = no; Default = 0"

Note that this variable only has an effect if DhcpClientEnabled is set to 0. If it is set to 1, the network interface will be started on every boot.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x4	Integer	2 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet1_IPAddress

"Currently set IpAddress (default 192.168.135.2)"

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x5	String	15 Byte	Read/Write	enabled	disabled	enabled	192.168.135.2		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Ethernet1_Netmask

"Currently set Netmask, can be set via Variable (default 255.255.255.0)"

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x6	String	15 Byte	Read/Write	enabled	disabled	enabled	255.255.255.0		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Ethernet1_Gateway

"Currently set Gateway for Internet Connections (default 192.168.135.1)"

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x7	String	15 Byte	Read/Write	enabled	disabled	enabled	192.168.135.1		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Ethernet1_UpAtStart

"Should the adapter be started at startup? 1 = yes 0 = no; Default = 0"

Note that this variable only has an effect if DhcpClientEnabled is set to 0. If it is set to 1, the network interface will be started on every boot.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x8	Integer	2 Bit	Read/Write	enabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Ethernet0_applynstart

"Allows applying Ethernet settings"

If set to 1 the 'new' or 'currently' available values in ip, netmask and gateway variables are applied to the network adapter. The adapter is started and the variable is set back to 0. Default is 0.

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x14	Integer	2 Bit	Read/Write	disabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet1_applynstart

"Allows applying Ethernet settings"

If set to 1 the 'new' or 'currently' available values in ip, netmask and gateway variables are applied to the network adapter. The adapter is started and the variable is set back to 0. Default is 0.

Note that writing to this variable has no effect if DhcpClientEnabled is set to 1.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x15	Integer	2 Bit	Read/Write	disabled	disabled	enabled	0	-1	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Ethernet0_MasterConfig

"Master/Slave configuration for automotive ethernet devices. 1: Master, 0: Slave"

Only available on devices equipped with automotive ethernet (100BASE-TX, BroadR-Reach). If value of this variable is 1, the interface is configured as master (= > slave devices can be directly connected). If value is 0, the interface is configured as slave (= > master devices can be directly connected). All other values = > invalid. Note that if ethernet is already running when this variable is changed, the ethernet interface will be switched off before the master/slave configuration is done and switched on again when the configuration was finished.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x16	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	Yes	No

@Ethernet0_DhcpClientEnabled

Enable (1) or disable (0) the dhcp client for the Ethernet0 interface.

When enabling the dhcp client, the IP, netmask, gateway etc. will be set automatically if a dhcp server is reachable on that interface. When disabling the DHCP client after it was active, make sure to write all of the network settings after that.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x17	Integer	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Ethernet1_DhcpClientEnabled

Enable (1) or disable (0) the dhcp client for the Ethernet1 interface.

When enabling the dhcp client, the IP, netmask, gateway etc. will be set automatically if a dhcp server is reachable on that interface. When disabling the DHCP client after it was active, make sure to write all of the network settings after that.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2140	0x18	Integer	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

RS232

@RS232_NoOfEntries

Number of variables in this group

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2150	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ConsoleMode

Change the Linux console mode of the device (new mode is active after reboot).

Possible values:

0: Console on RS232

1: Console disabled

2: Console on first USB serial adapter (use Null-Modem Cable)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2150	0x1	Unsigned	8 Bit	Read/Write	disabled	enabled	enabled	0	0	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

PCClient

User Inputs

@UserInputs_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0x0	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	15	15	15

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserEncoder1Clicks

"Amount of encoder clicks since last reset."

Counts encoder clicks

+1: encoder turned one click clockwise

-1: encoder turned one click anti-clockwise

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0x1	Integer	32 Bit	Read/Write	disabled	disabled	enabled	0	-2147483647	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserButtonPressed

"Keycode of button currently pressed. -1 if no button is pressed"

Please note that not all keys are available on all devices.

Key codes:

0 - ESC

1 - Home

2 - Three Arrow Key

3 - Enter (Encoder)

6 - Stop

7 - Power Button

200 - Left Key 1

201 - Left Key 2

202 - Left Key 3

203 - Left Key 4

204 - Left Key 5

205 - Left Key 6
 100- Right Key 1
 101 - Right Key 2
 102 - Right Key 3
 103 - Right Key 4
 104 - Right Key 5
 105 - Right Key 6
 106 - Right Key 7
 107 - Right Key 8

If multiple buttons are pressed at the same time, this variable only shows the last pressed key code. To handle multiple keys at the same time, use variable @UserMultiPressed_XX

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0x4	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserButtonDoubleClick

"Keycode of last button double clicked."

Keycodes: see @UserButtonPressed. Note that this variable is reset to -1 on every button press to make it possible to detect multiple double clicks of the same button.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0x6	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserButtonReleased

"Keycode of last button released."

Keycodes: see @UserButtonPressed

-1 if there is at least one button pressed.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x207 0	0x7	Integer	32 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	21474 83647
------------	-----	---------	--------	--------------	--------------	--------------	-------------	----	----	----------------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserMultiButtonPressed_00

"Keys bitwise encoded so that press of multiple keys can be detected."

Bit pattern is device independent:

bit 0 ... 15: Softkeys right of display, counted from the top

bit 16 ... 32: Softkeys left of display, counted from the top

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x207 0	0x8	Unsign ed	32 Bit	Read Only	disabl ed	disabl ed	enable d	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserMultiButtonPressed_01

"Keys bitwise encoded so that press of multiple keys can be detected. To be used if terminal has more than 32 keys or to keep bit pattern device independent as long as possible."

Bit pattern is device independent

bit 0 ... 15: Softkeys top of display, counted from the right (bit pattern similar to physical key position)

bit 16 ... 32: Softkeys bottom of display, counted from the right (bit pattern similar to physical key position)

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x207 0	0x9	Unsign ed	32 Bit	Read Only	disabl ed	disabl ed	enable d	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserMultiButtonPressed_02

"Keys bitwise encoded so that press of multiple keys can be detected. To be used if terminal has more than 64 keys or to keep bit pattern device independent as long as

possible."

Bit pattern is device dependent

Bit 0: ESC

Bit 1: home key

Bit 2: three arrow key

Bit 3: Encoder Press

Bit 6: Stop key

Bit 7: Power Button

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0xa	Unsigned	32 Bit	Read Only	disabled	disabled	enabled	0	0	0

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserTouchPressedX

"X coordinate where touch screen was pressed last time"

Coordinates are given in display coordinates starting with (0, 0) in the upper left corner

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0xc	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserTouchPressedY

"Y coordinate where touch screen was pressed last time"

Coordinates are given in display coordinates starting with (0, 0) in the upper left corner

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0xd	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserTouchReleasedX

"X coordinate where touch screen was released last time"

Coordinates are given in display coordinates starting with (0, 0) in the upper left corner

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0xe	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UserTouchReleasedY

"Y coordinate where touch screen was released last time"

Coordinates are given in display coordinates starting with (0, 0) in the upper left corner

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0xf	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	1023

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@MultiTouchEnabled

Enable (value 1) or disable (value 0) multi touch functionality

If multi touch functionality is enabled, multiple objects can receive touch events (e.g. multiple buttons can be operated at the same time). When multi touch functionality is disabled, only one element on the screen can be touched.

Warning: When multi touch functionality gets disabled (setting the value of this variable from 1 to 0), all currently pressed objects will be cancelled.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2070	0x10	Integer	2 Bit	Read/Write	enabled	disabled	disabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Camera1

@Camera1_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	13	13	13

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Brightness

"brightness setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0x1	Integer	8 Bit	Read/Write	enabled	disabled	disabled	0	-127	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Contrast

"contrast setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0x2	Integer	16 Bit	Read/Write	enabled	disabled	disabled	127	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Saturation

"color saturation setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0x3	Integer	16 Bit	Read/Write	enabled	disabled	disabled	127	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Hue

"hue setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0x4	Integer	8 Bit	Read/Write	enabled	disabled	disabled	0	-127	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	No	No

@Cam1Interface

"Path to device file that is used for video input 1. Default value is device dependent"

Names of the interface is terminal dependent. On terminals with only one camera input this variable is ignored.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0x5	String	255 Byte	Read Only	enabled	disabled	disabled	/dev/video0		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Name

"Name of camera position"

e.g. "rearview", "left sweeper"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	---------------	---------------	-----------	-----------

							Invalid			
0x20e0	0x6	String	255 Byte	Read/Write	enabled	disabled	disabled	Camera1		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Rotation

"Rotation of the video in degrees. Possible values are 0 or 90 degree. Any other value will have no effect. Other rotation values can only be achieved in combination with @Cam1Mirror."

Set the video rotation. Possible values:
0, 90

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0xc	Integer	16 Bit	Read/Write	disabled	enabled	disabled	0	0	90

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam1Mirror

"Set/Get Mirror settings for camera"

Possible values:

0: No mirroring

1: Horizontal mirroring

2: Vertical mirroring

3: Horizontal and Vertical mirroring

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e0	0xd	Integer	8 Bit	Read/Write	disabled	enabled	disabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

Camera2

@Camera2_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	13	13	13

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Brightness

"brightness setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0x1	Integer	8 Bit	Read/Write	enabled	disabled	disabled	0	-127	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Contrast

"contrast setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0x2	Integer	16 Bit	Read/Write	enabled	disabled	disabled	127	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Saturation

"color saturation setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

							Invalid			
0x20e1	0x3	Integer	16 Bit	Read/Write	enabled	disabled	disabled	127	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Hue

"hue setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0x4	Integer	8 Bit	Read/Write	enabled	disabled	disabled	0	-127	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Interface

"Path to device file that is used for video input 2. Default value is device dependent"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0x5	String	255 Byte	Read Only	enabled	disabled	disabled	/dev/video0		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Name

"Name of camera position"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0x6	String	255 Byte	Read/Write	enabled	disabled	disabled	Camera2		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Rotation

"Rotation of the video in degrees. Possible values are 0 or 90 degree. Any other value will have no effect. Other rotation values can only be achieved in combination with @Cam2Mirror."

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0xc	Integer	16 Bit	Read/Write	disabled	enabled	disabled	0	0	90

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@Cam2Mirror

"Set/Get Mirror settings for camera"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e1	0xd	Integer	8 Bit	Read/Write	disabled	enabled	disabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

Camera3**@Camera3_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	13	13	13

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
--------------------	------------------	---------

Yes	No	No
-----	----	----

@Cam3Brightness

"brightness setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x1	Integer	8 Bit	Read/Write	enabled	disabled	disabled	0	-127	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Cam3Contrast

"contrast setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x2	Integer	16 Bit	Read/Write	enabled	disabled	disabled	127	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Cam3Saturation

"color saturation setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x3	Integer	16 Bit	Read/Write	enabled	disabled	disabled	127	-1	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Cam3Hue

"hue setting"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x4	Integer	8 Bit	Read/Write	enabled	disabled	disabled	0	-127	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
No	No	No

@Cam3Interface

"Path to device file that is used for video input 3. Default value is device dependent"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x5	String	255 Byte	Read Only	enabled	disabled	disabled	/dev/video0		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Cam3Name

"Name of camera position"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0x6	String	255 Byte	Read/Write	enabled	disabled	disabled	Camera3		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Cam3Rotation

"Rotation of the video in degrees. Possible values are 0 or 90 degree. Any other value will have no effect. Other rotation values can only be achieved in combination with

@Cam3Mirror."

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x20e2	0xc	Integer	16 Bit	Read/Write	disabled	enabled	disabled	0	0	90
--------	-----	---------	--------	------------	----------	---------	----------	---	---	----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

@Cam3Mirror

"Set/Get Mirror settings for camera"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x20e2	0xd	Integer	8 Bit	Read/Write	disabled	enabled	disabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	No	No

Language / Unit Settings

@LanguageUnits_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	13	13	13

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsLanguageEnum

"Number of language currently selected. (Set the current language with this variable)"

Enumeration is defined in the Project; directly affects @SettingsLanguageCode

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x1	Unsigned	8 Bit	Read/Write	enabled	disabled	enabled	0	0	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsLanguageCode

"Two byte code for language currently set Default value will match language [0] since default of '@SettingsLanguageEnum' is 0"

similar to ISO 11783-7, A.23.1, codes according to ISO 639 e.g.

"de": german

"en": english

"fr": french

"nl": dutch

As defined in the project.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x2	String	2 Byte	Read Only	disabled	disabled	enabled	de		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsDecimalSymbol

"Symbol used to display numbers with a fractional part"

similar to ISO 11783-7, A.23.2

0: comma

1: point

This affects all numeric fields in the project displaying decimal values with a scaling factor.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x3	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsDateFormat

"date format to be used"

similar to ISO 11783-7, A.23.3

0: ddmmyyyy

1: ddyymm

2: mmyyyydd

3: mmddyyyy

4: yyyyymmdd

5: yyyyddmm

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x4	Unsigned	8 Bit	Read/Write	enabled	disabled	enabled	0	0	5

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsTimeFormat

"time format to be used"

similar to ISO 11783-7, A.23.4

0: 24 h

1: 12 h, am/pm

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x5	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsDistanceUnits

"type of distance units to be used"

similar to ISO 11783-7, A.23.5.2

0: metric [mm, m, km]

1: imperial [in, ft, mls]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x6	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsAreaUnits

"type of area units to be used"

similar to ISO 11783-7, A.23.5.3

0: metric [m², ha (hectares)]

1: imperial [square feet, acres]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x7	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsVolumeUnits

"type of volume units to be used"

similar to ISO 11783-7, A.23.5.4

0: metric [mm³, m³, l]

1: imperial [ga (gallon)]

2: US [ga (gallon)]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x8	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsMassUnits

"type of mass units to be used"

similar to ISO 11783-7, A.23.5.5

0: metric [g, kg, t]

1: imperial [long tonnes (UK), pounds]

2: US [short tonnes (US), pounds]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0x9	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsTemperatureUnits

"type of temperature units to be used"

similar to ISO 11783-7, A.23.5.6

0: metric [°K, °C]

1: imperial [°F]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0xa	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsPressureUnits

"type of pressure units to be used"

similar to ISO 11783-7, A.23.5.7

0: metric [hP, kP, P (Pascal)]

1: imperial [PSI]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2200	0xb	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsForceUnits

"type of force units to be used"

similar to ISO 11783-7, A.23.5.8

0: metric [kN, N (Newton)]

1: imperial [pounds-force]

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x220 0	0xc	Unsign ed	2 Bit	Read/ Write	enable d	disabl ed	enable d	0	0	1
------------	-----	--------------	-------	----------------	-------------	--------------	-------------	---	---	---

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@SettingsUnitSystem

"general unit system setting"

similar to ISO 11783-7, A.23.5.9

0: metric

1: imperial

2: US

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x220 0	0xd	Unsign ed	2 Bit	Read/ Write	enable d	disabl ed	enable d	0	0	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

System Settings

@SystemSettings_NoOfEntries

"Number of entries in this group"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x224 0	0x0	Unsign ed	8 Bit	Read Only	disabl ed	disabl ed	enable d	15	15	15

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@EnableUpdater

"Enable/Disable the ClientUpdater for e.g. updating the project on the device."

Bitwise coding:

Bit 0: USB update

Bit 1: CAN update

Bit 2: ETH update

Example: 7 enables all three ways to update. 5 enables USB and ETH. 2 enables CAN only. 0 disables all update possibilities.

After setting this variable the interfaces are immediately enabled. No restart is required.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2240	0x1	Unsigned	8 Bit	Read/Write	enabled	enabled	disabled	1	0	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UpdaterCANPort

Sets the CAN Port for updates of the ClientUpdater.

0: CAN Port 1 is used

1: CAN Port 2 is used.

WARNING:

This setting is only temporary. After a restart of the ClientUpdater or a device restart the settings in the loaded project will be restored.

When a new CAN Port is set, the Clientupdater will change to the new Port directly. Please check also that the baudrate of the new CAN Port is configured properly.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2240	0x2	Unsigned	8 Bit	Read/Write	disabled	disabled	disabled	1	0	255

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@EncoderDirection

Change navigation direction of encoder.

0: Select next: turn encoder counter-clockwise

1: Select next: turn encoder clockwise

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2240	0x3	Unsigned	8 Bit	Read/Write	disabled	disabled	disabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@minFreeRAM

Try to free RAM if level falls below this many megabytes.

If available RAM (in MB) falls below this level, currently unused images get deleted and memory gets defragmented.

If this happens it indicates that the systems's limits are reached.

It's not recommended to set this below the default value.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2240	0x4	Unsigned	8 Bit	Read/Write	disabled	disabled	disabled	50	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@onlyKeepShownImagesInRAM

0: Cache images. 1: Free RAM by NOT caching images.

0: Images are cached, so that pages load faster when being revisited. 1: Don't cache images to prevent RAM shortage.

Should only be set at startup.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2240	0x5	Unsigned	8 Bit	Read/Write	disabled	disabled	disabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Projekt

@Projekt_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x2400	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	15	15	15
--------	-----	---------	-------	-----------	----------	----------	---------	----	----	----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektVersion

"Projekt version defined by brand owner."

User defined string set in project to identify the version of the project that is currently loaded.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x1	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektReleaseDate

"Projekt release date defined by brand owner."

User defined string set in the project properties to identify the release date of the project currently loaded.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x2	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektCurrentPage

"get/set number of page currently visible"

Page number as defined in project.

Additionally the following numbers can be set:

0: Home Page

-1: Jump one page back

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x3	Integer	32 Bit	Read/Write	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektHistoryPage01

"get page that was current page before the one listed in @ProjektCurrentPage"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x4	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektHistoryPage02

"get page that was current page before the one listed in @ProjektHistoryPage01"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x5	Integer	32 Bit	Read Only	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektHistoryPage03

"get page that was current page before the one listed in @ProjektHistoryPage02"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x240 0	0x6	Integer	32 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	21474 83647
------------	-----	---------	--------	--------------	--------------	--------------	-------------	----	----	----------------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektHistoryPage04

"get page that was current page before the one listed in @ProjektHistoryPage03"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x240 0	0x7	Integer	32 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	21474 83647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektHistoryPage05

"get page that was current page before the one listed in @ProjektHistoryPage04"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x240 0	0x8	Integer	32 Bit	Read Only	disabl ed	disabl ed	enable d	-1	-1	21474 83647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektSkinSelected

"Skin currently active on screen"

This is currently not supported!

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x240 0	0xb	Integer	8 Bit	Read/ Write	enable d	disabl ed	enable d	0	-1	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
---------------------------	-------------------------	----------------

Yes	Yes	Yes
-----	-----	-----

@ProjektTimePage

"Time elapsed since PClient switched to current page"

Time in ms since this page was initialized to be shown.

Could be used to control some animation.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0xc	Integer	32 Bit	Read Only	disabled	disabled	enabled	0	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektTakeScreenshot

"If this variable is set to 1, a screenshot will be generated. Will automatically set back to 0."

The resulting screenshots will be saved on the device in the folder /opt/screenshots/

Reading this variable does not make sense.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0xe	Unsigned	2 Bit	Read/Write	disabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PClientVersion

"Version of the PClient"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0xf	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PClientSimulationMode

"Enable or disable PClient simulation mode"

Enable or disable PClient simulation mode (when enabled, variable simulation can connect to PClient via Ethernet), see also @PClientSimulationPort

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x10	Unsigned	2 Bit	Read/Write	disabled	disabled	disabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@PClientSimulationPort

"The TCP/IP port that shall be used for simulation applications."

The IP address for the TCP/IP connection is taken from @Ethernet0_IPAddress

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2400	0x11	Unsigned	16 Bit	Read/Write	enabled	disabled	disabled	1337	256	9999

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ChangeSoftkeyLevel

"Use this variable to trigger the change of the softkey level on the current page. See detailed description for allowed values."

The following values are accepted:

100: Right softkey frame level down

101: Right softkey frame level up

200: Left softkey frame level down

201: Left softkey frame level up

300: Top softkey frame level down

301: Top softkey frame level up

400: Bottom softkey frame level down

401: Bottom softkey frame level up

The value will be reverted back to 0 directly after writing.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x240 0	0x12	Unsign ed	8 Bit	Read/ Write	disabl ed	enable d	disabl ed	0	0	401
------------	------	--------------	-------	----------------	--------------	-------------	--------------	---	---	-----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProjektTakeScreenshotName

Provide a path and name for a screenshot that is taken with @ProjektTakeScreenshot. With this variable a path and name for a screenshot can be defined. This string is then used when @ProjektTakeScreenshot is set to 1 to take the screenshot.

The value that is set to this variable always needs to contain a path that ends with a file name. The file extension should be omitted, it is automatically created when taking the screenshot (.png).

The string is checked as soon as @ProjektTakeScreenshot is set to 1. If the string does not contain a valid path AND file name, the standard path and name are used to take the screenshot.

If a screenshot with a given name already exists, a number will be appended automatically. A valid value for this variable is e.g. "/disk/usbsda1/myPath/myFileName" (it is important that it does not end with a /).

An invalid value is e.g. "myName" (it contains no path) or "/opt/" (it contains no name).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x240 0	0x13	String	255 Byte	Read/ Write	disabl ed	disabl ed	disabl ed			

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Variable Logging

@VariableLogging_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x241 0	0x0	Integer	8 Bit	Read Only	disabl ed	disabl ed	enable d	12	12	12

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogLevel

"Select Level of data currently logged."

Set loglevel so that data is logged according to this level defined in project.

0: Logging switched off

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x1	Unsigned	8 Bit	Read/Write	enabled	disabled	enabled	0	0	10

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogPath

"Path to folder where logging files are stored."

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x2	String	255 Byte	Read/Write	enabled	disabled	enabled	/opt/pc client/logfiles		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCopyPath

"Path where folder with logging files shall be copied/moved"

This path is intended to point to a removable media or remote computer where data is copied on demand e.g. at the end of each day

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x4	String	255 Byte	Read/Write	enabled	disabled	enabled	/disk/usb/usb1		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCopyNow

"Trigger copying / moving current log file and start a new file."

0: Do nothing

1: Copy log file from @LogPath to @LogCopyPath

2: Move log file from @LogPath to @LogCopyPath

Value is reset to 0 when copying/moving is finished

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x5	Unsigned	8 Bit	Read/Write	disabled	disabled	enabled	0	0	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCopyProgress

"Show progress of copying / moving log data."

Progress from 0 ... 100 percent.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x6	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	0	0	100

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCopyAllNow

"Trigger copying / moving of all files inside @LogPath and start a new file."

0: Do nothing

1: Copy all log files from @LogPath to @LogCopyPath

2: Move all log files from @LogPath to @LogCopyPath

Value is reset to 0 when copying/moving is finished

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x7	Unsigned	8 Bit	Read/Write	disabled	disabled	enabled	0	0	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCurrentLogFileName

"Name of the current log file without the leading path"

The name of the log file as configured in the program. Contained tags are replaced (see variable logging documentation)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x8	String	255 Byte	Read Only	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCurrentLogFileSize

"The current file size of the log file in kilobytes"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0x9	Unsigned	32 Bit	Read Only	disabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogMaximumLogFileSize

"The maximum log file size in kilobytes"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0xa	Integer	32 Bit	Read/Write	enabled	disabled	enabled	-1	-1	10000

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCopyError

"Error Number 0 = OK"

If the copy / move feature fails in some way, you can see the error code here.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0xb	Unsigned	32 Bit	Read/Write	enabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@LogCopyFinished

"0 = in Progress 1 = finished"

If you started the copy / move process you can determine if the process is finished. If the process is finished and @LogCopyProgress < 100 you can read out @LogCopyError

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2410	0xc	Unsigned	1 Bit	Read/Write	enabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Visibility**@Visibility_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	66	66	66

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VisibilityStore

"Store visibility of one or all visibility variable(s) remanently and overwrite the initial setting"

-1: do nothing

XX == 00 ... 63: store @VisibilityXX remanently.

0xa5a5: All visibility variables are stored.

When storing is finished, value is reset to -1.

Reading this variable will always return -1

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x1	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	42405

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VisibilityReadRemanent

"Reload visibility of one or all visibility variable(s) from remanently stored value and overwrite the current setting"

-1: do nothing

XX == 00 ... 63: overwrite @VisibilityXX with remanently stored value.

0xa5a5: All visibility variables are restored from remanently stored values.

When overwriting is finished, value is reset to -1.

Reading will always return -1

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x2	Integer	16 Bit	Read/Write	disabled	disabled	enabled	-1	-1	42405

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility00

"Represents Visibility group 00"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x242 0	0x3	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	-----	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility01

"Represents Visibility group 01"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x4	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility02

"Represents Visibility group 02"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x5	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility03

"Represents Visibility group 03"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x6	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	-----	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility04

"Represents Visibility group 04"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x7	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility05

"Represents Visibility group 05"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x8	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility06

"Represents Visibility group 06"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x9	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	-----	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility07

"Represents Visibility group 07"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0xa	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility08

"Represents Visibility group 08"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0xb	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility09

"Represents Visibility group 09"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x2420	0xc	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535
--------	-----	----------	--------	------------	----------	----------	---------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility10

"Represents Visibility group 10"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0xd	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility11

"Represents Visibility group 11"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0xe	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility12

"Represents Visibility group 12"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x2420	0xf	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535
--------	-----	----------	--------	------------	----------	----------	---------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility13

"Represents Visibility group 13"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x10	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility14

"Represents Visibility group 14"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x11	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility15

"Represents Visibility group 15"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x242 0	0x12	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility16

"Represents Visibility group 16"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x13	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility17

"Represents Visibility group 17"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x14	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility18

"Represents Visibility group 18"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x15	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility19

"Represents Visibility group 19"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x16	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility20

"Represents Visibility group 20"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x17	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility21

"Represents Visibility group 21"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x18	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility22

"Represents Visibility group 22"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x19	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility23

"Represents Visibility group 23"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x1a	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility24

"Represents Visibility group 24"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x1b	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility25

"Represents Visibility group 25"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x1c	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility26

"Represents Visibility group 26"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x1d	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility27

"Represents Visibility group 27"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x1e	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility28

"Represents Visibility group 28"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x1f	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility29

"Represents Visibility group 29"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x20	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility30

"Represents Visibility group 30"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x21	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility31

"Represents Visibility group 31"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x22	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility32

"Represents Visibility group 32"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x23	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility33

"Represents Visibility group 33"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x2420	0x24	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535
--------	------	----------	--------	------------	----------	----------	---------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility34

"Represents Visibility group 34"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x25	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility35

"Represents Visibility group 35"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x26	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility36

"Represents Visibility group 36"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x242 0	0x27	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility37

"Represents Visibility group 37"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x28	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility38

"Represents Visibility group 38"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x29	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility39

"Represents Visibility group 39"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x2a	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility40

"Represents Visibility group 40"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x2b	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility41

"Represents Visibility group 41"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x2c	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility42

"Represents Visibility group 42"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x2420	0x2d	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535
--------	------	----------	--------	------------	----------	----------	---------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility43

"Represents Visibility group 43"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x2e	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility44

"Represents Visibility group 44"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x2f	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility45

"Represents Visibility group 45"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x242 0	0x30	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility46

"Represents Visibility group 46"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x31	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility47

"Represents Visibility group 47"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x32	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility48

"Represents Visibility group 48"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x33	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility49

"Represents Visibility group 49"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x34	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility50

"Represents Visibility group 50"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x35	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility51

"Represents Visibility group 51"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x36	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility52

"Represents Visibility group 52"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x37	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility53

"Represents Visibility group 53"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x38	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility54

"Represents Visibility group 54"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x39	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility55

"Represents Visibility group 55"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x3a	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility56

"Represents Visibility group 56"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x3b	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility57

"Represents Visibility group 57"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x242 0	0x3c	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535
------------	------	--------------	--------	----------------	--------------	--------------	-------------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility58

"Represents Visibility group 58"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x3d	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility59

"Represents Visibility group 59"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value
0x242 0	0x3e	Unsign ed	16 Bit	Read/ Write	disabl ed	disabl ed	enable d	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility60

"Represents Visibility group 60"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subin dex	Stora ge Type	Lengt h	Acces s Type	Rema nent	Force Writin g	Initiali ze as Invali d	Defaul t Value	Min Value	Max Value

0x2420	0x3f	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535
--------	------	----------	--------	------------	----------	----------	---------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility61

"Represents Visibility group 61"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x40	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility62

"Represents Visibility group 62"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2420	0x41	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@Visibility63

"Represents Visibility group 63"

Where a bit is set (1) the objects assigned to it are visible.

Default is "all objects visible"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value

0x2420	0x42	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	65535	0	65535
--------	------	----------	--------	------------	----------	----------	---------	-------	---	-------

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Alarms

@Alarms_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2430	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	5	5	5

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AlarmShow

"Alarm to be raised or removed. This is a queued variable, so reading it is not sensible."

Alarm number: Remove this alarm.

0x8000 & Alarm number: Engage alarm.

E.g. engage alarm 10: 0x800a == 32778;

remove alarm 10: 0x000a == 10

Engaging an undefined alarm will show a default informational alarm identifying the number (removed by ACK)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2430	0x1	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	0	0	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AlarmCurrent

"Alarm currently shown on screen"

Alarm number of alarm currently shown on screen.

Additionally bit 15 is set when the alarm is acknowledged by the user.

To be requested by ECRR to receive user ACK.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2430	0x2	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	36863

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@IsAlarmEnqueued

"Ask if alarm number is stored in alarm queue"

Write alarm number to this variable to request if it is stored in queue.

Response has to be read from @AlarmEnqueued

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2430	0x3	Unsigned	16 Bit	Read/Write	disabled	disabled	enabled	0	0	32767

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AlarmEnqueued

"Response to writing @IsAlarmEnqueued"

Alarm number requested by writing to @IsAlarmEnqueued, bit 15 NOT set if it is enqueued.
E.g. writing 10 to @IsAlarmEnqueued may set this variable to 0x800a (is not enqueued) or 0x000a (is enqueued)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2430	0x4	Unsigned	16 Bit	Read Only	disabled	disabled	enabled	0	0	36863

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AlarmCurrentPriority

"Priority of the currently visible alarm"

Alarm properties are as followed (n is the number of defined alarm priorities, maximum is 9):

0: Emergency Alarm, high priority
 1: Medium priority
 2: Low priority
 ... (optional user defined priorities)
 n-1: Warning Alarm
 n: Informational Alarm

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2430	0x5	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	0	0	32

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Virtual Keyboard

@VKB_NoOfEntries

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	6	6	6

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VKB_EditedValue

"Value being edited by the VirtualKeyboard"

This variable stores the Value being edited by the Virtual Keyboard. This is always a string value and appropriate casting is required for the Numeric DDO.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x1	String	255 Byte	Read/Write	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
--------------------	------------------	---------

Yes	Yes	Yes
-----	-----	-----

@VKB_KeyPressed

"Value of the Last Key pressed on the Virtual Keyboard"

Stores the Last key that was pressed by the user in then VKB. This variable is updated on the Key press event of the VKBButtonDDO

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x2	String	255 Byte	Read/Write	disabled	disabled	enabled	NO VALUE		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VKB_Current

"Virtual Keyboard currently being Displayed"

VKB DDO to be displayed.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x3	Integer	32 Bit	Read/Write	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VKB_CurrentLayer

"Layer of the Active/Currently displayed VKB to be displayed"

ID of the Layer(Container Object) to be displayed for the current VKB.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x4	Unsigned	32 Bit	Read/Write	disabled	disabled	enabled	0	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VKB_OkCancel

"Indicates whether the OK or Cancel button was pressed"

This variable is updated on the Key Release event of the VKBButtonDDO.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x5	Unsigned	8 Bit	Read/Write	disabled	disabled	enabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@VKB_EditedDDO

"ID of the DDO being edited by the VKB."

This variable is updated on the Open For Input Event of the DDO, i.e when the VKB is to be displayed for editing the ddo, with the ID of the DDO.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2440	0x6	Integer	32 Bit	Read/Write	disabled	disabled	enabled	-1	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

J1939**@J1939_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x0	Integer	8 Bit	Read Only	disabled	disabled	enabled	8	8	8

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@MalfunctionIndicatorLampStatus

"Combined status and flash information of the DM1 Malfunction Indicator Lamp (calculated value from all ECUs)"

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x1	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	15

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RedStopLampStatus

"Combined status and flash information of the DM1 Red Stop Lamp (calculated value from all ECUs)"

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x2	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	15

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AmberWarningLampStatus

"Combined status and flash information of the DM1 Amber Warning Lamp (calculated value from all ECUs)"

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x3	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	15

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProtectLampStatus

"Combined status and flash information of the DM1 Protect Lamp (calculated value from all ECUs)"

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x4	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	15

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@MalfunctionIndicatorLampFlashing

"Calculated value from all flashing and status information for the Malfunction Indicator lamp. The variable is either 0 or will automatically flash slowly or fast."

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x5	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@RedStopLampFlashing

"Calculated value from all flashing and status information for the Red Stop lamp. The variable is either 0 or will automatically flash slowly or fast."

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x6	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AmberWarningLampFlashing

"Calculated value from all flashing and status information for the Amber Warning lamp. The variable is either 0 or or will automatically flash slowly or fast."

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x7	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ProtectLampFlashing

"Calculated value from all flashing and status information for the Protect lamp. The variable is either 0 or or will automatically flash slowly or fast."

See online manual J1939 => DM1/DM2 help page

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2450	0x8	Integer	8 Bit	Read Only	disabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Theme Settings**@Theme_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2460	0x0	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CurrentThemeIndex

"Index of current shown theme. E.g.: index 0 => Day Mode / index 1 => Night Mode"

Every DDO has its own definition about what theme or dedicated settings are shown for the respective index value.

Currently PC tool only provides fixed settings for 0 == day and 1 == night. Basically the mechanism could support more different values though.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2460	0x1	Unsigned	8 Bit	Read/Write	enabled	disabled	disabled	0	0	127

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

RemoteConnection**@RemoteConnection_NoOfEntries**

"Number of entries in this group"

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x0	Unsigned	8 Bit	Read Only	disabled	disabled	enabled	6	0	6

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@EnableRemoteConnection

Enable the VNC remote connection by setting value 1 to this variable

This variable represents the state of the VNC remote connection to this display. It can either be disabled (0, default) or enabled (1). If enabled, VNC clients can connect to this display.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x1	Unsigned	8 Bit	Read/Write	disabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@AllowRemoteInteraction

Control if a connected VNC client can interact with the display contents (touch/keys)
 If a connected VNC client shall not be able to interact with the display contents, set this variable to 0. The default is that interaction is allowed (1).

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x2	Unsigned	2 Bit	Read/Write	disabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@RemoteConnectionPassword

If the remote connection shall be password protected, set a password string to this variable.

If a password is set to this variable, a remote VNC client needs to enter this password to be able to connect to this display. This only provides a weak DEC authentication.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x3	String	256 Byte	Read/Write	disabled	disabled	enabled			

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@VNCPort

Change the UDP/TCP port for the remote VNC connection.

If the default port 5900 is not available, the port can be changed with this variable. Do not use predefined ports from 0 to 1024. Set -1 to enable automatic free port search between 5900 and 5999.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x4	Integer	32 Bit	Read/Write	disabled	disabled	enabled	5900	-1	65535

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@OperatorName

Operator name provided to support desk.

Operator name provided to support desk. This is used to identify the support request.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x5	String	256 Byte	Read/Write	disabled	disabled	enabled	Hugo Planlos		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@RemoteSupportDeskPIN

Identify support desk to connect to.

This PIN is provided by the support desk via a separate channel, e.g. via phone.

Compositor will try to find support desk with this PIN. To connect to the support desk, @AllowRemoteInteraction or @EnableRemoteConnection have to be set after desk is found.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2470	0x6	Integer	32 Bit	Read/Write	disabled	disabled	enabled	0	-1	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

UT-Plugin

Alarm-Settings

@UTAlarmMinGap

Minimal gap in ms before the same alarm is raised again for the same ECU.

If e.g. an ECU send a working set maintenance message without having an active pool, an alarm is raised for every message i.e. every second.

To avoid this kind of annoying redundancy (for the average user), this variable allows to skip the alarm unless its last occurrence is more milliseconds in the past than this variable

allows.

Gap should not be set too long to avoid suppression of relevant alarms.

The gap mechanism is NOT applied for alarms of category 'critical', i.e. they all show up (unless all alarms are suppressed via @UTMinAlarmPriority or there's no UT alarm defined in project).

The default setting of 10000 ms would limit the alarm for the error mentioned above to once every 10 seconds.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x1	Integer	32 Bit	Read/Write	enabled	disabled	enabled	10000	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmWSIconID

Object ID of image DDO showing working set icon for alarm.

An image DDO can be placed in the alarm identified by @UTAlarmNumber in order to show the working set icon of the ECU causing the alarm.

The object ID of this DDO has to be provided in this variable.

If it identifies a valid image DDO it gets updated to this icon when the alarm is raised.

If the alarm should not provide an icon, the image stays empty.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x2	Integer	32 Bit	Read/Write	disabled	disabled	enabled	-1	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmNumber

Which alarm shall be raised when a UT alarm gets active.

Define one alarm in the project that shall be raised when a UT alarm gets active. Write the alarm number as value in this variable (e.g. at project init event).

Use @UtAlarmPriority and @UTAlarmText to customize the behavior of the alarm.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x3	Integer	16 Bit	Read/Write	disabled	disabled	enabled	0	0	4095

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmPriority

Priority of the currently active UT alarm:0: Invalid1: Info2: Caution3: Warning4: Error5: Critical

Info about the priority of the currently active UT alarm. This info can be used to e.g. color elements of the alarm differently to show criticality to the user.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x4	Integer	8 Bit	Read/Write	disabled	disabled	enabled	0	0	5

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmText

Text of the currently active UT alarm

When creating a dedicated UT alarm in Projektor, attach this variable to a string field in the alarm to show the text of the alarm.

This is a raw description mainly targeting developers. A nicer description can be generated from the separate parts in variables below.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

							Invalid			
0x2500	0x5	String	65535 Byte	Read/Write	disabled	disabled	enabled	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTMinAlarmPriority

The minimum UT alarm priority that is needed to raise an alarm. See @UTAlarmPriority. The minimum UT alarm priority that is needed to raise an alarm. See @UTAlarmPriority for priority values.

Default value is 4 (only errors and critical messages will raise an alarm).

Set to highest priority + 1 to disable triggering of UT alarms.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x6	Integer	8 Bit	Read/Write	enabled	disabled	enabled	4	0	6

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmFunctionality

VT or FS

What functionality triggered the alarm - so far we only support 'virtual terminal' (VT) and 'file server' (FS).

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x10	String	64 Byte	Read/Write	disabled	disabled	enabled	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmSource

What caused the alarm - 'Server' or 'Working Set'.

Description of where the error was found that caused the alarm.

Possible values are 'Server' or 'Working Set'

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x11	String	256 Byte	Read/Write	disabled	disabled	enabled	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmSourceName

J1939 name of the ECU causing the alarm.

The J1939 name of the ECU causing the alarm is a 64 bit number which is provided as a string in hexadecimal format.

This can be helpful to identify the ECU in a CAN trace.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x12	String	256 Byte	Read/Write	disabled	disabled	enabled	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmSourceManufacturer

Manufacturer in clear text as read from the J1939 name.

Manufacturer of the ECU causing the alarm (clear text + code used in J1939 name).

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x13	String	256 Byte	Read/Write	disabled	disabled	enabled	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmSourceFunction

Function in clear text as read from the J1939 name.

Function of the ECU causing the alarm (clear text + code used in J1939 name), e.g. 'Sprayer Spray Rate Control [128]'

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2500	0x14	String	256 Byte	Read/Write	disabled	disabled	enabled	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmType

Type of the currently active UT alarm. Is unique only in combination with @UTAlarmPriority. The type is a class of alarms and is only unique in combination with @UTAlarmPriority, i.e. each priority has its own enumeration of alarm types.

This numeric representation can be used e.g. as an index into a list of messages that could be localized.

An English description for the currently active alarm is provided in the following @UTAlarmDescription.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x250 0	0x15	Integer	8 Bit	Read/ Write	disabl ed	disabl ed	enable d	0	0	255
------------	------	---------	-------	----------------	--------------	--------------	-------------	---	---	-----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmDescription

English description of the current alarm defined by @UTAlarmPriority and @UTAlarmType.

English description of the more general cause of the alarm.

Additional details are typically provided by @UTAlarmDetails

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x250 0	0x16	String	256 Byte	Read/ Write	disabl ed	disabl ed	enable d	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTAlarmDetails

English description of the details for current alarm.

English description of the detailed cause of the alarm.

Should be used with the more general @UTAlarmDescription (or a localized version of it).

There's no complete list if these details and therefore it's not feasible to translate them.

They can be helpful for an experienced technician or developer, though.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x250 0	0x17	String	256 Byte	Read/ Write	disabl ed	disabl ed	enable d	-1 (0xffffffff)		

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Button-States**@ISBstate**

(De-)Activate ISOBUS Shortcut Button (ISB)

0: ISB released (normal operation)

1: ISB active (operations stopped)

other values: reserved

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x1	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@TriggerLanguageUnitChange

Trigger sending of the current language and unit settings to connected UT clients.

Changing language and unit settings via the variables contained in the "Language / Unit Settings" group are directly reflected in this project.

To trigger the sending of the language / unit change to connected UT clients, write a 1 to this variable.

The value will automatically be reverted to 0.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x2	Integer	8 Bit	Read/Write	disabled	disabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FocusUpPressed

Attach to button or softkey to move focus or value UP in UT primary view.

0: Button released

1: Button pressed

To do the same with encoder, set to 1 and then back to 0 (preferably use dedicated navigation function).

'Force writing' is true to make sure such a transition is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x3	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FocusDownPressed

Attach to button or softkey to move focus or value DOWN in UT primary view.

0: Button released

1: Button pressed

To do the same with encoder, set to 1 and then back to 0 (preferably use dedicated navigation function).

'Force writing' is true to make sure such a transition is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x4	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@CyclePressed

Attach to button or softkey to cycle active object pools in UT primary view.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x5	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@EnterPressed

Attach to button or softkey to confirm something in active object pools in UT primary view.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x6	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AckPressed

Attach to button or softkey to acknowledge an alarm mask in active object pools in UT primary view.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	---------------	---------------	-----------	-----------

							Invalid			
0x2510	0x7	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@ESCPressed

Attach to button or softkey to cancel something in active object pools in UT primary view.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x8	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@DeletePoolsPressed

Attach to button or softkey to delete all cached UT pools.

This will NOT affect currently active pools (which are already loaded), unless they get disconnected or the UT gets shut down.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0x9	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@AuxConfigPressed

Attach to button or softkey to show aux input configuration screen on top of the primary UT view.

Currently aux configuration screen can only be operated via touch screen.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0xa	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@IdentifyPressed

Attach to button or softkey to trigger identification of all UTs connected to the bus.

Message on the bus and UT number showing will be triggered 'on press' i.e. when value changes from 0 to 1.

0: Button released

1: Button pressed

'Force writing' is true to make sure a 'press' directly followed by a 'release' is not filtered by DEI.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2510	0xb	Integer	8 Bit	Read/Write	disabled	enabled	enabled	0	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
--------------------	------------------	---------

Yes	Yes	Yes
-----	-----	-----

Settings

@IsobusCanInterface

Select physical CAN interface to use for ISOBUS.

1: ISOBUS connected to CAN1

2: ISOBUS connected to CAN2

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x1	Integer	8 Bit	Read/Write	enabled	disabled	enabled	2	1	2

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@IsobusManufacturer

Manufacturer ID used in J1939 address claim on ISOBUS.

Default: 171 == 0xAB for 'Topcon Electronics GmbH'

There are only 11 bit reserved in J1939 name, hence value range is limited as defined by min and max value.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x2	Integer	16 Bit	Read/Write	enabled	disabled	enabled	171	0	2047

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@IgnitionConnectedToDisplay

1: Use physical ignition input for power management, 0: Use key switch state from tractor ECU CAN message for power management.

Set to 1 if the ignition switch is connected to the ignition (KL15) input of the display (the display will use the integrated power management if ignition is switched off).

Set to 0 to indicate that permanent power is connected to the display ignition input (display will use the key switch state from the tractor ECU CAN message to shut down if ignition is switched off)

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x3	Integer	8 Bit	Read/Write	enabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTActive

Make UT active or inactive on the bus

0: UT is inactive (will not send/receive messages on ISOBUS)

1: UT is active

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x10	Integer	8 Bit	Read/Write	enabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTNumber

UT number is UT's 'function instance' + 1

Number shall be unique for every UT on the bus

1: UT with function instance 0 - responsible for aux assignment

2 .. 32 just another UT, won't do aux assignment

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x2520	0x11	Integer	8 Bit	Read/Write	enabled	disabled	enabled	1	1	32
--------	------	---------	-------	------------	---------	----------	---------	---	---	----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTKeyLayout

Key layout (one or two rows, which side of the mask)

Basic key layout is assumed from project:

The biggest primary view defines the mask size and whether landscape or portrait is used.

The mask size found like that is claimed on ISOBUS.

If this variable is not set, at least 6 softkeys are tried to position beside the mask.

Note that they are expected to be square and at least 68*68 pixels (60 pixel for the designator, 4 pixel border on each side).

0x01:one row top or left of mask

0x02:one row bottom or right of mask

0x03:two rows top+bottom/left+right

0x13:two rows bottom+top/right+left (i.e. like 0x03 but first softkey on the other side)

0x21:two rows top or left of mask

0x22:two rows bottom or right of mask

All other values are reserved and may lead to unexpected results.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x12	Integer	8 Bit	Read/Write	enabled	disabled	enabled	-1	1	34

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@UTKeysPerRow

Number of UT softkeys per row (portrait) or column (landscape)

Distribution of rows or columns is defined with @UTKeyLayout while this variable defines how many keys are in one row.

If this variable is not set, at least 6 softkeys are tried to position beside the mask.

Note that ISO 11783-6 requires at least 6 softkeys, at least 60 pixels wide and 32 high.

AEF guidelines expects them to be square and at least 60*60 pixels. Our framework adds 8 pixels for a 4 pixel separator around each softkey, so that they should at least be 68*68 pixels.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x13	Integer	8 Bit	Read/Write	enabled	disabled	enabled	-1	1	16

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FSActive

Make 'file server' active or inactive on the bus

0: FS is inactive (will not send/receive messages on ISOBUS)

1: FS is active

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2520	0x20	Integer	8 Bit	Read/Write	enabled	disabled	enabled	1	0	1

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

@FSNumber

File server's number is FS's 'function instance' + 1

Number shall be unique for every FS on the bus

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
-------	----------	--------------	--------	-------------	----------	---------------	-----------------------	---------------	-----------	-----------

0x2520	0x21	Integer	8 Bit	Read/Write	enabled	disabled	enabled	1	1	32
--------	------	---------	-------	------------	---------	----------	---------	---	---	----

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	Yes

Ground-Speed-Settings

@GenerateGroundSpeed

[De-]Activate generation of 'ground speed' from a GNSS receiver's data stream.

0: off - don't generate ground speed

1: on - generate ground speed if PGN is not already provided otherwise on ISOBUS.

Ground speed

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0x1	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@GnssInterface

Select physical interface where GNSS receiver is connected to use for generation of ground speed.

-1: Use device's main RS232 interface

0x0: Use NMEA0183 receiver on /dev/ttymx0

0x1: Use NMEA0183 receiver on /dev/ttymx1

0x2: Use NMEA0183 receiver on /dev/ttymx2

0x3 .. 0x0f: Reserved

0x10: NMEA2000 provided on ISOBUS, i.e. bus defined by @IsobusCanInterface

0x11: NMEA2000 provided on CAN1

0x12: NMEA2000 provided on CAN2

0x13: NMEA2000 provided on CAN3

0x14: NMEA2000 provided on CAN4

The variable will only be evaluated if gps daemon is (re)startet, i.e. it will not change anything immediately if e.g. another CAN gets selected.

It only accepts selection of interfaces existing on the device.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0x2	Integer	8 Bit	Read/Write	enabled	disabled	enabled	-1	-1	31

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@GnssBaudrate

Select RS232 baudrate of GNSS receiver for generation of ground speed. RS232 will be scanned if no receiver is found at configured baudrate - but that can take minutes.

Therefore, the baudrate used by the receiver connected should be specified.

Typical baudrates are (in bits/s)

4800,
9600,
19200,
38400,
76800,
115200
230400

Topcon GNSS receivers typically operate on 115200 bits/s.

Note that the GNSS interface will NOT set CAN baudrates.

The variable is ignored if @GenerateGroundSpeed is 0.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0x3	Integer	32 Bit	Read/Write	enabled	disabled	enabled	115200	0	2147483647

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@GpsdParameters

Debug generated or define own 'gpsd' parameter set.

'gpsd' is used to connect to GNSS receivers.

If this variable is left empty, the generated parameters will be added for reference and debugging.

Otherwise parameter generation will be skipped and the content of this variable will be used to start gpsd.

Whenever @GnssInterface or @GnssBaudrate is set, this will be erased.

The variable is ignored if @GenerateGroundSpeed is 0.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0x8	String	255 Byte	Read/Write	disabled	disabled	enabled			

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@GnssFeedsGroundSpeed

En-/Disable ISOBUS ground speed generation from GNSS signal.

0: No ISOBUS ground speed is generated.

1: ISOBUS ground speed is generated if it's not found on bus already.

2: ISOBUS ground speed is generated in any case.

The variable has no effect if there's no GNSS signal found or if @GenerateGroundSpeed is 0.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0x9	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	1	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@GnssFeedsNMEA2000Speed

En-/Disable ISOBUS ground speed generation from GNSS signal.

- 0: No ISOBUS ground speed is generated.
 1: NMEA 2000 speed is generated if it's not found on bus already.
 2: NMEA 2000 speed is generated in any case.

The variable has no effect if there's no GNSS signal found or if @GenerateGroundSpeed is 0.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0xa	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

@GnssFeedsNMEA2000Position

- En-/Disable ISOBUS ground speed generation from GNSS signal.
 0: No ISOBUS ground speed is generated.
 1: NMEA 2000 position is generated if it's not found on bus already.
 2: NMEA 2000 position is generated in any case.

The variable has no effect if there's no GNSS signal found or if @GenerateGroundSpeed is 0.

All variables of group 'UT-Plugin' will only be effective if UT-Plugin is present and active.

Index	Subindex	Storage Type	Length	Access Type	Remanent	Force Writing	Initialize as Invalid	Default Value	Min Value	Max Value
0x2530	0xb	Unsigned	2 Bit	Read/Write	enabled	disabled	enabled	0	0	3

Supported on Platforms:

OPUS A6G2, OPUS A8	OPUS B3, OPUS B4	OPUS B2
Yes	Yes	No

CAN

5 CAN

The communication between the terminal and other devices is realized with the help of CAN protocols. Each kind of protocol supported has its special properties to be configured according to the requirements.

Supported are 2 prevalent and 1 proprietary CAN protocol:


- [SAE J1939](#)³⁷⁴
- [CANopen](#)³⁶⁰
- [CANFreestyle](#)³⁴⁰ (proprietary)




Tutorial video about setting up the basic CAN settings

<https://www.youtube.com/watch?v=DO0tPCmaB1w>

Firstly, you always need to set up the bit rate that you want to use. Open the menu Communication -> Port Configuration...

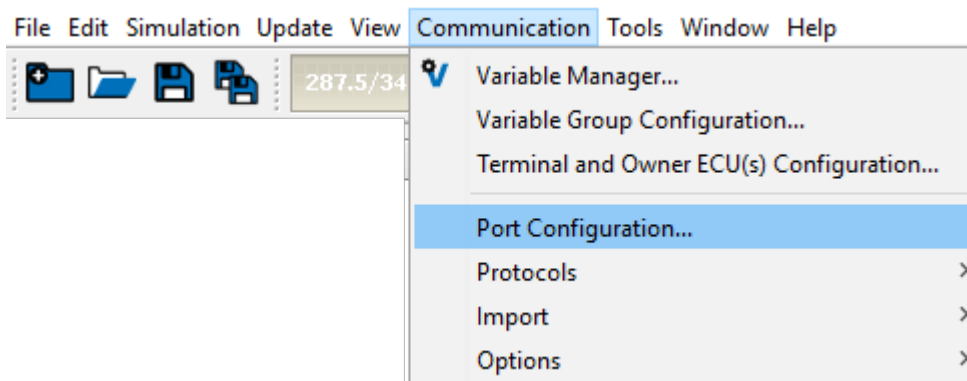

In the dialog, choose the CAN port you want to use (1) and then the bit rate / baud rate / bus speed that you want to use in your project for that port (2).

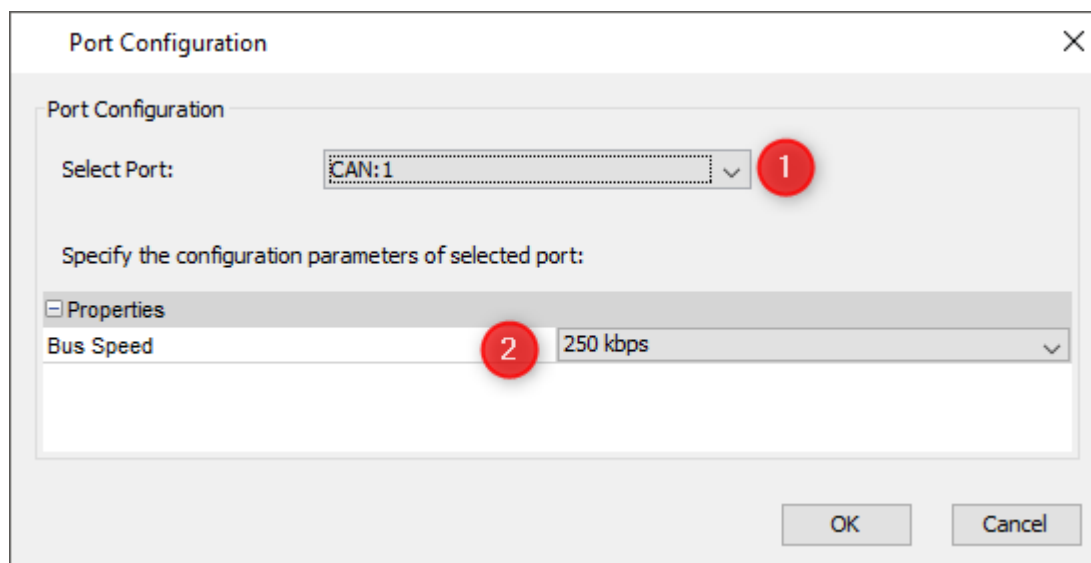

5.1 CANFreestyle

General Introduction

CANFreestyle is a simple proprietary protocol, without e.g. the complexity of a transport protocol. So this protocol is very easy to use.

Anyway you can modify CAN values that you want to send on the bus as well as the CAN values that you received from the CAN bus. The modifiers are the same as for J1939.

Actually CANFreestyle provides a way to emulate other CAN protocols that are not supported natively. To prevent confusion, CANFreestyle will be treated as a protocol in the manual.

Additionally you can create a sequence of several CAN messages which can be sent periodically.


Adding CANFreestyle to the GUI Definition


Before you can use the CANFreestyle protocol, it has to be activated. Before activating it the **Port Configuration** has to be set.

Port Configuration

To configure the port that shall be used for the communication select main menu tab


[Communication][Port Configuration...] ¹. A new dialog 'Port Configuration' will be opened. Depending on the **Selected Port** ² the **Bus Speed** ³ should be set. Press "OK" ⁴ to confirm the settings.

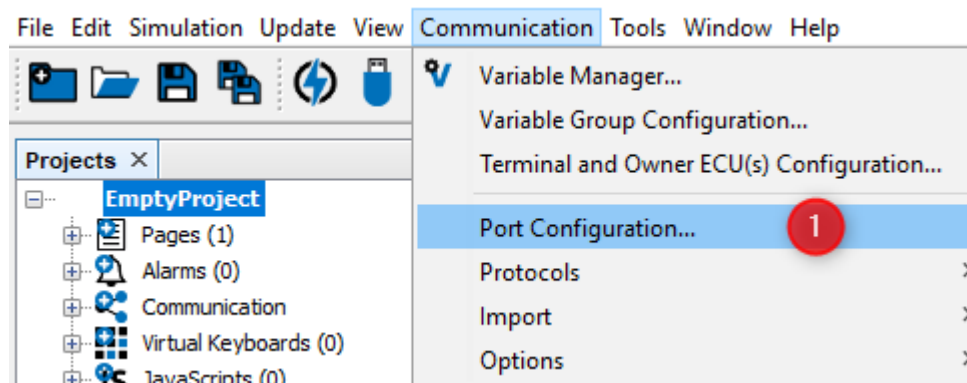

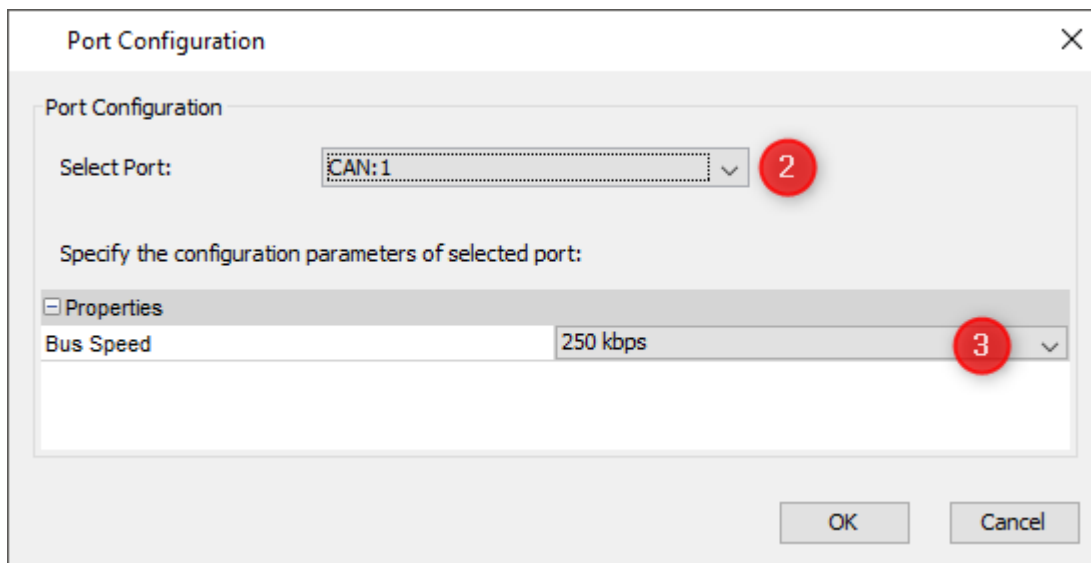


ECU Configuration

Once the port is configured the protocol itself has to be assigned to it.

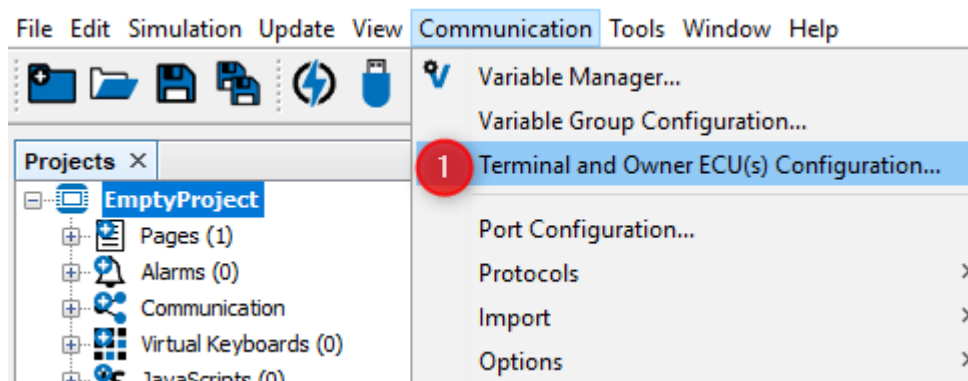

1. Open "Communication" menu and choose "Terminal and Owner ECU(s) Configuration ...". The "Terminal and Owner ECU(s) Configuration" dialog will appear
2. Press on the arrow and select **CANFreestyle** protocol for the CAN port you want it to run on
3. Press "Add" to use this protocol with your GUI on the display

Properties of Terminal ECU

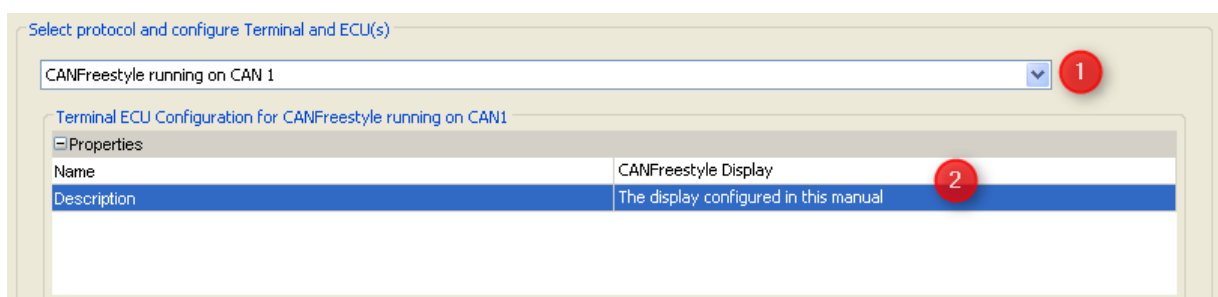

1. Select CANFreestyle on the CAN port configured before - in our example we configured it for CAN 1.
2. Type a valid name and description - these are mainly for your convenience and may help others to understand the GUI configuration in future.

Properties of Owner ECU(s)

ECUs are configured in the same "Terminal and Owner ECU(s) Configuration" dialog that was used above to activate CANFreestyle protocol and to configure the display's address. ECUs are configured in the lower part of this dialog:

1. Type a name describing the ECU
2. Press "Add"

Then the new ECU will automatically be selected and one can modify the other parameters:

3. Provide a description that could help others to understand better which ECU is meant here
4. In case the ECU is not needed anymore it can be deleted again. If it already owns any variables, the owner will be changed to the display (PClient) when you delete it.

Adding Variables to the CANFreestyle ECUs


As mentioned above we mainly configured the CANFreestyle ECUs because they own some variables whose values we want to show and/or modify on the display.

Before we can use these variables we have to do two things:


1. Create the variables and use one of the CANFreestyle ECUs as owner.
2. Define the Mappings we want to use to send and receive the variables.

Creating dedicated variable groups for variables owned by CANFreestyle ECUs

Knowing that we could end up with a lot of variables per ECU it's a good idea to create one variable group per ECU. Of course you are free to organize variables in groups however you prefer.

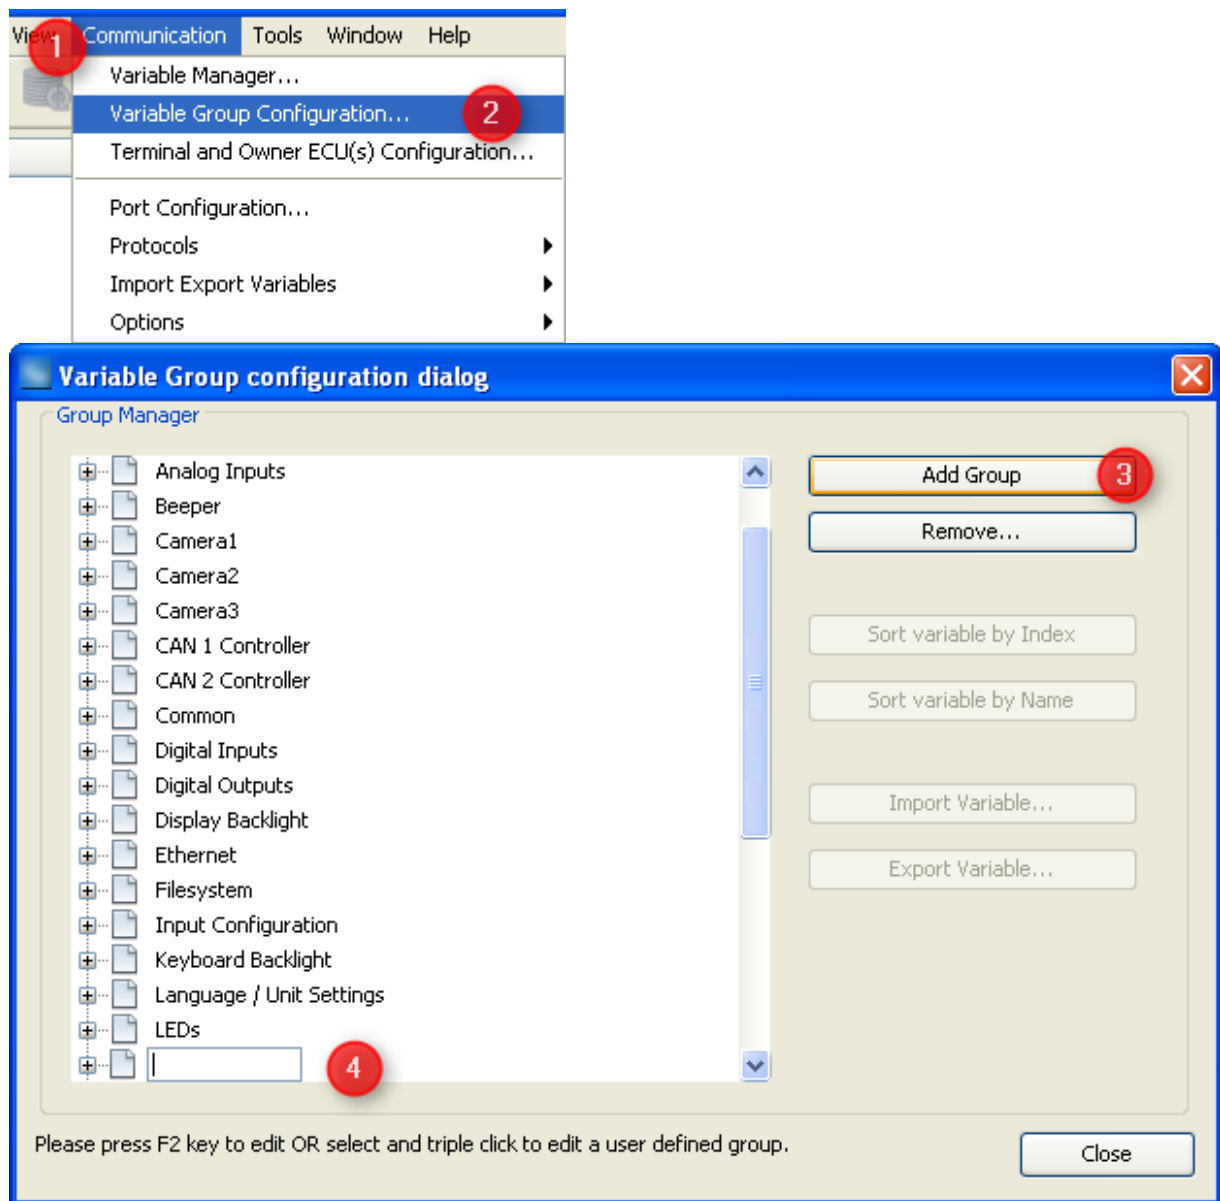


1. Open Menu "Communication"
2. Select "Variable Group Configuration ..."
3. In the dialog that opens press "Add Group" to create a new variable group
4. Type a sensible name for the new group

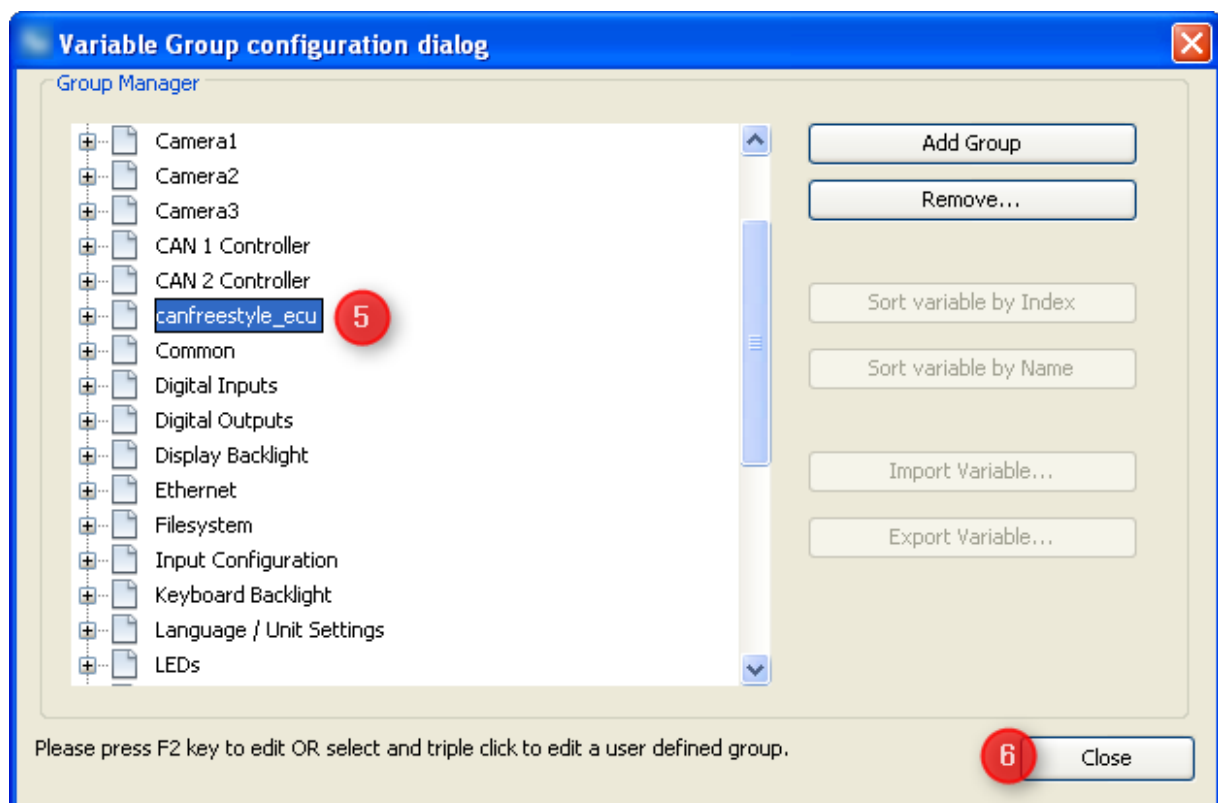


5. Once you pressed "Enter" to confirm the new group name it will move according to alphabetical order of all groups.
6. Press "close" once you're finished creating or deleting variable groups.

Creating CANFreestyle variables


Creation of CANFreestyle variables is similar to all other variables

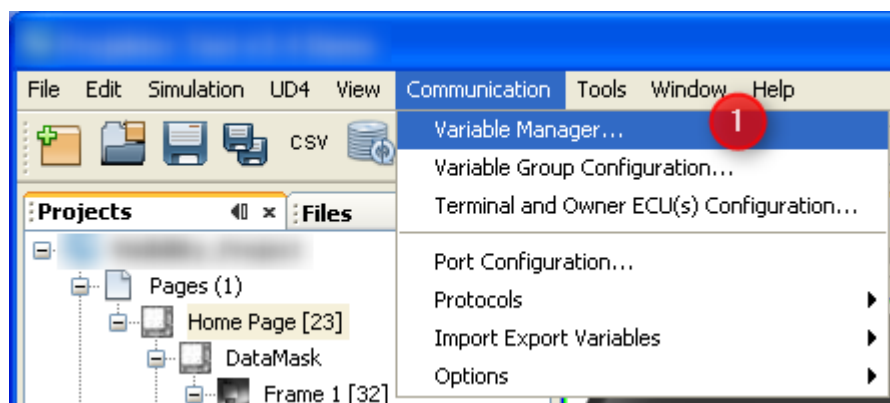

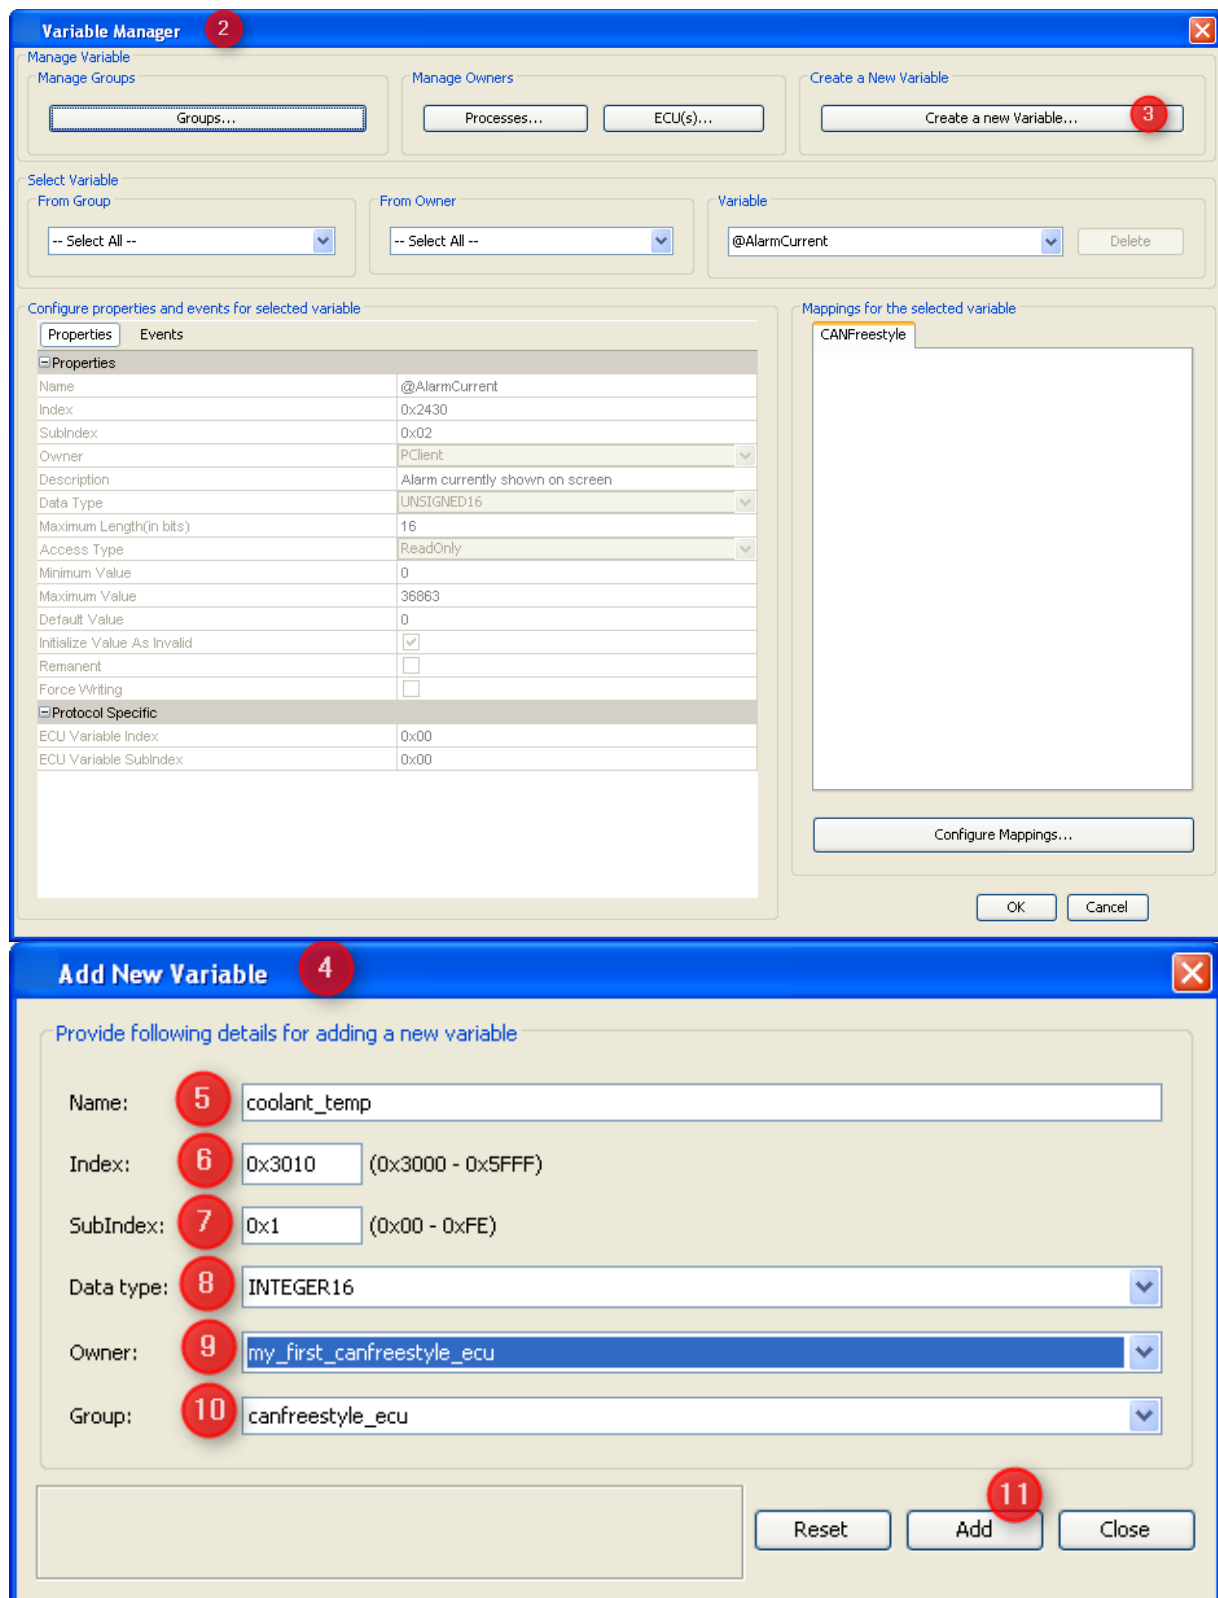

1. Open the "Communication" menu and choose "Variable Manager ..." entry
2. Variable Manager dialog opens (which can be used as shortcut to all variable related tasks)
3. Press "Create a new Variable ..." button
4. "Add new variable" dialog opens


5. Fill in a name of the variable
6. Type an index for the variable. You are free to enter the value in decimal or hexadecimal, starting with "0x". Anyways hexadecimal will be displayed. (Although the concept comes from CANopen you should use index and subindex as a means of ordering and grouping of variables)
7. Add a subindex for the new variable. Note: Combination of index and subindex has to be unique among all variables in the GUI definition.
8. Select signed or unsigned data type at least as wide as the variable will be in CAN message.
9. Change owner from default "PCClient" to the newly created CANFreestyle ECU. Note: If you keep "PCClient" you could handle the variable also but would not notice if the ECU is not available anymore.
10. Select the newly created variable group for the variable.
11. Press "Add" to finally create the new variable with the settings made above.

 Variable created successfully.

If the variables was created successfully the above message will be shown at the lower left box of the dialog.

Now you can either create more variables by editing the settings with or without "Reset" or leave the dialog with "Close".

After closing the "Add New Variable" dialog you can modify all the properties of the variable(s) just created or already existing in "Variable Manager" dialog:

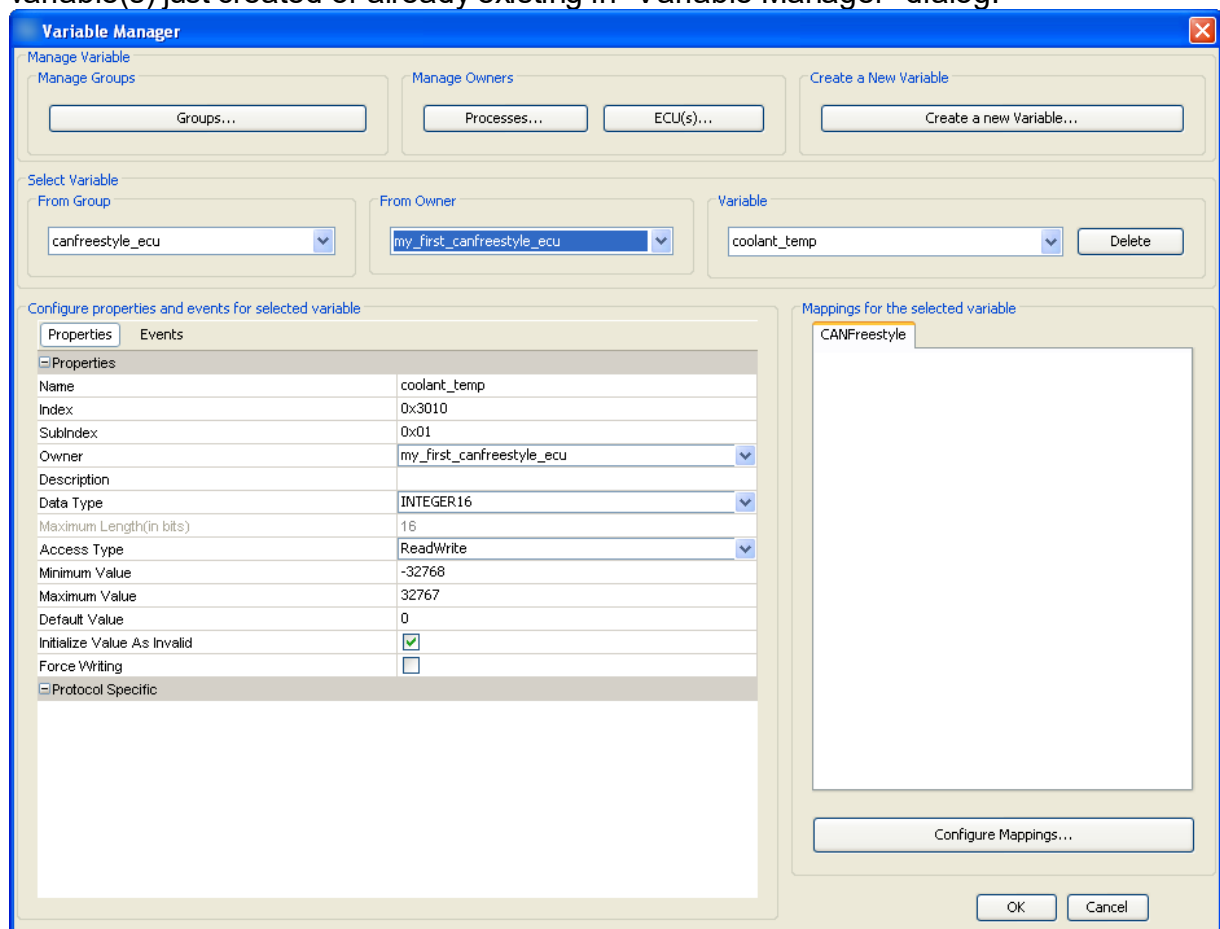

The Variable Manager dialog box is shown with the following configuration:


- Manage Variable:**
 - Manage Groups: Groups...
 - Manage Owners: Processes..., ECU(s)...
 - Create a New Variable: Create a new Variable...
- Select Variable:**
 - From Group: canfreestyle_ecu
 - From Owner: my_first_canfreestyle_ecu
 - Variable: coolant_temp
 - Delete button
- Configure properties and events for selected variable:**
 - Properties:**

Name	coolant_temp
Index	0x3010
Subindex	0x01
Owner	my_first_canfreestyle_ecu
Description	
Data Type	INTEGER16
Maximum Length(in bits)	16
Access Type	ReadWrite
Minimum Value	-32768
Maximum Value	32767
Default Value	0
Initialize Value As Invalid	<input checked="" type="checkbox"/>
Force Writing	<input type="checkbox"/>
 - Protocol Specific:**
- Mappings for the selected variable:**
 - CANFreestyle
 - Configure Mappings...

Buttons: OK, Cancel

For a detailed description of all the variable properties and events please refer to [variable view](#)¹⁶¹.

There is a second option to create variables:

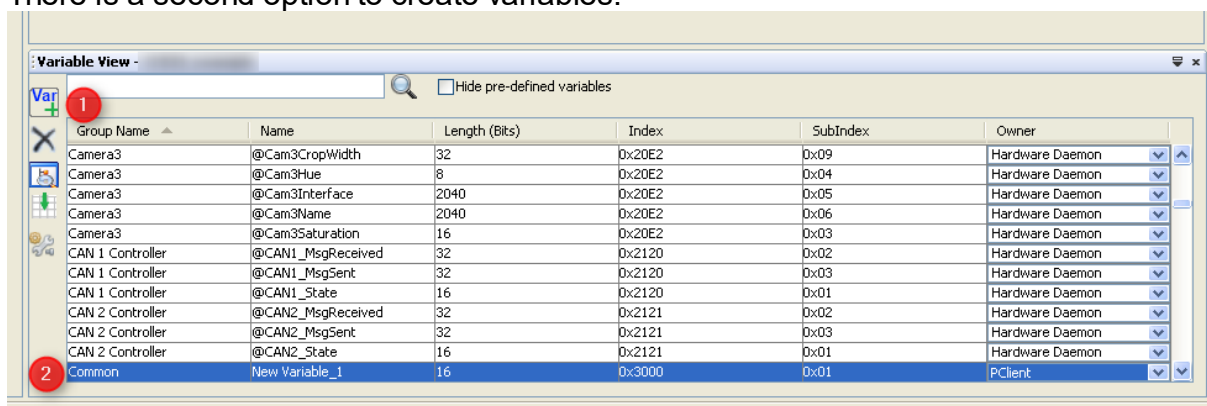

1. In variable view press the "Var +" button
2. A new variable with default settings appears
3. You can double click each property and edit it.

Warning: If you type a group name that was not defined yet, a new variable group will be created.


Warning: Depending on your sorting option the variable can "disappear" whenever a modification is confirmed.


More details on this option can be found in [variable view](#)¹⁶¹.

So the recommendation is to create variables following the first option and use variable view to manage and modify existing variables.


Defining CAN ID Masks

If you only want to evaluate specific bits of the CAN Identifier you can use "**CAN ID Masks...**" to create our own mask. This can be used for example if several ECUs are connected to the bus whose use same kind of identifier.

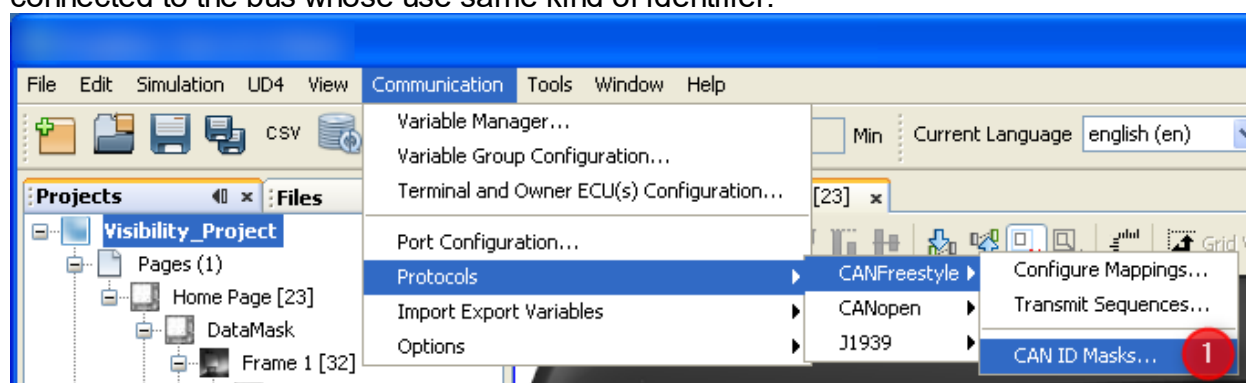

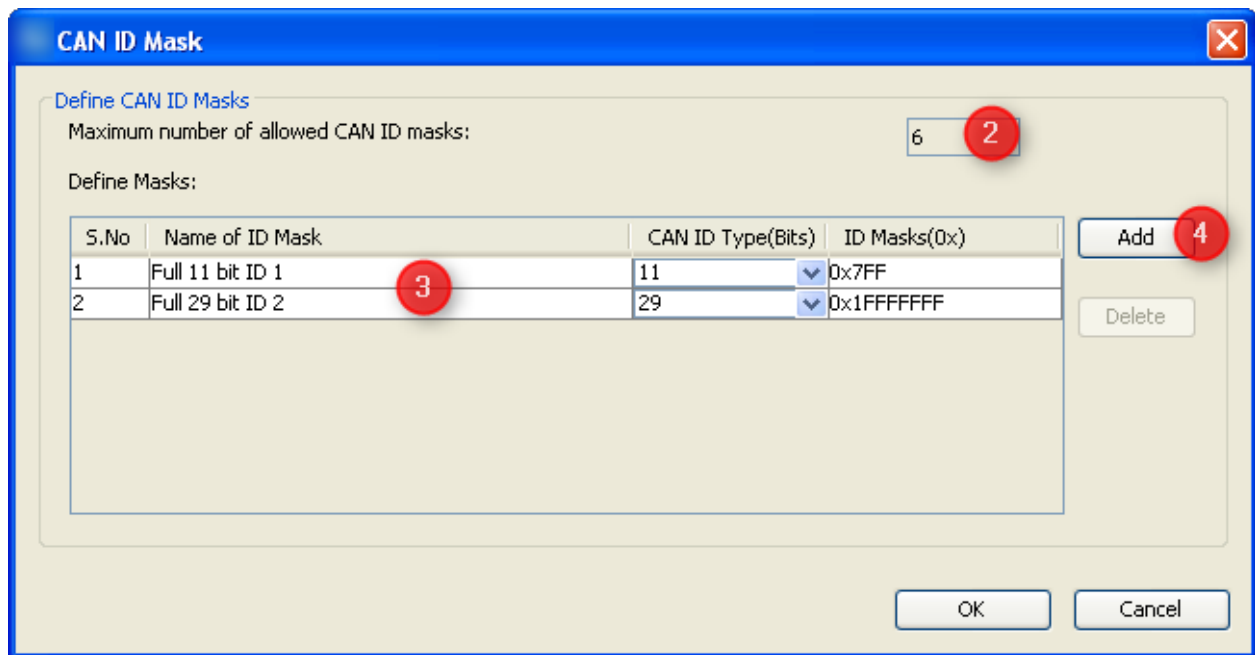

1. If you want to edit **CAN ID Masks** you can find it in the main menu like shown above. A new dialog **CAN ID Mask** will be open.
2. For performance reasons you can only define **6** CAN ID Masks
3. Two masks are predefined. "**Full 11 bit ID 1**" and "**Full 29 bit ID 2**". So if you don't need to filter the CAN ID you can use the predefined ones.
4. If you want to add your own proprietary mask you have to press the "**Add**" button. If the "**Add**" button is pressed a new line will be added at the table which is editable.

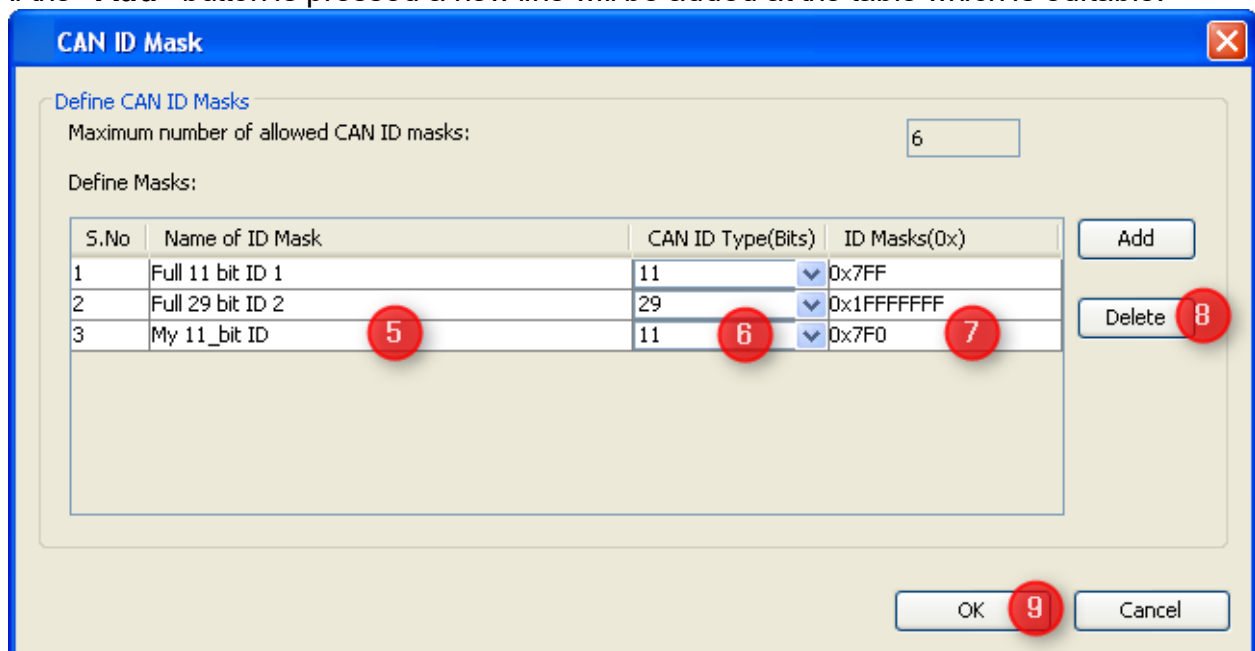

5. Here you can specify a name for the newly created mask.
6. You have to specify if the mask should be used for **11** or **29** bit CAN Identifiers.
7. In the field **ID Masks** you can specify the bits which should be evaluated for the CAN Identifier in hexadecimal format.


8. Deletes the currently selected mask. **NOTE:** The predefined mask can not be deleted.
 9. To save the settings you have to press the "OK" button
- The created Masks can be used [here](#)³⁵¹.

Defining Variable Mappings

After having defined an ECU as variable owner and the variable itself we finally have to define the connection between the two. In other words: We need a definition about how to exchange the variable's value with the ECU.

These definitions are called "variable mappings" within this tool.

In order to define a variable mapping you can either use the shortcut button of the variable manager shown in the image above or open the respective dialog from the menu as follows:

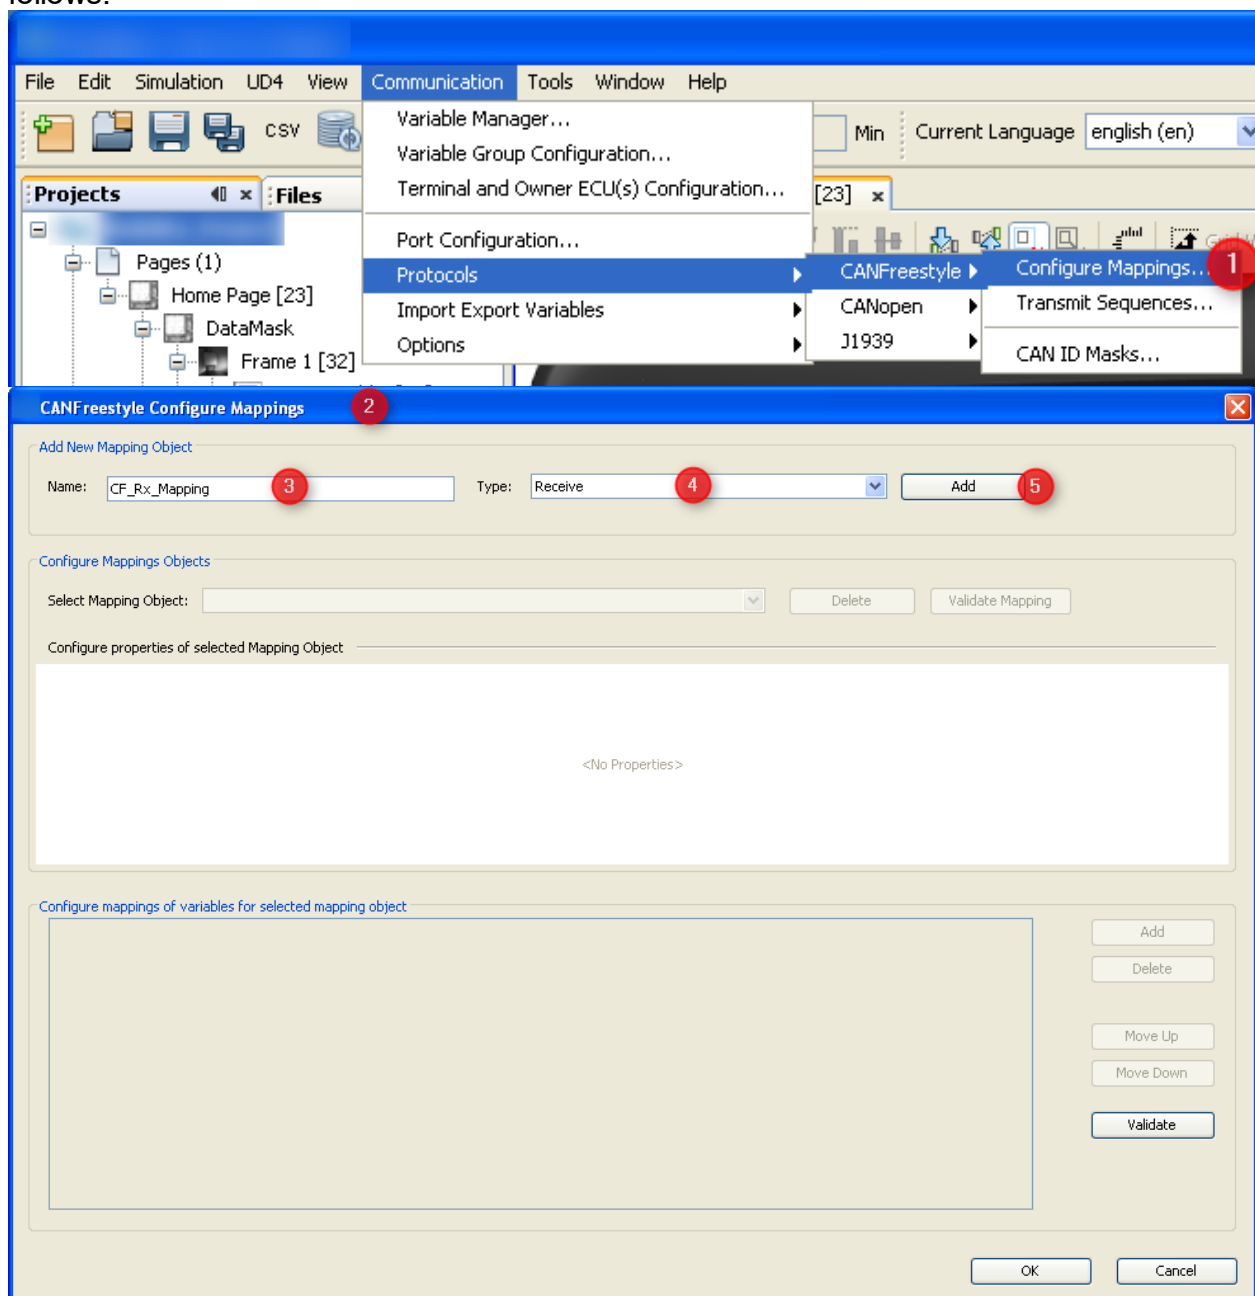

1. Open the menu "communication". Select "Protocols". Choose "CANFreestyle". Select "Configure Mappings ...".
2. The "CANFreestyle Configure Mappings" dialog will pop up.
3. Type the name of your mapping
4. Select the type "Receive" if the display shall fetch values from CAN bus and "Transmit" if the display shall send out values.
5. Press "Add" to create the new mapping.

Setting Mapping Properties

The dialog will populate with the default settings for the new mapping object which have to be modified according to your intentions:

Defining Variable Mappings

General

ID

Is the object ID created internally which can not be modified.

Name

The name of the mapping as used during creation. This name can be edited here.

Type

"Receive" or "Transmit" - this property can not be modified. If this needs to be changed you have to delete and recreate the mapping.

Description

Should be a valid description of the mapping which helps understanding its purpose and context in future.

Mapping Variable Type

CANFreestyle only supports one type:

- **Length** based mappings find every variable (or constant) by position and length within the CAN message. If length based mappings are less than 8 bytes long, their variables or constants can be placed at any position. If they shall be longer, the variables and constants have to be byte aligned.

Receive from / Transmit to

For receive mappings: Select the ECU which will send the Mapping where the variable should be extracted.

For transmit mappings this property describes the destination address to be used (i.e. the ECU that shall receive the values).

Little Endian/Big Endian

CANFreestyle values are transferred least significant byte first (Little Endian) by default. Here you can change this to most significant byte first (Big Endian). If you have a Mapping which contains Little and Big Endian values you have to create two separate mappings.

This setting only applies to numeric values. Strings are expected to be "big endian" i.e. the first byte of the word or sentence is the first one on the bus.

Mapping Length

Enter the length of the message you want to configure. The length has to be between 0 and 8 bytes.

Object Status

With Object Status Active the mapping is working, i.e. it is processing received messages or sending them. With Object Status Inactive the mapping is not working. This property can be switched at run time with the [setProperty](#)⁵⁸⁷ JavaScript function to enable / disable CAN mappings.

CAN ID Type

This setting defines whether an '11 Bit Identifier' or '29 Bit Identifier' should be used for the CAN ID.

CAN ID (0x)

This defines a CAN ID for the appropriate Mapping. The ID is **not** unique so it is possible to define several mappings with the same ID e.g. if a multiplexer is used.

CAN ID Mask

If not all bits of the Identifier should be evaluated it is possible to define a CAN ID Mask which only evaluate the needed bits of the CAN ID.

NOTE: You can define your own CAN ID Mask [here](#)³⁴⁷.

Request Settings

These settings define if and when the display sends a request (for receive mappings) or answers a request for a transmit mapping.

The only pre-requisite is that the ECU sending the request is "known", i.e. defined in the [ECU Configuration](#)³⁴¹.

Enable Request

For receive mappings this means that the display will send out a request to get the Mapping based on the following settings.

For transmit mappings this means that the request defined in the following properties will be recognized and answered with the transmit mapping.

Request message

This allows definition of a Message with fixed data section which will be sent out in order to get the receive mapping based on the following triggers.

Request Message Transmission Period

This is only enabled for receive mappings. It defines the interval in milliseconds the display will send requests for the mapping. Set to 0 if no periodic request is required.

Send Request On

- "Specific Variable Change" allows triggering the request based on the value change of any variable in the project.
- "None" means there is no trigger besides the time based one.

Select Variable (Rx)

Only enabled if this is a receive mapping, request is enabled and "Send Request On" is set to "Specific Variable Change". This allows setting the variable whose value change should trigger sending the request.

Receive Settings

Receive Timeout

This is intended for receive mappings which are expected to arrive periodically - either by default or by periodic request. If the mapping is not received in as many milliseconds as defined here all variable values of the mapping are considered invalid and hence all DDOs showing them will also be disabled (i.e. numeric fields shown with dashes, meters and such grayed out).

Transmit Settings

Use as Write Request

If checked this means that the transmit mapping will be sent out once if there is a write request to one of the variables contained in the mapping. Usually the display only sends values provided by the owners of the respective variables in transmit mappings.

This means that e.g. engine speed will only be sent out as provided by engine ECU. If in your system modifying the measured engine speed value is used to set a new desired engine speed then you can check this property and writing on the engine speed variable will send out the transmit mapping containing the new setpoint of the engine speed value.

Please note that all other values in the mapping will be the ones provided by their respective owners and even the new setpoint will in the next message be replaced by the last measured value provided by the owner.

If you should want to write to the same variable from many sites you should consider "PCClient" as the variable owner which will accept all write requests but whose variables will never become invalid again once they have a value.

Send Value On

- **None:** Mapping is only sent time based (if configured) and on request.
- **Any Variable Change:** Whenever one of the mapped variables changes its value the mapping is sent out.
- **Specific Variable Change:** The mapping is sent out if the variable specified in the following property changes its value.

Select Variable (Tx)

Choose the variable whose value change should trigger sending out the mapping. This variable can be part of the mapping but doesn't have to be.

Transmission Period (in ms)

Defines the interval between messages for this transmit mapping. Set to 0 if time based sending is not desired.

Defining Data Section of CANFreestyle Mapping

After setting all the general properties of the mapping now the data part has to be defined.

Some general rules apply:

- All variable's and constant's positions define the position of the least significant bit (for little and big endian)
- Transmit mappings have to be defined completely - we can not send "gaps" on the bus.
- Receive mappings can have gaps - as long as the length can be determined.
- Receive mappings are recognized if all the following conditions are true:

```
if ( ( (CAN-ID received AND configured CAN-ID Mask) ==
(configured CAN-ID AND configured CAN-ID Mask) )
    && ( (message length) == (message length
configured) )
    && ( (constants received AND configured mask) ==
(constants configured AND configured mask) ) )
```


Note: It is allowed to leave gaps in the data section of receive mappings. However, the message length has to be configured correctly in the Mapping Length property

Note: The last condition allows covering multiplexed Mappings by defining a separate mapping for each value of the multiplexer

To do this, use a constant value from the "Constants" group and adjust it to the length of the multiplexer region in your system.

Then map this constant to the appropriate byte/bit position. Fill the rest with the variables needed.

Create the mapping multiple times with different constant values. Each mapping will only react if its constant value equals the incoming message. The variables should match the message structure for the according multiplexer value.

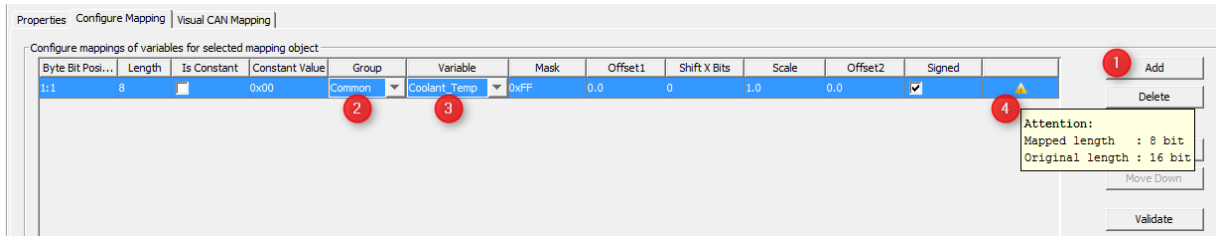

1. Press "Add" button to add a line to the mapping.
2. Select the group of the variable to map.
3. Select the variable itself.

After doing this the properties in the line adjust to the variable definitions made earlier e.g. the length is set to 16 bits and the mask is set to 0xffff meaning all the bits will be taken.

Events

This tab allows adding actions to mapping related events. It only appears for receive mappings.

The configured actions for the events are executed directly in the CAN thread when the event happens.

The CAN stacks will wait until the actions are executed.

OnReceiveTimeOut

This event is triggered if a receive mapping is not received within the period defined as "Transmission Period". If this happens all the variables mapped to the PGN are automatically considered invalid and additionally the action is executed.

If you should see any "Event Options" for this event - ignore them like the PCClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

OnReceiveTimeOutResolved

This event is triggered if a receive mapping which time out before is received again. If this happens all the variables mapped to the PGN are automatically considered valid again (assuming the PGN received really contained a value for them) and additionally the action is executed.

If you should see any "Event Options" for this event - ignore them like the PCClient does.

Possible actions that can be assigned are

- "No Action" which is the default

- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

OnMappingReceived

The action for this event is executed EVERY TIME the mapping is received (regardless of value changes).

When a script action is executed, the variables used in the mapping will already have been updated with the values from the CAN message.

Do NOT execute complex scripts at this event if the mapping is received very often!

Monitor the performance on the device with a realistic cycle time of all CAN messages.

Monitor the cycle time of transmit messages (the CAN stack has to wait until the received action is over before taking care of other tasks like sending out transmit mappings).

If you should see any "Event Options" for this event - ignore them like the PCClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

✚CANFreestyle mapping variable properties

The following settings can be made for each variable added to the mapping:

Byte Bit Position

Position is shown as byte#:bit# where byte 1 is the byte closest to the CAN identifier and bit 1 is the least significant bit of a byte. I.e. full CAN message starts with byte 1 directly behind the CAN ID and ends with byte 8. In a byte with value 1 bit 1 is set, in a byte with value 128 bit 8 is set.

These enumeration scheme matches the one used in J1939 standard documents so that you can directly copy the position. Engine coolant temperature is defined as the first byte - so set start position to 1:1.

Alternatively one can type the bit position directly: 1 refers to the bit closest to the CAN identifier and 64 is the bit at the end of the CAN message.

Warning: This input does not always behave as expected when typing position by hand. Finally the displayed "byte:bit" value is relevant.

The mapping is filled correctly if there are no gaps i.e. the whole message gets filled with values.

Please refer to the following image for byte and bit enumeration within a CAN message. This enumeration is valid for little and big endian variables since it only refers to the CAN message itself.

byte	CAN ID	1	2	3	4	5	6	7	8
bit of byte		8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1
bit of CAN message		1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16	17 18 19 20 21 22 23 24	25 26 27 28 29 30 31 32	33 34 35 36 37 38 39 40	41 42 43 44 45 46 47 48	49 50 51 52 53 54 55 56	57 58 59 60 61 62 63 64

Length

Defines the size of the mapped numeric variable or constant in bits. If a string is mapped this defines the length of the string in bytes.

Mapped length can be shorter than the length defined for the variable but not longer. By default the variable length is used.

Is Constant

Enable this checkbox to define a constant. Depending on the mask constants can be used to fill gaps or recognize multiplexers in receive mappings. In transmit mappings constants are required for every part of the message not filled with a variable.

Uncheck this property to map a variable.

Constant Value

Although appearance does not change this property is only valid and editable for constants i.e. lines where "Is Constant" property is set.

If valid this defines the numeric value of the constant. Please note that constants are always expected to be numeric - there is no option to define string constants.

Group

Variable group containing the variable to be mapped. Does not apply to constants.

Variable

The variable to be mapped.

Mask

Variable or constant are bitwise ANDed with mask before they are applied.

See [receive condition](#)³⁵¹ on how this can be used to receive multiplexed mappings.

See section [mapping calculations](#)³⁵⁷ for details about how this property applies to receive and transmit mappings.

Mask is not used for String variables.

Offset1

Offset1 is a floating point value applied to the received value after mask and shift factor but before scale and offset 2.

See section [mapping calculations](#)³⁵⁷ for details about how this property applies to receive and transmit mappings.

Offset 1 is not used for String variables.

Values can be entered in decimal form or in scientific notation / floating-point representation.

Shift X Bits

Shift received value to the right by as many bits as defined here. Negative values shift to the left.

This value is applied after the mask but before offset and scale.

See section [mapping calculations](#)³⁵⁷ for details about how this property applies to receive and transmit mappings.

Shift is not used for String variables.

Scale

Floating point value to scale the received value before applying it to the mapped variable. Is applied after mask, shift and offset 1 but before offset 2.

Scale is not used for String variables.

Values can be entered in decimal form or in scientific notation / floating-point representation.

Offset2

Floating point value applied after all the other calculations are done.

See section [mapping calculations](#)³⁵⁷ for details about how this property applies to receive and transmit mappings.

Offset2 is not used for String variables.

Values can be entered in decimal form or in scientific notation / floating-point representation.

Empty Field

This is a simple information field. It shows a "Warning" icon if e.g. a variable is not completely mapped.

In the [example\(4\)](#)³⁵⁴ a 16 bit variable is mapped only with 8 bits, so the warning is shown.

Mapping calculations

The calculations applied to a mapping are defined mainly for receive mappings

For transmit mappings all calculations are inverted so that the same values can be applied to receive and transmit mappings.

The formula converting a mapped area of a CAN message into the variable value is as follows:

$$\text{variable_value} = (((\text{CAN_value} \gg \text{shift}) \& \text{mask}) + \text{offset1}) * \text{scale}) + \text{offset2}$$

Consequently the calculation applied to transmit mappings inverts the above:

$$\text{CAN_value} = (((\text{variable_value} - \text{offset2}) / \text{scale}) - \text{offset1}) \& \text{mask} \ll \text{shift}$$

Note: For constants only "*shift*" and "*mask*" are applied.

Note: Currently signed/unsigned calculation is performed based on variable definition. If variable is signed this means the CAN_value is considered negative if the most significant bit of the mapped area is set.


Sequences

Sequences can be used to send several transmit mappings periodically. For example it can be used as a simple kind of transport protocol.


Create Sequences

Before you can create Sequences you have to define transmit mappings. For more information please have a look at chapter [Defining Variable Mappings](#)³⁴⁹


If transmit mappings are already defined please select in the main menu "**Transmit Sequences...**" as shown below:

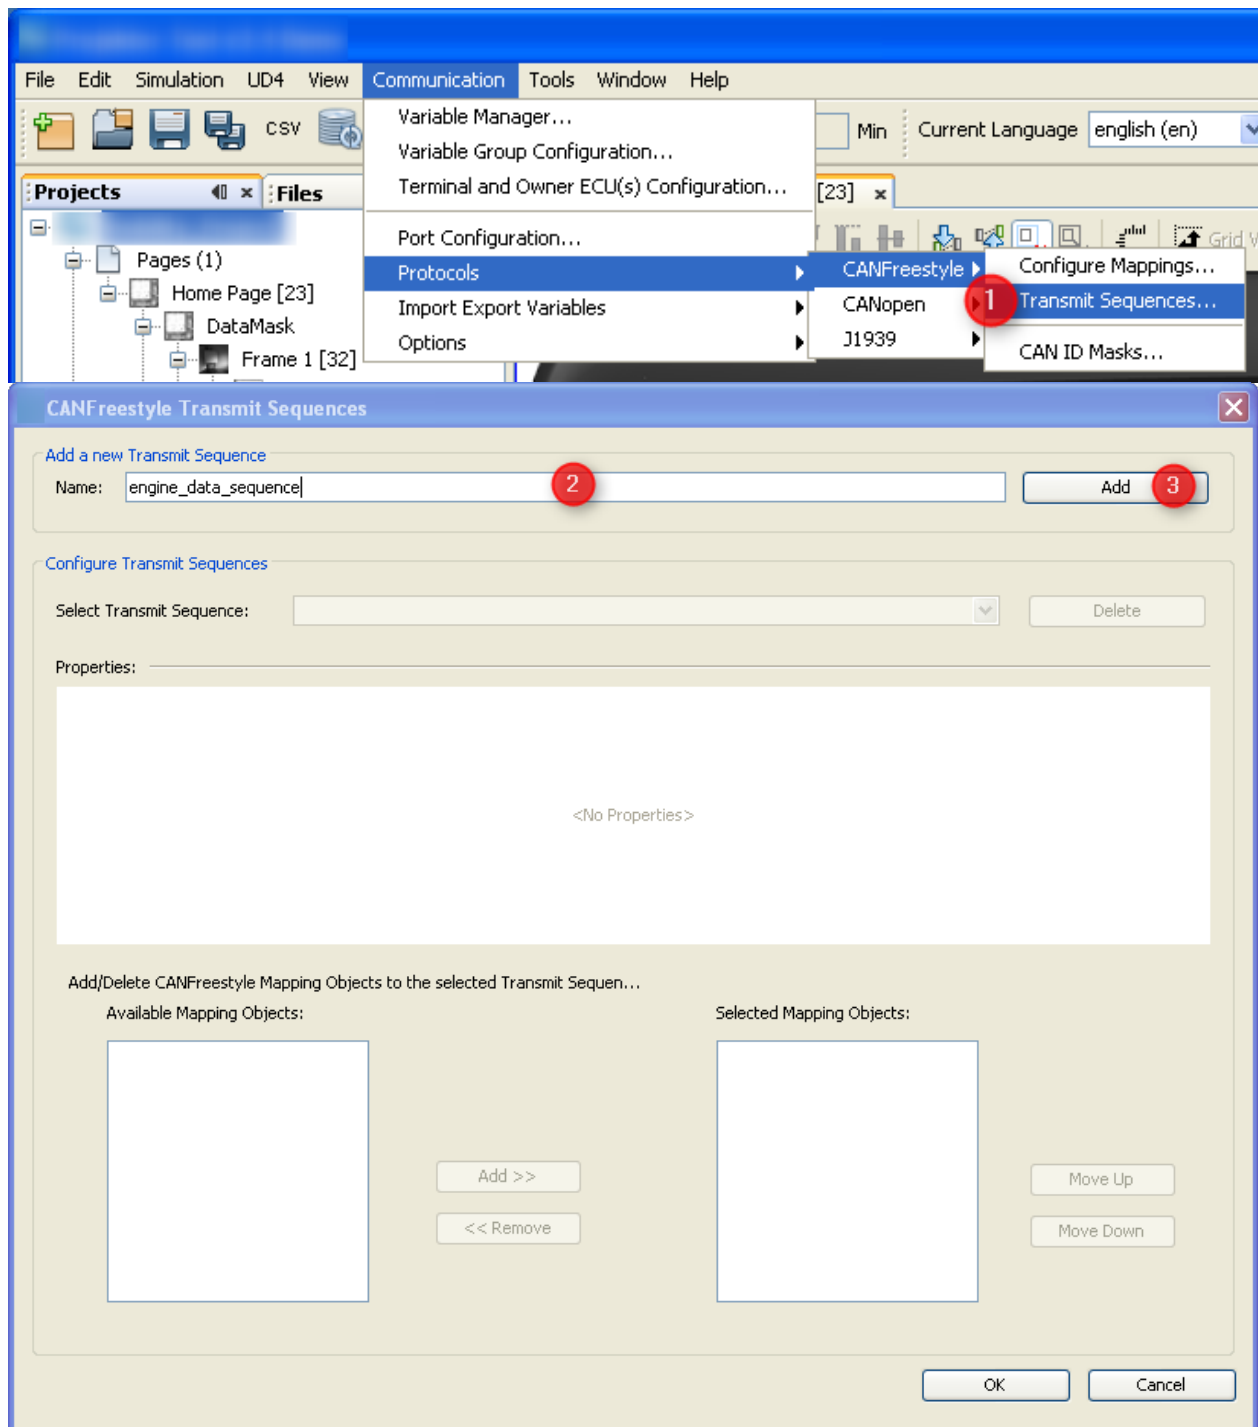

1. Open Menu "**Transmit Sequence...**"
 2. Enter a **Sequence Name** in the new dialog named **CANFreestyle Transmit Sequence** which appears.
 3. Press "**Add**" button
- Afterwards following should be visible

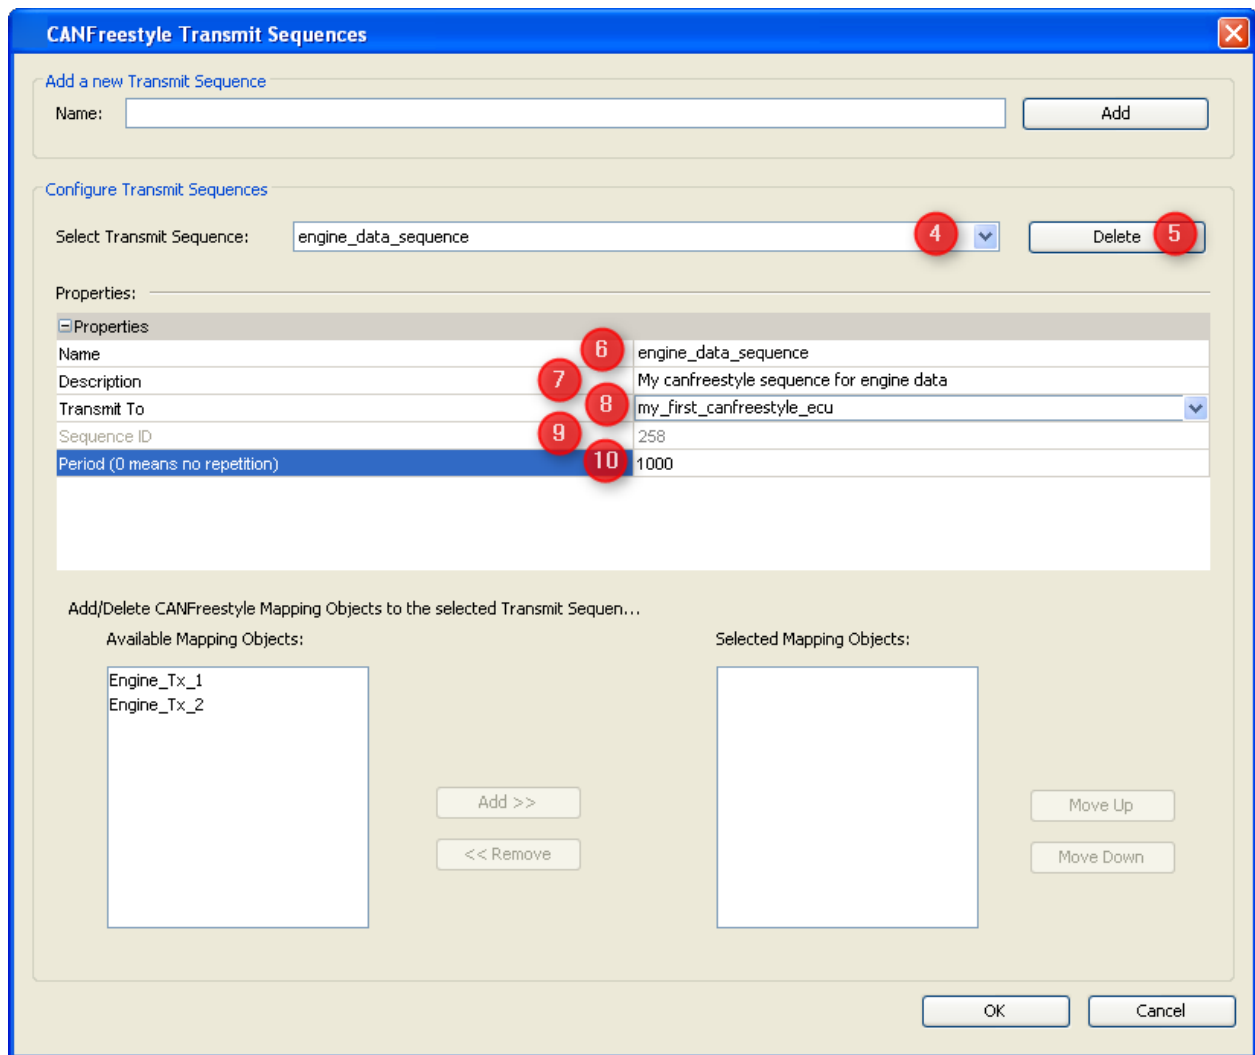


4. Combo box where you can select the sequence you want to edit.
5. Deletes the current selected sequence.
6. Name of the transmit sequence which is currently selected
7. Here you can add a description for the sequence
8. Target owner which should receive the sequence.
9. The "**Sequence ID**" is a unique internal ID, which is not editable.
10. The "**Period**" (in ms) defines the cycle for sending the sequence. **NOTE:** This is the only way to trigger the sequence.

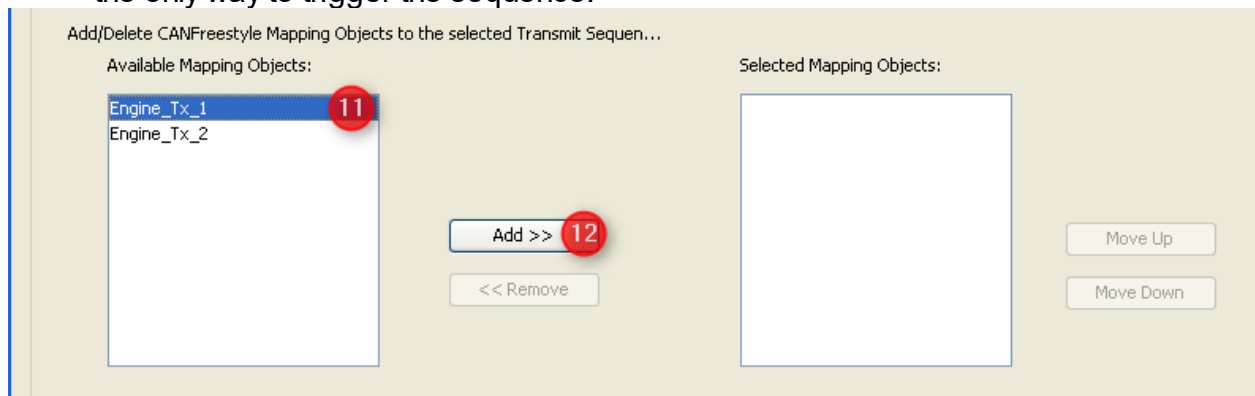

11. Select the **mapping** you want to add to the sequence.

12. Press **"Add >>"** to add the message to the sequence

After adding of mapping objects the dialog should look like this:

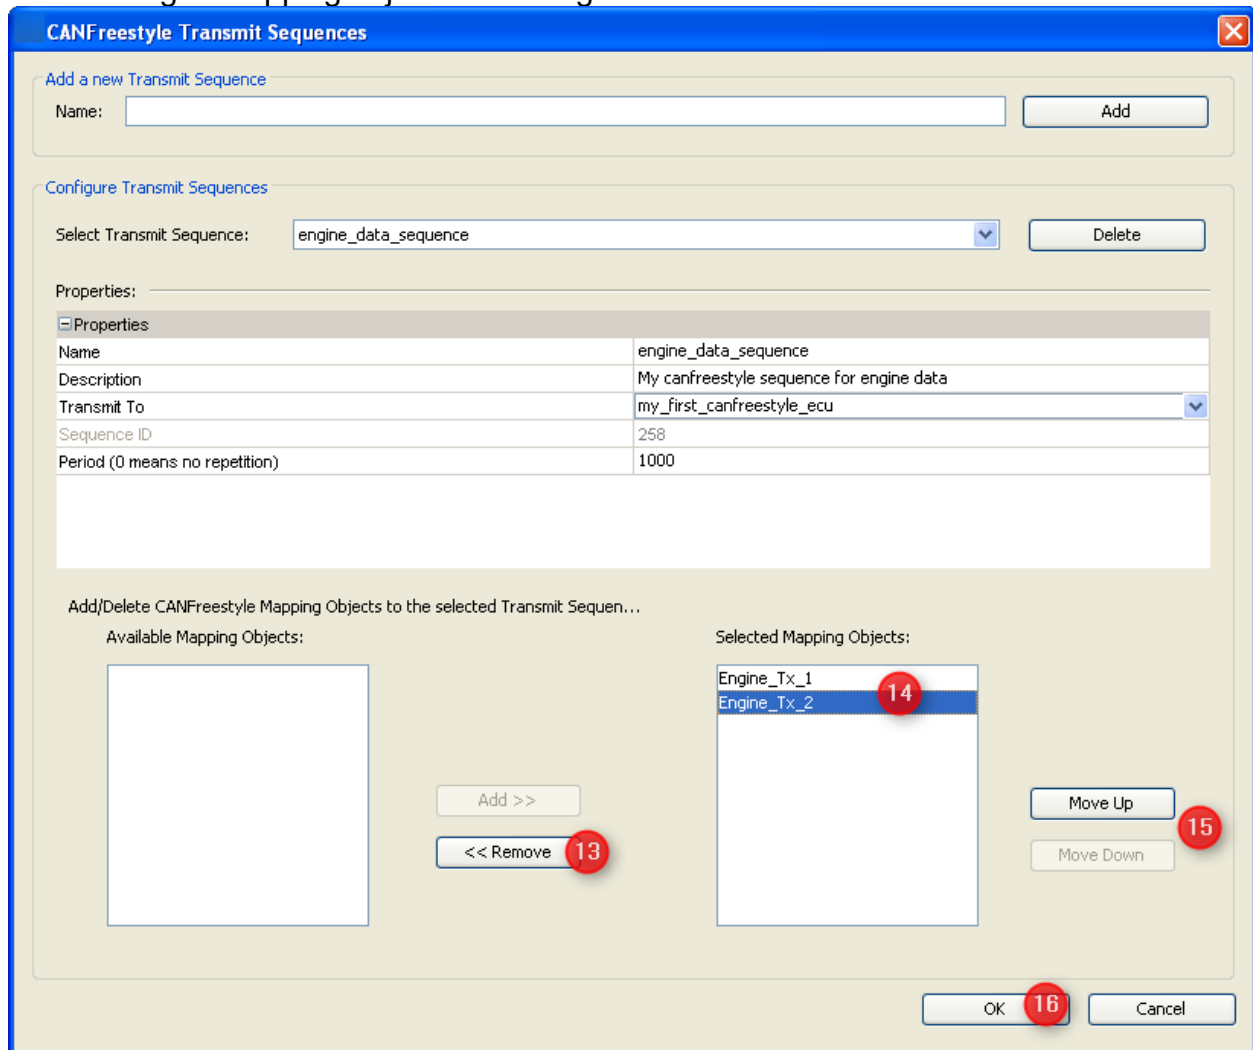

13. If a mapping was mapped by mistake you can select the mapping and remove it again with the **"<< Remove"** button

14. The list box contains the transmit mapping which should be transmitted via the sequence

15. With the help of the buttons **"Move Up"** and **"Move Down"** you can change the order of the transmit mapping at the sequence

Finally the dialog should be confirmed with **"OK"** to save the sequences.

5.2 CANopen

Introduction

Aside from CANFreestyle and J1939 protocol, it is possible to connect the device into a CANopen network.

The CANopen stack is implemented on the standard CIA 301 4.2.0 and support the following features:

- SDO Communication (Server and Client implementation)
 - Download and Upload for expedited and segmented protocol

- Abort SDO Transfer protocol
- NMT (Slave implementation)
 - NMT transitions
 - NMT states
- PDO Communication
 - Asynchronous communication
 - acyclic and cyclic communication
- EDS File

The following Features are **NOT** implemented:

- EMCY Messages
- Node Guarding
- Block transfer SDO communication
- RTR
- Sync producer
- Auto start
- RWR, RWW Access type
- Objects


Object Dictionary: Objects list

The following objects are implemented by default in the CANopen stack of the device:


Objects
0x1000 – Device Type
0x1001 – Error Register
0x1002 – Manufacturer Status Register
0x1003 – Pre-Defined Error field
0x1005 – COB-ID Sync message
0x1008 – Manufacturer Device Name
0x1009 – Manufacturer Hardware Version
0x100a – Manufacturer Software version
0x1012 – COB-ID Time Stamp Object
0x1014 – COB-ID Emergency Object
0x1016 – Consumer heartbeat time
0x1017 – Producer Heartbeat time
0x1018 – Identity Object
0x1200 – 0x127f – Server SDO parameter
0x1280 – 0x12ff – Client SDO Parameter
0x1400 – 0x15ff – Receive PDO Communication Parameter
0x1600 – 0x17ff – Receive PDO Mapping Parameter
0x1800 – 0x19ff – Transmit PDO Communication Parameter
0x1a00 – 0x1bff – Transmit PDO Mapping Parameter

Communicate using CANopen protocol

To set up the CANopen protocol go to menu communication-> Terminal and Owner ECU(s) Configuration (1)

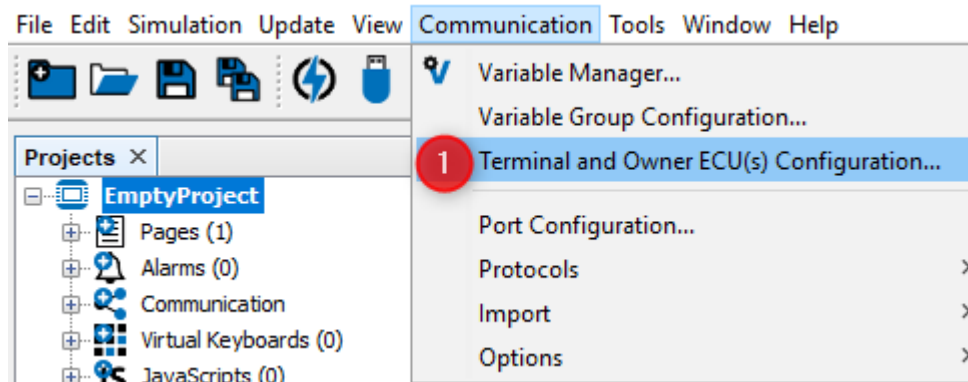

Then the user can choose the protocol CANopen on the desired CAN port

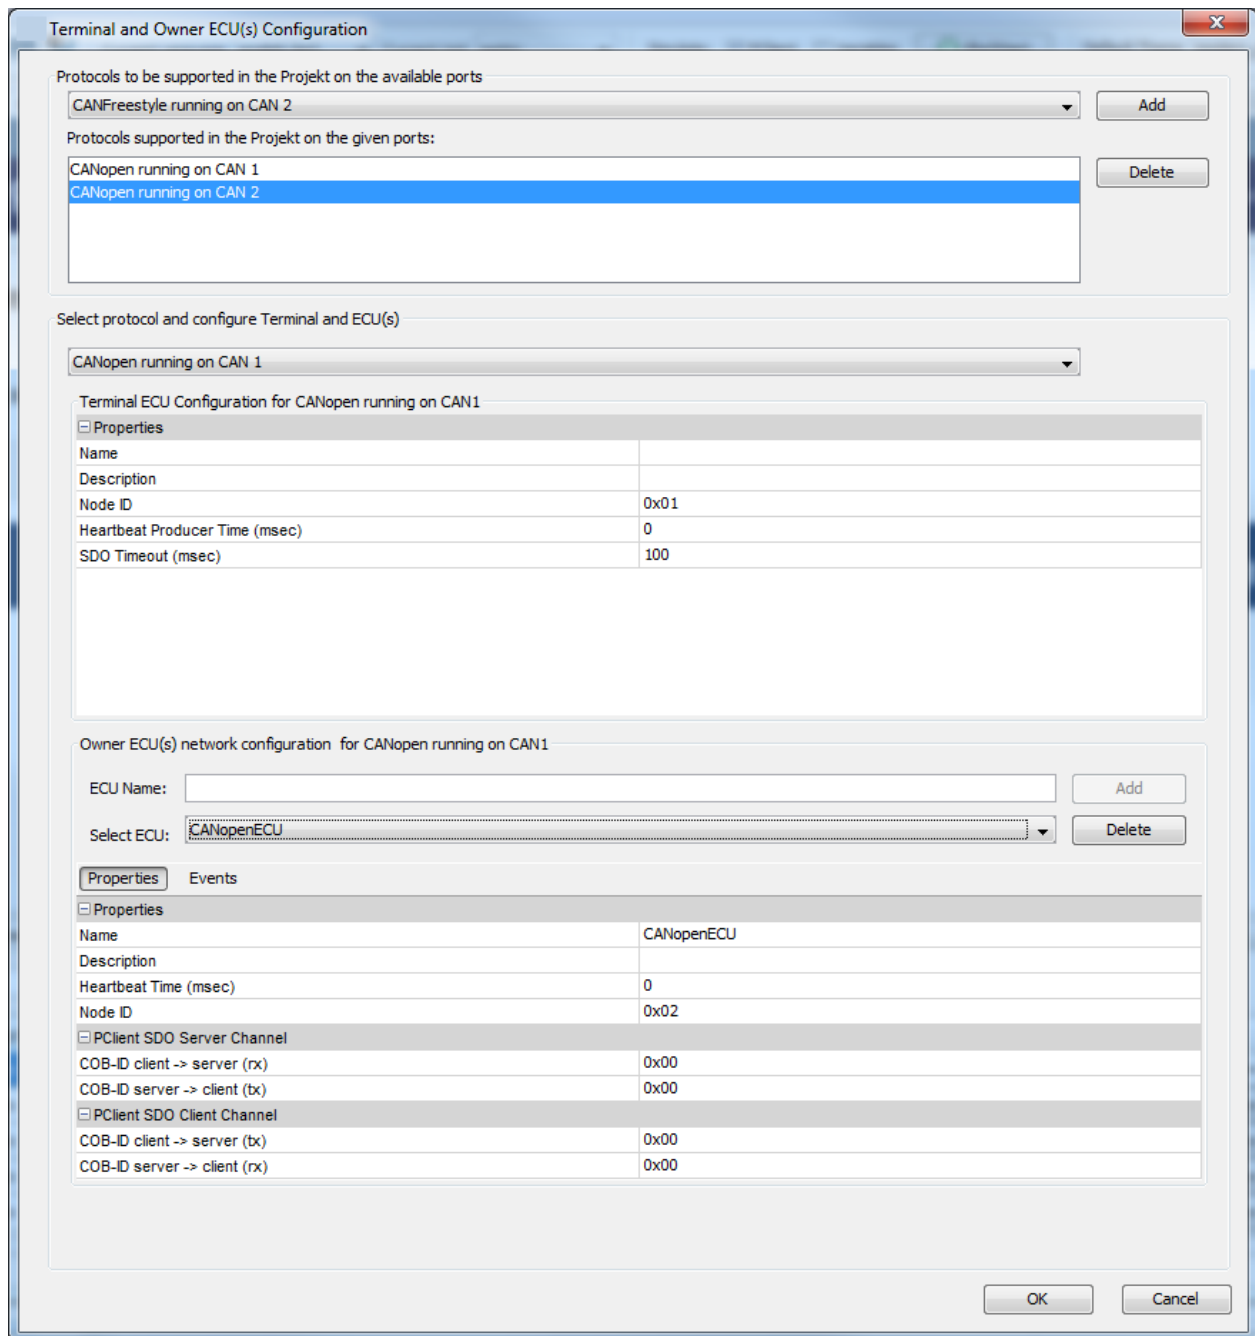

Dialog to set up the CANopen protocol on a device

CAN Port instance configuration

Step 1 : Selecting a port protocol instance

To add a CANopen protocol instance, select the protocol to be supported on the desired port and press Add

The added protocol instance is now selected in the view Select Protocol and configure Terminal and ECU(s)

Step 2: Selection and configuration of device node

After adding or selecting a CANopen protocol instance on a CAN port, the user can update following properties

Properties	values / Range	Default values
Name	max 255 characters	Name of the selected panel
Description	max. 255 characters	
Node ID	0x1 - 0x7F	0x1
HeartBeat Producer (ms) (Object 1017)	0-65535	0
SDO Timeout (msec)	100 - 1000	100

Step 3: Configuration of other nodes in the CANopen Network

After selecting a CAN port, a "partner" node shall be added in order to communicate with the device by pressing the Add button.

The new device properties are:

Properties	values / Range	Default values / Information
Name	max 255 characters	
Description	max. 255 characters	
Node ID	0x1 - 0x7F	0x2
HeartBeat Timer (ms) (Object 1016 Sub1 - 127)	0-65535	0
PClient SDO Server Channel (object 1201-127F)		These COB-IDs are used if the ECU requests a value from the display device. The ECU requests a value from the display (Client -> Server (rx from the view of the device)) and the display answers (Server -> Client (tx from the view of the device))
COB-ID Client ->Server (rx)	0x601 - 0x699	0x600 + \${Node-ID} of panel on the selected CAN Port
COB-ID Server->Client (tx)	0x581 - 0x599	0x580 + \${Node-ID} of panel on the selected CAN Port
PClient SDO Client Channel (object 1280-12FF)		These COB-IDs are used if the display requests a value from the ECU. The display requests a value from the ECU (Client -> Server (tx from the view of the device)) and the ECU answers (Server -> Client (tx from the view of the device))
COB-ID Client ->Server (tx)	0x601 - 0x699	0x0
COB-ID Server->Client (rx)	0x581 - 0x599	0x0

For the new CANopen Device, events can be configured:

Events	Options (1)	actions (2)
OnHeartBeatTimeout	Sound pattern	Set Value Execute Script

Event Options

Event: OnHeartBeatTimeout

Event Options:

- Properties:

Sound Pattern	10101010101010101010
---------------	----------------------

Event Actions

☐ No Action

Select Action: Set Value

Options:

- Properties:

Variable	None
Value	Value not set

OK Cancel

Configuration of event OnHeartBeatTimeout.

Step 4: Deleting of CANopen protocol instance

User can delete a whole CANopen protocol instance from the project. All CANopen variables will be assigned to the owner PClient. PDO configuration will be completely deleted.


Step 5: Deleting of CANopen ECU node

User can delete a CANopen ECU node. All related variable will be assigned to the PClient owner

Creating/ Updating/ Deleting of CANopen Variables

Once the user created a CANopen instance and CANopen ECU, he can create manufacturer objects (CANopen variables).

Goto menu Communication -> Variable manager

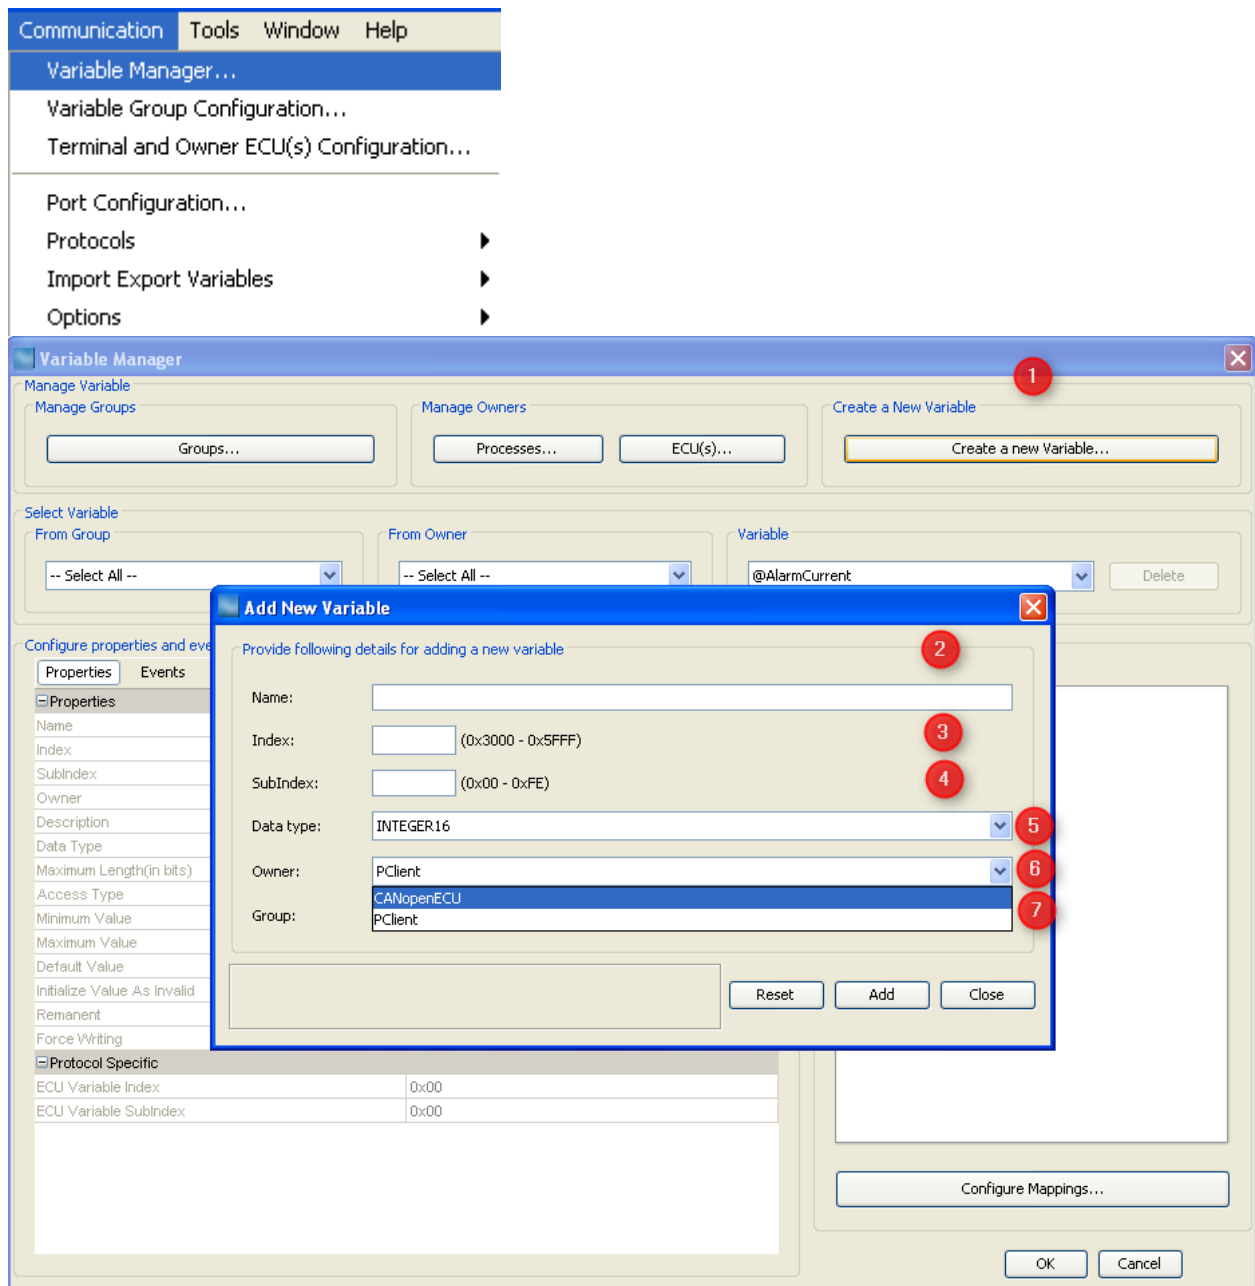

Step1: Press on button Create a new Variable

By pressing on this button, the dialog Add New Variable appears.

User can configure following properties:

Properties	values / Range	Default values
Name (2)	max 255 characters	blank
Index (3)	0x3000-0x5FFF	blank
Sub-Index (4)	0x0-0xFE	blank
Data type (5)	BOOLEAN INTEGER2 INTEGER8/UNSIGNED8 INTEGER16/UNSIGNED16 INTEGER32/UNSIGNED32 + User defined Data type (if created)	INTEGER16

Properties	values / Range	Default values
Owner (6)	List of defined Owners + PClient	PClient or last used Owner
Group (7)	User defined group + Common	Common

Step 2: By pressing Add the new variable will be created with selected configuration assuming that no issue is existing

Step 3: By pressing Close, the dialog Add a new Variable will be closed.

Alternative Step 2: By pressing Reset, all default values will be displayed.

Step 4: Once closed, other properties/ events can be updated using the variable manager properties / events views.

The last created variable will be displayed. User can select an other variable by selection Owner/Group/Variable

Following properties / Events can be configured

Properties	values / Range	Default values
Name	max. 255 characters	
Index	0x3000 - 0x5fff	as created
Sub Index	0x0-0xFE	as created
Owner	CANopen owner e.g. CANopenECU	as created
Description	blank max 255 Characters	blank
Data type	BOOLEAN INTEGER2 INTEGER8/UNSIGNED8 INTEGER16/UNSIGNED16 INTEGER32/UNSIGNED32 + User defined Data type (if created)	INTEGER16
Maximum Length (in bits)	length in bits for INTEGER/UNSIGNED variables length in bytes for STRING variables	16
Minimum Value	maximum value for selected data type	32767
Maximum Value	minimum value for selected data type	-32768
Default Value	minimum value - maximum value for selected data type	0
Initialize Value as Invalid	False True	True
Remanent	False True	False
Force writing	False True	False
Protocol Specific		

Properties	values / Range	Default values
ECU Variable Index	0x0-0x9FFF	0x0
ECU Variable Subindex	0x0-0xFE	0x0

For the new CANopen Device, events can be configured:

Events	Options (1)	actions (2)
OnValueChangedByOwner	Sound pattern	Set Value Scale Value Execute Script
OnValueChangedRequest	Sound pattern	Set Value Scale Value Execute Script

Select Variable

From Group: Common

From Owner: CANopenECU

Variable: CANopen Variable

Delete

Configure properties and events for selected variable

Properties Events

Properties

Name	CANopen Variable
Index	0x3000
Subindex	0x01
Owner	CANopenECU
Description	
Data Type	INTEGER16
Maximum Length(in bits)	16
Access Type	ReadWrite
Minimum Value	-32768
Maximum Value	32767
Default Value	0
Initialize Value As Invalid	<input checked="" type="checkbox"/>
Force Writing	<input type="checkbox"/>

Protocol Specific

ECU Variable Index	0x00
ECU Variable Subindex	0x00

Mappings for the selected variable

CANopen

Properties Events

Events

OnValueChangedByOwner	No Action	...
OnValueChangedRequest	No Action	...

Configure the SDO Communication

Once the CANopen protocol instance and CANopen ECU are created, all variables are available from the SDO communication as defined in the CIA 301 CANopen Standard

For example:

According, the user 's defined a alarm with number 1. To display, the alarm on device, following CAN message will be sent.

[601|8| 22 30 24 01 01 80 00 00]

als Response from SDO Server, the message is sent:

[581|8| 60 30 24 01 00 00 00 00]

SDO Client /Server of PClient

For each CANopen variable, user can configure the Index and Subindex of the manufacturer object on his own device with properties ECU Variable Index and ECU Variable Subindex.

The device can also send an SDO Download Write Request to the CANopenECU using this setting and PClient Client Channel as defined in the Terminal and Owner ECU(s) Configuration

Example:

The user wants to communicate via SDO Communication between his own CANopen ECU and device. By updating a CANopen variable on the device using Java Script or Encoder, a SDO

Download Write Request will be sent to the CANopen ECU.

Assuming a CANopen protocol instance is already created and a CANopenECU is added.

User configures CANopenECU Properties

PClient COB-ID Client -> Server (tx) to 0x602

and PClient COB-ID Client -> Server (rx) to 0x582 if the CANopen ECU Node-ID is set to 0x2

User creates a CANopen Variable with CANopenVar with index 0x3000,0x1 and set the ECU Variable Index to 0x4500 and ECU Variable Subindex 0xdd (as defined on his own ECU). Other properties are set to default .

User assigns the variable into a numeric field as input for example. On the device, the variable will be updated using the Encoder to value 0x2. The following SDO Download message will be sent by the device

`[602|8| 2B 00 45 DD 02 00 00 00]`

As soon as the answer is received from device, the value will be updated in the DDO.

`[582|8| 60 03 24 01 00 00 00 00]`

SDO Client/ Server of CANopen ECU

Since version 1.12 the CANopen stack does support SDO Upload Requests (read a value from a CANopen ECU's object dictionary).

Preconditions for using SDO Upload Requests:

- The variable which shall be read via SDO Upload request needs to be owned by a CANopen ECU
- The *PClient SDO Client Channel* COB-IDs of the CANopen ECU need to be configured
- The *ECU Variable Index* and *ECU Variable Subindex* in the *Protocol Specific* section of the variable properties need to contain the index and subindex of the variable in the ECU's object dictionary.


The only way to trigger the sending of a SDO Upload Request is the new JavaScript function [requestVariableValueFromOwner](#)⁵⁹⁷ .

Rules that apply for SDO Upload Requests:


- There may be only one active SDO Upload Request. If more Upload Requests are triggered via requestVariableValueFromOwner, they will be queued until either a timeout happens (see below) or the ECU answers with a SDO Upload Response.
- The ECU has to answer to an SDO Upload Request within 100ms. If the answer takes longer or is not answered at all, an SDOAbort message will be sent (with error code *SDO Protocol Timeout*).
- The CANopen stack will only react to SDO Upload Responses if an SDO Upload Request has been sent before (simulating a request with e.g. CANFreestyle will not work).

Configure the PDO Communication

PDO (Process Data Communication) have a length of 8 bytes and they can be configured under

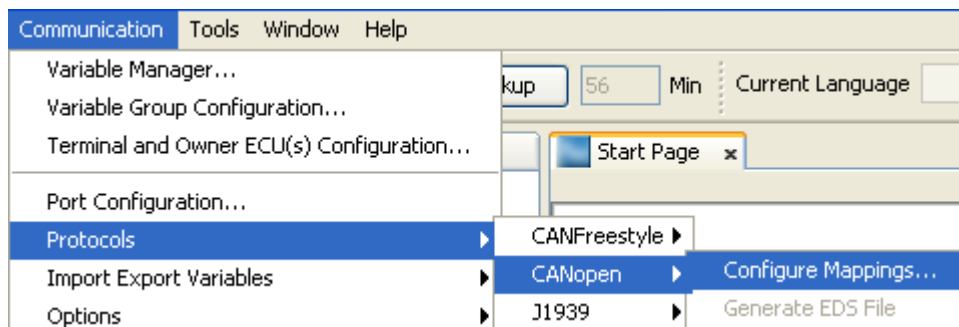

or by pressing the button Configure Mapping... in Variable Manager Dialog

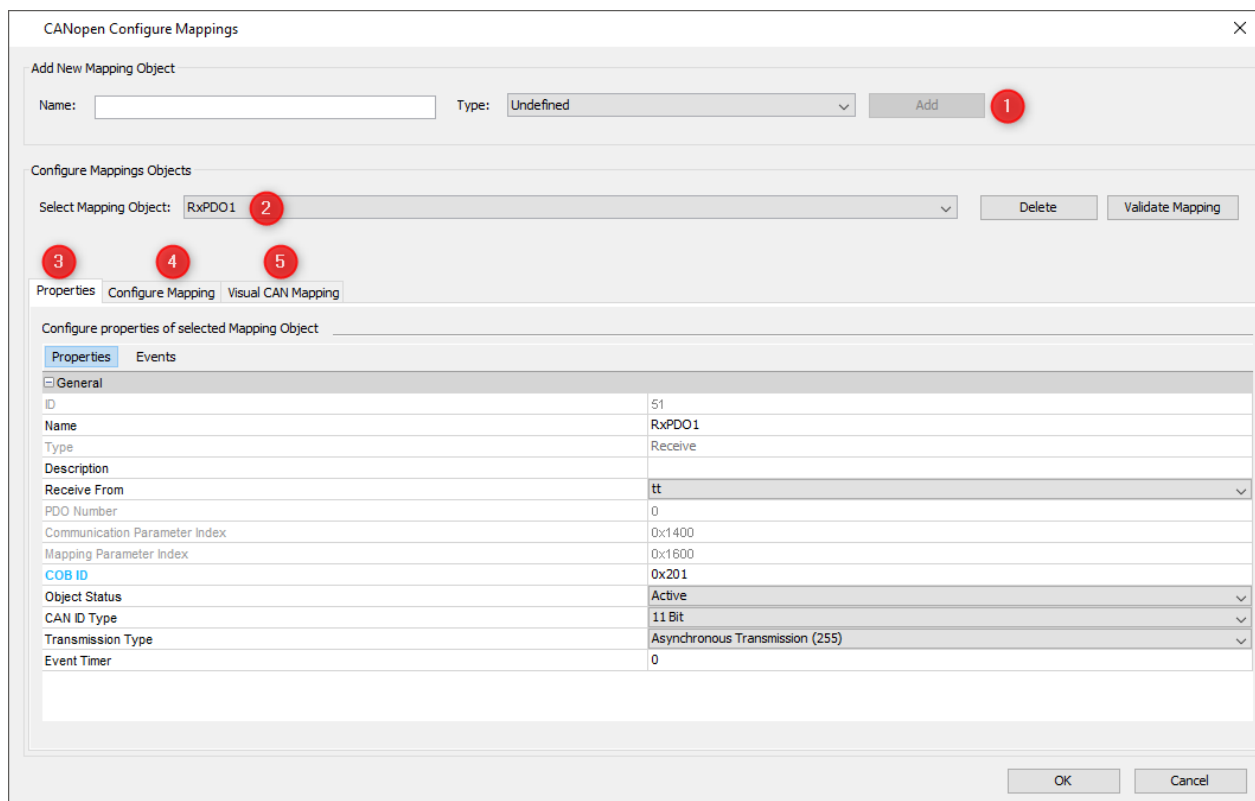

Step 1: Add a new Mapping Object

The user enters a name for the PDO and selects the PDO type Receive or Transmit. By pressing Add , the PDO will be created and appears as selected in the field Select Mapping Object.

Step 2: User selects the PDO

Step 3: User can update the following Properties /Events

Properties	values / Range	Default values
Name	max. 255 characters	as created
Type	Receive not editable Transmit	as created
Description	max. 255 characters	blank
Receive From Transmit To	List of CANopen ECU + PCClient	first created CANopen ECU
PDO Number	automatic incremented not editable 0- 512	0
Communication Parameter Index	automatic incremented not editable For Receive 0x1400- 0x15FF For Transmit 0x1800-19FF	For Receive 0x140{0-1FF} For Transmit 0x180{0-1FF}
Mapping Parameter Index	automatic incremented not editable For Receive 0x1600- 0x17FF For Transmit 0x1A00- 0x11FF	corresponding to communication Parameter Index + 0x200
COB-ID	0x201-0x599 if a value is written outside of the CANopen COB-ID range, then a confirmation dialog will be displayed. By clicking on Yes, the new value will be accepted	
Object Status	Active Inactive	Active
CAN ID Type	11 Bit 29 Bit (29 bits can not be selected)	11 Bits
Transmission Type	Asynchronous Transmission (254-255) (transmit when a variable value changes) Cyclic Synchronous Transmission (1-240) (transmitted cyclically: after every n-th SYNC (where n = 1...240).) Acyclic Synchronous Transmission (requires a	as created

Properties	values / Range	Default values
	sync* message on the bus for messages to be processed)	
Event Timer	0 - 65535 For Receive: will be handled as time out For Transmit: period for sending CAN message	0
Inhibit Time	Only configurable for Transmit PDOs 0-65535 ms (miminum time between two sendings of a message)	0
Sync Value	Only configurable for Transmit PDOs for cyclic synchronous 0-240	1

* The sync message is sent on COB-ID 0x80 with 0 data bytes.

Events

This tab allows adding actions to mapping related events. It only appears for receive mappings.

The configured actions for the events are executed directly in the CAN thread when the event happens.

The CAN stacks will wait until the actions are executed.

OnReceiveTimeOutAction

This event is triggered if a receive mapping is not received within the period defined as "Transmission Period". If this happens all the variables mapped to the PGN are automatically considered invalid and additionally the action is executed.

If you should see any "Event Options" for this event - ignore them like the PClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

OnReceiveTimeOutResolvedAction

This event is triggered if a receive mapping which time out before is received again. If this happens all the variables mapped to the PGN are automatically considered valid again (assuming the PGN received really contained a value for them) and additionally the action is executed.

If you should see any "Event Options" for this event - ignore them like the PClient does.

 
Possible actions that can be assigned are

- "No Action" which is the default

- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

Step 4: Add a Variable to the Variable mapping

In the Configure Mapping tab, by pressing on Add, a new variable can be configured into the variable mapping. Alternatively, the [Visual CAN Mapping](#)⁴²⁹ (5) can be used. Once created, a PDO can be deleted by pressing the Delete button.

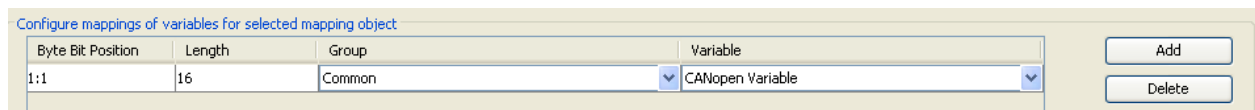


The user selects the group and then a variable. The PDO has a maximum length of 8 Bytes. For Saving the PDO, user click on OK. By pressing on Cancel, all changes will be cancelled.

The assignment of Variable into a PDO is depending on the access type of the variables and the owner of the Variable

For variables which belongs to same owner as PDO or PClient, the following rules are implemented:

- WO, RW can be added into Receive PDOs.
- RO, RW can be added into Transmit PDOs.

Create an EDS (Electronic Data File) file

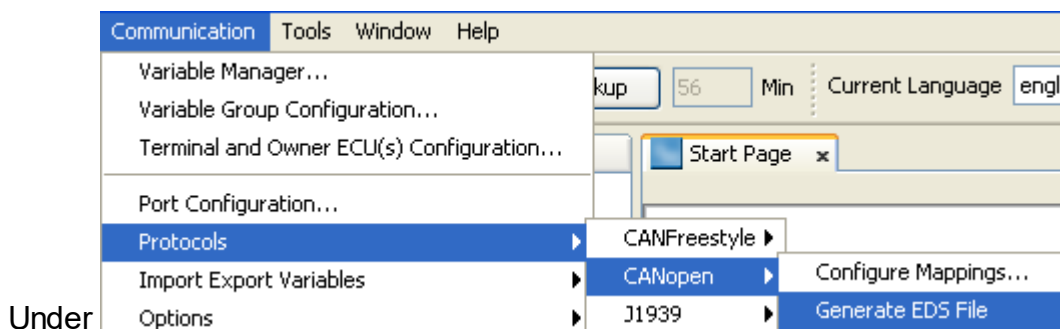

After few seconds depending on the number of PDO and variables, one or several EDS Files (one per CAN instance) will be generated under the directory of the project.

5.3 J1939

General Introduction

J1939 is a CAN protocol defined by SAE (Society of Automotive Engineers) and is the basis for some other standards such as NMEA2000 for GPS data on CAN and ISO 11783 in agricultural machinery. It is also widely used in "off-the-shelf" Diesel engines.

The protocol consists of the following main elements:

- unique identification of each participant on the bus
- standardized message and number format for many automotive use cases
- means to transfer data > 8 bytes (i.e. longer than one CAN message)

These main components are described in the following sections.

Based on these definitions there are more pages describing

- [basic settings to use J1939](#)³⁷⁷,
- [creation of J1939 ECUs and variables](#)³⁸¹ and
- [PGN mappings](#)³⁹²

in GUI tool to use J1939 on target display.

CAN Bus Configuration

J1939 is defined to run on a CAN 2.0B network at 250 kBit/s i.e. it uses long (29 bit) CAN identifiers.

Message Format

J1939 describes each signal (i.e. each value to be transmitted) as an **SPN** (Suspect Parameter Number).

Many SPNs are combined into a **PGN** (Parameter Group Number) which gets a unique number and describes what is actually transmitted on CAN bus.

Each PGN can be identified by the CAN identifier which has the following format (source: [Wikipedia](#))

29 bit CAN-Identifier				Data		
28 ... 26		25 ... 8		0 ... 8 byte		
Priority	PGN (Parameter Group Number)		7 ... 0 bit SA (Source Address)	PDU (Protocol Data Unit)		
PGN						
25	24	23 ... 16		15 ... 8		
R (Reserved)	DP (Data Page)	PF (PDU Format)		PS (PDU Specific)		
		I. PDU1 Format (specific) (peer to peer)				
		23 ... 16		15 ... 8		
		00h ... EFh (0 ... 239)		DA (Destination Address)		
		0 ... 61439				
or			II. PDU2 Format (global) (broadcast)			
		23 ... 16		15 ... 8		
		F0h ... FFh (240 ... 255)		GE (Group Extension)		
		61440 ... 65535				

3. Bits 23 ... 16 define the "PDU Format": If "PDU format" is less than 240 then "PDU specific" is 0 in the PGN definition and is replaced by the destination address in the CAN identifier (PDU1). If "PDU format" is greater or equal to 240 then "PDU specific" just extends the PGN number.
4. Bits 15 ... 8 are "PDU specific" and either define the destination address (PDU1) of the message or just extend the PGN number (PDU2).

Please note that the definitions above limit the number of valid PGNs:

PGN 0x000712 (==1810) is invalid since 0x07 == 7 is less than 240 and therefore the last byte has to be 0.

A valid PGN would be 0x000700.

Another side effect of the above definitions is that all PGNs with "PDU format" ≥ 240 are broadcasts because there is no room for a destination address in their CAN identifier.

Number Formats

J1939 typically transmits all values as **unsigned** with **offset** in **metric** units e.g. most temperatures are transferred in one byte with -40°C offset and 1°C/bit resolution. This means 50 is sent on CAN to indicate $+10^{\circ}\text{C}$.

For most number formats the higher range is reserved and in almost every case "**all bits set**" indicates "**invalid**" or "**don't care**". I.e. in the example above one could not transfer temperature 215°C since the respective value on CAN would be 255 == 0xFF where all bits are set.

Value transmission of all standardized PGNs happens in "**little endian**" format i.e. "least significant byte first". Nevertheless some manufacturers use "big endian" format in their proprietary messages.

Address Arbitration

Every ECU on a J1939 network has to claim its own address. The address consists of one byte and either uses predefined suggestion from SAE, e.g. 0x00 for the engine ECU or is dynamically negotiated at runtime.

In static networks addresses can be pre-configured but should nevertheless be claimed. The tool allows to configure ECUs with static addresses where only the address is defined. Alternatively addresses can be claimed dynamically i.e. each ECU claims an address and if there should be conflicts the one with the lower J1939 name wins.

J1939 name is a 64 bit number which is supposed to uniquely identify each ECU (at least on the network they are all connected to). It is sent as the data bytes of the address claim PGN 0x00EE00 == 60928. Since the fields of this 64 bit number are not byte aligned the address claim PGN can be considered a "worst case" scenario for little endian transmission.

Transport Protocol

J1939 transport protocol is used whenever the amount of data exceeds 8 bytes so that more than one CAN message is required to transfer them. J1939 transport protocol supports transferring up to 1785 bytes.

Our program automatically handles the transport protocol but requires all data transferred to be byte aligned in this case.

5.3.1 J1939 Basic Settings


This page is a follow-up of the general introduction into [J1939](#)³⁷⁴.

Here the general setup required to use J1939 is described.

There are two more pages describing setup of [J1939 ECU and variable definitions](#)³⁸¹ and [J1939 PGN mappings](#)³⁹².


Adding J1939 to the project

Before one can use J1939 protocol it has to be activated. A good starting point is to configure the hardware interface to be used to 250 kBit/s:

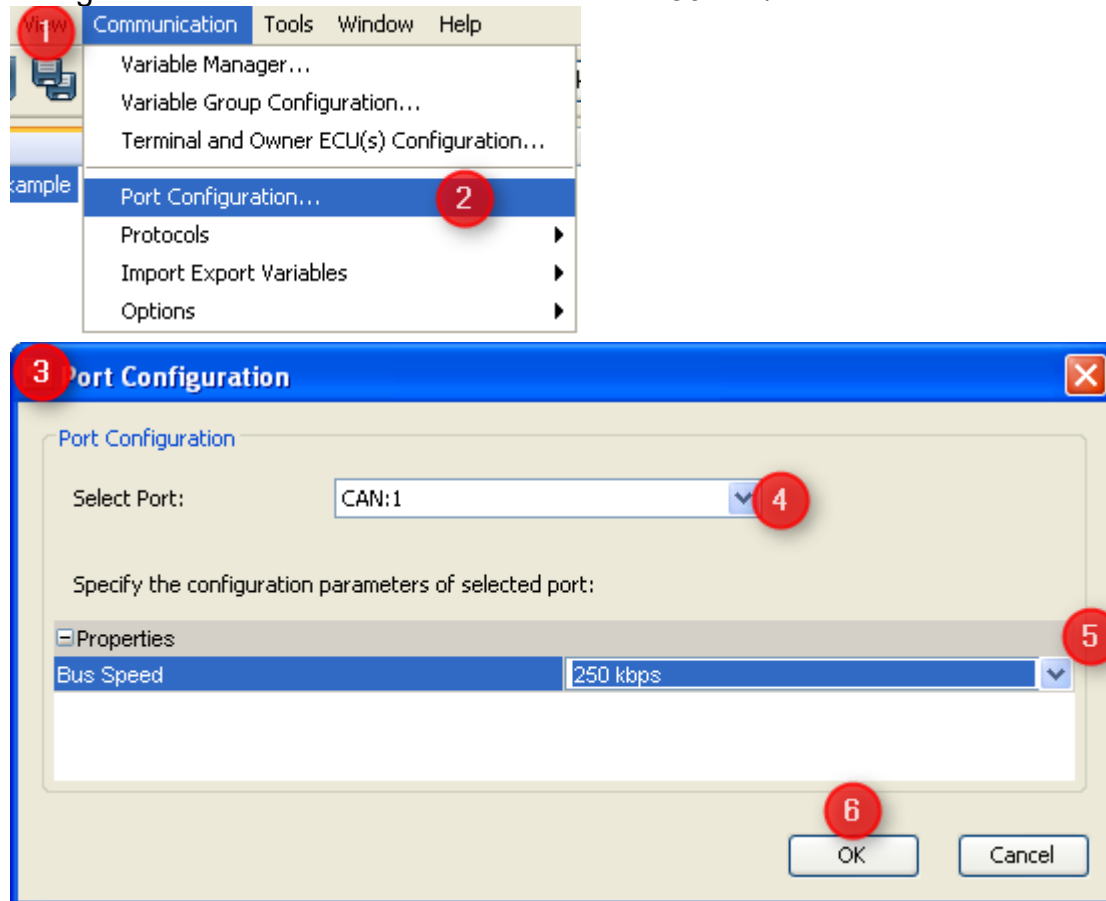

1. Open "Communication" menu
2. Choose "Port Configuration ..."
3. The "Port Configuration" dialog will appear
4. Select the CAN port you want to use for J1939
5. Set the bus speed (the standard baudrate for J1939 is 250 kBit/s)
6. Press "OK" to confirm the setting


Once the port is configured the protocol itself has to be assigned to it:

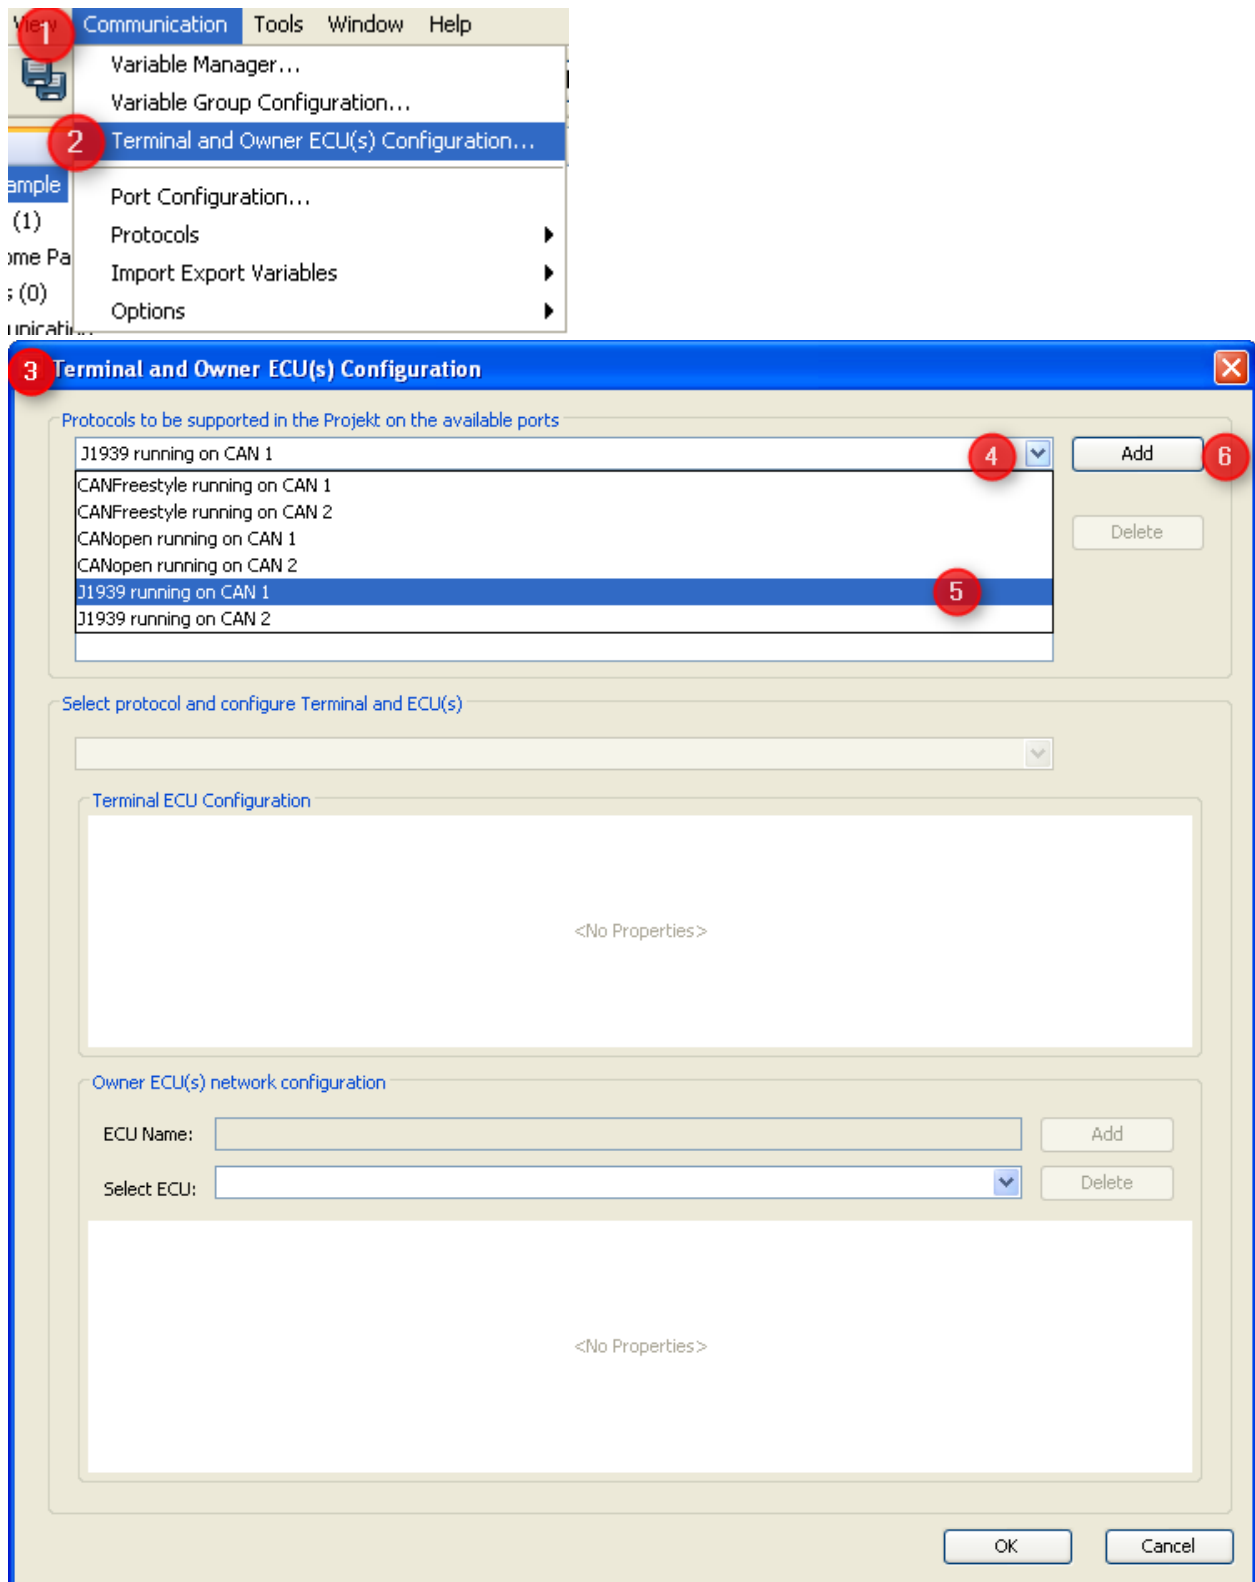

1. Open "Communication" menu
2. Choose "Terminal and Owner ECU(s) Configuration ..."
3. The "Terminal and Owner ECU(s) Configuration" dialog will appear
4. Press on the arrow to see the protocols available
5. Select J1939 protocol for the CAN port you want it to run on
6. Press "Add" to use this protocol with your GUI on the display

Defining Display's J1939 Address

Knowing that every ECU on the bus has to claim an address we now have to configure the display's own address in the same dialog:

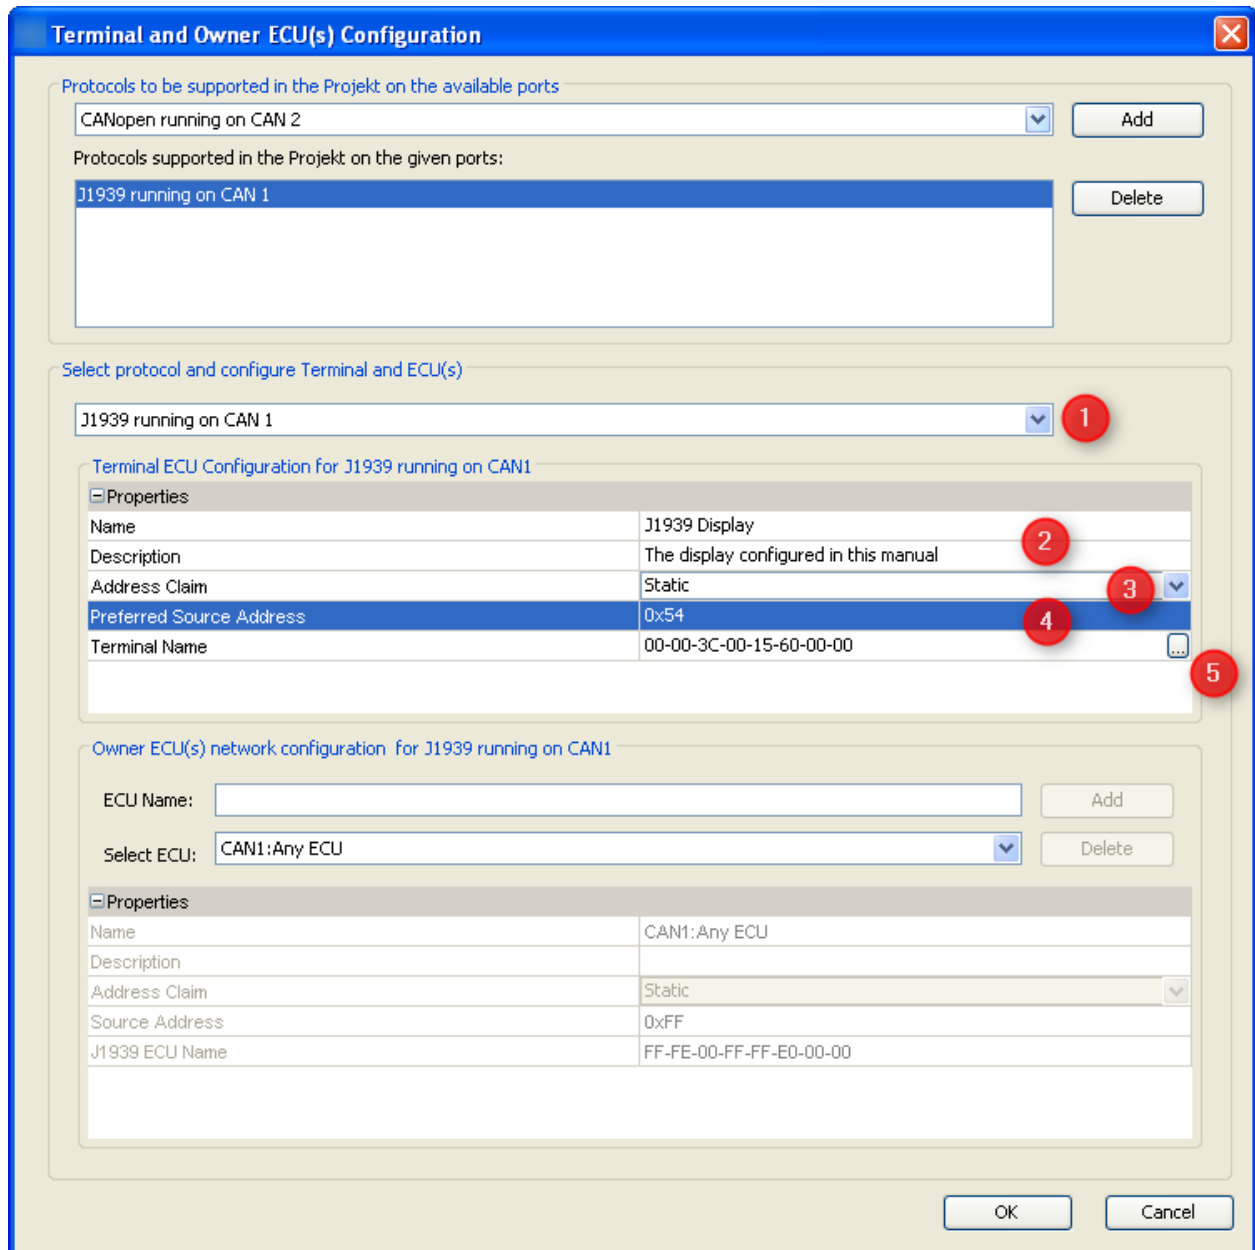

1. Select J1939 on the CAN port configured before - in our example we configured it for CAN 1.
2. Type a valid name and description - these are mainly for your convenience and may help others to understand the GUI configuration in future.
3. Choose "**static**" if you know all ECUs on your network in advance and want the display to always claim the preferred address (or none if another ECU with a higher priority claims the same address). Choose "**dynamic**" if the display should only start with the preferred address but is allowed to use another address.
4. Select a "**preferred source address**". For static address claiming this will be the display's address. For dynamic address claim the display will try to claim this

- address but use another one if forced to do so by an ECU with higher priority. The default 0x54 == 84 is reserved for "Cab Display #2" in the main J1939 document.
5. Configure the display's J1939 name after pressing the button with the three dots.

Configure Display's J1939 name

The display claims a J1939 name at startup and whenever asked for it. To do so it needs a J1939 name independent of whether address claim is configured as "static" or "dynamic". Pressing the button with the three dots in the above dialog opens the following dialog where the name can be configured:

Configure ECU Name

Parameter	Length	Value (Hex)	Mask (Hex)
Identity Number	21	0x00	0x1FFFFFF
Manufacturer Code	11	0xAB	0x7FF
ECU Instance	3	0x00	0x07
Function Instance	5	0x00	0x1F
Function	8	0x3C	0x01
Reserved	1	0x00	0x01
Vehicle System	7	0x00	0x7F
Vehicle System Instance	4	0x00	0x0F
Industry Group	3	0x00	0x07
Arbitrary Address Capable	1	0x00	0x01

J1939 name by components

J1939 name as in address claim PGN

Address Claim message on CAN bus

Message: CAN ID 00 00 60 15 00 3C 00 00

Mask: FF FF FF FF FF 01 FF FF

ECU Name Details

J1939 name as 64 bit number

Name: 00 00 3C 00 15 60 00 00

Mask: FF FF 01 FF FF FF FF FF

OK Cancel

This dialog is divided into three sections all showing the same J1939 in different formats:

- On top one can edit the sections of the name as defined in J1939-81. This sections allows entering values in decimal (displayed in tooltip) and hexadecimal format (displayed).

- The second section shows the bytes as they will appear in the display's address claim message on CAN bus. This section can only be edited in hexadecimal format.
- The lower section shows the resulting J1939 as 64 bit number. Like the section above this one can only be edited in hexadecimal format.

In the following we describe the J1939 name configuration based on the fields as shown in the upper section. If desired it could also be done in the other sections and all three will always be synchronized.

1. The "Arbitrary Address Capable" bit is automatically set according to your selection of "static" or "dynamic" address claim in the dialog before.
2. "Industry Group" 0 is applicable to all industries. More specific groups can be found in table B1 of the main J1939 document.
3. "Vehicle System Instance" is defined in J1939-81 as "Vehicle System Instance is a 4-bit field that is used to identify a particular occurrence of a particular Vehicle System within a connected network." and 0 refers to the first instance.
4. "Vehicle System" could e.g. identify "tractor" or "trailer"; 0 refers to "Non-specific System" according to main J1939 document.
5. "Function" 0x3c == 60 refers to "Cab Display". Other options can be found in table B11 and B12 of the main J1939 document.
6. "Function Instance" differentiates ECUs implementing the same function. 0 refers to the first instance.
7. "ECU Instance" allows separating different ECUs belonging to the same function and function instance. 0 refers to the first ECU instance.
8. "Manufacturer Code" has a default value. Other codes can be found in table B10 of the main J1939 document.
9. "Identity Number" should allow differentiating two similar devices connected to the same network. One can keep this as "0x00" since the display will automatically fill it with a 21 bit number calculated from device part number and serial number.

Finally press "OK" to confirm the setting and close the dialog.

5.3.2 J1939 ECUs and Variables

This page is a follow-up of the general introduction into [J1939](#)³⁷⁴ and the [general setup required to use J1939](#)³⁷⁷.

Here we create J1939 ECUs and their variables.

There is one more page describing setup of [J1939 PGN mappings](#)³⁹².

Defining other ECUs on the J1939 Network

The display has to identify every ECU it should communicate with.

- In a static network the source address of each ECU is sufficient for this purpose.
- For networks using dynamic address claim each ECU has to be identified by its J1939 name.

The main purpose of the ECU configuration is to use these ECUs as variable owners.

Note: The display will request an address claim if it finds an unknown source address on the bus. If there should be an ECU that does not answer this request, it should be configured here even if it does not otherwise communicate with the display.

Creating an ECU with static Address

ECUs are configured in the same "Terminal and Owner ECU(s) Configuration" dialog that was used above to activate J1939 protocol and to configure the display's address.

ECUs are configured in the lower part of this dialog:

Terminal and Owner ECU(s) Configuration

Protocols to be supported in the Projekt on the available ports: CANopen running on CAN 2 [Add]

Protocols supported in the Projekt on the given ports: J1939 running on CAN 1 [Delete]

Select protocol and configure Terminal and ECU(s): J1939 running on CAN 1

Terminal ECU Configuration for J1939 running on CAN1

Name	J1939 Display
Description	The display configured in this manual
Address Claim	Static
Preferred Source Address	0x54
Terminal Name	00-00-3C-00-17-60-00-00

Owner ECU(s) network configuration for J1939 running on CAN1

ECU Name: my_first_self_configured_static_J1939_ECU [1] [Add] [2]

Select ECU: CAN1:Any ECU [Delete]


"Any ECU" is for "any source" in reception or broadcast in sending

Name	Any ECU
Description	Any ECU
Address Claim	Static
Source Address	0x1F
J1939 ECU Name	FF-FE-00-FF-FF-E0-00-00

[OK] [Cancel]

1. Type a name describing the ECU
2. Press "Add"


Then the new ECU will automatically be selected and one can modify the other parameters:

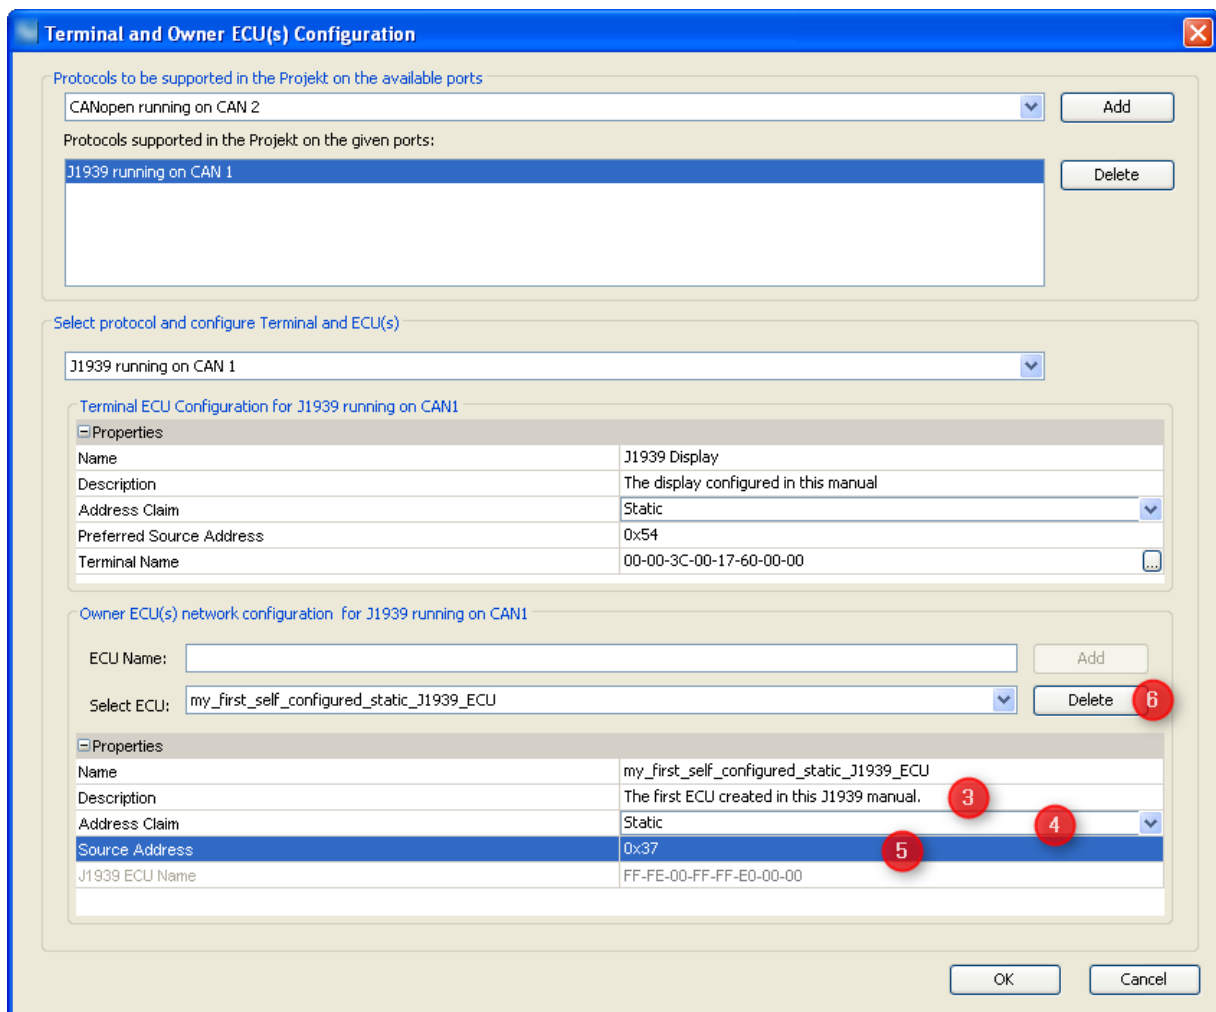

3. Provide a description that could help others to understand better which ECU is meant here.
4. Select "Static" since we want to configure an ECU with a static address here (ECUs with dynamic addresses are handled below).
5. Type the source address this ECU will use. This can be done in decimal or hexadecimal format. Anyways hexadecimal is shown.
6. In case the ECU is not needed anymore it can be deleted again. If it should already own any variable all these will be owned by the display afterwards.

Creating an ECU with dynamic Address

The first steps are the same as for the ECU with static address described above - with the exception of the "Address Claim" field which has to be set to "dynamic" and then the "J1939 ECU Name" field becomes unlocked:

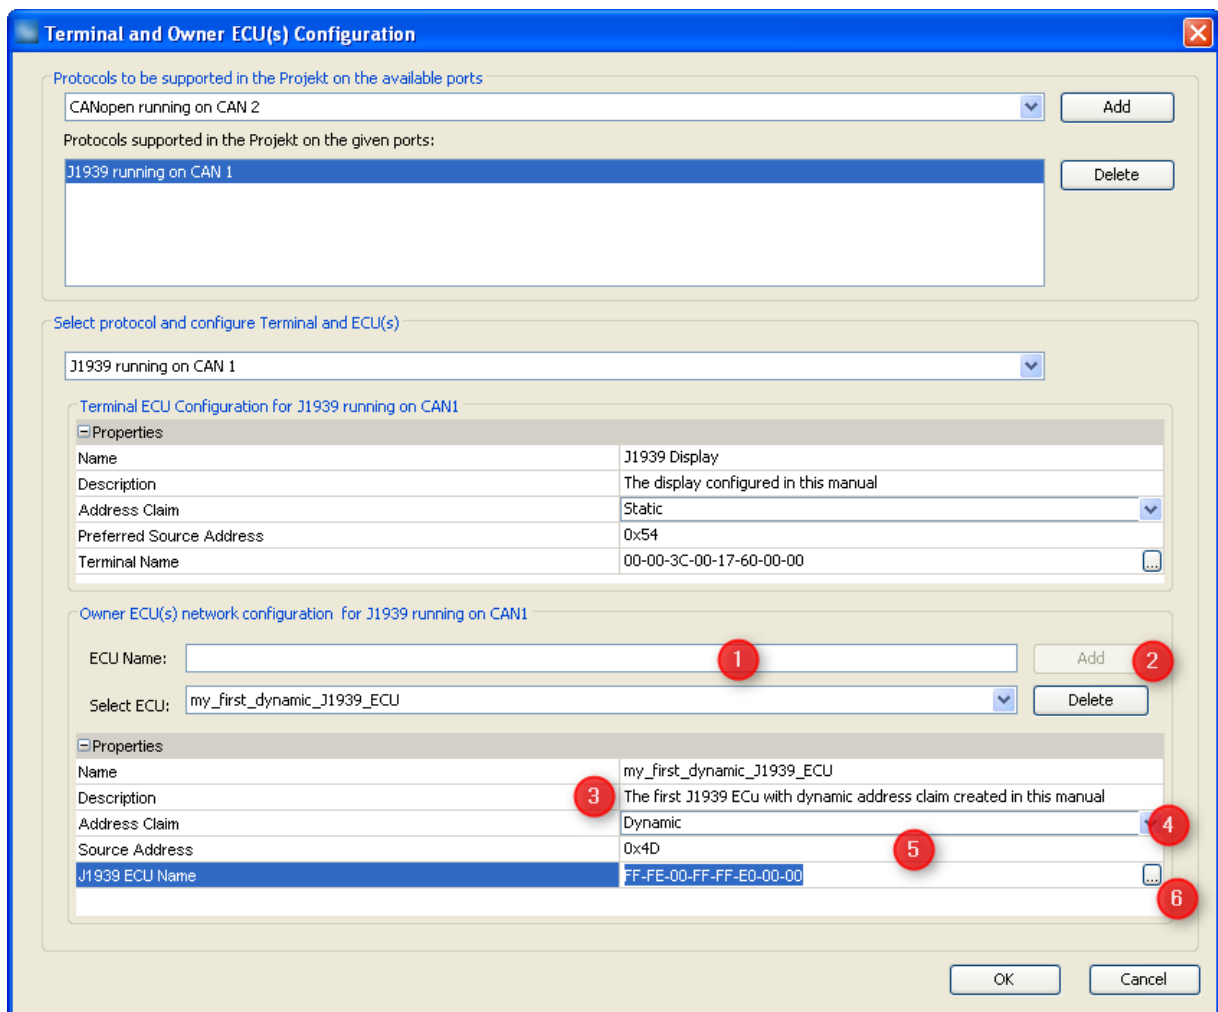

1. ... 3. Are the same steps as above.
2. Select "Dynamic" since we want to configure an ECU with dynamic address claim here
3. The "Source Address" chosen here is not really relevant - the display will identify the ECU by its J1939 name. Anyways it's a good idea to configure the preferred address of the ECU here.
4. Press the "... " button in the J1939 ECU Name field in order to configure the ECU's J1939 name. This will open a dialog similar to the one used to configure the display's name earlier:

Parameter	Length	Value (Hex)	Mask (Hex)
Identity Number	21	0x00	0x00
Manufacturer Code	11	0x7FF	0x7FF
ECU Instance	3	0x07	0x07
Function Instance	5	0x1F	0x1F
Function	8	0x00	0xFF
Reserved	1	0x00	0x01
Vehicle System	7	0x7F	0x7F
Vehicle System Instance	4	0x0F	0x0F
Industry Group	3	0x07	0x07
Arbitrary Address Capable	1	0x01	0x01

Address Claim message on CAN

Message: **CAN ID** 00 00 E0 FF FF 00 FE FF

Mask: 00 00 E0 FF FF FF FF FF

ECU Name Details

Name: FF FE 00 FF FF E0 00 00

Mask: FF FF FF FF FF E0 00 00

OK Cancel

The fields of the J1939 name are explained [here](#).

One could find out the name of an ECU with a CAN tool the name is the data part of the address claim message looking like this in a CAN tool:

18EAFFFE	3	00	EE	00					
18EEFF4D	8	23	47	E0	FF	FF	00	FE	FF

The first line shows a "request for address claimed" which you could send from your CAN tool to get the response in the second line.

This second PGN 0x00EE00 is the address claim coming from ECU with source address 0x4D and having the name we have as default in the dialog.

The most convenient way to enter this name obtained with a CAN tool is provided in the center of the dialog.

Note: In our CAN example the bytes belonging to the "Identity Number" field are "23 47" whereas the tool default is "00 00" because we expect them to be ignored anyways.

Setting Masks for the J1939 Name of an ECU

The message above shows the J1939 name of one specific ECU. The challenge now is to decide which parts of the name are relevant for the display to recognize this ECU on the bus.

Masks are used to ignore those parts of the J1939 name which change from ECU instance to ECU instance while evaluating the rest. Masks are applied via a bit-wise AND so that a bit set to 0 on the masks means to ignore the respective bit of the name.

ECU is recognized as the one configured in the dialog

```
if ( (ECU_name_on_CAN AND configured_mask) ==  
(configured_ECU_name AND configured_mask) )
```

By default every bit of the configured name is considered - with the exception of the "Identity Number" field which should be derived from the ECU's serial number.

Note: It seems the default mask for "Function" is 0x01 and not 0xFF as it should be.

Adding Variables to the J1939 ECUs


As mentioned above we mainly configured the J1939 ECUs because they own some variables whose values we want to show and/or modify on display.

Before we can use these variables we have to do two things:


1. Create the variables and use one of the J1939 ECUs as owner.
2. Define the PGNs we want to use to send and receive the variables.

Creating dedicated variable groups for variables owned by J1939 ECUs

Knowing that we could end up with a lot of variables per ECU it's a good idea to create one variable group per ECU. Of course you are free to organize variables in groups however you prefer.

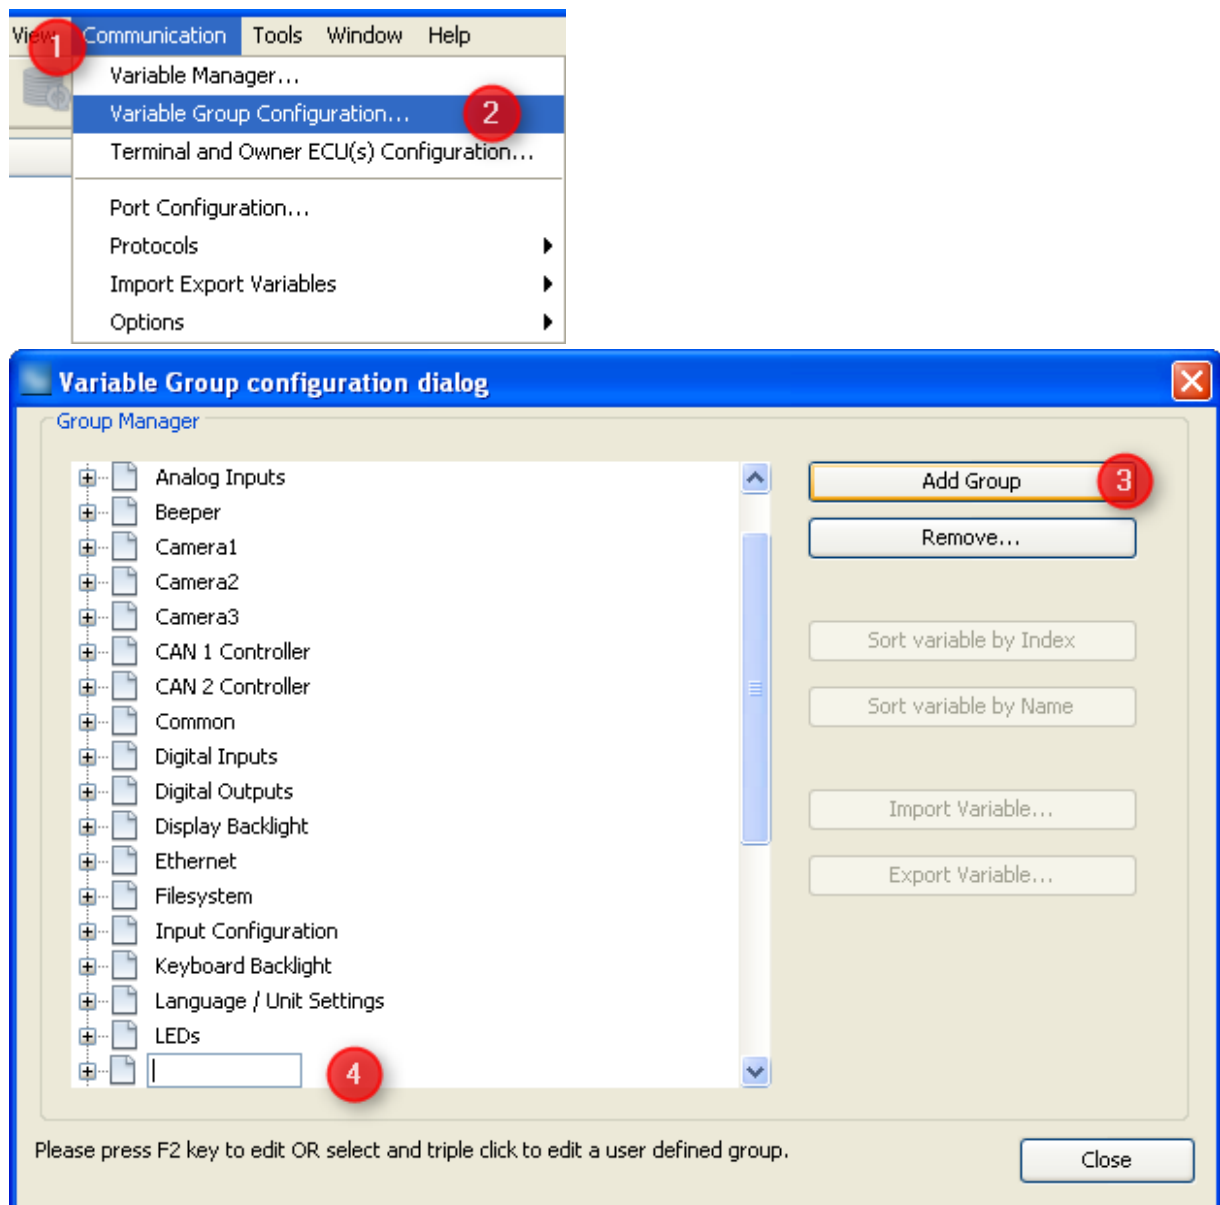

1. Open Menu "Communication"
2. Select "Variable Group Configuration ..."
3. In the dialog that opens press "Add Group" to create a new variable group
4. Type a sensible name for the new group

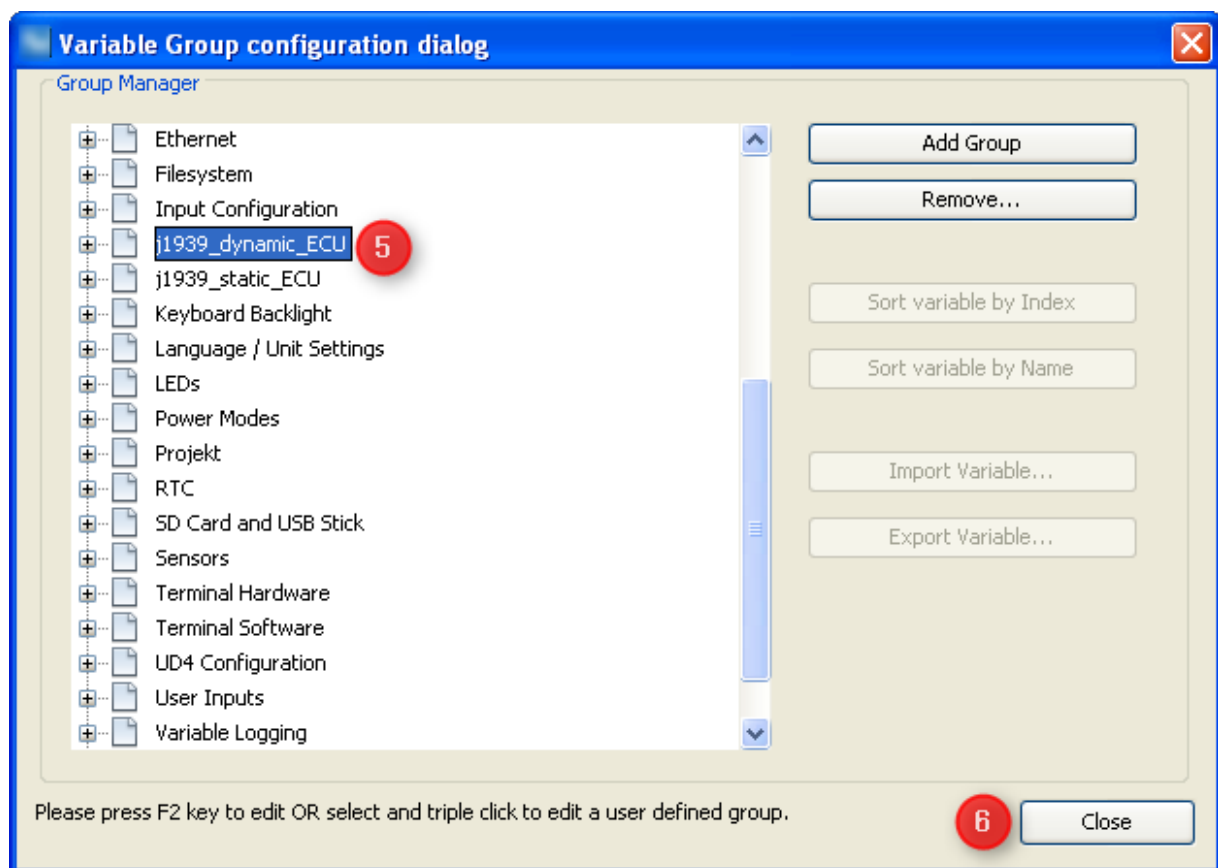


5. Once you pressed "Enter" to confirm the new group name it will move according to alphabetical order of all groups.

6. Press "close" once you're finished creating or deleting variable groups.

If you delete a variable group that is not empty, all the remaining variables of the deleted group will be moved to group "Common" which is the default for all user defined variables.

Creating J1939 variables


Creation of J1939 variables is similar to all other variables:

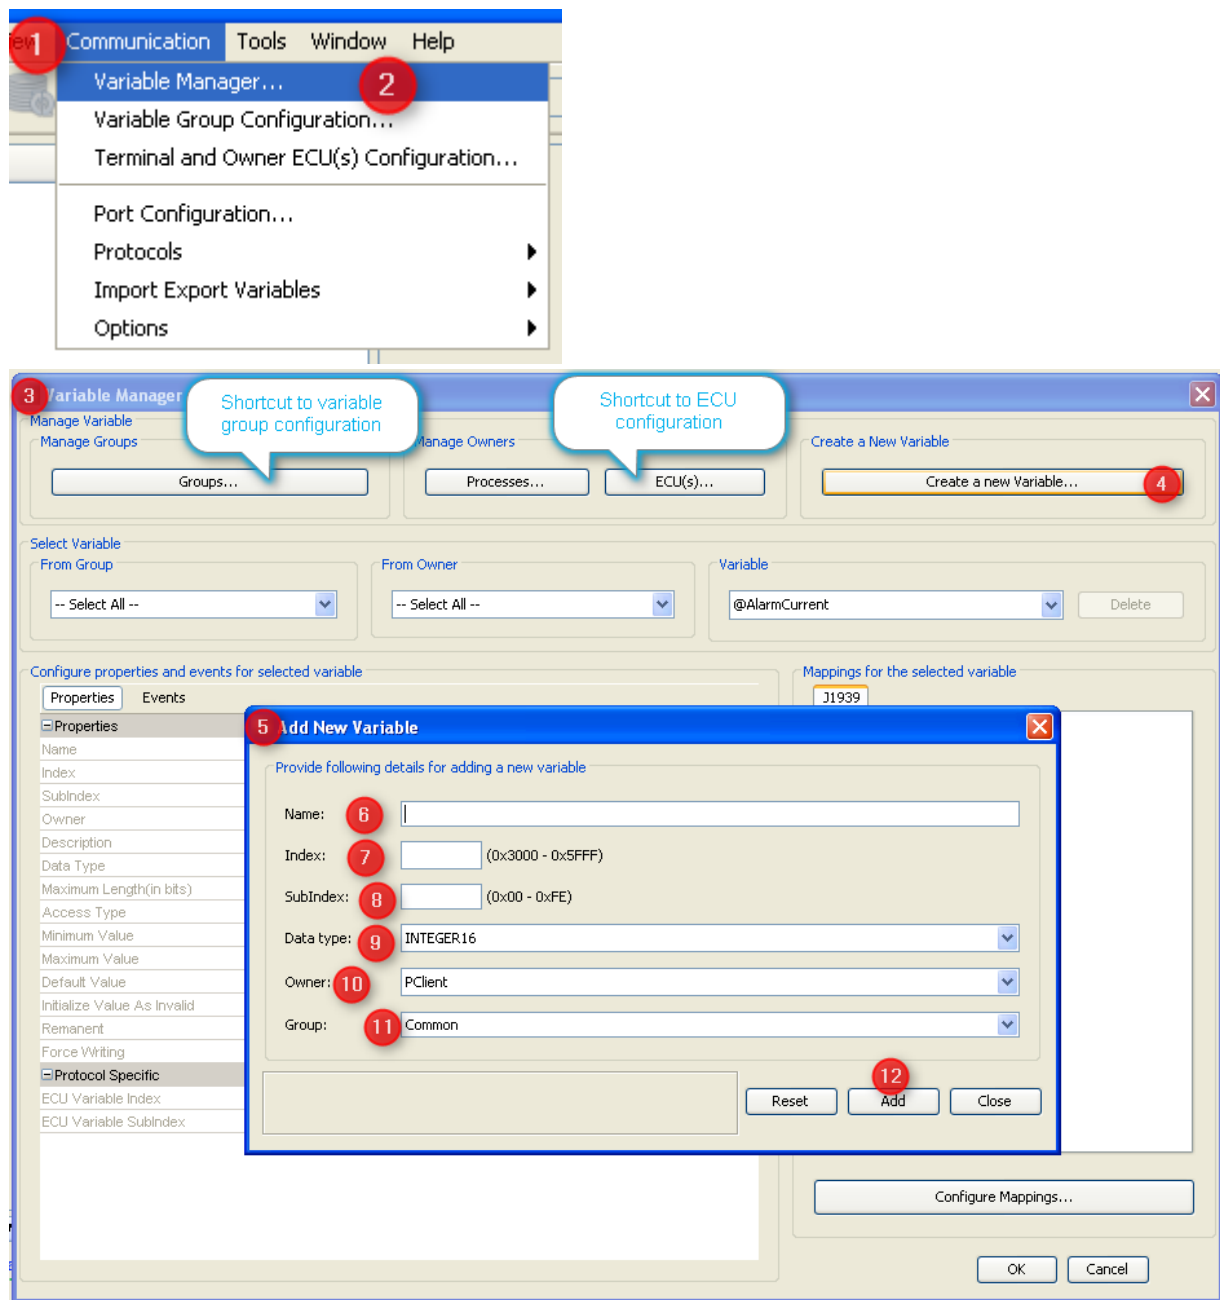

1. Open the "Communication" menu
2. Choose "Variable Manager ..." entry
3. Variable Manager dialog opens (which can be used as shortcut to all variable related tasks)
4. Press "Create a new Variable ..." button
5. "Add new variable" dialog opens
6. Fill in a name of the variable
7. Type an index for the variable. You are free to enter the value in decimal or hexadecimal, starting with "0x". Anyways hexadecimal will be displayed. (Although the concept comes from CANOpen you should use index and subindex as a means of ordering and grouping of variables)
8. Add a subindex for the new variable. Note: Combination of index and subindex has to be unique among all variables in the GUI definition.

9. Select signed or unsigned data type at least as wide as the variable will be in CAN message.
10. Change owner from default "PCClient" to the newly created J1939 ECU. Note: If you keep "PCClient" you could handle the variable also but would not notice if the ECU is not available anymore.
11. Select the newly created variable group for the variable.
12. Press "Add" to finally create the new variable with the settings made above.

Once you did all that the dialog could look like this:

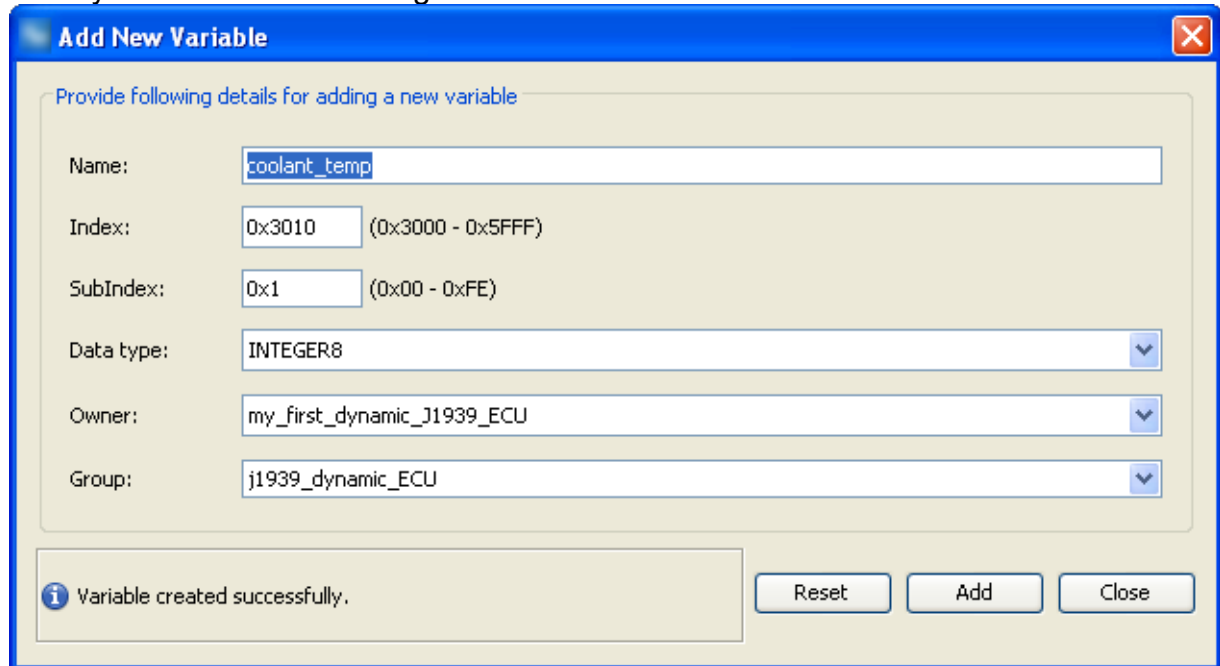

Add New Variable

Provide following details for adding a new variable

Name:

Index: (0x3000 - 0x5FFF)

SubIndex: (0x00 - 0xFE)

Data type:


Owner:

Group:

i Variable created successfully.

Now you can either create more variables by editing the settings with or without "Reset" or leave the dialog with "Close".


After closing the "Add New Variable" dialog you can modify all the properties of the variable(s) just created or already existing in "Variable Manager" dialog:

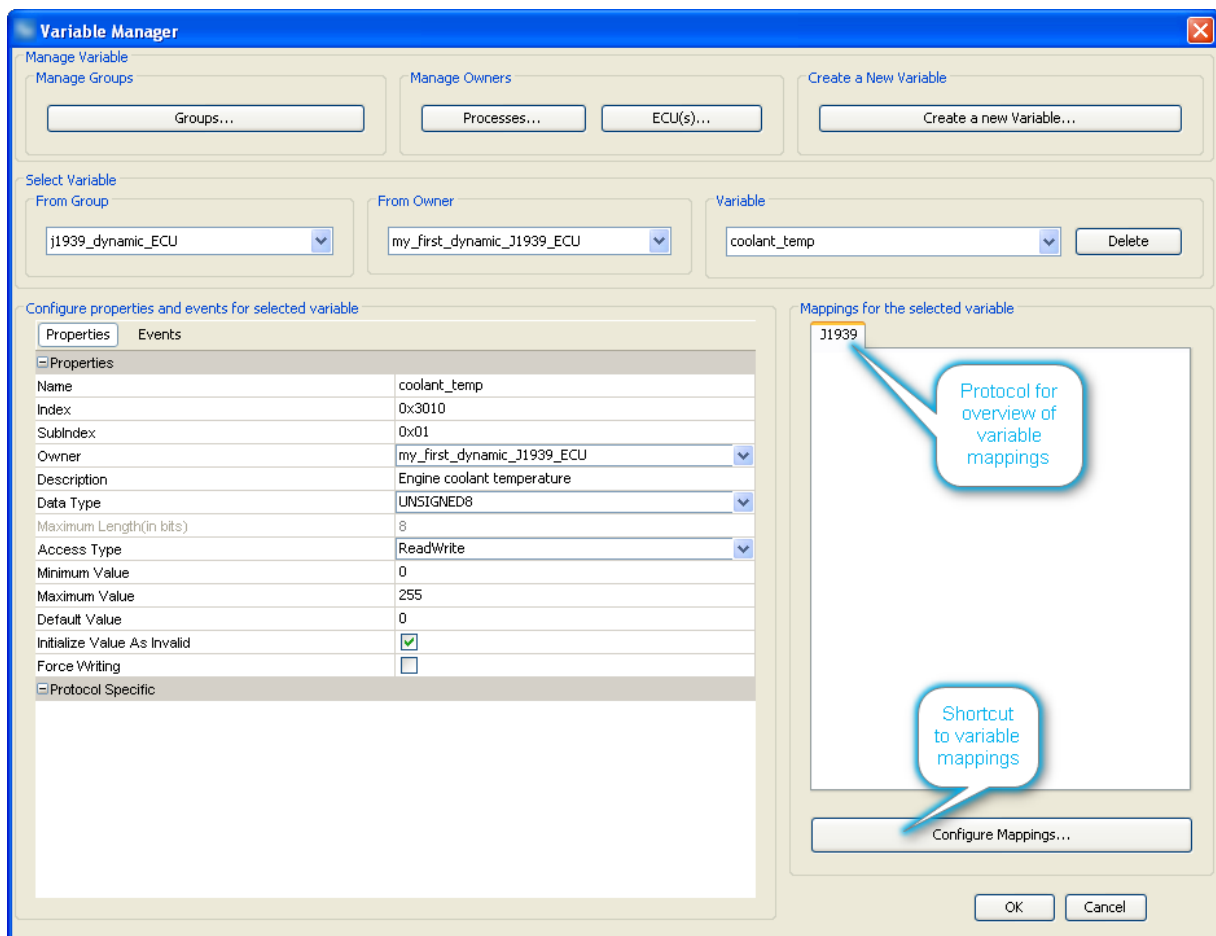

As you may have noticed the "Description" was added and the variable type was modified from "INTEGER8" to "UNSIGNED8".

For a detailed description of all the variable properties and events please refer to [variables menu description](#)¹⁸².

There is a second option to create variables:

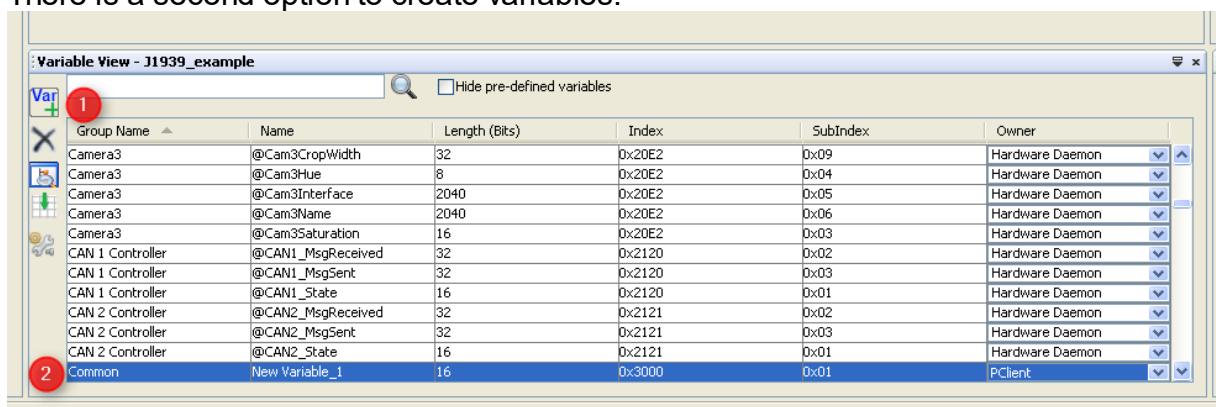

1. In variable view press the "Var +" button
2. A new variable with default settings appears
3. You can double click each property and edit it.

Warning: If you type a group name not defined yet, a new variable group will be created.

Warning: Depending on your sorting option the variable can "disappear" whenever a modification is confirmed.

More details on this option can be found in [variable view](#)¹⁶¹.

So the recommendation is to create variables following the first option and use the variable view to manage and modify existing variables.

5.3.3 J1939 PGN Mappings

This page is a follow-up of the general introduction into [J1939](#)³⁷⁴, the [general setup required to use J1939](#)³⁷⁷ and the [creation of J1939 ECUs and their variables](#)³⁸¹.

Here we create J1939 PGN mappings to communicate with ECUs over CAN bus.



Tutorial video about setting up J1939 transmit mappings

<https://www.youtube.com/watch?v=AzjhoZI9y8w>



Tutorial video about setting up J1939 receive mappings


<https://www.youtube.com/watch?v=GUtjp9NrCDQ>

Defining PGNs/Variable Mappings

After having defined an ECU as variable owner and the variable itself we finally have to define the connection between these two. In other words: We need a definition about how to exchange the variable's value with the ECU.

These definitions are called "variable mappings" within this tool and for J1939 protocol the variable mapping defines the PGN.

In order to define a PGN or J1939 variable mapping you can either use the shortcut button of the variable manager shown in the image above or open the respective dialog from the menu as follows or, alternatively, click the J1939 mapping shortcut in the toolbar:

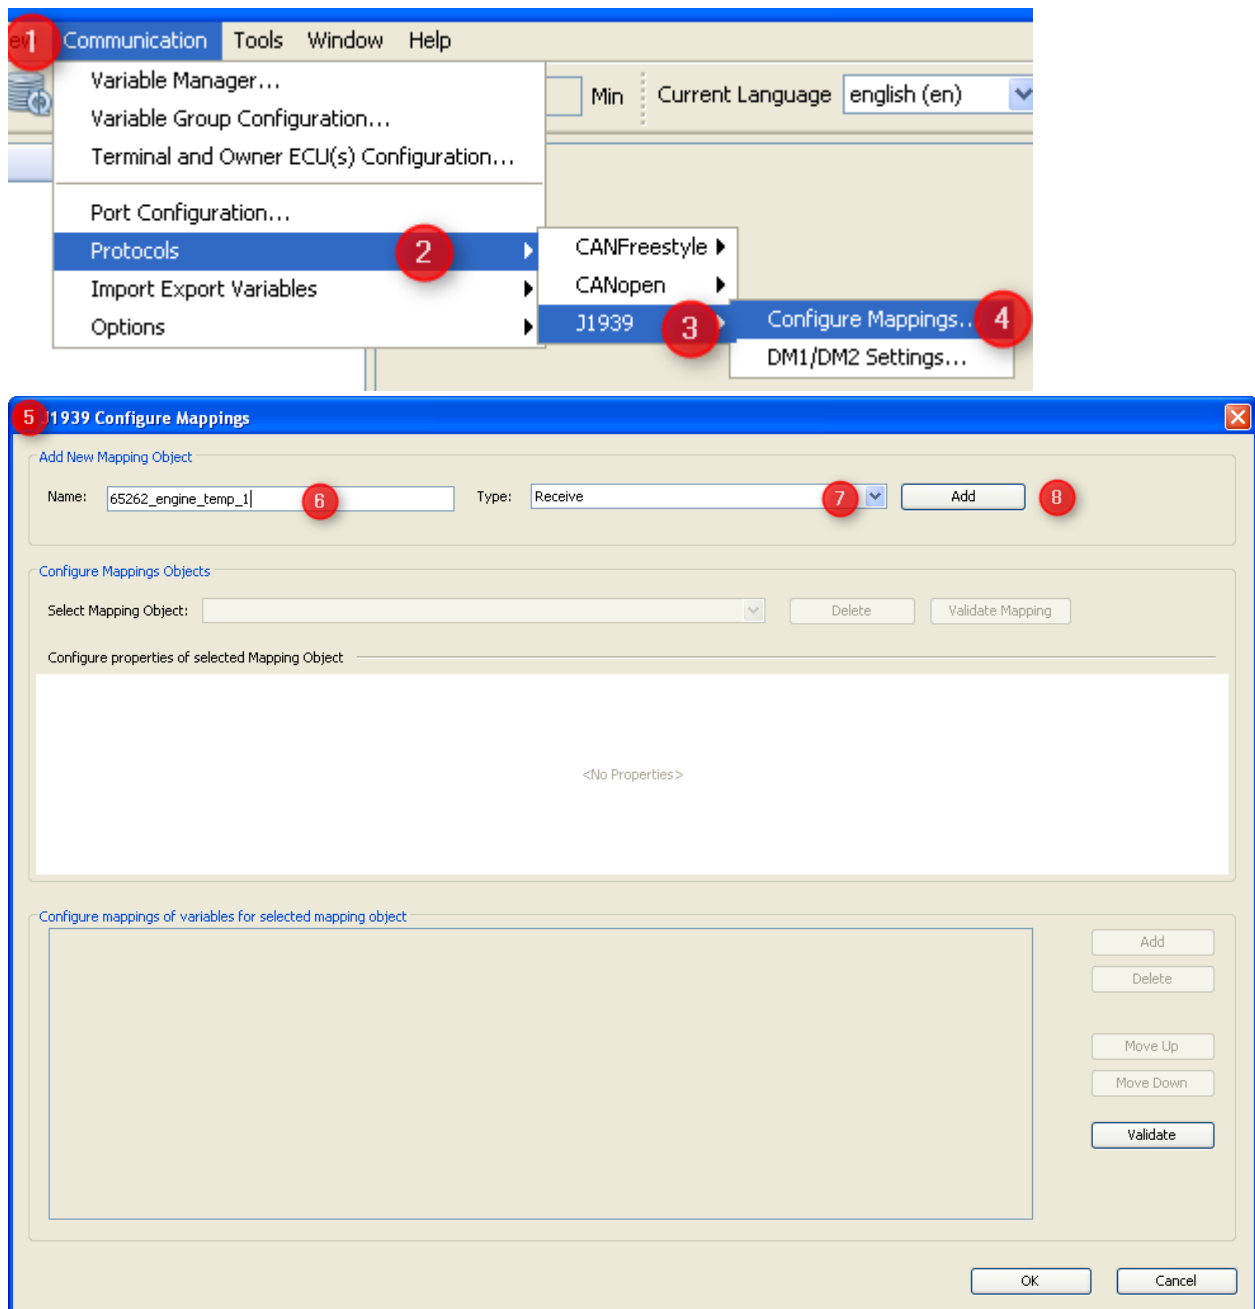

1. Open menu "communication".
2. Select "Protocols".
3. Choose "J1939".
4. Select "Configure Mappings ...".
5. The "J1939 Configure Mappings" dialog will pop up.
6. Type the name of your PGN mapping - in the example we want to define PGN 65262 "Engine Temperature 1" defined in J1939-71
7. Select type "Receive" if the display should fetch values from CAN bus and "Transmit" if the display should send out values.
8. Press "Add" to create the new mapping.

Setting Mapping Properties

The dialog will populate with the default setting for the new mapping object which have to be modified according to your intentions:

Add New Mapping Object

Name: Type: Undefined Add

Configure Mappings Objects

Select Mapping Object: 65262_engine_temp_1 Delete Validate Mapping

Properties Configure Mapping Visual CAN Mapping

Configure properties of selected Mapping Object

Properties Events

General	
ID	53
Name	65262_engine_temp_1
Type	Receive
Description	
Mapping Variable Type	Length
Delimiter	*
Receive From	CAN1: Any ECU
Little Endian	<input checked="" type="checkbox"/>
Mapping Length (in Byte)	8
Object Status	Active
PGN	0x0FEE
PGN Priority	6
Request Settings	
Enable Request	<input checked="" type="checkbox"/>
Use Standard Request	<input checked="" type="checkbox"/>
Request Message	0-0-0-0-0-0-0-0
Request Message Transmission Period	1000
Send Request On	None
Select Variable(Rx)	None
Receive Settings	
Receive Timeout	0
Transmit Settings	

Properties of this object.

For broadcast PGN enter for example: 0xFECA
For peer-to-peer PGN enter for example: 0xEA00 (always use 00 as Destination Address - it will be added automatically)

OK Cancel

General

ID

Is the object ID internally created which can not be modified.

Name

The name of the mapping as used during creation. This name can be edited here.

Type

"Receive" or "Transmit" - this property can not be modified. If this needs to be changed you have to delete and recreate the mapping.

Description

Should be a valid description of the mapping which helps understanding its purpose and context in future.

Mapping

Variable Type

There are two types of mappings in this context:

- **Length** based mappings find every variable (or constant) by position and length within the CAN message. If length based mappings are less than 8 bytes long their variables or constants can be placed at any position. If they should be longer the variables and constants have to be byte aligned.
- **Delimiter** based mappings look for a dedicated separator character placed between the variables and find the variable based on count of these delimiters. Delimiter based mappings are typically bigger than one CAN message and have to be byte aligned. If a string variable is mapped the value is fully written to the variable even if it should be longer than the length defined for the variable.

Delimiter

Only gets enabled if "Delimiter" is chosen in "Mapping Variable Type" above. Then you can set the separator char to be found in the message.

Receive from / Transmit to

For receive mappings/PGNs: Select the ECU who has to send the PGN where the variable should be extracted. "Any ECU" is a wildcard meaning "don't care for the source address and accept this PGN from anyone".

For transmit mappings this property describes the destination address to be used in the PGN. Please note that some PGNs are broadcasts by definition so that this property will be ignored for them. See also [message format](#)³⁷⁴.

Little Endian

J1939 values are transferred least significant byte first (little endian) by default. Since some manufacturers opt for big endian format in their proprietary J1939 messages you can configure this here for the whole mapping. If you should have a PGN which contains both types you have to create two separate mappings.

This setting only applies to numeric values. Strings are expected to be "big endian" i.e. the first byte of the word or sentence is the first one on the bus.

Mapping Length

Enter the data length of the message you want to configure. The length has to be between 0 and 1785 bytes. Between 0 and 8 bytes, the data length of the mapping and the incoming message are compared. Only if they match, the data will be put into the mapped variables.

Object Status

With Object Status Active the mapping is working, i.e. it is processing received messages or sending them. With Object Status Inactive the mapping is not working. This property can be switched at run time with the [setProperty](#)³⁸⁷ JavaScript function to enable / disable CAN mappings.

PGN

Enter the PGN number in decimal or hexadecimal format (starting with "0x"). The value will anyways be displayed in hexadecimal format. In our example PGN 65262 is displayed as 0xFEEE.

PGN Priority

For receive mappings this is ignored. For transmit mappings this priority is used when sending the message. Priority can be any value between 0 (highest) and 7 (lowest). See also [message format](#)³⁷⁴.

Request Settings

These settings define if and when the display sends a request (for receive mappings) or answers a request with a transmit mapping.

In any case the display answers the "request for PGN" if it has a transmit mapping configured for the requested PGN. The only pre-requisite is that the ECU sending the request is "known" i.e. it claimed an address before or is listed as owner ECU in the GUI definition.

Enable Request

For receive mappings this means that the display will send out a request to get the PGN based on the following settings.

For transmit mappings this means that the request defined in the following properties will be recognized and answered with the transmit mapping. Enabling this is only required if there is a request to be recognized that is NOT the PGN 0x00EA00 == 59904 == "request for PGN" as defined in J1939 standard.

Use standard request

Only appears for receive mappings. If enabled the display will send out a "request for PGN" based on the following triggers.

Request message

Is only enabled for receive mappings where "use standard request" is not set. This allows definition of a PGN with fixed data section which will be sent out in order to get the receive mapping based on the triggers below. Depending on the "Receive from" setting this PGN will be sent to the ECU who should provide the mapping or as a broadcast. One can select all three proprietary types of PGNs for this request.

Note: PGNs 0xff00 ... 0xffff are broadcast by definition. See also [message format](#)³⁷⁴.

Request Message Transmission Period

Is only enabled for receive mappings. This defines the interval in milliseconds the display will send requests for the mapping. Set to 0 if no periodic request is required.

Send Request On

- "Specific Variable Change" allows triggering the request based on any variable in GUI definition.
- "None" means there is no trigger besides the time based one.

Select Variable (Rx)

Only enabled if this is a receive mapping, request is enabled and "Send Request On" is set to "Specific Variable Change". This allows setting the variable whose value change should trigger sending the request.

Receive Settings

Receive Timeout

This is intended for receive mappings which are expected to arrive periodically - either by default or by periodic request. If the mapping is not received in as many milliseconds as defined here all variable values of the mapping are considered invalid and hence all DDOs showing them will also be disabled.

Transmit Settings

Use as Write Request

If checked this means that the transmit mapping will be sent out once if there is a write request to one of the variables contained in the mapping. Usually the display only sends values provided by the owners of the respective variables in transmit mappings.

This means that e.g. engine speed will only be sent out as provided by engine ECU. If in your system modifying the measured engine speed value is used to set a new desired engine speed then you can check this property and writing on the engine speed variable will send out the transmit mapping containing the new setpoint of the engine speed value. Please note that all other values in the mapping will be the ones provided by their respective owners and even the new setpoint will in the next message be replaced by the last measured value provided by the owner.

If you should want to write to the same variable from many sites you should consider "PCClient" as the variable owner which will accept all write requests but whose variables will never become invalid again once they have a value.

Send Value On

- **None:** Mapping is only sent time based (if configured) and on request.
- **Any Variable Change:** Whenever one of the mapped variables changes its value the mapping is sent out.
- **Specific Variable Change:** The mapping is sent out if the variable specified in the following property changes its value.

Select Variable (Tx)

Choose the variable whose value change should trigger sending out the mapping. This variable can be part of the mapping but doesn't have to be.

Transmission Period (in ms)

Defines the interval between messages for this transmit mapping. Set to 0 if time based sending is not desired.

Events

This tab allows adding actions to mapping related events. It only appears for receive mappings.

The configured actions for the events are executed directly in the CAN thread when the event happens.

The CAN stacks will wait until the actions are executed.

OnReceiveTimeoutAction

This event is triggered if a receive mapping is not received within the period defined as "Transmission Period". If this happens all the variables mapped to the PGN are automatically considered invalid and additionally the action is executed.

If you should see any "Event Options" for this event - ignore them like the PCClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.

- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

OnReceiveTimeoutResolvedAction

This event is triggered if a receive mapping which time out before is received again. If this happens all the variables mapped to the PGN are automatically considered valid again (assuming the PGN received really contained a value for them) and additionally the action is executed.

If you should see any "Event Options" for this event - ignore them like the PCClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

OnMappingReceived

The action for this event is executed EVERY TIME the mapping is received (regardles of value changes).

When a script action is executed, the variables used in the mapping will already have been updated with the values from the CAN message.

Do NOT execute complex scripts at this event if the mapping is received very often!

Monitor the performance on the device with a realistic cycle time of all CAN messages.

Monitor the cycle time of transmit messages (the CAN stack has to wait until the received action is over before taking care of other tasks like sending out transmit mappings).

If you should see any "Event Options" for this event - ignore them like the PCClient does.

Possible actions that can be assigned are

- "No Action" which is the default
- "Set Value" to assign a constant value to a variable, e.g. to reset a counter, raise an alarm or trigger something attached to a variable where "Force Writing" is true.
- "Execute Script" allows to execute a script and provides additional parameter "Execute on every Xth Event" so that it is possible to execute the script only for e.g. every third timeout.

Defining Data Section of Mapping PGN

After setting all the general properties of the mapping now the data part has to be defined. Some general rules apply:

- All variable and constant positions define the position of the least significant bit (for little and big endian)
- Receive mappings can have gaps - as long as the length can be determined.
- Receive mappings are recognized if all the following conditions are true:

```
if ( ( (PGN received) == (PGN configured) )
    && ( (ECU source address) == (ECU configured) )
    && ( (message length) == (message length configured) )
    && ( ((constants received >> shift) AND configured mask)
        == ((constants configured >> shift) AND configured mask) ) )
```


Note: It is allowed to leave gaps in the data section of receive mappings.

Note: The last condition allows covering multiplexed PGNs by defining a separate mapping for each value of the multiplexer

Note: Message length is only compared if less than 8 bytes are defined. For messages with flexible size or other reason to ignore length, make sure configure the length of the message to a value >8.

Assume we want to complete the definition of our "Engine Temperatures 1" PGN so that we can get the coolant temperature from it.

We only have to add the definition of the "engine coolant temperature" value. The length of the message is defined in the message length property.

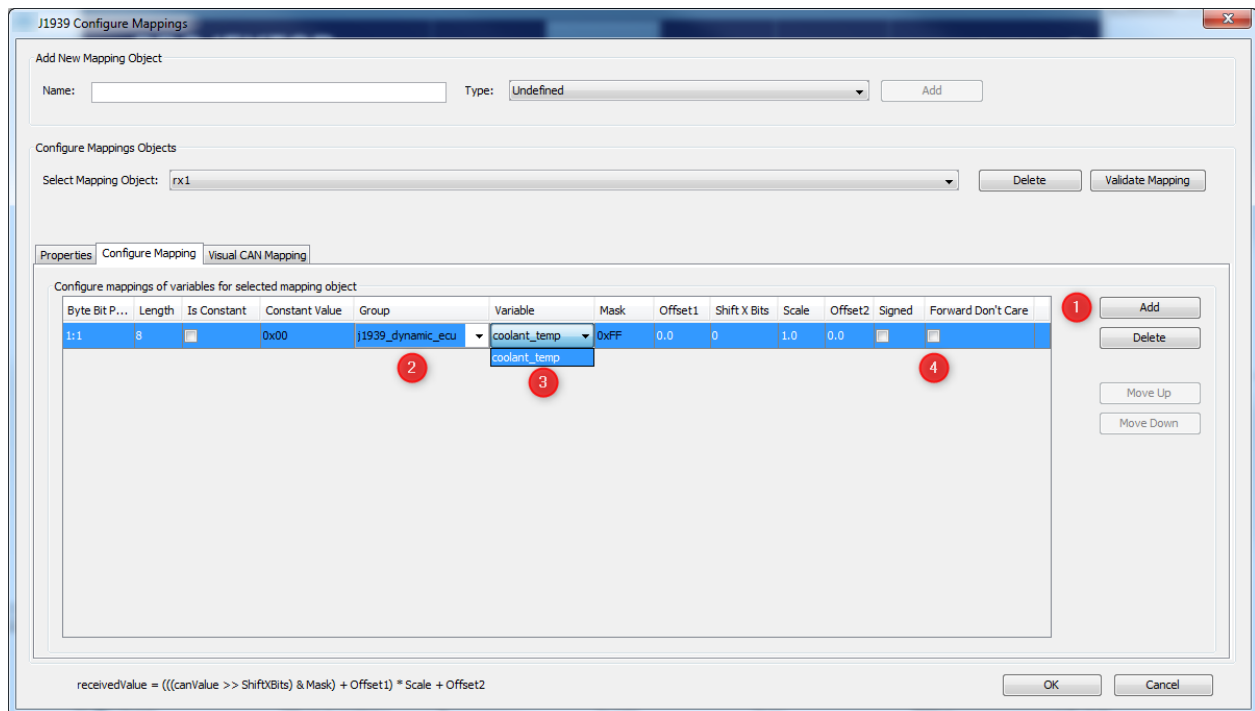

1. Press "Add" button to add a line to the mapping.
2. Select the group of the variable to map.
3. Select the variable itself.

After doing this the properties in the line adjust to the variable definitions made earlier e.g. the length is set to 8 bits and the mask is set to 0xff meaning all the bits will be taken.

The variable mapping can also be done in the [Visual CAN Mapping](#)⁴²⁹.

Please note, for J1939, if in a variable all bits are set to 1, this is defined as "don't care" in most cases. Therefore, if a received messages contains all 1s for a variable, this variable will not be written with that value. If the variable should still be set with that value of all 1s, activate the option "Forward Don't Care" (4).

J1939 PGN mapping variable properties

The following settings can be made for each variable added to the mapping:

Byte Bit Position

Position is shown as byte#:bit# where byte 1 is the byte closest to the CAN identifier and bit 1 is the least significant bit of a byte. I.e. full CAN message starts with byte 1 directly

behind the CAN ID and ends with byte 8. In a byte with value 1 bit 1 is set, in a byte with value 128 bit 8 is set.

These enumeration scheme matches the one used in J1939 standard documents so that you can directly copy the position. Engine coolant temperature is defined as the first byte - so set start position to 1:1.

Alternatively one can type the bit position directly: 1 refers to the bit closest to the CAN identifier and 64 is the bit at the end of the CAN message.

Warning: This input does not always behave as expected when typing position by hand. Finally the displayed "byte:bit" value is relevant.

The mapping is filled correctly if there are no gaps i.e. the whole message gets filled with values.

Please refer to the following image for byte and bit enumeration within a CAN message. This enumeration is valid for little and big endian variables since it only refers to the CAN message itself.

byte	CAN ID	1	2	3	4	5	6	7	8
bit of byte		8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1
bit of CAN message		1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16	17 18 19 20 21 22 23 24	25 26 27 28 29 30 31 32	33 34 35 36 37 38 39 40	41 42 43 44 45 46 47 48	49 50 51 52 53 54 55 56	57 58 59 60 61 62 63 64

Length

Defines the size of the mapped numeric variable or constant in bits. If a string is mapped this defines the length of the string in bytes.

Mapped length can be shorter than the length defined for the variable but not longer. By default the variable length is used.

Is Constant

Enable this checkbox to define a constant. Depending on the mask constants can be used to fill gaps or recognize multiplexers in receive mappings. In transmit mappings constants are required for every part of the message not filled with a variable.

Uncheck this property to map a variable.

Constant Value

Although appearance does not change this property is only valid and editable for constants i.e. lines where "Is Constant" property is set.

If valid this defines the numeric value of the constant. Please note that constants are always expected to be numeric - there is no option to define string constants.

Group

Variable group containing the variable to be mapped. Does not apply to constants.

Variable

The variable to be mapped.

Mask

Variable or constant are bitwise ANDed with mask before they are applied.

See [receive condition](#)^{D 392} on how this can be used to receive multiplexed PGNs.

See section [mapping calculations](#)^{D 401} for details about how this property applies to receive and transmit mappings.

Offset1

Offset 1 is a decimal value applied to the received value after mask and shift factor but before scale and offset 2.

See section [mapping calculations](#)^{D 401} for details about how this property applies to receive and transmit mappings.

Values can be entered in decimal form or in scientific notation / floating-point representation.

Shift X Bits

Shift received value to the right by as many bits as defined here. Negative values shift to the left.

This value is applied after the mask but before offset and scale.

See section [mapping calculations](#)^{D401} for details about how this property applies to receive and transmit mappings.

Scale

Decimal value to scale the received value before applying it to the mapped variable. Is applied after mask, shift and offset 1 but before offset 2.

Values can be entered in decimal form or in scientific notation / floating-point representation.

Offset2

Decimal value applied after all the other calculations are done.

See section [mapping calculations](#)^{D401} for details about how this property applies to receive and transmit mappings.

Values can be entered in decimal form or in scientific notation / floating-point representation.

Mapping calculations

The calculations applied to a mapping are defined mainly for receive mappings - in case of J1939 they can be directly derived from the resolution and offset defined in the standard. For transmit mappings all calculations are inverted so that the same values can be applied to receive and transmit mappings.

The formula converting a mapped area of a CAN message into the variable value is as follows:

$$\text{variable_value} = (((\text{CAN_value} \gg \text{shift}) \& \text{mask}) + \text{offset1}) * \text{scale} + \text{offset2}$$

Consequently the calculation applied to transmit mappings inverts the above:

$$\text{CAN_value} = (((\text{variable_value} - \text{offset2}) / \text{scale}) - \text{offset1}) \& \text{mask} \ll \text{shift}$$

Note: For constants only "*shift*" and "*mask*" are applied.

Note: Currently signed/unsigned calculation is performed based on variable definition. If variable is signed this means the CAN_value is considered negative if the most significant bit of the mapped area is set. This leads into some issues with J1939 values which are transmitted unsigned but should be displayed in signed format (as described in example below).

Example

Coming back to the example of "Engine Temperatures 1" PGN we would set the following values:

Configure mappings of variables for selected mapping object

Byte Bit P...	Length	Is Constant	Constant ...	Group	Variable	Mask	Offset1	Shift X Bits	Scale	Offset2
1:1	8	<input type="checkbox"/>	0x00	j1939_...	coolant...	0xFF	-40.0	0	1.0	0.0
8:1	8	<input checked="" type="checkbox"/>	0x00			0x00	0.0	0	1.0	0.0

This will correctly provide temperatures from 0 ... 210 °C since we defined the variable as "unsigned". CAN values 0 ... 39 will be converted into high unsigned values by Offset1. Alternatively we could have defined the variable as "signed" so that temperatures of -40 ... 87 °C would be displayed correctly. Then higher values would be interpreted as negative and the offset of -40 would make them even more negative.

It is planned to solve this by defining the CAN format independent of the variable format. Until this works one could either live with the limitations described above or as a workaround use the signed variable type and map one more bit than transmitted and then reduce it with the mask to the correct size. This would require one unused bit next to the variable though.

5.3.4 J1939 DM1 and DM2



Tutorial video about setting up J1939 DM1 / DM2

https://www.youtube.com/watch?v=loaWtchS_sY

For receiving and displaying the contents of DM1 and DM2 messages various settings can be made.

Please note that only conversion method 4 is used for the processing of DM1 messages. To cite the standard:

"Effective 1996, Version 4 shall be used for all future OBD applications"

We will focus on products newer than 1996, which is why only version 4 is supported.

To open the settings dialog use the main menu tab **Communication | Protocols | J1939 | DM1 / DM2 Settings**.

J1939 DM1 / DM2 Settings

Select CAN Port: 1

Select Translation File: test.txt [Browse] [Delete] [Open...] [Validate]

DM1 Settings DM2 Settings

☒ Enable DM1 Support

☒ Log DM1 Messages To File

File Name: dm1_logfile.txt

☐ Open Alarm On Change Alarm Number: Please select an Alarm...

☐ Update Table with extracted DM 1 Data

Enter ID of the Table Object: Please select a Table Object...

☐ Extract ECU Name ☐ Extract SPN ☐ Extract OC ☐ Extract FMI

Configure ECUs to track:

ECU Address	Settings

[Add ECU] [Remove Selected ECU]

☒ Track All ECUs

[OK] [Cancel]

A description of all available settings follows here:

Common Settings for DM1 and DM2

Select CAN Port

Select the CAN port for which you want to configure the DM settings. Only CAN ports that have a J1939 protocol attached are available. When changing the CAN port you can choose to apply the settings you have made for the current CAN port.

Select Translation File

Using a translation file can make the viewing of the trouble codes easier. In the translation file the following translations can be made:

- ECU Address to ECU Name
- SPN to SPN Description
- FMI to FMI Description (general or SPN specific)

Example content of a translation file (for one language):

```
#ECU address to ECU Name translation
# syntax: ECU;ECUAddress;Translation
ECU;0x00;EMS
ECU;0x03;TECU
ECU;0x0b;EBS
ECU;0x33;TPMS
```

```

#SPN translation
# syntax: SPN;Number;Translation
SPN;110;Coolant Temp.
SPN;1119;Exh. Oxygen
SPN;161;Shaft Speed
SPN;177;Oil Temp.
SPN;521;Pedal Pos.
SPN;1091;Pressure
SPN;258856;Tire F_L
SPN;258857;Tire F_R
SPN;258866;Tire R_F_L
SPN;258876;Tire R_R_L
SPN;258867;Tire R_F_R
SPN;258877;Tire R_R_R

#General FMI codes. Used if no SPN specific FMI was declared
#Syntax: FMI;Number;Translation
FMI;0;Above Normal
FMI;1;Below Normal
FMI;2;Data Erratic
FMI;3;Voltage Above Normal
FMI;4;Voltage Below Normal
FMI;5;Current Above Normal
FMI;6;Current Below Normal
FMI;7;Mech. Sys. Not Responding
FMI;8;Abnormal Frequency
FMI;9;Abnormal Update Rate
FMI;10;Abnormal Rate of Change
FMI;11;Root Cause Unknown
FMI;12;Bad Device
FMI;13;Calibration
FMI;14;Special Instructions
FMI;15;Above Normal (Least)
FMI;16;Above Normal (Moderate)
FMI;17;Below Normal (Least)
FMI;18;Below Normal (Moderate)
FMI;19;Recv. Network Data in Error
FMI;20;Data Drifted High
FMI;21;Data Drifted Low
FMI;31;Condition Exists

#SPN specific FMI codes.
#Syntax: SPNFMI;ECUAddress;SPN;FMI;FMITranslation
SPNFMI;0x0b;521;0;Pedal position too high

```

The Translation File is valid for both DM1 and DM2 messages.

If the project is a multi-language project, other language translations have to be added. Here are some examples for two languages:

```

#SPN translation

```

```
# syntax: SPN;Number;TranslationLanguage0;TranslationLanguage1
SPN;110;Coolant Temp.;Kuehltemperatur
SPN;177;Oil Temp.;Oel Temperatur
SPN;1091;Pressure;Druck

#General FMI codes. Used if no SPN specific FMI was declared
#Syntax: FMI;Number; TranslationLanguage0;TranslationLanguage1
FMI;0;Above Normal;Ueber Normal
FMI;1;Below Normal;Unter Normal

#SPN specific FMI codes.
#Syntax:
SPNFMI;ECUAddress;SPN;FMI;FMITranslationLang0;FMITranslationLang1
SPNFMI;0x0b;521;0;Pedal position too high; Pedal Position zu hoch
```

Please note that the sequence of the languages corresponds to the configured language indices (see Project Properties => [Languages](#)¹⁰³)

Please also note that there is a maximum line length the translation file can have. This limit is 32767 characters. If one or more lines exceed this limit, the translation file may not be parsed correctly.

You can use a text file encoded in UTF-8 format to include special characters, chinese, kyrillic characters and so on.

Validation

Upon loading the translation file, or by pressing the Validate button, the translation file will be validated. The result and possible errors will be written to the [output window](#)⁴².

Note that you need a translation text for every language you have in your project.

DM1 Settings

Enable DM1 Support

With this checkbox the DM1 support can be enabled or completely disabled.

Log DM1 Messages To File

It is possible to log all DM1 DTCs to a file. Just enable the checkbox and enter a log file name. If you choose .csv as suffix, it is easy to open that log file in Excel or in another spreadsheet application.

Every DTC will be logged in a separate line. A date- and timestamp will be placed before each DTC. If you have selected a translation file, the DTC components will be translated. Which DTC components will be logged, you can decide with the "ExtractXXX" settings (see below)

The log file will be stored on the device in the directory /opt/logfiles/. The variables @CurrentDirectory, @CurrentFile, @DestinationDirectory and @CopyFileOrFolder can be used to copy or move the log file to a USB stick.

Note: There is currently no restriction in the size of the log file. Please consider deleting or moving the log file to a USB stick at a regular basis (or if it becomes too big).

Open Alarm On Change

If the “Open Alarm On Change” checkbox is enabled, the Alarm Number of an existing Alarm can be entered in the text field.

Now whenever a new or changed DTC arrives in a DM message this Alarm will pop up and the currently active DTCs can be presented to the user.

Advise: place a table object inside the alarm to show all active DTCs (see below for table object settings).

Screenshot of an Alarm displaying DM1 Trouble codes in a table (with a valid translation file configured):

Active Trouble Codes:

ECU	Component	Description
EMS	Exh. Oxygen	Root Cause Unknown
EMS	Coolant Temp	Root Cause Unknown
TECU	Oil Temp.	Below Normal
EBS	Pressure	Below Normal
EBS	Pedal Pos.	Root Cause Unknown
TPMS	Tire R F R	Below Normal
TPMS	Tire R R L	Below Normal
TPMS	Tire R F L	Above Normal
TPMS	Tire F L	Above Normal
TPMS	Tire F R	Above Normal

Update Table with extracted DM1 Data

When the checkbox “Update Table with extracted DM 1 Data” is enabled, the ID of an existing Table Object can be entered in the field “Enter ID of the Table Object”.

The DTCs of a DM1 message will be extracted and passed as data to the Table Object. You can select which components of the DTC shall be passed to the Table Object by enabling or disabling the “Extract ECU Name”, “Extract SPN”, “Extract OC” and “Extract FMI” checkboxes.

If the Table Object shall only show ECU, SPN and FMI, select those three and deselect “Extract OC” (recommended for DM1 since OC is always 1 in DM1 messages). The Table Object should then be configured to have three columns.

Configure ECUs to track

In this section you can choose if you want to track the DM1 messages of all ECUs on the selected CAN port or if you want to only handle a selection of ECUs.

If you want to track all ECUs and do no filtering you can just select “Track All ECUs” in the bottom right.

If you want that not all ECU’s DM1 messages are handled, you have to disable “Track All ECUs”. After that you can click the “Add ECU” button to add a new ECU to the list of handled ECUs. Once the ECU was added, the address of the ECU can be changed by clicking in the cell in the table.

To remove an ECU from the white-list, you can just select one and hit “Remove selected ECU”.

Each ECU can then be configured if all SPNs shall be handled or only the configured ones. Furthermore it can be selected if the DM1 message of one ECU shall be passed to a specific table object. To do the settings for each ECU, click the “...” button in the “Settings” column to open the ECU settings dialog:

☐ Extract Errors of all SPNs

SPN and FMI specific Alarm settings:

SPN	FMI	Alarm
110	-1	-1
116	0	16
116	-1	17
177	-1	24
521	-1	-1
1119	-1	-1

Add SPN:

☐ Extract DM1 Messages to ECU specific Table Object

ID of Table Object:

☒ Extract ECU Name ☒ Extract SPN ☒ Extract OC ☒ Extract FMI

In this dialog it can be configured if all SPNs of one ECU shall be extracted or if only the configured ones shall be handled. Furthermore it can be specified if an alarm shall be triggered if a certain SPN is received in a DM1 message.

If all SPNs shall be extracted, the "Extract Errors of all SPNs" checkbox has to be enabled.

If only some SPNs shall be handled, disable the "Extract Errors of all SPNs" checkbox. Then just write the SPNs in the "Add SPN" text field and click Add or hit <Enter> on the keyboard. The new SPN will appear in the table on the left.

If you want to remove one or more SPNs, just select it/them and click the "Remove Selected SPN" button.

After a SPN was added to the table it can be configured if a dedicated alarm shall be engaged when the SPN is included in the DM1 message. For that, the alarm number needs to be entered in the in the "Alarm" cell. The default value for that cell is -1 which means: engage no alarm.

Additionally it can be configured if the alarm shall only be engaged for a certain FMI number. Just write the FMI into the cell. The default value for the FMI cell is -1 which means: engage the alarm for any FMI.

To trigger different alarms for different FMIs, the same SPN can be added several times to the table and different FMIs and alarms can be configured.

For example take the screenshot above. It has the following SPN FMI Alarm settings:

110	-1	-1
116	0	16
116	1	17
177	-1	24
521	-1	-1
1119	-1	-1

That means:

- Track SPNs 110, 116, 177, 521 and 1119
- Don't engage an alarm for SPN 110 (FMI and Alarm are -1)

- Engage alarm 16 for SPN 116 if FMI is 0 (FMI is 0, Alarm is 16)
- Engage alarm 17 for SPN 116 if FMI is 1 (FMI is 1, Alarm is 17)
- Engage alarm 24 for SPN 177 and don't care for FMI (FMI is -1, Alarm is 24)
- Don't engage alarm for SPNs 521 and 1119 (FMI and Alarm is -1)

In the lower part of the dialog, it can be selected if the DM1 message entries of the selected ECU shall be passed to a specific table object. The settings in this dialog correspond to those in the parent dialog.

By clicking the “OK” button, all settings will be saved. When clicking “Cancel” all settings will be discarded.

DM2 Settings

The only settings that can be made for DM2 messages is to enable or disable it and “Update Table with extracted DM 2 Data” setting. This setting is the same as for DM1 messages. You can enter a different Table Object ID in the “Enter ID of the Table Object” field than for the DM1 Table so that you can have different tables for both message types.

DM1 and DM2 How To

How to get DM2 messages

DM2 Messages are only sent on request. They can be either requested for single ECUs or a global request can be sent. The following example shows how to make a global request for all ECUs to send the DM2 messages.

First you have to create an internal variable (**Communication | Variable Manager... | button Create A New Variable**) to which we can write. In this example it is called j1939_dm2_trigger, the owner is PClient and the data type is UNSIGNED8. You are free to choose index and subindex and the variable group:

Provide following details for adding a new variable

Name:	j1939_dm2_trigger	
Index:	0x3000	(0x3000 - 0x5FFF)
SubIndex:	0x1	(0x00 - 0xFE)
Data type:	UNSIGNED8	
Owner:	PClient	
Group:	Common	

Reset Add Close

Next a J1939 transmit PGN needs to be configured. Go to **Communication | Protocols | J1939 | Configure Mappings...** Enter “dm2_global_request” in the “Name”, as type select Transmit field and click the “Add” button.

The PGN Id for this request is 0xea00, the priority is 6. Destination is Any ECU and for “Send Value on” select “Any Variable Change”:

ID	5
Name	dm2_global_request
Type	Transmit
Description	Message to request all ECUs to send DM2 messages
Mapping Variable Type	Length
Delimiter	*
Transmit To	CAN1:Any ECU
Little Endian	<input checked="" type="checkbox"/>
PGN	0xEA00
PGN Priority	6
<input checked="" type="checkbox"/> Request Settings <input checked="" type="checkbox"/> Receive Settings <input checked="" type="checkbox"/> Transmit Settings	
Use as Write Request	<input checked="" type="checkbox"/>
Send Value On	Any Variable Change
Select Variable(Tx)	None
Transmission Period (in ms)	0

Now add two entries in the **Configure mappings of variables for selected mapping object** section of the dialog by pressing the **Add** button twice. Make the same settings as in the screenshot below:

Byte Bit Pos...	Length	Is Const...	Constant Value	Group	Variable	Mask	Offset1	Shift X Bits	Scale	Offset2
1:1	16	<input checked="" type="checkbox"/>	0xFECB			0xFFFF	0.0	0	1.0	0.0
3:1	8	<input type="checkbox"/>	0x00	Common	j1939_dm2_trigger	0x00	0.0	0	1.0	0.0

Important is that the first 16 bit entry is constant with Mask 0xffff and the Constant Value of 0xfecb. The following byte is our j1939_dm2_trigger variable. Here the Mask has to be 0x0. Click OK on both dialogs.

How to trigger sending of this request:

Select a button or softkey in your project and attach an action e.g. to "OnRelease". As action select "Execute Script". Create a new script with the following content:

```
//Get the old variable value, increment it and set it again
//to trigger the sending of the DM2 global request.
```

```
var value = getVariableValue("j1939_dm2_trigger");
```

```
//overflow prevention
```

```
if (value >= 0x7fff)
```

```
{
```

```
value = 0;
```

```
}
```

```
value++;
```

```
setVariableValue("j1939_dm2_trigger", value);
```

Now every time the button/softkey is pressed and released, the DM2 request will be sent. You can also attach this action e.g. to the "Page Init" event of the page where the table is displayed.

Screenshots from an example DM2 Table Object running on a device:
First without a translation file:

Stored Trouble Codes:				Get all Errors
Where	What	Count	Reason	
0x0	110	3	11	Clear Table
0x0	1119	4	11	
0x3	161	2	1	
0x3	177	1	1	
0xb	1091	2	1	
0xb	521	1	11	
0x33	258867	2	17	
0x33	258867	2	1	
0x33	258867	1	15	
0x33	258867	1	0	
0x33	258877	3	15	
0x33	258877	2	0	
0x33	258877	2	1	
0x33	258877	3	17	
0x33	258876	2	15	

And with a valid translation file:

Stored Trouble Codes:				Get all Errors
Where	What	Count	Reason	
EMS	Coolant Temp.	3	Root Cause Unknown	Clear Table
EMS	Exh. Oxygen	4	Root Cause Unknown	
TECU	Shaft Speed	2	Below Normal	
TECU	Oil Temp.	1	Below Normal	
EBS	Pressure	2	Below Normal	
EBS	Pedal Pos.	1	Root Cause Unknown	
TPMS	Tire R F R	2	Below Normal (Least)	
TPMS	Tire R F R	2	Below Normal	
TPMS	Tire R F R	1	Above Normal (Least)	
TPMS	Tire R F R	1	Above Normal	
TPMS	Tire R R R	3	Above Normal (Least)	
TPMS	Tire R R R	2	Above Normal	
TPMS	Tire R R R	2	Below Normal	
TPMS	Tire R R R	3	Below Normal (Least)	
TPMS	Tire R R L	2	Above Normal (Least)	

How to clear the data of a table object

Execute a script with the following content:

```
var emptyArray = new Array(0);
//the first parameter of setProperty function is the Object ID,
//make sure that you enter the correct ID (probably not 291)
var tableID = 291;
setProperty(tableID, "Table Data", emptyArray);
```

How to display logged DM1 messages on the device

Preconditions: Enable DM1 support. Enable "Log DM 1 Messages To File" and enter a file name. Disable "ExtractOC".

First create a Table Object. This table should have 5 columns.

The Table Heading should be: "Date;Time;ECU;SPN;FM".

For updating the table with the logged DTCs, a Script has to be executed. Assign an "Execute Script" action to either a softkey's/button's "OnRelease" event or to the page's "Page Init" event.

The Script has to look like this:

```
//Create an Array to store each line of the log file:
var logFile = new Array();

//create a string with the name of the log file (the same that
was configured in DM1 Settings)
var logFileName = "j1939_DM1_log_file.csv";

//now a variable with the default log path:
var path = "/opt/logfiles/";

//now read the file
logFile = readFile(path + logFileName);

//after reading, the data has to be assigned to the table
//(change tableID to the tableID your table has):
var tableID = 332;
setProperty(tableID, "Table Data", logFile);
```

Here is a screenshot from the device displaying the log file contents:

Logged DM1 DTCs:					Refresh
Date	Time	ECU	SPN	FMI	
2012.01.20	08:55:10	EBS	Pedal Pos.	Root Cause Unknown	
2012.01.20	08:55:10	EMS	Exh. Oxygen	Root Cause Unknown	
2012.01.20	08:55:10	EMS	Coolant Temp.	Root Cause Unknown	
2012.01.20	08:55:11	TPMS	Tire R F R	Below Normal	
2012.01.20	08:55:11	TPMS	Tire R R L	Below Normal	
2012.01.20	08:55:11	TPMS	Tire R F L	Above Normal	
2012.01.20	08:55:11	TPMS	Tire F L	Above Normal	
2012.01.20	08:55:11	TPMS	Tire F R	Above Normal	
2012.01.20	08:56:35	TECU	Oil Temp.	Below Normal	
2012.01.20	08:56:35	EMS	Exh. Oxygen	Root Cause Unknown	
2012.01.20	08:56:35	EMS	Coolant Temp.	Root Cause Unknown	
2012.01.20	08:56:36	TPMS	Tire R F R	Below Normal	
2012.01.20	08:56:36	TPMS	Tire R R L	Below Normal	
2012.01.20	08:56:36	TPMS	Tire R F L	Above Normal	
2012.01.20	08:56:36	TPMS	Tire F L	Above Normal	

Note: You can scroll through the table if "Set As Input" property of the table is enabled.

Note 2: The JavaScript readFile function is currently limited to only read the first 2MB of a file. If the log file is larger than that, the rest of the content is not shown. Consider deleting the log file if the size of it gets too big.

DM1 Lamps

The standard SAE J1939-73 defines four lamps:

- Malfunction Indicator Lamp
- Red Stop Lamp
- Amber Warning Lamp
- Protect Lamp

The status of these lamps is transmitted in the DM1 messages of each ECU in bytes 1 and 2. Each lamp has a status value (byte 1):

bits 8-7	Malfunction Indicator Lamp Status
bits 6-5	Red Stop Lamp Status

bits 8-7	Malfunction Indicator Lamp Status
bits 4-3	Amber Warning Lamp Status
bits 2-1	Protect Lamp Status

and a flashing indicator (byte 2):

bits 8-7	Flash Malfunction Indicator
bits 6-5	Flash Red Stop Lamp
bits 4-3	Flash Amber Warning Lamp
bits 2-1	Flash Protect Lamp

There are 8 predefined internal variables available that represent these values (read-only).

The variables are available in the group J1939 and are named

- @MalfunctionIndicatorLampStatus
- @RedStopLampStatus
- @AmberWarningLampStatus
- @ProtectLampStatus
- @MalfunctionIndicatorLampFlashing
- @RedStopLampFlashing
- @AmberWarningLampFlashing
- @ProtectLampFlashing

The @XXXLampStatus contains the combined information of the status and flashing bits in the DM1 message with 16 possible combinations. The @XXXLampFlashing variable contains the direct "is it on or not?" information, when the lamp is flashing, it will change value between 0 and 1, if the lamp should glow, it will stay 1. So normally only the @XXXLampFlashing variable is needed to display the lamps by creating a list object with two images (an on and an off lamp image) and connecting it with the @XXXLampFlashing variable.

The following table shows the possible values of the DM1 message bytes and our variables.

The calculation is the same for all the four variables:

Value for Status read from DM1 messages (Byte 1)	Value for Flashing read from DM1 messages (Byte 2)	value of @XXXLampStatus	value of @XXXLampFlashing
0	0	0	0: Lamp Off
0	1	1	0: Lamp Off
0	2	2	0: Lamp Off
0	3	3	0: Lamp Off
1	0	4	0/1: Flashing 1Hz
1	1	5	0/1: Flashing 2Hz

Value for Status read from DM1 messages (Byte 1)	Value for Flashing read from DM1 messages (Byte 2)	value of @XXXLampStatus	value of @XXXLampFlashing
1	2	6	0: Lamp Off
1	3	7	1: Lamp On
2	0	8	0: Lamp Off
2	1	9	0: Lamp Off
2	2	10	0: Lamp Off
2	3	11	0: Lamp Off
3	0	12	0: Lamp Off
3	1	13	0: Lamp Off
3	2	14	0: Lamp Off
3	3	15	0: Lamp Off

As can be seen in the table above the status 2 and 3 for the lamp status and value 2 for flashing will always switch off the flashing variable. If the used ECUs support these states, a custom handling of these values needs to be developed manually by using the value of the @XXXLampStatus variables.

If multiple ECUs send DM1 messages, the lamp status and flashing information will be combined from all messages. The priority (highest to lowest) is: Fast Flashing, Slow Flashing, On, Off.

To enable the calculations for the lamp variables DM1 support needs to be enabled.

5.4 Import DBC File



Tutorial video of the DBC import


<https://www.youtube.com/watch?v=4JgRjyLcjRE>

Please note that this feature has to be bought first. Contact your vendor to obtain a license. Without a license, it is not possible to import the content of a DBC file.

Disclaimer!

Please always validate your DBC file in Vector before importing it. This will ensure that the import works and the functionality is as expected.

If you have problems importing a DBC file and you don't think it's a problem in the file, please send the file to your vendor for analysis.

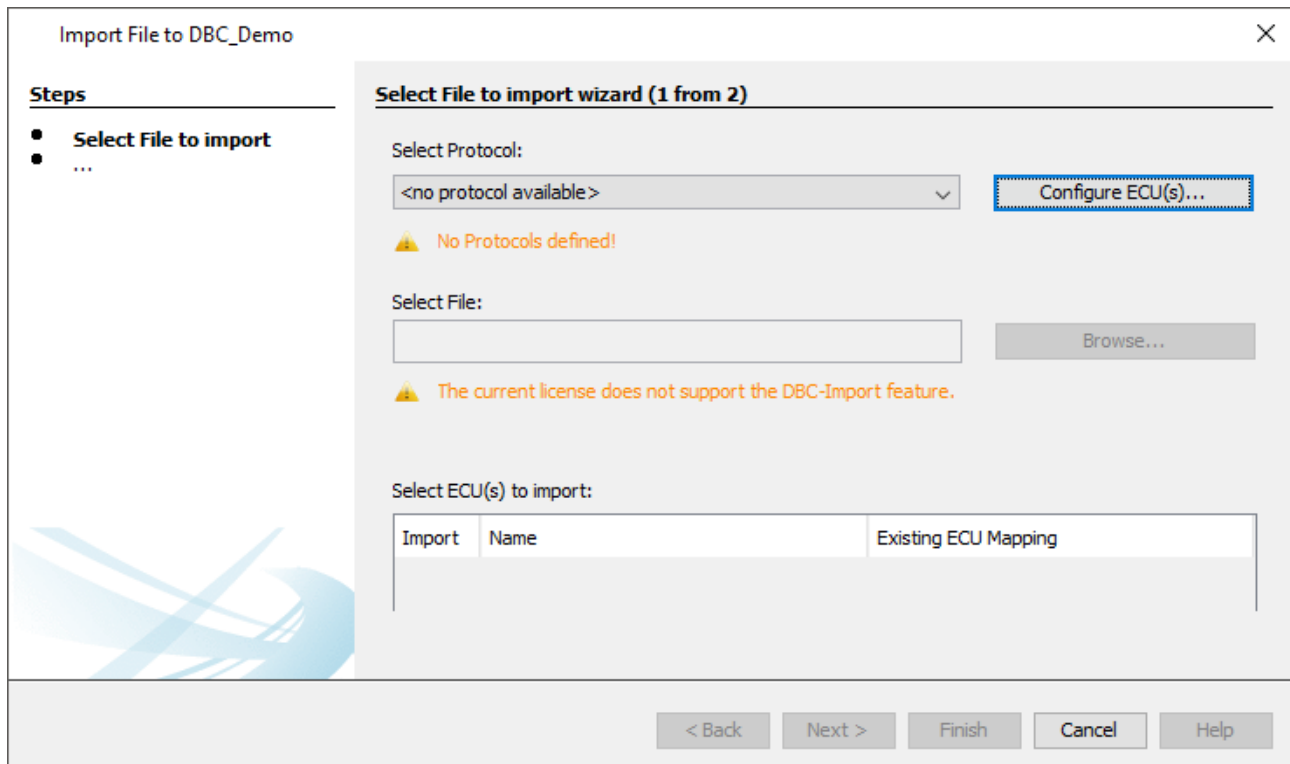

To start the import, open the dialog under the menu Communication -> Import-Export -> Import DBC File.


Note that the dialog can only be opened with an opened project.

The import process is done in two steps.

In the **first** step, a CAN protocol needs to be chosen and a DBC file is selected.

In the **second** step, the CAN messages and variables to be imported are selected.

1. Select File for Import

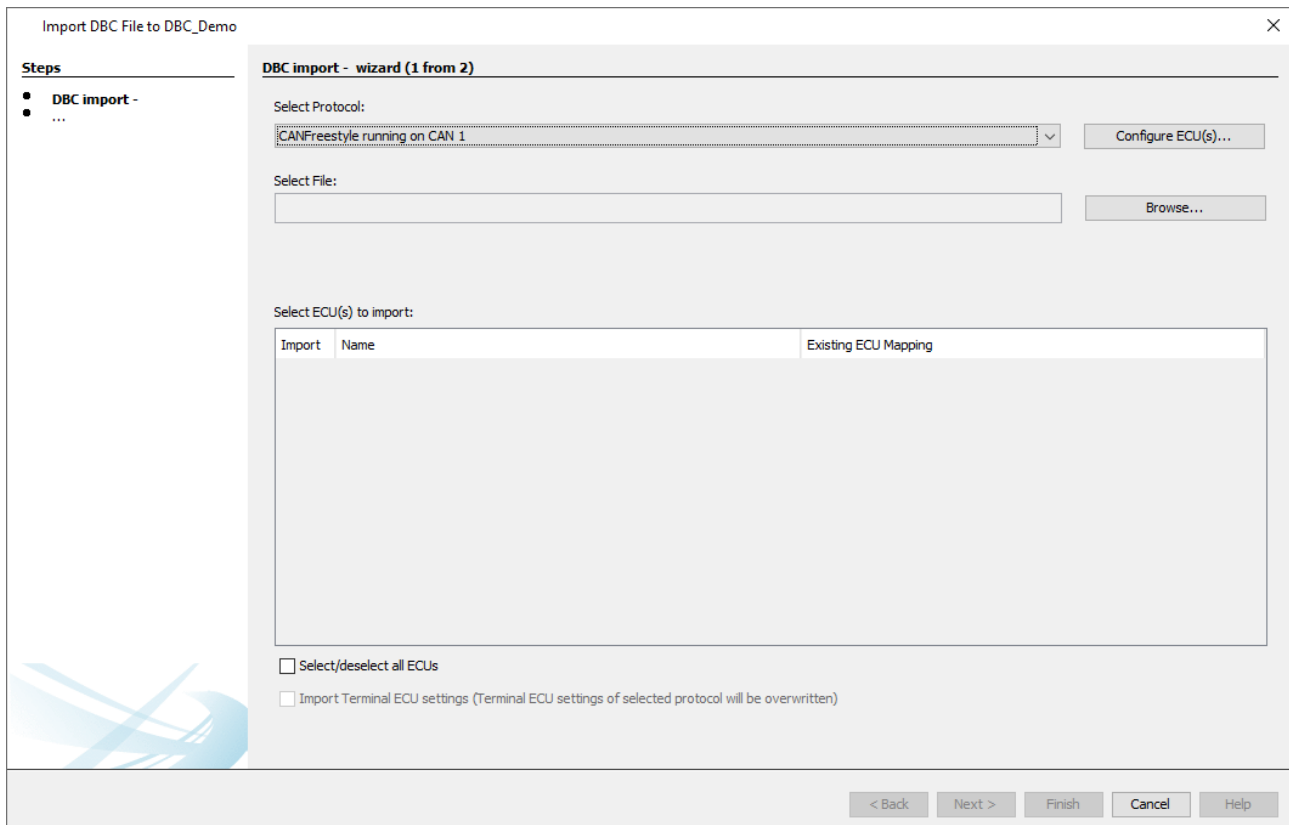

If no CAN protocol has been added to the project, an import of a DBC file isn't possible, so first at least one CAN protocol has to be added.

The Configure ECU(s) dialog can be reached directly from this dialog with the button "Configure ECU(s)...".


If there are several protocols in the project, one has to be chosen for the DBC import, i.e. in which protocol should the CAN mappings be added.

When a protocol has been added and / or chosen, a DBC file can be loaded.

The OPUS Projektor will check the integrity of the DBC file. If there is a problem parsing the file, an error message will be shown, indicating the problem with the file.



In this case the parsing failed with an error in the Message_3 of Signal_9. The hint [NumberFormatException] shows the root cause for this issue. In the example the Factor 1g could not be parsed.

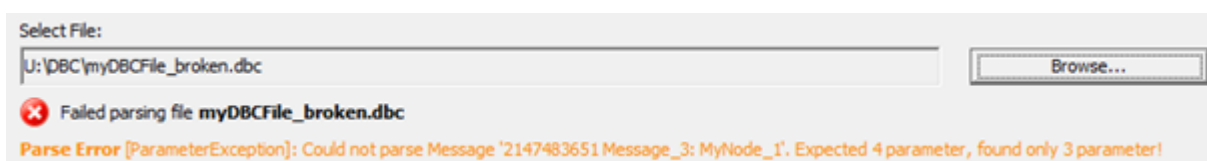

In this case the parsing failed with an error in the Message_3. The hint [ParameterException] shows the root cause for this issue. In the example a parameter Message-Length is missing.

NOTE: Please validate the DBC-File with Help of Vector CANdb++ Editor and solve all warnings before importing the DBC-File.

When the DBC file is loaded successfully, at first the ECU(s) used in the DBC file can be mapped to (an) existing ECU(s).

Select File for Import wizard (1 from 2)

Select Protocol:
 CANFreestyle CAN 1 Configure ECU(s)...

Select File:
 Browse...

✔ Parsed file successfully

Select ECU(s) to import:

Select	Name	Existing ECU Mapping
<input checked="" type="checkbox"/>	NMTMaster	<no assignment> ▼
		<no assignment>
		Test_ECU

If no ECU is chosen (<no assignment>), the ECU will be created for the selected protocol. If an ECU with the same name already exists, the ECU name is marked in red. Then the ECU needs to be mapped to an existing ECU, since there can't be two ECU's with the same name.

Select ECU(s) to import:

Import	Name	Existing ECU Mapping
<input checked="" type="checkbox"/>	MyNode_1	<no assignment> ▼
<input type="checkbox"/>	MyNode_2	<no assignment> ▼
<input type="checkbox"/>	MyNode_3	<no assignment> ▼

☐ Select/deselect all ECUs

Conflict: ECU name 'MyNode_1' does already exist in current project! Choose another name, or map ecu to an existing one!

For the CAN-Protocol CANopen the COB-ID of the ECU must be unique. In case that the COB-ID already exists the ECU can not be imported. To solve the error either the COB-ID in the DBC-File must be updated or the COB-ID of the already existing ECU must be updated.

Select ECU(s) to import:

Import	Name	Existing ECU Mapping
<input checked="" type="checkbox"/>	MyNode_1	<no assignment>
<input type="checkbox"/>	MyNode_2	<no assignment>
<input type="checkbox"/>	MyNode_3	<no assignment>

☐ Select/deselect all ECUs

Conflict: Address '0x06' of ECU 'MyNode_1' does already exist in current project! Map ecu to an existing one!

Below the ECU selection box there are two check boxes.

☐ Select/deselect all ECUs

☐ Import Terminal ECU settings (Terminal ECU settings of selected protocol will be overwritten)

With the first check box, all ECUs can be selected / deselected for import.

With the second check box, the terminal ECU settings (the CAN protocol settings for the OPUS device) can be imported from a DBC file.

Note: The check box is only available if such settings have been exported into the DBC file. Only DBC files from version 2020.4 onwards can have these settings included.

Note: The check box is only available for J1939 and CANopen imports, as CANFreestyle doesn't have any necessary Terminal ECU settings.


Note: The check box is only available if the selected protocol and the Terminal ECU settings in the DBC files are from the same protocol.

If no ECU is specified in the DBC file, no further settings can be made

Once all settings have been made, click Next to continue.


The import process can be canceled at any time by clicking Cancel.

2. Select CAN Messages and Variables

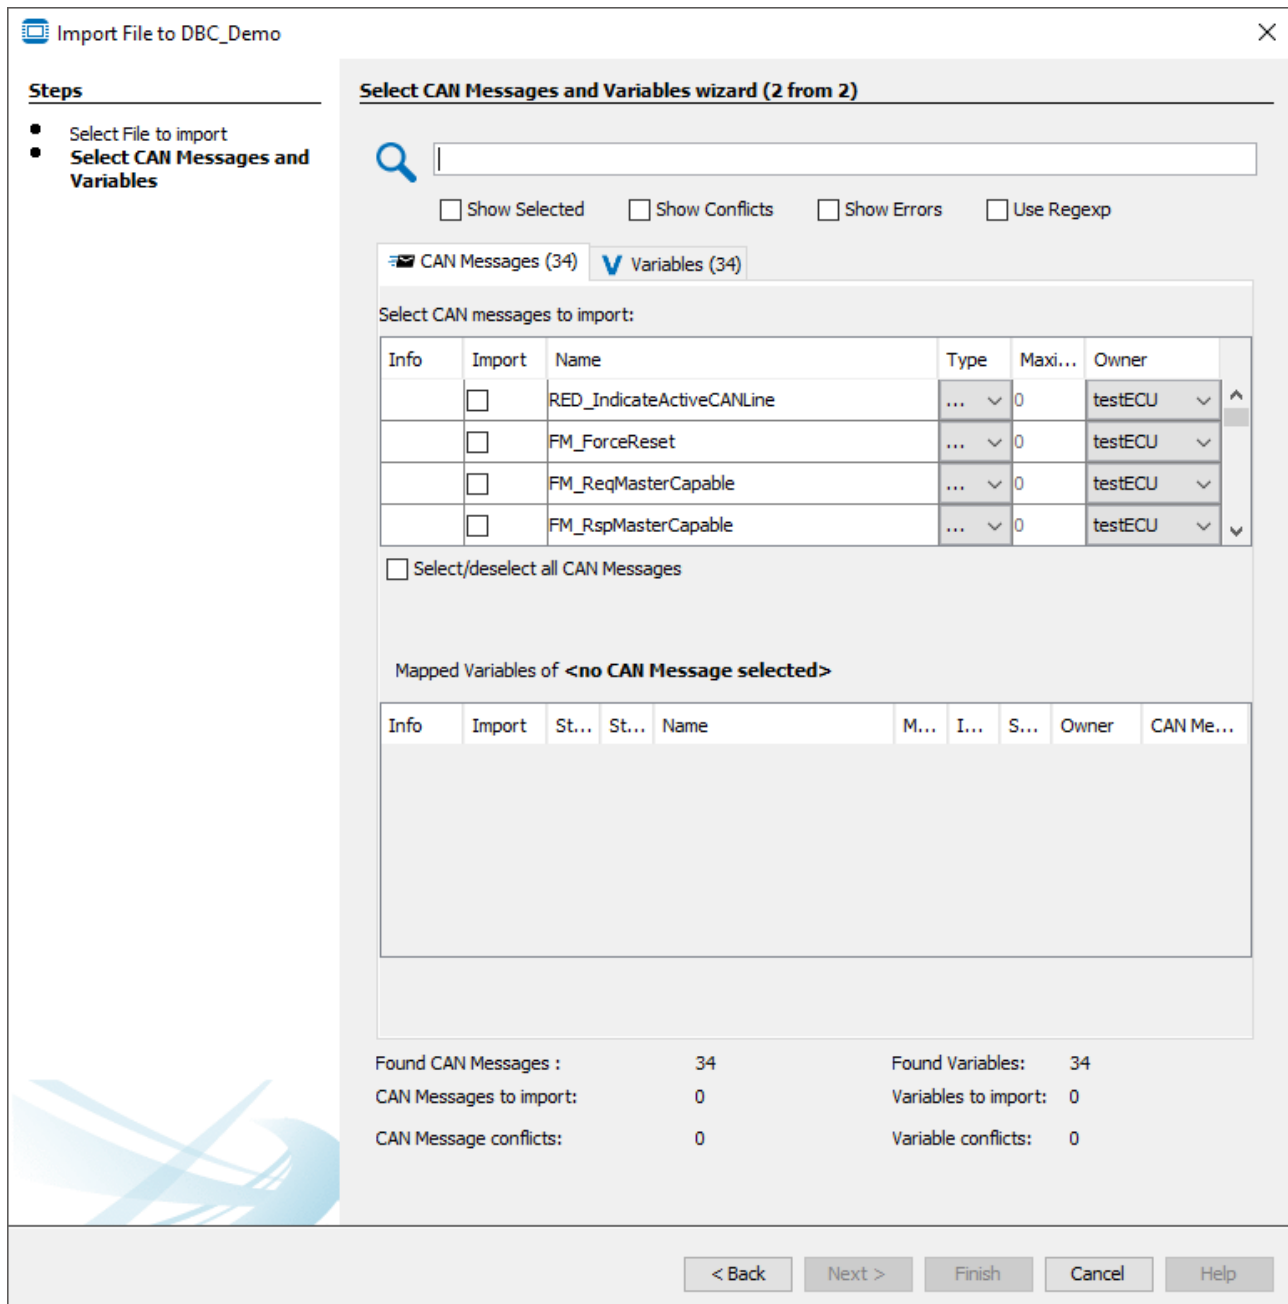

In the second step of the dialog the CAN messages and variables for import can be selected. To select a CAN message for import, activate the check box in the Select column in the upper table of the dialog. With Select/deselect all CAN Messages, all messages can be selected or deselected at once.

If a CAN message in the DBC file is not compatible with the selected CAN protocol (e.g. a J1939 message with > 8 bytes is defined in the DBC file, but the CAN Freestyle protocol has been selected to be used), the CAN message will be displayed with a red error icon and cannot be selected.

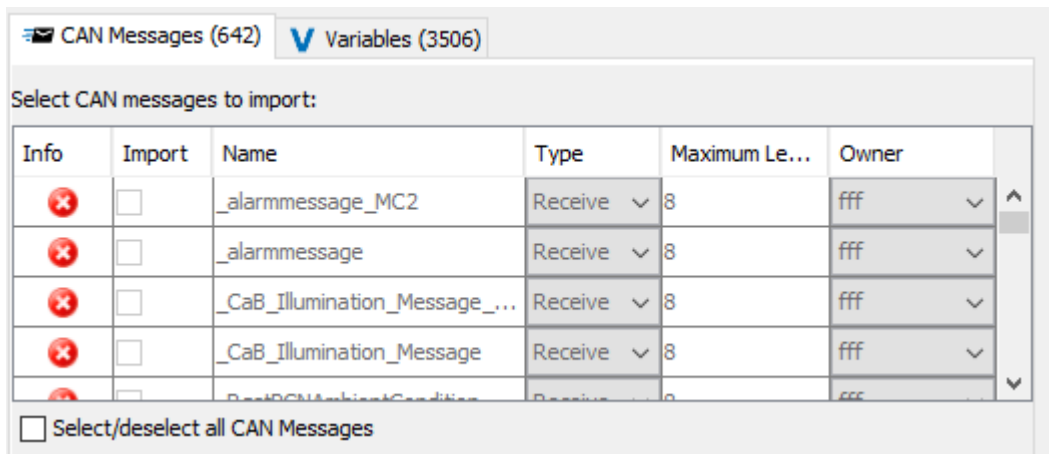


The direction type (Receive or Transmit) can be set in the column Type. The name of the CAN mapping can also be changed from what is given in the DBC file. Finally, the owner can be changed in the column Owner to specify from which ECU the message will be sent.

When a CAN message is selected for import, the according variables are automatically selected for import, as well.


The table below the CAN messages shows the mapped variables of the currently selected CAN message.

The variable name, index, sub index and owner can be changed in this table. When the name, index and sub index is changed, it is checked if there is a conflict with existing variables. If there is, the according variable will be marked in red and an import is not possible.

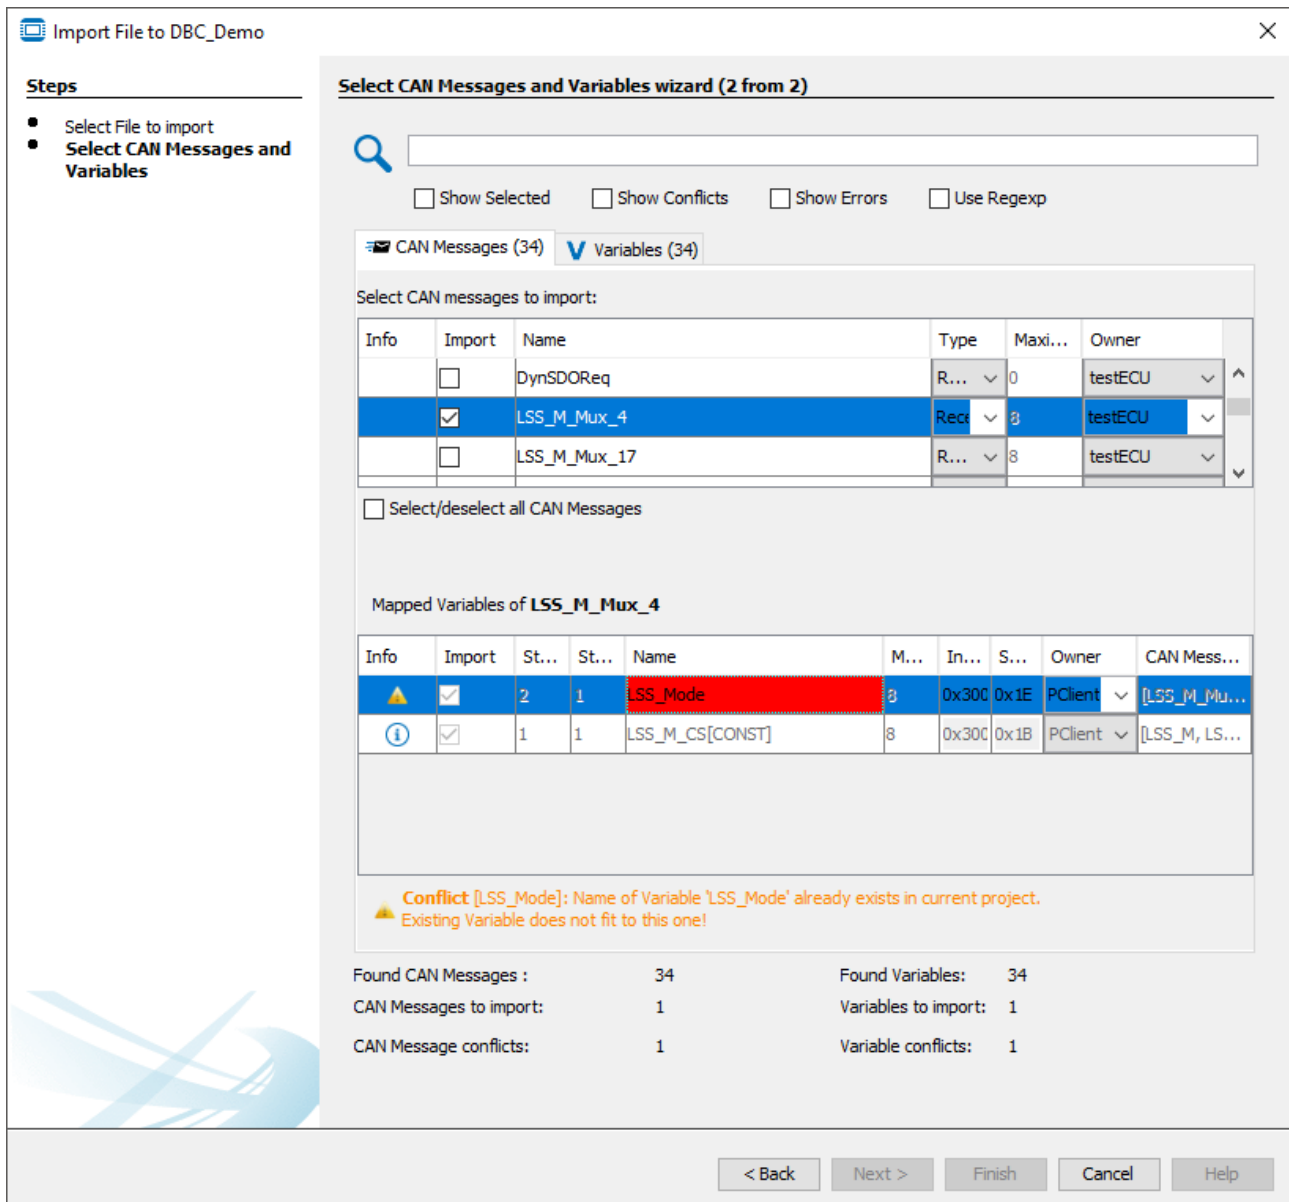

Only when there are no conflicts, the import process can be finished.

If a variable is already existent in the project and the data type matches the variable in the DBC file, the variable will be used. In the Mapped Variable table, such variables will be shown with a gray background. No properties of such variables can be changed (since the variable is already created in the project).

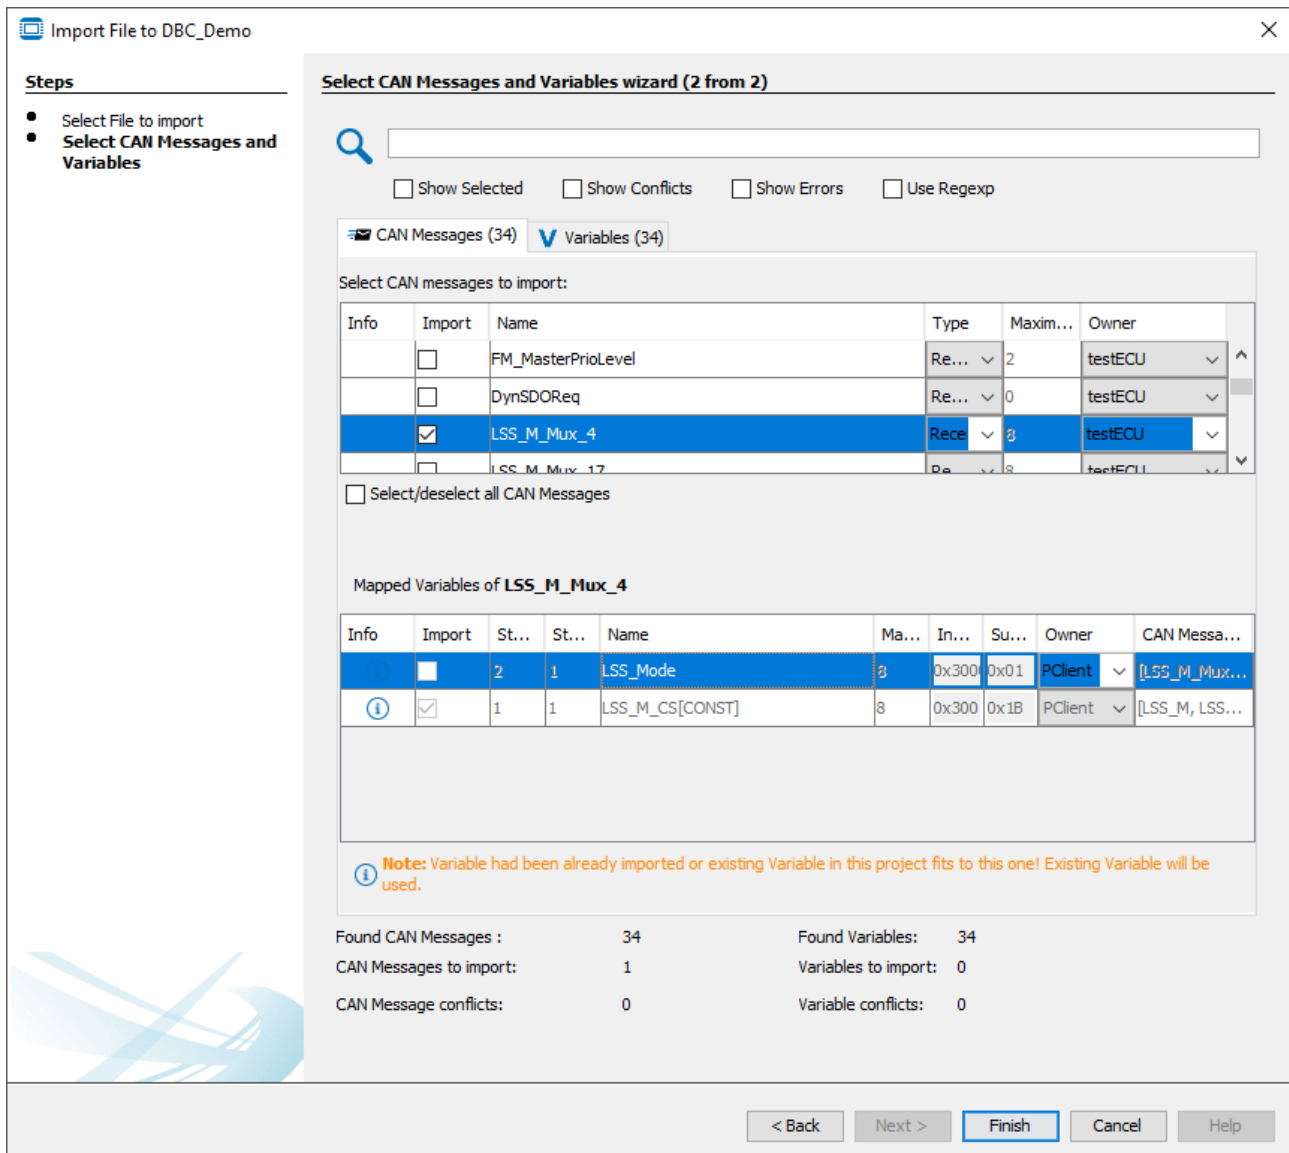

In the bottom of the dialog an overview of the CAN messages and variables in the DBC file and the ones selected for import are shown.

In the Variables tab all variables in the DBC file are shown. In this tab, variables can be selected and deselected for import.

Please note: If a variable is deselected in this tab, this will lead to the deselection of all CAN messages where this variable is mapped.


Variables can be imported without the CAN messages, but CAN messages can not be imported without the according variables.

In the upper part of the dialog the search field can be used to filter the currently displayed variables / CAN messages.

Below the search field the current view can be filtered for

- only elements selected for import
- elements that have conflicts left to be resolved.
- elements with errors that can not be resolved

Additionally, regular expressions can be used to search in the DBC file data.

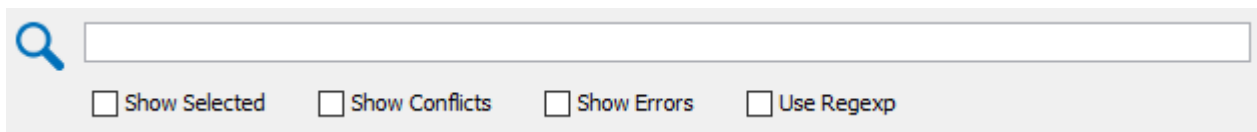

The search can also be used to specifically search in certain data fields:

CAN Messages tab:

- Column Import [boolean] => **#Import**=false/true => true if Object is selected for import
- Column Name [String] => **#Name**=<MappingName> => NOTE: Variable Mappings Name will also be considered!
- Column Type [String] => **#Type**=Receive/Transmit
- Column Length [Integer] => **#Length**=8 #Length<=4
- Column Owner [String] => **#Owner**=<OwnerName>

Other searchable properties are:

- Description [String] => **#Description**=<Text>
- CanImport [boolean] => **#CanImport**=false/true => false shows all Mappings which can not be imported!
Mappings conflicts which can not be solved by user! E.g. Messages with Length > 8 Byte for CANFreestyle
- COB-ID (CANopen) [int] => **#COB-ID**=0x111
- PGN (J1939) [int] => **#PGN**=0x1200
- CAN-ID (CANFreestyle,) => **#CAN-ID**=0x16

Note: The term CAN-ID is used for all protocols, i.e. for CANopen it searches COB-IDs and for J1939 PGNs.

Variables tab:

- Column Import [boolean] => **#Import**=false/true => true if Object is selected for import
- Column GroupName [String] => **#GroupName**=<GroupName>
- Column Name [String] => **#Name**=<VariableName>
- Column Length [Integer] => **#Length**=8 or **#Length**<=4
- Column Index [Integer] => **#Index**=0x3000
- Column SubIndex [Integer] => **#SubIndex**=0x01
- Column Owner [String] => **#Owner**=<OwnerName>
- Column CANMessage [String] => **#CANMessages**=<MessageName>
#Messages=<MessageName>

Other searchable Properties are:

- Description [String] => **#Description**=<Text>
- CanImport [boolean] => **#CanImport**=false/true => false shows all Variables which can not be imported! e.g. Length of Variable is >32bit

Examples:

#CAN-ID=0x7e5 searches for all mappings with ID 0x7e5

#Name=engine searches for all mappings that contain the character sequence "engine" anywhere in the mapping name or variable name

Note: Search terms can be combined (AND) by typing them one after another:

#CAN-ID=0x7e5 #Name=engine searches for all mappings with ID 0x7e5 that have engine in the mapping name or variable name

Note: Invalid search terms will be ignored, e.g. the upper search term combination in the Variables tab will ignore the #CAN-ID search term.


Note: The search terms are case-sensitive.

Additional information

- The "producer" property of a message will be set as the "Receive From" value in a Receive mapping
- The "consumer" property of a message will be set as the "Transmit To" value in a Transmit mapping
- Scale and Offset of CAN messages will be imported as scale and offset 2 properties for CAN mappings. Offset1 is only populated if the DBC file was created by the program in version 2020.4 or higher

Finish

Only when there are no conflicts, the import process can be finished by clicking Finish. Then a dialog will be shown with an overview of what has been imported.

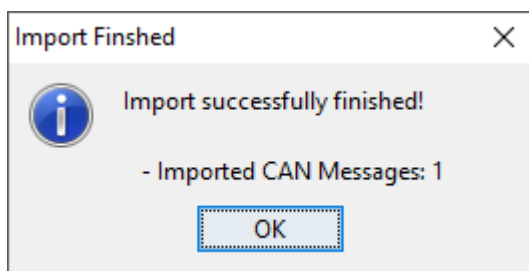

The import process can be canceled at any time by clicking Cancel.

5.5 Export DBC File

Please note that this feature has to be bought first. Contact your vendor to obtain a license. Without a license, it is not possible to export into a DBC file.

Disclaimer!

We try to adhere to the DBC file format as well as possible. If you find that an exported DBC file from our program doesn't work as expected, please contact the

technical support from your vendor with your project, the DBC file and a description what is missing or wrong.

To start the export, open the dialog under the menu Communication -> Import-Export -> Export DBC File.

Note that the dialog can only be opened with an opened project.

Export DBC File from EmptyProject_69

Steps

- DBC export - ...

DBC export - wizard (1 from 2)

Select Protocol:
CANFreestyle running on CAN 1 Configure ECU(s)...

Select Folder:
C:\Temp Browse...

DBC File:

< Back Next > Finish Cancel Help

The export process is done in two steps.

In the **first** step, a CAN protocol needs to be chosen and a DBC file name is given.

In the **second** step, the CAN messages and variables to be exported are selected.

1. Select Protocol and File for Export

If no CAN protocol has been added to the project, an export of a DBC file isn't possible, so first at least one CAN protocol has to be added.

The Configure ECU(s) dialog can be reached with the button "Configure ECU(s)...".


If there are several protocols in the project, one has to be chosen for the DBC export, i.e. from which protocol the CAN mappings should be exported.

A folder to save the file in has to be selected. Then a valid file name has to be given. The file name needs to be complete, i.e. with the extension, e.g. "test.dbc".


If a file with the same name already exists, a warning will be displayed that the existing file will be overwritten by the export.

Once all settings have been made, click Next to continue.
The export process can be canceled at any time by clicking Cancel.

2. Select CAN Messages and Variables

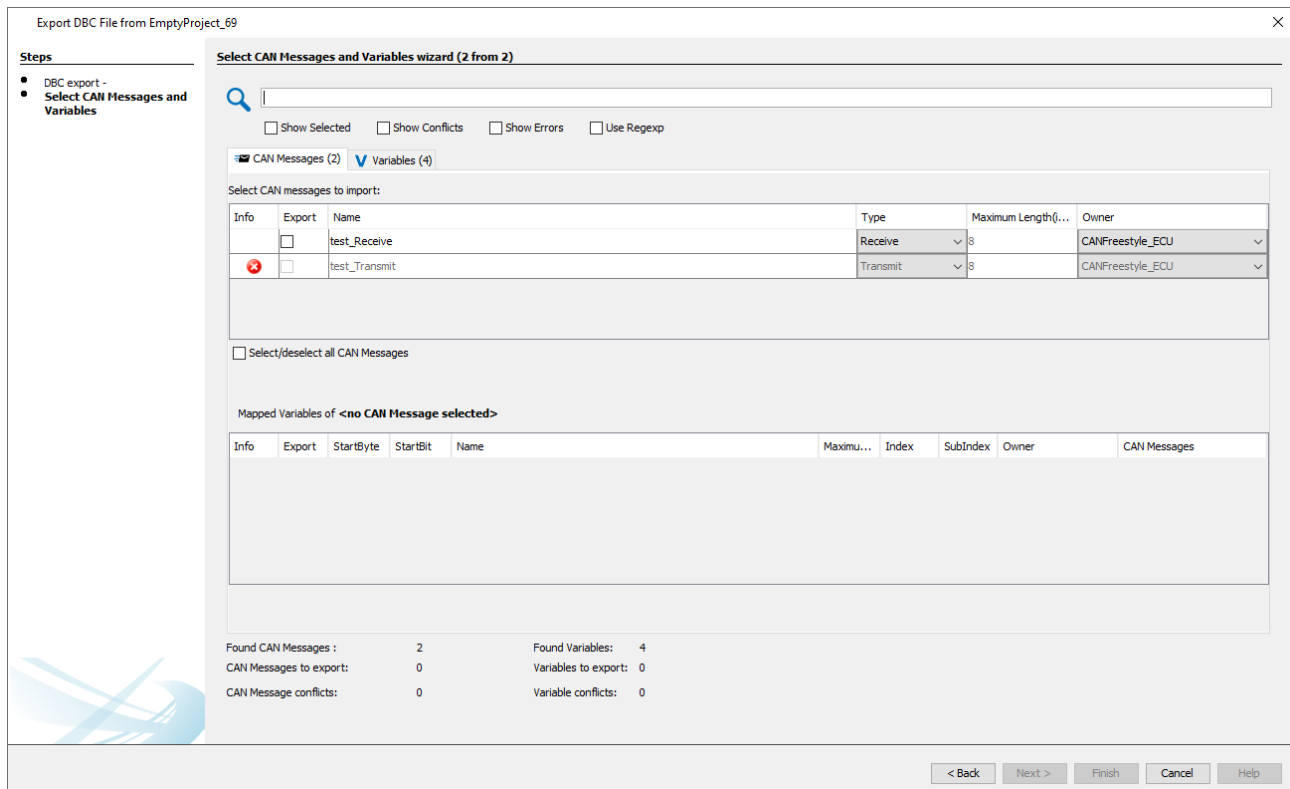


In the second step of the dialog the CAN messages and variables for import can be selected. To select a CAN message for import, activate the check box in the Select column in the upper table of the dialog. With Select/deselect all CAN Messages, all messages can be selected or deselected at once.

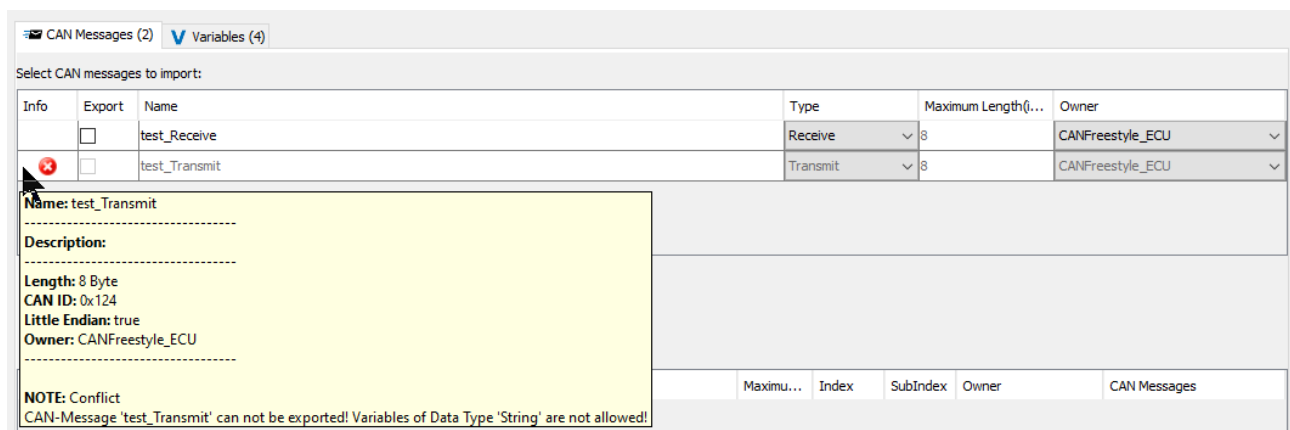

If a CAN message cannot be exported into a dbc file, the CAN message will be displayed with a red error icon and cannot be selected. The restrictions for an export are:

- No String variables must be in a mapping. Strings are not supported by Vector
- No Delimiter-based mappings can be exported. Delimiter-based mappings are not supported by Vector
- Multiplexer-Messages are only available for CANFreestyle and J1939 protocols, but not for CANopen

- Messages with same CAN-ID but different Multiplexer-Positions can not be exported. This is not supported by the DBC format

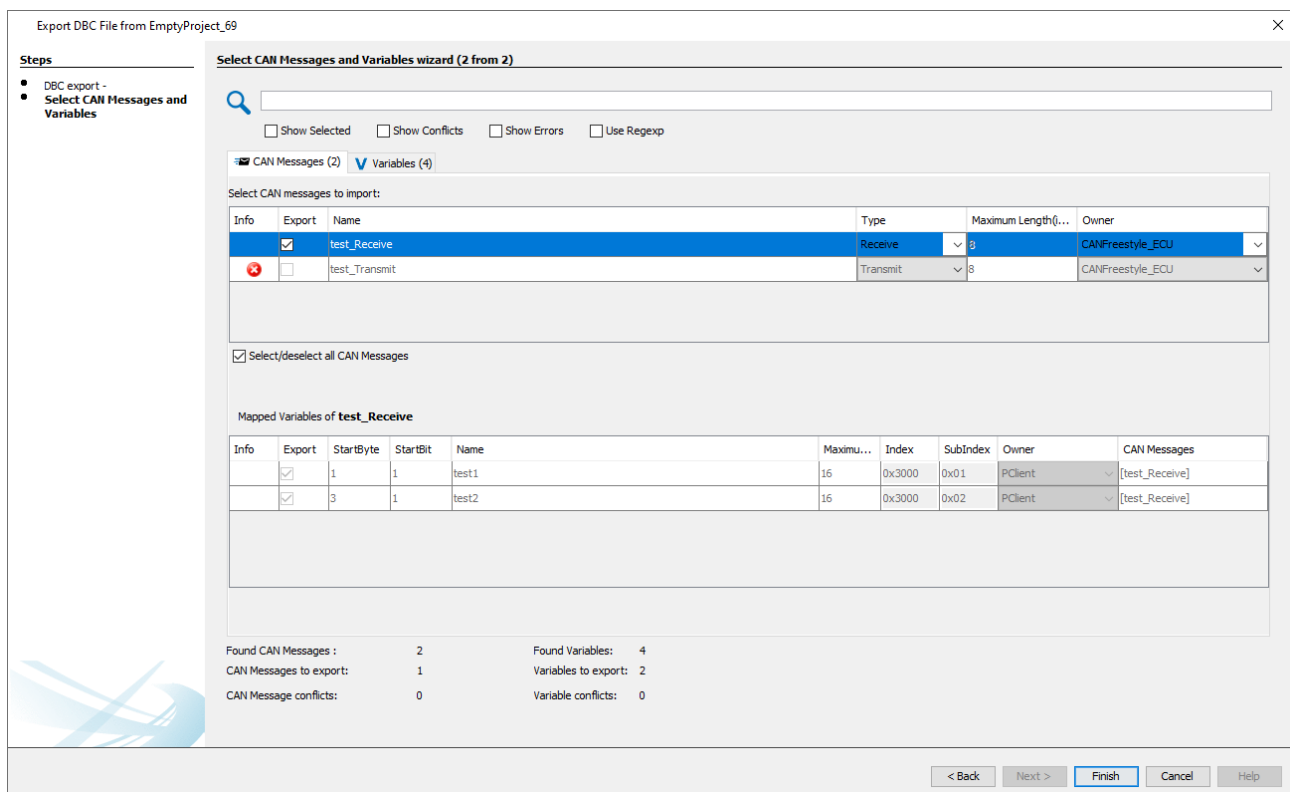


When a CAN message is selected for import, the according variables are automatically selected for import, as well.

The table below the CAN messages shows the mapped variables of the currently selected CAN message.

Note that the variables cannot be de-selected and no properties of the variables can be changed.

The export process can be finished by clicking Finish.

Then a dialog will be shown with an overview of what has been exported.

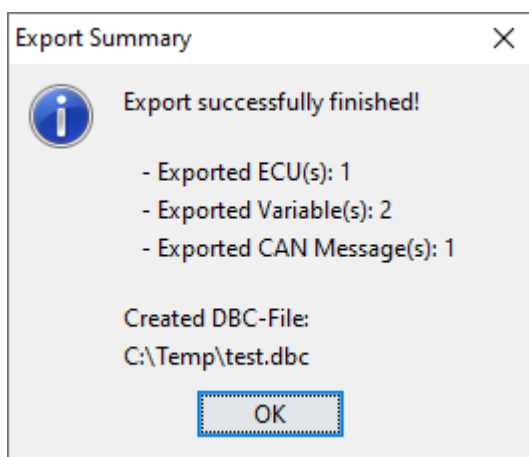

The export process can be canceled at any time by clicking Cancel.

The following properties of CAN mappings are exported:

All protocols:

- Type (RX/TX)
- Producer of the message (for Receive the "Receive From" value will be set, for Transmit the device will be set)
- Consumer of the message (for Receive the device will be set, for Transmit the "Transmit To" value will be set)

CANFreestyle:

- Rx/Tx: The property CAN ID(0x) is used for CAN-ID
- Rx: The property Receive Timeout is saved in attribute GenMsgCycleTime
- Rx: The property Enable Request is saved in attribute GenMsgRequestable
- Tx: Transmission Period

CANopen:

- Rx/Tx: The property COB-ID is used for CAN-ID
- Rx/Tx: The property Event Timer is saved in attribute GenMsgCycleTime.
- Tx: Event Timer
- The CANopen address of the device (Node ID)
- The Heartbeat Producer Time
- The Heartbeat Time
- SDO COB-IDs
- The SDO Timeout

J1939:

- Rx/Tx: The properties PGN Priority, PGN and the source address is used for CAN-ID (as described in J1939 standard)
- Rx: The property Receive Timeout is saved in attribute GenMsgCycleTime
- Rx: The property Enable Request is saved in attribute GenMsgRequestable => It is only set to true if also the property Use Standard Request is selected.
- Tx: The property Transmission Period (in ms) is saved in attribute GenMsgCycleTime
- The Preferred Source Address
- The Terminal Name and address claim properties

The following properties of variables are exported:

- The name of the variable is used for signal name. NOTE: EMPTY_SPACE will be converted to _ because it is not allowed in DBC-Format
- For constants, the prefix CONST_ is used with the variable mapping size, e.g CONST_8
- For constants, the suffix __n, with n starting at 1, is used if more than one constant is used in the source project

- The name of predefined variables e.g. @AlarmShow is not valid in DBC-Format. (the @ sign is a delimiter) so the prefix __AT__ is used instead (e.g. __AT__AlarmShow)
- The Scale and Offset2 of variable mappings is used for setting Scale and Offset. (Offset1 will be exported as a user-defined attribute that won't be used in Vector)
- The property values Min and Max of the mapped variable will be set as Min and Max. NOTE: If the variable mapping does not use the whole length of the variable, the Min and Max value is set appropriate to the mapped length. For constants the Const value is used for Min and Max
- Unit is currently not supported and will be always set to EMPTY_STRING
- The owner will be always set to Vector__XXX (default owner)

FAQ

What about multiplexer messages?

The DBC format supports multiplexer messages, and our program supports them, as well. For multiplexer messages to be recognized as that, messages that use the same CAN ID (which is otherwise forbidden in Vector) need to have a identifiable multiplexer byte, i.e. a constant in the same position in the mapping. Otherwise messages with the same CAN ID cannot be exported.

If there are several constants in different positions, it cannot be detected which should be used for the multiplexer byte, so the export will not work, as well.


5.6 Visual CAN Mapping

Visual CAN Mapping (**VCM**) is a graphical view for mapping objects. With Visual CAN Mapping there is an easy and comfortable way to create or adjust mapped variables. Via drag and drop it is easy to add/move or remove variables in the table. So it is possible to update the mapping object very fast.

Overview

The Visual CAN Mapping view is divided in 3 views.

1. **VCM Table:** Here you can see all mapped variable and it is possible to add / move or remove them by drag and drop.
2. **VCM Toolbar:** In the toolbar you can "**Add**", "**Move Up**", "**Move Down**" and "**Delete**" variables. Within there is the possibility of a full search after variables and which will be shown at the **Variable Tree**. In addition you can drag variables from **Variable Tree** to the **VCM Table**.
3. **VCM Configure Mapping Table:** If variable is selected at the **VCM Table**, the properties of the mapping will be shown here. The table is similar to the table at the tab "**Configure Mapping**"

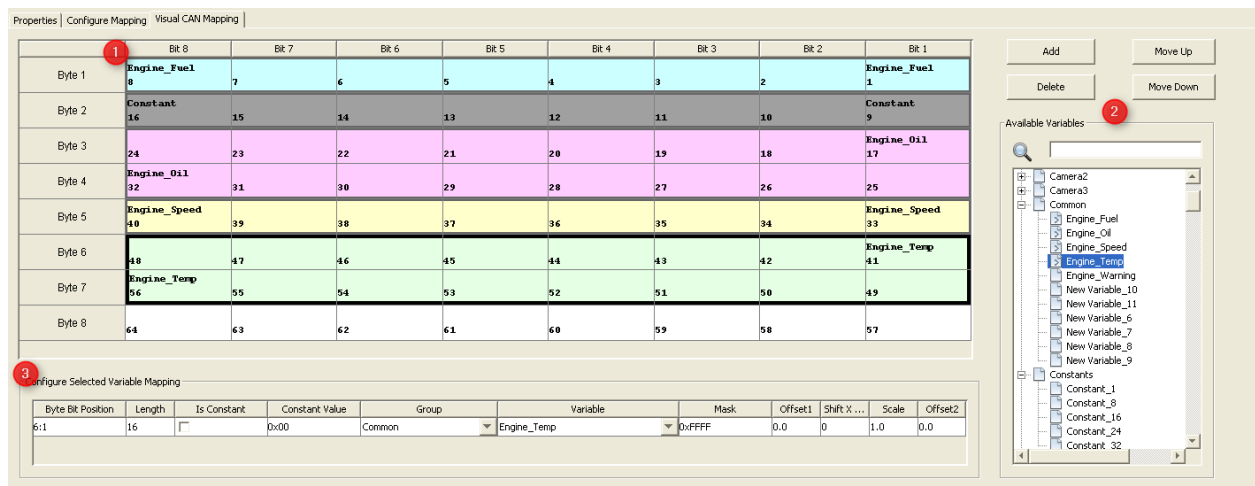

Open Visual CAN Mapping view

Visual CAN Mapping is available for all protocols (CANopen, J1939 and CANFreestyle). It can be opened at the dialog **"Configure Mappings..."**.

To open Visual CAN Mapping please navigate to:


Communication - Protocols -

(1) CANFreestyle or

(2) CANopen or


(3) J1939

- (4) Configure Mappings...

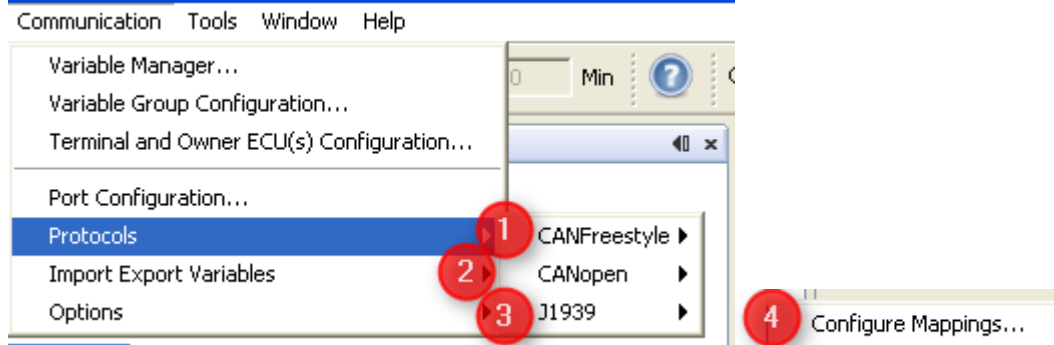

A new dialog "Configure Mappings Dialog" will be opened.


Afterwards you can open the VCM by selecting a (1) "Mapping Object" and clicking on (2) "Visual CAN Mapping" on the tab.

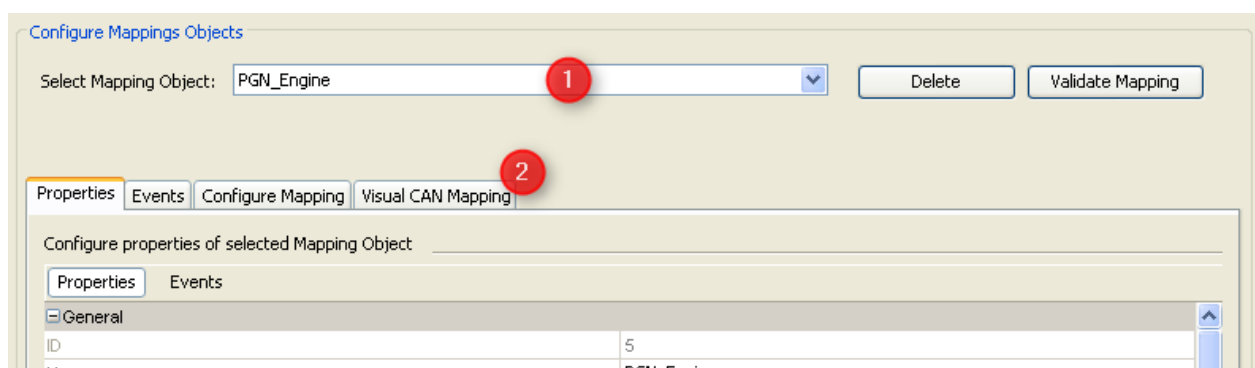

Alternatively, you can use the three shortcuts in the tool bar.



VCM Toolpanel

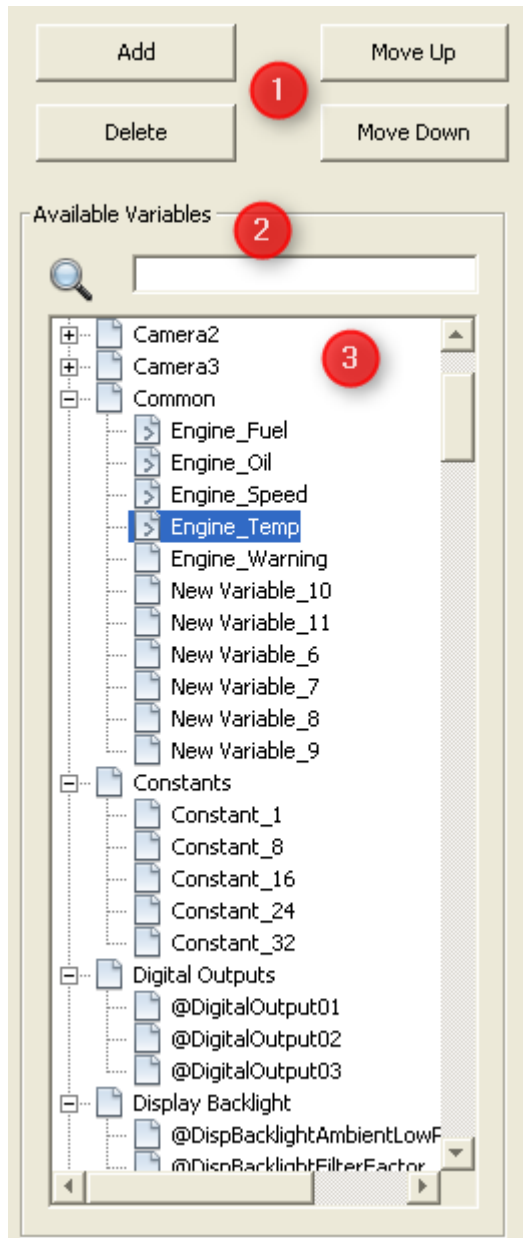


- (1) Button panel for add, delete, move variable mappings. The buttons will be disabled/enabled depending on the state of the VCM table.
- (2) Search field to search after variables
- (3) Variables tree with all variables which can be mapped to current mapping object. The variable tree will be update automatically when the search field changes.

Adding Variables


There are 2 possibilities to add variables/constants

1. Add variable/constant with "Add" button.

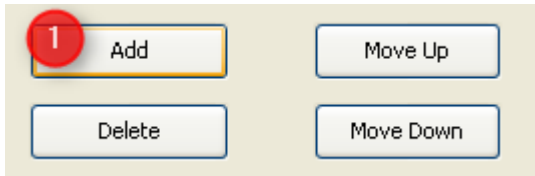

1a Add variable

By clicking on "Add" (1) a new dialog will be opened. In the dialog you can select a variable which is allowed to map to the current mapping object.

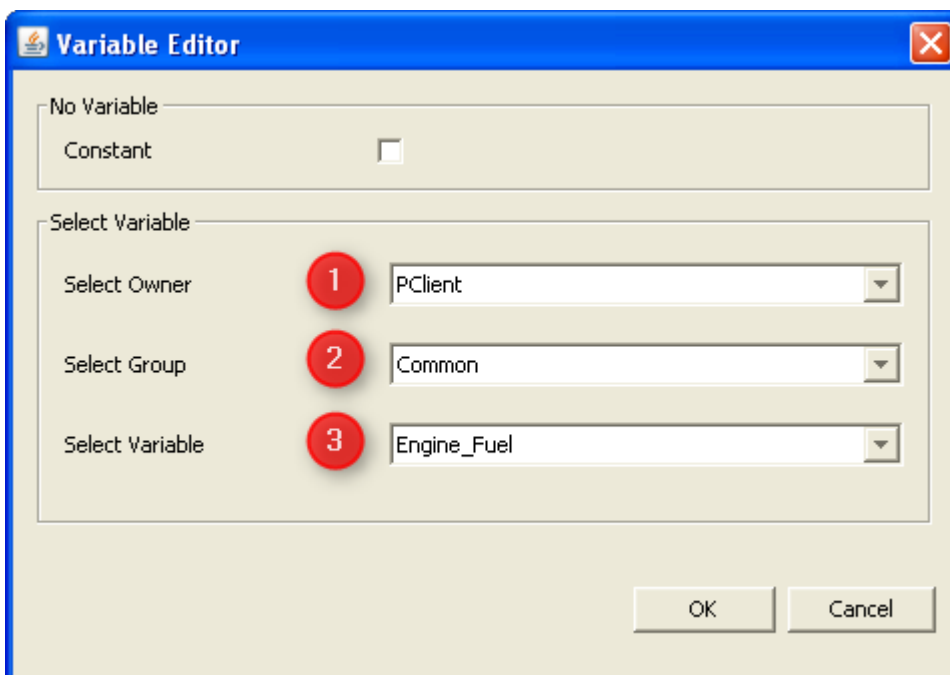

You can filter the variable in 2 categories:


- filter by "Owner" (1)
- filter by "Group" (2)

After changing the filter types the possible variables are shown in the last combo box "Variables" (3).

By clicking "OK" the selected variable will be added to the current mapping object.

1b. Add constant

By clicking on "Add" a new dialog will be opened.

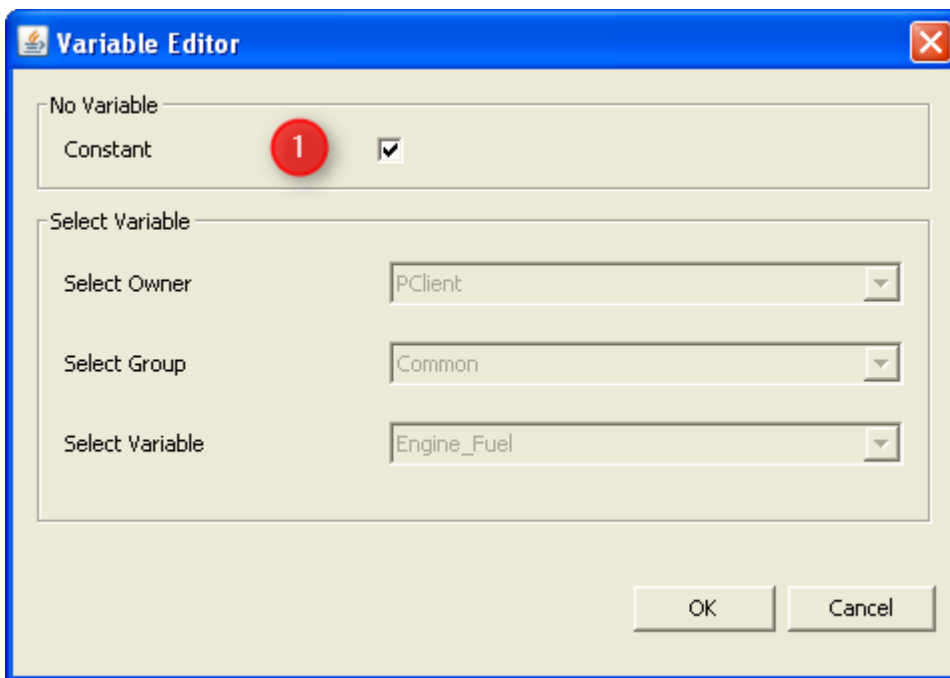

If you want to add a constant you have to select the check box **"Constant"** (1). All other fields will become disabled.

By clicking **"Add"** a constant will be added to the current mapping object.

Note 1:

If a variable is selected the new variable/constant will be added at the start bit of the selected variable. All other variables will be moved as much as the length of the added variable.

If no variable is selected the new variable will be added after the last mapped variable.

If there is not enough space for the original length of the variable the mapped length will be reduced.

If the mapping object is full mapped the add button will be disabled. When it is tried to drag and drop a variable from variable tree the variable will not be added to the mapping object.

2. Add variable from variable tree

2a Add variables via drag and drop from variable tree

A comfortable way for adding variables is to drag and drop them from the variable tree. All available variables will be shown in the tree sorted by groups.

To add a variable to the mapping object you can drag one and drop them at a cell of the table.

2b. Add constants via drag and drop from variable tree.

If you want to add a constant from variable tree you can select a constant form group "Constants" (only for CANFreestyle and J1939). For CANopen the group "Constants" is replaced with the group "Dummy Variables".


It works as same as for variables (see above **2a.**).

Note 2:

Constants are **not available** for **CANopen** mappings and **J1939 delimiter** mappings. The length of the constant can be changed by clicking on the constant at the **VCM table**. Afterwards you can update the length at the **VCM Configure Mapping table**. For more information about the **VCM Configure Mapping table** look [here](#)⁴²⁹.

Deleting variables

Like with adding a variable there are also several ways to delete a variable:

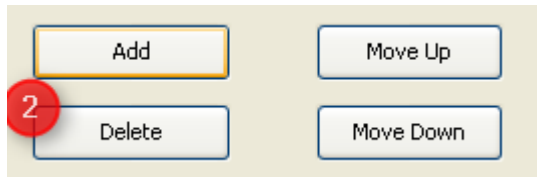**1a. Clicking "Delete" button**

The delete button is only enabled if at least one variable is selected at the **VCM table**. All selected variables will be deleted when **"Delete"** is pressed. The position of other mapped variables will not change (**except for CANopen**).

1b. Delete variables via drag and drop


A second way to delete variables is to drag variables and drop them outside of the table.

1c. Delete variables with press of "Del" key

Another way to delete variables is to press the **"Del"** key of the keyboard. Only the selected variables will be removed.

1d. Delete variables via context menu

A variable can be removed by clicking with right mouse button on the variable and then choosing **"Delete"**.

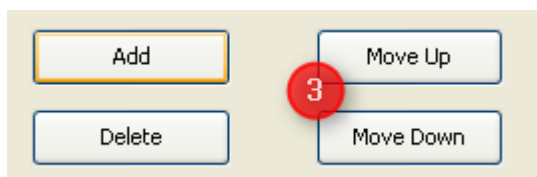Moving variables in the table**1. Move variable up/down with buttons**

Selected variables can be moved in the **VCM table** via the buttons **"Move Up"** or **"Move Down"**.

If a variable is moved down and behind the current variable is another variable, the variables switch their positions.

If there is no other variable behind the current selected one, the variables moved by 1 bit.

For moving up it works the same way.

2. Trigger move up/down via mouse wheel

The move function can also be triggered with the mouse wheel. If you want to move up or down selected variables, you have to press the **left "Ctrl"** key of the keyboard together with **mouse wheel up** or **down**.


Note:

If the current variable starts at bit 1. The button **"Move Up"** is disabled.

If the mapping object is **full mapped** and the last variable is selected the button **"Move Down"** is disabled.

If the **last bit** of mapping is mapped (e.g. bit 64 for CANFreestyle mapping) the mapping object is **full mapped**.

Variable tree

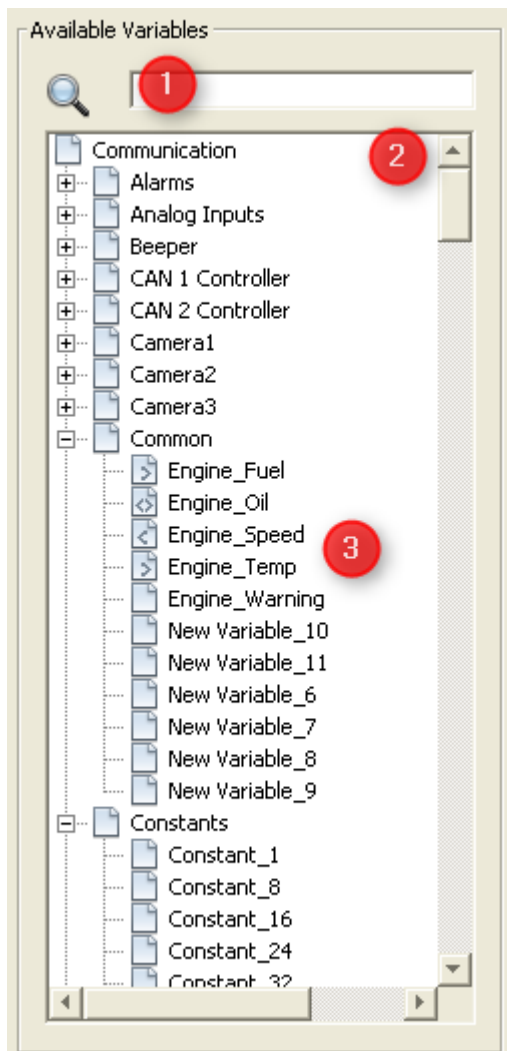

1. Structure

The variable tree contains all variables which can be mapped for the current mapping object.

At the searchfield **(1)** you can search after variables by their

- names
- groups
- owners
- index
- subindex

The variable tree **(2)** will be updated in real time after the first input at the search field. Only variables which hit the search text will be shown.

To add a variable to the VCM table drag a variable **(3)** and move it to the VCM table.

 
After dropping the variable, it will be visible at the table.

2. Variable icons

With the help of the variable icons it can be seen if the variable is already mapped in one of the mappings of the current protocol.

There are 4 icons:

1. Variable is not mapped in any mapping

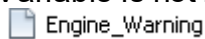


2. Variables is mapped in at least one "receive" mapping



2. Variables is mapped in at least one "transmit" mapping



 2. Variables is mapped in at least one "receive" and one "transmit" mapping

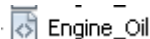

3. Variable tool tip

If the mouse is moved to a variable at the variable tree a tool tip will be shown with the useful information

3a. Information for all variables

- Variable Name
- Group
- Index
- SubIndex
- Access Type
- Data Type
- Length
- Owner

3b. Information for mapped variables

If a variable is mapped, the mapping objects will be shown also at the tooltip.


In this example it is displayed that the variable "Engine Oil" is mapped at one

- Receive Mapping => "Rx: Engine_Rx"

and it is mapped at one

- Transmit Mapping => "Tx: Engine_Tx"

4 Variable tree context menu

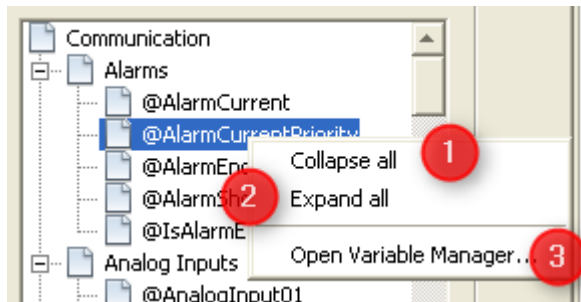

There are 3 options at the context menu of the variable tree

(1) Collapse all

Only the groups of the variable will be shown

(2) Expand all

All groups with all variables will be shown

(3) Open Variable Manager...

The variable manager will be opened and the selected variable of the **variable tree** will be shown. At this dialog you can edit the variable.

If you want to learn more about the "**Variable Manager**" dialog please have a look [here](#).

Note:

If a variable is opened at the variable manager which is already mapped, the variable is not complete editable. Properties like "Name", "Index", "SubIndex", "Data Type" and "Length" are **not editable**.

Once the variable is not mapped anymore, the variable will complete **editable again**.

VCM Table

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Engine_Fuel 8	7	6	5	4	3	2	Engine_Fuel 1
Byte 2	Constant_2 16	15	14	Constant_2 13	Constant 12	11	10	Constant 9
Byte 3	24	23	22	21	20	19	18	Engine_Oil 17
Byte 4	Engine_Oil 32	31	30	29	28	27	26	25
Byte 5	Engine_Speed 40	39	38	37	36	35	34	Engine_Speed 33
Byte 6	48	47	46	45	44	43	42	Engine_Temp 41
Byte 7	Engine_Temp 56	55	54	53	52	51	50	49
Byte 8	64	63	62	61	60	59	58	Engine_Warni 57

Overview

- The column titles shows the bit number of the current byte and the row titles shows the appropriate byte.
- The table starts in the upper right corner with bit index 1, which represents the first bit of a mapping.
- At the end and start bit the name of mapped variable / constant is shown.
- Each mapped variable has its own color. Altogether there are 16 colors for variables and 4 grey colors for constants.
- Each variable (when selected) can be moved or removed at the table.
- Selected variables are shown with a bold black border and the color is lightly highlighted.
- It is possible to select several mapped variables by selecting the first one and then press "Shift" and selecting afterwards another variable. All variables between are selected too.
- Selected variables are a variable block which can only be moved together.
- As long as you stay at the view "Visual CAN Mapping" all add, remove, move steps and property changes can be reverted. If you want to undo the last step you can press "**Ctrl + z**" or "**Ctrl + y**" to redo the last step.

Moving variables

To move a variable via drag and drop, you can drag the first bit of the of a variable ("**Bit 1**" "**Engine_Speed**") and then move the mouse to "**Bit 9**")
If you drop the variable on "**Bit 9**" the variable "**Engine Speed**" and the "**Constant**" switch their positions.

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Engine_Speed 8	7	6	5	4	3	2	Engine_Speed 1
Byte 2	Constant 16	15	14	13	12	11	10	Constant 9
Byte 3	24	23	22	21	20	19	18	Engine_Temp 17
Byte 4	Engine_Temp 32	31	30	29	28	27	26	25
Byte 5								Engine_Oil

After dropping the variable **"Engine_Speed"** at **"Bit 9"** they switch the position

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Constant 8	7	6	5	4	3	2	Constant 1
Byte 2	Engine_Speed 16	15	14	13	12	11	10	Engine_Speed 9
Byte 3	24	23	22	21	20	19	18	Engine_Temp 17
Byte 4	Engine_Temp 32	31	30	29	28	27	26	25

Now you can move the variable **"Engine_Speed"** to **"Bit 17"**. If you try this you will get following picture (1):

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Constant 8	7	6	5	4	3	2	Constant 1
Byte 2	16	15	14	13	12	11	10	9
Byte 3	Engine_Speed 24	23	22	21	20	19	18	Engine_Speed 17
Byte 4	Engine_Temp 32	31	30	29	28	27	26	25

The variables **"Engine_Speed"** and **"Engine_Temp"** can not switch their positions, because variable **"Engine_Temp"** has a length of 16 bits but the gap (Bit 9 - Bit 16) is only 8 bits.

For that reason the moved variable **"Engine_Speed"** is turned to red color, which means that the current position of the variable is not valid. If you try to drop the variable at **"Bit 17"**, the variable will go back to its last valid position at **"Bit 9"**.

If you drop the variable **"Engine Speed"** at **"Bit 25"**, **"Engine Speed"** and **"Engine_Temp"** will switch their positions (1).

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Constant 8	7	6	5	4	3	2	Constant 1
Byte 2	16	15	14	13	12	11	10	Engine_Temp 9
Byte 3	Engine_Temp 24	23	22	21	20	19	18	17
Byte 4	Engine_Speed 32	31	30	29	28	27	26	Engine_Speed 25

Note:

Every time if the moved variable(s) can not be dropped on the current mouse position the variables will be turned to red color to demonstrate that the current position is invalid. The variable(s) can only be moved if the gap is big enough to switch the variables. If you want to move the variables e.g. to add a gap you have to select all variables and move them together.


Note:

It is possible with "excessive" dragging and dropping to generate an invalid variable constellation, where variables are located on top of each other.

When that happens, an error message is displayed in the VCM dialog and the OK button is grayed out until the invalid situation is resolved.


Deleting variables

If you want to delete some variables from the **VCM table**, you can select **(1)** them and then drop them outside of the table.

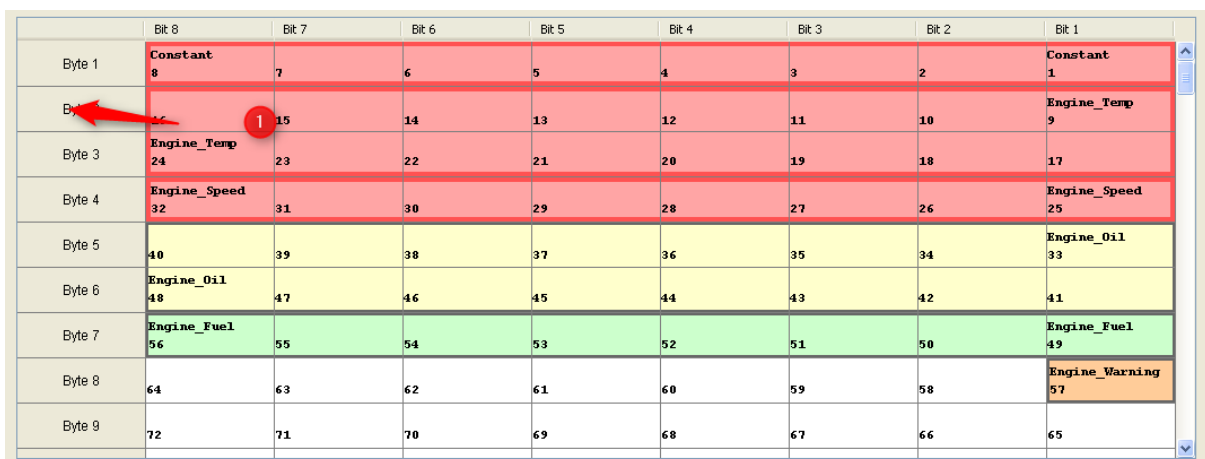

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Constant 8	7	6	5	4	3	2	Constant 1
Byte 2	16	15	14	13	12	11	10	Engine_Temp 9
Byte 3	Engine_Temp 24	23	22	21	20	19	18	17
Byte 4	Engine_Speed 32	31	30	29	28	27	26	Engine_Speed 25
Byte 5	40	39	38	37	36	35	34	Engine_Oil 33
Byte 6	Engine_Oil 48	47	46	45	44	43	42	41
Byte 7	Engine_Fuel 56	55	54	53	52	51	50	Engine_Fuel 49
Byte 8	64	63	62	61	60	59	58	Engine_Warning 57
Byte 9	72	71	70	69	68	67	66	65


The variables will turn red if they are dragged out of the table. If you drop them outside they will be deleted.

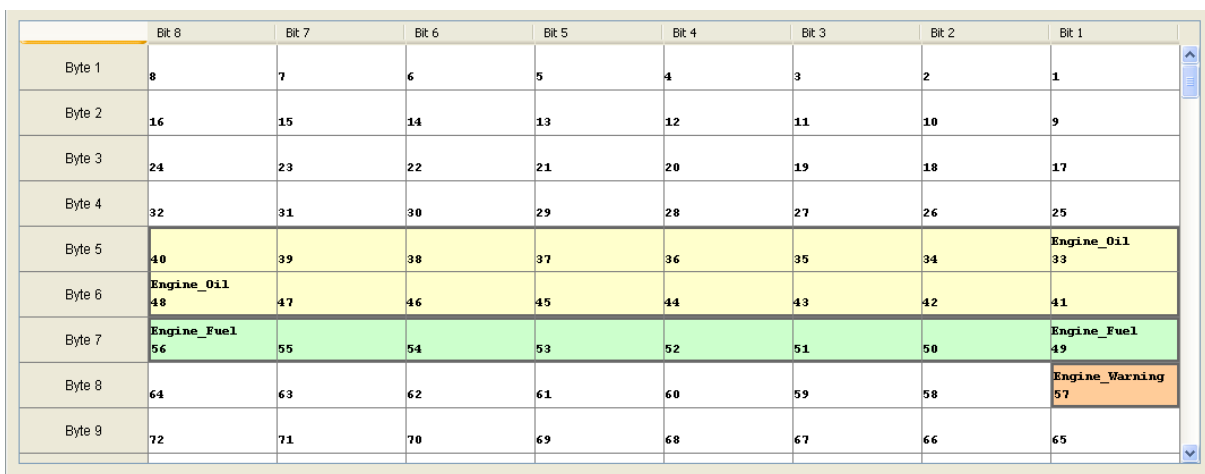

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	8	7	6	5	4	3	2	1
Byte 2	16	15	14	13	12	11	10	9
Byte 3	24	23	22	21	20	19	18	17
Byte 4	32	31	30	29	28	27	26	25
Byte 5	40	39	38	37	36	35	34	Engine_Oil 33
Byte 6	Engine_Oil 48	47	46	45	44	43	42	41
Byte 7	Engine_Fuel 56	55	54	53	52	51	50	Engine_Fuel 49
Byte 8	64	63	62	61	60	59	58	Engine_Warning 57
Byte 9	72	71	70	69	68	67	66	65

The position of the other variables will not be changed after the deleting. (Except for CANopen (**CANopen does not allow gaps**): For CANopen the other variables will be moved to the beginning of the table.

VCM table context menu

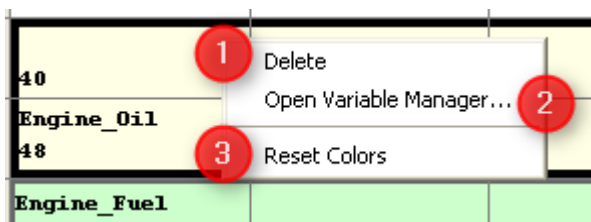

There are 3 options at the context menu of the VCM table

(1) Delete

The selected variable(s) will be deleted.

(2) Open Variable Manager...

The variable manager will be opened and the selected variable of the variable tree will be shown. At this dialog you can edit the variable.

If you want to learn more about the "Variable Manager" dialog please have a look [here](#).

(3) Reset Colors

Sometimes it can happen that variables have the same color. So it is difficult to differ them.

In that case the colors can be recalculated and all variables get different colors again.

Note:

The colors of mapped variables will **not** be **stored**.

If the tool is closed and started again, it could be that colors of mapped variables changes.

VCM table tool tip

If the mouse hovers over a variable at the variable tree, a tool tip will be shown with the useful information

Variable Name:	Engine_Oil

Group:	Common
Length:	16
Mask:	0xffff
Offset:	0.0
Shift X Bits:	0
Scale:	1.0
Offset2:	0.0

Bit Index:	40

Information for all mapped variables

- Variable Name
- Group
- Length (Mapped Length)
- Mask

- Offset
- Shift X Bits
- Scale
- Offset 2

Attention symbol of mapped variables

If a variable is mapped to a mapping object and afterwards the length is reduced, the mapped variable gets an attention symbol ((1,2) 🚩).

This should help to identify mapped variables with a wrong length. If everything is fine, the attention icon can be ignored.

	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1
Byte 1	Engine_Fuel 8	7	6	5	4	3	2	Engine_Fuel 1
Byte 2	Constant 16	15	14	13	12	11	10	Constant 9
Byte 3	Engine_Speed 24	23	22	21	20	19	18	Engine_Speed 17
Byte 4	🚩 Engine_Temp 32	31	30	29	28	27	26	🚩 Engine_Temp 25
Byte 5	40	39	38	37	<div> Variable Name: Engine_Temp Group: Common Length: 8 Mask: 0xff Offset: 0.0 Shift X Bits: 0 Scale: 1.0 Offset2: 0.0 Bit Index: 29 Attention: Mapped length : 8 bit Original length : 16 bit </div>			
Byte 6	48	47	46	45				
Byte 7	56	55	54	53				
Byte 8	64	63	62	61				

At the tool tip (3) you can see the **original length (16 bit)** and the **mapped length (8 bit)**.

VCM Configure Mapping Table

To change a property of a variable the "Configure Selected Variable Mapping" ((2) **VCM Configure Mapping Table**) table can be used.

The **VCM Configure Mapping Table** is only filled if only **one variable** is selected (1). If no variable or several variables are selected the **VCM Configure Mapping Table** keeps empty.

You can easily change the values at the **VCM Configure Mapping Table** like at the view "**Configure Mapping**".

If the "**Byte Bit Position**" (2) is changed the **VCM table** view will updated in real time. The same happens if the "**Length**" is updated.

It is also possible to make a current variable to a constant or change the variable.

For more information about the fields "**Mask**", "**Offset1**", ... please have a look at the appropriate [protocols](#) ³⁹⁹.

1

Byte 7	Engine_Fuel 56	55	54	53	52	51	50	Engine_Fuel 49
Byte 8	64	63	62	61	60	59	58	57
Byte 9	72	71	70	69	68	67	66	Engine_Warning 65

Bit index: 67

2

Configure Selected Variable Mapping

Byte Bit Position	Length	Is Constant	Constant Value	Group	Variable	Mask	Offset1	Shift X Bits	Scale	Offset2
7:1	8	<input type="checkbox"/>	0x01	Common	Engine_Fuel	0xFF	0.0	0	1.0	0.0




Object Reference

6 Object Reference

The design tool provides various objects that can be used to design a project. We can divide the objects in two main categories: General (or tree) objects and palette objects.

General Objects

The general objects are the "root" objects and can be found in the project tree. The following general objects are available:

- Page
- [Alarm](#)  476
- Virtual Keyboard
- [Softkey](#)  485
- [Softkey Frame](#)  483

Palette Objects

Palette objects are "child" objects that can be dragged from a palette into root objects or other palette objects to create object hierarchy.

The palette objects contain again two categories: Containers and the objects that are to be placed inside a container:

Container Objects




[Frame](#)  508



[Container](#)  507

Common Controls

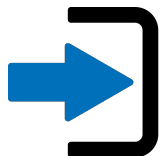


[Button](#)  504



[String Field](#)  548



[Numeric Field](#)  536



[Picture Graphic](#)  537



[Table](#) 



[List](#) 

Measurement Controls




[Meter](#) 




[Gauge](#) 




[Gauge](#)
[270](#) 




[Gauge](#)
[180](#) 

 


[Gauge](#)
[90](#) 




[Arched
Bargrap
h](#) 

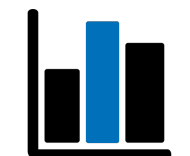



[Linear
Bargrap
h](#) 



 [Graph](#) 

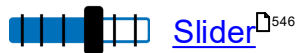

Lamps and Switches

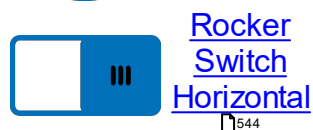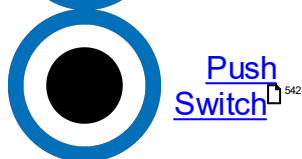

Special Controls



The basics - Create a page and add objects to it

After creating a project, one page will be automatically created. To create a new page, do a right click on the **Pages** node in the project tree and select **New Page**.

To open a page double click on the page in the project tree. The page will then open in the designer area.

To add objects to a page, a frame has to be added to the page. To do that drag a frame from the Palette's Container section to the page in the designer area.

Note: Only frames can be added to pages directly. All other objects can only be dragged in a frame.

After that, any other object from the palette can be dragged to the frame.

Note: Objects can also be dragged and dropped to the objects in the project tree.

Properties: Change behavior and Look & Feel

After objects have been added, they can be customized. Customization happens by changing the [object's properties](#) ⁴⁴⁸.

There are a lot of properties that are shared by a lot of object types and there are object specific properties.

A list of common properties can be found [here](#)⁴⁴⁸.

To change behavior of an object, it is possible to configure actions for certain events. See [here](#)⁴⁶³ for a list of events and actions.

For object specific objects visit the links to each object above.

6.1 Common Object Properties

Here you can find a list of all properties. A lot of the properties are shared between objects.

For object specific properties please refer to the [linked object descriptions](#)⁴⁴⁸.

Some of the default values may differ between the different object themes.

General properties for all objects

These properties are common for all objects (see exceptions):

ID

Every object in a project has a unique ID. The ID is automatically generated and can not be changed.

The ID is only important if a property of an object shall be changed or read via [JavaScript](#)⁵⁵⁹.

Type ID

The Type ID is just a numeric representation of the object type. It can not be changed.

Object Type	Type ID
Page	1
Alarm	2
Container	3
Softkey Frame	4
Softkey	5
Button	6
String Field	8
Numeric Field	9
List	10
Meter	17
Linear Bargraph	18
Arched Bargraph	19
Picture Graphic	20
Frame	256
Table	258
Virtual Keyboard	400
2D Graph	259
Multimedia Player	261
Gauge	262
Slider	263

Sub Type ID

The Type ID is a numeric representation of the object sub type. It can not be changed. The sub type ID is only existent for objects belonging to one parent Type ID.

Object Type	Type ID	Sub Type ID
Button	6	-1
Power Switch		0
Push Switch		1
Rocker Switch		3
Lamp		5
Gauge	262	-1
Gauge 270		0
Gauge 180		1
Gauge 90		2

Name

A string containing the name of an object. It is automatically created but it is strongly recommended that the name should be changed to match the purpose of the object. This makes the content of the project more clear and helps to find objects better. The object name is by default not used on the device (although it can be read by JavaScript).

Default value: Automatically generated name for the respective object type followed by a number

Possible values: Any string

Objects can be renamed in the project tree by selecting them and pressing F2, or clicking on them again after selecting them.

X Location

The X location of the object relative to it's parent object. The position of an object can be changed with this property.

Not applicable to the page, alarm and virtual keyboard objects since their position is always at X = 0 and Y = 0

Default value: Position of the object where it was dropped on parent object in the designer area or 0 when dropped to parent object in object tree.

Possible values:

- Minimum:
 - - object width
 - exceptions:
 - objects that contain other objects (Frame, Container, Button, List): They can't be moved out of it's parent.
 - Softkey Frame top or bottom. X is always 0.
 - Softkey. Fixed position inside a softkey frame
- Maximum:
 - parent width
 - exceptions:
 - objects that contain other objects (Frame, Container, Button, List): They can't be moved out of it's parent.
 - Softkey Frame top or bottom. X is always 0.
 - Softkey. Fixed position inside a softkey frame

Y Location

The Y location of the object relative to its parent object. The position of an object can be changed with this property.

Not applicable to the page, alarm and virtual keyboard objects since their position is always at $X = 0$ and $Y = 0$

Default value: Position of the object where it was dropped on parent object in the designer area or 0 when dropped to parent object in object tree.

Possible values:

- Minimum:
 - - object height
 - exceptions:
 - objects that contain other objects (Frame, Container, Button, List): They can't be moved out of its parent.
 - Softkey Frame left or right. Y is always 0.
 - Softkey. Fixed position inside a softkey frame
- Maximum:
 - parent height
 - exceptions:
 - objects that contain other objects (Frame, Container, Button, List): They can't be moved out of its parent.
 - Softkey Frame left or right. Y is always 0.
 - Softkey. Fixed position inside a softkey frame

Width

The width of an object. The width can be changed for any object except for pages, alarms, virtual keyboards, softkeys (always same as softkey frame width in a left or right softkey frame) and top or bottom softkey frames.

The width of a meter is always the same as its height (always square).

Default value: object type dependent

Possible values:

- 0 ... 2560 pixel
- 0 ... half page width for left or right softkey frames

Height

The height of an object. The height can be changed for any object except for pages, alarms, virtual keyboards, softkeys (always same as softkey frame height in a top or bottom softkey frame) and left or right softkey frames.

The height of a meter is always the same as its width (always square).

Default value: object type dependent

Possible values:

- 0 ... 2560 pixel
- The height of a List object can only be set with its property **Item Height**
- 0 ... half page height for a top or bottom softkey frame

Rotation Angle

The rotation angle of the object.

Default value: 0

Possible values:

- -360 .. 360 pixel

Dependency

An object can either be language or unit dependent or not at all.

The following objects do NOT support dependency: Alarm, Button, Container, Frame, List, Page, Table, Virtual Keyboard.

For more about language dependency see [here](#)¹⁰³.

For more about unit dependency see [here](#)¹⁰³.

Unit Group

If an object's dependency (see above) is set to Unit, the drop down box for Unit Group is enabled. The type of unit that the object represents can then be selected.

For more about units see [here](#)¹⁰³.

Default Value: Force units

Possible Values:

- Force units
- Distance units
- Mass
- Volume
- Area
- Date format
- Temperature
- Pressure
- Units system
- Time format

Variable References

For most of the objects one or more references to a variable can be created. The object will then show the value of the variable at runtime (or shows a invalid state if the referenced variable is invalid) or the max or min value of a DDO can be adjusted with variables. See below for a description of the possible Variable Reference properties.

Variable Reference

The Variable Reference property is used to reference to a variable that shall deliver the value of the selected object.

A integer variable can be assigned as variable reference to the following objects:

- Button (value 0 for button release, any other value for button press)
- Softkey (value 0 for softkey release, any other value for softkey press)
- Arched Bargraph (fill the bargraph or move the value line)
- Linear Bargraph (fill the bargraph or move the value line)
- Meter (move the needle)
- Numeric Field (show the value as a number, see object specific properties for how it can be formatted)
- Table (scroll the table)
- List (select index to be shown)

A string variable can only be assigned to a String Field object.

All other objects do not support variable references.

Default value: None

Possible Values: Either any integer or string variable depending on object type

Min Value Variable Reference

When selecting a variable for this property, the value of the variable controls the Min Value of that object.

This property is supported by the following objects:

- Arched Bargraph
- Linear Bargraph
- Meter
- Numeric Field

Default value: None

Possible Values: Any integer variable

The Absolute Min Value can also be changed through the [JavaScript function setProperty](#).⁵⁸⁷

Max Value Variable Reference

When selecting a variable for this property, the value of the variable controls the Max Value of that object.

This property is supported by the following objects:

- Arched Bargraph
- Linear Bargraph
- Meter
- Numeric Field

Default value: None

Possible Values: Any integer variable

The Absolute Max Value can also be changed through the [JavaScript function setProperty](#).⁵⁸⁷

Target Value Variable Reference

When selecting a variable for this property, the value of the variable controls the Target Value of that object.

This property is supported by the following objects:

- Arched Bargraph
- Linear Bargraph

Default value: None

Possible Values: Any integer variable

Bit Mask

With this property a Bit Mask can be applied to the incoming variable value. This makes it possible to only pass certain bits from the variable's value to the object.

For example: A 16Bit variable is referenced to the object but only the value 0 or 1 from the last bit is of interest for the object. In this case a mask of 0x1 can be set, if the last 4Bits shall be used, the mask 0xf can be set.

When changing the property by clicking on the ... button besides the bit mask value, a dialog will appear that makes it easy to set the mask. The number of bits and their position can be chosen in that dialog.

Define Bit mask of the Variable attached to this Object

☐ No Bitmask

Choose number of bits: Available value range:

Bit Mask

MSB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	LSB							

OK Cancel

Default value: 0xffffffff (no bit mask)

Possible values: 0x1 ... 0xffffffff

Skin Properties

The Skin Properties influence the look of the objects. Most of these properties are shared for almost all objects. The one exception is the Container object. It is not visible and therefore has no Skin Properties.

Background Color (Theme dependent)

As the name of this property implies, the background color of the selected object can be changed.

Any 24Bit RGB color can be chosen in the color picker dialog that pops up when clicking the ... button besides the color values. It is also possible to enter the three values for red, green and blue directly without using the color picker (e.g. 255,0,0 for full red).

Default value: Object type dependent

Possible values: any 24Bit RGB color

Note: If you choose a (partly) transparent background image (see below), the background color will be visible in the transparent parts of the background image. If you don't want to see the background color, enable property Transparent (see below).

Background Image (Theme dependent)

A background image can be set for an object using this property.

Any supported image type can be selected in the image chooser dialog that pops up when clicking the ... button of the property.

A chosen image will be automatically scaled to the size of the object and converted into the lossless png format (except for SVG image types, they will not be changed).

Default value: no image

Possible values: any image in the supported format (BMP, JPEG, PNG, SVG)

Note: If you choose a (partly) transparent background image, the background color (see above) will be visible in the transparent parts of the background image. If you don't want to see the background color, enable property Transparent (see below).

Draw Border (Theme dependent)

With this property the drawing of the border of an object can be enabled or disabled. The look of the border can be changed with the other border properties below.

Note: If the object is part of the navigation (e.g. an input), the drawing of the border should be enabled so that the user can distinguish between being selected or open for input.

Default value: enabled

Possible values: enabled or disabled

Border Width (Theme dependent)

The width of the border of the object can be set with this property. See also properties Border Image and Border State properties for how to define the look of the border.

Note: If you don't want any border, disable it with property Draw Border

Default value: 3

Possible values: 1 ... 15

Border Image (Theme dependent)

It is possible to display a border image for an object. However, the border profile will be painted over the border image. Be sure to check the property Border Width and the border profile (see above) so that the border has the desired size and is still visible with the border profile.

Default value: no image

Possible values: any image in the supported format (BMP, JPEG, PNG, SVG)

Border State

Using this property a preview of the different Border Profiles can be activated. This property has no influence at runtime since the different border profiles are chosen according to object's navigation state at runtime.

Default value: Enabled Without Focus


Possible values:

- Open For Input
- Enabled With Focus
- Enabled Without Focus
- Disabled

Border Profile

When changing this property the border profile editor will pop up. In this dialog it is possible to define a border profile for each navigation state of the object. Clicking on the ... button besides each state, the editor for the border profile itself pops up.

A border profile is a sequence of lines that are drawn the object. Each line can have a different color. There can be up to 15 lines (see property Border Width above) in each profile.

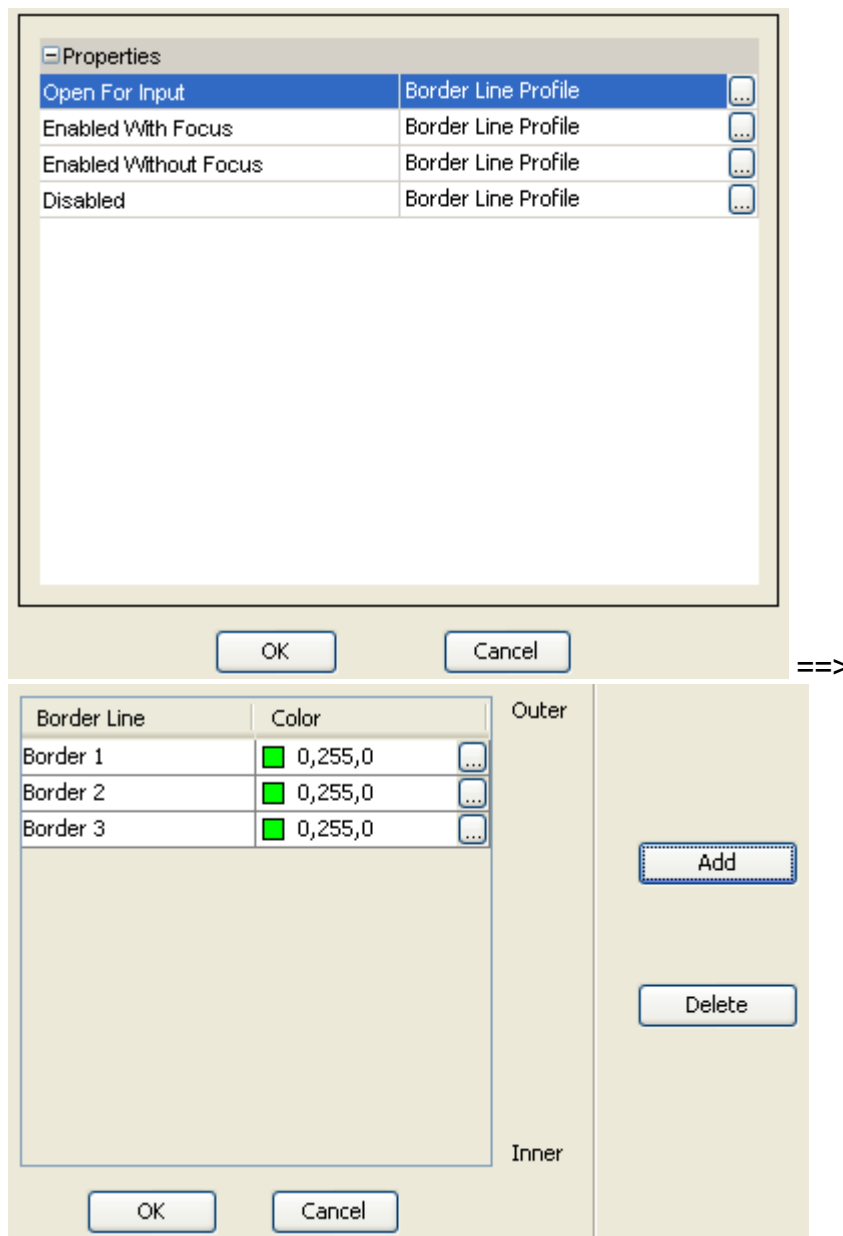

Transparent Border Color

With the Transparent Border Color it is possible to make a border profile of a certain state or single lines of a border profile invisible.

A relatively common use case is: Make the color that is used in the state Enabled Without Focus the same as the transparent border color. Like this the object will only have a visible border if it has focus or is open for input.

Default value: Depending on the selected theme when creating a project. It's blue for the modern themes, black for classic theme. Change the default transparent border color for all objects of a project in the [Project Properties](#) ⁸⁹.

Possible values: any 24Bit RGB color

Transparent (Theme dependent)

The Transparent property can be used to make the background of an object invisible. If the property is disabled, the Background Color will be drawn as the background of the object. If the property is enabled, no background color will be drawn.

Note: If a Background Image is assigned, it will be shown also if the transparent property is enabled. This property only affects the background color.

Known Issue: Currently this property has no effect on Gauge objects if the property Draw Boundary Bar is activated.

Default value: disabled

Possible values: enabled or disabled

Corner Radius (Theme dependent)

The corner radius property can be used to give Numeric Fields and String Fields a rounded corner. With a value of 0 the objects will be rectangular. With a value of 1000 the maximum roundness is set.

Default value: 50

Possible values: 0 - 1000

Please note that even though the objects don't have a rectangular shape anymore, the objects themselves are still rectangular, and so are the borders for the objects.

Visibility

The visibility of an object can be configured with the visibility properties. Objects can be made visible or invisible during runtime.

For more information about visibility see [here](#)⁶⁴¹.

Visibility

Enable or disable visibility for the selected object.

Default value: Disabled

Possible values: Enabled or disabled

Visibility Bit

With this property it can be defined to which bit of which visibility variable this object listens or, alternatively, which variable should be used as a visibility switch.

For more information see [here](#)⁶⁴¹.

Default value: Value not set

Possible values: A configured visibility bit of a visibility variable or a variable name.

Input Configuration

Set As Input

Setting the Set As Input attribute to enabled makes an object editable by the user. How the object reacts to inputs can then be configured in the other input properties below.

This property is only available for objects that can reference a variable. It is not available for Page, Frame, Container, Virtual Keyboard, Softkey Frame, Softkey.

Default value:

- Enabled for button objects
- Disabled for all other objects


Possible values: Enabled or disabled

Connect To Encoder

An object can directly connected to the encoder. This means that the user does not need to select the object and make it open for input.

The consequence of enabling this property is, that this object is the only input object on the current page.

The following dialog will pop up when enabling this property:

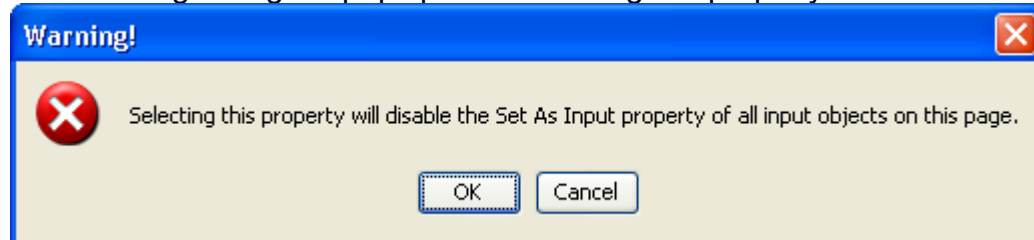

When clicking OK, the Set As Input property of all other objects on the current page will be disabled. Clicking cancel will keep the Connect To Encoder Property disabled.

Default value: Disabled

Possible values: Enabled or disabled

Note that the Send Value Directly property (see below) should also be enabled when enabling the Connect To Encoder property.

The property is only available if Set As Input for this object is enabled.

Send Value Directly

If Send Value Directly is enabled, the value that the user enters via encoder is transmitted to the variable (and possibly CAN bus) with every value change the user does.

If this property is disabled, the value will be set only after the user has finished editing (e.g. pressing encoder).

Send Value Directly could also be called *Live Editing*. Enable this if you want to have every value change by the user be reflected in an action (e.g. setting a value that's result can directly be seen, e.g. moving something physically at the vehicle, changing display backlight intensity, etc.). Disable the property if you are only interested in the final value that the user sets.

Default value: Disabled

Possible values: Enabled or disabled.

This property is only available for objects that work with integer values.

The property is only available if Set As Input for this object is enabled.

Encoder Movement

There are two options available:

- Linear:
Every encoder click results in a value change of 1 (or -1 depending on direction)
- Dynamic
Based on the speed of the encoder turns, the value increment or decrement is dynamically accelerated.

Use dynamic encoder movement if a very high value range is set for the object.

The amount of dynamic encoder acceleration can be configured with the **Value Change Factor** property (see below).

Default value: Linear

Possible values: Linear or Dynamic

The property is only available if Set As Input for this object is enabled.

Value Change Factor

This property only has influence if the Encoder Movement property (see above) is set to Dynamic. The Value Change Factor controls the amount of acceleration for dynamic encoder movement.

The higher the value, the more the value change by encoder is accelerated.

Rule of thumb: The higher the value range of an object is, the higher the Value Change Factor should be set.

Note: When simulating the project with the PClient simulation on the development PC, you can test the effect of this property using the mouse wheel.

Default value: 1000

Possible values: 1 ... 32767

The property is only available if Set As Input for this object is enabled.

Input Character Attribute

This property is only available for the string field object. With the Input Character Attribute it can be defined what characters are available when the user edits the value of the string field.

It is possible to restrict the user input to certain characters defined in the selected Input Character Attribute.

How an Input Character Attribute can be defined can be seen [here](#)⁸¹.

If no Character Input Attribute is selected, the default ASCII character set will be available as input characters for the user.

Default value: None

Possible values: Any Input Character Attribute defined in the [project properties](#)⁸¹.

The property is only available if Set As Input for this object is enabled.

Inplace Editor

The Inplace Editor property is only available for String Field and Numeric Field objects.

With this property it can be chosen if the value of the object shall be changeable via encoder or by using a [virtual keyboard](#)⁴⁷⁹.

Default value: Encoder

Possible values: Encoder or Virtual Keyboard

The property is only available if Set As Input for this object is enabled.

Value Related

Except for **Preview Value**, all value related properties are only available for objects working with numeric values.

Absolute Max Value

As the name implies, the Absolute Max Value is the highest value that a user can set to an object (Max Value is not, see below).

This property is available only for Arched Bargraph, Linear Bargraph, Meter and Numeric Field objects.

Following rule applies: Absolute Max Value needs to be greater or equal to Max Value.

Default value: depends on object:

- Arched Bargraph and Meter: 360
- Linear Bargraph and Numeric Field: 100

Possible values: Anything greater or equal to Max Value but not more than 2147483647 (Absolute Min Value <= Min Value <= Max Value <= Absolute Max Value)

Color Above Maximum

This property defines the color of the object if the value of the object is greater than Max Value (see below).

Color Above Max Value is available for the following objects with the following appearance effect:

- Arched Bargraph: Fill color of the bargraph or value line color
- Linear Bargraph: Fill color of the bargraph or value line color
- Meter: Needle color
- Numeric Field: Color of the displayed number

Default value: object specific

Possible values: Any 24Bit RGB color

Max Value

The Max Value property is a threshold for doing the color change to **Color Above Maximum** when the value of the object is greater than the value of Max Value.

This property is available only for Arched Bargraph, Linear Bargraph, Meter and Numeric Field objects.

Default value: depends on object:

- Arched Bargraph and Meter: 300
- Linear Bargraph: 80
- Numeric Field: 90

Possible values: Any value greater than or equal to Min Value and less than or equal to Absolute Max Value (Absolute Min Value \leq Min Value \leq Max Value \leq Absolute Max Value)

Font Attribute Above Max Value (Theme dependent)

This property defines the Font Attribute that is used when the value of the object is above Max Value.

This property is only available for the Numeric Field object.

To learn more about Font Attribute Objects see [here](#)⁸¹.

Default value: Default_DejaVu Sans

Possible values: Any Font Attribute Object defined in [project properties](#)⁸¹.

Min Value

The Min Value property is a threshold for doing the color change to **Color Below Minimum** when the value of the object is less than the value of Min Value.

This property is available only for Arched Bargraph, Linear Bargraph, Meter and Numeric Field objects.

Default value: depends on object:

- Arched Bargraph, Linear Bargraph and Meter: 20
- Numeric Field: 10

Possible values: Any value greater than or equal to Absolute Min Value and less than or equal to Max Value (Absolute Min Value \leq Min Value \leq Max Value \leq Absolute Max Value)

Font Attribute Below Min Value (Theme dependent)

This property defines the Font Attribute that is used when the value of the object is below Min Value.

This property is only available for the Numeric Field object.

To learn more about Font Attribute Objects see [here](#)⁸¹.

Default value: Default_DejaVu Sans

Possible values: Any Font Attribute Object defined in [project properties](#)¹⁸¹.

Absolute Min Value

As the name implies, the Absolute Min Value is the lowest value that a user can set to an object (Min Value is not, see above).

This property is available only for Arched Bargraph, Linear Bargraph, Meter and Numeric Field objects.

Following rule applies: Absolute Max Value needs to be greater or equal to Max Value.

Default value: 0

Possible values: Anything less or equal to Min Value but not less than -2147483648
(Absolute Min Value \leq Min Value \leq Max Value \leq Absolute Max Value)

Color Below Minimum

This property defines the color of the object if the value of the object is less than Min Value (see below).

Color Below Min Value is available for the following objects with the following appearance effect:

- Arched Bargraph: Fill color of the bargraph or value line color
- Linear Bargraph: Fill color of the bargraph or value line color
- Meter: Needle color
- Numeric Field: Color of the displayed number

Default value: object specific

Possible values: Any 24Bit RGB color

Preview Value

With the Preview Value property, the value of the object in the designer area can be previewed. If no variable is referenced to the object, the Preview Value will also be the value that is displayed at the object at runtime.

The Preview Value property is available for all objects except for the button object (use Pressed State button property for preview).

Default Value: object specific

Possible values:

- String field: Any string that is shorter than Max String Length (characters)
- Integer objects: A value greater than or equal to Absolute Min Value and less than or equal to Absolute Max Value (Absolute Min Value \leq Preview Value \leq Absolute Max Value)

Target Value

The Target Value property is only available for Arched Bargraph and Linear Bargraph objects. If the Draw Target Line property for these objects is enabled, a line will be drawn at the Target Value position.

Default value: 80

Possible values: A value greater than or equal to Absolute Min Value and less than or equal to Absolute Max Value (Absolute Min Value \leq Target Value \leq Absolute Max Value)

Activate Low Pass Filter

With this property a low pass filter for the selected object can be activated. A low pass filter makes the displayed value changes more smooth and can reduce flickering of values.

To adjust the strength of the filter use the property Filter Factor (see below).

The formula for the low pass filter is:

$\text{CurrentValueToDisplay} = ((\text{oldValue} * \text{filterFactor}) + (\text{measuredValue} * (1000 - \text{filterFactor}))) / 1000$

This calculation is made in a relatively high frequency until `currentValueToDisplay` is equal to `measuredValue`.

Default value: Disabled

Possible values Enabled or disabled

This property is available only for Arched Bargraph, Linear Bargraph, Meter and Numeric Field objects.

Filter Factor

The Filter Factor property is responsible for controlling the strength of the low pass filter (see Activate Low Pass Filter above).

The higher the value is, the stronger the value changes will be filtered. Best way to find the best a good value for an object is to try and test some different values.

Default value: 500

Possible values: 0 (almost no filter) ... 1000 (very strong filter)

This property is available only for Arched Bargraph, Linear Bargraph, Meter and Numeric Field objects if the Activate Low Pass Filter property is enabled.

Step Width

The Step Width property can be used for rounding the value of a Numeric Field. It is considered both for input by the user and for displaying variable values.

If e.g. a step with of 10 is set, the user can only set values that are multiple of 10 (0, 10, 20, 30, etc.). Also the value of a referenced variable will be rounded (e.g. variable value: 7 => displayed value: 10, variable value: 42, displayed value: 40).

Default value: 1

Possible values: 1 ... 2147483647

Formatting

Font Attribute (Theme dependent)

A Font Attribute provides the size color and style (standard, bold, italic) of how a font shall be displayed. Font attributes can be created in the [project properties](#)⁸¹.

With the Font Attribute property one of the created Font Attribute Objects can be assigned to the selected object.

If the font of the object shall be changed use property Font (see below).

Default value: Default_DejaVu Serif

Possible values: Any Font Attribute object defined in [project properties](#)⁸¹.

This property is only available for Numeric Field, String Field and table objects.

Font

The font that shall be displayed in a Numeric Field, String Field or a Table can be selected using the Font property.

Note that the size and style of the font is controlled via the Font Attribute property (see above).

Default value:

- Numeric Field: DejaVu Sans
- String Field: DejaVu Serif

Possible values: Any pre defined or [imported font](#)⁸¹.

Horizontal Alignment

With the Horizontal Alignment property it can be controlled if the text is aligned left, right or centered.

Default value: Center

Possible values: Left, Center, Right

This property is only available for Numeric Field, String Field and Table object.

Vertical Alignment

With the Vertical Alignment property it can be controlled if the text is aligned on top, bottom or centered.

Default value: Center

Possible values: Top, Center, Bottom

This property is only available for Numeric Field, String Field and Table object.

Font Outlined

This property is deprecated and currently has no effect. It will be removed in a future release.

Object specific properties

Click the links below to view the description and properties of the object

[2D-Graph](#)  491

[Alarm](#)  476

[Arched Bargraph](#)  502

[Button](#)  504

[Container](#)  507

[Frame](#)  508

[Linear Bargraph](#)  516

[List](#)  517

[Meter](#)  521

[Numeric Field](#)  536

[Page](#)  475

[Picture Graphic](#)  537

[Softkey Frame](#)  483

[Softkey](#)  485

[String Field](#)  548

[Table](#)  550


[Virtual Keyboard](#) ⁴⁷⁹

6.2 Events and Actions

With events and the corresponding actions, dynamic behavior can be added to a project. Almost all objects support a certain set of events. For these events certain actions can be configured.

This chapter lists a description of all available events and actions. What event and what action is supported by an object, can be found in the documentation for that object.

To assign an action to the event of an object, select the *Events* tab on top of the property table of the selected object.

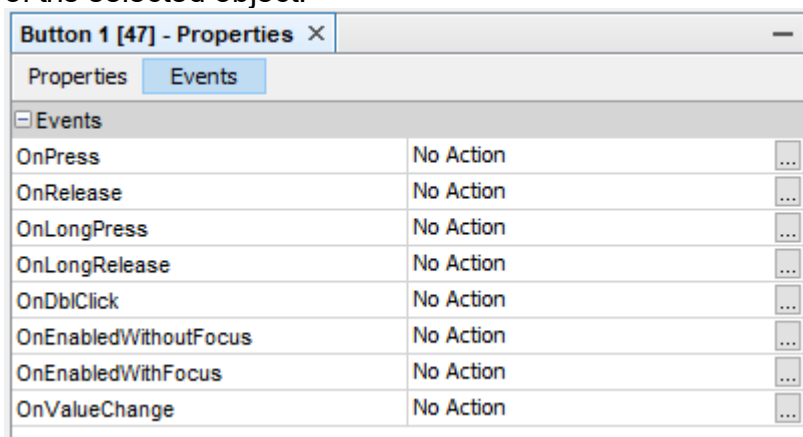

Button 1 [47] - Properties		
Properties Events		
[-] Events		
OnPress	No Action	...
OnRelease	No Action	...
OnLongPress	No Action	...
OnLongRelease	No Action	...
OnDbClick	No Action	...
OnEnabledWithoutFocus	No Action	...
OnEnabledWithFocus	No Action	...
OnValueChange	No Action	...

Then press the ... button of the event that shall be configured.

Note: Events that are specific to CAN protocols are explained in the protocol's manual chapter.

Note: There are additional special [navigation events](#) ⁴⁸⁶ that define the general behavior of the PClient.

Event Options

For some events a repeat period can be configured (e.g. OnProjektRepeat or OnPageRepeat).

Configure Events and Actions

Event Actions

Select Action: Execute Script

Warning: low repeat periods can lead to increased system load based on the complexity of the executed scripts. Make sure to carefully tests these settings on the target device.

Options

Properties	
Script File	No Script File
New Script File	...
Import Script File	...
Edit selected Script File	...
Execute on every Xth Event	1

Event Options

Event: OnProjektRepeat


Event Options:

Properties	
Periods (ms)	500
Audio Output	event.wav


OK Cancel

This period can be set as low as 10 ms! It is not guaranteed that the actions can be triggered exactly in the specified period, a slight deviation is possible (based on CPU load and other circumstances at runtime). Please test extensively. A value has to be entered in this field for the periodic execution to work.

If a device is equipped with an internal sound card (speaker and/or line-out), an audio file can be played back when certain events happen.

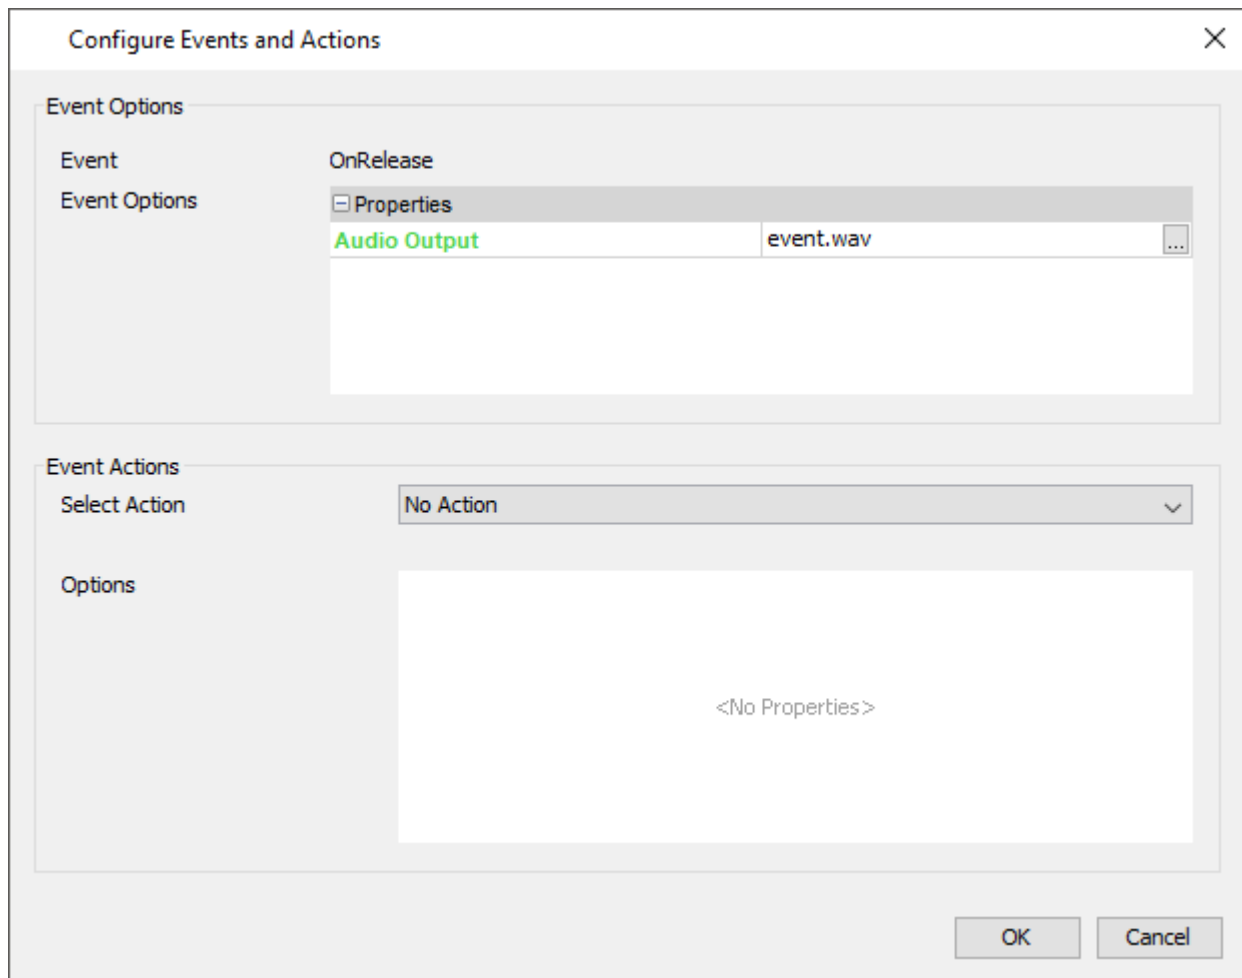

Audio Output

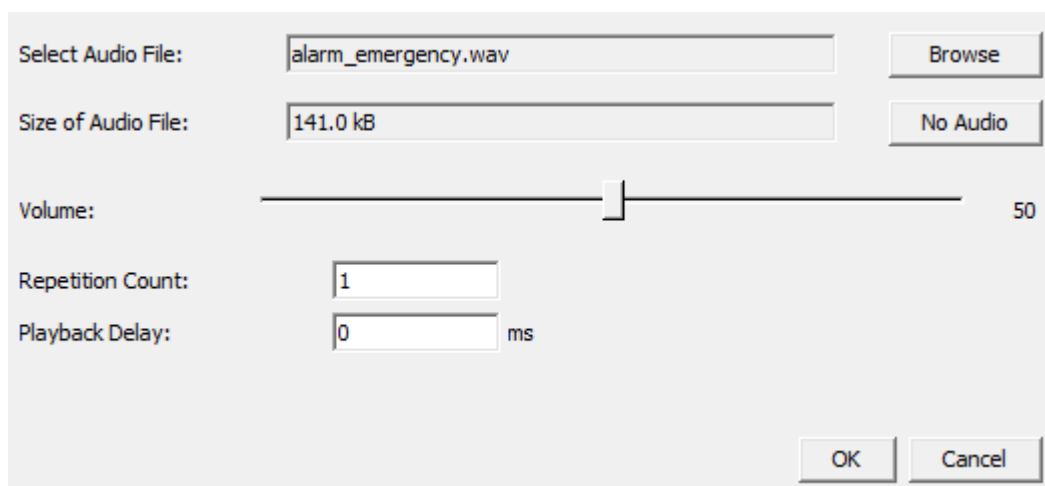

The Audio Output dialog allows to assign an audio file that will be played back when the event occurs.

The following elements of the dialog can be used for configuration:

- **Select Audio File:** Use the *Browse* button to select an audio file from the file system (There are different default audio files pre-configured for an event or alarms that can be directly used)
- **No Audio button:** Press this button if no audio shall be played for the event.
- **Size of Audio File:** This shows the size of the selected audio file

(very large files might add a delay before they are played and increase the size of the project package that needs to be transferred to the device)

- **Volume:** Select the desired volume with the slider. Note that the final volume is dependent on the values of the [beeper volume variables](#)¹⁸⁶.
- **Repetition Count:** How often the audio file shall be repeated can be configured here (1 means that the audio file is played once). Please note that the file is not saved if the repetition count is set to 0.
- **Playback Delay:** If a repetition count greater than 1 is defined (see above), a playback gap can be configured. Enter a time in milliseconds that defines the gap (pause) between each repetition.

The following audio codecs have been verified on the device:

- MPEG AAC Audio (mp4a) (usually the file extension is .m4a or .aac, but .mp4 also works, if there is no video stream)
- MPEG Audio layer 1/2/3 (mpga) (usually the file extension is .mp3)
- Vorbis Audio (vorb) (usually the file extension is .oga or .ogg)
- Raw wave files in different format (tested: PCM S16 LE (araw), PCM U8 (araw)) (usually the file extension is .wav)

Windows Media Audio (.wma) is currently **NOT** supported.

Media files that include a video stream do **NOT** work for these events. Please use a [Multimedia Player](#)⁵²⁵ for this.

Please note that the Audio Output settings are not saved if no event is configured for the according action.

Events

OnProjektInit

This event is only triggered once when the project is loaded before any other event.

Allowed actions:

- Execute Script

OnProjektInitFinished

This event is only triggered once when the loading of the project has finished.

Allowed actions:

- Execute Script

OnProjektExit

This event is only triggered once when the PClient is exited on the device. This will normally not happen during normal operation, only when updating the project on the device.

Allowed actions:

- Execute Script

OnProjektRepeat

This event is triggered repeatedly with a configurable period. This is the only repeat event that is triggered regardless of the active page (see OnPageRepeat).

Allowed Actions:

- Execute Script

OnPowerOn

This event is triggered as soon as the device enters the On (normal operation) state but only if it was in low power or sleep mode before (switch ignition on). If the device just did a cold boot, this event is not triggered.

Allowed actions:

- Execute Script
- Set Value

OnLowPower

This event is triggered as soon as the ignition is switched off and the device enters low power mode.

Allowed actions:

- Execute Script
- Set Value

OnSleep

This event is triggered as soon as the device awakes from sleep mode (not before going into sleep).

Allowed actions:

- Execute Script
- Set Value

OnPageInit

This event is triggered as soon as a new page is loaded.

Allowed actions:

- Execute Script

OnPageInitFinished

This event is triggered as soon as the loading of the new page is finished.

Allowed actions:

- Execute Script

OnPageExit

This event is triggered as soon as a page is left.

Allowed actions:

- Execute Script

OnPageRepeat

This event is periodically triggered when the page is loaded.

Allowed actions:

- Execute Script

OnPress

This event is triggered either if an object on screen is pressed via touchscreen or encoder or if a softkey is pressed.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value (Not for Frame object)
- Next Softkey Level (Softkey object only)
- Previous Softkey Level (Softkey object only)

- Navigate Up (Softkey and function key object only)
- Navigate Down (Softkey and function key object only)
- Navigate Confirm (Softkey and function key object only)
- Open PDF Reader (Not for Frame object)
- Set Media Player Command (only for devices that support the playback of audio / video)

OnRelease

This event is triggered either if an object on screen was pressed via touchscreen or if a softkey was pressed via physical keys and has now been released.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value (Not for Frame object)
- Next Softkey Level (Softkey object only)
- Previous Softkey Level (Softkey object only)
- Navigate Up (Softkey and function key object only)
- Navigate Down (Softkey and function key object only)
- Navigate Confirm (Softkey and function key object only)
- Open For Input (Softkey and Button object only)
- Open PDF Reader (Not for Frame object)
- Set Media Player Command (only for devices that support the playback of audio / video)

OnCancel

This event is triggered if an object on screen was pressed via touchscreen (including softkey regions) and then the finger swiped away from it and then releases.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value (Not for Frame object)
- Next Softkey Level (Softkey object only)
- Previous Softkey Level (Softkey object only)
- Navigate Up (Softkey and function key object only)
- Navigate Down (Softkey and function key object only)
- Navigate Confirm (Softkey and function key object only)
- Open For Input (Softkey and Button object only)
- Open PDF Reader (Not for Frame object)
- Set Media Player Command (only for devices that support the playback of audio / video)

Please note that these events behave differently depending on the state of the [Latching](#) ⁵⁰⁶ property of the according object.

If latching is activated, this event will not be executed on a release after a press, but instead on the second press after a first press has activated the pressed state of the object. In this case, the release of the object and the cancelling will never execute an event.

Please also note that from this version on, devices with capacitive touch will behave differently when sliding away from a button:

When sliding away from a button, in earlier versions of the OPUS Projektor, the button would stay pressed. Then, when the finger is released, the OnRelease event would be executed. Now, as soon as the finger leaves the button, the button becomes de-pressed WITHOUT the release event being executed! Additionally, the OnCancel event is executed in that case from version 2022.4.1 onwards.

OnLongPress

This event is triggered either if an object on screen is pressed via touchscreen or if a softkey is pressed via physical keys for longer than the configured Long Press Time (see [project properties](#)⁸¹).

Allowed actions:

- Execute Script
- Jump To Page
- Set Value (Not for Frame object)
- Next Softkey Level (Softkey object only)
- Previous Softkey Level (Softkey object only)
- Navigate Up (Softkey and function key object only)
- Navigate Down (Softkey and function key object only)
- Navigate Confirm (Softkey and function key object only)
- Open PDF Reader (Not for Frame object)
- Set Media Player Command (only for devices that support the playback of audio / video)

OnLongRelease

This event is triggered either if an object on screen is pressed via touchscreen or if a softkey is pressed via physical keys for longer than the configured Long Press Time (see [project properties](#)⁸¹) and was released again.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value (Not for Frame object)
- Next Softkey Level (Softkey object only)
- Previous Softkey Level (Softkey object only)
- Navigate Up (Softkey and function key object only)
- Navigate Down (Softkey and function key object only)
- Navigate Confirm (Softkey and function key object only)
- Open PDF Reader (Not for Frame object)
- Set Media Player Command (only for devices that support the playback of audio / video)

Please note that this event behaves differently depending on the state of the [Latching](#)⁵⁰⁶ property of the according object.

If latching is activated, this event will be executed at a release after a long press if the pressed state was not activated yet. If the pressed state was activated, the event will not be executed at a release after a long press.

OnDbIcClick

This event is triggered either if an object on screen is pressed via touchscreen or if a softkey is pressed via physical keys twice within the double click time (300ms).

Allowed actions:

- Execute Script
- Jump To Page
- Set Value (Not for Frame object)
- Next Softkey Level (Softkey object only)
- Previous Softkey Level (Softkey object only)
- Navigate Up (Softkey and function key object only)
- Navigate Down (Softkey and function key object only)
- Navigate Confirm (Softkey and function key object only)
- Open PDF Reader (Not for Frame object)
- Set Media Player Command (only for devices that support the playback of audio / video)

Please note that this event behaves differently depending on the state of the [Latching](#)⁵⁰⁶ property of the according object.

If latching is activated, this event will never be executed.

Here are the possible scenarios for press/release events when using a button or softkey with latching deactivated:

- Short press, then release -> OnPress and OnRelease are executed
- Long press, then release -> OnPress, then OnLongPress, then OnLongRelease AND OnRelease are executed
- Double click -> OnPress, then OnRelease, then OnDbIcClick, then again Release are executed

Here are the scenarios for press/release events when using a button or softkey with latching activated:

- Short press, then release -> OnPress is executed on the first press, OnRelease is executed the second press. No actions for the release of the button / softkey.
- Long press, then release -> OnPress, then OnLongPress on the first press. OnLongRelease on the first release. OnRelease on the second press. No action for the second release.
- Double click -> Double click behaves like a short press and release. No double click event will be executed with latching activated.

OnEnabledWithoutFocus

This event is triggered when the object has lost focus (it was either enabled with focus or open for input before).

Allowed actions:

- Execute Script
- Jump To Page
- Set Value

- Set Media Player Command (only for devices that support the playback of audio / video) (only for buttons and softkeys)

OnEnabledWithFocus

This event is triggered when the user navigates to this object so that it gets into the EnabledWithFocus navigation border state. It only has focus but is not open for input.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value
- Set Media Player Command (only for devices that support the playback of audio / video) (only for buttons and softkeys)

OnOpenForInput

This event is triggered as soon as an object is made for open for input to edit it's value.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value

OnValueChange

This event is triggered as soon as the value that the object displays is changed (either by user or by a referenced variable).

Allowed actions:

- Execute Script
- Jump To Page
- Set Value

OnEnterNewValue

This event is triggered after the user has entered a new value for the object (not the same value).

Note: This event is only fired for objects that have the property "Send Value Directly" **disabled**. If "Send Value Directly" is enabled, the event will **not** occur and the assigned action will **not** be executed.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value

OnEnterValue

This event is triggered after the user has finished editing the value of the object regardless if the value has changed or not.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value

OnEscape

The OnEscape event is triggered if an object is open for input and the user pressed the Escape key to cancel the input.

Allowed actions:

- Execute Script
- Jump To Page
- Set Value

OnGetValue

This event is currently not supported.

OnValueChangeByOwner

This is a variable event. It is triggered as soon as the owner of the variable writes a **new** value to the variable. This event can be set in the [Variable Manager](#) ¹⁷⁷

Allowed actions:

- Set Value
- Scale Value
- Execute Script

OnValueChangeRequest

This is a variable event. It is triggered as soon as anyone that is not the owner of the variable tries to set a **new** value.

Allowed actions:

- Set Value
- Scale Value
- Execute Script

OnValidStateChange

This is a variable event. It is triggered as soon as the validity status of the variable changes, i.e. the variable goes invalid from valid or vice versa.

Allowed actions:

- Set Value
- Execute Script


Actions

Various actions can be assigned to an event. See above for what action can be configured for which event.

No Action

This is the default setting for any event. To select an action, open the drop-down menu and select one of the available actions. To disable the current action, choose No Action. Please note that when No Action is selected, all settings of the previously selected action are removed.

Execute Script

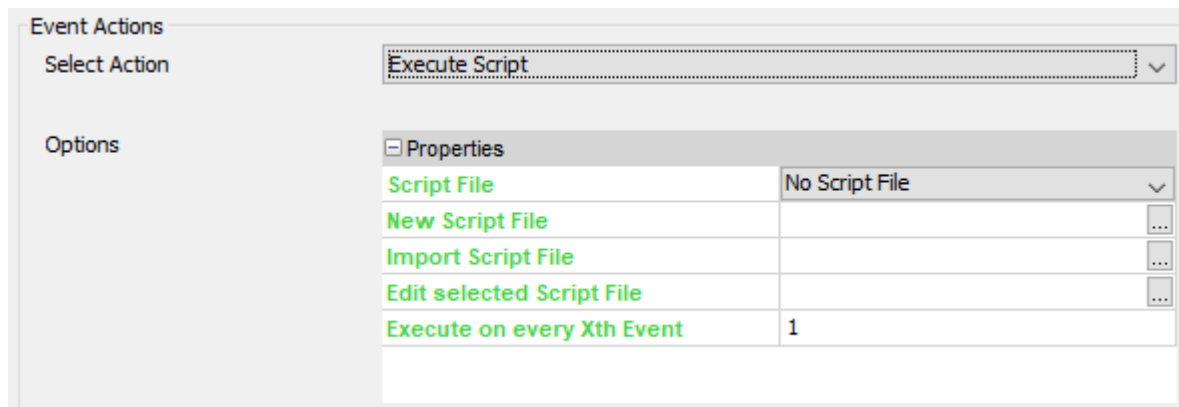

The execute script action can trigger the execution of a JavaScript file. See the [JavaScript documentation](#)⁵⁵⁹ for more information.

Properties:

- Script File
The JavaScript file that shall be executed
- New Script File
Not really a property, rather a short-cut which will open the new script dialog.
- Import Script File
Not really a property, rather a short-cut to import an existing script file from another location
- Edit selected Script File
Not really a property, rather a short-cut to open the JavaScript editor with the currently selected script file.
- Execute on every Xth Event
This property allows the execution of the JavaScript to not happen every time the event is triggered but only at e.g. every 5th event: This can act as kind of a low-pass filter for value change events.

Jump To Page

The jump to page action triggers a change to another page in the project.

Properties:

- Jump To
Select the page from the drop down list to which the project shall change

Set Value

With the set value action a fixed value can be set to a variable.

Properties:

- Variable
Select the variable that's value shall be set
- Value
Either a number or a string depending on the variable type

Scale Value

With this action a value of a variable can be scaled. The following formula is used for that:

$$\text{scaledValue} = (((\text{Value} + \text{Offset1}) * \text{Multiplier}) / \text{Divisor}) + \text{Offset2}$$

Properties:

- Offset1
- Multiplier

- Divisor
- Offset2

Next Softkey Level

With this action the next softkey level in a softkey frame can be shown.

Properties: None

Previous Softkey Level

With this action the previous softkey level in a softkey frame can be shown.

Properties: None

Navigate Up

This action simulates one click of the encoder. It moves the focus frame one position up in the object hierarchy.

Properties: None

Navigate Down

This action simulates one click of the encoder. It moves the focus frame one position down in the object hierarchy.

Properties: None

Navigate Confirm

This action simulates an encoder press. It opens an object for input or confirms the value when the object is already open for input.

Properties: None

Set Media Player Command

Event Actions	
Select Action	Set Media Player Command
Options	
Properties	
Media Player ID	Multimedia Player 1 [55]
Command	play
Value	Value not set

Properties:

- Media Player ID
The ID of the Media Player object that shall be controlled.
- Command
The command that shall be executed. The following commands are available:
 - play
 - stop
 - pause
 - previous
 - mute
 - unmute
 - set volume
 - set position
 - shuffle

- loop
A description of the commands can be found in the chapter [Multimedia Player](#)⁵²⁵.
- Value
A value can be set for the set volume and set position command.

Open For Input

With the open for input action it is possible to open one object on the current page for input so that the user can directly edit it without the need to navigate to it.

Properties:

- Object ID
The ID of the object that shall be made open for input

Set PDF Reader Command

With this action the [PDF Reader object](#)⁵⁴⁰ can be controlled.

Properties:

- PDF Reader ID
The ID of the PDF Reader object that shall be controlled.
- Command
The command that shall be executed. The following commands are available:
 - set pdf path - Sets the path to the PDF file. Normally the path is set automatically by adding a PDF file via the [PDF Document Path](#)⁵⁴⁰ property. Other files can be loaded at runtime with this property. The PDF files should be added as [additional files using the Updater](#)⁷⁰³
 - zoom in
 - zoom out
 - zoom fit width
 - zoom fit best
 - zoom reset
 - navigation back
 - navigation forward
 - next page
 - previous page
 - rotate clockwise
 - rotate counterclockwise

Set Media Player Command

The available actions for the Media Player are described [here](#).⁵⁹³

Toggle Video Display

This action is currently not supported and has no effect at runtime.

Temporarily Display Video

This action is currently not supported and has no effect at runtime.

6.3 General Objects

6.3.1 Page Object

The page object is the root object for designing a page.

Only Frame objects can be added to a page.

A page can also be used as video page. See properties below.

The page has a limited set of properties. For a description of the general properties see [here](#)⁴⁴⁸.

Page Specific Properties

Connect All Softkey Frames

When changing Softkey levels it is possible to switch a level of each Softkey Frame separately or to connect all Softkey Frames. When the Softkey Frames are connected, changing the level of one Softkey Frame will also change the level of the other.

Default value: Enabled

Possible values: Enabled or Disabled

For **Video Properties** please see [here](#)⁵⁵³.

Events

The following events can be configured for the page:

- OnPageInit
- OnPageExit
- OnPageRepeat

See [here](#)⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.3.2 Alarms

For a description of the alarm settings in project properties and for how to create an alarm see [here](#)⁶¹⁷.

Alarms share some properties with other objects. For a description of the common properties see [here](#)⁴⁴⁸.

Alarm Specific Properties

Alarm Number

This property shows the alarm number of the alarm as defined when creating the alarm.

This number can be changed but needs to stay unique.

Default value: Alarm number specified when creating the alarm

Possible values: 1 ... 32767 (but needs to be a unique alarm number)

Alarm Type Name

The type of the alarm is defined when creating it. It can not be changed after the alarm was created.

Default value: Alarm type chosen when creating the alarm

Possible values: Not editable

Connect All Softkey Frames

When changing Softkey levels it is possible to switch a level of each Softkey Frame separately or to connect all Softkey Frames. When the Softkey Frames are connected, changing the level of one Softkey Frame will also change the level of the other.

Default value: Enabled

Possible values: Enabled or Disabled

Note: This property is only available for Page alarms. Frame alarms do not support softkeys.

Timeout

The timeout of the alarm as configured in [project properties](#)⁶¹⁷ for the alarm type. This property can not be changed after the alarm was created.

Sound Pattern

When an alarm is created, the sound pattern as defined in the project properties is set for the alarm. This sound pattern can be changed for each alarm individually. For a detailed description of the sound pattern, refer to [Alarms](#)⁴⁷⁶.

Audio Output

When an alarm is created, the audio output options as defined in the project properties is set for the alarm. This audio output configuration can be changed for each alarm individually. For a detailed description of the audio output configuration, refer to [Events and Actions](#)⁴⁶⁵.

Min Display Time

The minimal display time is the time that the alarm that the alarm is at least visible on the screen. Only after this time the alarm can be acknowledged. The value for the Min Display Time can only be set in the [project properties](#)⁶¹⁷ for each alarm type and can not be changed for each alarm.

Log this Alarm

When the alarm log is enabled in [project properties](#)⁶¹⁷, this property can be used to choose if this particular alarm shall be logged or not.
Default value: Enabled
Possible values: Enabled or disabled.
If this property is enabled, it only has an effect if the alarm log is also enabled in project properties.

Alarm Log Delay

With this property it can be configured if this alarm shall be logged directly when the alarm is engaged or only after a certain amount of time. This can be helpful if an alarm shall only be logged if it was engaged for a longer time.
Default value: 0 seconds (log this alarm directly without delay)
Possible values: 0 seconds to 2147483647 seconds
The value of this property only has an effect if *Log this Alarm* is enabled and the alarm log is enabled in [project properties](#)⁶¹⁷.

Alarm Log Text

For this property a text can be entered that is used in the alarm log. This text can not be automatically translated (it is not language dependent).
Default value: no value
Possible value: any string

LED Properties

The LED properties allow to configure the behavior of the multi color LED when entering the selected page.

LED Options

This property defines the behavior of the LED when entering the page.

Default value: LED off

Possible values:

- LED off (LED is off when entering page)
- Always On (LED is always on on that page)
- Blinking (LED is blinking)

Notes:

- The LED behavior can also be controlled via the variables in the LEDs variable group. This provides more customization possibilities.
- The settings made in this property will be overwritten by the values set to the variables in LEDs variable group.

Led Color

Define the color that the multi color LED emits when on or blinking.

Default value: Yellow (255, 255, 0)


Possible values: Any 24Bit RGB color

Blink Pattern

If the LED Options property is set to Blinking, a blink pattern can be configured.

A blink pattern consists of the number of repetitions and a bit coded pattern of on/off states. In the dialog that pops up when changing this property, the pattern can be defined by clicking on the boxes.

Each box represents 100ms of LED on or off.

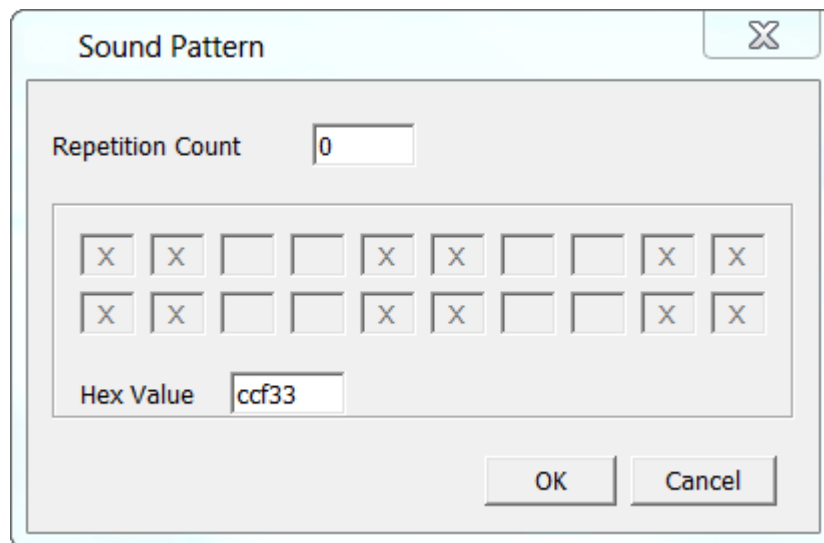

In the screenshot above the blink pattern 0xccf33 was defined. In binary this is 11001100111100110011

- 100ms ON
- 100ms ON
- 100ms OFF
- 100ms OFF
- 100ms ON
- 100ms ON
- 100ms OFF
- 100ms OFF

- 100ms ON
- 100ms ON
- 100ms OFF
- 100ms OFF
- 100ms ON
- 100ms ON
- 100ms OFF
- 100ms OFF
- 100ms ON
- 100ms ON
- 100ms OFF
- 100ms OFF

Internal Variables

If Connected to LED internal variable, this property is enabled and any variable can be selected that then controls the on/off state of the LED.

This property is not supported at runtime on all devices.

It is recommended to use the predefined internal variables in the LEDs variable group to control the LED via variables (e.g. in a PageInit script).

6.3.3 Virtual Keyboards

Virtual keyboards assist the user in entering text or numbers. Two types of virtual keyboards exist:

- Layered Keyboards for text input (portrait or landscape version)
- Numeric Keyboard for number input

To operate a virtual keyboard, the keyboards contain a special version of the button object. See below for special properties of the virtual keyboard buttons.

For virtual keyboard settings in the project properties see [here](#)⁸¹.

To create a virtual keyboard do a right click on *Virtual Keyboards* in the project tree and select the virtual keyboard type that shall be created.

Virtual keyboard properties are same for layered and numeric keyboards.

Virtual Keyboard Layer Specific properties

Select Layer

Here the layer of the virtual keyboard can be selected. A layer contains a set of keys. On a layered keyboard there are three layers available:

- Layer 1: Lower case characters
- Layer 2: Upper case characters
- Layer 3: Numbers and special characters

A numeric keyboard only has one layer with the numbers.

Default value: Layer 1

Possible values: Any available layer

This property has no effect on runtime, it only shows the different layers in the designer area.

Background Color

The background color of the virtual keyboard.

Default color: black (RGB 0, 0, 0)

Possible values: any 24Bit RGB color

Key Background Image

An image can be selected with this property that is then used as background image for all buttons on the virtual keyboard.

Default value: A default background image

Possible values: Any supported image or no image

Key Background Color

The background color for all buttons in the virtual keyboard can be selected with this property. The background color of the buttons is only visible if a Key Background Image (see above) with transparent areas is used or no background image is set.

Default value: grey (RGB 153, 153, 153)

Possible values: Any 24Bit RGB color

Draw Border

With this property the Draw Border property of all buttons in the virtual keyboard can be enabled or disabled. Enable it if the user shall be able to navigate the buttons via encoder. If only touchscreen input is used, this property can be disabled.

Default value: Enabled

Possible values: Enabled or Disabled

Font Attribute

The font attribute for all buttons in the virtual keyboard can be selected with this property.

Default value: Default_DejaVu Serif

Possible values: Any font attribute defined in [project properties](#)⁵⁰⁴

Font

The font that is used for all buttons in the virtual keyboard can be selected with this property.

Default value: DejaVu Serif

Possible values: Any available font

VKBBUTTON Specific properties

Virtual keyboard buttons are basically normal [button objects](#)⁵⁰⁴ that have some additional properties.

The virtual keyboard buttons are language dependent by default.

Button Type

A virtual keyboard button can have one of the following types:

- Character
Button for normal character input. When a Character button is pressed, the button's value is added to the edited value.
- Layer Switch
When pressing this button, the layer of the keyboard will be switched. The target layer can be selected with the *Switch To Layer* property (see below).
- OK
The OK button confirms the edited value and closes the virtual keyboard
- Cancel

The cancel button closes the virtual keyboard without confirming the new value (it will be reverted to the value before opening the virtual keyboard)

- Delete
The delete key deletes the last character or number that was entered
- Toggle Sign
The Toggle Sign button should only be used on numeric keyboards. It can be used to toggle the edited value from positive to negative and vice versa.

Display Text

This language dependent property defines the character displayed on the button. It can be different for each language.

Character Values

This language dependent property defines the value that is added to the edited value when the button is pressed. It can be different for each language.

Switch To Layer

This property is only available if *Button Type* (see above) was set to *Layer Switch*.

Possible values: Any available layer of the virtual keyboard.

VKB in UT Plugin projects


In UT Plugin projects a different kind of keyboard will be used automatically. This keyboard cannot be modified.

The numeric keyboard looks like this:



It shows the current value and the allowed value range.

The string keyboard looks like this:

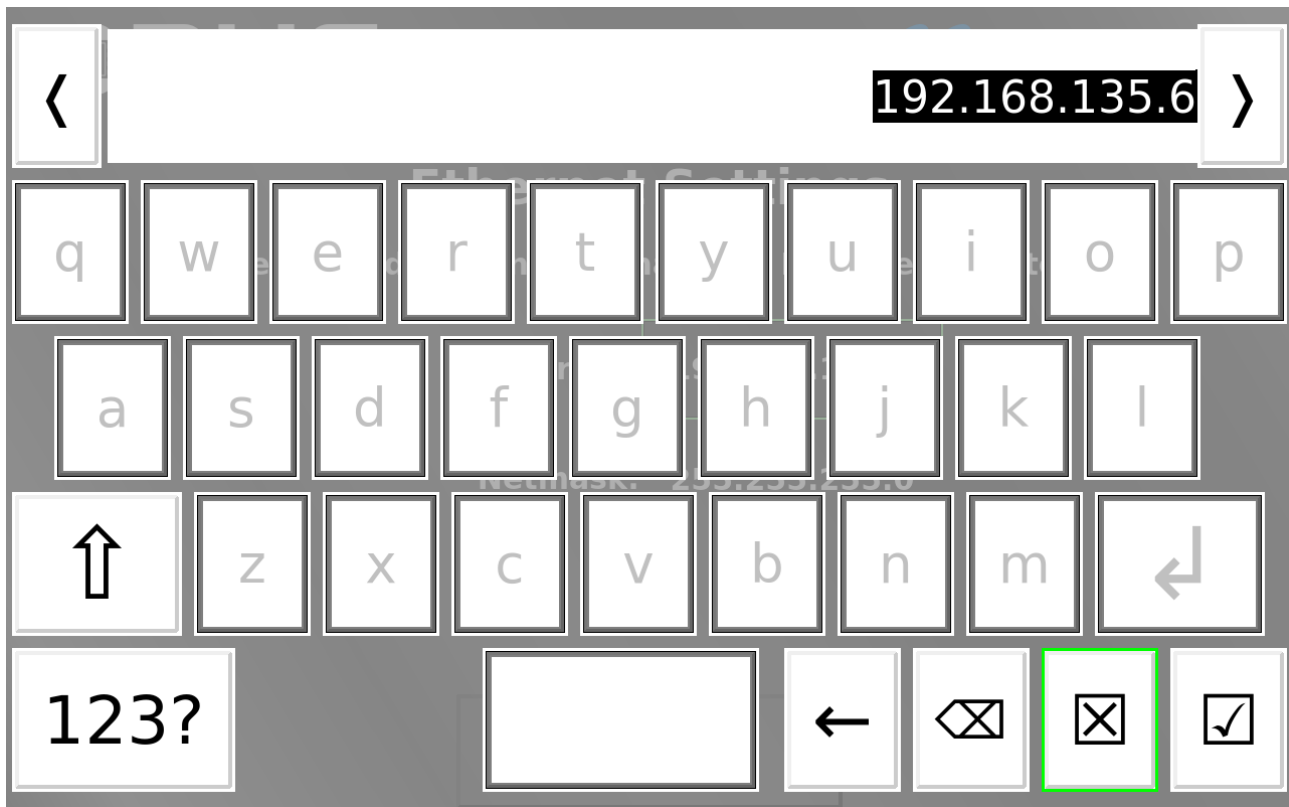

If only a sub-set of the possible characters should be allowed, an [input attribute](#)⁸¹ needs to be created and applied to the according input objects.

The button 123? in the lower left switches to numbers. Next to it, if no input attribute is set, a ++ button is displayed. That switches to special characters.

The button with the arrow left deletes one character of the current content. The button with the wide arrow left with an X deletes everything. The squared X button cancels the input, the one with the checkbox confirms it.

In the top the current string is displayed. Left and right are cursor keys that will move the cursor to a position in the string.

6.3.4 Softkey Frame

Softkey frames are (at default) invisible containers for softkey levels. Softkey levels contain the [softkeys](#)⁴⁸⁵.

A Softkey frame can have up to 4 softkey levels. Softkey levels can be used if there is not enough space on the screen to show all softkeys. At runtime it is possible to switch to another softkey level to show different softkeys.

Create Softkey Frames and Levels

At default two softkey frames are created for each page automatically each containing one softkey level.

To create a new softkey frame open the page from project tree and do a right click on the DataMask object of the page in the project tree and select Create Softkey Frame XXX (XXX is either Left or Right for landscape devices or Bottom or Top for portrait devices). If all softkey frames for the page already exist, this option will not be available on right click. After softkey frame contains one default softkey level. To create more levels do a right click on the softkey frame in the project tree and select Create Softkey Level. The new created level will then directly be shown.

To switch between the levels in the designer, the level that shall be shown can also be selected via right click on the softkey frame in the project tree.

To switch between softkey levels at runtime, the actions Next Softkey Level or Previous Softkey Level can be attached to a softkey.

Softkey Frame Specific Properties

For a list of other common properties of a softkey frame that are shared with other objects see [here](#) ⁴⁴⁸.

Softkey Width

As default softkeys have a calculated size so that no gaps exist between the softkeys. With this properties it is possible to make the softkey width smaller in a bottom or top softkey frame so that gaps between the softkeys are possible.

Default value: Calculated based on device

Possible values: Anything smaller than the calculated value

This property can only be changed for top or bottom softkey frames. For left or right softkey frames the width of the softkeys is directly connected to the width of the softkey frame.

Softkey Height

By default softkeys have a calculated size so that no gaps exist between the softkeys. With this properties it is possible to make the softkey height smaller in a left or right softkey frame so that gaps between the softkeys are possible.

Default value: Calculated based on device

Possible values: Anything smaller than the calculated value

This property can only be changed for left or right softkey frames. For top or bottom softkey frames the height of the softkeys is directly connected to the height of the softkey frame.

Current Softkey Level

The *Current Softkey Level* property is not visible in the designer tool and can only be accessed at runtime via JavaScript.

With this property the currently shown softkey level can be changed.

Note: it is also possible to change the softkey levels via the variable

@ChangeSoftkeyLevel (see variable table for description).

ISOBUS UT Softkey Frame (only in UT Plugin projects)

If the soft key frame should be used by a UT (only for ISO devices and [UT plugin](#) ⁵⁴⁷ projects), this needs to be checked. Note that no soft key levels should be created in that case. Also, the width of the soft key frame should be set to 1 to not have it interfere with the UT softkey touch regions (especially for full screen UT views)

ISOBUS UT First Key Number (only in UT Plugin projects)

A UT page has a certain amount of soft keys, from 0 to x. This property defines what the first UT soft key number should be in this soft key frame (e.g. a 0 means that the first UT soft key (i.e. soft key number 0) should be connected with the first physical soft key on the device. If the device has soft keys on both sides, then one of the soft key frames should have this set to 0 and the other to 0+<number of physical soft keys on the device>.

Events

The following events can be configured for the softkey frame:

- OnPress
- OnRelease

Note: These events are only triggered if there are no input objects on the page. Otherwise navigation scheme uses the touch events for input objects only and the softkey frame is not considered an input object.

See [here](#)⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.3.5 Softkey

Softkeys are an easy and convenient way to add functionality to a hardware key but also can be used on devices without keys (via touchscreen).

Softkeys are very similar to [buttons](#)⁵⁰⁴ (they only lack the Draw Shadow property).

Softkeys also share a lot of their properties with other objects. See [here](#)⁴⁴⁸ for a description of the common properties.

How to add pressed or released objects to the softkey

It is the same as for the button object. Click [here](#)⁵⁰⁴ for a description.

Softkey Specific Properties

Key Number

This is a property that can not be changed. Each hardware key gets a specific number. The value of this property is based on the softkey frame in which the softkey is in and the position inside the softkey frame. This number is used in the variable @UserButtonPressed which indicates the last key that has been pressed and, accordingly, @UserButtonReleased.

Latching

Latching means: When a softkey is pressed and released, it stays in the pressed state until it is pressed again.

With this property this behavior can be enabled.

Default value: Disabled

Possible values: Enabled or Disabled

Pressed State

Switch between the release or pressed state of the softkey. This is important for having a preview of the object and also for adding pressed/released objects for the softkey (see [here](#)⁵⁰⁴).

This property has no influence to runtime behavior.

Default value: Disabled

Possible values:

- Enabled (softkey is in pressed state)
- Disabled (softkey is in released state)

Pressed Object ID

The ID of the object that represents the pressed object of the softkey.

Will be automatically set when adding a pressed state object to the softkey (see [here](#)⁵⁰⁴).

Can't be edited by hand.

Released Object ID

The ID of the object that represents the released object of the softkey.
Will be automatically set when adding a released state object to the softkey (see [here](#)⁵⁰⁴).
Can't be edited by hand.

Events

The following events can be configured for the softkey:

- OnPress
- OnRelease
- OnLongPress
- OnLongRelease
- OnDbClick

See [here](#)⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.4 Navigation Events

Introduction

The general navigation behavior of the PClient, e.g. the mechanism of selecting objects with the Encoder or the function of the Home or Escape Key, are implemented in so-called navigation scripts.

It is possible to change this behavior, however, this is very advanced functionality! It is very easy to break things and it can be quite difficult to implement a different behavior.

Depending on the amount of changes we will not be able to help with the functionality of these scripts!

However, if a project demands changing a certain behavior, modifying the navigation scripts can be the only way.

Default Behavior

Before explaining the possibilities to change the default behavior it is a good idea to explain that default behavior first. Here are some key behavior points:

Touch Screen

- When the touch screen is pressed in a region with no input objects, the focus will move to the next input object as a way to scroll between input objects without the encoder

Home Key

- Pressing (or rather releasing after pressing) the Home Key leads to a page switch to the page that is set as the Home Page.

Escape Key

- When an object is selected for editing (e.g. a Numeric Field), pressing the Escape Key will lead to exiting the editing mode of the currently selected object without accepting the set value (except if the property Send Directly is active for that object, then the value is already processed)

- When no object is selected for editing, pressing the Escape Key will lead to switching to the previous page. The last 5 pages that were visited can be seen in the variables @ProjektHistoryPage01 to @ProjektHistoryPage05.
- When an [alarm](#)⁶¹⁷ is opened, pressing the Escape Key will lead to closing that alarm, except if it is an Emergency Alarm

Project-wide scripts

By default the navigation behavior is the same on all pages, alarms and virtual keyboards. The configuration for the scripts can be found in the properties window of the project itself, next to the Events tab.

EmptyProject1 - Properties		
Properties	Events	Navigation Events
▼ Navigation Events		
OnNavigationInit	Default script is used 'default_page_init.js'	...
OnSelectInputObject	Default script is used 'default_set_focus.js'	...
OnConfirmInplaceEditor	Default script is used 'default_confirm_edited_value.js'	...
OnEscapeInput	Default script is used 'default_esc_edited_value.js'	...
OnEncoderMove	Default script is used 'default_encoder_move.js'	...
OnPress	Default script is used 'default_key_press.js'	...
OnRelease	Default script is used 'default_key_release.js'	...
OnLongPress	Default script is used 'default_key_long_press.js'	...
OnLongRelease	Default script is used 'default_key_long_release.js'	...
OnDbClick	Default script is used 'default_key_double_press.js'	...
OnTouchPress	Default script is used 'default_touch_press.js'	...
OnTouchRelease	Default script is used 'default_touch_release.js'	...
OnTouchLongPress	No default script	...
OnTouchLongRelease	No default script	...
OnTouchDbPress	Default script is used 'default_touch_double_press.js'	...
OnTouchMove	Default script is used 'default_touch_move.js'	...
OnTouchEnter	Default script is used 'default_touch_enter.js'	...
OnTouchExit	Default script is used 'default_touch_exit.js'	...

The events are

- OnNavigationInit - executed when a page is opened
- OnSelectInputObject - executed when an object is selected
- OnConfirmInplaceEditor - executed when a change of an edited object is confirmed (i.e. the Encoder is pressed while being in editing mode of an object)
- OnEscapeInput - executed when the Escape key is used while an object is edited
- OnEncoderMove - executed when the Encoder is rotated
- OnPress - executed when an object is being pressed
- OnRelease - executed when an object is being released
- OnLongPress - executed when an object has been pressed for more than the configured [LongPress time](#)⁸¹

- OnLongRelease - executed when an object has been released after more than the configured LongPress time
- OnDbClick - executed when a fast double-click has been performed on an object
- OnTouchPress - executed when the touch was pressed
- OnTouchRelease - executed when the touch was released
- OnTouchLongPress - executed when the touch has been pressed for more than the configured LongPress time
- OnTouchLongRelease - executed when the touch has been released after more than the configured LongPress time
- OnTouchMove - executed when a finger is moved over the touch screen while pressing it
- OnTouchEnter - (not applicable) executed when a mouse cursor (that is not available) is moved over an object
- OnTouchExit- (not applicable) executed when a mouse cursor (that is not available) is moved away from an object

Page-dependent scripts

The same events as in the global Navigation events are available for each page.


Home Page [23] - Properties ×		
Properties	Events	Navigation Events
▼ Navigation Events		
OnNavigationInit	Default script is used 'default_page_init.js'	...
OnSelectInputObject	Default script is used 'default_set_focus.js'	...
OnConfirmInplaceEditor	Default script is used 'default_confirm_edited_value.js'	...
OnEscapeInput	Default script is used 'default_esc_edited_value.js'	...
OnEncoderMove	Default script is used 'default_encoder_move.js'	...
OnPress	Default script is used 'default_key_press.js'	...
OnRelease	Default script is used 'default_key_release.js'	...
OnLongPress	Default script is used 'default_key_long_press.js'	...
OnLongRelease	Default script is used 'default_key_long_release.js'	...
OnDbClick	Default script is used 'default_key_double_press.js'	...
OnTouchPress	Default script is used 'default_touch_press.js'	...
OnTouchRelease	Default script is used 'default_touch_release.js'	...
OnTouchLongPress	No default script	...
OnTouchLongRelease	No default script	...
OnTouchDbPress	Default script is used 'default_touch_double_press.js'	...
OnTouchMove	Default script is used 'default_touch_move.js'	...
OnTouchEnter	Default script is used 'default_touch_enter.js'	...
OnTouchExit	Default script is used 'default_touch_exit.js'	...

These events should be modified if a different behavior is wanted only on a certain page.

Configuring different navigation scripts

By default the default_..... scripts are used to handle navigation events. These default scripts are always on the device and can't be edited.

To change the default behavior, press the 3-dot button next to the according event.

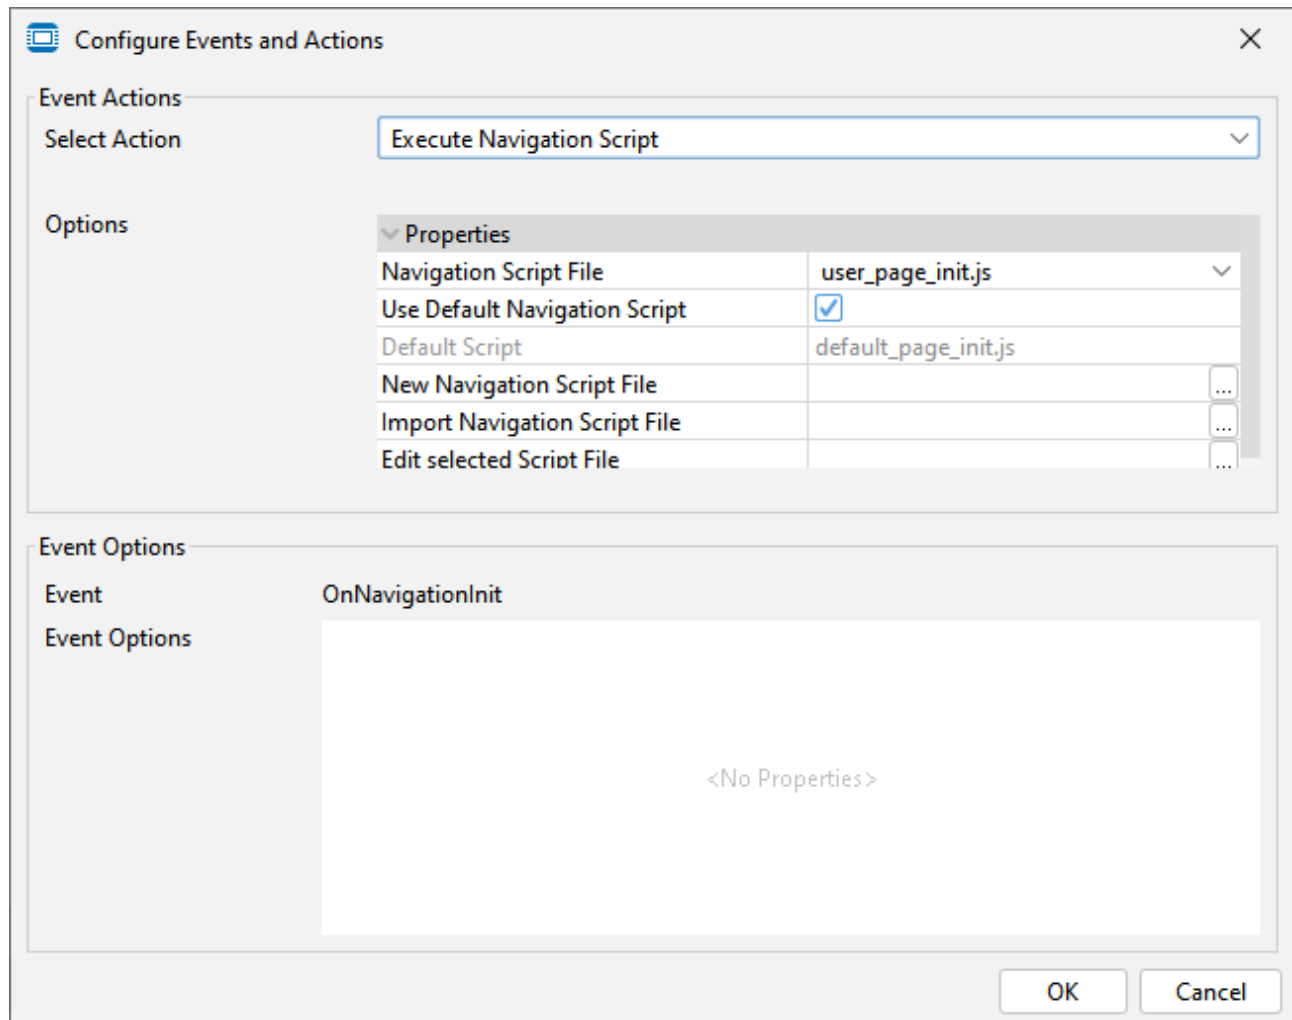

As long as the property "Use Default Navigation Script" is checked, the default navigation script will be used.

To make changes, this property needs to be unchecked.

In that case, an identical script called user_.... instead of default_..... will be used. user_..... scripts for all events will be created with a project and when an older project is opened with the current version.

The scripts can be found in the Navigation Scripts node in the project tree.

These scripts contain the same code as the default scripts, so if nothing else is changed, the behavior will be the same.

To change the behavior of the PClient navigation, the scripts need to be edited.

Please note that we cannot offer full support for radical changes made to these scripts.

An example of a change of these scripts can be seen in the [Welcome Project](#)¹⁷⁵⁹, where the Home and Escape key have a different functionality on the Keys page than on all other pages.

Please note that if the check box for the default navigation script is unchecked at more than one position with no other changes, the same user_.... script will be used for these events, so


any changes made to the script will reflect on all events where that script is configured to be used. If a script should only be used on one page, a copy should be created with a different name.

Also note that the navigation scripts run in a separate virtual machine than the regular project scripts, so no data exchange is possible.

Example - Disabling the object browsing on touch

By default, on devices with a touch screen, if a region is touched that does not contain an input object, it is implemented that the focus browses between all input objects on that page. To deactivate this, two scripts need to be modified. First, the usage of the default navigation script has to be deactivated.

Open the dialog in the project Navigation events.

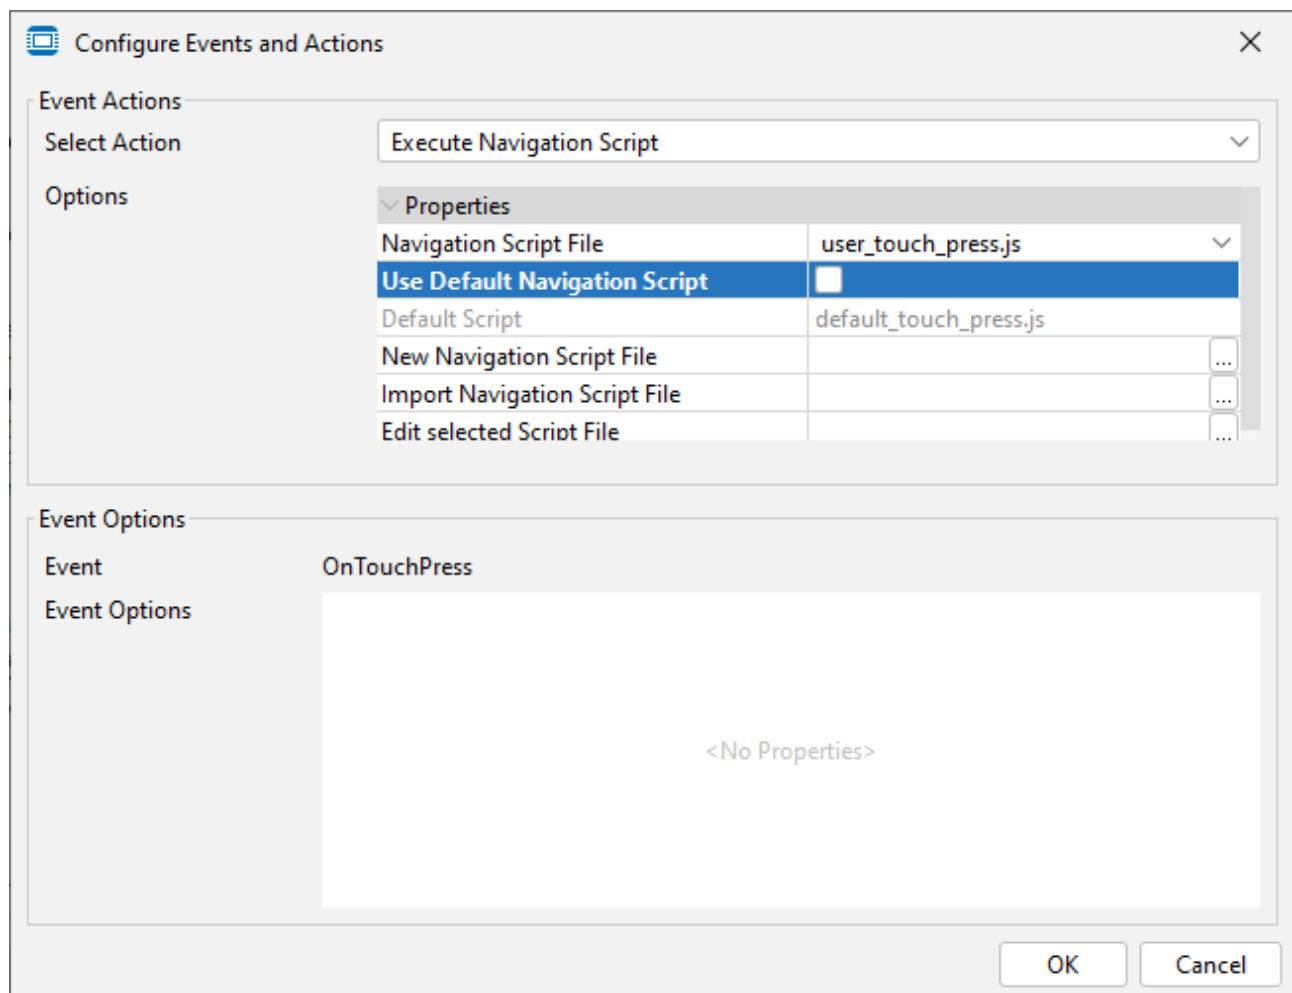


With this deactivated, the file `user_touch_press.js` script file will be used instead of the default one. This file needs to be edited now.

The part that needs to be commented, because that's all that needs to be done, starts with the comment `"/` for ECO devices we want to allow the operator to find all inputs by touching somewhere"

All lines after this need to be commented, until the correct close curly brackets.

In version 2024 the lines that need to be commented go from 133 to 192.

This will deactivate the described behavior. However, upon tests it would be found that for quick double presses the browsing is still active.
 For this we need to modify the touch double press behavior.
 First, we need again to configure that the user script will be used instead of the default one.

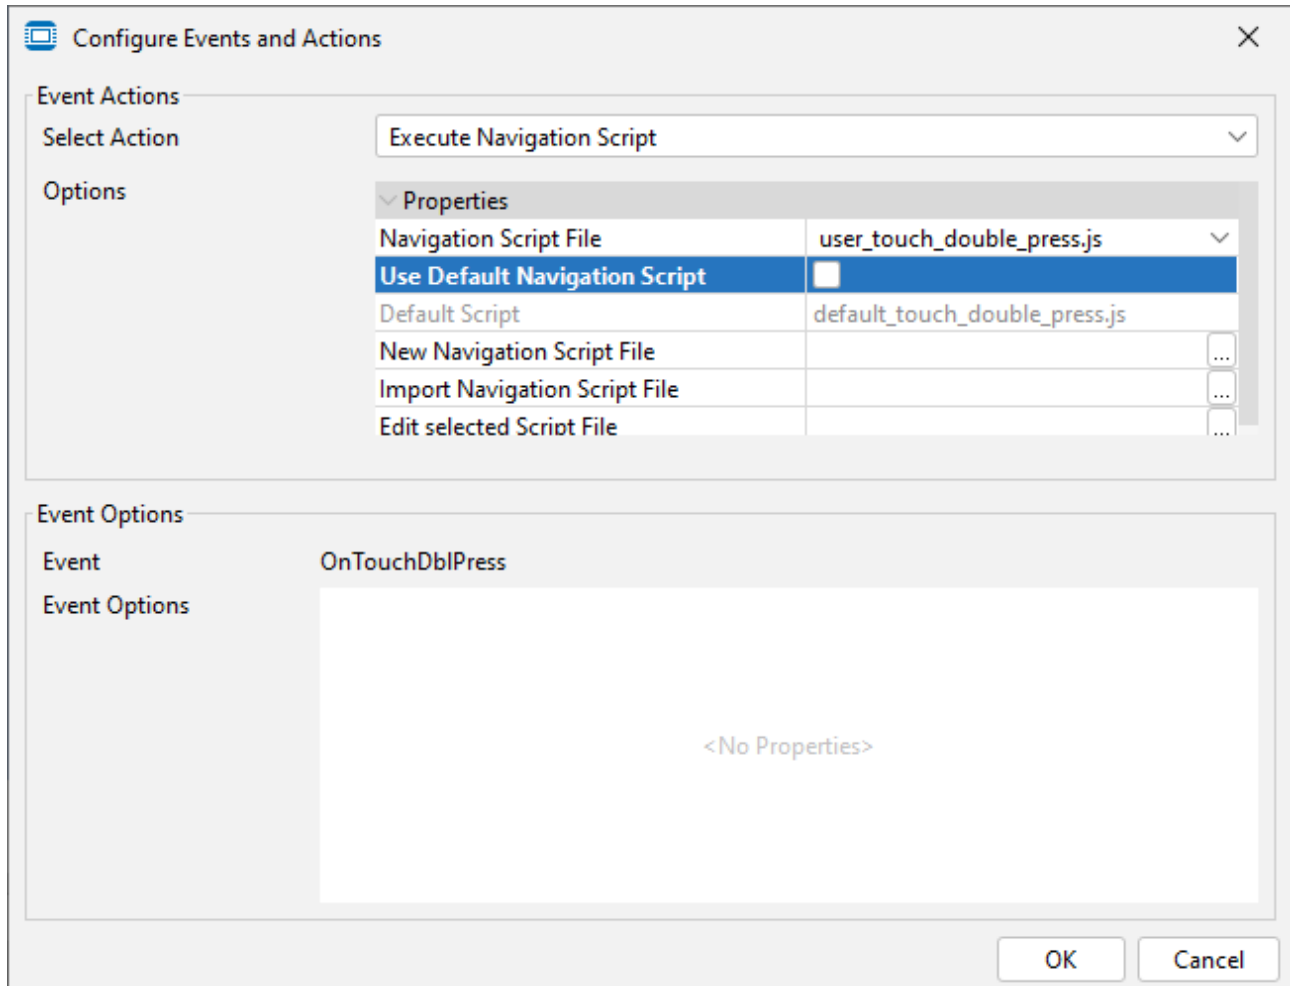

Now we can modify this script.
 Thankfully it's quite short, all it will do is call the default touch press script. Here we need to change the call so that the user script will be called instead:

```
nav.includeFile("user_touch_press.js");
```

After this, save and download the project. The touch-to-browse-functionality will be gone.

6.5 Palette Objects

6.5.1 2D Graph

New and changed features since May 2016

- All data points are logged to the non-volatile memory of the device so that they are still available after reboot.

- Maximum value of [Number of Samples to Record](#)⁴⁹⁷ reduced from 10,000,000 to 1,000,000
- Maximum number of value points visible for each variable when showing the 2D Graph set to 699050 (see graph description below for details)
- Introduced a maximum "Number of Samples to Record" for all graphs in a project (number is device dependent)
- Each variable can be logged either time based or at every value change (see [Log Trigger](#)⁴⁹⁸)
- Possible to configure if data shall be logged in low power mode or not with new property [Log Data in Low-Power Mode](#)⁴⁹⁵
- Introduced new variable reference for showing the progress of copying the graph's history. See [Copy Progress Variable](#)⁴⁹⁴ and [Process 2D Graph Data on a PC](#)⁴⁹⁹
- Introduced two new JavaScript functions to save (copy) or delete the graph's value history ([save2DGraphHistory](#)⁵⁹⁶, [delete2DGraphHistory](#)⁵⁹⁶)

The graph object is designed to show the value history of one or more variables in a line graph.

For each variable that shall be displayed in the graph it can be configured if logging of a value shall happen for every value change or time based (see [Log Trigger](#)⁴⁹⁸).

Each logged data point consists of a time stamp and the value at that time stamp. All entries are saved to the non-volatile memory of the device in a ring buffer so that the value history is still available after shutting down and re-booting the device. Logging is active even if the 2D graph object is not visible on the screen.

WARNING: If power is completely removed from the device without properly shutting it down using the ignition, it is possible that the last 1% of data in the ring buffer gets lost! Always power down the device using the ignition and the integrated power management!

To save RAM on the device only the data points that are currently shown on the screen are loaded from the hard drive. This means that one can experience slight delays when changing the currently visible time span or the offset because the data needs to be loaded from disk. To make sure that the non-volatile memory of the device does not get filled up with graph history data, the number of data points that are logged for all graphs in a project is limited (device dependent: on devices with i.MX6 CPU: 34952533 samples (about 400MB on the non-volatile memory), on devices with i.MX35 CPU: 8947848 (about 100MB on the non-volatile memory)).

Drawing the graph's value lines can be very CPU heavy. The value lines are a polygon that consists of many points. To improve drawing performance, this polygon will be simplified if it consists of too many points (current threshold: ~1000 samples). While this improves the drawing performance it may reduce the accuracy of the drawn polygon but may keep the display still usable if too many samples shall be drawn.

The logged history of each graph can be **copied** from the device and then be converted to a CSV file that in turn can be processed by a spreadsheet application. See [here](#)⁴⁹⁹ for instructions.

The complete value history can be **reset (deleted)** with the JavaScript [delete2DGraphHistory](#)⁵⁹⁶ function.

Displaying the logged data at run time needs some CPU time. To improve performance of the 2D Graph, the object is not redrawn at each variable change but automatically redraws itself with the latest values in a fixed interval (currently about every second). If there are still performance issues the following measures can improve it:

- Reduce the numbers of shown variables in the graph

- Reduce the number of samples for each variable in the graph (see [Number of Samples to Record](#)⁴⁹⁷)
- Scale the X axis so that less data points are visible at once
- Consider changing the [Log Trigger](#)⁴⁹⁸ for each variable to *Time Based* with an appropriate timer value.
- If all of the above is not feasible for you application, think about upgrading to a newer device generation with more CPU power

Variable References

Each variable can either be attached via the dialog that pops up when the ... button is pressed in the property table for property "Variables To Draw" or by dragging a variable from the Variable View onto the graph in the designer area.

X Axis Time Variable

With a variable attached to this property the time span of the X axis can be scaled. If no variable is attached, the default time span is 10 seconds.

At run time the scaling is done every time the variable value is changed. The value of the variable represents the time span of the X axis in seconds.

Variable values less than 1 are not considered.

Default value: None

Possible values: Any integer variable

X Axis Offset Variable

When a variable is attached to this property, it is possible to move in the history of the graph. For each increment of the variable, the graph will move one second into it's history and shows "old" values. Values less than 0 are not considered. If the value 0 is set, the graph shows "live updates" of the values.


Default value: None

Possible values: Any integer variable

Cursor Position Variable

It is possible to move a cursor line in the graph. With this cursor line it is possible show the values of each variable at the time where the cursor is. The cursor position represents the distance in pixel from the right side of the 2D Graph.

When a variable is attached to this property the cursor can be activated by setting a value greater or equal to 0 (0 shows the latest values).

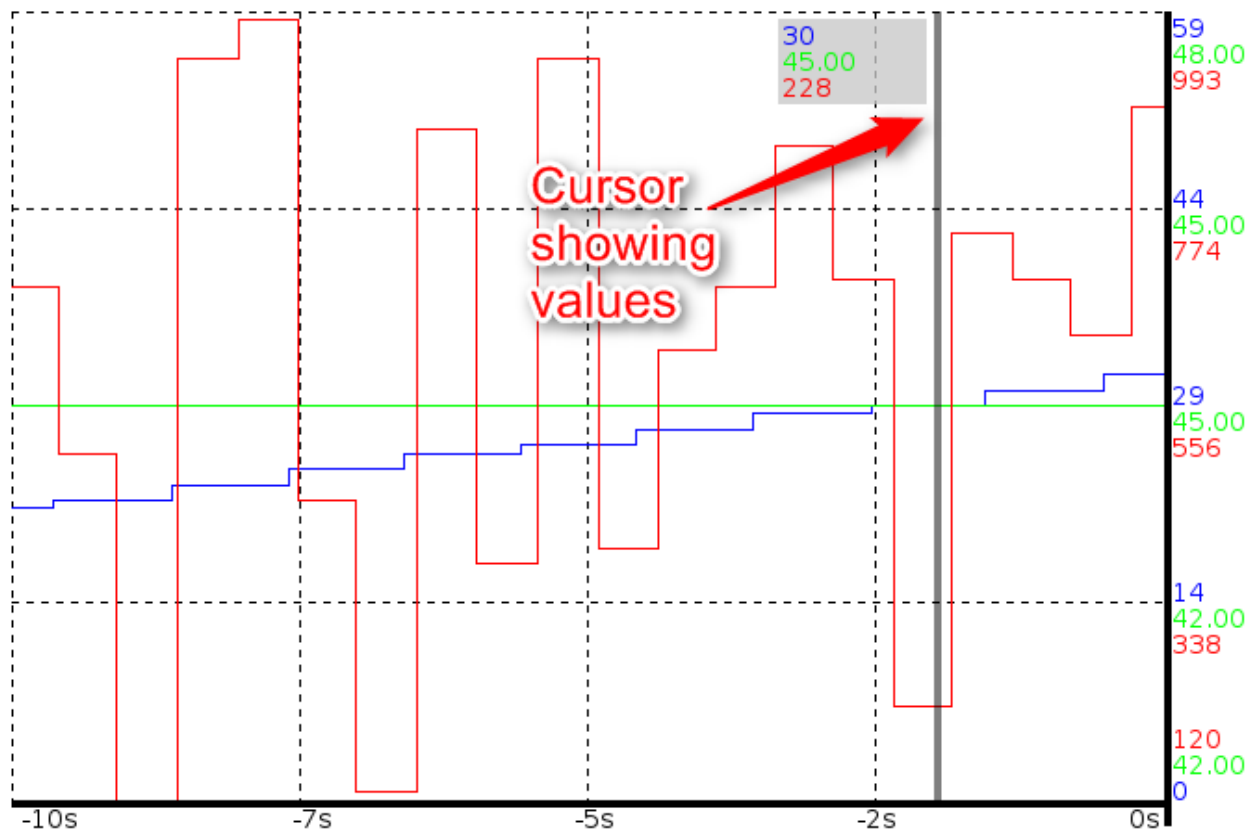

Default value: None

Possible values: Any integer variable

Copy Progress Variable

If an integer variable is attached, it will show the copy progress when copying the graph's history data. See [save2DGraphHistory](#)⁵⁹⁶ and [here](#)⁴⁹⁹ for details.

Default value: As configured for the variable

Possible values: 0 .. 100 while copy is in progress or -1 on error.

2D Graph Specific Properties

Draw Grid Lines

Enable this property to either show one or three vertical and horizontal grid lines (see *Number of Grid Lines* property below). The look of the grid lines can be configured with the *Grid Line Attribute* property.

Disable this property to hide all grid lines.

Default value: Enabled

Possible values: Enabled or Disabled.

Grid Line Attribute (Theme dependent)

Select the line attribute object that shall be used for drawing the grid lines.

Default value: Solid Black

Possible values: Any Line Attribute Object defined in project properties.

Number of Grid Lines

If the property *DrawGrid Lines* is enabled, grid lines will be drawn in the graph. With this property the number of drawn grid lines can be configured.

Default value: 3

Possible values:

- 3 (three horizontal and three vertical grid lines will be drawn)
- 1 (one horizontal and one vertical grid line will be drawn)

Number of Grid Lines

With this property the existence and position of the Y axis can be configured. It either can be on the left or on the right or completely disabled.

The main purpose of the Y axis is to show the (current) minimum and maximum values of the variables shown in the graph (configure this for each variable with the property *Show Value Labels at Y Axis* in the *Variables To Draw* dialog, see below).

Default value: Right

Possible values:

- Right
- Left
- Don't draw at all

Axis Line Attribute (Theme dependent)

Select the line attribute object that shall be used for drawing the X and Y axis lines.

Default value: Solid Black

Possible values: Any Line Attribute Object defined in project properties.

X Axis Labels

The X axis can show either full time stamps (format hh:mm:ss, eg. 09:42:37) or relative timestamps (e.g. -15.0s, 0s, etc.). The X axis labels can also be completely disabled.

Default value: Full Time Stamps

Possible values:

- Full Time Stamps
- Relative Time Stamps
- None

Axis Font Attribute (Theme dependent)

The look of the labels of the X and Y axis can be configured with a font attribute. The color of the font attribute only has influence on the X axis labels. The values at Y axis will be shown in the color of the line attribute object of the configured variable (see *Line Attribute* property for each variable in the *Variables To Draw* dialog).

Default value: Default_DejaVu Serif

Possible values: Any existing font attribute object

Log Data in Low-Power Mode

Configure if data shall be logged if ignition is off and the device is in low power mode.

Default value: Enabled

Possible values Enabled or Disabled

Variables To Draw

The Variables To Draw are the variables that are recorded and shown by the graph.

Variables can either be added by dragging them from the Variable View onto the graph in the designer area or by clicking the ... button on this property. When clicking the ... button the following dialog will pop up in which various settings for each variable can be made:

Properties	
Common Properties	
Name	engine_rpm
Value and Line Related	
Min Value	0
Max Value	9000
Auto Fit Y Axis	<input type="checkbox"/>
Line Attribute	2 Pixel Dashed Black
Number of Samples to Record	10000
Show Value Labels at Y Axis	<input type="checkbox"/>
Dependency and Scaling Related	
Dependency	None
Unit Group	Area
Offset	0
Scale	1.0
Number of Decimals	0
Offset 2	0
Logging	
LogTrigger	Event Based
Timer Value (ms)	0

34942533 free Number of Samples to Record (max 34952533 for this device).

7 more variable(s) can be added (max. 8 for this device).

OK Cancel

The top part of the dialog is designated for selecting the variables that the graph object shall draw.

On the left the tree with all variables available in the current project is displayed. On the right there is the tree showing the variables that are already assigned to the graph.

To add a variable to the graph, select one in the left tree and click the *Add >>* button.

To remove a variable from the graph, select one in the right graph and click the *<< Remove* button.

It is also possible to add or remove complete groups.

Note: There is a limit of variables that can be added to the graph. This limit is device specific. On the bottom of the dialog the limit is shown and how much variables can be added.

Note: Adding many variables might make the graph confusing.

After a variable was added, the following options can be set for each variable:

Name

The Name of the variable. This can't be edited here.

Min Value

The minimum value for the variable that shall be used for the graph. This defines the lowest value of the Y axis and together with Max Value the range of the Y axis.

If Show Value Labels at Y Axis is enabled, the value of Min Value will be shown at the bottom of the Y axis.

Min Value will not be considered if Auto Fit Y Axis is enabled.

Default value: Configured minimum value of the selected variable

Possible values: Any integer value that is less than Max Value

MaxValue

The maximum value for the variable that shall be used for the graph. This defines the highest value of the Y axis and together with Min Value the range of the Y axis.

If Show Value Labels at Y Axis is enabled, the value of Max Value will be shown at the top of the Y axis.

Max Value will not be considered if Auto Fit Y Axis is enabled.

Default value: Configured maximum value of the selected variable

Possible values: Any integer value that is greater than Min Value

Auto Fit Y Axis

If this property is disabled, the value range of the Y axis for this variable is fixed from Min Value to Max Value.

If this property is enabled, the graph will automatically calculate the range of the Y axis based on all values of the variable currently visible in the graph. Min and Max Value will not be considered.

Default value: Disabled

Possible values: Disabled or Enabled

Line Attribute

To change the look of the value line that is drawn for this variable, a line attribute object can be selected here. Line width, color and line pattern can be defined.

Each variable should get a different line attribute so that they can be distinguished in the graph.

Default value: Solid Black

Possible values: Any line attribute object defined in the project properties.

Number of Samples to Record

To improve performance, the number of value changes that are recorded by the graph can be limited. This should be done especially if no long history is required (e.g. only the latest 100 values are of interest).

As soon as the number of samples are reached during run time, the oldest values recorded will be deleted.

Default value: 10000

Possible values: 10 ... 1000000

Show Value Labels at Y Axis

If this property is disabled, no values for this variable will be shown at Y axis.

If this property is enabled, the Min and Max value are displayed at the Y axis. If grid lines are drawn in the graph, values between Min and Max value will be shown at the grid lines positions at Y axis.

Default value: Disabled

Possible values: Disabled or Enabled

Dependency

It is possible to mark a variable as unit dependent so that the values shown (Min Value, Max Value etc. at Y axis and the value in the cursor) can be calculated for the currently active unit.

Default value: None

Possible values: None or Unit

Unit Group

If the Dependency property is set to Unit, the unit group can be chosen to which this variable belongs.

Default value: Force units (only enabled if Dependency property is set to Unit)

Possible values: Any of the available unit groups.

Offset

The raw value of the variable can be modified before showing it. The formula that is used is:

$$\text{shownValue} = ((\text{rawValue} + \text{Offset}) * \text{Scale}) + \text{Offset2}$$

Default value: 0

Possible values: Any integer number

Scale

The raw value of the variable can be modified before showing it. The formula that is used is:

$$\text{shownValue} = ((\text{rawValue} + \text{Offset}) * \text{Scale}) + \text{Offset2}$$

Default value: 1.0

Possible values: Any float number

Number of Decimals

The number of decimals property allows to define how many digits will be displayed behind the decimal point.

Default value: 0

Possible values: 0 ... 10

Offset / Offset 2

The raw value of the variable can be modified before showing it. The formula that is used is:

$$\text{shownValue} = ((\text{rawValue} + \text{Offset}) * \text{Scale}) + \text{Offset2}$$

Default value: 0

Possible values: Any integer number

Log Trigger

With this property the trigger for logging a value can be configured. It can either be time based (every value change is logged) or time based (a value sample is recorded cyclicly. If *Time Based* is selected, the *Timer Value* can be used to configure the log period for the selected variable.

Default value: Event Based

Possible values: *Event Based* or *Time Based*

Timer Value

Configure the log period in milliseconds for the selected variable if *Log Trigger* is set to *Time Based*

Default value: 500ms

Possible values: 500ms ... 2147483647ms

Process 2D Graph Data on a PC

The recorded log data can be copied to a PC and then be processed by a tool to make it readable by e.g. a spreadsheet application.

Use the JavaScript function [save2DGraphHistory](#)⁵⁹⁶ to store the data on a USB drive.

Example JavaScript:

```
//Get path of mounted USB drive:
var usbMountPath = getVariableValue("@USBMountPath");
//Save history to target path. The 2D Graph has object ID 42
var result = save2DGraphHistory(42, usbMountPath);
if (true == result)
{
    print("Copy 2D Graph history started");
}
else
{
    print("Starting copy 2D Graph history FAILED");
}
```

Note that the copy progress can be observed via the [Copy Progress Variable](#)⁴⁹⁴.

When saving the history, a new directory is created on the USB drive with the following name: `graph_hsitory_NAME_OF_2D_GRAPH`

On the PC

After transfer is done, the data can be viewed and processed with the Graph History Tool. Follow these basic steps to export the data into a CSV file that can be opened by a spreadsheet application:

- Press the browse button and select the graph history directory on the USB drive.
- After the directory was selected, the data of each variable can be viewed in a table.
- Press the Export button to select export options and then press OK to export the data into one or more CSV files.

A detailed manual for the Graph History Tool can be viewed [here](#)⁵⁰⁰.

Manual data processing

The data can also be processed by you own applications. The storage format is:

- 64Bit timestamp in milliseconds since 01-01-1970
- 32Bit integer value

All values in Little Endian format.


The ring buffer is implemented as 100 files per variable. Each file is named with the name of the variable and a sequence number.

6.5.1.1 Graph History Tool

The Graph History Tool is a PC tool for viewing and converting saved history data of a 2D Graph object.

This manual is split in two parts: The end user manual that explains how the tool can be used and the OEM documentation that explains how the tool can be deployed to the end user and how it can be customized.

End user manual

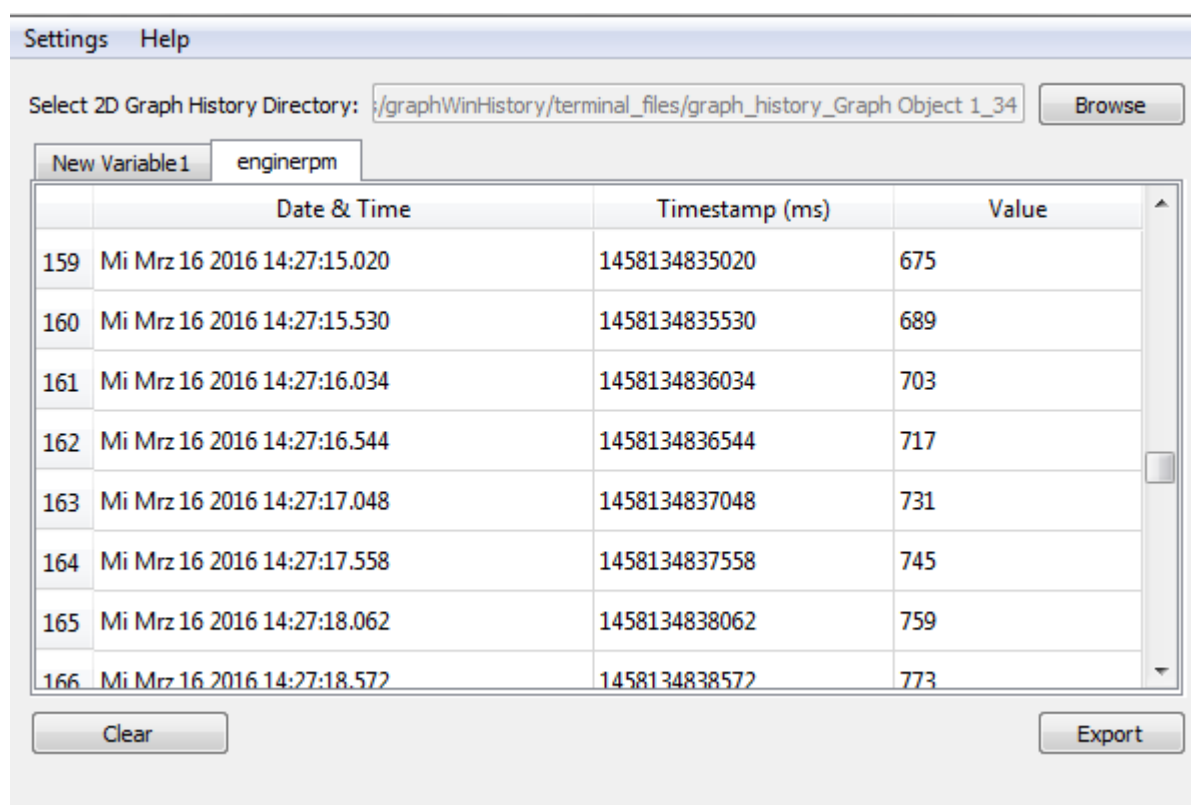

Import and show Graph History Data

Press the *Browse* button to select the directory that contains the graph history data. After the directory has been selected the data is parsed. For each variable that is configured for the 2D Graph, a tab with a table will be shown in the tool. Each table consists of 3 columns:

- Human readable date and time
- Timestamp as a 64Bit unsigned value (milliseconds from 1970-01-01 00:00)
- The value at that timestamp

To clear imported data simply press the *Clear* button.

Export Data to CSV

After data has been imported, press the *Export* button to show the export settings dialog.

The first step is to select what shall be exported:

- **Export Selected Tab Only**
If this option is selected, only the selected variable (active tab) will be exported into one csv file
- **Export All Tabs in Single Files**
If this option is selected, one csv file for each variable will be exported.
- **Export All Tabs in One Combined file** If this option is selected, one csv file will be exported that will contain all variable values with a column for each variable.

If a different separation character shall be used, this can be configured with **Separator character**. This can be handy because some language versions of spreadsheet applications treat the separation character differently (e.g. English Excel wants a , , whereas German Excel wants a ;).

If either Date and Time or the 64Bit timestamp is not needed in the CSV file, the checkmarks of **Export Date and Time** or **Export Timestamp** can be removed.

The last step before the export can begin is to select an output file (if **Export Selected Tab Only** or **Export All Tabs in One Combined file** is selected) or an output directory (if **Export All Tabs in Single Files** is selected)

When all export settings are correct, hit the **OK** button to start the export.

OEM documentation

Deploying the tool to the end user

The Graph History Tool is a Qt5 application and therefore has to be shipped with the matching Qt and runtime libraries. It should run on every 32Bit or 64Bit Windows version (starting with Windows 7).

The application and all the necessary libraries can be found in the roaming files installation path of the designer application. The sub-directory is `dev\extracted_components\pclient\simulation\graph_history_tool`. As long as the

graphHistoryTool.exe is inside this directory, the start.bat batch file can be used to start it.

To deploy the application for the end user, copy the following libraries from the shared_libraries directory into the graph_history_tool directory:

- Qt5Core.dll
- Qt5Gui.dll
- Qt5Widgets.dll
- libgcc_s_dw2-1.dll
- libstdc++-6.dll
- libwinpthread-1.dll
- the \platforms folder (as is, not the files from it directly)

After that the graph_history_tool directory can be zipped and sent to customers. The start.bat is then not needed anymore and the graphHistoryTool.exe can be started directly.

Adding new language translations

The Graph History Tool comes with two language translations (English and German). If other languages are needed, there is a way to add them:

The language translation is done with the Qt Linguist application (see [here](#)). If you want to create a translation on your own, you have to install Qt on your PC (download [here](#), make sure to install the Linguist application).

After installation open the Linguist application and open **one** of the existing translation files (the files with .ts suffix, e.g. graphhistorytool_English_en.ts). Now go to File -> Save As and choose a new name for the translation file (to show the language in the Settings menu of the Graph History Tool the language file needs to be called

whatever_<NATIVE_LANGUGAGE_NAME>_<LANGUAGE_ACRONYM>.ts, e.g. for spanish: *graphhistorytool_Spanish_es.ts*). After that go to Edit -> Settings. In this dialog the target language can be chosen. Chose the language and Country/Region then press OK and save the file.

Now you can open all translation files and start the translation process for the new language.

When the translation is finished, a binary translation file has to be created from the ts file. Sadly Qt Linguist does not provide a GUI tool for this operation so you have to do this on the command line: Open a command line and navigate to the directory where the .ts files are stored. Now type *lrelease *.ts*. This will create the binary translation files (suffix .qm). Place all .qm files in the application directory. When you open the Graph History Tool now, the new application should be available under Settings -> Language.

If lrelease.exe is not in your search path, you have to call it with the complete path, e.g. C:\workspace\Qt5.4\5.4\mingw491_32\bin\lrelease.exe *.ts

6.5.2 Arched Bargraph


The arched bargraph basically works like a [linear bargraph](#)⁵¹⁶ with the exception that it can be bent and the start and end angles can be adjusted.

The arched bargraph shares many properties with other objects. Find a description of them [here](#)⁴⁴⁸.

Angles

The angles of the arched bargraph can be changed with the Start Angle and End Angle properties (see below). Some screenshots with examples follow here:

- Start Angle 0, End Angle 360:

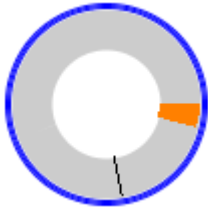

- Start Angle 0, End Angle 315:



- Start Angle 45, End Angle 0:



- Start Angle 135, End Angle 225:



- Start Angle 315, End Angle 225:



Arched Bargraph Specific Properties

Start Angle

The start angle of the arched bargraph can be defined with this property.

The start angle's 0° position is at 3 o'clock.

Default value: 0°

Possible values: 0° ... 360°

See examples above

End Angle

The end angle of the arched bargraph can be defined with this property.

The start angle's 0° position is at 3 o'clock.

Default value: 0°
Possible values: 0° ... 360°
See examples above

Draw Target Line

When enabling this property, a line will be drawn at the position of the [Target Value](#)⁴⁶⁰ property value.
Default value: Enabled
Possible values Enabled or disabled.

Target Line Color

The color in which the target line (see above) will be drawn.
Default value:black (RGB 0, 0, 0)
Possible values: Any 24Bit RGB color

Deflection Direction

The deflection direction defines how the value grows in an arched bargraph. Either clockwise or anti clockwise.
Default value: ClockWise
Possible values: ClockWise or AntiClockWise

Bar Graph Width

Since the Width property only defines the width of the bounding box of the arched bargraph it is possible to define the width (or thickness) of the arched bargraph with the Bar Graph Width property.
Default value: 20 pixel
Possible values: 1 ... (height of the object divided by 2 or width of the object divided by 2, whatever is smaller)

Fill Mode

If Fill Mode is enabled, the value will be shown as a filled area in the bargraph. If Fill Mode is disabled only a line will be drawn at the value's position.
Default value: Enabled
Possible values: Enabled or disabled.

Events

The following events can be configured for the arched bargraph object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#)⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.3 Button

The button object can display two states: Pressed or released.
To change the look & feel of the button, it can be configured with its properties.

For common object properties refer to [this page](#)⁴⁴⁸. Here only the button specific properties are described.

Example project: [Download this project](#) to see the different button events in action.

How to add pressed or released objects to the button

Two other objects can be added to a button. One indicating the released state of the button and one the pressed state.

The button supports the following child object types:

- Numeric Field
- String Field
- Arched Bargraph
- Linear Bargraph
- Meter
- List
- Picture Graphic
- Container

It is common to use String Fields or Picture Graphics for pressed and released objects. Containers can be used to design more complex buttons while keeping the "one object for pressed and one object for released state" constraint.

Note: If only one child is assigned it will be shown permanently on device whereas toggling "*Pressed State*" on PC tool will show one state empty and the other with the child.

Attention: While it is technically possible, do not put a container inside of a button and then another button inside the container. Such combinations are not supported or tested and will most likely lead to unexpected behavior.

How to add the objects to a button:

- Drop a button on a frame
- Make sure that the "*Pressed State*" property of the button is disabled
- Drag any supported object from the palette to the button in the designer area (or an existing object from project tree to the button in project tree)
 - The added object will now represent the release state of the button
- Enable the property "*Pressed State*"
- Drag any supported object from the palette to the button in the designer area (or an existing object from project tree to the button in project tree)
 - The added object will now represent the press state of the button

To assign another object to a button, follow the same steps above. A dialog will ask if the pressed/released object shall be replaced.

Pressed / Released Image

Alternatively to putting one or two Picture Graphic objects into the button, these properties can be used to add 1 or 2 images to the button without adding more objects.

Button Specific Properties

Draw Shadow (Theme dependent)

A button shadow can be drawn around the button that changes according to pressed or released state of the button. This is a visual help for the user to determine if the button is just pressed or not.

Disable this property if the design of the button is completely custom and the press/release state is distinguishable using the pressed and released objects (see above).

If this property is enabled, a small region between button background (or object inside button) and border of the button is reserved for the shadow. If it is disabled, the background of the button (or object inside the button) goes directly to the border.

Default value: Enabled

Possible value: Enabled or Disabled

Shadow Color (Theme dependent)

If "*Draw Shadow*" is enabled one can define the shadow color used to draw the shadow.

The background color of the shadow is the button background color which includes that. the background of the shadow is transparent if the button is configured as transparent.

The button shadow consists of two areas where one is drawn in the opaque color selected and the other is drawn in a half-transparent version of the same color.

Both colors are switched when button is pressed to simulate a kind of 3D effect of the pressed/released button.

Default value: Black.

Possible value: Any color allowed by standard color chooser.

Latching

Latching means: When a button is pressed and released, it toggles state and stays in the toggled state until it is pressed again.

Like that a latching button resembles a light switch whereas a non-latching button resembles a door-bell switch.

With this property this behavior can be enabled.

Default value: Disabled

Possible values: Enabled or Disabled

Please note that this property affects the behavior of the press and release events of the objects.

Pressed State

Switch between the release or pressed state of the button. This is important for having a preview of the object and also for adding pressed/released objects for the button (see above).

Note: If only one child is assigned to the button the other state will be shown as empty on PC tool but on the device this one child will show permanently - button shadow should be used to show button state in this scenario.

This property has no influence to runtime behavior.

Default value: Disabled

Possible values:

- Enabled (button is in pressed state)
- Disabled (button is in released state)

Pressed Object ID

The ID of the object that represents the pressed object of the button.

Will be automatically set when adding a pressed state object to the button (see above).

Can't be edited by hand.

Released Object ID

The ID of the object that represents the released object of the button.

Will be automatically set when adding a released state object to the button (see above).

Can't be edited by hand.

Pressed Image (Theme dependent)

Alternatively to putting one or two Picture Graphic objects into the button, this property can be used to add an image to the button. The image set in this property will be used as the pressed image. If no image is set for the Released Image property but for the Pressed Image property, the button will only show an image when it is pressed. Both properties should be set with an image.

Released Image (Theme dependent)

Alternatively to putting one or two Picture Graphic objects into the button, this property can be used to add an image to the button. The image set in this property will be used as the released image. If no image is set for the Pressed Image property but for the Released Image property, the button will only show an image when it is released. Both properties should be set with an image.

Events

The following events can be configured for the button object:

- OnPress
- OnRelease
- OnLongPress
- OnLongRelease
- OnDbClick
- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnCancel

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.4 Container



Tutorial video about the container object

<https://www.youtube.com/watch?v=6ttjYv3flRc>

The container object is only a "container" for other objects. It is not visible at runtime. A container can be used to group other objects and add a deeper hierarchy in the project tree.

The [Visibility property](#)^{□641} can be used to make all objects inside the container visible or invisible with just one command and no need to assign visibility properties to each object in the container. Also, moving a set of objects is easier when they are in a container. To put an object into a container, drag and drop the object into the container in the project tree.

When putting existing objects into a container, please note that the position of the object relative to the parent object will be used to position the object in the container.

I.e. if the object is in a frame that starts at position 0,0 then the container should also start at that position, otherwise the object will be moved to position + container position.

To put an existing layout of objects into a container and keep all positions, put the top left edge of the container at the top left edge of the page and re-size the container so that the objects you want to put in are within the container boundaries.

Attention!

Please do not try to override limitations of the objects by using containers, i.e. by putting a container inside of a button and then a button inside of the container in the button. Such combinations are not supported or tested and will most likely lead to unexpected behavior. Also, don't put containers inside of other containers.

6.5.5 Frame

The frame is the basic object that should be at least once on a page (maybe except a video page).

A frame needs to be placed on a page so that objects can be added to it. When creating a new page, a full screen frame will automatically be created.

Frames can be used to display a video from the device's analog video input (see property description below).

As many other objects, the frame has a lot of common properties. See [here](#)^{□448} for a description. Only frame specific properties will be described on this page.

Frame Specific Properties

Frame Type

This property has no effect and will be changed or removed in a future release.

For **Video Properties** please see [here](#)^{□553}.

Events

The following events can be configured for the frame object:

- OnPress
- OnRelease

See [here](#)^{□463} for the descriptions of all event and possible actions that can be assigned.

6.5.6 Gauges

The gauge object can be used to design gauges or other instruments requiring a needle (indicator).

The gauge shares many properties with other objects. Find a description of them [here](#)⁴⁴⁸.

Angle

The angle of a gauge can be changed with the Angle property.

For the full Gauge, Start and End Angle can be modified to change the range of the instrument as needed.

For the other Gauges, only the Start Angle can be modified. The End Angle will be calculated depending on the range of the gauge (270, 180 or 90 °).

Gauge Specific Properties

Start Angle

The start angle of the meter can be defined with this property.

The start angle's 0° position is at 3 o clock.

Default value: 0°

Possible values: 0° ... 360°

See examples above

End Angle

The end angle of the meter can be defined with this property.

The start angle's 0° position is at 3 o clock.

Default value: 0°

Possible values: 0° ... 360°

See examples above

Deflection Direction

The deflection direction defines how the value grows in the gauge. Either clockwise or anti clockwise.

Default value: ClockWise

Possible values: ClockWise or AntiClockWise

Needle Color (Theme dependent)

With this property the color of needle can be defined.

Note: This property has no effect if a *Needle Image* is used.

Note: See also common properties *Color Above Maximum* and *Color Below Minimum* which also have an influence on the needle color.

Default value: White (RGB 255,255, 255, 255)

Possible values: Any 24Bit ARGB color

Needle Image (Theme dependent)

Instead of the automatically drawn needle, a needle image can be assigned to the gauge to show a different kind of indicator.

The needle image should have the same size as the gauge and the needle in the image should always point to the 3 o'clock position.

Note that the image will be rotated around its center, so place the needle accordingly.

Example needle image:



Default value: No image

Possible values: Any image with supported format (bmp, jpeg, png, svg)

Note: To make the needle image look good when rotated, it is recommended to use scalable vector images (SVG). This prevents steps or anti aliasing artifacts.

Draw Arc (Theme dependent)

The arc is a small colored line around the gauge (see *Arc Color* below).

With this property the drawing of the arc can be enabled or disabled.

Default value: Disabled

Possible values: Enabled or disabled

Arc Color (Theme dependent)

The color of the arc of the gauge (see above).

Default value: Cyan (RGB 255,0, 255, 255)

Possible values: Any 24Bit ARGB color

Arc Width Factor (Theme dependent)

The width of the arc can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.03

Possible values: 0.0 ... 1.0

Draw Ticks (Theme dependent)

Ticks (small lines as value indicators) can be drawn around the gauge. With this property the drawing of the ticks can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Draw Minor Ticks (Theme dependent)

Ticks (small lines as value indicators) can be drawn between the "major" ticks around the gauge. With this property the drawing of the minor ticks can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Tick Color (Theme dependent)

The color in which the gauge's ticks are drawn.

Default value: Light grey (255,204,204,204)

Possible values: Any 32Bit ARGB color

Minor Tick Color (Theme dependent)

The color in which the gauge's minor ticks are drawn.

Default value: Light grey (255,204,204,204)

Possible values: Any 32Bit ARGB color

Number Of Ticks (Theme dependent)

The ticks around the gauge are evenly spread. The number of ticks can be defined with this property.

Default value (Gauge): 12

Default value (Gauge 270): 9

Default value (Gauge 180): 7

Default value (Gauge 90): 3

Possible value: 0 ... 360

Number Of Minor Ticks (Theme dependent)

The minor ticks between two "major" ticks are evenly spread. The number of minor ticks between to "major" ticks can be defined with this property.

Default value: 3

Possible value: 0 ... 360

Tick Height Factor (Theme dependent)

The height of the ticks can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.2

Possible values: 0.0 ... 1.0

Tick Width Factor (Theme dependent)

The width of the ticks can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.02

Possible values: 0.0 ... 1.0

Minor Tick Height Factor (Theme dependent)

The height of the minor ticks can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.08

Possible values: 0.0 ... 1.0

Minor Tick Width Factor (Theme dependent)

The width of the minor ticks can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.01

Possible values: 0.0 ... 1.0

Draw Tick Point (Theme dependent)

With this property the drawing of the tick points can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Tick Point Size Factor (Theme dependent)

With this property the size of the tick points can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.06

Possible values: 0.0 ... 1.0

Tick Point Color (Theme dependent)

With this property the color in which the gauge's tick points are drawn.

Default value: Light grey (255,204,204,204)

Possible values: Any 32Bit ARGB color

Tick Point Format (Theme dependent)

The format in which the gauge's tick points are drawn.

Default value: Oval

Possible values: Oval, Rect(-angle)

Draw Values (Theme dependent)

Values can be drawn at the end of the ticks around the gauge. With this property the drawing of the values can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Values Distance Factor (Theme dependent)

The distance of the values from the ticks can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.12

Possible values: 0.0 ... 1.0

Font Auto Scaling (Theme dependent)

With this property the automatic scaling of the values next to the ticks can be enabled or disabled. If enabled, the Font size will increase with the size of the object. Please note that the size defined in the [Font Attribute](#)⁸¹ is disregarded for the font scaling if this property is enabled.

Default value: Enabled

Possible values: Enabled or disabled.

Font Scaling Factor (Theme dependent)

The scaling factor of the values can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object. Please note that the size defined in the [Font Attribute](#)⁸¹ is disregarded for the font scaling.

Default value: 0.09

Possible values: 0.0 ... 1.0

Offset, Scale, Offset 2

Two offsets and a scale value can be defined that will be used in the following way:

displayed value = (original value + Offset 1) * scale + Offset 2

offsets:

Default value: 0

Possible values: -2147483648.0 ... 2147483647.0

scale:

Default value: 1

Possible values: -2147483648.0 ... 2147483647.0

Draw Boundary Bar (Theme dependent)

A colored bar can be drawn around the gauge. The bar is divided in 3 regions, following the min and max value settings. With this property the drawing of the boundary bar can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Boundary Bar Width Factor (Theme dependent)

The width of the Boundary Bar can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.02

Possible values: 0.0 ... 1.0

Draw Digital Value (Theme dependent)

A digital values can be drawn inside the gauge. With this property the drawing of the digital value can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Digital Value Font Scaling Factor (Theme dependent)

The scaling factor of the digital value can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.25

Possible values: 0.0 ... 1.0

Digital Value Background X Offset Factor (Theme dependent)

The horizontal position of the digital value box inside the gauge can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.35

Possible values: -1.0 ... 1.0

Digital Value Background Y Offset Factor (Theme dependent)

The vertical position of the digital value box inside the gauge can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.35

Possible values: -1.0 ... 1.0

Digital Value Background Width Factor (Theme dependent)

The width of the digital value box inside the gauge can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.45

Possible values: 0.0 ... 2.0

Digital Value Background Height Factor (Theme dependent)

The width of the digital value box inside the gauge can be modified. The reference value (which equals a factor of 1) is the radius of the gauge object.

Default value: 0.3

Possible values: 0.0 ... 2.0

Events

The following events can be configured for the gauge object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all events and possible actions that can be assigned.

6.5.7 Lamp

The lamp object is based on the [button object](#) ⁵⁰⁴. It can display two states: On or off / lit or not lit.

The lamp can be turned on or off by a variable reference. 0 or false equals off, 1 or true equals on.

In difference to the button object, the images for the lamp are not included as separate Picture Graphic objects.

Instead, there are two new parameters, Pressed Image and Released Image.

For common object properties of the object refer to [this page](#) ⁴⁴⁸. Here only the lamp specific properties are described.

Please note that the "Set as Input" property for the lamp object is disabled by default, as it is rather an indicator than a button. But it can still be enabled to be used like a button.

Lamp Specific Properties

Draw Shadow

A button shadow can be drawn around the button that changes according to pressed or released state of the button. This is a visual help for the user to determine if the button is just pressed or not.

Disable this property if the design of the button is completely custom and the press/release state is distinguishable using the pressed and released objects (see above).

If this property is enabled, a small region between button background (or object inside button) and border of the button is reserved for the shadow. If it is disabled, the background of the button (or object inside the button) goes directly to the border.

Note: Even though the lamp is a round object visually, the button is still rectangle, and so is the shadow, if this property is enabled.

Default value: Disabled

Possible value: Enabled or Disabled

Shadow Color

If "*DrawShadow*" is enabled one can define the shadow color used to draw the shadow.

The background color of the shadow is the button background color which includes that. the background of the shadow is transparent if the button is configured as transparent.

The button shadow consists of two areas where one is drawn in the opaque color selected and the other is drawn in a half-transparent version of the same color.

Both colors are switched when button is pressed to simulate a kind of 3D effect of the pressed/released button.

Default value: Black.

Possible value: Any color allowed by standard color chooser.

Latching

Latching means: When a button is pressed and released, it toggles state and stays in the toggled state until it is pressed again.

Like that a latching button resembles a light switch whereas a non-latching button resembles a door-bell switch.

With this property this behavior can be enabled.

Default value: Disabled

Possible values: Enabled or Disabled

Pressed State

Switch between the release or pressed state of the button. This is important for having a preview of the object and also for adding pressed/released objects for the button (see above).

Note: If only one child is assigned to the button the other state will be shown as empty on PC tool but on the device this one child will show permanently - button shadow should be used to show button state in this scenario.

This property has no influence to runtime behavior.

Default value: Disabled

Possible values:

- Enabled (button is in pressed state)
- Disabled (button is in released state)

Pressed Object ID

Not used for this object type.

Released Object ID

Not used for this object type.

Toggle Background Image

With this property the usage of the Pressed Image and Released Image can be turned on or off.

Pressed Image

The image set in this property will be used as the pressed image. By default, this will be set to the standard lamp pressed image.

Released Image

The image set in this property will be used as the released image. By default, this will be set to the standard lamp released image.

Events

The following events can be configured for the button object:

- OnPress
- OnRelease
- OnLongPress
- OnLongRelease
- OnDbClick
- OnOpenForInput
- OnEnabledWithFocus

- OnEnabledWithoutFocus
- OnValueChange
- OnCancel

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.8 Linear Bargraph

The linear bargraph is an object for showing a numerical value in a graph.

The linear bargraph shares a lot of common properties with other objects. See [here](#) ⁴⁴⁸ for a description. Here only the linear bargraph specific properties are described.

[Download this project](#) to see an example how to use the linear bargraph. A PDF is included which explains how the project works.

Linear Bargraph Specific Properties

Direction

The direction of the fill or value line of the bargraph.

For vertical bargraphs a positive direction means that the value grows from bottom to top.

A negative direction means that the value grows from top to bottom.

For horizontal bargraphs a positive direction means that the value grows from left to right. A negative direction means that the value grows from right to left.

Default value: Positive

Possible values: Positive or Negative

Axis Orientation

A bargraph can either be vertical or horizontal. Depending on this property the drawing of the bargraph itself and the value changes accordingly.

Default value: Vertical

Possible values: Vertical or Horizontal

Draw Target Line (Theme dependent)

When enabling this property, a line will be drawn at the position of the [Target Value](#) ⁴⁶⁰ property value.

Default value: Enabled

Possible values Enabled or disabled.

Target Line Color (Theme dependent)

The color in which the target line (see above) will be drawn.

Default value:black (RGB 0, 0, 0)

Possible values: Any 24Bit RGB color

Fill Mode (Theme dependent)

If Fill Mode is enabled, the value will be shown as a filled area in the bargraph. If Fill Mode is disabled only a line will be drawn at the value's position.

Default value: Enabled

Possible values: Enabled or disabled.

Draw Ticks (Theme dependent)

It is possible to draw ticks - small lines at the side of the bargraph. The color and the number of the ticks can be configured with the properties below.

Default value: Enabled

Possible values: Enabled or Disabled

Tick Color (Theme dependent)

Define the color of the ticks that shall be drawn with this property. Only has an effect if *Draw Ticks* is enabled.

Default value: black (0, 0, 0)

Possible values: any 24Bit RGB color

Number Of Ticks (Theme dependent)

As the name of this property implies, the number of the ticks that shall be drawn if Draw Ticks is enabled, can be configured with this property.

The ticks are evenly positioned along the length of the bargraph.

Default value: 12

Possible values: 0 ... 32767 (but not greater than the height of a vertical bargraph or width of a horizontal bargraph)

Needle Image (Theme dependent)

A so called Needle Image can be assigned to a bargraph as a value indicator. It will be moved at the horizontal or vertical axis of the bargraph according to it's value.

Please note that there is a little different behavior for SVG images. If an SVG image shall be used as needle, it needs to have the same size as the bargraph and the needle has to be placed directly in the middle of the needle SVG image. The preview in the design tool will also be different to the look at runtime.

Default value: No image

Possible image: Any image from file system

Events

The following events can be configured for the linear bargraph object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.9 List



Tutorial video about the list object

<https://www.youtube.com/watch?v=zNNjsMrO4Hk>

The list object is a useful object to show other objects based on a value (e.g. two icons in a list showing a different state).

A list always contains other objects. It is possible to either display only one object at a time or multiple objects, this can even be defined for the different navigation states of the list (see properties *Items Visible (Normal Mode)* and *Items Visible (Editing Mode)*). This makes it possible to show something like a drop down menu (1 item visible in normal mode, more visible in editing mode).

Note: At runtime the list object's height is automatically calculated based on the number of currently displayed child items (and their item height). This also means that a list that has no child items will NOT be displayed at all. In the designer the list is always shown in full height based on the properties *Items Visible (Normal Mode)* or *Items Visible (Editing Mode)* even if no or less children are present.

As with all other objects there are some common object properties that are also used by the list object. See [here](#) ⁴⁴⁸ for a description of the common properties.

The list specific properties are listed below.

List Specific Properties

Item Height

The height of a list object can not be changed via the common *Height* property. The height of the list is defined by a combination of the *Item Height* property, the *Border Width* (and *Draw Border*) and the number of visible items in the list (see *Items Visible (Normal Mode)* and *Items Visible (Editing Mode)* below).

Use this property to define the height of each item (other object) in the list.

Default value: 30 pixel

Possible values: 1 ... 1280 pixel

List Item Mode

This property is only a preview for the two list modes that are available (normal or editing). It has no effect on runtime behavior.

Note: This property can only be changed if the property *Open For Input* is enabled.

Default value: Normal

Possible values: Normal or Editing

Items Visible (Normal Mode)

With this property it can be defined how many items (or objects) are visible in normal mode of the list (when it is currently not edited (not open for input)).

Default value: 1

Possible values: 1 ... 255

Items Visible (Editing Mode)

When a list is edited (made open for input by the user) it is possible to show more items than in normal mode. Like this it is possible to create a drop down box that shows the user more options.


Note: This property can only be changed if the property *Open For Input* is enabled.

Default value: 1

Possible values: 1 ... 255

List Items

When editing this property a dialog will pop up that provides some ways to change the items in a list

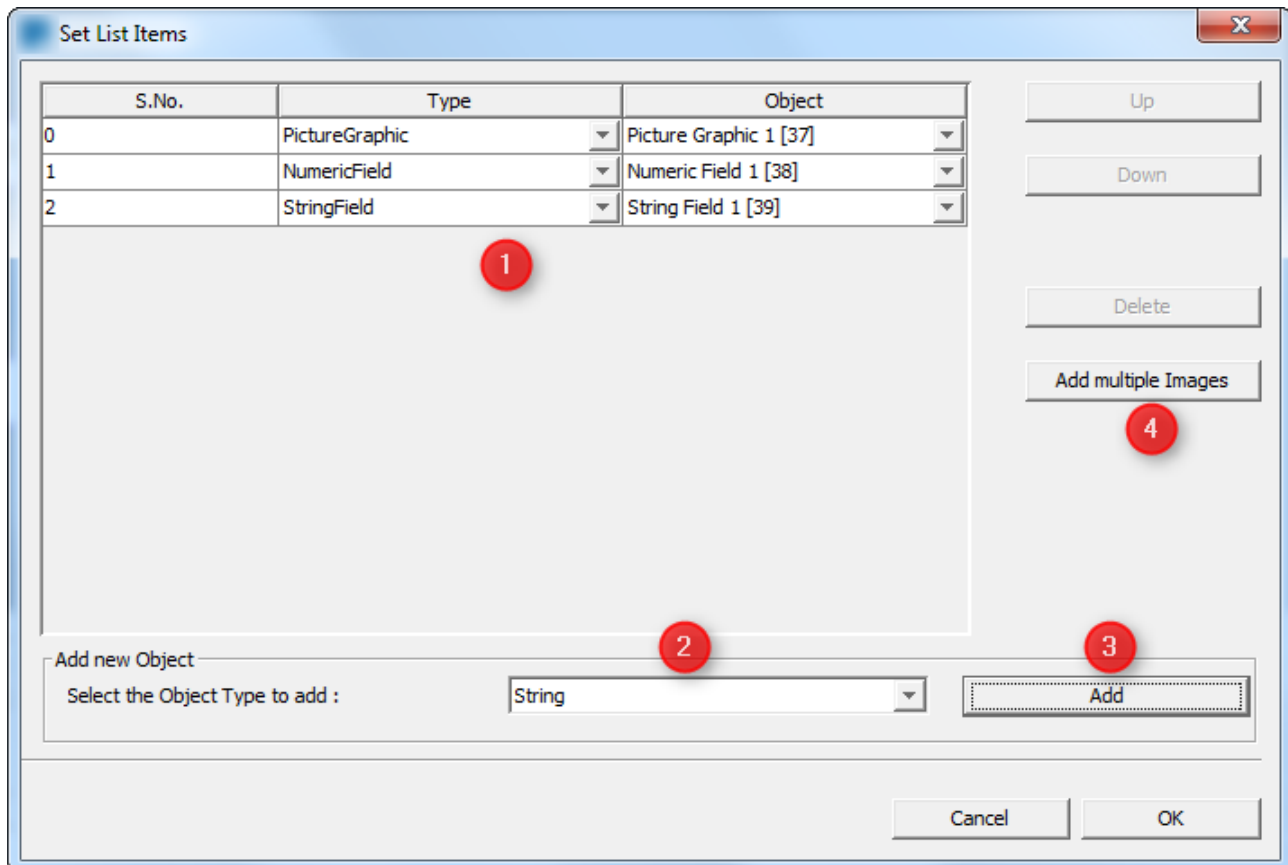

-Add a single object

- (1) In the upper part of the dialog, the items of List is shown.
- (2) In the lower part of the dialog, objects can be added to the selected list. To change which type of object shall be added, the drop down box *Select the Object Type to add* can be used.
- (3) When the settings are made, the *Add* button can be pressed to add the object to the list.
- (4) With the button *Add multiple Images* many images can be loaded into the list object at once. New Picture Graphic objects will automatically be created, one for each image.

-Delete a single object

Just select one object in the table and hit the *Delete* button on the right side of the dialog.

-Add multiple images

It is possible to add multiple images to the list in one step.

Click the *Add multiple Images* button on the right. A file dialog will appear. In this file dialog open as many images (from the same directory) as wanted.

For each selected image a new picture graphic object will automatically created (with default settings) and added to the list.

-Change the order of the items

The table in the dialog shows all items in the list. The one of the top is the one that will be shown when setting value 0 the list. The one on the bottom of the list is the one that is shown when the highest value is set.

To change the order simply select one item in the table and then click either the *Up* or *Down* button on the right side of the dialog.

-Number Of List Items

This property can not be edited. It just shows the number of items inside the list.


-Touch Input (new in 2020.4.2)

This property is not visible in the OPUS Projektor property window. It can be set with JavaScript.

The syntax is as follows:

```
setProperty(<list_id>,"Touch Input",true);
```

As a result, a list object in editing mode will now look like this:

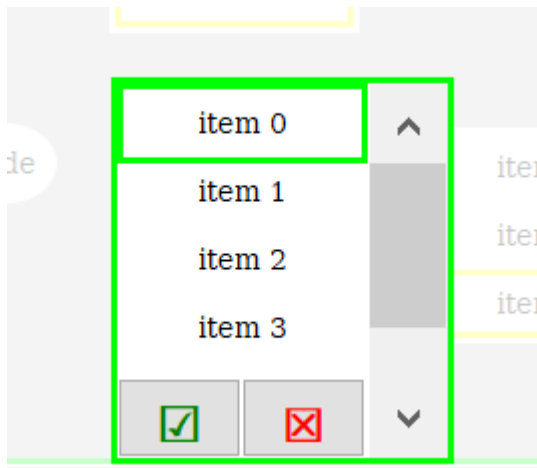

There are two buttons, one Enter, one Escape, and the background of the page will be half-transparent to put visual focus on the edited list.

The default value for this is false, so it needs to be activated e.g. on the event OnPageInit of the page where the list object is.

Behavior details

Some details as to how the list objects behaves in certain special situations:

If only one item is shown the list object shows

- **the item belonging to the value** if the item is valid (not a NULL-ID and not rendered invisible via visibility)
- **nothing** if value is below max value and the item is invalid
- **the last item** if the value is equal to or above max value (and it is visible)

If more than one item is shown the list widget

- **shows as many items as configured** if there are enough valid ones
- **shows all valid items** if there are less than items configured for the list (note that this will result in reduced height of the widget)
- current value/selected item is identified by a focus frame using the 'ENABLED_WITH_FOCUS' state of the item
- if the item does not have such property (e.g. because it's a container) the respective setting of the list is used
- if an invalid item is selected, no focus frame is shown
- the last item is shown if the value is equal to or above max value (and it is visible)

- add an invalid item at the end of the list if nothing should be shown for values above the list's range
- If there is only one valid item in a multi-item list, the list is expanded to two items so that the valid one is always visible
- This shows the 'null item' at the end of the list but avoids showing nothing where a single item list would do that
- While editing only valid items can be selected and the value will be set accordingly

FAQ

How to add an object to a list

There are different ways to add an object to a list:

1. Drag a new object from palette to the list on the designer area
2. Drag an existing object from the project tree to the list in the project tree
3. Edit the property *List Items* (see description below).
4. Copy an existing object and paste it into the list (the size of the pasted object is automatically adjusted so take care when using paste as reference since the original object will also be modified)

How can I show / hide / customize a scroll bar for all list objects when the list is open for input?

Go to the project properties of the project and then to the *Object* section.

On the bottom of the dialog there is an option *Size of List object scrollbar*.

Set this to 0 to disable all scroll bars.

Set this to the width the scroll bars shall have to customize it (if touchscreen editing is preferred, this should be set to at least 50 pixel so that the user is able to touch the scroll bar).

Note that the scroll bar is only shown at runtime.

Events

The following events can be configured for the list object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnGetValue
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.10 Meter



Tutorial video about the meter object

<https://www.youtube.com/watch?v=I9mp9Z5xAjM>



Tutorial video about the hour glass demo project


<%HOUGLASS_METER%>

The meter can be used to design gauges or other instruments requiring a needle (indicator). The meter shares many properties with other objects. Find a description of them [here](#)⁴⁴⁸.


Angles

The angles of a meter can be changed with the Start Angle and End Angle properties (see below).

The spanning direction for the meter is always counterclockwise:

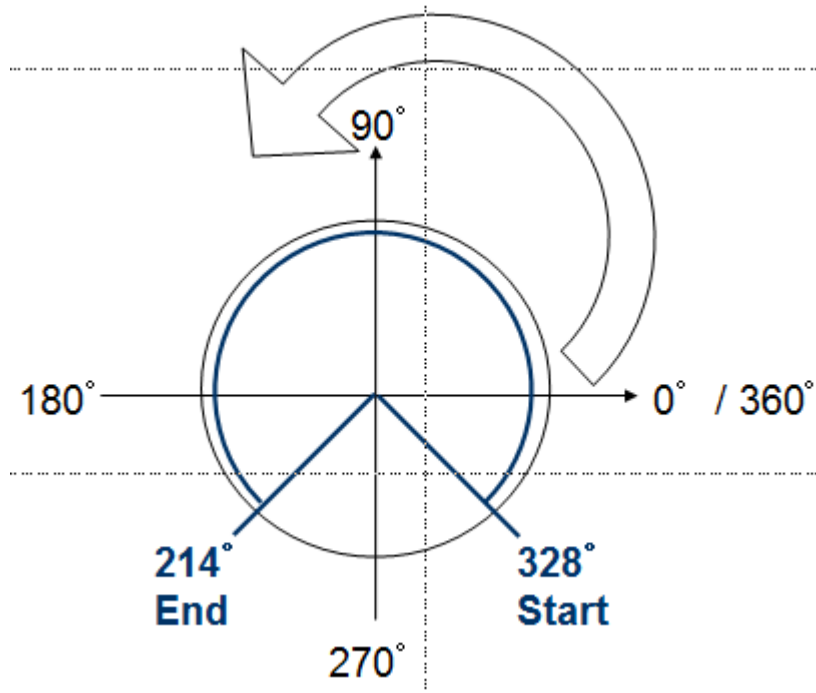

Screenshot with some meter examples:

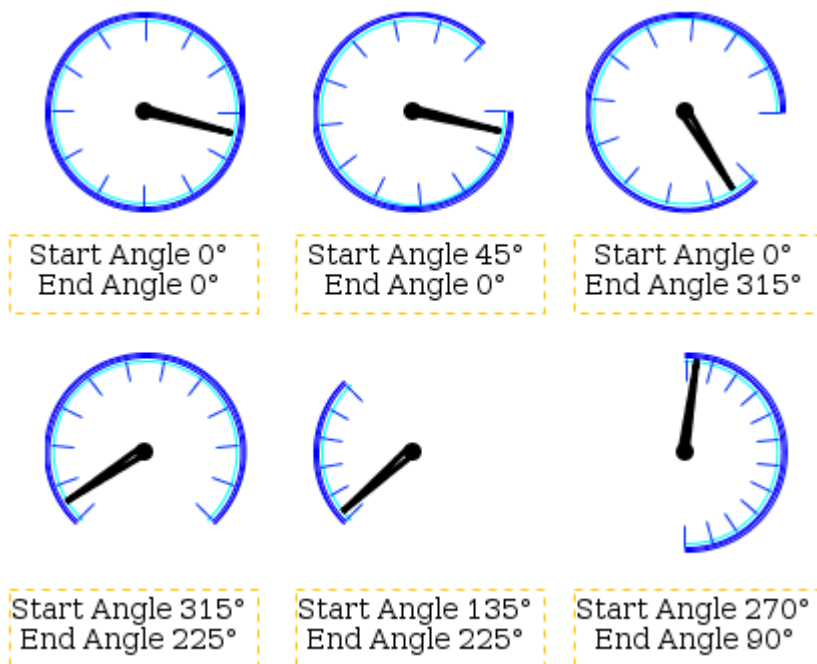

Meter Specific Properties

Start Angle

The start angle of the meter can be defined with this property.

The start angle's 0° position is at 3 o'clock.

Default value: 0°

Possible values: 0° ... 360°

See examples above

End Angle

The end angle of the meter can be defined with this property.

The start angle's 0° position is at 3 o'clock.

Default value: 0°

Possible values: 0° ... 360°

See examples above

Deflection Direction

The deflection direction defines how the value grows in the meter. Either clockwise or anti clockwise.

Default value: ClockWise

Possible values: ClockWise or AntiClockWise

Needle Color (Theme dependent)

With this property the color of needle can be defined.

Note: This property has no effect if a *Needle Image* is used.

Note: See also common properties *Color Above Maximum* and *Color Below Minimum* which also have influence on the needle color.

Default value: Signal blue (RGB 0, 51, 255)

Possible values: Any 24Bit RGB color

Needle Image (Theme dependent)

Instead of the automatically drawn needle, a needle image can be assigned to the meter to show a more beautiful indicator.

The needle image should have the same size as the meter and the needle in the image should always point to 3 o'clock position.

Example needle image:



Default value: No image

Possible values: Any image with supported format (bmp, jpeg, png, svg)

Note: To make the needle image look good when rotated, it is recommended to use scalable vector images (SVG). This prevents steps or anti aliasing artifacts.

Draw Arc (Theme dependent)

The arc is a small colored line around the meter (see *Arc Color* below).

With this property the drawing of the arc can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Arc Color (Theme dependent)

The color of the arc of the meter (see above).

Default value: Cyan (RGB 0, 255, 255)

Possible values: Any 24Bit RGB color

Draw Ticks (Theme dependent)

Ticks (small lines as value indicators) can be drawn around the meter. With this property the drawing of the ticks can be enabled or disabled.

Default value: Enabled

Possible values: Enabled or disabled

Tick Color (Theme dependent)

The color in which the meter's ticks are drawn.

Default value: Signal blue (0, 51, 255)

Possible icons: Any 24Bit RGB color

Number Of Ticks (Theme dependent)

The ticks around the meter are evenly spread. The number of ticks can be defined with this property.

Default value: 12

Possible value: 0 ... 360

Events

The following events can be configured for the meter object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.11 Multimedia Player



Tutorial video about the Multimedia Player

<https://www.youtube.com/watch?v=ZDMf8XfCmaY>

[Download this project](#) to see a basic implementation of the Multimedia Player in a project.

The multimedia player is a complex object which contains other basic objects. Each basic object is registered in the player itself and takes a special function. The player represents a predefined construction kit which is fully customizable.

A media player can be placed on a frame and is used for playing audio or video files. As many other objects, the multimedia player has a lot of common properties. See [here](#) ⁴⁴⁸ for a description. Only multimedia player specific properties will be described on this page.

Hint: The Multimedia Player object is only available for device panels with audio capabilities. Otherwise you won't see this object in the palette.

Please note:

If you want to use the MP4 formats in your project it is necessary that you purchase a license at <https://www.mpegla.com/>.


MP3 seems to be free of licenses as of now:

<https://www.iis.fraunhofer.de/en/ff/amm/consumer-electronics/mp3.html>.

For MP4 you need to license "MPEG-4 Visual (Part 2)" and "AVC/H.264 (MPEG-4 Part 10)" in order to use both formats. If you only want to playback MP4 video files the H.264 license should be enough.

If in doubt, please contact the companies and ask for license assistance.

Multimedia Player Controls / Components

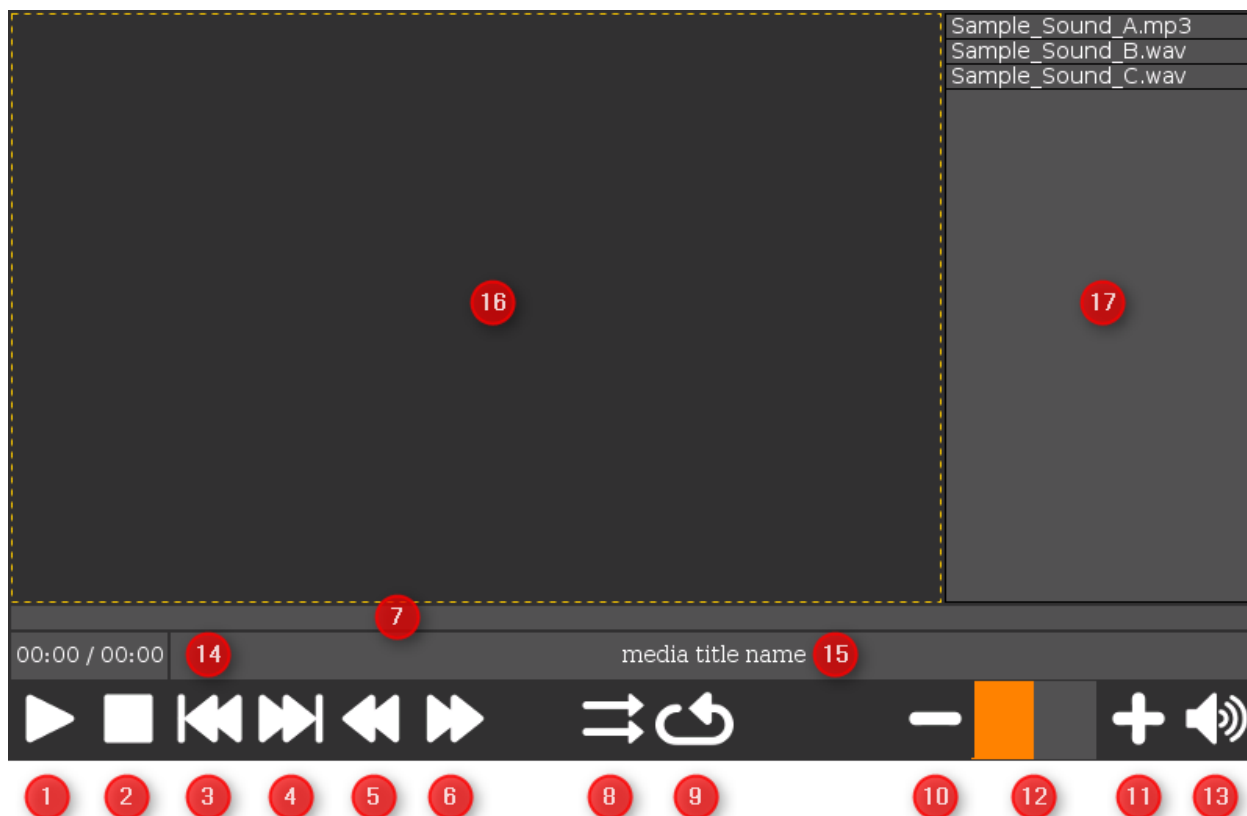

	Name	Type	Events / Actions	Description
1	Play	Button	<u>OnPress</u> Set Media Player Command Command: play Value: Value Not Set <u>OnRelease</u> Set Media Player Command Command: pause Value: Value Not Set	<p>If the "play" command is executed, the current media file will be played. The media time string field (14) and position bargraph (7) will be updated with the current playback time. If no media is set or if there is a playback error, the play button will automatically set to the released state again.</p> <p>If the "pause" command is executed while playback is in progress, the playback will be paused. Executing the pause command while the playback is paused or stopped will have no effect.</p> <p>The button includes two picture graphics for showing play or pause graphics depending on the pressed state.</p>
2	Stop	Button	<u>OnRelease</u> Set Media Player Command	<p>Executing the "stop" command while playback is in progress will stop the playback. The value of the</p>


	Name	Type	Events / Actions	Description
			Command: stop Value: Value Not Set	media time string field (14) will be set to "00:00 / <totalTime>" and the position bargraph's (7) current value will be set to 0. The play button will automatically be set to the released state. If the stop command is executed while no playback is in progress, it will have no effect.
3	Previous	Button	<u>OnRelease</u> Set Media Player Command Command: previous Value: Value Not Set	When the "previous" command is executed, the media file before the current file in the playlist (17) will be selected. If the current file is the first file in the playlist, pressing the previous button will have no effect.
4	Next	Button	<u>OnRelease</u> Set Media Player Command Command: next Value: Value Not Set	When the "next" command is executed, the media file after the current file in the playlist (17) will be selected. If the current file is the last file in the playlist, pressing the next button will have no effect.
5	Position Decrease	Button	<u>OnRelease</u> Set Media Player Command Command: set position Value: -10	By executing the "set position" command without a value, the current value of the position bargraph (7) is used to set the playback position of the current file. If a value is provided, this value is used as an offset to set the current position as long as it is not longer than the total length of the current media file.
6	Position Increase	Button	<u>OnRelease</u> Set Media Player Command Command: set position Value: +10	
7	Position Bar	Linear Bargraph	<u>OnValueChange</u> Set Media Player Command Command: set position Value: Value Not Set	
8	Shuffle	Button	<u>OnPress</u> Set Media Player Command Command: shuffle Value: Value Not Set <u>OnRelease</u> Set Media Player Command	If the "shuffle" command is executed, the playlist order will be randomized. If the media player is in play state, the current selected file shall be still continued. The button includes two picture graphics for showing shuffle or not

	Name	Type	Events / Actions	Description
			Command: shuffle Value: Value Not Set	shuffle graphics depending on the pressed state.
9	Loop	List	<u>OnValueChange</u> Set Media Player Command Command: loop Value: Value Not Set	<p>By executing the "loop" command, the next loop mode will be applied. The initial loop mode is 2.</p> <p>This list shall have three picture graphics as children. Each represents a different loop mode:</p> <p>At value 0: Loop off (image shows a not-closed ellipse)</p> <p>At value 1: Loop current file (image shows ellipse with two arrow heads)</p> <p>At value 2: Loop all (when end of playlist was reached, jump to start of playlist) (image shows ellipse with one arrow head)</p>
10	Volume Decrease	Button	<u>OnRelease</u> Set Media Player Command Command: set volume Value: -10	When executing the "set volume" command without a value, the current value of the volume bargraph (12) is used to set the volume of the current playback. If a value is provided, this value is used to set the volume of the current playback. The volume bargraph will then be updated with the set value.
11	Volume Increase	Button	<u>OnRelease</u> Set Media Player Command Command: set volume Value: +10	
12	Volume Bar	Linear Bargraph	<u>OnValueChange</u> Set Media Player Command Command: set volume Value: Value Not Set	The volume settings will also work if currently no media file is selected, they will be applied as soon as a media file is set. The volume settings are applied to all media files of this multimedia player and are not specific to one certain file.
13	Volume ON/OFF	Button	<u>OnPress</u> Set Media Player Command Command: mute Value: Value Not Set <u>OnRelease</u>	When executing the "mute" command, the volume of the currently played back media file is internally set to 0. The value of the volume bargraph (12) will not be changed and remains the same.

	Name	Type	Events / Actions	Description
			Set Media Player Command Command: unmute Value: Value Not Set	When executing the "unmute" command, the current volume of the volume bargraph (12) is used to set the volume of the currently played back media file. The button includes two picture graphics for showing mute or unmute graphics depending on the pressed state.
14	Media Time	String Field		This information string field shows the current time of the playback and the total time of the media file (e.g. "00:42 / 03:14")
15	Media Title	String Field		The Field shows the current played or paused media file
16	Display	Container		The display is an content area which showing the video or the album art of the audio file. (If not available, nothing is shown here).
17	Playlist	Table		The playlist shows the currently selected media files at run and design time. Hints: At design time there are no scrollbars visible. At runtime you can scroll the playlist by changing its "Preview Value" or via encoder after enabling the "Set As Input" property.

Multimedia Player State Machine

The following graphic shows the implemented state machine of the multimedia player object at runtime.

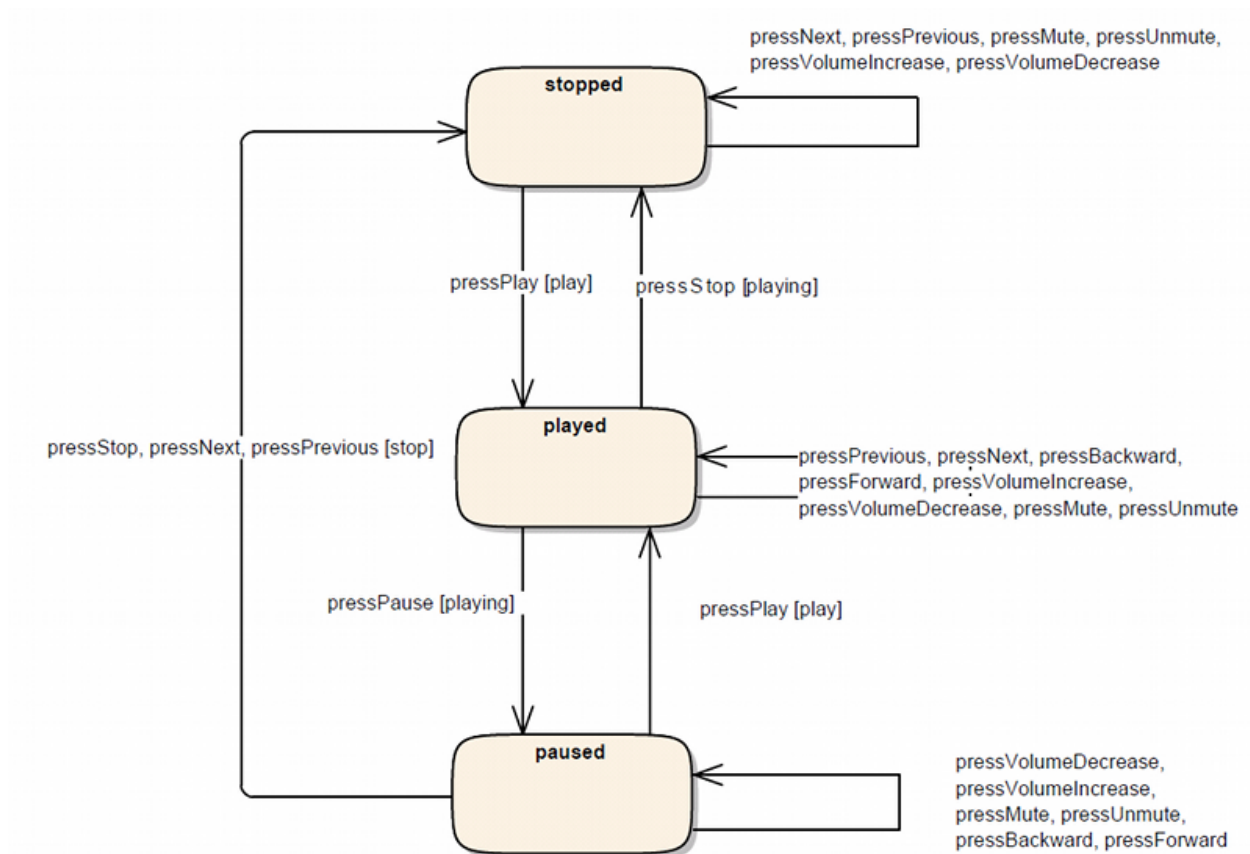

Multimedia Player Specific Properties

The graphic below shows the default property states of the multimedia player object.

Multimedia Player Specific	
Fit To Frame Size	<input type="checkbox"/>
Auto Rearrange Controls	<input checked="" type="checkbox"/>
Show Display	<input checked="" type="checkbox"/>
Show Playlist	<input type="checkbox"/>
Show Backward/Forward Buttons	<input type="checkbox"/>
Show Volume Bar Buttons	<input type="checkbox"/>
Full Path In Title	<input type="checkbox"/>
Playlist Media Files	Value not set <input data-bbox="1029 1518 1053 1552" type="button" value="..."/>
Playlist Width	150

Fit To Frame Size

Enable this property to adapt the size of the multimedia player to the parent frame object.

Default value: Disabled

Possible values:

- Disabled: The Multimedia Player can be dynamically scaled to the desired size.
- Enabled: The Multimedia Player will be scaled to the parent frame size.

Auto Rearrange Controls

This property activates / deactivates the internal layout manager of the multimedia player object. The manager takes

care about the positioning and sizing of all included objects in design time. The layout manager has no effect at runtime.

Resizing is only done when the object size is changed.

Default value: Enabled

Possible values:

- Disabled: The Multimedia Player objects will not be sized and positioned when changing the size of the Multimedia Player object.
- Enabled: The Multimedia Player objects will be sized and positioned automatically when changing the size of the Multimedia Player object.

Show Display

This feature removes the display container to use the multimedia player as a pure audio player or as a playback control bar:



Default value: Enabled

Possible values:

- Disabled: Removes the display container.
- Enabled: Adds a display container.

Show Playlist

The playlist shows the currently selected media files at runtime and design time. But in the latter case without scrollbars.

Default value: Disabled

Possible values:

- Disabled: Removes the playlist table.
- Enabled: Add a new playlist table.

Show Backward / Forward Buttons

If the target device has no encoder to set the media position by using the position bar, this property can be enabled to add a backward and a forward button to the multimedia player. With these buttons the media position can be increased or decreased

Default value: Disabled

Possible values:

- Disabled: Removes the backward / forward buttons from the multimedia player.
- Enabled: Adds the backward / forward buttons to the multimedia player.

Show Volume Bar Buttons

If the target device has no encoder to set the volume by using the volume bar, this property can be enabled to add a volume increase and decrease button to the multimedia player. With these buttons the volume value can be increased or decreased

Default value: Disabled

Possible values:

- Disabled: Removes the volume increase / decrease buttons).
- Enabled: Add's the volume increase / decrease buttons.

Full Path In Title

This property shows the full path of the played media file in the title string field at runtime instead of only the file name.

Default value: Disabled

Possible values:

- Disabled: The media title stringfield shows only the filename
- Enabled: The media title stringfield shows the full path of the played media file.

Playlist Media Files


By clicking on this property, a media file chooser dialog will be displayed. Here the user can modify his playlist.

This dialog supports the following operations: “Add” (1), “Remove” (2), “Up” (3) (playlist position), “Down” (4) (playlist position).

Default value: empty

Possible values: Multiple media files in the supported formats (mp3, mp4, mka, mkv, mp4, oga, ogg, ogv, wav, wma, wmv).

See the [FAQ](#)⁵²⁵ section below about codec information

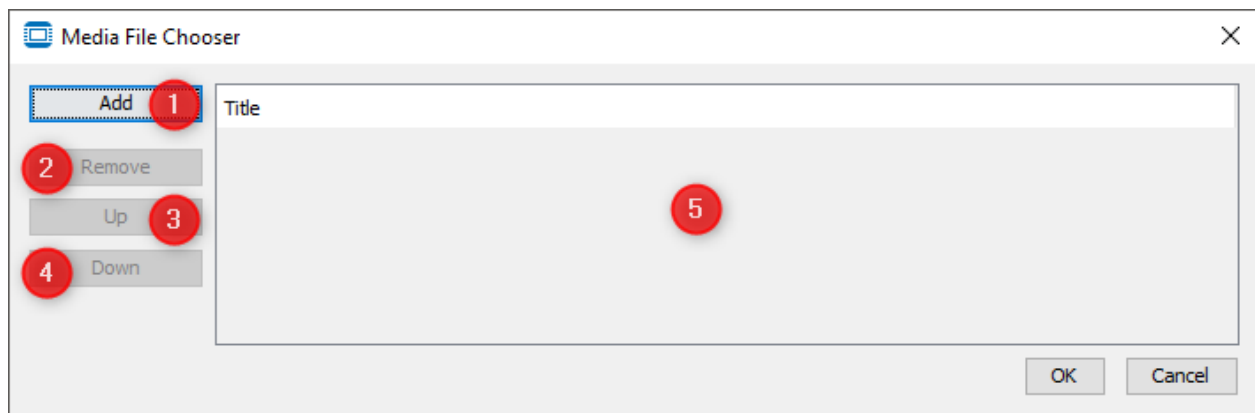

Playlist Width

This value adjusts the width of the playlist if it is shown. The state of this property is depending on the value of the “Show Playlist” property.

Default value: Disabled

Possible values: 1 ... width of the multimedia player object - 2 x (default component gap = 2 + border width) -1

Multimedia Player Control Properties

The ID's of all the control objects are stored as properties in the media player object. If an object is not needed , it can be deleted.

The id of deleted control objects will be set to "-1." Of course it is also possible to add / register a control object again.

Restrictions for the registration of new control objects:

- Only objects which are included in the multimedia player component can be registered.
- The object which is to be registered must contain all required events, because the default events/actions will be registered again.
(e.g. it is also possible to register an arched bargraph object as volume bar instead the default linear bargraph object, because both objects have the "OnValueChanged" event)

Hint: If the assignment of the new control object fails, the last valid id will retain

The group "Multimedia Player Controls" includes the following properties:

Multimedia Player Controls	
Play Button ID	65
Stop Button ID	66
Previous Button ID	67
Next Button ID	68
Shuffle Button ID	69
Loop List ID	70
Volume Button ID	72
Volume Bar ID	71
Volume Increase Button ID	-1
Volume Decrease Button ID	-1
Position Bar ID	75
Forward Button ID	-1
Backward Button ID	-1
Title StringField ID	73
Position StringField ID	74
Display ID	76
Playlist ID	-1

Events

The following events can be configured for the multimedia player object:

- OnPress
- OnRelease

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

FAQ

What video and audio codecs are supported?

Video

The following video codecs have been verified on the device:

- H264 - MPEG-4 AVC (part 10) (avc1)
- MPEG-1/2 Video (mpgv)
- Motion JPEG Video (MJPEG)
- Google/On2's VP8 Video (VP80)

The following video codecs are currently NOT SUPPORTED on the device:

- Theora Video
- MPEG-4 Video (DX50) => DIVX version 5
- Any Windows media format in an AFS container (VC1, WMV)

Audio

The following audio codecs have been verified on the device:

- MPEG Audio layer 1/2/3 (mpga)
- Vorbis Audio (vorb)
- Raw wave files in different format (tested: PCM S16 LE (araw), PCM U8 (araw))

Why should VLC be installed?

For using the multimedia player object it is NOT necessary that VLC is installed on your PC but it can help in the following topics:

- Check what codecs are used by specific media file
- Convert (transcode) a media file to a supported codec

VLC can be downloaded [here](#). It is open source software and can be installed without charge (please consider a donation :)).

What is the suggested video and audio codec and how to convert my video?

We suggest to use .mp4 files with "H264 - MPEG-4 AVC (part 10) (avc1)" as video codec and "MPEG AAC Audio (mp4a)" as audio codec.

To convert to a supported codec, VLC (see above) can be used. [Here](#) is a short manual.

What is the difference between the multimedia playback on Windows simulation and on the device

The frontend for playing back media files with the MultimediaPlayer object is the same on both platforms. However, the backend is completely different. On the Windows PC the simulation uses the capabilities of the operating system and the installed software codecs. On the device the hardware decoding functions of the CPU are directly used to minimize CPU load.

Because of this difference, the playback can be different on both platforms. One of the biggest differences can be that a media file that can be played back in the simulation on the Windows PC cannot be played back on the device. This can happen if a codec is installed on the PC but is not supported by the CPU on the device. Other differences that may appear are different timings when executing a multimedia action or (e.g. when going to the next file in the playlist the total time of the next file might appear faster on one platform than on the other).

We strongly recommend that testing is not only done with the Windows simulation but also directly on the device!

Why is my media file not playing in the Windows simulation?

There might be a codec missing. The **K-Lite Codec Pack** supports all the codecs supported on the device (and many more). After installing this codec pack, restart the simulation and try again.

Download it [here](#) (the basic version should be enough).

Do I need to be concerned about performance when playing video or audio?

Yes and no. When using one of the supported codecs above, the built in hardware acceleration is used on the device to minimize CPU load (while playback the CPU load increases between 3% and 7% on a single core CPU).

BUT there are some things to keep in mind: When running on a single core CPU it is more likely that playback of multimedia has an influence on the system. Especially tight CAN timings may be a problem (e.g. sending out a CAN message every 10ms might not be completely precise anymore). We strongly recommend that the project is tested on the device while playing back media with a special look at CAN (send and receive) and script timings.

When running on a device with a dual or quad core CPU it is less likely that media playback has a negative influence on the overall performance.

What happens when the page is changed while playback?

It depends on what kind of media is played back:

If a video is played back when exiting the page with the multimedia player, the playback will be stopped automatically.

If only audio (music) is played back when exiting the page with the multimedia player, the playback will continue. If the audio playback shall be stopped when the page is switched, you have to stop the media player manually (e.g. via a [multimediaCommand JavaScript](#)⁵⁹³ call onPageExit).

Why is the volume so low?

Please have a look at the [volume FAQ section](#)⁸⁴⁷.

How can I control playback in JavaScript?

Use the [multimediaCommand function](#)⁵⁹³ in JavaScript to control the multimedia player and it's playlist.

How can I switch the video to fullscreen and how to exit fullscreen mode?

Use the [multimediaCommand function](#)⁵⁹³ in JavaScript with the command string "toggle fullscreen" to enable or disable fullscreen video. Fullscreen mode is automatically disabled again as soon as the user touches the screen or presses the escape key.

How can the display operator play his own media files?

It is possible to add media files that are stored on an USB device to the playlist of the MultiMediaPlayer. To do this [JavaScript](#)⁵⁵⁹ needs to be used. Here is an example script that adds all files from the folder "music" on an usb stick to the playlist:

```
//check if USB stick is inserted:
var usbInserted = getVariableValue("@USBMemStatus");
if (usbInserted != 0)
{
    //USB stick present, get the mount path
    var usbPath = getVariableValue("@USBMountPath");
    //add "music" folder to the usb path
    usbPath = usbPath + "/music";
    //remove all files from playlist
    multimediaCommand(34, "clear playlist");
    //now add all files from the music directory to the
    playlist
    multimediaCommand(34, "add directory to playlist",
    usbPath);
}
```

```

}
else
{
//no usb stick present, show alarm 1 that shows an error
message
    setVariableValue("@AlarmShow", 0x8001);
}

```

Why can't I change the position in an MP3 file?

Changing position (seeking) for MP3 encoded audio files is currently not supported by the backend. If seeking is important, the MP3 files can be converted to e.g. MPEG AAC or Vorbis audio files.

6.5.12 Numeric Field



Tutorial video about the Numeric Field

<https://www.youtube.com/watch?v=LMarBoYi8W4>

The numeric field object is designed to show numbers on the screen. It can be customized like any other object using its properties.

The numeric field has a lot of common properties. See [here](#) ⁴⁴⁸ for a description of them. Here only the numeric field specific properties are described.

Numeric Field Specific Properties

Format

Choose between normal decimal representation of the displayed number or a scientific exponential representation.

Examples:

Decimal value: 15, scientific notation / floating-point representation: 1.5e+1

Decimal value: 0.1, scientific notation / floating-point representation: 1.0e-1

Decimal value: 32767, scientific notation / floating-point representation: 3.2767e+4

Default value: Decimal

Possible values: Decimal or Exponential

Leading Zeros

It is possible to display zeros (0) before the actual value of the numeric field.

This is useful if always a fixed number of digits shall be displayed (e.g. when showing the time: without leading zeros 9:4, with leading zeros: 09:04).

The number of zeros that are displayed is dependent on the width of the object. The whole available space will be filled.

Default value: Disabled

Possible values: Disabled or enabled

Display Zeros As Blanks

If this property is enabled, the value 0 will not be displayed in the numeric field.

This could be useful if e.g. only a deviation shall be displayed but nothing if the value is right at target.

Default value: Disabled

Possible values: Enabled or Disabled

Offset, Scale, Offset 2

Two offsets and a scale value can be defined that will be used in the following way:

displayed value = (original value + Offset 1) * scale + Offset 2

offsets:

Default value: 0.0

Possible values: -2147483648.0 ... 2147483647.0

scale:

Default value: 1.0

Possible values: -2147483648.0 ... 2147483647.0

Values can be entered in decimal form or in scientific notation / floating-point representation.

No Of Decimals

The number of decimals property allows to define how many digits will be displayed behind the decimal point.

Note that values behind the decimal point can only be displayed if the Scale property is not 1.0.

Default value: 1

Possible values: 0 ... 10

Events

The following events can be configured for the numeric field object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.13 Picture Graphic

The Picture Graphic object is a simple object to display static images on the screen. It is also capable of displaying animated GIF images that makes it possible to show small movies and animations. See GIF properties below.



Note: A free online GIF editor / creator can be found [here](#).

The picture graphic shares some [common properties](#) ⁴⁴⁸ with other objects.

This section only describes the properties that are Picture Graphic specific or differ with the common properties.

Picture Graphic Specific properties

Image To Display

To choose the image that shall be displayed in a Picture Graphic use this property.

Any supported image file can be selected from the file system. Supported formats are:

- Bitmap Windows Bitmap (*.bmp)
- JPEG Joint Photographic Experts Group (*.jpg, *.jpeg, *.jpe)
- PNG Portable Network Graphics (*.png)
- GIF Graphics Interchange Format (*.gif)
- SVG Scalable Vector Graphics (*.svg)
- TIFF Tagged Image File Format (*.tif, *.tiff) (only single layer images. With multilayer images only the first layer will be used)

In general all images are scaled to size of the Picture Graphic object and converted to PNG format when saving the project.

Two exceptions exist:

- GIF images will neither be scaled nor converted. They will be saved 1:1 to the device so that GIF animations can be replayed. Note that GIF files are only supported as Image to Display
- SVG images are also not scaled or converted when saving the project. They will be scaled directly on the target.

In general, please use images in the exact resolution that they will be displayed in on the device. Higher resolutions don't improve the quality, they lead to a higher memory demand and the scaling can produce a lower image quality.

Fit To Image Size

Enable this property to change the size of the Picture Graphic object to the size of the image selected with Image To Display property.

Default value: Enabled

Possible values:

- Disabled: Image will be scaled to size of Picture Graphic
- Enabled: Picture Graphic will be scaled to image size

Picture Graphic GIF properties

The GIF properties are not displayed in the properties table of the Picture Graphic object.

They can only be accessed with the JavaScript functions [getProperty\(\)](#)⁵⁷⁹ and [setProperty\(\)](#)⁵⁸⁷.

WARNING: Using large animated gif images can slow down the device at runtime significantly. Testing gif images on the target device is strongly recommended!

The GIF properties allow to control the playback of GIF animations on the device. The following properties are available:

GIF State

Use the GIF State property to control the playback of the video. It can be started, paused or stopped. The values for the GIF State are integers, see below.

Default value: 0 (Stop)

Possible values:

- 0 (Stop)
- 1 (Play)
- 2 (Pause)

Example for how to use this property in a JavaScript:

```
var objectID = 42;

//Start the GIF animation
setProperty(objectID, "GIF State", 1);

//Pause the GIF animation:
setProperty(objectID, "GIF State", 2);

//Stop the GIF animation
setProperty(objectID, "GIF State", 0);
```

Note that the default value is stopped. This means that each animation on each page has to be started manually in a script. If this is not done, only the first frame of the animation will be displayed.

GIF Speed

The playback speed of a GIF animation can be set with this property. If this property is not changed, the animation will run with the speed configured in the GIF itself.

Note that large GIF animations might run a little slow when playing them the first time (the images will be cached the first time it is run).

The value for this property is the percent speed of the original speed defined in the GIF (100% means unchanged speed).

Default value: 100%

Possible values: 1 ... 34359738367% (it is not recommended to set such a high speed)

Example for setting 50% (half) speed for an animation:

```
var objectID = 42;
setProperty(objectID, "GIF Speed", 50);
```

GIF Loops

This property is a boolean property that controls if the animation will loop to the start of the animation when it's end is reached.

Default value: true

Possible values:

- true - Begin at start of animation when end of animation is reached
- false - Stop animation when end of animation is reached

Integrated in GIF files is a number of loop repetitions information, so even if looping is set to true, after a certain amount of repetitions the animation will stop. Sadly this information is hardly editable in GIF-editors.

Example for setting the GIF Loops property:

```
var objectID = 42;

//Stop animation when end is reached:
setProperty(objectID, "GIF Loops", false);

//Enable looping:
setProperty(objectID, "GIF Loops", true);
```

GIF Frame Number

It is possible to jump to a certain frame number of the GIF animation. Like this an animation can be played frame by frame or jump to a special frame.

Default value: 0

Possible values: 0 (first frame) ... number of frames of the GIF animation

If a number greater than the actual number of frames of the animation is set, it will be ignored.

Example:

```
var objectID = 42;
```

```
//Jump to frame 5
```

```
setProperty(objectID, "GIF Frame Number", 5);
```

Note: Frame counting starts at 0.

6.5.14 PDF Reader

The new PDF Reader object allows displaying a PDF file embedded into the project. The PDF Reader object can be controlled at runtime via the according [actions](#)⁴⁷⁵.

Notes about viewing PDFs:

Handling of PDFs may need a lot of CPU power and may consume a lot of memory (especially when loading a new page). To improve the user experience the following points should be taken into consideration:

- All fonts used in the PDF should be embedded in the document so the PDF reader does not have to search for a matching system font.
- If the PDF document contains embedded graphics, they should be saved in the same resolution (DPI) as the display of the target device.
- The whole PDF document should already have the correct size to display at 100% on the target device so that the user does not need to zoom in or out.
- If your system needs very fast response times on the CAN bus, it should be tested if these response times can be kept while displaying a PDF or switching pages in the PDF reader.

PDF Reader Specific properties

PDF Document Path

By clicking on this property, a file chooser dialog will be displayed to select a PDF file from the computer.

This file will then be displayed in the PDF Reader object.

6.5.15 Power Switch

The power switch object is based on the [button object](#)⁵⁰⁴. It can display two states: On or off. The power switch can be turned on or off by a variable reference. 0 or false equals off, 1 or true equals on.

In difference to the button object, the images for the power switch are not included as separate Picture Graphic objects.

Instead, there are two new parameters, Pressed Image and Released Image.

For common object properties of the object refer to [this page](#)⁴⁴⁸. Here only the power switch specific properties are described.

Please note that for this object the "Latching" property is activated by default, since a power switch is usually used like that.

Power Switch Specific Properties

Draw Shadow

A button shadow can be drawn around the button that changes according to pressed or released state of the button. This is a visual help for the user to determine if the button is just pressed or not.

Disable this property if the design of the button is completely custom and the press/release state is distinguishable using the pressed and released objects (see above).

If this property is enabled, a small region between button background (or object inside button) and border of the button is reserved for the shadow. If it is disabled, the background of the button (or object inside the button) goes directly to the border.

Note: Even though the lamp is a round object visually, the button is still rectangle, and so is the shadow, if this property is enabled.

Default value: Disabled

Possible value: Enabled or Disabled

Shadow Color

If "*DrawShadow*" is enabled one can define the shadow color used to draw the shadow.

The background color of the shadow is the button background color which includes that. the background of the shadow is transparent if the button is configured as transparent.

The button shadow consists of two areas where one is drawn in the opaque color selected and the other is drawn in a half-transparent version of the same color.

Both colors are switched when button is pressed to simulate a kind of 3D effect of the pressed/released button.

Default value: Black.

Possible value: Any color allowed by standard color chooser.

Latching

Latching means: When a button is pressed and released, it toggles state and stays in the toggled state until it is pressed again.

Like that a latching button resembles a light switch whereas a non-latching button resembles a door-bell switch.

With this property this behavior can be enabled.

Default value: Disabled

Possible values: Enabled or Disabled

Pressed State

Switch between the release or pressed state of the button. This is important for having a preview of the object and also for adding pressed/released objects for the button (see above).

Note: If only one child is assigned to the button the other state will be shown as empty on PC tool but on the device this one child will show permanently - button shadow should be used to show button state in this scenario.

This property has no influence to runtime behavior.

Default value: Disabled

Possible values:

- Enabled (button is in pressed state)
- Disabled (button is in released state)

Pressed Object ID

Not used for this object type.

Released Object ID

Not used for this object type.

Toggle Background Image

With this property the usage of the Pressed Image and Released Image can be turned on or off.

Pressed Image

The image set in this property will be used as the pressed image. By default, this will be set to the standard power switch pressed image.

Released Image

The image set in this property will be used as the released image. By default, this will be set to the standard power switch released image.

Events

The following events can be configured for the button object:

- OnPress
- OnRelease
- OnLongPress
- OnLongRelease
- OnDbClick
- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnCancel

See [here](#)⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.16 Push Switch

The push switch object is based on the [button object](#)⁵⁰⁴. It can display two states: On or off. The push switch can be turned on or off by a variable reference. 0 or false equals off, 1 or true equals on.

In difference to the button object, the images for the push switch are not included as separate Picture Graphic objects.

Instead, there are two new parameters, Pressed Image and Released Image.

For common object properties of the object refer to [this page](#)⁴⁴⁸. Here only the push switch specific properties are described.

Push Switch Specific Properties

Draw Shadow

A button shadow can be drawn around the button that changes according to pressed or released state of the button. This is a visual help for the user to determine if the button is just pressed or not.

Disable this property if the design of the button is completely custom and the press/release state is distinguishable using the pressed and released objects (see above).

If this property is enabled, a small region between button background (or object inside button) and border of the button is reserved for the shadow. If it is disabled, the background of the button (or object inside the button) goes directly to the border.

Note: Even though the lamp is a round object visually, the button is still rectangle, and so is the shadow, if this property is enabled.

Default value: Disabled

Possible value: Enabled or Disabled

Shadow Color

If "*DrawShadow*" is enabled one can define the shadow color used to draw the shadow.

The background color of the shadow is the button background color which includes that. the background of the shadow is transparent if the button is configured as transparent.

The button shadow consists of two areas where one is drawn in the opaque color selected and the other is drawn in a half-transparent version of the same color.

Both colors are switched when button is pressed to simulate a kind of 3D effect of the pressed/released button.

Default value: Black.

Possible value: Any color allowed by standard color chooser.

Latching

Latching means: When a button is pressed and released, it toggles state and stays in the toggled state until it is pressed again.

Like that a latching button resembles a light switch whereas a non-latching button resembles a door-bell switch.

With this property this behavior can be enabled.

Default value: Disabled

Possible values: Enabled or Disabled

Pressed State

Switch between the release or pressed state of the button. This is important for having a preview of the object and also for adding pressed/released objects for the button (see above).

Note: If only one child is assigned to the button the other state will be shown as empty on PC tool but on the device this one child will show permanently - button shadow should be used to show button state in this scenario.

This property has no influence to runtime behavior.

Default value: Disabled

Possible values:

- Enabled (button is in pressed state)
- Disabled (button is in released state)

Pressed Object ID

Not used for this object type.

Released Object ID

Not used for this object type.

Toggle Background Image

With this property the usage of the Pressed Image and Released Image can be turned on or off.

Pressed Image

The image set in this property will be used as the pressed image. By default, this will be set to the standard push switch pressed image.

Released Image

The image set in this property will be used as the released image. By default, this will be set to the standard push switch released image.

Events

The following events can be configured for the button object:

- OnPress
- OnRelease
- OnLongPress
- OnLongRelease
- OnDbClick
- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnCancel

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.17 Rocker Switch

The rocker switch object is based on the [button object](#) ⁵⁰⁴. It can display two states: On or off. The rocker switch can be turned on or off by a variable reference. 0 or false equals off, 1 or true equals on.

In difference to the button object, the images for the rocker switch are not included as separate Picture Graphic objects.

Instead, there are two new parameters, Pressed Image and Released Image.

For common object properties of the object refer to [this page](#) ⁴⁴⁸. Here only the rocker switch specific properties are described.

Please note that for this object the "Latching" property is activated by default, since a rocker switch is usually used like that.

Note that the Rocker Switch comes in horizontal and vertical. They are identical except for the orientation of the rocker switch images.

Rocker Switch Specific Properties

Draw Shadow

A button shadow can be drawn around the button that changes according to pressed or released state of the button. This is a visual help for the user to determine if the button is just pressed or not.

Disable this property if the design of the button is completely custom and the press/release state is distinguishable using the pressed and released objects (see above).

If this property is enabled, a small region between button background (or object inside button) and border of the button is reserved for the shadow. If it is disabled, the background of the button (or object inside the button) goes directly to the border.

Note: The shadow will not be painted for this object, it doesn't make sense to enable it.

Default value: Disabled

Possible value: Enabled or Disabled

Shadow Color

If "*DrawShadow*" is enabled one can define the shadow color used to draw the shadow.

The background color of the shadow is the button background color which includes that. the background of the shadow is transparent if the button is configured as transparent.

The button shadow consists of two areas where one is drawn in the opaque color selected and the other is drawn in a half-transparent version of the same color.

Both colors are switched when button is pressed to simulate a kind of 3D effect of the pressed/released button.

Default value: Black.

Possible value: Any color allowed by standard color chooser.

Latching

Latching means: When a button is pressed and released, it toggles state and stays in the toggled state until it is pressed again.

Like that a latching button resembles a light switch whereas a non-latching button resembles a door-bell switch.

With this property this behavior can be enabled.

Default value: Disabled

Possible values: Enabled or Disabled

Pressed State

Switch between the release or pressed state of the button. This is important for having a preview of the object and also for adding pressed/released objects for the button (see above).

Note: If only one child is assigned to the button the other state will be shown as empty on PC tool but on the device this one child will show permanently - button shadow should be used to show button state in this scenario.

This property has no influence to runtime behavior.

Default value: Disabled

Possible values:

- Enabled (button is in pressed state)
- Disabled (button is in released state)

Pressed Object ID

Not used for this object type.

Released Object ID

Not used for this object type.

Pressed Image

The image set in this property will be used as the pressed image. By default, this will be set to the standard rocker switch pressed image.

Released Image

The image set in this property will be used as the released image. By default, this will be set to the standard rocker switch released image.

Events

The following events can be configured for the button object:

- OnPress
- OnRelease
- OnLongPress
- OnLongRelease
- OnDbClick
- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.18 Slider



The slider object displays a numerical value on a linear scale, similar to a [linear bargraph](#) ⁵¹⁶. The handle can be used to change the value by sliding it left and right / down and up. Additionally, certain behavior can be configured to change the value by pressing a position on the scale.

The slider shares a lot of common properties with other objects. See [here](#) ⁴⁴⁸ for a description. Here only the slider specific properties are described.

Axis Orientation

A slider can either be vertical or horizontal. Depending on this property the drawing of the slider itself and the value changes accordingly.

Default value: Horizontal

Possible values: Vertical or Horizontal

Number Of Ticks (Theme dependent)

As the name of this property implies, the number of the ticks that shall be drawn if Ticks are enabled through the Tick Position property, can be configured with this property.

The ticks are evenly positioned along the length of the slide.

Default value: 5

Possible values: 0 ... 32767

Tick Width (Theme dependent)

Define the width of the ticks that shall be drawn with this property. Only has an effect if Ticks are enabled through the Tick Position property.

Default value: black (0, 0, 0)

Possible values: any 24Bit RGB color

Tick Position (Theme dependent)

Define the position of the ticks. This property also acts as an enable for the drawing of ticks.

Default value: Ticks Off (no ticks)

Possible values:

Ticks Off (no ticks)

Bottom/Right (ticks on the bottom for horizontal, on the right for vertical sliders)

Top/Left (ticks on the top for horizontal, on the left for vertical sliders)

Both ((ticks on the top and bottom for horizontal, on the left and right for vertical sliders)

Tick Color (Theme dependent)

Define the color of the ticks that shall be drawn with this property. Only has an effect if *Draw Ticks* is enabled.

Default value: dark gray (102,102,102,255)

Possible values: any 24Bit RGB color

Snap To Tick (Theme dependent)

When enabled, the value of the slider will be set to the nearest tick value after the user has set a value.

Default value: Disabled

Possible values: Disabled or Enabled

Handle Width (Theme dependent)

The width of the slider handle in px.

Default value: 30

Possible values: 0 .. object width

Note that a value of 0 results in the handle not being drawn.

Handle Height (Theme dependent)

The height of the slider handle in px.

Default value: 30

Possible values: 0 .. object height

Note that a value of 0 results in the handle not being drawn.

Handle Color (Theme dependent)

Define the color of the handle that shall be drawn with this property.

Default value: dark gray (102,102,102,255)

Possible values: any 24Bit RGB color

Needle Image (Theme dependent)

A image can be set for the handle. It will be moved at the horizontal or vertical axis of the slider according to it's value.

Please note that there is a little different behavior for SVG images. If an SVG image shall be used as needle, it needs to have the same size as the bargraph and the needle has to be placed directly in the middle of the needle SVG image. The preview in the design tool will also be different to the look at runtime.

Default value: No image

Possible image: Any image from file system

Draw Slide (Theme dependent)

When enabled, the slide of the slider will be drawn.

Default value: Enabled

Possible values: Disabled or Enabled

Unfilled Slide Color (Theme dependent)

Define the color of the unfilled section of the slide (i.e. the part above the value that the object currently shows).

Default value: white (255,255,255,255)

Possible values: any 24Bit RGB color

Slide Width (Theme dependent)

The width of the slider slide in px.

Default value: 8

Possible values: 0 .. object height / width (depending on the axis orientation of the slider)

Note that a value of 0 results in the handle not being drawn.

Slide press behavior

This property defines what should happen if the user taps on the slider

Default value: Off

Possible values:

Off (nothing happens)

Handle/value is incremented/decremented by tick distance

Handle jumps to clicked value (this is influenced by Snap To Tick property, with that enabled the slider will be set to the nearest tick value.

6.5.19 String Field

The string field object is designed to show text on the screen. It can be customized like any other object using it's properties.

The string field has a lot of common properties. See [here](#) ⁴⁴⁸ for a description of them. Here only the string field specific properties are described.

Besides the Auto Wrap property, Texts in String Fields can also have custom line breaks by inserting "\n" (without the "") in the text.

The line break can also be included at runtime via JavaScript by adding \n in a String variable and having that referenced to the String Field or, alternatively by putting the text into the String Field with [setProperty](#) ⁵⁸⁷.

Please note that for existing projects in the rare case the text "\n" should be used in a String Field, this will now be interpreted as a line break.

In that case, please change "\n" to e.g. "\ n" to avoid the line break.

String Field Specific Properties

Auto Wrap

When Auto Wrap is enabled, the text inside the string field will be automatically wrapped to the next line if the text does not fit inside the string field. If possible, wrapping will leave the words in the text complete. If the string field is too narrow to display even a single word, the single word will be split.

If Auto Wrap is disabled, text that does not fit in the string field will be clipped.

Default value: Disabled

Possible values: Disabled or Enabled

Max String Length (Characters)

The maximum length of the text displayed in the string field can be adjusted with this property.

Note that the value of a referenced variable or the Preview Value of the string field may have more characters but they are just not displayed if it's more than Max String Length.

Default value: 32

Possible values: 0 ... 65536

Too Long Text Behavior

If the text of a String Field is longer than it can be displayed, a number of different options can be chosen here.

Note that these options are only taken into account if Auto Wrap is disabled and no line break has been added to the text, otherwise No Clip will be used.

Default value: No clip

Possible values:

No clip - The text is displayed in full, even if it extends the width of the String Field

Clip - The text is clipped (cut) so that it fits the width of the String Field. The horizontal alignment decides which part of the text is displayed.

Shorten and add ... - The text is cut and three dots are added at the end. This selection overrides the horizontal alignment and sets it to left.

Animate - The text is displayed within the width of the String Field and slowly animated from left to right so that all text is displayed.

Events

The following events can be configured for the string field object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.20 Table

A table can be used to display multiple lines of text. Each line of this text consist of the table cell values delimited by a configurable delimiting character.

Example text for a table with ; as delimiter character:

Line1Column1;Line1Column2;Line1Column3;Line1Column4
Line2Column1;Line2Column2;Line2Column3;Line2Column4
Line3Column1;Line3Column2;Line3Column3;Line3Column4

The source for the text can either be automatic (e.g. from J1939 DM settings) or set manually via a JavaScript (set the text directly (with setProperty and property "Table Data") or read e.g. a log file, see [JavaScript readFile function](#) ⁴⁶⁷ for an example).

It is not possible to give a preview of the text in the designer tool. The text will be only available at runtime.

Properties of the table

General

The table shares the same general properties with all other objects.

The table may not be language or unit dependent.

Variable References

Variable Reference

Here a number variable can be assigned to the table. With this variable the table can be scrolled if the content can not be displayed completely. Set value 0 to scroll to top, any other value will scroll the value down (depending on number of lines in the table).

Default: No Variable

Possible Values: Any number variable

Bit Mask

Same as for other objects.

Skin Properties

Skin properties are the same as for other objects.

Visibility

Visibility properties are the same as for other objects.

Input Configuration

The input configuration properties are the same as for other objects. Like with an assigned variable it is possible to manually scroll through the table if the property **Set As Input** is enabled.

Value Related

The **Preview Value** property will have no influence on the table in the tool. With JavaScript you could set that property to scroll through the table but it is recommended to just set the property **Set As Input** or attach a variable for scrolling.

Formatting

Font Attribute

Same as for other objects. The font attribute selected here will be applied to the text shown in the table.

Font

Same as for other objects. The font selected here is used as the font for the table's text.

Horizontal Alignment

Same as for other objects. All text in the table will be aligned either center, left or right.

Vertical Alignment

Same as for other objects. All text in the table will be aligned either center, top or bottom.

Table Specific

Grid Color (Theme dependent)

This represents the color of the "grid" (the inner border) of the table.

NOTE: If you want to change this property via JavaScript, the property name "Foreground Color" needs to be used instead of "Grid Color".

Default: black (0, 0 ,0)

Possible values: any color

Table Data Delimiter

This is the delimiter char that is used to mark the beginning of a new column inside each line of the table's text data. If the text data source contains another character as delimiter, enter this here.

Default: ;

Possible values: any single character

Table Heading Background Color (Theme dependent)

If the property **Show Table Heading** is enabled, a heading line will be displayed at top of the table. With this property a background color for the heading can be set.

Default: grey (153, 153 ,153)

Possible values: any color

Table Heading Font Color (Theme dependent)

If the property **Show Table Heading** is enabled, a heading line will be displayed at top of the table. With this property a font color for the heading can be set.

Default: white (255, 255 ,255)

Possible values: any color

Table Heading Text

A static text that will be displayed if Show Table Heading is enabled. Text for all columns can be entered, every column is delimited by the Table Data Delimiter.

Default: <no text>

Possible values: any text

Example (with delimiter ;):

This;is;a;table

will result in:

This	is	a	table

Language dependancy is not possible for table heading texts. If you need language dependant headings, please use String Fields, put them above the table and configure them as language dependant.

Show Table Heading

Show or hide the heading of the table. See other heading properties above.

Default: disabled

Possible values: enabled or disabled

Number of Table Columns

This property displays the current number of columns of the table.

The value will automatically set by enter the **Table Column Spacing** property below.

Table Column Spacing

With this property the number of columns and their spacing can be configured. To do this the spacing value in percent of each column needs to be entered delimited by the **Table Data Delimiter**.

Default: 25;25;25;25 (each column uses 25% of the table width)

Possible values: any combination that's sum is 100%

NOTE:

If the sum is not 100%, the last column will increased to fit the 100%

If the sum is over 100%, the value will reverted to the last valid

This property has an effect to other properties that use that value: **Table Heading Text** and

Number of Table Columns

Highlighted Row

This property is not visible in the designer and can only be accessed via JavaScript's `getProperty()` and `setProperty()` functions.

It is possible to highlight a row in the table. Row counting starts at 0. If a row is highlighted, the font and background color will be shown inverted. If a row is highlighted that is currently not visible, the table will automatically scroll to that row.

Default: -1 (no row highlighted)

Possible values: -1 (no row highlighted) ... row count of the table

Events

The following events can be configured for the table object:

- OnOpenForInput
- OnEnabledWithFocus
- OnEnabledWithoutFocus
- OnValueChange
- OnEnterValue
- OnEnterNewValue
- OnEscape

See [here](#) ⁴⁶³ for the descriptions of all event and possible actions that can be assigned.

6.5.21 UT Primary View

The UT Primary View object is similar to a frame object (even though it has to be put into a frame).

At development time it is nothing more but an empty frame, it will be filled with content at runtime when a UT pool was loaded.

6.5.22 UT Secondary View

The UT Secondary View object is similar to a frame object (even though it has to be put into a frame).

At development time it is nothing more but an empty frame, it will be filled with content at runtime when a UT pool was loaded.

The first UT pool will be shown in the [UT Primary View](#)⁵⁵³. Other pools will be shown in UT Secondary Pools.

6.6 Video Properties

The video output of cameras connected to the device can be displayed on the screen. Whether video input is supported depends on the used device. The following differences exist on the different hardware platforms:

Devices with i.MX35 CPU:

- 0, 1 or 3 analog video inputs (depending on the device)
- Only one video can be shown at the same time
- Analog video is always drawn as the most-backward graphics layer and the field of the video objects will be made invisible so that the video image gets visible. Any other objects (e.g. other non-video frames on top of a video frame/page) will be displayed in front of the video image

Devices with i.MX6 CPU:

- 1, 2 or 3 analog video inputs (depending on the device)
- Two cameras can be shown at the same time (Please note: Due to hardware limitations, input 1 and 3 can not be displayed at the same time, only 1 and 2 or 2 and 3)
- It's possible to show a video stream over Ethernet with either H.264 or MJPEG. See [below](#)⁵⁵⁶ for details and limitations
- Video is drawn as the background texture of the video frame or page.
- For i.MX6 devices with a quad core processor it is possible to show two analog camera inputs plus an Ethernet camera at the same time.

Video Properties

Display Video

Use this property to enable showing video in this object (only analog video will be mirrored):

- **None**

Disable video for this object


- **Unmirrored**

Enable video, no mirror



- **Horizontally Mirrored**

Enable video, mirror at the horizontal axis (up will be down)

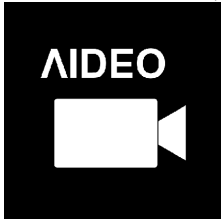


- **Vertically Mirrored**

Enable video, mirror at the vertical axis (left will be right)



- **Both**

Enable video, mirror it horizontally and vertically (only analog video will be mirrored)

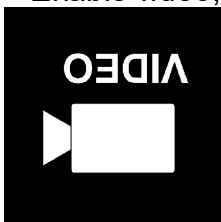

Note that the camera preview image in the tool changes with the different mirror settings.

Video Type

Depending on the selection of the property [Display Video](#)⁵⁵³:

- **Analog Video Input**

One of the device's analog video inputs shall be used (select which with Video Camera property below)

- **Ethernet Stream**

Show a video stream received via Ethernet (see below for requirements and limitations)

Stream Type

Here the type of the Ethernet camera stream can be chosen:

- **H.264 via UDP/RTP**
- **MJPEG via UDP/RTP**
- **H.264 via RTSP**

UDP Port

If the [Video Type](#)⁵⁵⁴ was set to Ethernet stream and a Stream Type with UDP protocol was selected, the UDP port used by the camera can be configured here.

RTSP URL

If the [Video Type](#)⁵⁵⁴ was set to Ethernet stream and a Stream Type with RTSP protocol was selected, the RTSP URL can be written here.

The typical URL for Axis cameras is: `rtsp://user:password@<IP>/axis-media/media.amp` (e.g. `rtsp://root:root@192.168.135.90/axis-media/media.amp`)

Anonymous viewing can be enabled in the camera settings. Then `user:pass@` can be omitted.

Please check the camera documentation for correct url.

Video Rotation

The camera image can be displayed rotated in 90° steps. This is useful if the camera is e.g. mounted sideways.

Note: The camera preview image changes with different rotation settings.

Also note: For analog cameras the rotation will be overwritten by the variables

[@CAM1Rotation](#)¹⁸⁶, [@CAM2Rotation](#)¹⁸⁶ and [@CAM3Rotation](#)¹⁸⁶

Video Camera

Choose which camera to display. Either one of the three analog cameras or Ethernet Stream.

Scaling Factor

Choose between "Whole Frame" and "Whole Image":

- **Whole Frame:** The camera image is scaled to the dimension of the frame / page without respecting the aspect ratio of the camera image. The frame / page background will not be visible but the image will look distorted if both aspect ratios differ too much.
- **Whole Image:** The camera image is scaled to fit within the frame page but the camera's aspect ratio is preserved. If the aspect ratio of camera and frame/page differ, there will be parts of the frame that are not filled with the camera image at top and bottom or left and right.

Video Standard

This property is only applicable for analog cameras. The video standard of the connected analog camera can be selected with this property. **PAL** and **NTSC** are the supported standards. If value **AUTO** is selected, the video standard will be automatically detected between PAL and NTSC.

Auto detection of the video standard needs some time (up to 1 second). If it is clear at design time what camera with which standard is connected, the real standard should be selected here instead of AUTO.

Auto detection might not work for all analog camera models so an option for the user to manually select the standard should be included in the project (if it is not clear at design time what kind of cameras will be connected).

Auto detection will only happen once for every camera port. It will be internally stored if the auto detection was successful to speed up showing the image when entering a page with video a second time.

This property can be updated via JavaScript (0: Auto, 1: PAL, 2: NTSC)

Ethernet camera requirements and limitations

General:

- The properties of the camera itself like resolution, IP, etc. can currently not be changed by the device. A tool to change camera settings via ISO 17215 is available in the OPUS Projektor. See [here](#)⁷³⁹.
- Rotation is supported.
- The higher the resolution and/or bandwidth of the camera is, the worse the performance on the screen will be. A rough recommendation is to keep it under 15 Mbit/s.
- It is possible to show the stream together with analog video on the same page. It is however recommended to do this only on devices that have multi-core CPU. On single core CPUs the performance might drop a lot.
- It is possible to show more than one Ethernet camera stream on a page. This is limited to 4 streams on devices with a quad core CPU and 2 streams on all other devices. Performance should be monitored if multiple streams are shown on a page. This will produce a high system load and depending on the camera settings and the overall system load, the video and overall performance may be impacted.
- Ethernet needs to be activated on the device for the stream to be shown, see [@Ethernet0_applynstart](#)¹⁸⁶ and [@Ethernet0_UpAtStart](#)¹⁸⁶

H.264 via UDP/RTP / MJPEG via UDP/RTP:

- H.264 / MJPEG video streams over Ethernet are only supported on devices with i.MX6 CPU.
- The camera needs to use the RTP protocol via UDP/RTP to deliver the stream.
- The camera can either send the stream directly to the IP address of the device or via UDP broadcasts.
- The UDP Port that the camera uses needs to be set in the "UDP Port" property of the frame or page that shall show the stream.

H.264 via RTSP:

- RTSP video streams over Ethernet are only supported on devices with i.MX6 CPU.
- The camera needs to use the RTSP protocol to deliver the stream.

The program has a tool included with which Ethernet cameras can be configured. It can be accessed via the menu Tools -> See [here](#)⁷³⁹.

Starting and stopping camera streams

It should not be necessary to start or stop camera video manually.

Entering a page where video is configured will automatically start the camera video. Leaving a page will automatically stop it.

Making a frame [invisible](#)⁶⁴¹ will automatically stop the camera video. Making a frame visible, will automatically start it.

If it is really necessary to manually start or stop camera video, the value of the property "Display Video" can be changed in JavaScript:

Value 0: stop (eq. None)

Value 1: start unmirrored

Value 2: start horizontally mirrored

Value 3: start vertically mirrored

Value 4: start horizontally and vertically mirrored

Changing any of the following property values while video is displayed will cause an automatic restart:

Video Standard

UDP Port

Stream Type

RTSP URL

Video Camera

[Download this project](#) to see a basic Ethernet camera configuration or check out the [welcome project](#) [sample](#) .

JavaScript

7 JavaScript

New JavaScript Engine in version 2024!

We had to switch to the QJSEngine in version 2024 of the OPUS Projektor because the QtScript engine is deprecated and should not be used anymore.

The biggest change is that our functions need to be in an object now, which practically means that instead of e.g.

```
print ("test");
```

we need to write

```
pclient.print("test");
```

But fear not!

You won't have to modify possibly hundreds of scripts! We have written a converter that automatically analyzes scripts of a project that is being opened and puts the necessary prefix to any known command from us.

There will be a detailed report file looking like this:

```
-----
Created on :2024.01.25_14:13:05
```

```
Converter summary:
```

```
This converter has checked and updated all JavaScript files in the folder 'scripts' and
'navigation_scripts'.
```

```
-----
Total files: 173
```

```
Updated files: 152
```

```
Error files: 0
```

```
Start converting script file: C:
```

```
\Workspace\Projekte\Welcome_Project_20\terminal_files\scripts\audio_video_init.js:
```

```
Original line (4):  setProperty (1163,"Font Attribute", 126);//Camera1
```

```
Converted line (4):  pclient.setProperty(1163,"Font Attribute", 126);//Camera1
```

```
Original line (5):  setProperty (1236,"Font Attribute", 126);//Camera2
```

```
Converted line (5):  pclient.setProperty(1236,"Font Attribute", 126);//Camera2
```

```
Original line (6):  setProperty (1238,"Font Attribute", 126);//Camera3
```

```
Converted line (6):  pclient.setProperty(1238,"Font Attribute", 126);//Camera3
```

```
Original line (7):  setProperty (1239,"Font Attribute", 126);//Camera12
```

```
Converted line (7):  pclient.setProperty(1239,"Font Attribute", 126);//Camera12
```

```
Original line (8):  setProperty (1241,"Font Attribute", 126);//Camera12
```

```
Converted line (8):  pclient.setProperty(1241,"Font Attribute", 126);//Camera12
```

```
audio_video_init.js->SUCCESSFUL
```

and so on.

Of course we have tried to perfect our converter but in all cases please check your scripts afterward and please check your project functionality.

The part below regarding global variables and functions is also valid for this engine:

Please Note the following changes since May 2016:

The complete JavaScript engine was exchanged!

Due to some problems experienced with the old Google v8 JavaScript engine, the engine was replaced with QtScript. The new script engine solves all issues currently known to us and has some more advantages (like a debugger that can be used with the Windows simulation, see [here](#)⁵⁶⁰).

One important difference to the old engine is that global variables are handled differently which might make changes in existing script necessary:

In the old engine a variable that was declared as "var myGlobalVariable = 0;" in script A could be used in script B after script A was run once. **THIS WILL NOT WORK ANYMORE!**
myGlobalVariable will not be accessible in script B with the new engine.

If it is really necessary to use global variables, you can declare them as "myGlobalVariable = 0;" in script A and then use it in script B after script A was run once. **Note the missing "var" keyword!**

The same goes for functions. You need to declare functions without the keyword "function" to use them in other scripts.

We anyway do not recommend to use global JavaScript variables. It is far more reliable and secure to store important variable values that are needed in more than one script in a dedicated PClient variable (use [setVariableValue](#)⁵⁷⁸ and [getVariableValue](#)⁵⁷⁸ functions).

Other than that, the new JavaScript engine should not make any more changes in existing scripts necessary.

JavaScript can be used to introduce highly-dynamic aspects into the project. It serves as a powerful, yet easy to use scripting language that enhances the possibilities of the tool. Seamlessly integrating into the architecture, it offers access to all the events and variables that can occur.

Do not use Java Scripts for extensive calculations! Also a frequent call of scripts is bad idea. This will slow down the complete terminal; instead the scripts should be small and fast.

If your desired functionality can not be realized with a small script or with other methods provided, please contact the support team. Most often there are other ways to get the result you want.


Debugging

With the new JavaScript engine it was not possible to keep the JavaScript Debugger in the program. Debugging can only be done using print commands. Note that the prints can be seen in the simulation, as well, in the [Output window](#)⁴² in the tab PClient.


The only way to debug JavaScripts on the device is to check the outputs on the serial console. Debug outputs can be added with the [print](#)⁵⁷⁷ function.

JavaScript Folders

Now it is possible to add folders to the JavaScript category. A folder can be created by right-clicking on the JavaScripts category and choosing the element "Create Folder..."

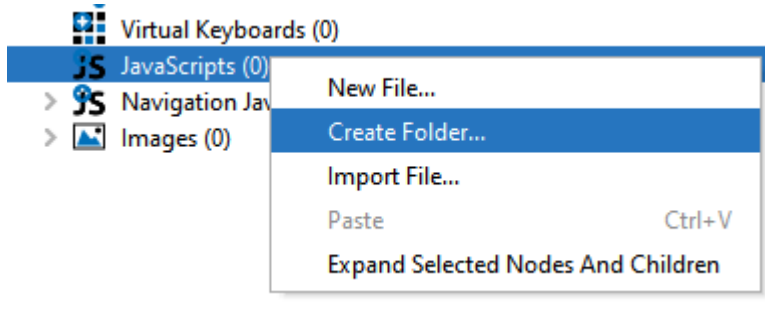

Only alphanumeric and underscore characters are allowed to be entered as folder names.

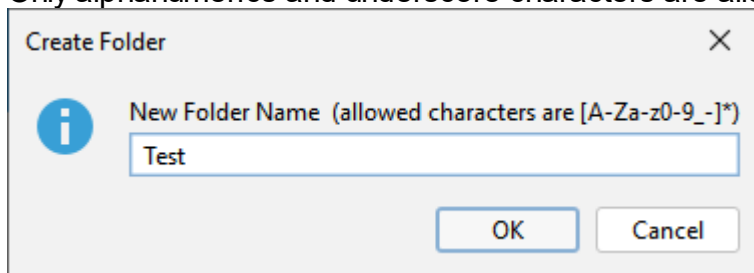

Note that scripts moved which are connected to events will have the location in the event entries updated automatically. However, any script call with [includeFile](#)⁵⁷⁸ to another script can not be updated automatically. Please update your script-calling scripts accordingly!

7.1 The JavaScript Editor




Tutorial video about the JavaScript editor

<https://www.youtube.com/watch?v=5LTKEISleBY>


Since the version 1.12.X of the OPUS Projektor, a new JavaScript editor is integrated and provides many new features.

Create a new script file

JavaScript files can be created by right clicking on the **JavaScripts** node (1) inside the project tree and clicking **New File...** (2). Already existing scripts can also be used with **Import File...** (3). This function copies the selected script file into the "terminal_files/scripts" folder of the corresponding project. Scripts from other projects can be copied to the target project by using **Paste** (4)

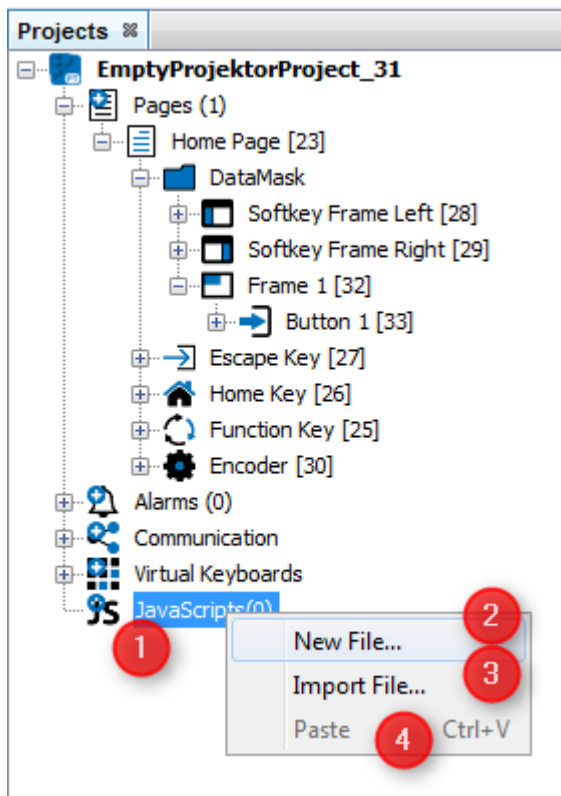


A wizard for creating a new file will be appear. In the category **JavaScript** an empty JavaScript file can be created. The category JavaScript Samples includes different templates. These templates can help to understand the basics of the JavaScript programming language or show best practices for different use cases.

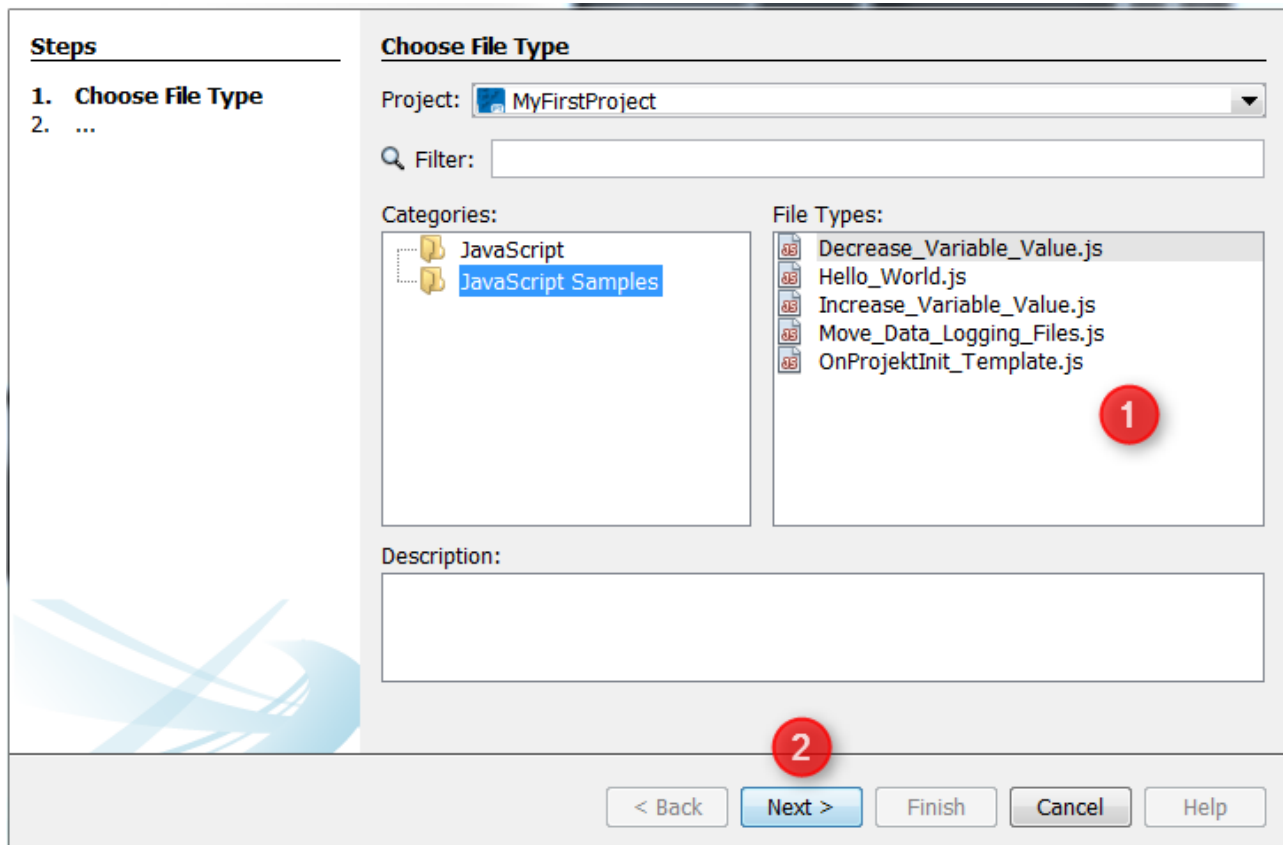

On the next page the wizard shows some information about the location of the new file. The folder "terminal_files\scripts" shouldn't be changed. Only scripts in this folder will be displayed in the JavaScripts node inside the project tree. The absolute path of the file is shown in the **Created File** text field (1). The name of the JavaScript file can be changed in the File Name section.


After clicking **Finish** (2), the new file will be created.

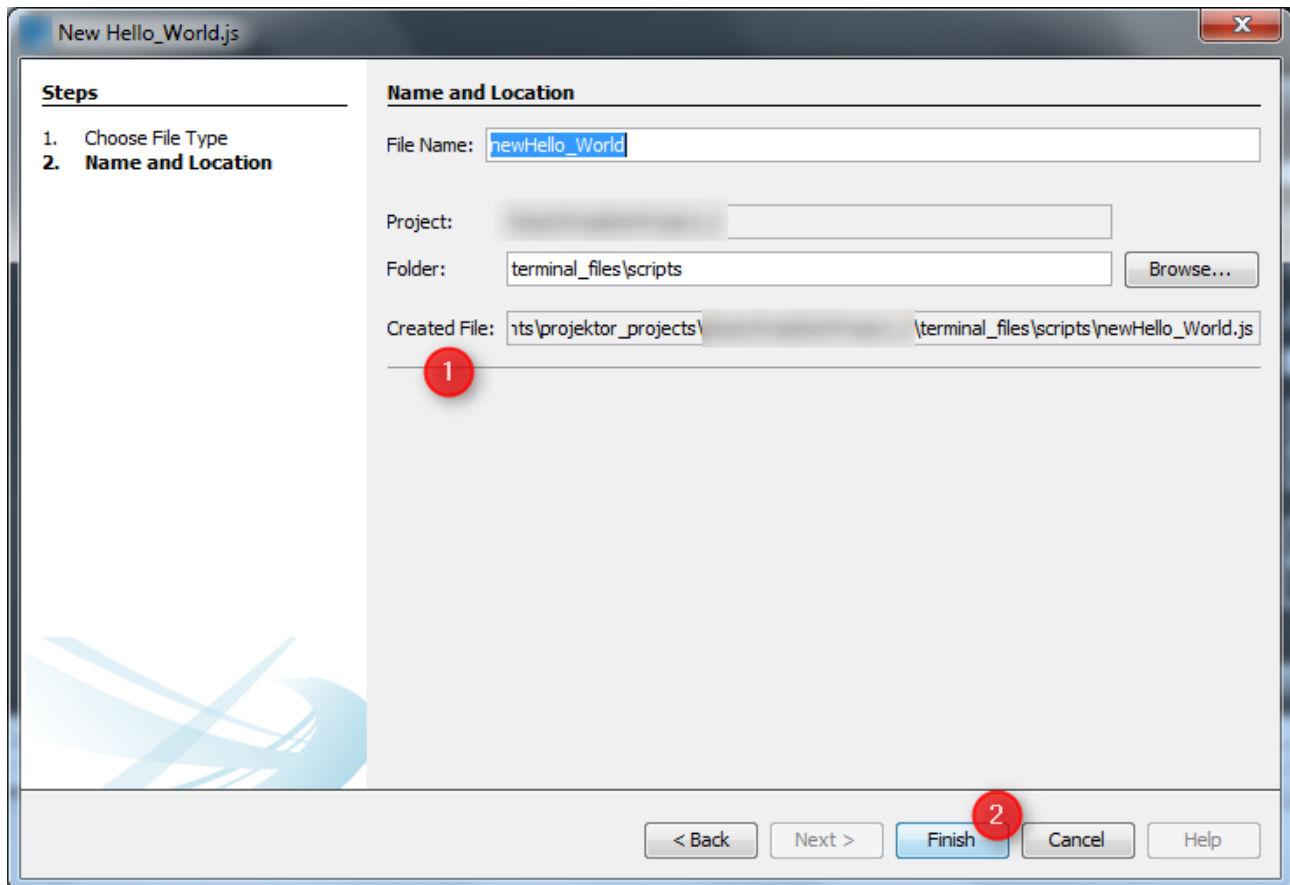


Editing a script

A script file can be edited by double clicking the corresponding file (1) inside the JavaScripts node. A new JavaScript editor tab (2) will be opened. In our example we have created an "Hello World" application with an template. The script file includes a function call "helloWorld()" and the definition of the function which prints out a String.


To edit a script just write your source code in the content area (2). Syntax highlighting is supported. A summary of all functions will displayed in the **Navigator View** (3).

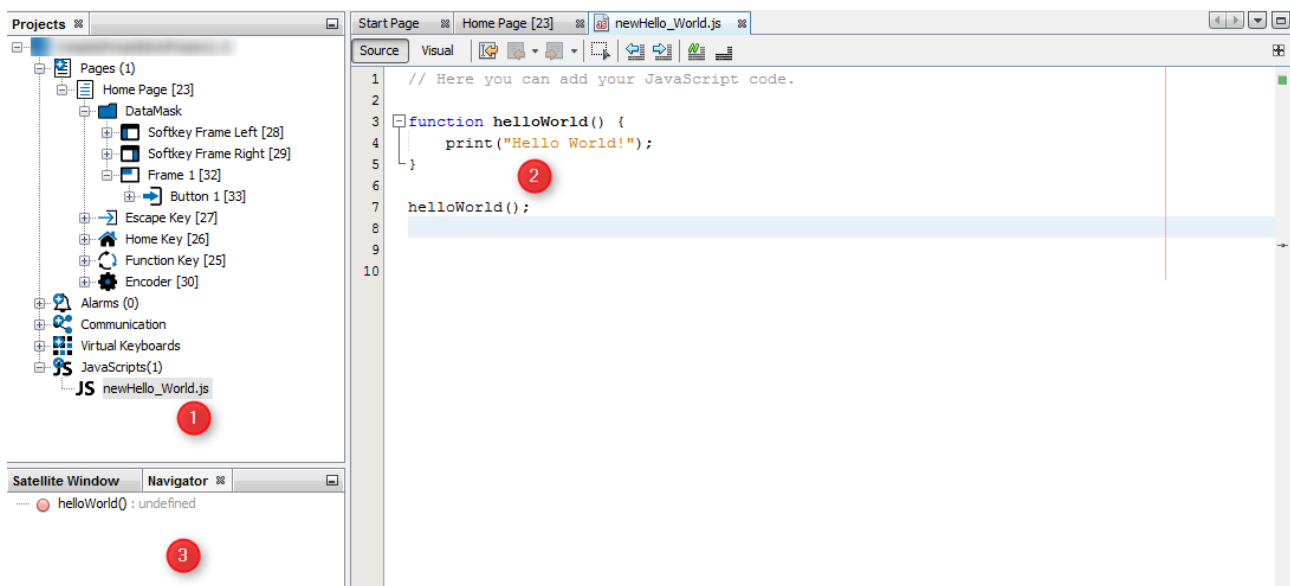

To help writing a script with variable interactions, the **Variable View** can be used to get / set the value of all variables that exist in the current project. They are sorted by variable group. A variable can be dragged into the context area by DnD (Drag & Drop).

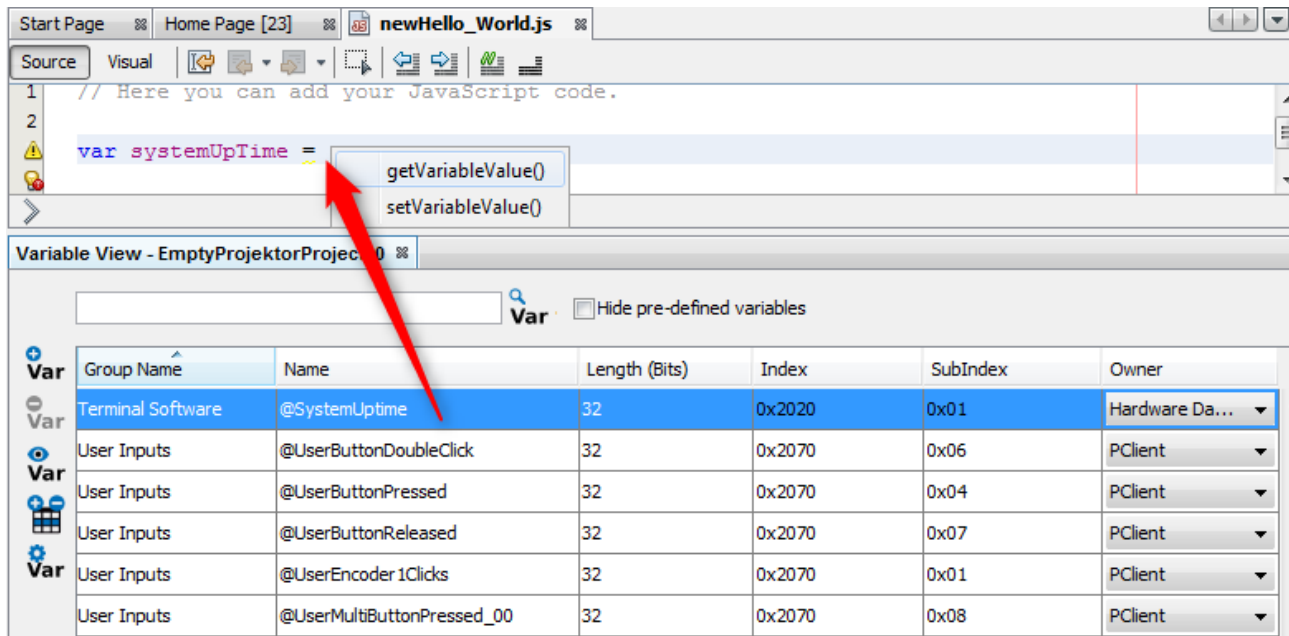

Also objects can be dragged into the context area by DnD (Drag & Drop).

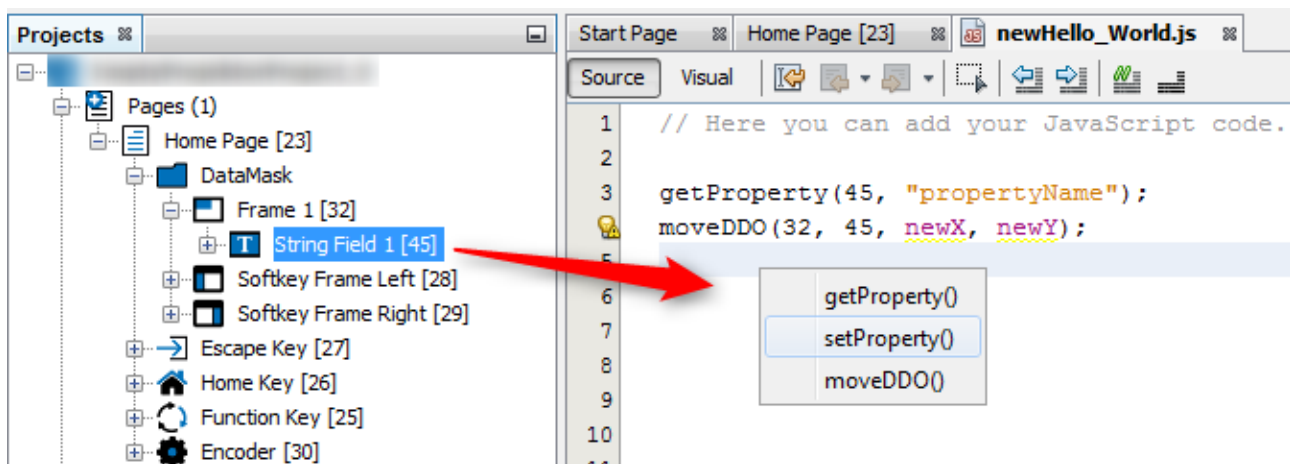

Saving a script file


Script files are automatically saved as soon as the user clicks somewhere else in the project or saves the project.

Auto Completion

Auto Completion is a feature in which an application predicts the rest of a word a developer is typing. Developers can easily press CTRL+SPACE to see one or more suggestion(s) and can use the arrow keys or mouse to accept one of several. Autocomplete speeds up human-computer interactions enormous.

The new powerful auto completion feature supports the whole JavaScript programming language syntax.


For example, we have only typed "fo" in the content area and press CTRL+SPACE. A context menu pops up with the keyword completion "for" and additional suggestions for whole "for loop" templates.

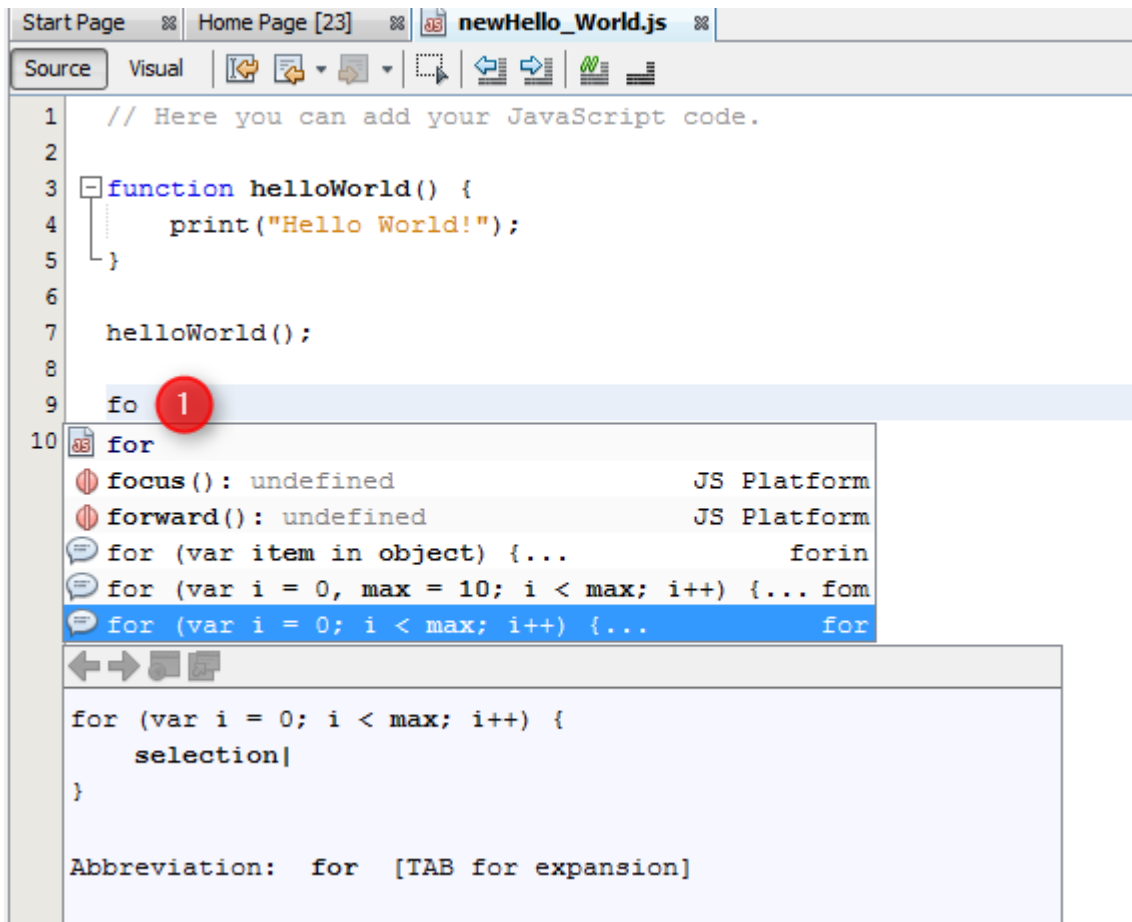

Note that not all expressions offered in the CTRL + Space popup are supported by our devices.


Auto Format

Another nice feature is the possibility to **Format** (1) the JavaScript code in the content area by default rules to get a pretty human readable code.

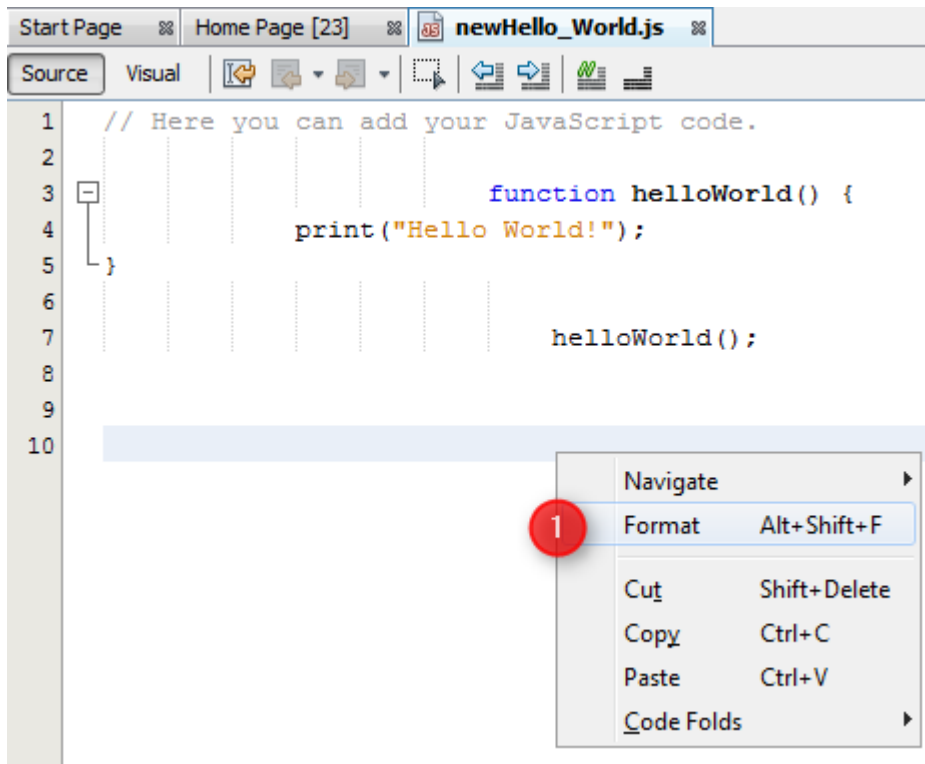

Error and Warning Hints

A further important feature highlight is the just in time detection of errors and warnings. The script below shows an error by the assignment of an value to the array position (1) caused by a missing closing bracket. For some errors the JavaScript editor suggest solutions to solve the problem by clicking on the lightbulb. (2) Shows an warning caused through an value compare with the equality operator instead the identity operator. The hint will shown by mouse over on the warning triangle.

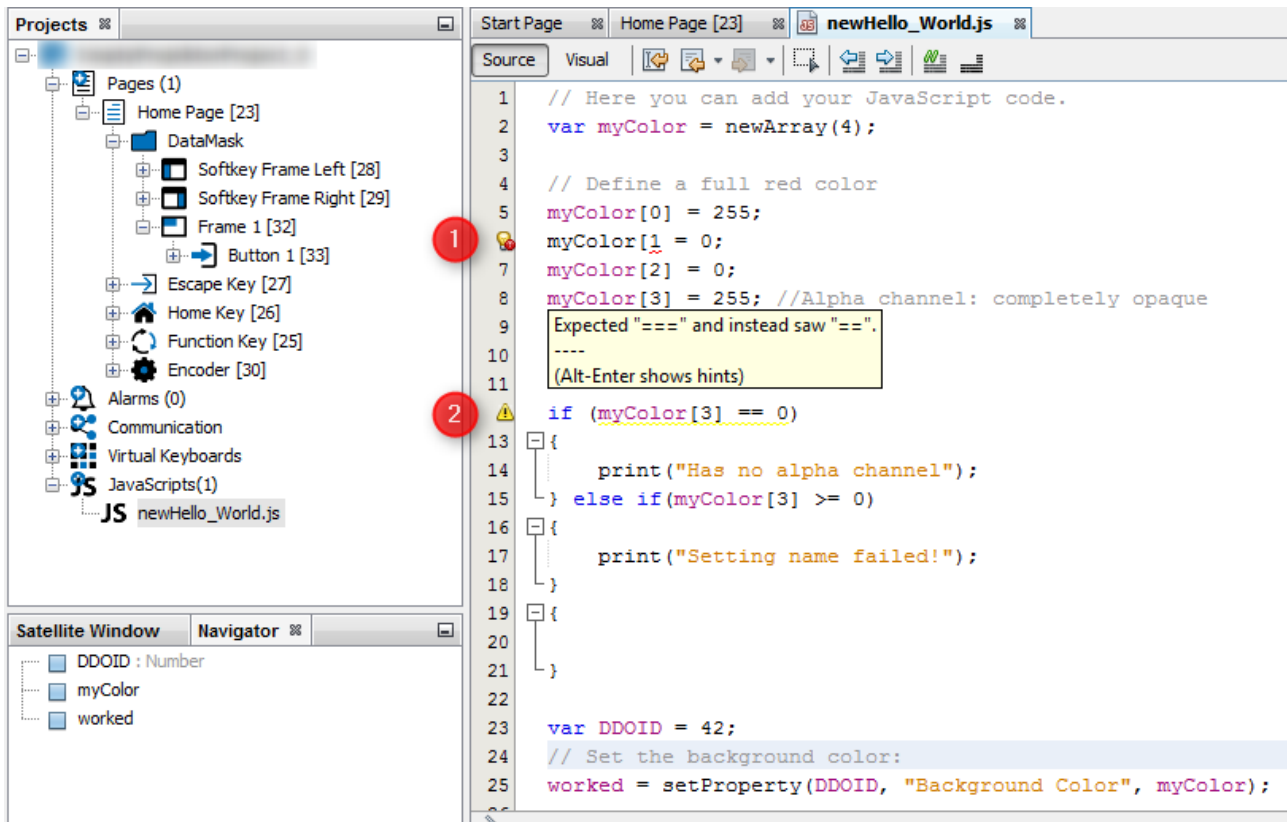





Shortcuts and icons

The following shortcuts can be used in the JavaScript editor:

CTRL + E	Delete the current line
CTRL + SHIFT + UP	Create a copy of the current line one line above
CTRL + SHIFT + DOWN	Create a copy of the current line one line below
ALT + SHIFT + UP	Move the current line one line up
ALT + SHIFT + DOWN	Move the current line one line down
ALT + SHIFT + LEFT	Move the current line one tab to the left
ALT + SHIFT + RIGHT	Move the current line one tab to the right
ALT + UP	Moves to the previous occurrence of the marked expression (an expression has to be marked)
ALT + DOWN	Moves to the next occurrence of the marked expression (an expression has to be marked)
CTRL + SHIFT + D	Opens a history of the last 9 copied text elements for pasting
CTRL + SHIFT + Click (left mouse key)	Adds an additional text cursor to the clicked position (multi cursor editing)
CTRL + SHIFT + L	Pastes multi-line copied text to one line per multi-cursor.
CTRL + SHIFT + R	Toggle rectangular selection
CTRL + SHIFT + C	Comment / Uncomment the current line
CTRL + Q	Move cursor to the last editing positions


CTRL + SHIFT + F	Opens a dialog with which all opened JavaScript files can be searched for a certain text phrase.
CTRL + SHIFT + H	Opens a dialog with which all opened JavaScript files can be searched for a certain text phrase to replace it with another.
ALT + SHIFT + F	Auto-format the currently selected code

The following icons are available in the JavaScript editor toolbar:

Source	Switch to the source code view
Visual	Switch to the Visual Programming view
	Move cursor to the last editing positions
	Toggle rectangular selection
	Move the current line one tab to the left / right
	Comment / uncomment the current line


Copy / Cut and Paste of script files

Already existing JavaScript files can be Copy / Paste into the same project or other projects. Also Rename and Delete of the files is supported and updates all references on events. Hint: Do not rename the script file over the file system when the file is referenced to object events, because then the references will be broken.

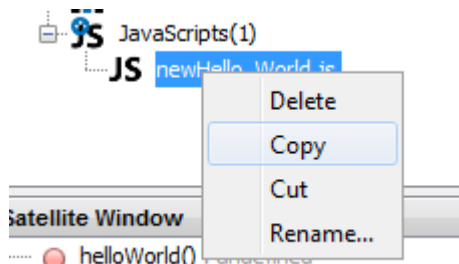

Handling of non ANSI characters

We have included a plugin that allows JavaScripts with non-ANSI characters (UTF-8 format). By default, all script files will be opened and interpreted as UTF-8. When a script file is opened in the editor, the encoding format will be shown in the lower right corner of the program.

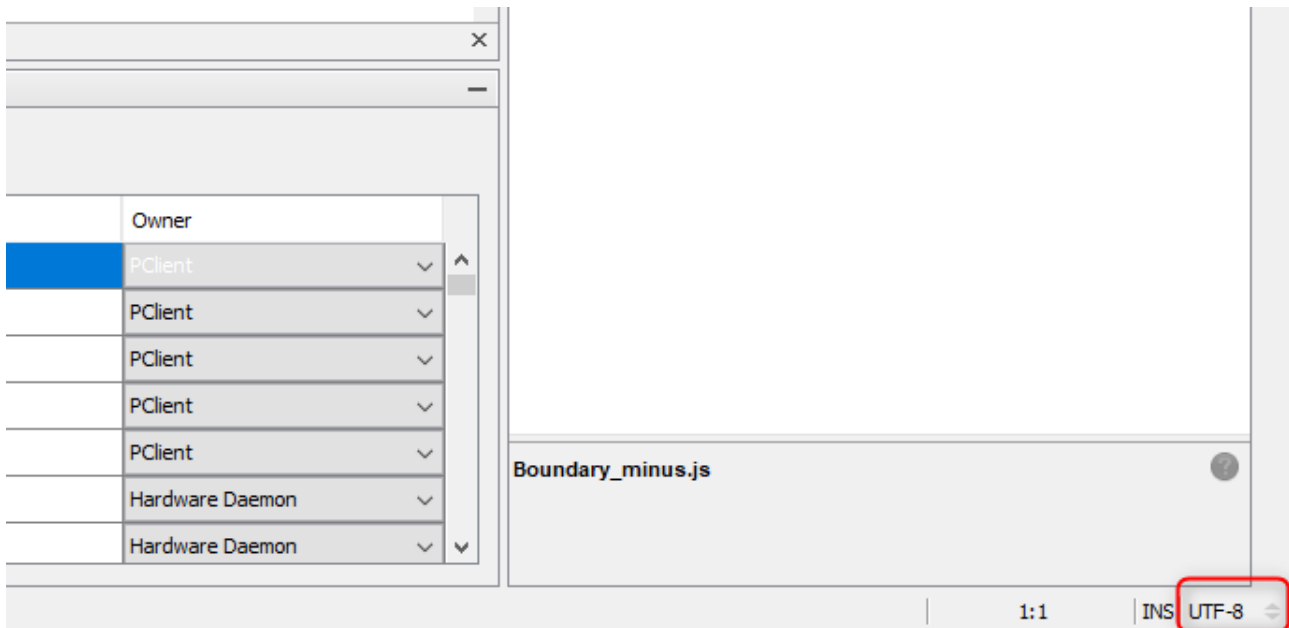

The encoding can also be changed by pressing this place. Normally there is no reason to use any other encoding than UTF-8.

Additionally it is possible to load and save a file in a certain format. There are entries in the menu File called Open in Encoding... and Save in Encoding... where a format can be chosen in which the selected file will be interpreted.

Find and Replace

To find certain texts or phrases in an opened JavaScript file, press CTRL+F. This will open the Find bar in the bottom of the JavaScript editor.



In the field next to Find: you can enter your search term. You can also use the drop down element to choose previous search terms. Search terms will be stored even after the OPUS Projektor is closed and reopened.

After entering a search term you can move through the found results with the Previous and Next button. Pressing the Select button will select all occurrences of the search term. You can configure the search by activating match case, whole word, regular expressions, whether results should be highlighted, and whether the search should wrap around after reaching the end of the file.


To replace a search term with another term, press CTRL+H. This will open the Find bar as described above and additionally the Replace bar.




After searching for something and entering a replace term, you can replace the current occurrence or all occurrences of the term. You can select to replace backwards instead of forward.

7.2 Assign a JavaScript file to an Event

Java Scripts can be configured to be executed at certain events. You can easily drag an existing JavaScript file to an object on scene and can select the desired event. See more in the chapter [Drag & Drop](#)⁴⁷.

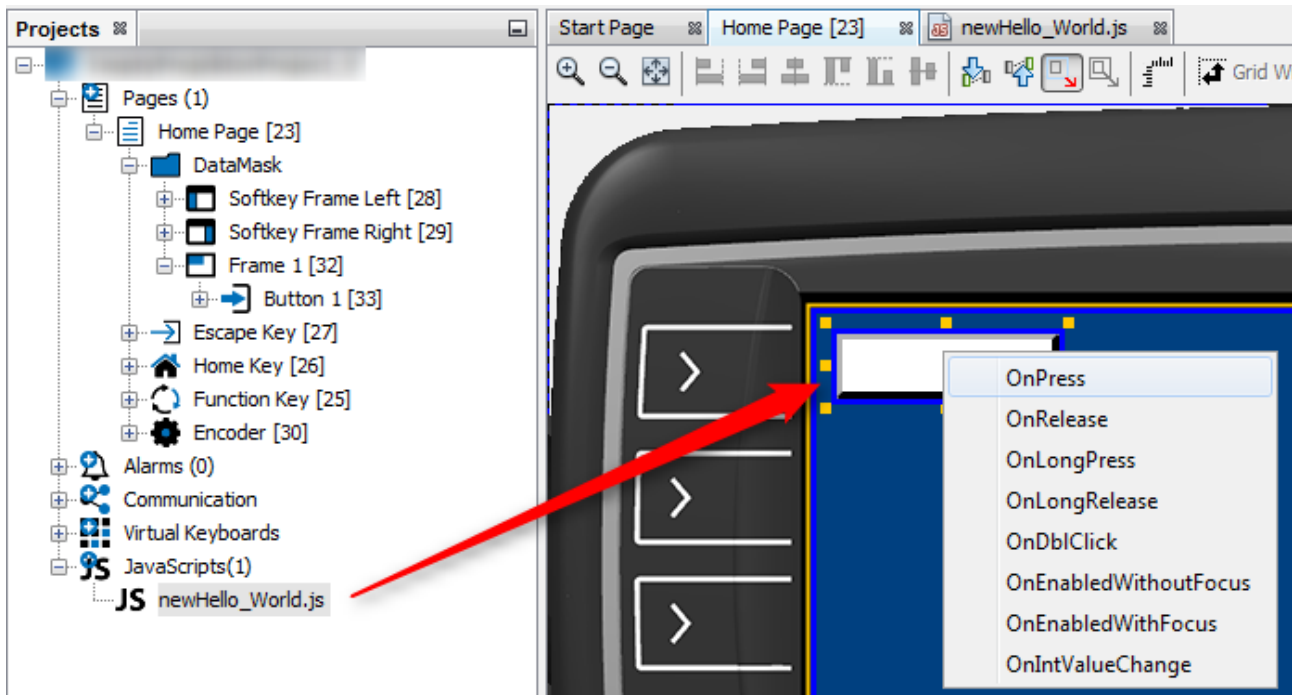

The assigned event will be displayed at the events tab of the Object (1). You can configure such an **Execute Script Action** by clicking on the button (2). Here you can choose an existing **Script File** (3) for execution or create a **New Script File** (4). Already existing JavaScripts can also be used in the project by using the function **Import Script File** (4). Files can be modified by clicking **Edit selected Script File** (5). After selecting the script file it is possible to configure how often the script shall be executed using the **Execute on every Xth Event** field.

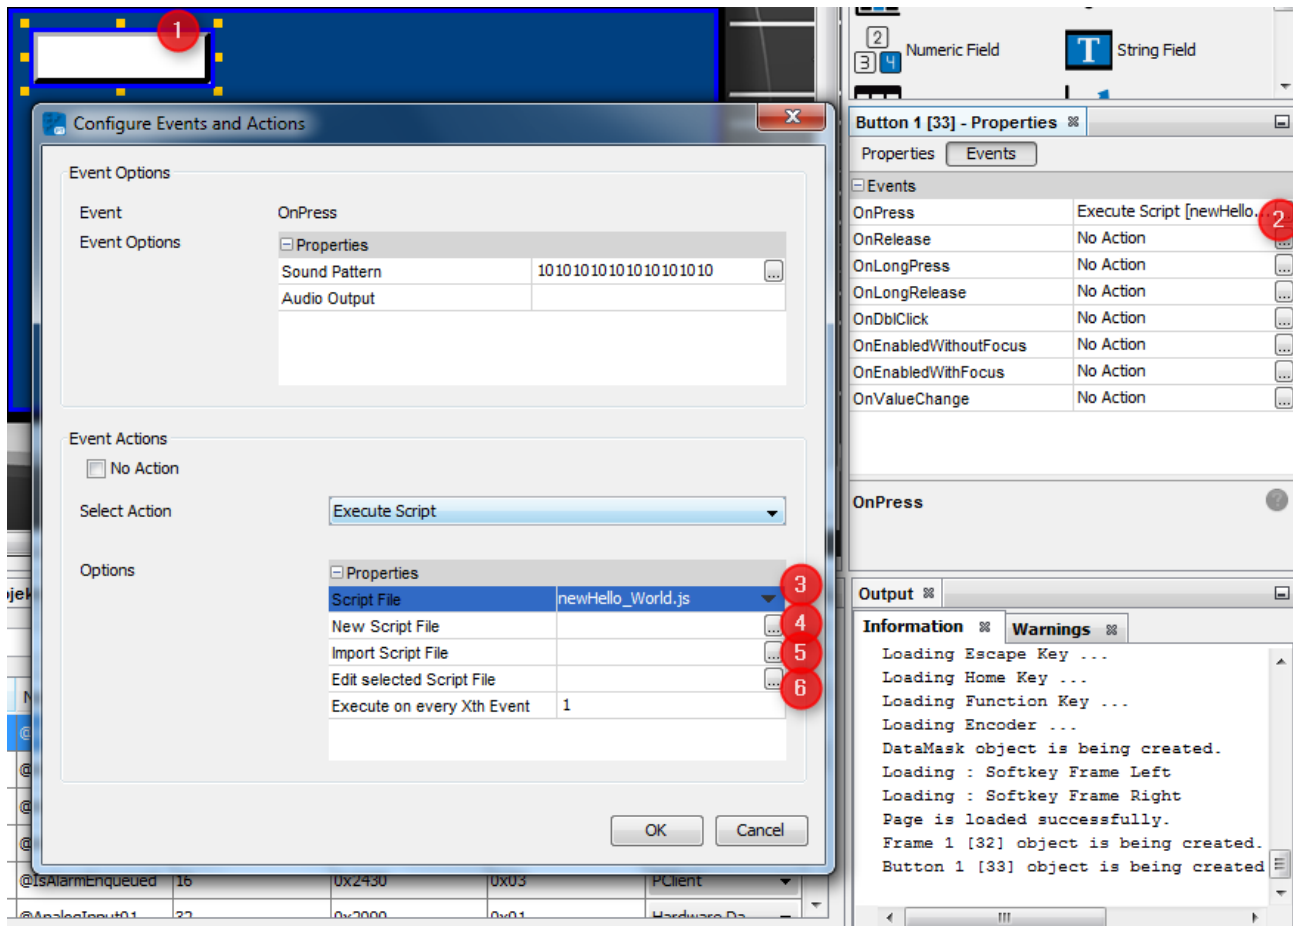

If the script shall be executed for the **OnPageRepeat** or **OnProjectRepeat** events, the **Periods (ms)** property also needs to be set in the event options. This property defines how often the script will be called.

Please note that the minimal execution time for repeat actions is 10ms. We can not guarantee that we will always be exact in executing the repeat events, especially with lower repeat times and more complex scripts. The scripts should not depend on an exact execution time and thorough testing is advised!

7.3 JavaScript Basics

The devices can execute any standard JavaScript code that is not related to HTML or browser functions (like document object, location object, etc.). It is possible to use loops (do/while, while, for), conditions (if, switch) and standard JS objects (Array, Date, Math, Number, String). The syntax is very easy to learn and use. A good starting point for learning JavaScript is <https://www.w3schools.com/js/>

Comments

Like many other programming languages, comments start with a double slash "//"

```
//This is a comment
```

Comments can also be spread over several lines:

```
/*
This
is
a
multiline
```

```
comment*/
```

Note that every command in a JavaScript should end with a semicolon ";".

JavaScript Variables

JavaScript is a weakly typed scripting language which means that no type declaration is needed when creating variables and differently typed variables can be assigned to each other.

```
//To create a variable use the keyword "var":
//Creates an integer variable with value 1
var numberVariable = 1;
//Creates a string variable with value "myString"
var stringVariable = "myString";
// Creates an array with the size of 4
var myArray = new Array(4);
```

Please note that the initialization "var variablename" leads to the deletion of the variable after the script was processed. For JavaScript variables to be used globally, they need to be initialized without the keyword var. It is preferred to use PClient variables to store important data. JavaScript variables should not be used for that.

Operators

The following operators can be used for coding:

Operator	Example	Result	Comment
+	12 + 30 "Java" + "Script"	42 "Java Script "	
-	69 - 27	42	
*	16 * 3	42	
/	126 / 3	42	
%	3 % 2 4 % 2	1 0	Modulo operator
++	i = 41; i++, ++i	42	increment
--	i = 43; i--, --i	42	decrement
==	3 == 2	false	weak compare
==	42 == "42"	true	
==	42 == 43	true	
===	42 === 42	true	strong compare
===	42 === "42"	false	
<	42 < 43 "w" < "W"	true false	less than
<=	42 <= 42 42 <= 43	true true	less or equal
>	42 > 43	false	greater than

Operator	Example	Result	Comment
>=	42 >= 43	false	greater or equal
=	i = 42		Value 42 is assigned to variable i
+=	i += 1	43	i = i + 1;
-=	i -= 1	42	i = i - 1;
*=	i *= 2	84	i = i * 2;
/=	i /= 2	21	i = i / 2;
%=	i %= 2	0	i = i % 2;
	i = 2; j = 5;		
&&	(i <= 2) && (j < 7)	true	both statements need to be true (AND)
	(i%2 == 0) (j%2 == 0)	true	only one statement need to be true (OR)
!	(i == 2) && ! (j%2 == 0)	true	negation of a statement (NOT)
	i = 2; j = 7;		
&	i & j	2	Check if bit is set. In binary: 0010 & 0111 = 0010
	i j	7	Set a bit. In binary: 0010 0111 = 0111
^	i ^ j	5	Toggle a bit. In binary: 0010 ^ 0111 = 0101
<<	2 << 1	4	Shift bits to the left. In binary: 0010 << 1 = 0100
>>	2 >> 1	1	Shift bits to the right. In binary: 0010 >> 1 = 0001
>>>	i = 10; i >>> 2	2	Shift right and fill with zeros. In binary: 1010 >>> 2 = 0010

Loops

Loops can be used in JavaScript similar to many other programming languages.

WARNING: A loop stops execution of the main application until it is finished. So make sure that only very short loops are used.

WARNING: Loops should and can NOT be used to "wait" within a JavaScript program. You can NOT "spend time" within one JavaScript. If you need to time something, use the repeated execution of scripts, so instead of a for loop, just write `x := x + 1;` and after 10 repetitions the appropriate code can be executed.

Three different loop types are available:

- The **while loop**. It only begins if the condition is true and stops as soon as the condition is not true anymore:

```
//Example: loop 10 times:
var i = 0;
while (i < 10)
```



```
{
    i = i + 1; //same as i++;
}
```

- The **do while loop**. This kind of loop will execute the code inside the loop at least once. Only after this the break condition is evaluated:

```
var k = 11;
do
{
    k = k + 1;
} while (k < 10);
//now k is == 12
```

- The **for loop**. This loop is used to run the code inside for specified number of times. The for loop statement includes 3 statements. The first is normally used to initialize a (counter) variable. The second statement is the break condition (when the loop will end) and the third is a statement that will be executed after each loop (normally to increment the counter):

```
for (var x = 0; x < 10; x++)
{
    //do something
    //x will have the values 0..9
}
```

To exit a loop inside a loop, the command **break**; can be used. To skip the current loop iteration and directly start with the next iteration, the command **continue**; can be used.

Conditions

Two condition statements exist in JavaScript that allow code execution if one or more conditions are true.

- The **if condition** statement. If the condition inside the "if" clause is true, the line behind (or the code block inside the brackets) gets executed. To execute special code if the condition is not true, an "else" clause can be added behind the code of the "if" clause. Both can be combined using else if.

```
var i = 42;
if (i < 42)
{
    //execute this code if i is less than 42
}
else if (i === 42)
{
    //execute this code if i is equal to 42
}
else
{
    //execute this code if none of the above conditions were
    true (in this case i is greater than 42)
}
```

- The **switch statement**. The switch statement makes it easy to check the value of exactly one variable without the need to write complex if-else statements:

```
var i = 42;
switch(i)
{
```

```
case 1:
    //do something if i is equal to 1;
break;
case 2:
    //do something if i is equal to 2;
break;
case 42:
    //do something if i is equal to 42;
break;
case 48:
case 50:
    //do something if i is equal to 48 or 50;
break;
default:
    //do something if none of the above cases was true
break;
}
```

Note the **break;** statement in every case. If this is missing, the next case will also be executed even if the case condition is not true (for values 48 and 50 the same code will be executed). It is good practice to have a **default case** at the end of the switch. This gets executed if no other case matched.

Data types

JavaScript also provides the **typeof** operator. With this the data type of a variable can be checked:


```
var myNumber = 42;
var myString = "Hello World";
print("My number is of type " + (typeof myNumber) + ", my
string has type " + (typeof myString));
```

The return values of **typeof** are:

- boolean
- string
- number
- function
- object
- undefined

7.4 Custom JavaScript functions for device specific functionality

Various custom functions exist that help JavaScript interact with project variables and objects. By pressing CTRL+SPACE in the JavaScript editor content area (1), a list with auto complete suggestions will appear. On the top of the list are functions from the category **Custom Functions** (2). A Tooltip (3) for the selected function shows a short description and gives informations about the parameter(s) / return types.

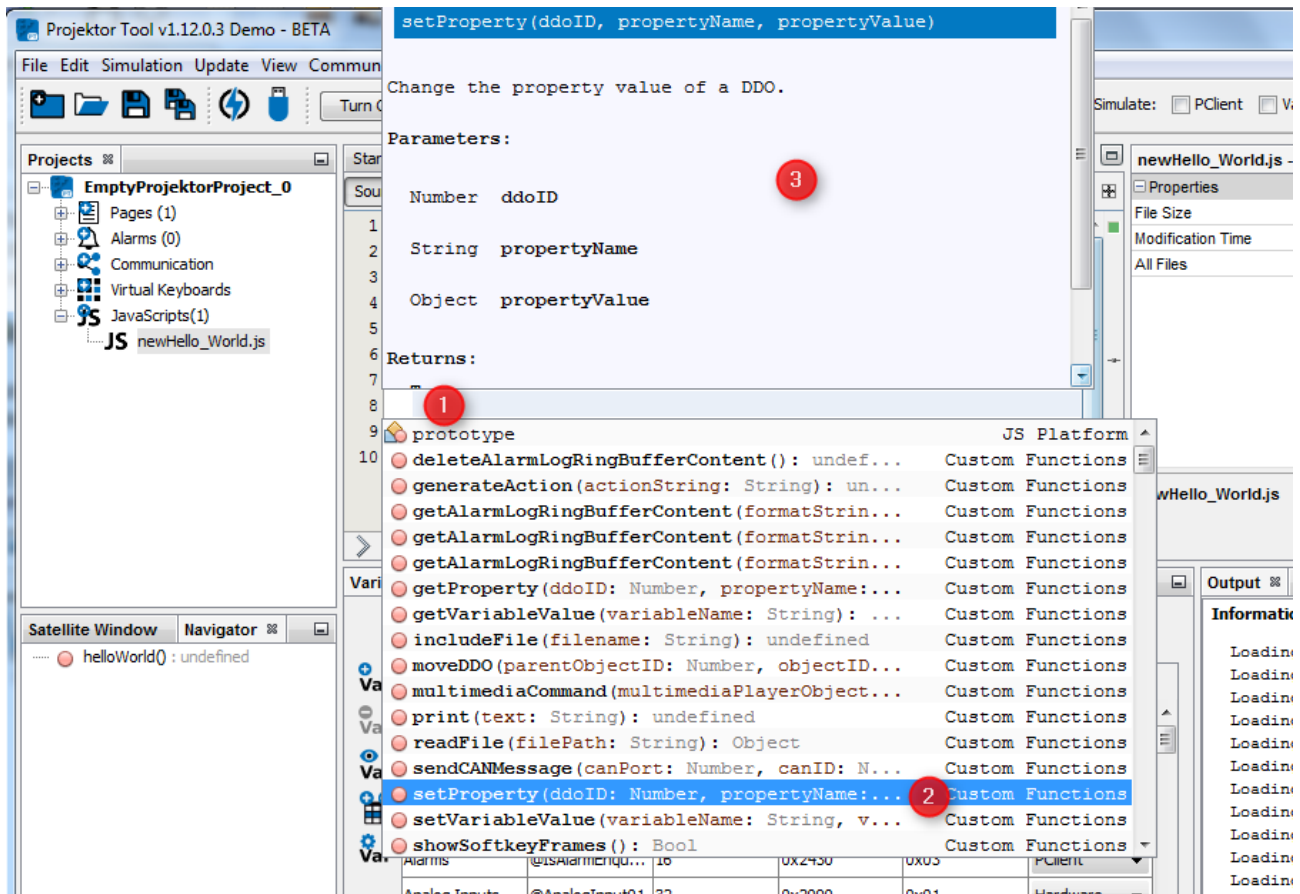

pclient.print - print debug output to console

The print function allows to print debug messages to the serial console. This can be very helpful in debugging JavaScripts during development.

Note that when a lot of debug messages are used the system performance can be slightly decreased. When releasing a project the print statements should be commented.

Prototype:

```
pclient.print (string stringToPrint);
```

Examples:

```
var result = 21 * 2;
```

```
// output: String to print
pclient.print("String to print");
```

```
// output: Result was 42
pclient.print("Result was " + result);
```

```
// output: Strings and numbers can be concatenated!
pclient.print("Strings " + "and " + "numbers " + "can " + "be "
+ "concatenated!");
```

Please note that the print function also works with the PClient simulation on the PC.

The PClient output will be written into the [Output window](#)⁴² in the PClient tab.

The output will also be written in the file

```
%USER%\AppData\Roaming\%program version%
```

```
\extracted_components\pclient\simulation\console_output.txt
```

pclient.getVariableValue - retrieve the value of a project variable

In a project a lot of variables are used to store runtime data and you can configure your own variables in a project. To retrieve the value of such a variable the `getVariableValue` function can be used.

Prototype:

```
var result = pclient.getVariableValue(string nameOfVariable);
```

or

```
var result = pclient.getVariableValue(number Variable Index,  
number Variable Subindex);
```

The returned value of that function contains the value of the variable. This can be either a string or a number depending on the variable type.

Examples:

```
var backlightValue =  
pclient.getVariableValue("@DisplayBacklightIntensity");  
//or  
var backlightValue = pclient.getVariableValue(0x20B0,0x1);  
// result is a number representing the backlight intensity  
pclient.print("Value of backlight is: " + backlightValue);  
  
var terminalName = pclient.getVariableValue("@Terminal");  
//or  
var backlightValue = pclient.getVariableValue(0x2000,0x3);  
// result is a string representing the name of the device this  
// is executed  
pclient.print("I am running on a " + terminalName);
```

pclient.setVariableValue - change the value of a project variable

To set a value to a pre-defined or self-created variable you can use the `pclient.setVariableValue` function. The return value of the function will be **true** (setting value worked) or **false** (setting value failed).

Prototype:

```
var result = pclient.setVariableValue(string nameOfVariable,  
number newValueForVariable);  
//for Numerics, or for Strings:  
var result = pclient.setVariableValue(string nameOfVariable,  
string newValueForVariable);
```

or

```
var result = pclient.setVariableValue(number Variable Index,  
number Variable Subindex, number newValueForVariable);  
//for Numerics, or for Strings:  
var result = pclient.setVariableValue(number Variable Index,  
number Variable Subindex, string newValueForVariable);
```

Example:

```
var worked =  
pclient.setVariableValue("@DisplayBacklightIntensity", 50);
```

```
//or
var worked = pclient.setVariableValue(0x2000,0x3, 50);
if (worked === true)
{
    pclient.print("Setting display backlight to 50% worked!");
}
else
{
    pclient.print("Failed to set the display backlight
intensity to 50% :(");
}
```

pclient.getVariableValid - retrieve information if a project variable has a valid value

With this function you can check if a variable has a valid value. Returns true if the variable has a valid value. Returns false if the variable doesn't have a defined value. Returns "undefined" if the variable doesn't exist or if the function was not called with one parameter only.

Prototype:

```
var result = pclient.getVariableValid(string nameOfVariable);
```

or

```
var result = pclient.getVariableValid(number Variable Index,
number Variable Subindex);
```

The returned value of that function contains the information about the variable.

Examples:

```
var result = pclient.getVariableValid("Speed");
if (result === true)
    pclient.print("The variable has a valid value.");
else if (result === false)
    pclient.print("The variable does NOT have a valid value.");
else
    pclient.print("The variable does not exist or the function
was called inappropriately.");
```

pclient.getProperty - retrieve a property value of a DDO

All graphical objects (DDO => Display Data Object) in a project have a lot of properties. In some cases these properties can be of interest during runtime in a JavaScript. To retrieve the value of such a property the function pclient.getProperty can be used.

Prototype:

```
var value = pclient.getProperty(number DDO-ID, string
propertyName);
```

The return value of the **pclient.getProperty** function will be either the value of the property or **undefined** if something did not work. Since the properties of a DDO consist of various data types, the returned property value can also be a different data type depending on the property. Here is a list of all the properties that can be read and/or changed through JavaScript.

Javascript propertyName	Data type	Get	Set	Object type(s)	Remarks
Absolute Max Value	Integer	x	x	Numeric Fields	

Javascript propertyName	Data type	Get	Set	Object type(s)	Remarks
				Bargraphs Meter object	
Absolute Min Value	Integer	x	x	Numeric Fields Bargraphs Meter object	
Add To Page History	Boolean	x	x	Pages	Pages where this is set to false will not be added to the browsing history (they will not be accessible by pressing the escape key)
Alarm Number	Integer	x		Alarm objects	
Alignment	Integer	x	x	String Fields Numeric Fields	0 - left aligned 1 - center aligned 2 - right aligned
Arc Color	Color	x	x	Bargraphs	Array object containing 4 values (RGBAAlpha)
Auto Wrap	Boolean	x	x	String Fields	Text wraps and new lines are created automatically if set to true
Background Color	Color	x	x	All objects except container	Array object containing 4 values (RGBA)
Background Image	String	x	x	All objects except container and virtual keyboards	absolute path to the image on the device
Behaviour	Integer	x		Alarm objects	0 - Emergency 1 - Warning 2 - Informational
Bit Mask	Integer	x	x	Bargraphs Meter objects Numeric Fields	
Border Image	String	x	x	All objects except container, virtual keyboards and pages	
Border Width	Integer	x	x	All objects except container, virtual keyboards and pages	
Color Above Maximum	Color	x	x	Numeric Fields Bargraphs Meter object	Array object containing 4 values (RGBA)
Color Below Minimum	Color	x	x	Numeric Fields Bargraphs Meter object	Array object containing 4 values (RGBA)
Connect All Softkey Frames	Boolean	x	x	Softkey Frames	Use the page ID as the object ID and set to TRUE or FALSE

Javascript propertyName	Data type	Get	Set	Object type(s)	Remarks
					TRUE - softkey level changes happen on both sides equally FALSE - softkey level changes are independent on both sides
Current Softkey Level	Integer	x	x	Softkey Frames	
DecimalButtonID	Integer	x		Virtual keyboards	ID of the decimal button in the virtual keyboard
Deflection Direction	Integer	x	x	Meter objects Arched bargraphs	
Dependency	Integer	x		All objects except container, virtual keyboards and pages	
Display Video	Integer	x	x	Frames	The number corresponds to the video input
Display Zeros As Blank	Boolean	x	x	Numeric Fields	
DoneButtonID	Integer	x		Virtual keyboards	ID of the Done button in the virtual keyboard
Draw Arc	Boolean	x	x	Meter objects	
Draw Border	Boolean	x	x	All objects except container, virtual keyboards and pages	
Draw Target Line	Boolean	x	x	Bargraphs	
Draw Ticks	Boolean	x	x	Bargraphs Meter objects	
Encoder Movement	Integer	x	x	Bargraphs Meter objects Numeric Fields Tables List objects	0 - linear 1 - dynamic
End Angle	Integer	x	x	Arched bargraphs Meter objects	
Fadeout	Boolean	x	x	Softkey frames	
Fill Mode	Boolean	x	x	Bargraphs Arched Bargraphs	TRUE - bargraph is filled FALSE - bargraph is not filled (just a line at value position)
FirstSetBit	Integer	x	x	Bargraphs Meter objects Numeric Fields	First bit that is used for the bit mask (correlates with "Choose number of bits" in the tool GUI)
Flashing	Boolean	x	x	All objects except container, frames, virtual keyboards and pages	lets objects flash with a given frequency (see below)

JavaScript propertyName	Data type	Get	Set	Object type(s)	Remarks
Flashing Cycle	Integer	x	x	All objects except container, frames, virtual keyboards and pages	min 100 ms, max 5000 ms
Font	String		x	Numeric Fields String Fields Tables	
Font Attribute	Integer	x	x	Numeric Fields String Fields Tables	
Font Color	Color		x	Numeric Fields String Fields Tables	Hexadecimal value 0xRRGGBBAA (red, green, blue, alpha)
Foreground Color	Color	x	x	Bargraphs Tables	Array object containing 4 values (RGBA). For table objects this will change the "Grid Color" property.
Format	Integer	x	x		
GIF Frame Number	Integer		x	Animated GIF images	
GIF Loops	Boolean	x	x	Animated GIF images	
GIF Speed	Integer	x	x	Animated GIF images	
GIF State	Integer	x	x	Animated GIF images	
Height	Integer	x		All objects except pages and virtual keyboards	
Highlighted Row	Integer	x	x	Table	
Horizontal Alignment	Integer	x	x	Numeric Fields String Fields	0 - left aligned 1 - center aligned 2 - right aligned
ID	Integer	x		All objects	
Image To Display	String	x	x	Picture graphic objects	absolute path to the image on the device
Item Height	Integer	x		List objects	
Items Visible (Normal Mode)	Integer	x	x	List objects	
Items Visible (Editing Mode)	Integer	x	x	List objects	will be cropped to the maximum number of items that can be displayed with next edit
Key Number	Integer	x		Virtual keyboards	
Key Pressed Bitmap	String	x		Virtual keyboards	
Leading Zeros	Boolean	x	x	Numeric Fields	

Javascript propertyName	Data type	Get	Set	Object type(s)	Remarks
Level	Integer	x		Softkey frames	
List Highlighted Position	Integer	x		List objects	
Max String Length (Characters)	Integer	x	x	String Fields	
Max Value	Integer	x	x	Numeric Fields Bargraphs Meter object	
Min Display Time	Integer	x	x	Alarm objects	
Min Value	Integer	x	x	Numeric Fields Bargraphs Meter object	
Name	String	x	x	All objects	
Needle Color	Color	x	x	Meter objects	Array object containing 4 values (RGBA)
Needle Image	String	x	x	Meter objects Gauge objects Bargraphs	absolute path to the image on the device
No Of Decimals	Integer	x	x	Numeric Fields	
Number Of List Items	Integer	x		List objects	
Number Of Ticks	Integer	x	x	Bargraphs Meter objects Gauge objects	
Object Status	Boolean	x	x	CAN Freestyle / J1939 mappings	If set to true, the mapping is active, if false, the mapping is not active.
Offset / Offset 2	Float	x	x	Numeric Fields	
Periods	Integer	x	x		
Pressed State	Boolean	x	x	Buttons Softkeys	
Preview Value	Integer / String	x	x	Bargraphs Gauge objects List objects Meter objects Numeric Fields String Fields	For String Fields, the combination \n will insert a line break
Roll Over	Boolean	x	x	All editable objects	For frames: When choosing objects to edit with the encoder, the focus jumps from the last to the first if this is set to true For other objects: When reaching the abs. maximum value of the object, the value jumps to the abs. minimum value of the object

Javascript propertyName	Data type	Ge t	Set	Object type(s)	Remarks
RTSP URL	String	x	x	Frames with Ethernet camera input	See RTSP URL in Video Properties ⁵⁵⁵ . Note that video has to be stopped before switching to a new URL: setVariableValue("@VideoStat us", 0); setProperty(47, "RTSP URL", " rtsp://root:root@192.168.135.90/axis-media/media.amp "); setVariableValue("@VideoStat us", 1);
Scale	Double	x	x	Numeric Fields	
Scaling Factor	Integer	x	x	Frames	Only applicable if Display Video is >0
Send Value	Boolean	x	x	Bargraphs List objects Meter objects Numeric Fields Tables	Equals "Send value directly"
Set As Input	Boolean	x	x	All editable objects	
Show Unused Levels	Boolean	x	x	Softkey frames	
SK Frame Fadeout Time	Integer	x	x	Softkey frames	Value in ms. Here each Softkey frame can get its own fadeout time. To overwrite for all Softkey frames in the project, use updateSoftkeyFrameFadeoutTime ⁶⁰⁸ . A value <100 will disable the fade-out
Sound Pattern	Integer	x	x	Alarm objects	
Start Angle	Integer	x	x	Arched bargraphs Meter objects	
Step Width	Integer	x	x	Numeric Fields	
Stream Type	Integer	x	x	Frames with Ethernet camera input	0 - H.264 via UDP/RTP, 1 - MJPEG via UDP/RTP - 2 - H.264 via RTSP
Table Data	Array	x	x	Tables	String array with one element per line, semicolon (;) as a default delimiter per column (can be changed in table properties)
Target Line Color	Color	x	x	Bargraphs	Array object containing 4 values (RGBA)
Target Value	Integer	x	x	Bargraphs	

JavaScript propertyName	Data type	Get	Set	Object type(s)	Remarks
Tick Color	Color	x	x	Bargraphs	Array object containing 4 values (RGBA)
Timeout	Integer	x	x	Alarm objects	
Touch Input	Boolean	x	x	List objects	Paints a gray border around the list object when it's being edited if this is set to true
Transparent	Boolean	x	x	All objects except container and pages	TRUE - object background is not painted FALSE - object background is painted
Transparent Border Color	Color	x	x	All objects that have a border	Array object containing 4 values (RGBA)
Type	Integer	x		Alarm objects	0 - Page 1 - Frame
Type ID	Integer	x		Alarm objects	Alarm type ID
UDP Port	Integer	x	x	Frames with Ethernet camera input	UDP port for H.264 via UDP/RTP or MJPEG via UDP/RTP protocol. Note that video has to be stopped before switching to a new port: setVariableValue("@VideoStatus", 0); setProperty(47, "UDP Port", 5005); setVariableValue("@VideoStatus", 1);
Unit Group	String	x		All objects except pages, list objects and virtual keyboards	
Value	Integer / String	x		Numeric Fields String Fields	Integer for numeric fields, string for string fields
Value Change Factor	Integer	x	x	Bargraphs Gauge objects List objects Meter objects Numeric Fields Tables	
Vertical Alignment	Integer	x	x	Numeric Fields String Fields	0 - top aligned 1 - center aligned 2 - bottom aligned
Video Alignment	Integer	x	x	Frames	Only applicable if Display Video is >0 0 - not mirrored 1 - mirrored horizontally 2 - mirrored vertically

Javascript propertyName	Data type	Ge t	Set	Object type(s)	Remarks
					3 - mirrored horizontally and vertically
Video Rotation	Integer	x	x	Frames	Only applicable if Display Video is >0 Can only be set to 0, 90, 180 or 270. This will change @CamXRotation and @CamXMirror accordingly.
Visibility	Boolean	x	x	All objects except pages and virtual keyboards	
Visibility Bit	Integer	x	x	All objects except pages and virtual keyboards	
Visibility Variable Index	Integer		x	All objects except containers and virtual keyboards	
Visibility Variable Subindex	Integer		x	All objects except containers and virtual keyboards	
Visible	Boolean	x	x	All objects except containers and virtual keyboards	
Width	Integer	x		All objects except pages and virtual keyboards	
X Location	Integer		(x)*	All objects except pages and virtual keyboards	Always relative to its direct parent *Use the function moveDDO ⁵⁹¹
Y Location	Integer		(x)*	All objects except pages and virtual keyboards	Always relative to its direct parent *Use the function moveDDO ⁵⁹¹

Examples for getProperty:

```

var DDOID = 42;
var myID = pclient.getProperty(DDOID, "ID");
pclient.print("ID of DDO no. " + DDOID + ": " + myID);

var myColor = new Array(4);
myColor = pclient.getProperty(DDOID, "Background Color");
// Now the array contains the Red, Green, Blue and Alpha
components
pclient.print("The background color is: R: " + myColor[0] + "
G: " my
Color[1] + " B: " + myColor[2] + " A: " + myColor[3]);

var imagePath = pclient.getProperty(DDOID, "Background Image");
pclient.print("The image path is: " imagePath);

```

pclient.setProperty - change the property value of a DDO

Setting properties is as easy as getting them. The setProperty function can be used for that.

Prototypes:

```
var result = pclient.setProperty(number DDO-ID, string
propertyName, integer value);
var result = pclient.setProperty(number DDO-ID, string
propertyName, double value);
var result = pclient.setProperty(number DDO-ID, string
propertyName, bool value);
var result = pclient.setProperty(number DDO-ID, string
propertyName, string value);
var result = pclient.setProperty(number DDO-ID, string
propertyName, Array array);
```

Examples:

```
var DDROID = 42;
var myColor = new Array(4);
// Define a full red color
myColor[0] = 255;
myColor[1] = 0;
myColor[2] = 0;
myColor[3] = 255;    //Alpha channel: completely opaque

// Setting a new name to a DDO:
var worked = pclient.setProperty(DDROID, "Name", "MyNewName");
if (worked === true)
{
    pclient.print("Setting new name worked!");
}
else
{
    pclient.print("Setting name failed!");
}

// Set the background color:
worked = pclient.setProperty(DDROID, "Background Color",
myColor);
// Set a new background image
worked = pclient.setProperty(DDROID, "Background Image",
"/opt/images/bg.png");
```

pclient.readFile - read the contents of a file

The contents of a file on the file system or external media can be read and stored in a vector containing strings. Each vector entry represents one line of a file. If the reading was not successful, the result is undefined.

Important note: The current maximum line length that is read is 1024 characters. If the file contains a line that is longer, it is possible that the file can not be read correctly

Important note 2: The maximum number of bytes is currently restricted to 2MB. If the file is larger than 2MB, only the first 2MB of the file are read, the rest is discarded.

Prototype:

```
var result = pclient.readFile(string filePath);
```

Example:

```
//read the contents of the file /proc/cpuinfo
var myData = pclient.readFile("/proc/cpuinfo");

//check if successful:
if (undefined == myData)
{
    //reading failed!
    print("Error reading file /proc/cpuinfo");
}
else
{
    //reading successful, myData is now an array
    //print contents to console:
    for (var i = 0; i < myData.length; i++)
    {
        print("Line " + (i + 1) + ": " + myData[i]);
    }
}
```

To display the contents of the retrieved vector the Table Object can be used:

```
pclient.setProperty(TableID, "Table Data", myData);
```

For details see the manual chapter for the table object.

pclient.writeToFile - write a string to a file on the file system

With the pclient.writeToFile function it is possible to write strings to a file.

For security reasons the file can only be located on a connected USB stick or on a dedicated folder of the device. If the **filePath** provided is not on the connected USB stick, the file is automatically created in the device's dedicated directory (on the device this is usually in "/opt/user_files/", on the windows simulation this directory is in the designer's install path (pclient/user_files/). Note that a file is automatically created if it does not exist yet (this will fail if the path contains directories that do not exist).

Alternatively, the user_files directory can be created using the [createUSBDirectory](#)⁶⁰¹ function.

If the file is located on a USB stick, the size of the file is not restricted (write will fail if there is no space left on the device). If the file is located on the file system of the device, the memory that is available in the /opt/user_files directory is limited to 100 MB (you can create many smaller files but not more than 100 MB in the directory). Writing will fail if this limit is reached.

From this version onwards, files can also be saved in the directory /opt/data. This folder will be backed up during an OS / application update, which is advantageous to keep data intact (only for i.MX6 devices).

The **stringToWrite** parameter may contain any string. No line breaks are added at the end of each write, these need to be added to the stringToWrite if desired (add "\n" for a line break). If the string only consists of one line, a line break has to be added at the end.

The **option** parameter can either be "append" or "replace". If the string is appended, the string will just be added at the end of the file. If the string is replaced, the whole content of the file is discarded before writing the new string to the file. If any other string is provided as option parameter the writeToFile function will fail.

The optional **sync** parameter can be set to **true** if the file shall be directly written to disk (reduce the risk of corrupt files at total power loss). The sync to disk will be done after the content was written to the file. If the **sync** parameter is set to **true** the writeToFile function will **not return** until synchronization is finished! If the **sync** parameter is omitted or set to **false**, the synchronization will be done by the operating system after some time or when the device is shut down.

The return value of the writeToFile function is either **true** if writing to the file (and optional sanchronization) was successful or **false** if writing or synchronizing to disk failed.

Prototype:

```
var result = pclient.writeToFile(string filePath, string
    stringToWrite, string option, bool sync);
```

Example:

```
var usbMountPath = getVariableValue("@USBMountPath");
var filePath = usbMountPath + "/myFile.txt";
var myTextWithLineBreak = "Hello, this is line 1.\nAndThis is
    line 2.\n";
var doSync = false;
var result = pclient.writeToFile(filePath, myTextWithLineBreak,
    "append", doSync);
if (result == true)
{
    pclient.print("Writing into file was successful!");
}
else
{
    pclient.print("Writing into file FAILED!");
}
```

pclient.getAlarmLogRingBufferContent - Read the alarm log ring buffer

The ring buffer alarm log data can be similarly retrieved as the contents of a file. There will also be a vector returned which contains each alarm log entry. Additionally a format string and a delimiter character can be provided to get a formatted result. The format string can contain several keywords delimited by the delimiter character. The keywords that can be used are:

- *timestamp*: The date and time when the alarm was logged in seconds since 1970-01-01 00:00
- *timestring*: The date and time when the alarm was logged as a formatted text. The format is "DayOfWeek Month DayOfMonth Hour:Minute:Second Year", e.g. "Mon Sep 3 13:42:00 2012"
- *alarmtext*: The text that was configured for the logged alarm in the property "Alarm Log Text" of the alarm object.
- *alarmevent*: The event that caused the alarm log entry (either "Enqueued", "Shown", "Confirmed" or "Removed")

- *alarmvariables*: The values of the variables @AlarmShow, @AlarmCurrent and @AlarmCurrentPriority at the time of the logging entry. Each value in hex delimited by the delimiter character.

Example format string: "timestring;alarmtext;alarmevent"

Delimiter character: ";"

This would cause one entry of the returned vector to look like this: "Mon Sep 3 13:42:00 2012;Engine Oil Pressure too high;Shown"

Prototype:

```
var result = pclient.getAlarmLogRingBufferContent(string
    formatString, string delimiterCharacter);
```

Example:

```
//create a new array and retrieve the ring buffer content
var myLog = new Array();
myLog = pclient.getAlarmLogRingBufferContent
("timestring;alarmtext", ";");

//check if successful:
if (myLog.length == 0)
{
    //reading failed! No entries in the buffer?
    pclient.print("Error reading Alarm Log Ring Buffer
content");
}
else
{
    //reading successful, myLog is now an array
    //print contents to console:
    pclient.print("Alarm log:");
    for (var i = 0; i < myLog.length; i++)
    {
        pclient.print(myLog[i]);
    }
}
```

Note: The returned array can be easily passed to a table object so it can be shown on screen (setProperty(IDofTableObject, "Table Data", arrayWithLogContent);)

Note 2: If the formatting of the date and time is not what is desired, the timestring can be used to create a JavaScript Date object which provides easy access to each part of the date and time:

```
//assume that we already have an array filled with log data and
that the timestamp is the first part of each entry
var i = 0;
//extract the timestamp from the log entry
var timestampAsString = myLog[i].substr(0,
myLog[i].indexOf(";"));
Var timestamp = parseInt(timestampAsString);
var myDate = new Date(timestamp * 1000);
//now each part of the date/time can be accessed separately:
//e.g. myDate.getDate() <-- day of month
```



```
//or myDate.getSeconds() <-- seconds and so on...
```

pclient.deleteAlarmLogRingBufferContent - clear an alarm log ring buffer

Simply use the following function to delete the complete alarm log ring buffer:

```
pclient.deleteAlarmLogRingBufferContent();
```

pclient.moveDDO - move an object on the screen

The pclient.moveDDO function can be used to move an object to a new position. Please use this function with care, this can lead to a very high system load if this function is abused to e.g. create complex animations.

Prototype:

```
var result = moveDDO(number ParentObjectID, number  
ObjectIDtoBeMoved, number newX, number newY);
```

The first parameter is the object ID of the parent of the object that shall be moved (check project tree to find the parent). The second parameter is the ID of the object that shall be moved. The third and fourth parameters are the new coordinates inside the parent.

Example:

```
//Move the picture graphic DDO 42. The parent of this ddo is  
frame 21  
var pictureDDO = 42;  
var frameDDO = 21;  
  
//now move to position 84/36:  
var movingWorked = moveDDO(frameDDO, pictureDDO, 84, 36);  
if (movingWorked)  
{  
    pclient.print("Moving picture was successful!");  
}  
else  
{  
    pclient.print("Moving picture failed! :( ");  
}
```

Example project: [Download this project](#) to see how the MoveDDO function can be used.

pclient.showSoftkeyFrames - show faded-out softkey frames

If the fadeout time for softkey frames was set in project properties, the softkey frames will be hidden after that time. To show them again, a physical key needs to be pressed. If the softkey frames shall be shown again by some other event, the showSoftkeyFrames function can be used.

Prototype:

```
var result = pclient.showSoftkeyFrames();
```

Note: The function will always return true.

pclient.sendCANMessage - send a CAN message

First things first: This function should only be used if there is really no other way of sending the desired message using the CAN protocol settings provided! Implementing a CAN protocol in JavaScript is not a good idea!

Prototype:

```
var result = pclient.sendCANMessage(number CAN-Port,
                                     number CAN-ID,
                                     number DLC,
                                     number Byte1,
                                     number Byte2,
                                     number Byte3,
                                     number Byte4,
                                     number Byte5,
                                     number Byte6,
                                     number Byte7,
                                     number Byte8);
```

Description of the parameters:

- CAN-Port: Number of the CAN port that shall be used for sending the message (numbering starts with 1)
- CAN-ID: The CAN messages CAN ID
- DLC: Data length code: how many data bytes shall be sent
- Byte1...Byte8: The data bytes of the CAN message

Example:

```
//send CAN message with ID 0x601 and 8 data bytes on port 1:
var result = sendCANMessage(1, 0x601, 8, 0xde, 0xad, 0xbe,
                             0xef, 0xb0, 0x0b, 0xaf, 0xfe);
if (result)
{
    pclient.print("CAN message sent successfully!");
}
else
{
    pclient.print("Failed to send CAN message!");
}
```

pclient.includeFile - include another JavaScript file

With this command it is possible to execute a JavaScript file from within another JavaScript file.

Example:

```
pclient.includeFile("example.js")
```

The included file will be executed as if the source code was written in the source file (except when it's a function). This is useful if you have a part of code that you need to execute in many different places.

function - use functions in JavaScript

It is possible to use functions in JavaScript. To create a function, use the following syntax:

Example:

```
function function_name (input variables)
{
    <code>
    return return_value;
}
```

The input variables as well as the return value are optional. The input variables will be forwarded from the calling JavaScript. Executing the function looks like this:

Example:

```
var result = function (input variables);
```

You can combine this with the `includeFile` function to create a set of multi purpose JavaScript functions that you can use in different places in your project (Note that you need to declare the functions globally for them to stay alive).

Please note that for a function to be declared once and stay "alive", it needs to be declared like this:

```
function_name = function function_name (input variables)
{
<code>
return return_value;
}
```

pclient.generateAction - simulate encoder actions

It is possible to call functions in JavaScript that simulate encoder actions:

Example:

```
pclient.generateAction("Navigate Up");//simulates a
counterclockwise encoder movement
pclient.generateAction("Navigate Down");//simulates a clockwise
encoder movement
pclient.generateAction("Navigate Confirm");//simulates an
encoder press
```

pclient.deletePageHistory();

For the purpose of prohibiting going back to pages with a password access with the escape key, it is possible to delete the browsing history with this command. To prohibit certain pages from being accessible with the escape key, set the property "Add To Page History" to false. Just execute the function

```
pclient.deletePageHistory();
```

pclient.multimediaCommand - send commands to a MultimediaPlayer object

The `pclient.multimediaCommand` function can be used to send commands to a `MultimediaPlayer` object. Various commands can be used to control playback or manipulate the playlist of the `MultimediaPlayer` object.

Prototype:

```
var result = pclient.multimediaCommand(number
MultimediaPlayerObjectID, string commandString, number
optionalValue);
```

The first parameter is the object ID of the `MultimediaPlayer` object to which the command shall be sent.

The second parameter is the command string (see below for a list of available commands. Note that the command string can either be in upper or lower case letters (e.g. "play" == "Play" == "PLAY"))

The third parameter is an optional/mandatory value that can/needs to be provided to some of the commands.

Note: The `multimediaCommand` function returns true (if the command was successfully sent to the `MultimediaPlayer` object) or false (if the command failed). The only exception is: If the

command string is "get playlist", an array containing the pathes of all files that are currently in the playlist is returned.

Available commands:

- **"play"**
Optional Value: None
Description: Begin playback of the currently selected media file
- **"stop"**
Optional Value: None
Description: Stop playback of the currently selected media file
- **"pause"**
Optional Value: None
Description: Pause playback of the currently selected media file
- **"back"**
Optional Value: None
Description: Jump to the previous file in the playlist
- **"next"**
Optional Value: None
Description: Jump to the next file in the playlist
- **"mute"**
Optional Value: None
Description: Mute the MediaPlayer
- **"unmute"**
Optional Value: None
Description: Unmute the MediaPlayer (current volume set)
- **"set volume"**
Optional Value: volume offset, any integer number (volume is restricted to be between 0 and 100, so it only makes sense to set an offset between -100 and 100)
Description: If no optional value is provided, the volume that is set in the volume bar graph of the MediaPlayer is used. If an optional volume is provided, this will be treated as an offset to the current volume.
- **"set position"**
Optional Value: integer number (positive or negative)
Description: Jump to a position in the currently played back file. If no optional value is provided, the position that is set in the position bar graph of the MediaPlayer is used. If an optional value is provided, the value is treated as an offset to the current position (in seconds).
- **"shuffle"**
Optional Value: true or false
Description: If no value is provided, the pressed state of the MediaPlayer's shuffle button is used. If true is provided as parameter, the playlist will be randomized. If false is provided, the playlist will return to it's original sequence.
- **"loop"**
Optional Value: integer number between 0 and 2
Description: If no value is provided, the value of the MediaPlayer's loop list is used. If a value is provided, the values have the following effect: 0: Don't loop, 1: loop current file, 2: loop playlist (after end of last file in playlist was reached, begin at start of playlist)
- **"add to playlist"**
Mandatory Value: string with the path to the file that shall be added to the playlist
Description: Add a media file to the playlist of the multimedia player.

- **"remove from playlist"**

Mandatory Value: string with the path to the file that shall be removed from the playlist. If the file was added to the multimedia player at design time or if it was manually copied to PROJECT_PATH/terminal_files/multimedia directory, it is enough to provide the file name with suffix (e.g. "myMedia.mp3") to remove the file. If the file was added to the playlist at runtime (e.g. from an USB drive), the full path (e.g. "/disk/usb1/myMedia.mp3") needs to be used to remove the file from the playlist.
Description: Remove a file from the playlist.

- **"select playlist entry"**

Mandatory Value: number ≥ 1
Description: Select a certain entry position in the playlist

- **"clear playlist"**

Optional Value: None
Description: Remove all files from the playlist. After that the playlist will be empty.

- **"add directory to playlist"**

Mandatory Value: string that contains a path to a folder that contains media files that shall be added to the playlist
Description: Add all files in the specified directory to the playlist. Make sure that only media files that can be played back are in the folder.

- **"toggle fullscreen"**

Optional Value: None
Description: Switch between fullscreen mode and normal mode

- **"get playlist"**

Optional Value: None
Description: Get an array that contains strings. The strings are the full qualified pathes to the media files that are currently in the playlist.

Example:

```
//Our MultimediaPlayer object has object ID 42:
var mmpID = 42;
//Start playback of the current file
var result = pclient.multimediaCommand(mmpID, "play");
if (result == true)
{
    pclient.print("Play command successfully sent");
}
else
{
    pclient.print("Error sending play command to
MultimediaPlayer with ID " + mmpID);
}
//From here we omit the handling of the return value (to save
some space in the example code)
//Pause playback of the current file
pclient.multimediaCommand(mmpID, "pause");
//Jump to next file in playlist
pclient.multimediaCommand(mmpID, "next");
//Jump to 1 minute and 30 seconds in the current file
pclient.multimediaCommand(mmpID, "set position", 90);
//Add another file to the playlist
```

```

pclient.multimediaCommand(mmpID, "add to playlist",
"/disk/usbsda1/mySong.mp3");
//Remove all files from playlist:
pclient.multimediaCommand(mmpID, "clear playlist");
//Add the content of a directory to the playlist:
pclient.multimediaCommand(mmpID, "add directory to playlist",
"/disk/usbsda1/music/");

//Get the complete playlist and show all pathes in a table
(with ID 55)
var playlistEntries = new Array();
playlistEntries = pclient.multimediaCommand(mmpID, "get
playlist");
pclient.setProperty(55, "Table Data", playlistEntries);

```

Please note that the example above is not meant to be executed (makes no sense to execute the commands in that order in one script).

pclient.save2DGraphHistory - Save the value history of a 2D Graph (to external media)

The value history of a 2D Graph object is stored in binary ring buffers on the non-volatile memory of the device. In order to process the data on a PC (e.g. spreadsheet application), it needs to be copied to an external media (e.g. usb drive).

As soon as this function is called, the copy process will start. The progress can be observed in the [Copy Progress Variable](#)^{□491} of a 2D Graph. While copying is in progress all new values of the 2D Graph will be buffered and will not get lost. After the copy has finished (Copy progress variable value is 100), the external media can be removed and the data can be processed with the [Graph History Tool](#)^{□500} on a PC.

Prototype:

```

var result = pclient.save2DGraphHistory(number Graph-DDO-ID,
string targetPath);

```

The result of this function is true if the copy process could be started (correct object ID and target path was provided). This does not mean that the copy process has successfully finished.

Example (copy to USB drive):

```

//Get path of mounted USB drive:
var usbMountPath = pclient.getVariableValue("@USBMountPath");
//Save history to target path. The 2D Graph has object ID 42
var result = pclient.save2DGraphHistory(42, usbMountPath);
if (true == result)
{
    pclient.print("Copy 2D Graph history started");
}
else
{
    pclient.print("Starting copy 2D Graph history FAILED");
}

```

pclient.delete2DGraphHistory - Delete the value history of a 2D Graph object

Use this function to completely delete the value history of a 2D Graph object. This will instantly delete the binary ring buffer on the non-volatile memory and the currently shown value lines.

Prototype:

```

var result = pclient.delete2DGraphHistory(number Graph-DDO-ID);

```

The result of this function is true if a correct graph object ID was provided.

pclient.requestVariableValueFromOwner - Initiate a read request to the owner of a variable (CANopen SDO Upload Request)

This function can be used as a trigger to send out a read request to the owner of a variable. Currently this function can only be used to send out a CANopen SDO Upload Request. See [SDO Upload Request Support](#)³⁶⁰

This function can be called multiple times in one script for different variables. All requests will be buffered and send out one after another after the equivalent SDO Upload Responses was received (or after timeout).

Prototype:

```
var result = pclient.requestVariableValueFromOwner(string
  NameOfCANopenVariable);
//or
var result = pclient.requestVariableValueFromOwner(number Index
  of CANopen Variable, number Subindex of CANopen Variable);
```

The result of this function is *true* if the variable is a CANopen variable and the Upload Request was accepted by CANopen. It returns false if either the settings of the variable were not correct (e.g. if it was no CANopen variable) or if the CANopen stack was not correctly configured (e.g. no appropriate SDO Client Channel settings were made for the CANopen ECU).

pclient.writeEEPROM - Write a value to the EEPROM

The pclient.writeEEPROM function allows writing values to EEPROM. The values in EEPROM are very save and will survive a complete a software update as well as unexpected power losses (except during the writing process).

Note: The number of EEPROM write cycles is limited (device dependent). Do not write to EEPROM too often (e.g. not in a cyclic script or CAN message)!

The maximum usable EEPROM size for all devices is 28672 bytes.

Prototype:

```
var result = pclient.writeEEPROM (number EEPROM_ADDRESS, number
  LENGTH, number/bool/string VALUE);
```

Parameters:

- EEPROM_ADDRESS: The start address in the EEPROM to write the data to
- LENGTH: The data length. The following rules apply:
 - ? If writing a bool, the length needs to be set to 1
 - ? If writing a number, the length needs to be 1, 2, 3 or 4
 - ? If writing a string, the area starting at the address will be reset to 0 in EEPROM and after that the string will be written (if a string is shorter than the provided length, still the whole length is reset to 0 before the shorter string is written). If a string is longer than length, only the given number of bytes will be written to EEPROM.
 - ? EEPROM_ADDRESS + LENGTH may not be greater than the maximum EEPROM size (28672)
- VALUE: Currently the following JavaScript data types are supported: number, string and bool. If e.g. an array object is provided as value parameter, the writeEEPROM function will fail.

- Return value (result): If the provided value was written successfully, the number of bytes that were written are returned. If writing the value to EEPROM failed, undefined will be returned (observe console error messages when testing the project).

Note: The EEPROM functions will only work on the device, not in the PClient simulation.

Examples:

```
var ret = pclient.writeEEPROM(0, 4, 0xdeadbeaf); //write the
number 0xDEADBEAF into 4 bytes starting at position 0
pclient.print("Write 0xdeadbeef: " + ret);
//console output: Write 0xdeadbeef: 4
```

```
var ret = pclient.writeEEPROM(4, 2, 32767); //write the number
32767 into 2 bytes starting at position 4
pclient.print("Write 32767: " + ret);
//console output: Write 32767: 2
```

```
var ret = pclient.writeEEPROM(6, 20, "Hallo Test!"); //write
the string "Hallo Test!" into 20 bytes starting at position 4
pclient.print("Write str: " + ret);
//console output: Write str: 11
```

```
ret = writeEEPROM(26, 1, true); //write a bool into 1 byte at
position 26
print("Write b: " + ret);
//console output: Write b: 1
```

```
ret = pclient.writeEEPROM(27, 1, -1); //write the number -1
(minus 1) into 1 byte at position 27
pclient.print("Write minus1: " + ret);
//Write minus1: 1
```

```
ret = pclient.writeEEPROM(28, 2, 0x55); //write the number 0x55
into 2 bytes starting at position 28
pclient.print("Write 16bit 0x55: " + ret);
//console output: Write 16bit 0x55: 2
```

pclient.readEEPROM - read a value from the EEPROM

The pclient.writeEEPROM function allows reading values from EEPROM. The maximum usable EEPROM size is **28672** bytes.

Prototype:

```
var value = pclient.readEEPROM(number EEPROM_ADDRESS, number
LENGTH, string OPTIONAL_DATATYPE);
```

Parameters:

- EEPROM_ADDRESS: The start address in the EEPROM to read the data from
- LENGTH: The data length. The following rules apply:
 - ? If reading a bool, the length will be ignored and 1 is always used

- ? If reading a number, the length needs to be 1, 2, 3 or 4
- ? EEPROM_ADDRESS + length may not be greater than max EEPROM size (28672)
- OPTIONAL_DATATYPE: This is a hint about the type of data that shall be read. The readEEPROM function will try to use the correct data type as its return value. If this parameter is omitted or a non supported value is used, a byte array will be used as return type (see Return value below)
 - ? Possible values:
 - ? "bool"
 - ? "number"
 - ? "string"
- Return value (value): In case reading failed, undefined will be returned (observe console error messages when testing the project). If reading worked, the value that was read from EEPROM will be returned. The data type of the returned value depends on OPTIONAL_DATATYPE parameter. If this parameter was omitted, a byte array object is returned that contains the single data bytes of the EEPROM (as numbers).

Note: The written and returned numbers are treated as signed 32Bit integers regardless of the actual data length! If e.g. -1 is written with a length of 1 and then read again, 255 will be returned (see example below)! The handling of such data is up to the script programmer!

Examples (see writeEEPROM for the according write functions):

```
var x = pclient.readEEPROM(0, 4, "number"); //read 4 bytes from
postion 0, interpret the data as a number
pclient.print("Read 0xdeadbeef: " + x);
//console output: Read 0xdeadbeef: -559038801
```

Why -559038801?

0xdeadbeef in binary is 1101 1110 1010 1101 1011 1110 1010 1111 (32 bits).

According to the note above, the 1 in the highest bit is interpreted as the sign.

1101 1110 1010 1101 1011 1110 1010 1111 as a 32 bit signed number is -559038801

```
var n = pclient.readEEPROM(4, 2, "number"); //read 2 bytes from
postion 4, interpret the data as a number
pclient.print("Read 32767: " + n);
//console output: Read 32767: 32767
```

```
var str = pclient.readEEPROM(6, 20, "string"); //read 20 bytes
from postion 6, interpret the data as a string
pclient.print("Read str: " + str);
//console output: Read str: Hallo Test!
```

Why "Hallo Test!", even though 20 bytes are read?

As seen below, the positions 6 to 16 (11 bytes -> 11 characters in "Hallo Test!") are filled with the letters. The rest was set to 0. 0 is interpreted as the stop sign (i.e. the end of a string).

```
var b = pclient.readEEPROM(26, 1, "bool");
pclient.print("Read b: " + b);
```

```
//console output: Read b: true

var minus1 = pclient.readEEPROM(27, 1, "number");
pclient.print("Read minus1: " + minus1);
//console output: Read minus1: 255
```

Why 255? -1 in binary is, in 32 bit, 1111 1111 1111 1111 1111 1111 1111 1111). But only 1 byte is stored. 1111 1111 equals 255.

```
var b16 = pclient.readEEPROM(28, 2, "number");
pclient.print("Read 16bit 0x55: " + b16);
//console output: Read 16bit 0x55: 85

var arr = pclient.readEEPROM(0, 29);
for (var i = 0; i < arr.length; ++i)
{
    pclient.print("arr[" + i + "]: " + arr[i]);
}
//console output:
// arr[0]: 175 -> 0xAF
// arr[1]: 190 -> 0xBE
// arr[2]: 173 -> 0xAD
// arr[3]: 222 -> 0xDE -> makes 0xDEADBEAF
// arr[4]: 255 -> 0xFF
// arr[5]: 127 -> 0x7F -> makes 32767
// arr[6]: 72 -> 0x48 -> ASCII H
// arr[7]: 97 -> 0x61 -> ASCII a
// arr[8]: 108 -> 0x6C -> ASCII l
// arr[9]: 108 -> 0x6C -> ASCII l
// arr[10]: 111 -> 0x6F -> ASCII o
// arr[11]: 32 -> 0x20 -> ASCII <blank space>
// arr[12]: 84 -> 0x54 -> ASCII T
// arr[13]: 101 -> 0x65 -> ASCII e
// arr[14]: 115 -> 0x73 -> ASCII s
// arr[15]: 116 -> 0x74 -> ASCII t
// arr[16]: 33 -> 0x21 -> ASCII !
// arr[17]: 0 -> String stop sign
// arr[18]: 0 -> String stop sign
// arr[19]: 0 -> String stop sign
// arr[20]: 0 -> String stop sign
// arr[21]: 0 -> String stop sign
// arr[22]: 0 -> String stop sign
// arr[23]: 0 -> String stop sign
// arr[24]: 0 -> String stop sign
// arr[25]: 0 -> String stop sign
// arr[26]: 1 -> bool true
// arr[27]: 255 -> 0xFF
// arr[28]: 85 -> 0x55
```

Why was this long array returned? No data type was given in the read command, so the bytes are returned as a JavaScript array.

Please note: Numbers are stored LSB first, Strings are stored linearly from beginning to end.

pclient.getCallerID - Retrieve the ID of the object/variable that triggered the script

With this function the ID of the object (graphical object or CAN mapping) or the name of the variable that triggered the execution of the current script.

Prototype:

```
var result = pclient.getCallerID();
```

result will contain the ID of the object if the script was triggered by a graphical object or a CAN mapping, or the name of the variable if the script was triggered by a variable.

If neither is the case (only theoretical, should never happen), the result will be undefined.

pclient.createUSBDirectory - Create a directory on the USB stick or in user_files

This function can be used to create a directory on a USB stick or in the /opt/user_files directory on the device itself.

provide a directory name or hierarchy as a parameter. If the path starts with /opt/user_files, the directory hierarchy is created inside the user_files directory. If the path is not below /opt/user_files, the current USB mount path is automatically prepended to the path and the directory is created on the USB stick.

The path may not contain a ".." or "**".

Prototype:

```
var result = pclient.createUSBDirectory(string directoryPath);
```

The result of the function will be true if creating the directory was successful (or the directory already exists) or false if

- the path contains a ".." or "**"

- the path is not inside of /opt/user_files and no USB stick is inserted

- creating the directory failed for unknown reasons

pclient.getDirectoryContent - Get the contents of a directory

With this function the contents of a directory can be read.

The first parameter is the path to the directory that shall be read. The second parameter is optional and can be used to filter the result to contain only files or only directories. Use "DIRECTORIES_ONLY" or "FILES_ONLY" as filter options. If the second parameter is omitted or has an other value than the two filter options, files and directories will be returned.

Prototype:

```
var result = pclient.getDirectoryContent(string directoryPath,  
string optionalFilter);
```

The function will return undefined if the contents of the provided directory could not be read. If the contents were read successfully, an array of strings will be returned that contains all file and/or directory names inside of the provided directory path.

pclient.deleteFileOrDirectory- Delete a file or directory on a USB stick or in user_files

With this function a file or directory can be deleted. A file or directory can only be deleted if it is either on a USB stick or in the user_files directory (/opt/user_files).

The function's only parameter is the path to the file or directory that shall be deleted. To erase the contents of a folder an asterisk may be provided at the the end of the path (e.g. `/opt/user_files/*`).

A `".."` may not be contained in the provided path.

Prototype:

```
var result = pclient.deleteFileOrDirectory(string  
directoryOrFilePath);
```

The function returns true if the directory or file(s) were deleted successfully. It returns false if the file(s) or directory could not be deleted.

pclient.setFocus - Set navigation focus to certain object

This function sets navigation focus to object identified by DDO-ID and even opens it for input if the second parameter is 'true' or '1'.

The second parameter can be skipped - then the object will not be opened for input.

The function throws exceptions if the parameters are not correct or if the object cannot be found in project.

Return value is 'true' if all preconditions are met and focus change gets triggered. Even in this case it may fail if the object is not shown on current page.

Return value is false (and nothing is triggered) if

- The object is not an input.
- A button should be opened for input.
- The object is disabled.
- An object is currently 'open for input' i.e. operator is currently changing some value.

Prototype:

```
var success = pclient.setFocus(number DDO-ID, bool  
openForInput);
```

Example:

```
//set the focus to the object with ID 93  
pclient.setFocus(93, "true");
```

pclient.copyFileOrDirectory - Copy file(s) or directory/ies

This function copies a file or directory or files or directories within the file system (including USB stick).

The two (obligatory) parameters are the source and destination file path.

Return value is 'true' if the copy process was successful.

Return value is false if the copy process was not successful or if the parameters were invalid or missing.

To be able to copy files into the `user_files` directory, it can be created using the [createUSBDirectory¹⁶⁰¹](#) function.

Prototype:

```
var success = pclient.copyFileOrDirectory(String sourcePath,  
String destinationPath);
```

Examples:

```
//copy the file test.txt from /opt to /opt/test  
pclient.copyFileOrDirectory("/opt/test.txt", "/opt/test/");  
  
//copy the file test.txt from /opt to /opt/test and rename it  
test2.txt  
pclient.copyFileOrDirectory("/opt/test.txt", "/opt/test/test2.tx  
t");  
  
//copy all files from /opt/test_dir1 to /opt/test_dir2  
pclient.copyFileOrDirectory("/opt/test_dir1/*", "/opt/test_dir2/  
");  
  
//copy the directory /opt/test_dir including all its content  
to /opt/parent_dir (resulting in /opt/parent_dir/test_dir  
pclient.copyFileOrDirectory("/opt/test_dir/", "/opt/parent_dir/"  
);
```

Please note: This function blocks the execution until it is finished. Blocks means: The thread that caused the execution of the script will block. Usually this is the PClient main thread including any painting operation. The programmer is advised to show a warning to the device user when a blocking function is called.

If the script was triggered e.g. by a CAN stack (e.g. timeout or received event), it will also block that thread and will e.g. not send cyclic messages during the block!

The time it takes to finish this function depends on the size of the copied data.

pclient.moveFileOrDirectory - Move file(s) or directory/ies

This function moves a file or directory or files or directories within the file system (including USB stick). A file or directory can only be moved if it is either on a USB stick or in the user_files directory (/opt/user_files).

The two (obligatory) parameters are the source and destination file path.

Return value is 'true' if the move process was successful.

Return value is false if the move process was not successful or if the parameters were invalid or missing.

Prototype:

```
var success = pclient.moveFileOrDirectory(String sourcePath,  
String destinationPath);
```

Examples:

```
//move the file test.txt from /opt/user_files to /opt/test  
pclient.moveFileOrDirectory("/opt/user_files/test.txt", "/opt/te  
st/");
```

```
//move the file test.txt from /opt/user_files to /opt/test and
rename it test2.txt
pclient.moveFileOrDirectory("/opt/user_files/test.txt","/opt/te
st/test2.txt");

//move all files from /opt/user_files/test_dir1
to /opt/test_dir2
pclient.moveFileOrDirectory("/opt/user_files/test_dir1/*","/opt
/test_dir2/");

//move the directory /opt/user_files/test_dir including all its
content to /opt/parent_dir (resulting
in /opt/parent_dir/test_dir
pclient.moveFileOrDirectory("/opt/user_files/test_dir/","/opt/p
arent_dir/");
```

Please note: This function blocks the execution until it is finished. Blocks means: The thread that caused the execution of the script will block. Usually this is the PClient main thread including any painting operation. The programmer is advised to show a warning to the device user when a blocking function is called.

If the script was triggered e.g. by a CAN stack (e.g. timeout or received event), it will also block that thread and will e.g. not send cyclic messages during the block!

The time it takes to finish this function depends on the size of the moved data.

pclient.syncFilesystem - Forces finishing of all file operations

This function performs a "sync" command.

This is relevant if the device is shut down after a copy / move process. The OS finishes these operations quite slowly in the background.

Prototype:

```
pclient.syncFilesystem();
```

Please note: This function blocks the execution until it is finished. Blocks means: The thread that caused the execution of the script will block. Usually this is the PClient main thread including any painting operation. The programmer is advised to show a warning to the device user when a blocking function is called.

If the script was triggered e.g. by a CAN stack (e.g. timeout or received event), it will also block that thread and will e.g. not send cyclic messages during the block!

The time it takes to finish this function depends on the size of the copied/moved data.

pclient.openPDFReader - Open the PDF Reader

This function opens the [PDF reader](#)⁴⁷⁵, optionally with a PDF file and / or a "Open File" button.

Prototype:

```
bool pclient.openPDFReader(optional:String pathToPDFtoOpen,
optional:bool showOpenButton);
```

Parameters:

- `pathToPDFtoOpen`: String with full path to the PDF file to open. No restrictions. Can be anywhere on the file system or e.g. USB stick.
- `showOpenButton`: Flag to indicate if the open button shall be shown or not. Note that if no path was provided, the open button is shown automatically.

Return value:

- true if starting the PDF reader was successful (this is no indication if the provided PDF could be loaded)
- false if starting the PDF reader failed

Note that the PDF reader cannot be opened in the PClient simulation, only on the device.

pclient.runSystemCommand - run a Linux system command

With great power comes great responsibility!

This function executes any command on the Linux system console.

We cannot stress enough that it is very easy to slow down or even completely stop the PClient misusing this command, it is even possible to destroy almost all data on the device.

But we also know that it can be very useful in certain situations, e.g. to be able to change the boot logo on a device at runtime.

Prototype:

```
var ret = pclient.runSystemCommand(string command, bool
waitForFinished, bool returnCommandOutput);
```

Parameters:

- `command`: A string with the command to execute
- `waitForFinished`: Optional bool flag. If set to true (which is also default if the parameter is not set), PClient main loop waits until the command has finished. If set to false, the function will return immediately but the caller will not know the final result of the command
- `returnCommandOutput`: If this flag is set to true, this function will return the complete console output of the executed command instead of the return value. This parameter is also optional, if not set, the default value is false. Note: If set to true, `waitForFinished` also needs to be true.

Return values:

- true if the command executed successfully while `returnCommandOutput` was set to false or not set
- A string containing the complete output of the executed command if `returnCommandOutput` was set to true
- If anything fails, an exception is thrown and the execution of the whole script file is interrupted at the line of the system call. Surround with try/catch block for error handling.

Good example:

```
var ret = pclient.runSystemCommand("top -n 1", true, true);
```

Bad example:

```
var ret = pclient.runSystemCommand("top", true, true);
```

Why is it bad? The example will never return because top will keep running, thus the JavaScript file will never finish.

Good example:

```
var ret = pclient.runSystemCommand("rm -rf /opt/data/own_data",  
true, false);
```

Bad example:

```
var ret = pclient.runSystemCommand("rm -rf /opt/*", true,  
false);
```

Why is it bad? The example will delete ALL files and folders in /opt, killing the project, PClient, updater and all user data.

Once again: **Please use this function with care**. There are no limitations in this function, whatever is the content of <command> will be forwarded to the system. There are plenty of commands that take a long time to process.

Always test the commands that should be used thoroughly before implementing them for field use!

pclient.getTriggerEvent - obtain the trigger for a script execution

This function returns the trigger that executed the currently running JavaScript file. The return is a string identical to the event names as they are used in the program.

Prototype:

```
var eventName = pclient.getTriggerEvent();
```

Return value:

The event that triggered the JavaScript.
Possible values are:

- Execute Script
- Jump To Page
- Set Value
- Scale Value
- Next Softkey Level
- Previous Softkey Level
- Start Application
- Send Event To Plugin
- Open For Input
- Navigate Up
- Navigate Down

Navigate Confirm
Open PDF Reader
Set Media Player Command

OnProjektInit
OnProjektExit
OnPageInit
OnPageExit
OnProjektRepeat
OnPageRepeat

OnEncoderMove
OnPress
OnRelease
OnLongPress
OnLongRelease
OnDbClick
OnIntValueChange
OnStringValueChange
OnEnterValue
OnEnterNewValue
OnEscape
OnOpenForInput
OnEnabledWithFocus
OnEnabledWithoutFocus

OnValueChangeByOwner
OnValueChangeRequest
OnValidStateChange

OnPowerOn
OnLowPower
OnSleep

OnReceiveTimeoutAction
OnReceiveTimeoutResolvedAction
OnMappingReceived

OnHeartbeatTimeout
OnHeartbeatTimeoutResolved

OnEncoderPress
OnEncoderRelease
OnEncoderLongPress
OnEncoderLongRelease
OnEncoderDoublePress

pclient.setVariableValid - set a variable as valid / invalid

This function sets the validity state of a variable.

Prototype:

```
var result = pclient.setVariableValid(string variable name,  
bool valid);
```

or

```
var result = pclient.setVariableValid(number index, number  
subindex, bool valid);
```

Parameters:

- variable name: String with an existing variable name
- index/subindex: Alternatively to a variable name string a combination of a variable index and subindex.
- valid: Boolean with false = invalid and true = valid.

Return value:

- true if the operation was successful
- false if the operation was not successful (shouldn't really occur)
- undefined if the variable wasn't found

Note that the function works both for variables belonging to the PClient as well as external variables, so use with care.

pclient.updateSoftkeyFrameFadeoutTime - set the fadeout time for Softkey frames

This function sets the fadeout time for Softkey frames, i.e. for ALL Softkey frames in the project.

Prototype:

```
var result = pclient.updateSoftkeyFrameFadeoutTime(int value);
```

Parameters:

- value - an integer value. Values < 100 ms will disable the fadeout for all Softkey Frames. Values > 100 will set the fadeout time to that value in milliseconds.

Return value:

- true if the operation was successful (false can only theoretically be returned, will never happen)

Note that the function sets the Softkey Fadeout time for ALL Softkeys in the project! If only some fadeout times should be changed, use setProperty.

pclient.triggerAnimation - Trigger an animation of an object

This function triggers an [animation](#)⁶²⁰ of an object.

Prototype:

```
var result = pclient.triggerAnimation (int DDO ID, string trigger);
```

Parameters:

- DDO ID - an integer value containing the object ID of an object that has an animation with trigger On Manual configured.
- trigger - The trigger of the animation. Allowed values are all available animation triggers, "OnManual", "OnVisible", "OnInvisible", "OnCreation")

Return value:

- true if an animation exists for the given object with the given trigger, otherwise false

[RS232 JavaScript Functions](#) ⁶⁰⁹

7.4.1 RS232 JavaScript Functions

Support for the RS 232 interface is provided by a JavaScript interface - there are no dedicated variables involved.

The approach requires instantiating an 'RS232Handler' object which represents one RS 232 interface.

Currently this uses the one port provided on the device.

If more than one port should exist in the future, then one instance per port would have to be created.

Once the object is created, all function calls have to be done for this object.

Note that this interface was designed mainly for serial printers - that's why the 'read' functionality is rather limited for now.

RS232Handler - constructor to get an RS232 instance

The constructor has no parameters - it creates an instance but does not open any interface. If this handler should be used as long as the PClient is running, it should be created e.g. in a project init script and assigned to a global variable.

Prototype:

```
var myRS232 = new RS232Handler();
```

Example:

```
// Generate a global RS232 handler  
myRS232_handler = new RS232Handler();
```

RS232Handler.init - open interface and set baud rate

This method opens the RS232 interface with an optionally specified baud rate and a wait time for the RS232 read function.

If called without parameters or with unsupported values, the RS 232 interface is initialized with 115200 bit/s and 100 ms wait time.

it is always initialized to use:

8 data bits**No parity****1 stop bit**

these settings can NOT be changed at the moment.

The following baud rates [bit/s] can be configured:

50
75
110
134
150
300
600
1200
1800
2400
4800
9600
19200
38400
57600
115200
230400
460800
500000
576000
921600
1000000
1152000
1500000

Every other value will result in a setting of 115200 bit/s.

The wait time means that the read function will wait for that time if the RS232 buffer is empty. This can be used when communicating with a device that needs some time to deliver an answer to a write.

The wait time can be set in steps of 100 from 0 to 25500 ms.

Prototype:

```
var result = <RS232Handler instance>.init(number  
newBaudrate,number waitTime);
```

Examples:

```
// Open an RS232 interface with the default settings of 115200  
baud / s and 100 ms wait time)  
myRS232.init();  
  
// Open an RS232 interface with 9600 baud / s and 100 ms wait  
time)  
myRS232.init(9600);  
  
// Open an RS232 interface with 576000 baud / s and 0 ms wait  
time)
```

```
myRS232.init(576000,0);
```

Return values:

- 0 - port successfully opened
- 2 - port cannot be opened
- 3 - parameters cannot be applied to port
- 10 - current settings cannot be read from port

RS232Handler.encoding - set the character encoding of the target

If the target machine (i.e. printer) should not accept UTF-8 encoded text, this property allows the modification of strings before they are sent.

Reading is not affected - the read method only returns an array of the raw bytes received.

The following encodings are supported:

- Big5
- Big5-HKSCS
- CP949
- EUC-JP
- EUC-KR
- GB18030
- HP-ROMAN8
- IBM 850
- IBM 866
- IBM 874
- ISO 2022-JP
- ISO 8859-1 to 10
- ISO 8859-13 to 16
- Isii-Bng, Dev, Gjr, Knd, Mlm, Ori, Pnj, Tlg, and Tml
- KOI8-R
- KOI8-U
- Macintosh
- Shift-JIS
- TIS-620
- TSCII
- UTF-8
- UTF-16
- UTF-16BE
- UTF-16LE
- UTF-32
- UTF-32BE
- UTF-32LE
- Windows-1250 to 1258

Prototype:

```
myRS232.encoding = STRING <encoding name>;
```

Example:

```
// Change the encoding to Windows 1252  
myRS232.encoding = "Windows-1252";
```

RS232Handler.getBaudrate - read the baud rate currently used

This method returns the baud rate currently used for the serial port.

Prototype:

```
var myBaudrate = myRS232.getBaudrate();
```

The method returns 0 if the port is not initialized yet.

Note that this method can't actually read the current baud rate. It returns the saved value of the last baud rate that has been set successfully with the .init method.

RS232Handler.getPort - read the name of the RS232 interface currently used

This method returns a string containing the path and device file currently opened by this instance.

This mainly exists for debugging.

Prototype:

```
var port = myRS232.getPort();
```

Example:

```
// Retrieve the filepath and device name of the RS232 port
var myPort = myRS232.getPort();
pclient.print("RS 232 port used : '" + myPort + "'.");
```

RS232Handler.writeFromBuffer - write a string or an array of numbers to the serial port

This method writes a string or number array to the serial port.

This only works if the RS232Handler instance has been created and initialized before.

It accepts a character string as well as an array of numbers as buffer to be sent via serial interface.

Strings will be converted to UTF-8 format used everywhere in PClient if 'RS232Handler.encoding' is not modified.

As a second parameter, one can provide the number of bytes to send from the buffer i.e. this allows to use a buffer which could contain more than one wants to send currently.

If an array of numbers is provided, the size is limited to the size of the array - even if a greater number is provided in 'bytesToSend'.

If a string is provided, the size is considered to be characters. Depending on the desired encoding the number of bytes sent can differ.

If the buffer is provided as string, the 'encoding' property of 'RS232Handler' is used to convert the string before sending (see examples).

Prototype:

```
var errorCode = RS232Handler.writeFromBuffer(<String or number
array>, optional number charactersToSend);
```

Examples:

```
// Since UTF-8 is used for character encoding in PClient the
// special characters are sent as two or more bytes by default
// which in the following example can result in unprintable
// characters.
// Special characters in this example are sent as two bytes
// each (for default UTF-8).
myRS232.writeFromBuffer("Special characters: 'ÄÖÜ äöü'\r\n");

// If the receiver expects special characters according to an
// extended ASCII encoding
// the special characters have to be provided as an array of
// numbers.
// If 'latin 1' (ISO 8859) is expected the same text as above
// could look like this:
myRS232.writeFromBuffer("Special characters: '");
myRS232.writeFromBuffer([0xc4, 0xd6, 0xdc, 0x20, 0xe4, 0xf6,
0xfc]);
myRS232.writeFromBuffer("' \r\n");

// In order to convert the data sent to another character table
// one can define the 'encoding' property of 'myRS232':
myRS232.encoding = "Windows-1252";
// Now even the special characters will only be sent as one
// byte:
myRS232.writeFromBuffer("Special characters: 'ÄÖÜ äöü'\r\n");
```

Return values:

0 - write successful
2 - port is not opened yet
6 - writing failed

RS232Handler.readIntoBuffer - read data from serial interface

Calling this method reads all data currently available on the RS232 interface and stores it in a number array.

Without a parameter, the method reads up to 1024 bytes.

With an optional parameter the number of bytes can be limited.

If no data is available, an empty array will be returned after the set wait time.

This method entirely relies on the buffering of the underlying driver.

Note that this is a very simple interface intended to e.g. read some configuration data from a printer.

It is by no means designed to frequently read data e.g. from a GPS receiver or other similar source.

If this warning should not prevent you from trying anyways: Expect lag in the PClient (drawing) performance (as both share the same thread) and be aware that you have to manage getting the data at the right time and in the right amount somehow without blocking the PClient with 'busy waiting'.

Prototype:

```
var number[] = RS232Handler.readIntoBuffer(number bytesToRead);
```

Example:

```
//Read the RS232 interface
var readArray = myRS232.readIntoBuffer();
//convert the numeric array into a String
var arrayAsString = String.fromCharCode.apply(null, readArray);
// show data received in String Field [57]:
pclient.setProperty(57, "Preview Value", arrayAsString);
```

7.5 Programming Guidelines

In this chapter we want to provide some general programming guidelines for JavaScript programming with our devices.

There is no absolute truth, no one best way, but avoiding the worst ways is a good start.

Check if a functionality exists

Before implementing something complex, check thoroughly if there is not a functionality implemented in the program that does what you want to do. If in doubt, contact your vendor for support and consulting.

No synchronization between PClient and JavaScript

JavaScript has no direct access to any variables or data in the PClient. Use our functions to read and write [variable values](#)^[578] and [object properties](#)^[579].

But even doing that does not establish a connection between PClient and JavaScript.

Reading a PClient variable in JavaScript is like taking a momentary snapshot.

No time in a script

It is not possible to spend any "time" in a script, i.e. wait for a certain event. You cannot set a variable, then wait 5 seconds for the outcome of the change, then continue in the script. If you need a time component for e.g. a gradual value change, you need to use a cyclic script, e.g. on the event OnPageRepeat, and increment a variable with each run.

Don't put everything in OnProjektRepeat

It seems easy and convenient to just put all your code in the script OnProjektRepeat, this way everything will be executed all the time and all JavaScript variables will always be available.

But such a script will become very big, and all code will be executed all the time, which will slow down your project.

Use the right events for the right code

Always consider which event is the right event for the code you want to execute.

E.g. if you have a calculation dependent of a variable, put the code to the event OnValueChangeByOwner of that variable.

Avoid using "global" JavaScript variables

It is possible to declare JavaScript variables globally, so that they will be available in other scripts. But this should be avoided as much as possible. It is safer to store values in PClient variables, read them at the beginning of the script and write them back after modification in the script.

Don't combine commands

We've had crashes and problems sometimes with code lines like

```
setVariableValue("test", (getVariableValue("test")+1);
```

In a million runs this might crash the PClient one time. Don't program like that, it does not save any resources over spreading it out like this:

```
var test_js = getVariableValue ("test");  
test_js = test_js + 1;  
setVariableValue ("test",test_js);
```

Functionalities

8 Functionalities

8.1 Alarms

This chapter describes the concept of alarms.

Alarms are popup pages or frames that can be shown to indicate certain events.

Alarm templates can be defined in the project properties.

Categories:

- General
- Languages
- Units
- Object
- Alarm
- Font Attributes
- Line Attributes
- Visibility
- Variable Logging
- Input Character Attribute
- Virtual Keyboard
- Images

Queue Organisation: (Valid for Warning and Informational Alarms ONLY)

Select Escape Key for the Projekt: (Valid for all Pages, Warning and Informational Alarms)

Alarm Log

☐ Enable Alarm Log ☐ Use Ring Buffer Entries ☒ Log Alarm Variable Values

☒ Log Alarm Enqueueement ☒ Log Showing of Alarm

☒ Log Alarm Confirmation ☒ Log Hiding of Alarm

Alarm types

Priority	Alarm	Type	Timeout	Behaviour	Minimal Display Time	X	Y	Width	Height	Sound pattern	Audio output
1	Emergency	Page	0	Emergency	-1	0	0	800	480	e739c	alarm_emergency
2	Med	Page	0	Emergency	-1	0	0	800	480	f73dd	alarm_medium
3	Low	Page	0	Emergency	-1	0	0	800	480	c7298	alarm_low
4	Warning	Frame	0	Warning	0	250	140	300	200	0	event
5	Informat...	Frame	0	Informational	0	250	140	300	200	0	event

Up New

Down Delete

OK Cancel

Alarm Properties

Alarms are characterized through the following properties:

- **Priority:** This property decides which alarm is shown in front if several alarms with different priorities are shown
- **Alarm:** A name for the alarm template. There are 3 pre-configured alarm templates, Emergency, Med and Low
- **Type:** Alarms can be shown in a full screen or as a popup above the currently displayed page
- **Timeout:** Enter a time in milliseconds after which an alarm of the selected type will disappear by itself. 0 means the alarm does not disappear by itself. Cannot be set for the alarm behaviors Emergency and Warning
- **Behaviour:** Emergency alarms can only be cleared by setting the **@AlarmShow** variable. Warning alarms can be cleared by setting the **@AlarmShow** variable and also by pressing the "Escape" key. Informational alarms can be cleared by setting the **@AlarmShow** variable, by pressing the "Escape" key and by a timeout (see above)
- **Minimal Display Time:** An alarm can only be cleared (by pressing the "Escape" key) after this time (in milliseconds)
- **X,Y:** Coordinates for the position of the alarm on the display. Fixed to 0,0 if the type of the alarm is set to full page
- **Width, Height:** Width and height of the alarm on the display. Fixed to the resolution of the display if the type of the alarm is set to full page
- **Sound pattern:** Here you can define a pattern that will be played when the alarm is shown. This sound pattern will then be played back with the beeper each time the event occurs. The volume of the beeps is dependent on what event happened (event

or alarm) and the value of the [beeper volume variables](#)¹⁸⁶. A sound pattern consists of the number of repetitions and a bit coded pattern of on/off states. In the dialog that pops up when changing this property, the pattern can be defined by clicking on the boxes.

Each box represents 100ms of Beeper on or off. Note that the sound pattern also works on devices with a speaker.

In the screenshot above, the pattern 0xffc00 was defined. In binary this is 11111111110000000000. This will switch the beeper on for one second and then off. 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms ON, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF, 100ms OFF.

The sound pattern can also be directly entered as a hexadecimal value.

- **Audio Output:** Here you can configure an audio file that will be played when the alarm is shown (only if the target device is equipped with an internal sound card (internal speaker and/or line-out)). For a detailed description of the Audio Output configuration see [Events and Actions](#)⁴⁶⁵

You can define a new alarm template by clicking the "New" button. A new alarm template with a pre-set name will be created. You can change all the above properties for that alarm.

You can change the priorities of alarm templates. If several alarms are active at the same time, alarms with a higher priority are shown in front. For alarms with the same priority showing at the same time, you can set at "Queue Organisation" whether the older or the newer alarms are shown in front.

You can also define which key shall be used as the "Escape" key.

Alarm Log

The device can log alarms. To enable alarm logging, click on "Enable Alarm Log". You can then set which events you want to log. You can also set whether you want to log all alarms or use a ring buffer. If you use a ring buffer, you can set the number of alarm events that you want to log.

Note: Alarm logging is only enabled when the variable @LogLevel is set to a value > 0.


Note: Logging for each alarm instance can be enabled or disabled. Simply enable or disable the property "Log this Alarm" in the properties of the alarm.

The following options are available for alarm logging:


- **Enable Alarm Log:** Enable or disable logging of alarms.
- **Use Ring Buffer:** Enable this to log alarms into a binary ring buffer and select how much entries the ring buffer shall use. If the ring buffer is full, the oldest entries are overwritten. The ring buffer can be read and cleared with the JavaScript functions [getAlarmLogRingBufferContent](#)⁵⁸⁹ and [deleteAlarmLogRingBufferContent](#)⁵⁹¹. If this is disabled, the alarms will be logged into a text file located in the path stored in @LogPath
- **Log Alarm Variable Values:** If this is enabled, the values of the variables @AlarmShow, @AlarmCurrent and @AlarmCurrentPriority are written into the log with each entry.
- **Log Alarm Enqueueement:** If this is enabled a log entry is done when the alarm is put into the alarm queue.
- **Log Showing of Alarm:** If this is enabled a log entry is done when the alarm is shown on the screen.
- **Log Alarm Confirmation:** If this is enabled a log entry is done when the alarm is confirmed (e.g. user pressed escape key).
- **Log Hiding of Alarm:** If this is enabled a log entry is done when the alarm is closed and not shown anymore.

Creating an alarm

After you have created or configured alarm templates, you can add an alarm to your project. To do this, right-click on "Alarms()" in the project tree, go to "New Alarm Type" and choose the desired alarm template.

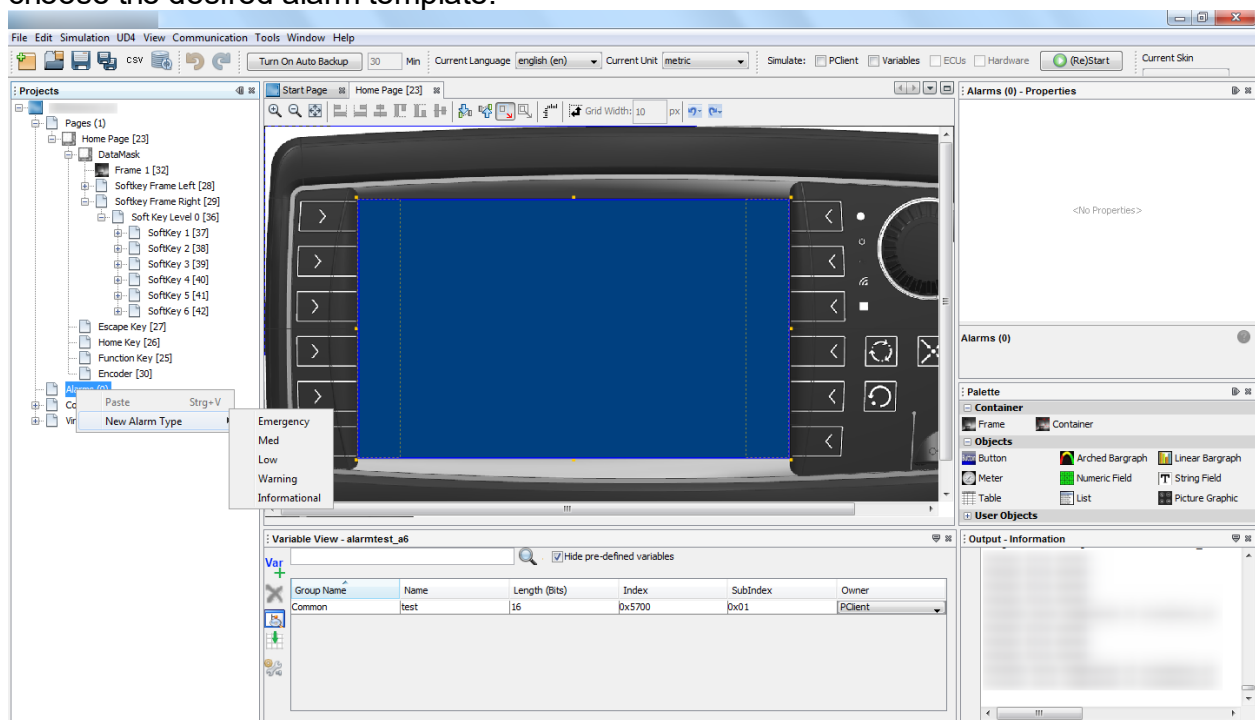

Then a dialog window appears where you have to enter a unique number (in decimal form) for that alarm. Numbers that were already used are displayed in the lower part of that dialog.

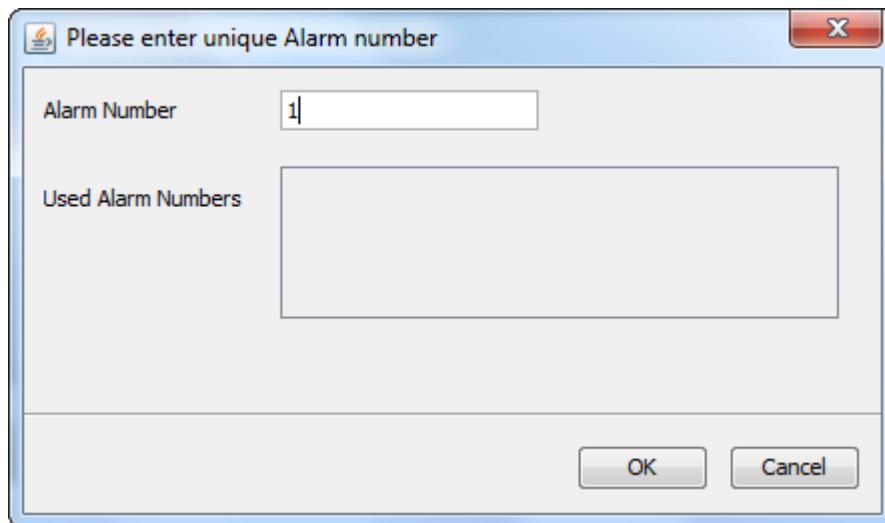

Press OK to create the alarm. The alarm will be listed in the project tree under "Alarms()". To edit it, double click on the alarm in the project tree. A tab will be opened where you can create a layout for the alarm similar to a page layout.

New in version 2025:

Note that the position and size of an alarm are not fixed. They can be changed like on a normal page. This does not influence the alarm template, however, which still keeps its position and size parameters.

Activating and Clearing Alarms

Alarms can be activated by setting the variable **@AlarmShow**. To activate an alarm, the variable value has to be set with 0x8000 **OR** alarm number. In other words, you have to use an inclusive logical disjunction. The alarm number has to be used in hexadecimal form here.

Example: To set an alarm with the number **15**, you have to set the variable **@AlarmShow** to 0x8000 OR 0x000F = **0x800F**

To clear an alarm, simply set the variable **@AlarmShow** to the number of the alarm.

Example: To clear an alarm with the number 45, you have to set the variable **@AlarmShow** to **0x002D**

Activating and clearing alarms can be done over the CAN bus by including the variable **@AlarmShow** in a receive mapping, by calculations in a Javascript or by pressing a button and using the [SetValue](#)⁴⁷³ action.

Additionally, Warning and Informational alarms can also be cleared by pressing the ESC key.

Informational alarms can also be configured to close automatically after a certain time.

Active alarms will stay hidden behind other applications such as PDF reader on i.MX 6 based devices.


8.2 Animations

From version 2025 of the OPUS Projektor we offer the possibility to animate certain objects on the screen.

First a disclaimer:

The OPUS Projektor is not a movie studio now! Animations use resources on the device and should be used carefully and only to increase the user experience. Currently it is NOT possible to combine animations, i.e. an object can only run one animation at the same time, not several.

Types of animations

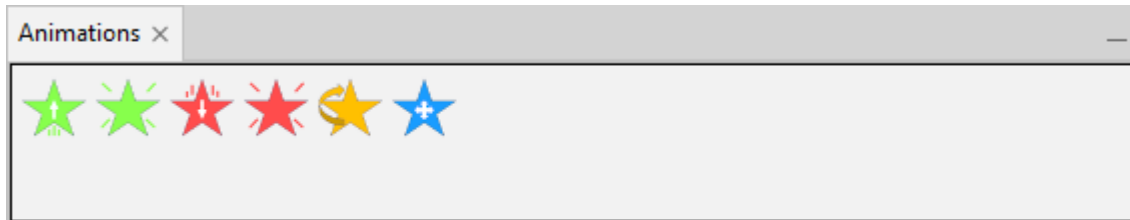

After opening or creating a project you will see the animations section, disabled, if you don't have an appropriate object selected, enabled if you have. The following animations are available.



- Fly In - Moves an object from outside the scene to the current position



- Fade In - Makes the object appear on the scene



- Fly Out - Moves an object from inside the scene to outside



- Fade Out - Makes the object disappears on the scene



- Rotate - Rotates the object on the scene



- Move - Moves an object on the scene from one position to another

Which objects can be animated


Animations can be configured for almost all objects, except

- Softkeys (Softkey Frames are allowed)
- Children of other objects (e.g. elements of list objects, children of buttons)

How can animations be added to objects

Animations can be added simply by selecting an object and clicking on the animation that should be added.

Alternatively it is also possible to drag & drop an animation on an object. In that case a context menu will be shown to select the event that should trigger the animation.

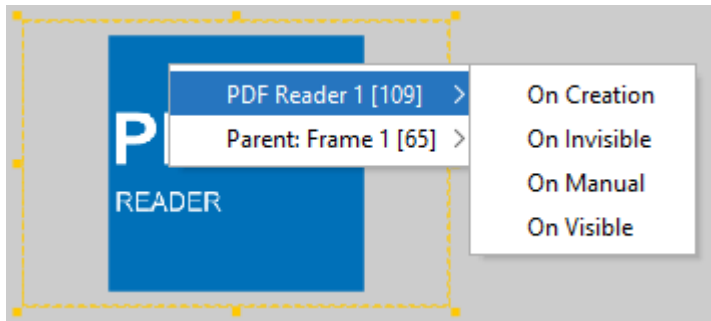

When can object animations be triggered

There are five events to trigger animations:

- On Creation - when the object is created, i.e. when a page is entered or an alarm is opened and the objects in them are created. For this event it probably doesn't make sense to use Fly Out or Fade Out.
- On Invisible - when an object is set to be invisible, i.e. when its visibility variable or bit is set to 0. Instead of just disappearing suddenly, the selected animation will be played instead. With that in mind it probably only makes sense to use Fly Out or Fade Out for this trigger.
- On Manual - the manual triggering of the animation through a JavaScript with the JavaScript command [pclient.triggerAnimation](#)⁶⁰⁸.
- On Visible - when an object becomes visible after it has been invisible (i.e. not when it is first made visible through its creation).

Note that all triggers can, additionally to their intended usage, be executed through the JavaScript command [pclient.triggerAnimation](#)⁶⁰⁸.

Animations in the project tree

Once an animation has been added to an object, the animation will be displayed in the project tree.




A new node called Animations is created under the object. Under that node the configured trigger(s) are listed. Under each trigger the animation(s) for said trigger are listed.

An object can have several triggers.

A trigger can have several animations. But only one animation is played at the same time always.

The animations under a trigger are executed one after another in the order they are listed in the project tree.

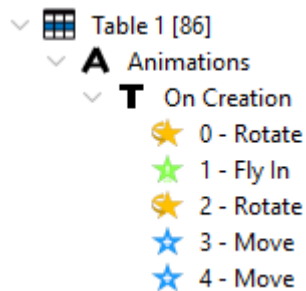

In this example the object will be first rotated (0), then flown in (1), then again rotated (2) and then moved twice (3 & 4). The order can be changed by dragging and dropping the animation node up and down in the list.

Animation properties

An animation has the following properties.

Property Description

Property Name

Effect	Which animation is it. Possible Values: Fly In, Fade In, Fly Out, Fade Out, Rotate, Move. Read-only
Property	Which object property is modified. The value depends on the animation effect. For rotation it is fixed to "Rotation Angle". For Fade In and Fade Out it's "Opacity". For Fly In / Out and Move it's X or Y Location. The property is read-only for rotation, Fade In / Out and Fly In / Out (for the latter, the value changes depending on the Fly Direction)
Trigger	Possible values: On Creation, On Invisible, On Manual, On Visible. Note that a change of this property leads to moving the animation to the selected trigger category (to the end of the animations list)
Order	The order number of the animation for the current trigger, starting with 0. The order number is also shown in the project tree, see above image (0 to 4)
Fly Direction	Only available for Fly In / Out. This property changes the property "Property", depending on the setting (left / right -> X Location vs. top / bottom -> Y Location)
Duration	Time in ms. How long it takes for the animation to complete. Minimum value: 100, Maximum value: 2147483647. Default value: 1000
Delay	Time in ms. How long the animation waits before starting. Note that this is relative to the end of the previous animation for the trigger. Minimum value: 0, Maximum value: 2147483647, Default value: 0
Start Value	The initial value of the property that is changed. Default value for angles: 0.0 (degree). Default value for Fade In / Out: 0.0 / 1.0. Default value for move: Current x/y position - 100. Note that the starting point is not changed when the object itself is moved in the scene after the animation was added. Default value for Fly In: Appropriate edge coordinate - object width / height. For Fly In / Out the value is read-only, as the starting point is always the invisible outer edge of the screen / the current position of the object (depending on the fly direction).
End Value	The end value of the property that is changed. Default value for angles: 360.0 (degree). Default value for Fade In / Out: 1.0 / 0.0. Default value for move: Current x/y

position. Note that the end point is not changed when the object itself is moved in the scene after the animation was added. Default value for Fly In: Current Y/Y Location. For Fly In / Out the value is read-only, as the end point is always the current position of the object / the invisible outer edge of the screen (depending on the fly direction).

Loop How often the animation should be played. Default value: 1. Max. value 999999999.


Count For an endless animation, set it to -1

Easing Curve This parameter specifies the rate of change of the property over the configured duration. Choose from a selection of 41 easing curves. The curves are described [here](#). Alternatively, you can see some of the curves with an animation [here](#) to understand their behavior.


Animation previews

When an animation is added to an object, a preview of the animation is displayed in the OPUS Projektor. Note that the easing curves are not applied in the preview.

A single animation can be played by right-clicking it in the project tree and selecting Play Animation(s).

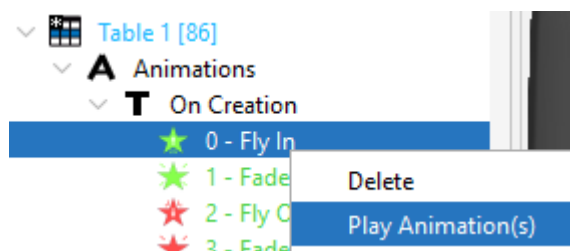

Similarly, all animations for a trigger can be played by right-clicking on the trigger in the project tree and selecting Play Animation(s).

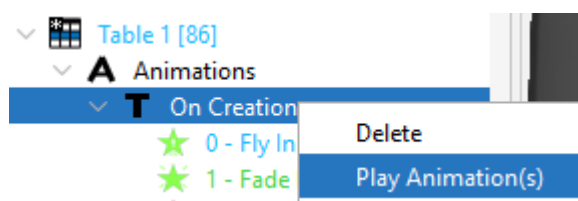


If an animation is started while another animation is still running, that running animation will be stopped.

Note that in the PClient simulation, objects that are out of the visible range of the device because of an animation will still be displayed there. Clipping the objects would slow down the PClient on the device, where that problem obviously isn't existing.

Animation Options

In the menu Tools -> Options -> Scene -> Animations certain general behaviors of the OPUS Projektor regarding animations can be configured.

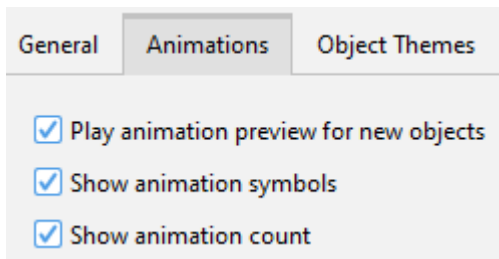

Play animation preview for new objects - when this is checked, an animation will be preview-played when it is added for an object.

Show animation symbols - the first animation of the object is displayed in the upper right corner of the object in the page editor.


Show animation count - the number of animations for this object is displayed in the upper right corner in the page editor.



8.3 Day/Night Mode


With this feature it is possible to switch the [theme of objects](#)⁸³³ at run time. The behavior is similar to modern navigation apps that switch their UI for day or night mode. This has the advantage that the display shows e.g. only dark colored objects at night to protect the eyes of the user.

Day/Night Mode can be activated for all visual objects in the palette. It is disabled by default and has to be enabled for each object or for all objects through the project property settings. If Day/Night Mode is disabled, the object uses the Day theme only.


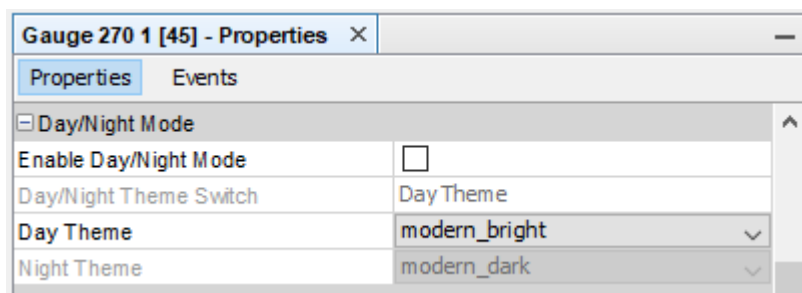


To enable Day/Night Mode for an object, the property "Day/Night Mode" has to be activated. After that you can choose a theme for day and one for night (properties "Day Theme" and "Night Theme").



Per default, the theme "modern_bright" will be used as the day theme and "modern_dark" as the night theme.

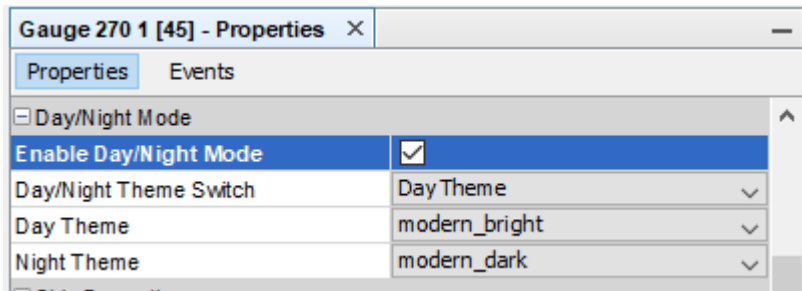


With the property "Day/Night Theme Switch" it is possible to preview the Day and Night view in the editor window to check if the object is configured properly.

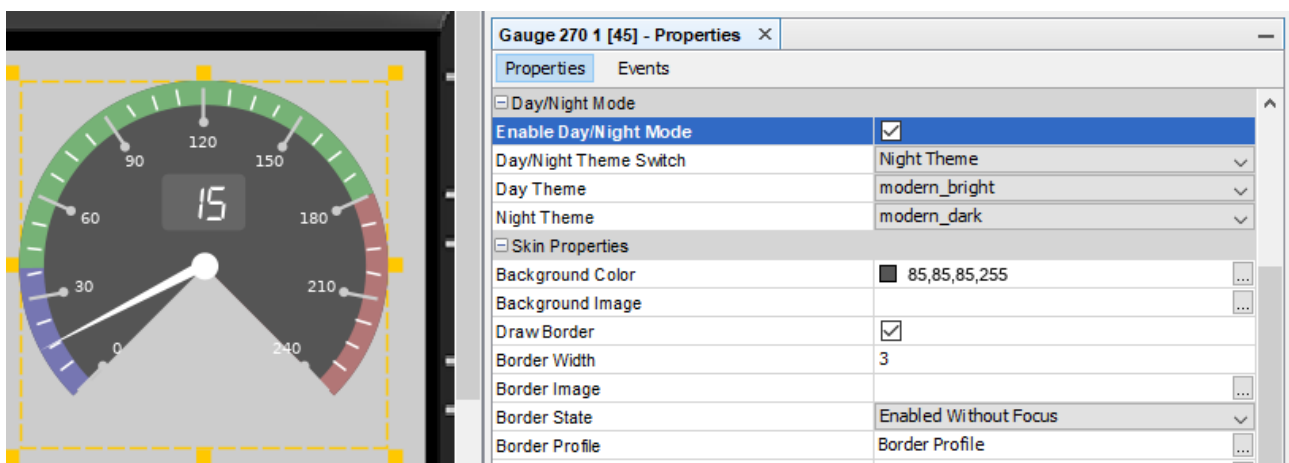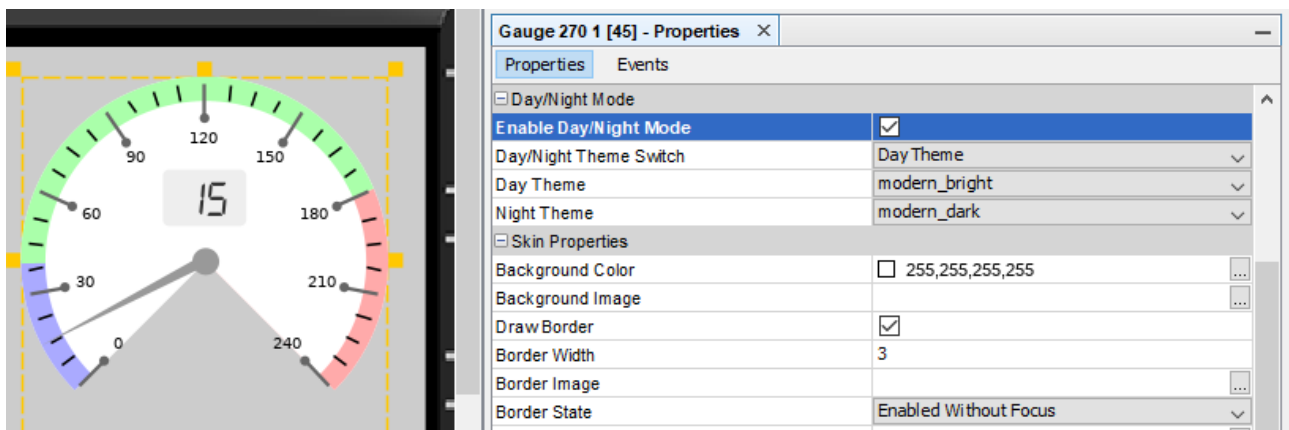

To show some details of the new theme handling, a new theme will be created, called "new_dark", as a duplicate of "modern_dark", with the background color of the 270° gauge changed to dark blue. The preview of the new look is shown in the dialog.

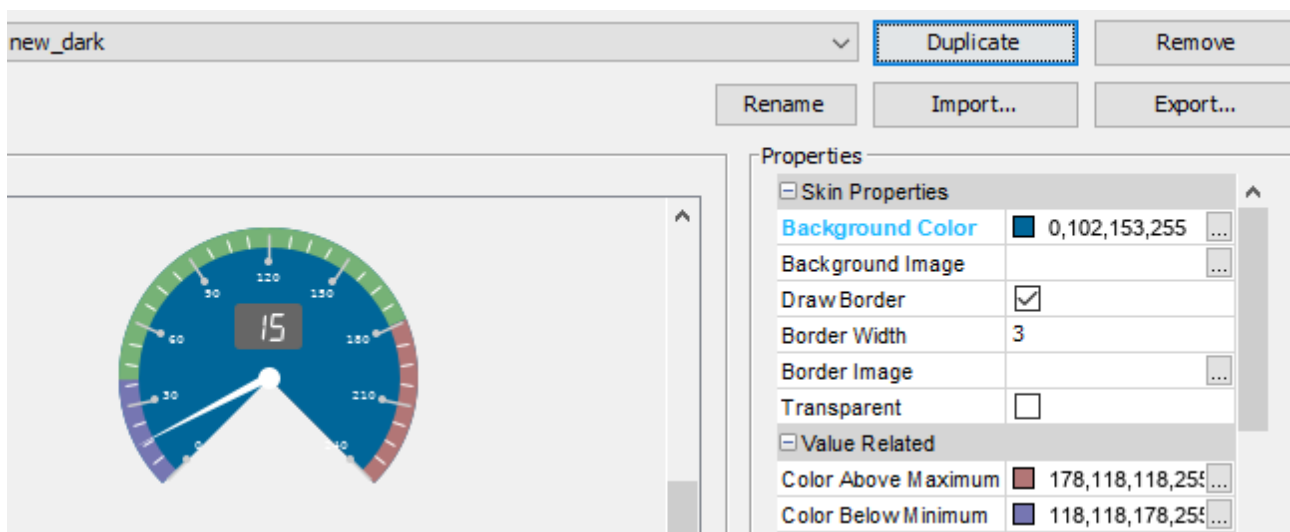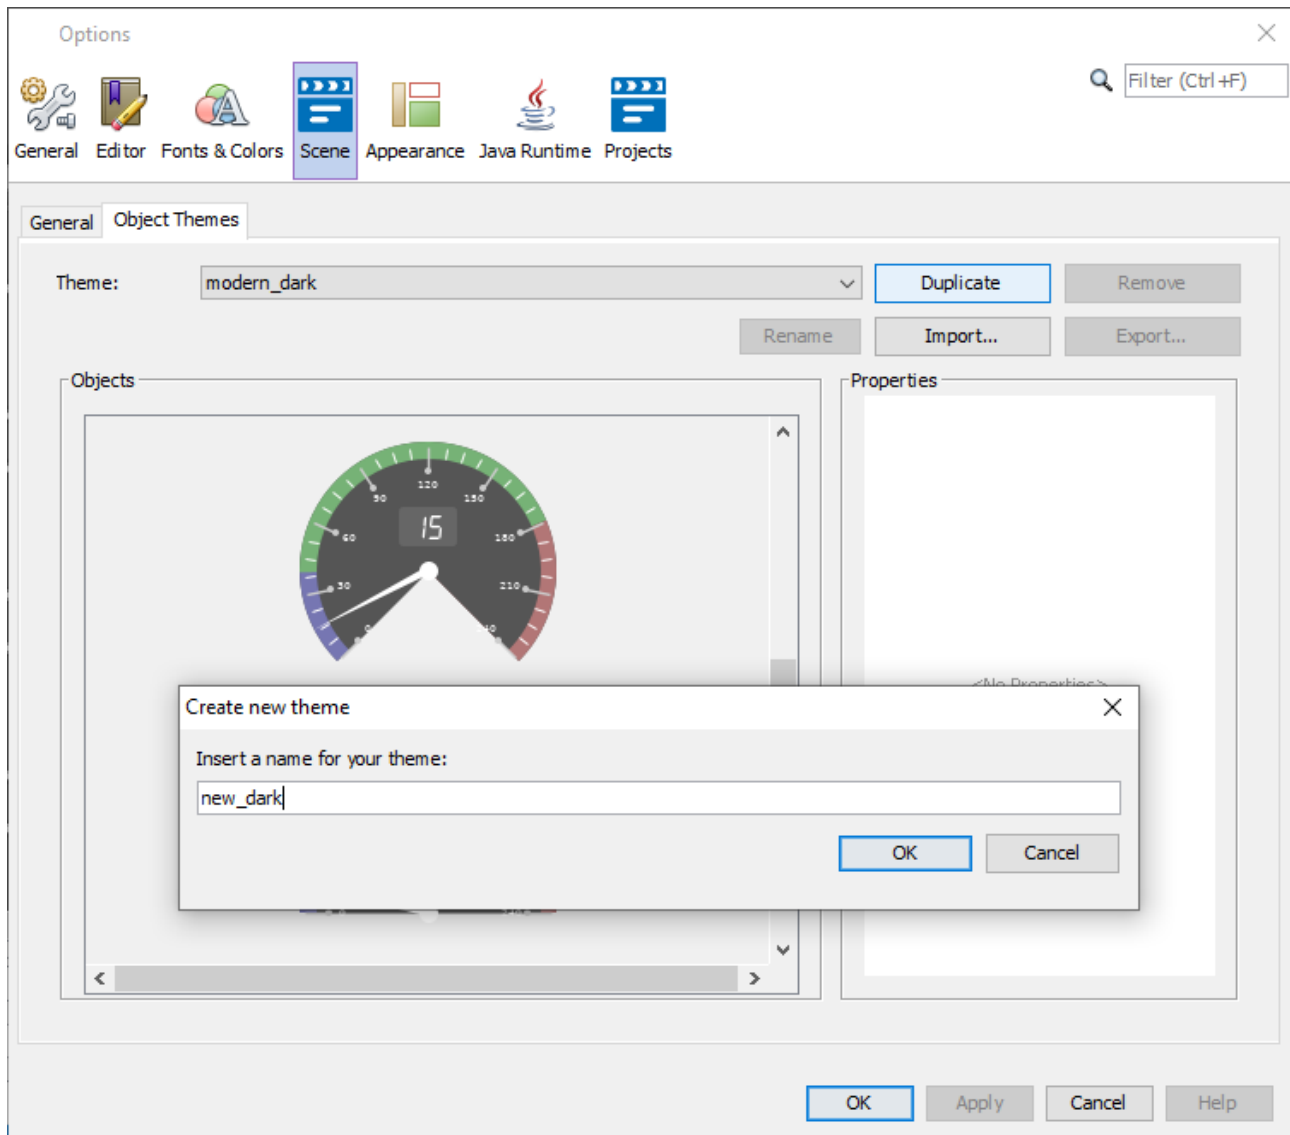


The theme can now be chosen in the object properties for "Day Theme" and/or "Night Theme".

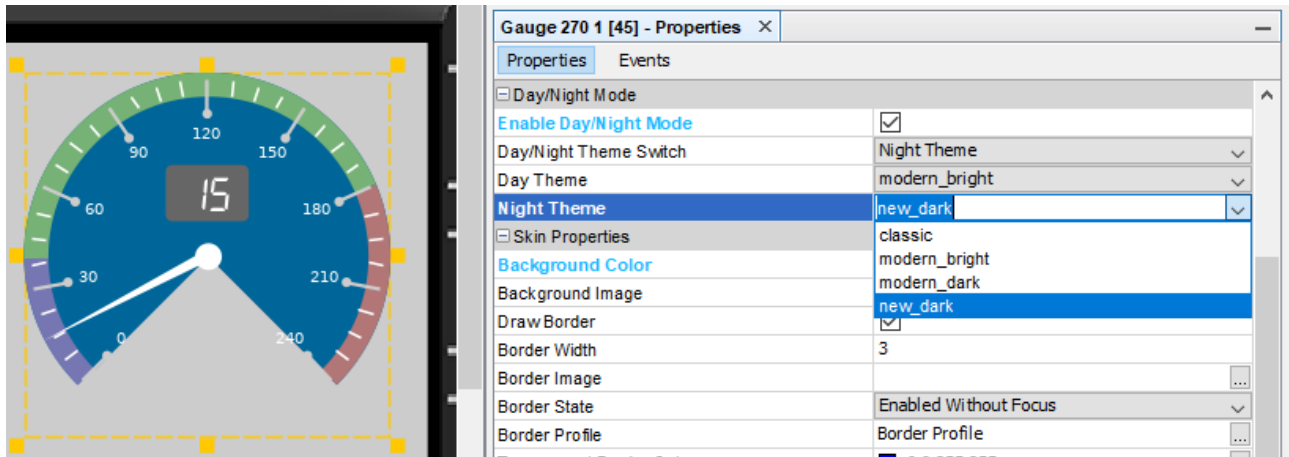


Note: Changing the theme of the object overwrites all custom property settings made previously (only for theme properties)!

It is of course possible to change theme properties (i.e. visual properties that are configurable in themes) of single objects with a normal property configuration for the object. If Day/Night Mode is enabled, the properties can be set separately for Day and/or Night Mode. The property will be saved for the mode currently selected in the property "Day/Night Theme Switch".

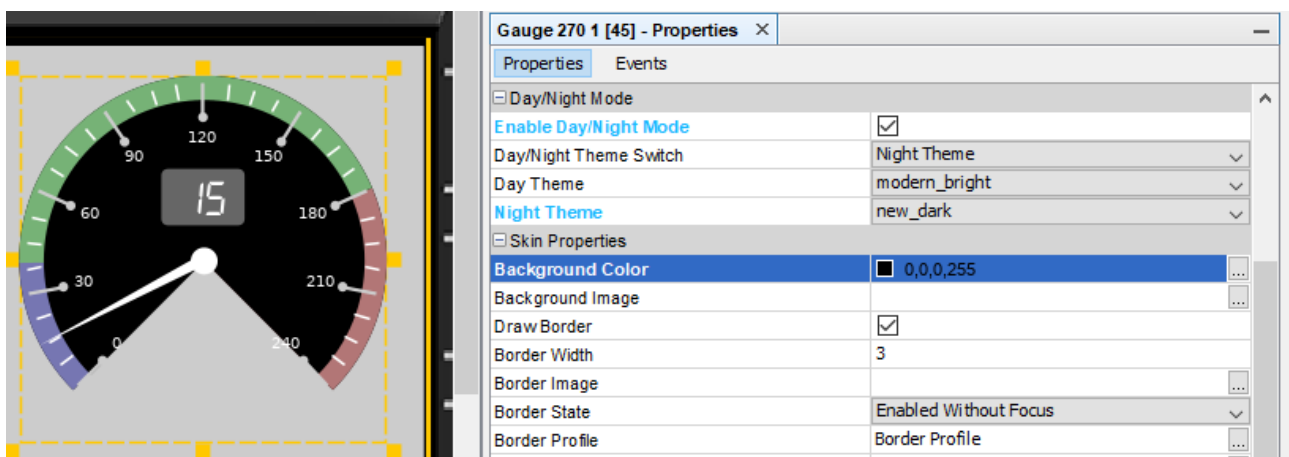

At run time, the day / night mode can be switched with the variable [@CurrentThemeIndex](#)¹⁶⁶

Project Properties Settings

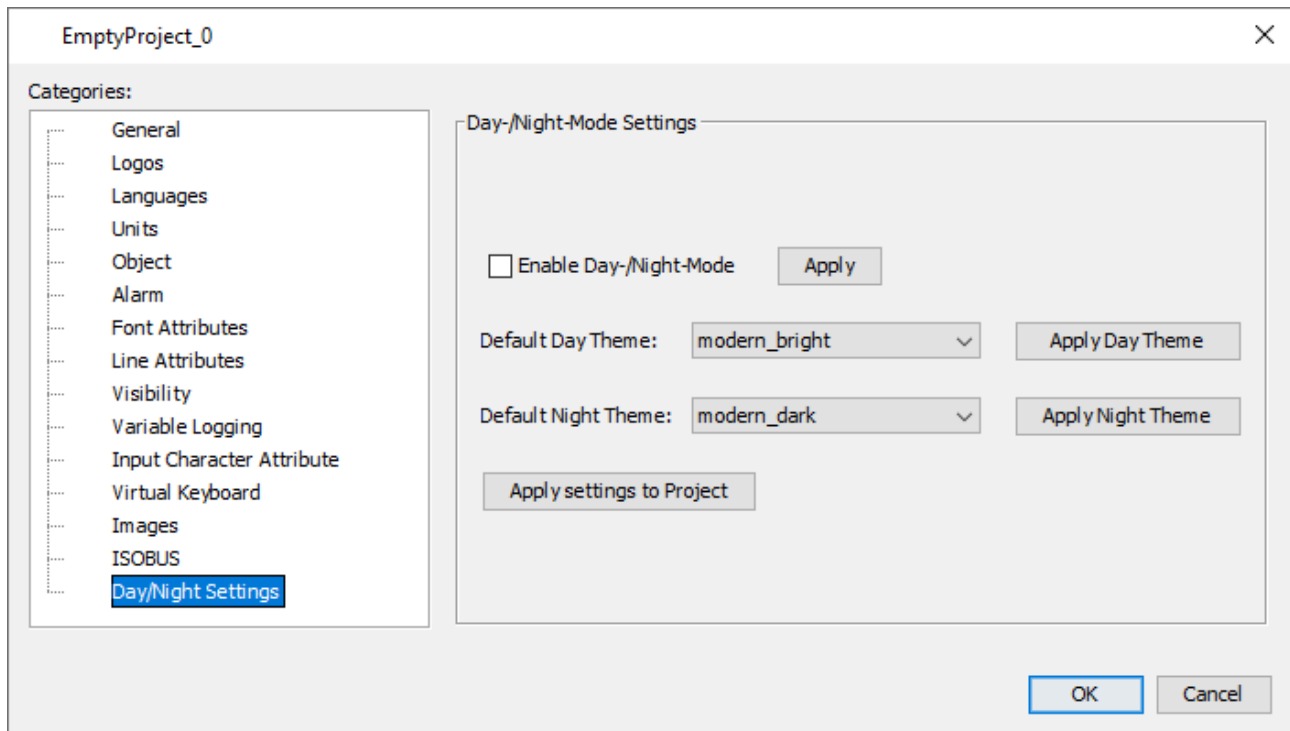

The following settings can be made in this dialog:

Enable Day/Night Mode (for newly created objects)

When this box is checked, new objects will have Day/Night Mode enabled by default.

Apply "Enable Day/Night Mode" to Project

When this button is pressed, ALL existing objects in the project will have Day/Night Mode enabled, with their current Day and Night Theme set in their properties.

Default Day Theme

This selection will be the default Day Theme for newly created objects

Apply "Default Day Theme" to Project

When this button is pressed, ALL existing objects in the project that have Day/Night Mode enabled will have the current default Day Theme set as their day theme.

Note: This overwrites all theme properties of all existing objects!

Default Night Theme

This selection will be the default Night Theme for newly created objects

Apply "Default Night Theme" to Project

When this button is pressed, ALL existing objects in the project that have Day/Night Mode enabled will have the current default Night Theme set as their night theme.

Note: This overwrites all theme properties of all existing objects!

Apply settings to Project

When this button is pressed, all three "Apply to Project" actions described above are executed.


8.4 ISOBUS Application

For the devices OPUS A6 Generation 2, OPUS A8, B3, B4, B6, Topcon XD and XD+, a special ISOBUS application can be created.

This type of application can only be installed on devices with an OPUS ISOBUS solution license.

For the OPUS devices, the article number needs to have the text UTS, UTM or UTL included. Please note that the device software for these devices is not included in the OPUS Projektor. Contact your vendor for information where to get the newest software for these devices.

To create an ISOBUS application, choose the according Panel type and activate the check box **Use ISOBUS Application**.

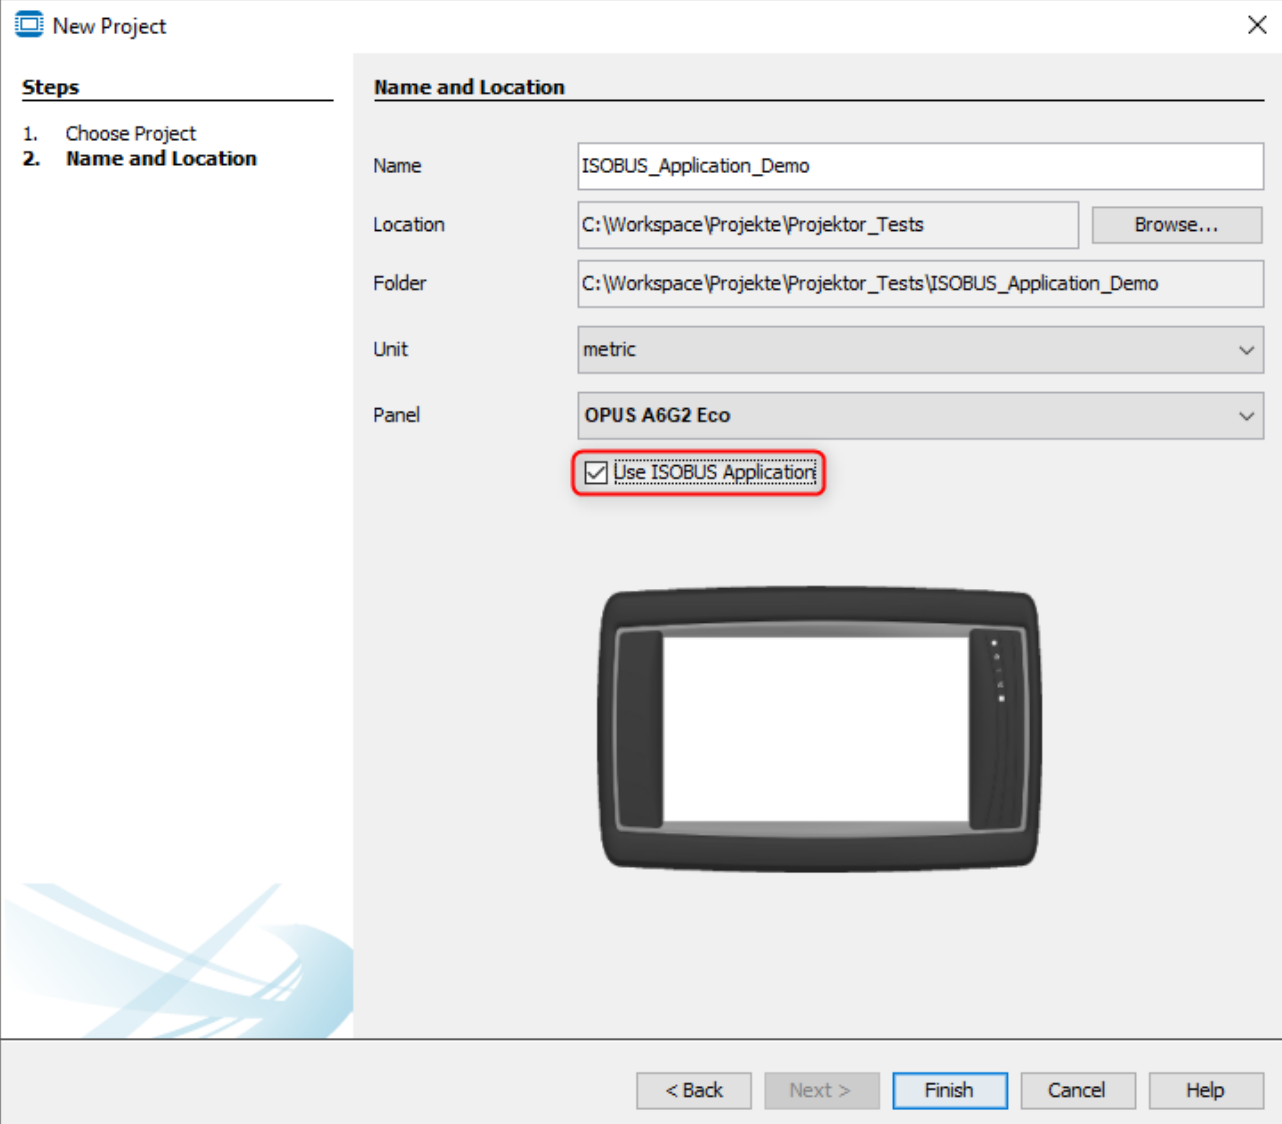

The screenshot shows the 'New Project' dialog box, specifically the 'Name and Location' step. The 'Steps' list on the left indicates the current step is '2. Name and Location'. The 'Name' field is set to 'ISOBUS_Application_Demo'. The 'Location' field is set to 'C:\Workspace\Projekte\Projektor_Tests', with a 'Browse...' button next to it. The 'Folder' field is set to 'C:\Workspace\Projekte\Projektor_Tests\ISOBUS_Application_Demo'. The 'Unit' field is set to 'metric'. The 'Panel' field is set to 'OPUS A6G2 Eco'. The 'Use ISOBUS Application' checkbox is checked and highlighted with a red box. Below the fields is a preview of a projector screen. At the bottom of the dialog are buttons for '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'.

Please note that only Landscape versions can be used as ISOBUS applications. Portrait projects cannot run as an ISOBUS application.

For the X18 and X40, the ISOBUS checkbox is checked and cannot be un-checked.

For ISOBUS projects, a MiniView Window of the page is created automatically.


For OPUS A8 and X40, these MiniView pages are shown next to the actual page in the editor.




The large portion of the screen will be the normal page, as it will be integrated as a main screen in the OPUS ISOBUS solution.

The MiniView Window will be used as the small version of the page.

By default, the MiniView will be scaled automatically from the big page.

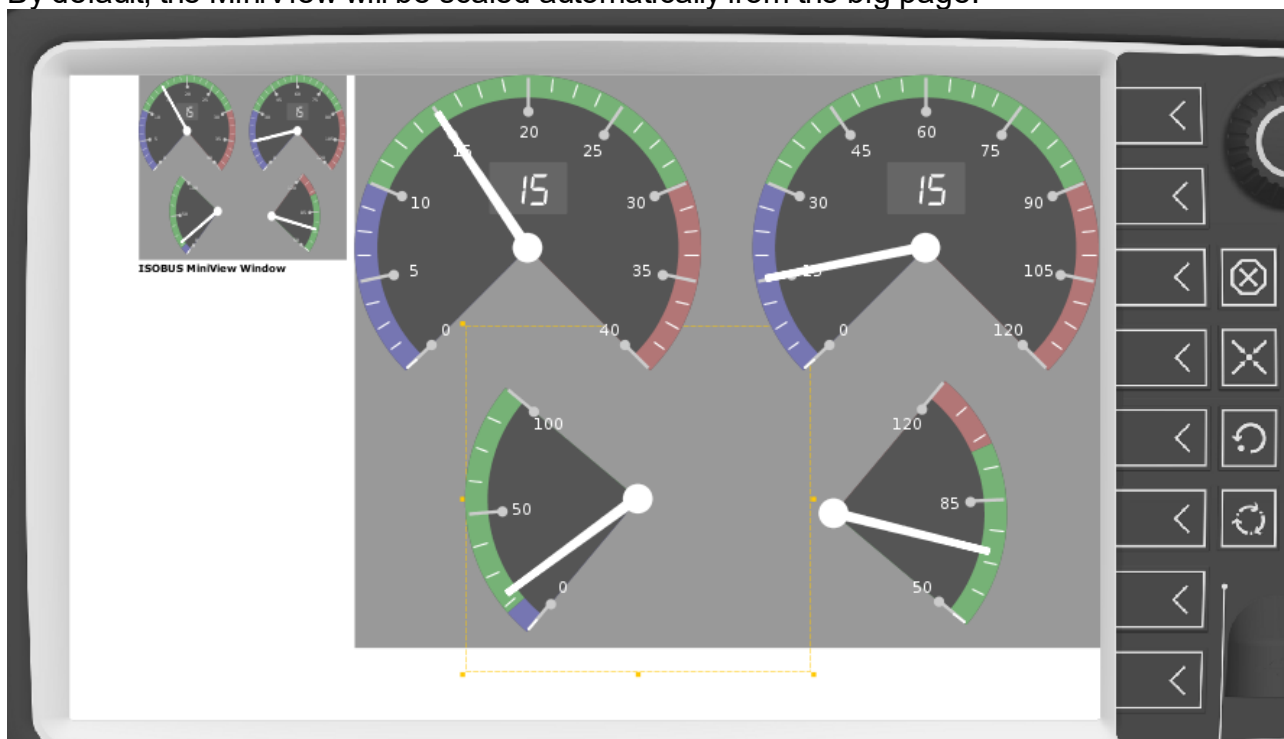


It is also possible to create a custom MiniView page. This is done by right-clicking the Miniview Pages entry in the project tree and clicking New Miniview Page.

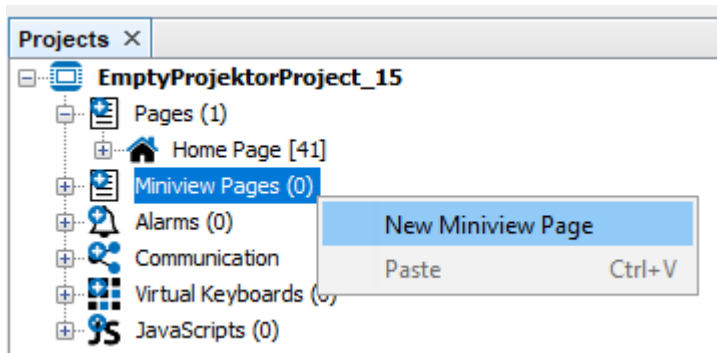


The resulting page only has the small MiniView size.



The mini page can be designed in any way like a big page.
Every normal page in the project has a Property Miniview Page ID.

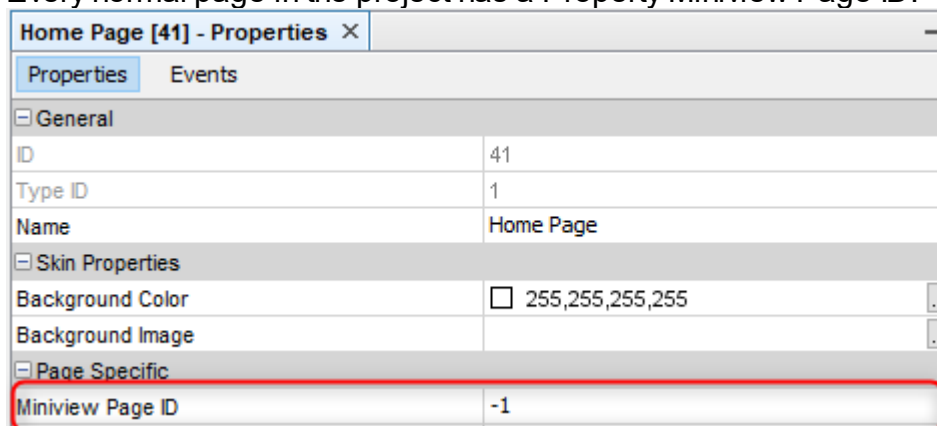

This property can be set to the ID number of any MiniView page.

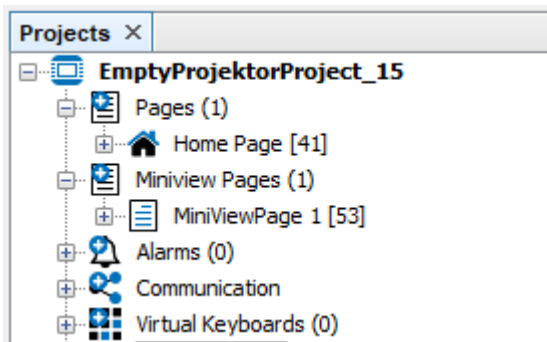

Then the MiniView Page will be shown in the normal page view.



For B3, X18 and A6 Generation 2 all of this is the same, only the MiniView pages are not shown in the page editor of the main pages.

8.5 Object Themes


General

Object themes are pre-defined or user-defined sets of properties for palette objects. Five object themes are pre-defined:


Stunning Bright & Stunning Dark




Modern bright

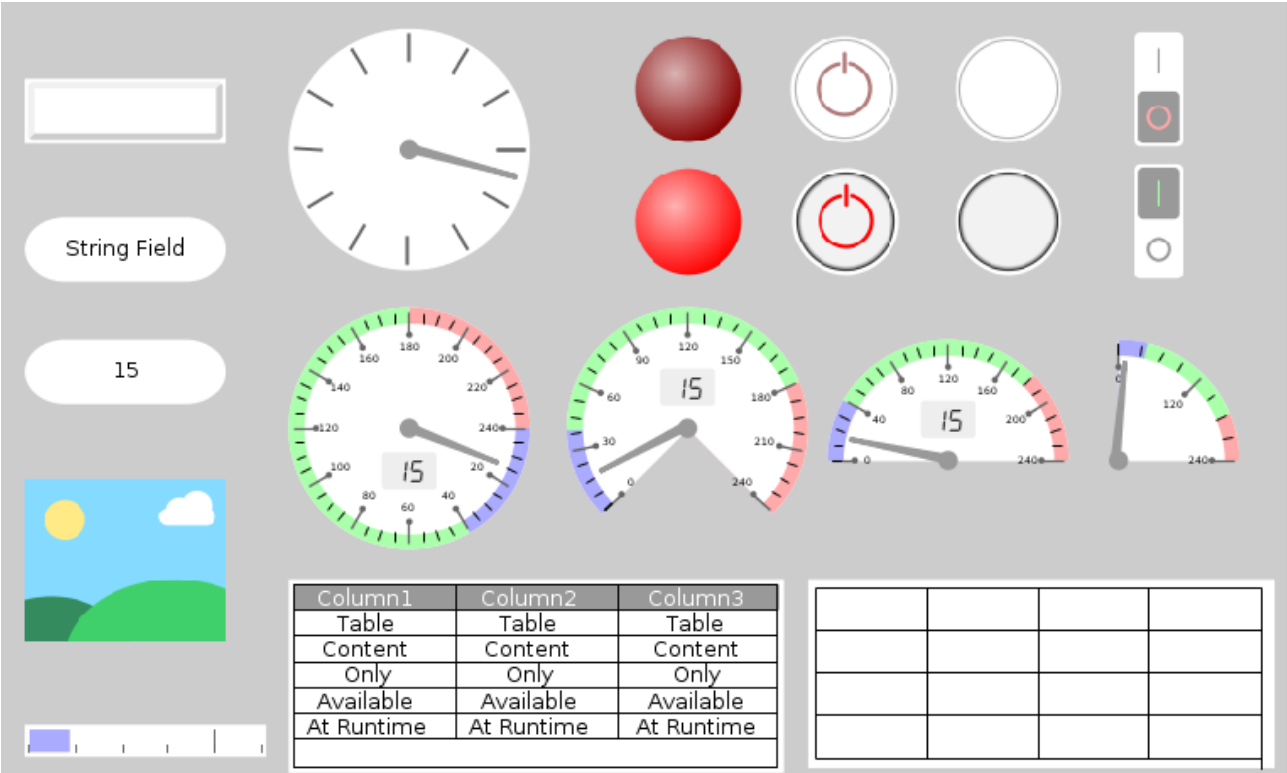

Modern dark

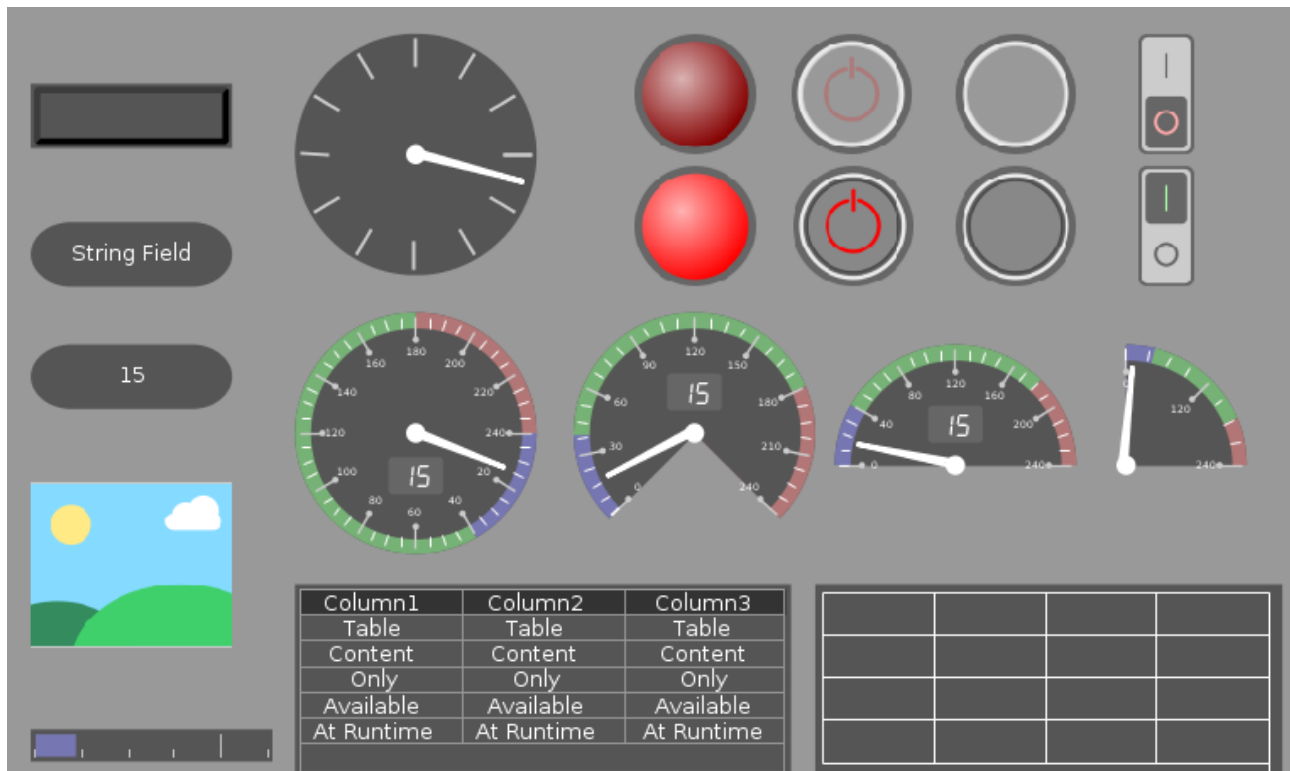


Classic

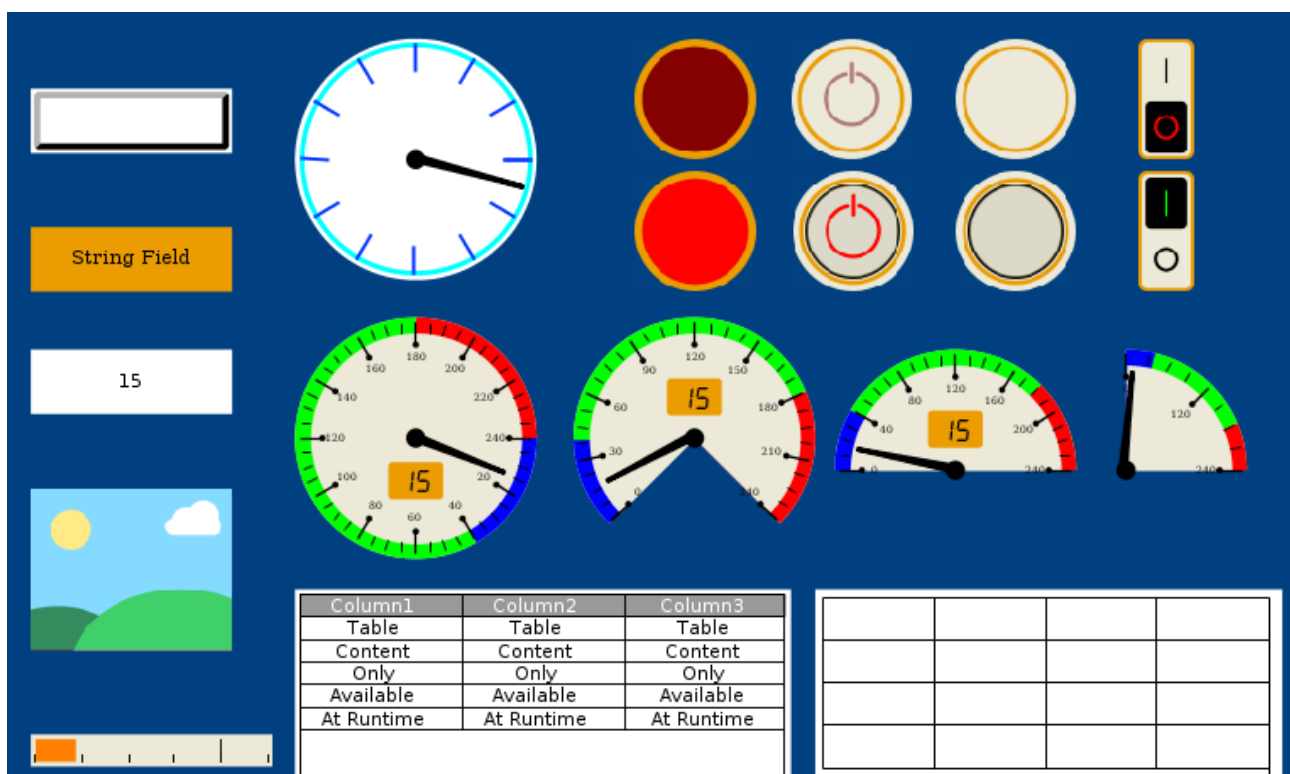

For each palette object, certain properties are "theme-dependent", i.e. they will be used when a new object with that theme is created or when the theme is applied to an object or to a whole project.

To see which properties are changed by a theme, go to the dialog reached over the menu *Options -> Scene -> Object Themes*, choose a theme and select one of the objects. In the "Properties" window on the right side of the dialog, the affected properties and their settings for the selected theme are displayed.

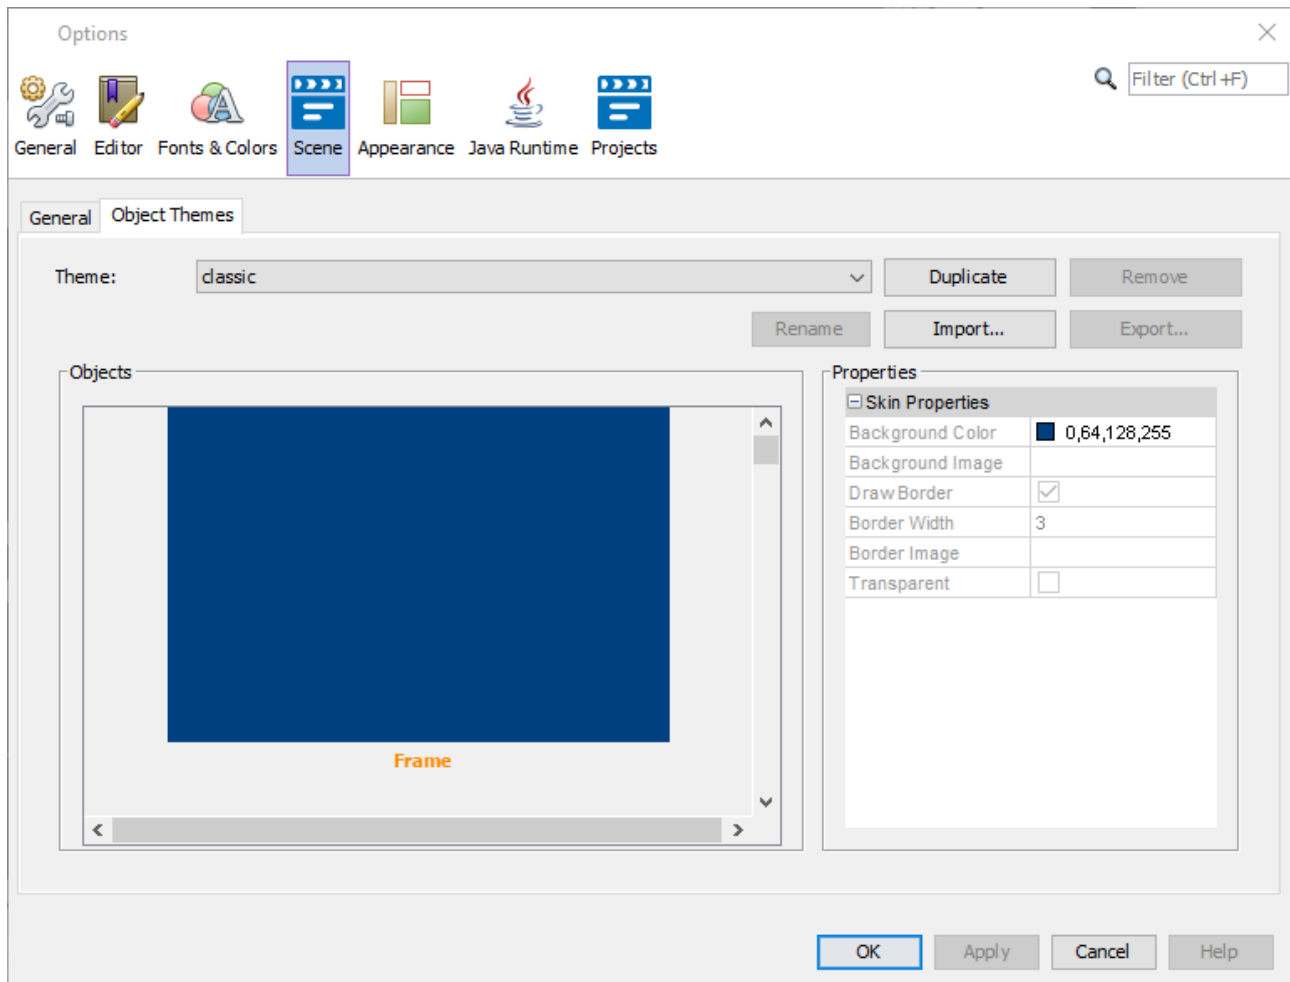


Choosing themes

Themes can be chosen


- for the currently selected object in the scene, by changing the Day or Night Theme property of the object, depending on the setting of the [Day/Night Theme](#) Switch

Day/Night Mode	
Enable Day/Night Mode	<input checked="" type="checkbox"/>
Day/Night Theme Switch	Day Theme
Day Theme	modern_bright
Night Theme	modern_dark

- as the standard for new objects, by changing the "Default Day Theme" "Default Day Theme" setting in the project properties.

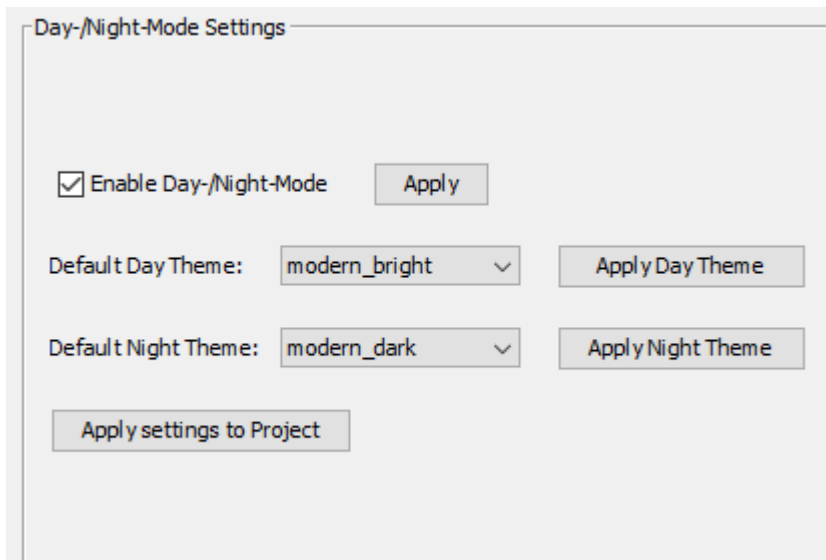

- for an existing project, by choosing a theme in the menu Tools -> Options and then Scene -> Object Themes in the "Theme:" dropdown menu, clicking *Apply* and selecting Yes in the confirmation dialog.

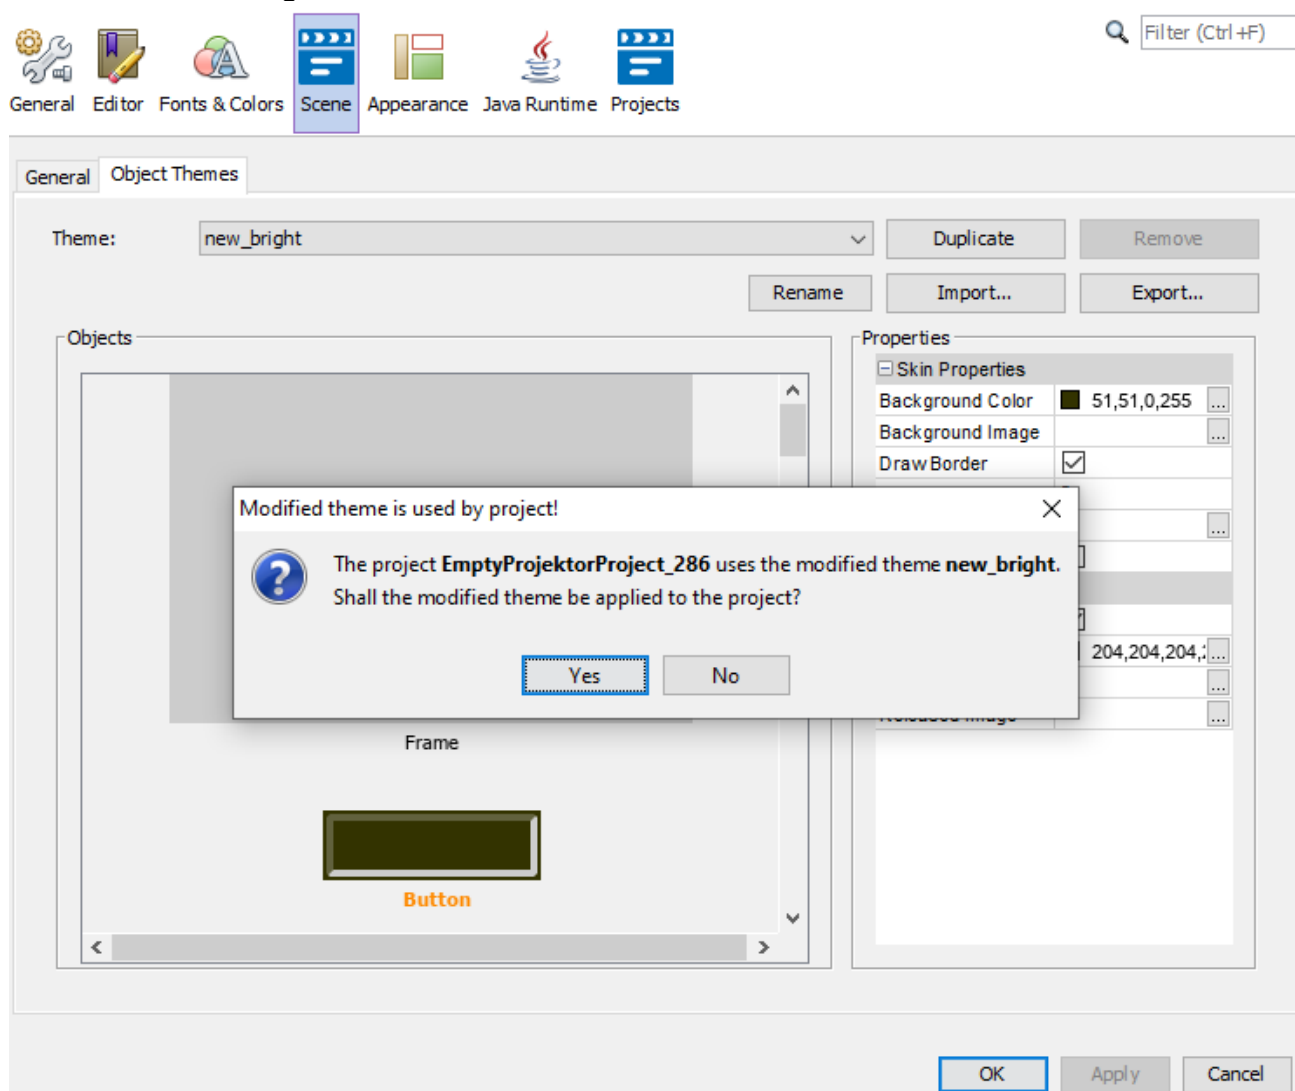


Editing themes


The pre-defined themes cannot be changed.

However, duplicates of these themes can be made. These duplicates can then be modified by the user.

In the dialog reached over the menu *Tools -> Options and then Scene -> Object Themes* an existing theme can be duplicated by selecting the theme and clicking "Duplicate".

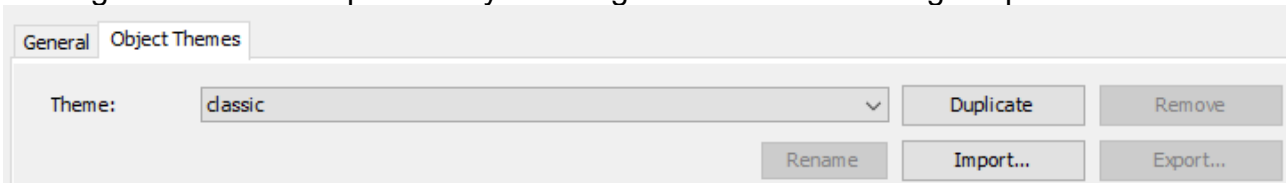

A new name needs to be given to the new theme. By clicking OK, the new theme will be created. The name needs to be unique compared to existing theme names.

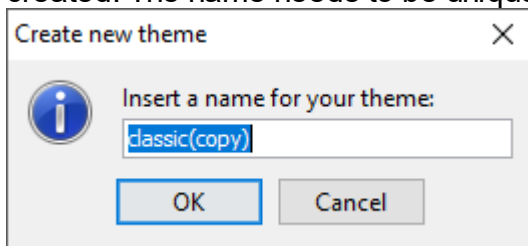


Theme-dependent properties of each object can then be edited in the "Properties" window on the right side of the dialog. To apply the changes, click the "Apply" button.

The theme dependent properties are marked as such in the [object reference](#)⁴⁴⁵.

Now it gets a bit complicated if a custom theme, in our example "new_dark", which is already used on objects, is changed in the Options dialog.


After you changed any of the theme settings and press "Apply" or "OK", the following dialog appears.

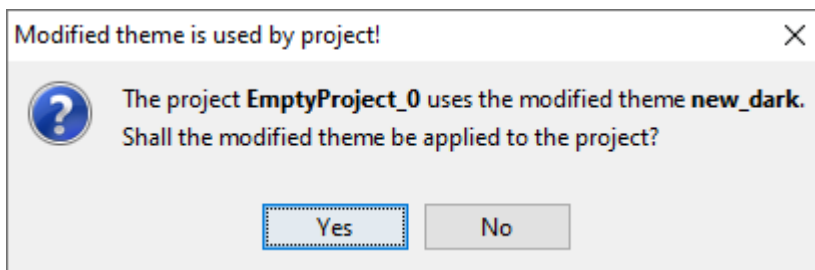

No - The changes will still be saved to the theme, but they won't be applied to the project. This means that the project theme "new_dark" is now different than the "global" theme "new_dark".

The consequence of this is that now the global "new_dark" theme is not available anymore in this project.

Instead a theme called "new_dark_<project_name>" will be displayed. The theme will still have the same name, the attached project name is just to differentiate it from the global theme.

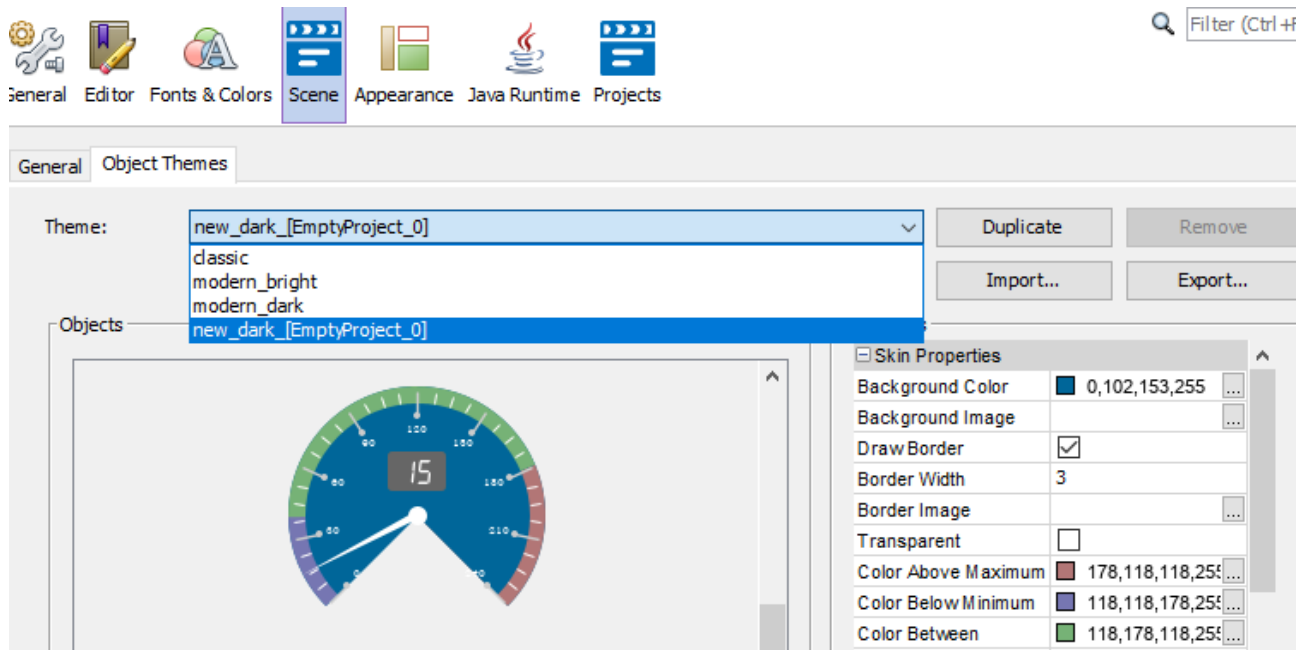

This theme is only visible with the project selected. Changes to this theme will only be applied to the project, and all changes to the project theme will directly be applied to the project when clicking OK or Apply.


To use this theme globally it can be duplicated and the duplicate becomes a global theme and can be used in other projects.

Yes - The modified theme will be copied to your project and the changes you made will directly be applied to your project.

In this case the project still uses the global project.

Note: The updated theme will only be applied to all objects which already use the theme. Object properties that were changed will not be overwritten.

It is also possible to put the settings from an existing object into a theme. To do this, right-click any graphical object with theme-dependent properties, select **Save Object To Theme** and select the custom theme you want to save the properties into.

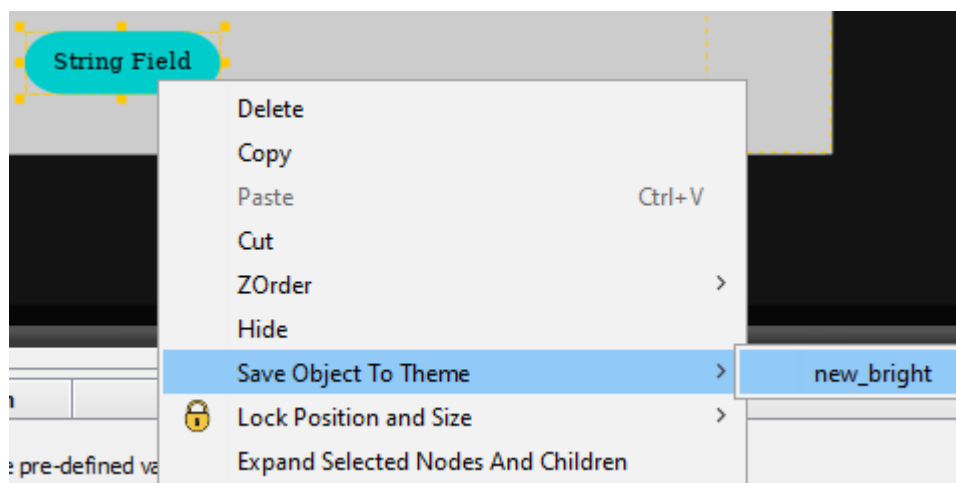

Please note that only the theme-dependent properties will be copied into the theme.

FAQ

I can't see the global theme <name> anymore, only <name>_<project_name>.

When a project uses a theme that has the same name as a global theme, and they are different, the global theme is not visible anymore when the project with the custom theme is selected. Instead, the project theme is displayed.

How can I get rid of this theme <name>_<project_name>?

This project theme is displayed if a theme with the same name, but with different settings, is already existing in the global theme folder.

This theme is only displayed when the project containing it is selected. If you select a different project or close that one, the global theme will be displayed.

If the project theme is modified in such a way that it becomes the same as the global project, it will also be displayed as the global theme again.

Where are the themes stored?

The global themes are stored in the application folder, in
\\application\\extracted_components\\object_themes.

Any theme in a project will be copied to this folder when it is loaded in the OPUS Projektor, unless there is a theme existing already with the same name. In this case the global theme cannot be edited or selected, instead the project theme will be shown with the name
<name>_<project_name>.

Themes used by projects are copied to the project folder, into the sub-folder \\themes. Additionally, the themes are also saved in the terminal_files sub folder for the use on the device

There is a themes folder in my project folder even though I don't use day / night mode.

When a project uses a theme, a copy of the theme is put in the subfolder \\themes in the project folder, so it will be available on the device.

Even if no theme is actively used and day / night mode is not enabled, one theme will always be in that folder, the default day theme (by default, modern_bright).

Can I delete themes I don't need (anymore)?

Except for the pre-defined themes classic, modern_dark and modern_bright, themes can be deleted in the Options dialog.

If a project is opened and it contains a theme that was deleted, it will be re-created.

Custom themes can also be exported and imported.

To export a theme, select a custom theme and click "Export theme...". Then choose a location where the theme should be saved.

The exported file is a zip which contains the theme. The file name can be changed, but only alphanumerical characters and _ can be used.

To import a theme, click "Import theme..." and choose a valid theme file.

The theme name will be derived from the theme file name.

To remove a custom theme, click the Remove button.

Themes are not project-dependent, they can be used in all projects. They are saved in the user data folder.

8.6 Visibility



Tutorial video about visibility

<https://www.youtube.com/watch?v=77RNxko1HvQ>

Example projects: [Download this example](#) to see how Visibility is used.

There are several reasons for using Visibility.


The Visibility can be used...

- to hide symbols or information on the device, until for example an error occurs.
- in case you would like to use the same project for different systems (for example, for machines with different equipment).
- to define different work flows depending on the access rights. For example a normal user view and an admin user view. So you can hide/show buttons or pages for specific user groups.

New simplification of the Visibility system

The Visibility system has been extended to make things easier. Now every variable can be used as a visibility variable for objects.


To do this, [drag & drop](#)⁴⁷ a variable from the [Variable View](#)¹⁶¹ onto the object. In the context menu, select the object first, and in the second level, select "Use as Visibility variable".

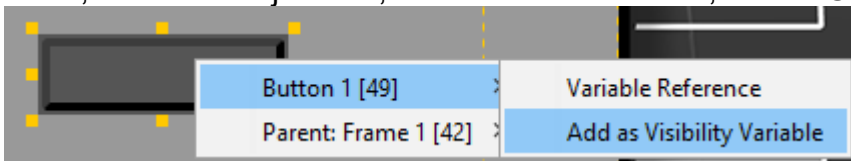

This activates the property Visibility for the object and sets the variable as the Visibility variable for the object.

Alternatively, the Visibility variable can be set through the properties.

 Select the object and activate Visibility in the properties.

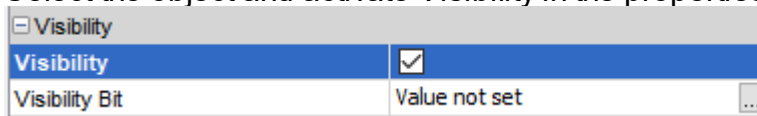

Then open the Visibility dialog by pressing the three-dot button in the Visibility Bit property.

Visibility Bit

Select Visibility Word:

Select Visibility Bit:

☒ Select Variable

Owner:

Group:

Variable:

OK Cancel

First, check the check box next to "Select Variable". Then choose a variable below by filtering by owner and/or group. After choosing the variable you want to use, click OK to save the setting. The variable will be displayed in the Visibility Bit property.

[-] Visibility	
Visibility	<input checked="" type="checkbox"/>
Visibility Bit	New Variable_2

Setting the object visible / invisible is very easy:

If the variable is 0, the object is invisible

If the variable has ANY other value than that, the object is visible.

If variables are initialized as invalid, their default value will be used to determine the visibility status, i.e. if a variable is configured to be initialized as invalid and with default value 5, the according object will still be visible, even when the variable has not been set to a valid value.

Note that a variable can be used for several objects, i.e. one variable can make any number of objects visible / invisible at the same time.

Note that String variables cannot be used as visibility variables. Any other data type that is offered can be used.

Also note that the pre-defined Visibility variables (see below) can't be used for the new visibility system.


Alternatively to the new system described above, Visibility variables are provided by the OPUS Projektor. Every project contains a set of 64 Visibility variables. All of them have 16 Visibility bits, which can be assigned to any graphical object(s). Each bit is a flag to hide or show [graphical objects](#)⁴⁴⁵ by switching between the value **0** or **1**.

The value range of the Visibility variables is from **0x0000** to **0xFFFF**. The default value is set to **0xFFFF**, which means that all corresponding object will be visible.

How to configure Visibility

Before the Visibility can be used, you have to define the Visibility variables and its bits. Therefore please navigate to main menu tab **[File][Project Properties⁸¹]** and select

category **Visibility** ¹.

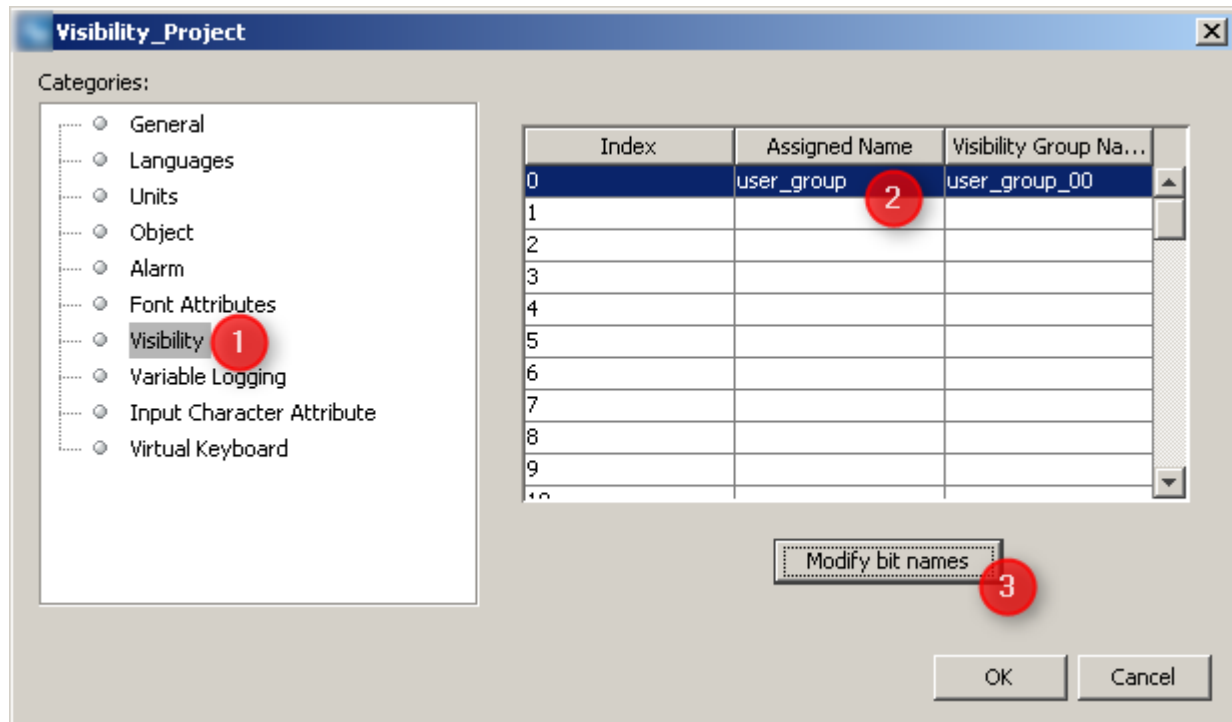

This dialog provides the fields to add new Visibility variables. The 'Index' of the variables defines what internal Visibility variable should be used. So **@Visibility00** variable could be

set with Index 0 by double press of the column **'Assigned Name'** ².

Afterwards you can configure the bits for each Visibility variable by clicking on **'Modify bit**

names' ³. Therefore a new dialog called **'Modify bit names'** will be opened:

Modify Bit Names

Select a Visibility Group: user_group_00 4

Assign names to bits in selected group :

Bit	Visibility Bit Name
0(LSB)	user
1	admin
2	technical
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15(MSB)	

OK
Cancel

Please select the Visibility variable which you want to configure 4. Now you can define for each of the 16 bis (Bit 0 - Bit 15) the correspondent visibility name 5. After defining names for the Visibility bits please confirm both dialogs with 'OK'.

Now the Visibility variables is configured properly and it can be used in the project.

NOTE:

Each entry in both tables should be committed with '**Enter**' key.

To show the object corresponding to the specific bit of the Visibility variable, this bit should be set.

Structure of Visibility Variables

@Visibility00

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Na me														tech nical	admi n	user
Valu e																
Deci mal	327 68	163 84	819 2	409 6	204 8	102 4	512	256	128	64	32	16	8	4	2	1

If you want to show all objects which are corresponding with the first bit of the Visibility variable (**user**), the value of the variable **@Visibility00** should be set to '**1**' (value in decimal)

@Visibility00

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Na me																user
Valu e																X
Deci mal																1

If you want to show all objects which are corresponding with the 3rd bit of the Visibility variable (**technical**), the value of the variable **@Visibility00** should be set to **'4'** (value in decimal)

@Visibility00

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Na me														tech nical		
Valu e														X		
Deci mal														4		

If you want to show all objects which are corresponding from the 1st - 3rd bit of the Visibility variable (**user**, **admin** and **technical**), the value of the variable **@Visibility00** should be set to **'7'** (value in decimal)

@Visibility00

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Na me														tech nical	admi n	user
Valu e														X	X	X
Deci mal														4	2	1



Recommendation: To make handling of visibility variables easier, it is recommended to start by using only the Bit 0 of the visibility variables. 64 visibility switches are enough for most usecases. This avoids difficult bit operations and makes things very easy: 0 - invisible, 1 - visible.

Use Visibility Variables in the Project


To make a graphical object Visibility dependent please follow the following steps:

- Click on a graphical object e.g. **'Text Field'** ⁵⁴⁸ 1
- Navigate to **'Properties'** ⁴⁴⁸ 2 window
 - Enable checkbox at property **'Visibility'**

- Click on 'Value not set' at property **'Visibility Bit'**
- Select Visibility variable and Visibility bit at the dialog **'Visibility Bit'**

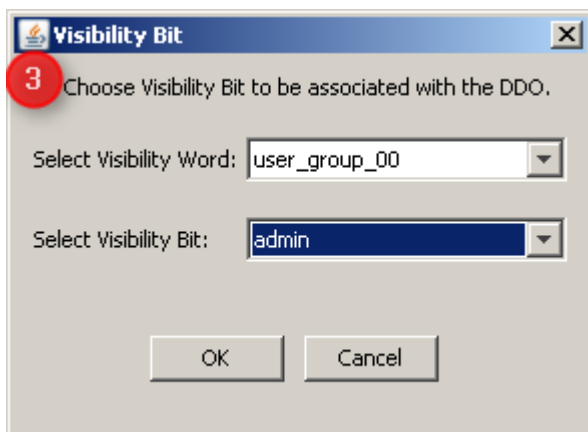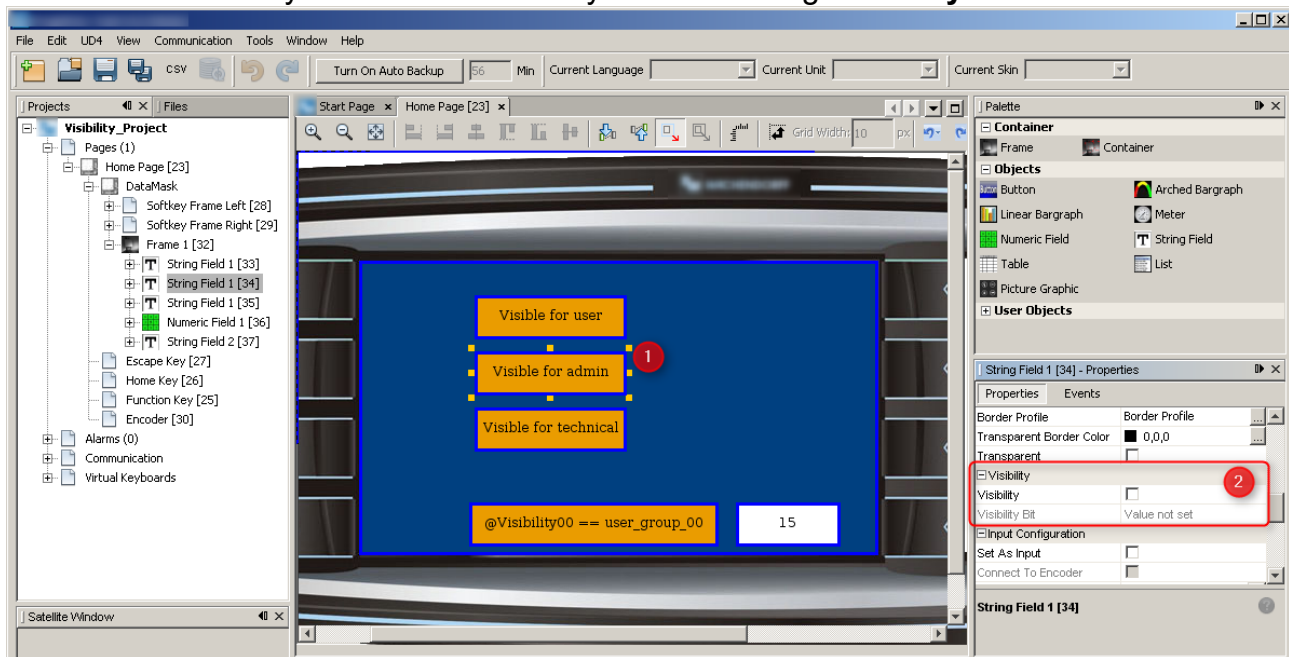

At the end following settings should be set:

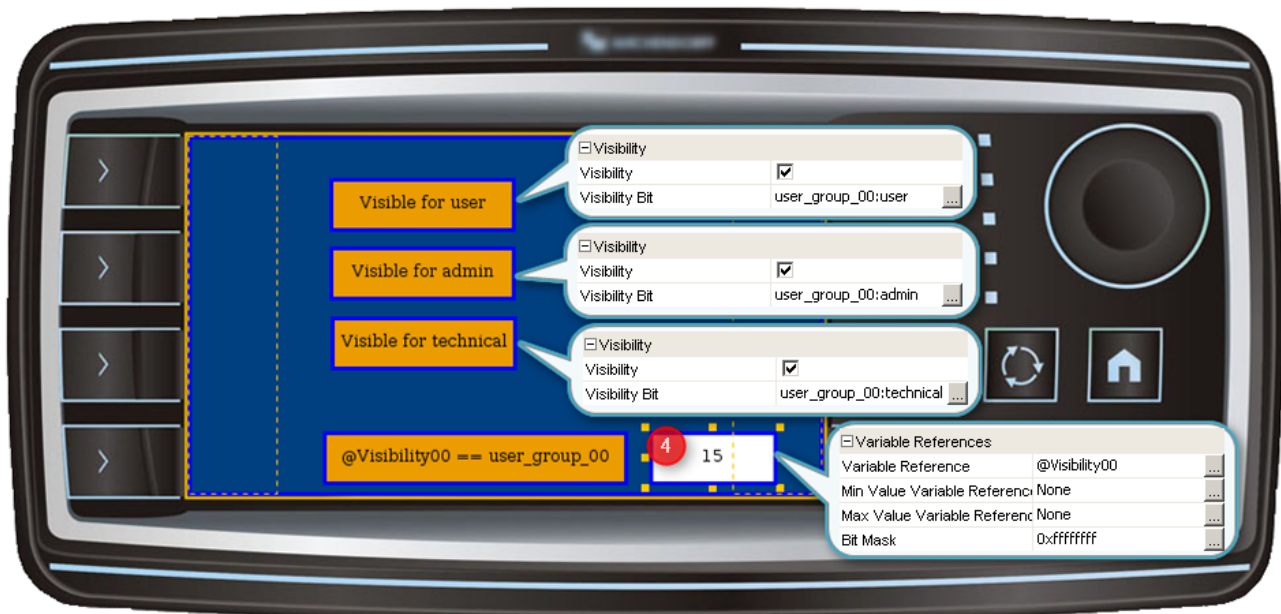

Now the Visibility variable **@Visibility00** can be updated by setting the value of the ['Numeric Field'](#) 4.

NOTE for J939 PGNs:

Be careful with adding visibility variables to receive PGNs.

To make sure all values are forwarded to the Visibility variable, enable the option Forward Don't Care for the variable in the J1939 mapping dialog, otherwise a value of all 1's will be ignored.

8.7 UT Plugin

With this version we are introducing the possibility to add a UT frame and UT functionality in a OPUS Projektor project.

Please note that the feature only works on dedicated devices (containing ISO in the article number). Please contact your vendor for information how to purchase ISO devices.

ISOBUS UT Functionalities

The ISOBUS UT in our implementation supports the following functionalities:

- UT Version 5
- AUX-N configuration
- File Server

Demo project with UT functionality

There are three demo projects included in the OPUS Projektor, the [ISOBUS project](#)¹⁴⁰ sample, the [ISOBUS Ready Project](#)⁶⁵⁰ and the [Welcome Project](#)⁷⁵⁹.

With the Welcome Project, if you bought a device with ISO in the article number, you can test the UT functionality directly out of the box. Just check the [necessary configuration](#)⁶⁴⁹ to prepare the device so it can show the UT content properly. The [ISOBUS Ready Project](#)⁶⁵⁰ is installed on ISO devices by default.

Change the project to UT plugin type

To create a new project with UT plugin functionality, choose the type UT-Plugin in the new project dialog.

To add the functionality to an existing project, use the [project conversion](#)^{□44} and convert the project to the type UT-Plugin.

The project type can be checked in the [Project Properties](#)^{□81}.

Added content in a UT plugin project

When a project has the type UT plugin, some additional things will be added:


- several UT plugin variables to control the UT
- two new objects, [UT Primary View](#)^{□553} and [UT Secondary View](#)^{□553}


UT Plugin Functionalities

The functions of the variables are explained in detail in the [Variable Reference](#)^{□186}.

The UT Primary View is the main view for a UT pool. If there is more than one pool, additional pools can be shown in a mini view in the UT Secondary View.

To switch the currently shown pool in the Primary View, it is possible to swipe from a Secondary View to the Primary View.

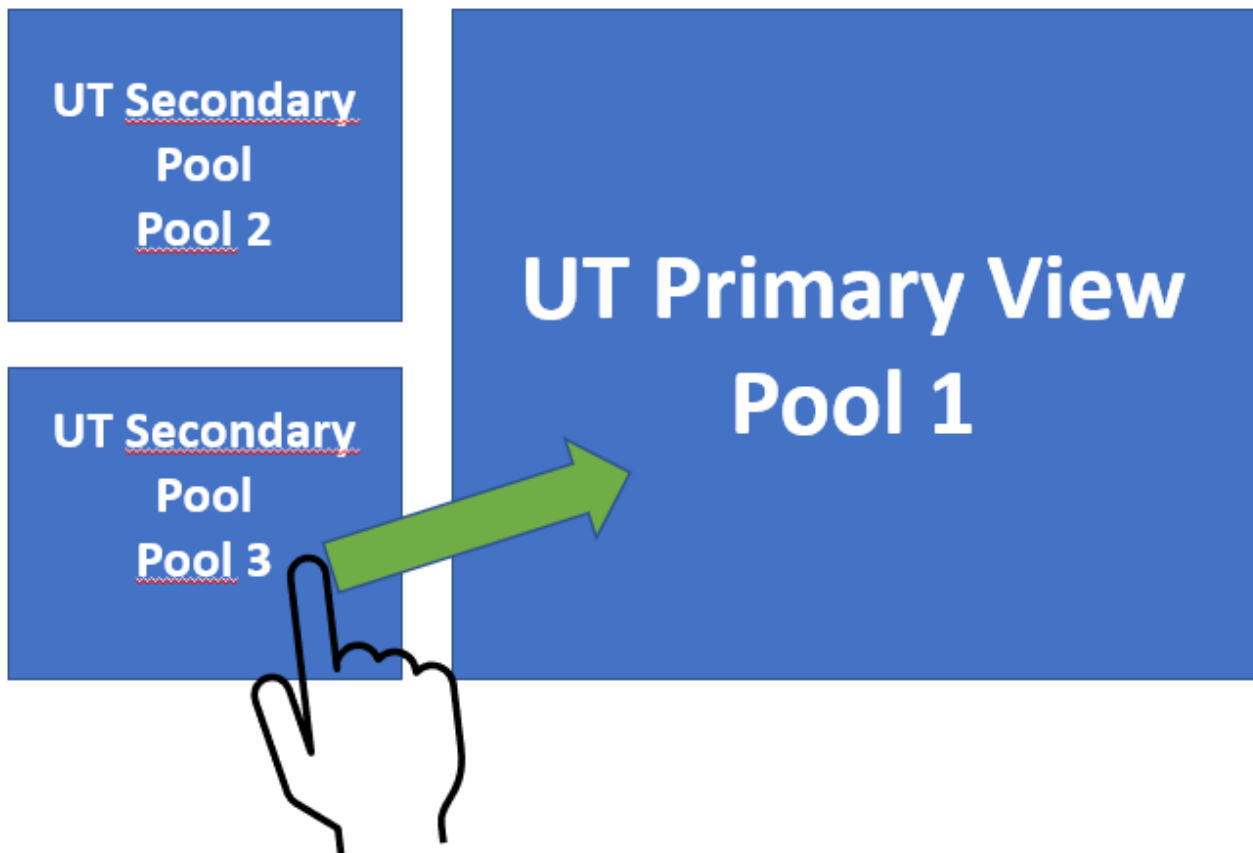

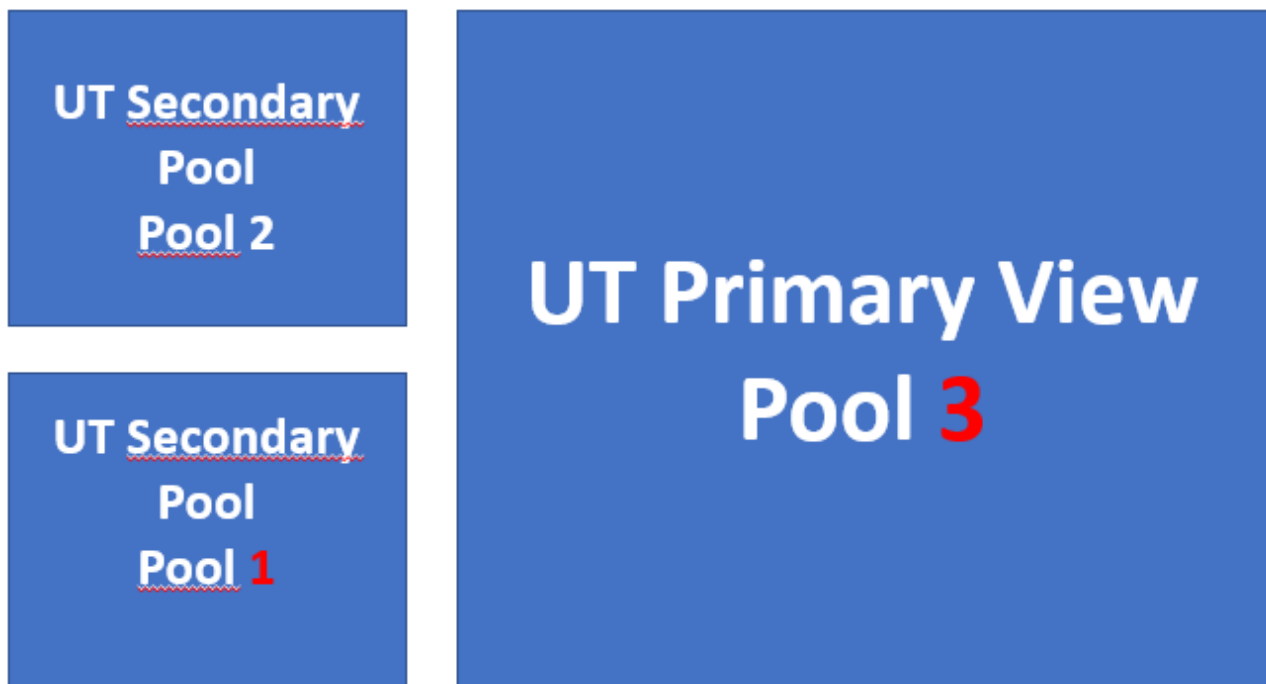

Necessary configuration

There are several variables available to configure the UT experience. Many of them are optional for the essential functionality, but the following should be set in every project, either as a user setting or in an init script.

General configuration

- [@IsobusCanInterface](#)¹⁸⁶ - the device needs to know on which CAN bus the ECU will send the UT pool.
- [@UTActive](#)¹⁸⁶ - the ON switch for the UT. By default this should be set to 1 - active, but you can make sure and set it yourself.

Soft Keys

- [@UTKeysPerRow](#)¹⁸⁶ - the UT needs to know how many soft keys there should be (on each side)
- [@UTKeyLayout](#)¹⁸⁶ - the UT needs to know whether you want soft keys on the left / top side and/or on the right / bottom side and whether it should be one row or 2

Note that if you have a device with physical soft keys and you want to use these soft keys, you have to set these variables so the settings fit with the physical soft key layout.

Additionally, you need to configure the [soft key frames](#)⁴⁸³ on the UT page(s) so that the physical keys will be used for the UT soft keys on that page.

You need to configure the following properties:

- ISOBUS UT Softkey Frame - Checking this property means that this softkey frame (and with it the physical keys) will be used as a UT softkey frame
- ISOBUS UT First Key Number - This configures which softkey number will be the first in that softkey frame. Depending on the selected [@UTKeyLayout](#)¹⁸⁶ (see above) this should be 0

for one side and 0 + number of softkeys on the other side (for devices with softkeys on both sides).


It is also advised to minimize the width of the softkey frames that are used for the ISOBUS pool to 1 px and put them at the edge of the screen so they don't interfere with touch operation of the ISO pool.

8.7.1 ISOBUS Ready Project

If you buy an ISO device, this project will be installed by default. It is a plug and play ready project that can be used without any modification.

It is of course possible to modify this project, as the project is available as a [sample project](#)¹³⁸ in the OPUS Projektor.

Main Screen

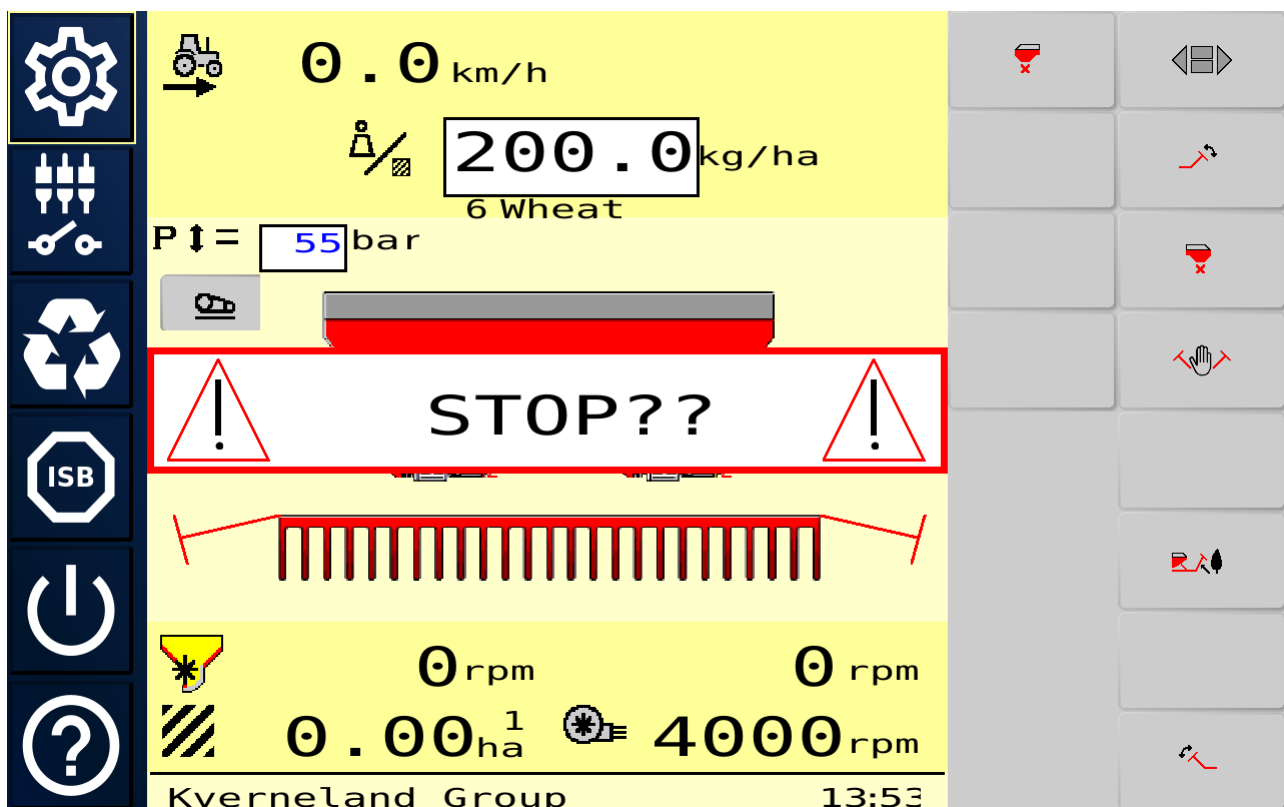

In the center part of the main screen, the ISOBUS pool will be displayed, flanked by the softkey rows on either left, right or both sides, depending on the [configuration](#)¹³⁹.

By default, the ISOBUS pool is expected on CAN bus 2. If it is connected on CAN bus 1, the according setting has to be made in the [Settings screen](#)¹⁴⁰.

If an ISOBUS ECU with a pool is connected to CAN bus 2, the pool will automatically be loaded.

The main screen offers the following menu buttons:



Settings Screen

Press this button to enter the [Settings screens](#) ⁰⁵¹

AUX-N screen

Press this button to enter the AUX-N Setup screen

Cycle pools

Press this button to cycle between ISOBUS pools, if more than one ISOBUS ECU with a pool is connected.

ISB button

Press this button to de-activate certain features on the ISOBUS Implement.

Power button


Hold this button for 3 seconds to shut down the device safely.

Help button

Press this button to show the help overlay, explaining the available buttons in the project.

Hold this button for 3 seconds to make a screen shot that is saved on a USB stick. This functionality requires a USB stick to be connected to the device.

Settings Screens

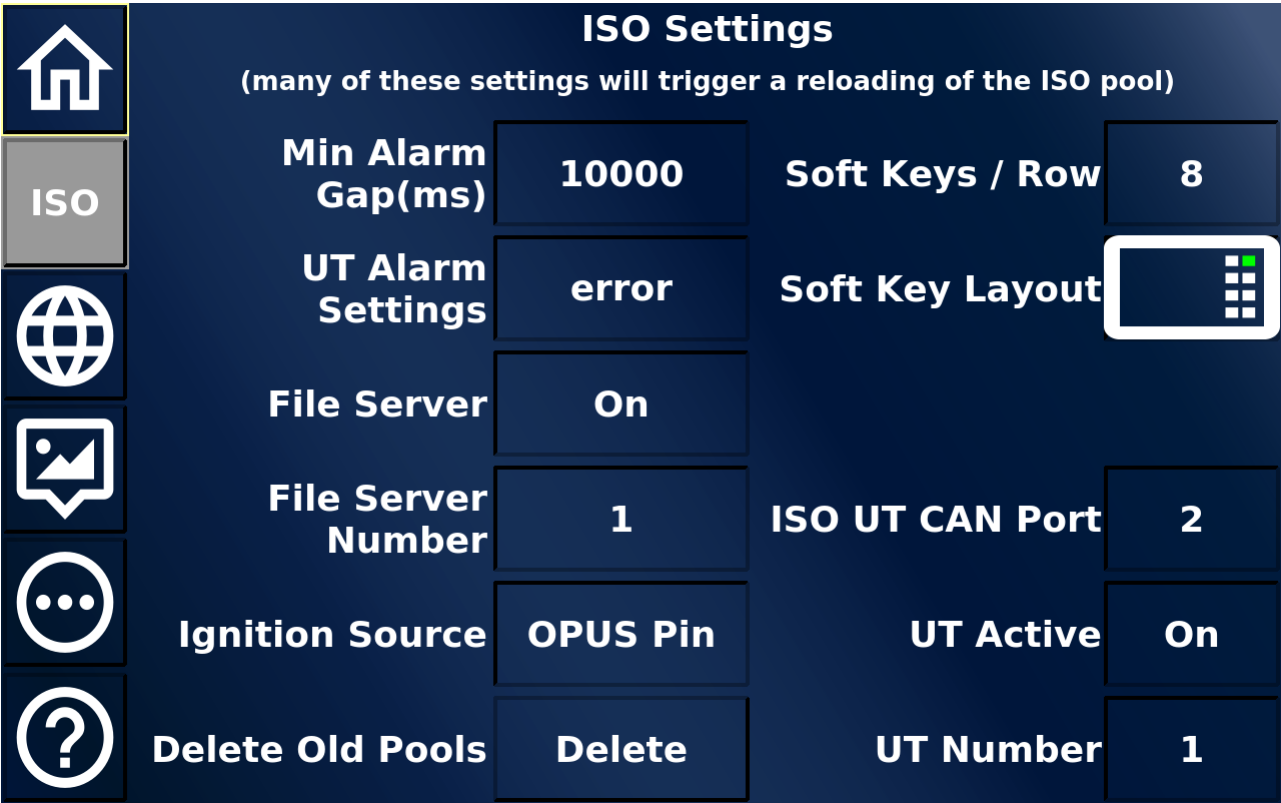

The currently selected Settings screen is indicated with a gray background.
The Settings Screens offer the following menu buttons:



Main Screen
Press this button to enter the [Main Screen](#)⁶⁵⁰

ISO Settings Screen
Press this button to enter the [ISOBUS Settings Screen](#)⁶⁵³. By default, this will be the menu screen that is shown when the Settings button is pressed from the Main Screen

Language / Unit Settings Screen
Press this button to enter the Language / Unit Settings Screen

Boot Logo Settings Screen
Press this button to enter the Boot Logo Settings Screen



Miscellaneous Settings Screen
Press this button to enter the [Miscellaneous Settings Screen](#)

Help button
Press this button to show the help overlay, explaining the available buttons in the project.
Hold this button for 3 seconds to make a screen shot of the current screen which is saved on a USB stick. This functionality requires a USB stick to be connected to the device.

ISO Settings Screen

ISO Settings

(many of these settings will trigger a reloading of the ISO pool)

Min Alarm Gap(ms)	10000	Soft Keys / Row	8
UT Alarm Settings	error	Soft Key Layout	
File Server	On		
File Server Number	1	ISO UT CAN Port	2
Ignition Source	OPUS Pin	UT Active	On
Delete Old Pools	Delete	UT Number	1

This screen allows setting many important options regarding ISOBUS:

- Min Alarm Gap (ms)

UT Alarm Settings

File Server
- How much time (in milliseconds) needs to pass for the same alarm to be shown again
What is the minimum severance of an alarm for it to be shown on the screen

File Server On or Off - Enables or disables the possibility of data exchange between ISOBUS devices

File Server Number	The number of the device for data exchange
Ignition Source	Should the device shut down by its own ignition pin or by the key switch state from the tractor ECU CAN message
Delete Old Pools	Press to delete old pools that are stored on the device (the currently active pool is never deleted).
Soft Keys / Row	How many soft keys should there be per row
Soft Key Layout	Which Softkey Layout should be used (one / two rows left or right or one each)
ISO UT CAN Port	Which CAN port is the ISOBUS ECU connected to
UT Active	Should the ISOBUS UT functionality be on or off
UT Number	The ISOBUS Number of this device

Language / Unit Settings

UT Language / Unit Settings

Date

DDMMYYYY

Language

EN

Time

24h

Weight

metric

Distance

metric

Temperature

metric

Area

metric

Pressure

metric

Unit System

metric

Force

metric

Decimal Symbol

.

Volume

metric

Send To UT

*translated with assistance from AI


This screen allows making several Unit and Language Settings for the ISOBUS pool. Note that not all settings will have an impact on the pool. This depends on the implementation in the ISOBUS pool (i.e. if the pool does not have a certain language implemented, the language can't be displayed and the default will be used instead).

Also note that most translations were made with help of A.I. tools, so imperfections are to be expected. Please feel free to send corrections for a language that you are fluent in, we are happy to improve the texts in future versions.

Date	Date display format
------	---------------------

Time	12 h or 24 h time format
Distance	metric or imperial
Area	metric or imperial
Unit System	metric, US or imperial
Decimal Symbol	comma or point
Language	Which language should the project and the ISOBUS pool be in
Weight	metric, US or imperial
Temperature	metric or imperial
Pressure	metric or imperial
Force	metric or imperial
Volume	metric, US or imperial
Send To UT	The settings above are only applied to the ISOBUS pool once they are sent to the ISOBUS ECU. This is done by pressing this button

Boot Logo Settings Screen

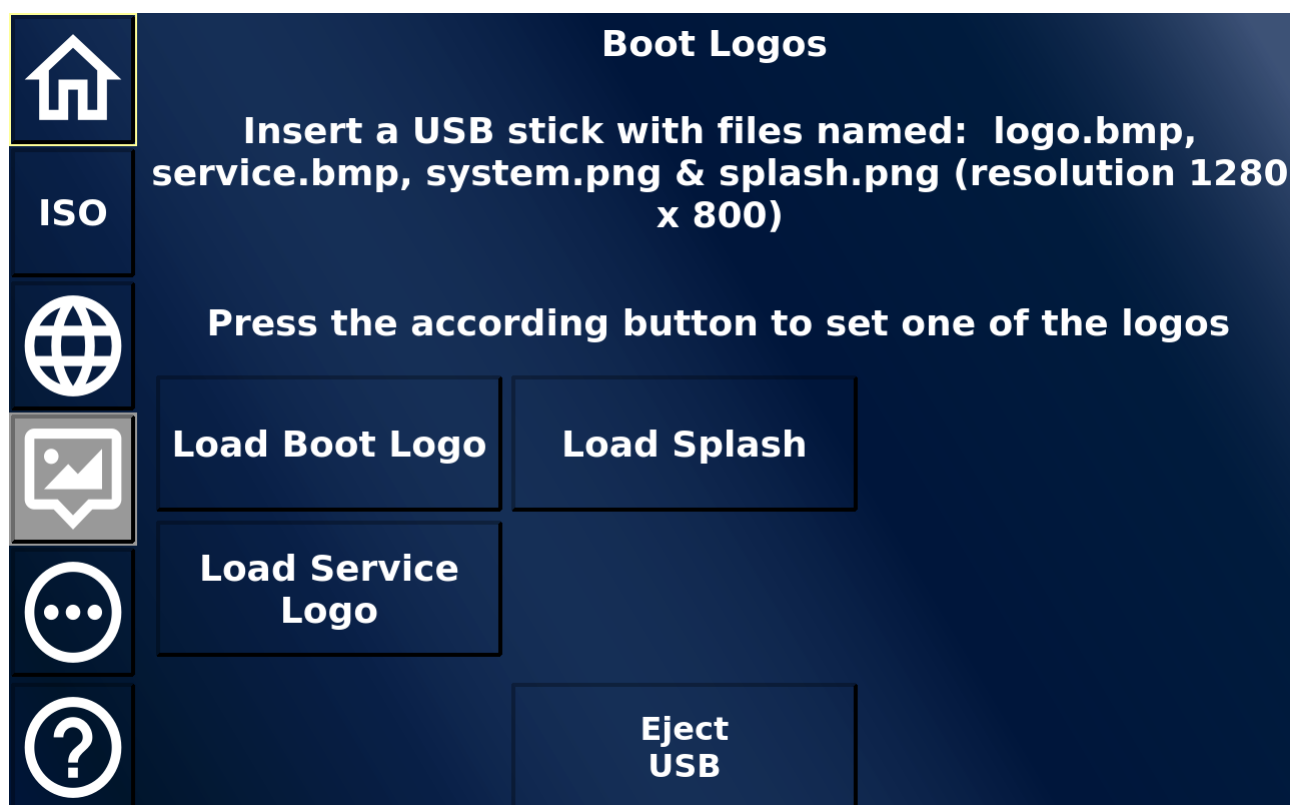


This screen allows setting a different Boot Logo, Service Logo, Splash screen and System Background.


Load Boot Logo	Loads a Boot Logo file from a connected USB stick. The file has to have the file name logo.bmp to be recognized. The resolution of the file should match the device resolution.
----------------	---

	<p>The Boot Logo file is the very first image that is shown when the device is powered on in normal operation mode.</p>
Load Splash	<p>Loads a Splash screen file from a connected USB stick. The file has to have the file name splash.png to be recognized. The resolution of the file should match the device resolution. The Splash screen is shown when the PClient application has started and the current project is loaded.</p>
Load Service Logo	<p>Loads a Service Logo file from a connected USB stick. The file has to have the file name service.bmp to be recognized. The resolution of the file should match the device resolution. The Service Logo file is the very first image that is shown when the device is powered on in service mode (i.e. to update the OS or PClient application).</p>
Load System Background	<p>Loads a System Background file from a connected USB stick. The file has to have the file name system.png. The resolution of the file should match the device resolution. The System Background is displayed when the PClient application starts or shuts down.</p>
Eject USB	<p>Ejects the USB stick for safe removal. This should also be pressed after screenshots have been stored on it before unplugging the USB stick.</p>

When loading any of the images successfully, a confirmation message is displayed on the right side of the screen.

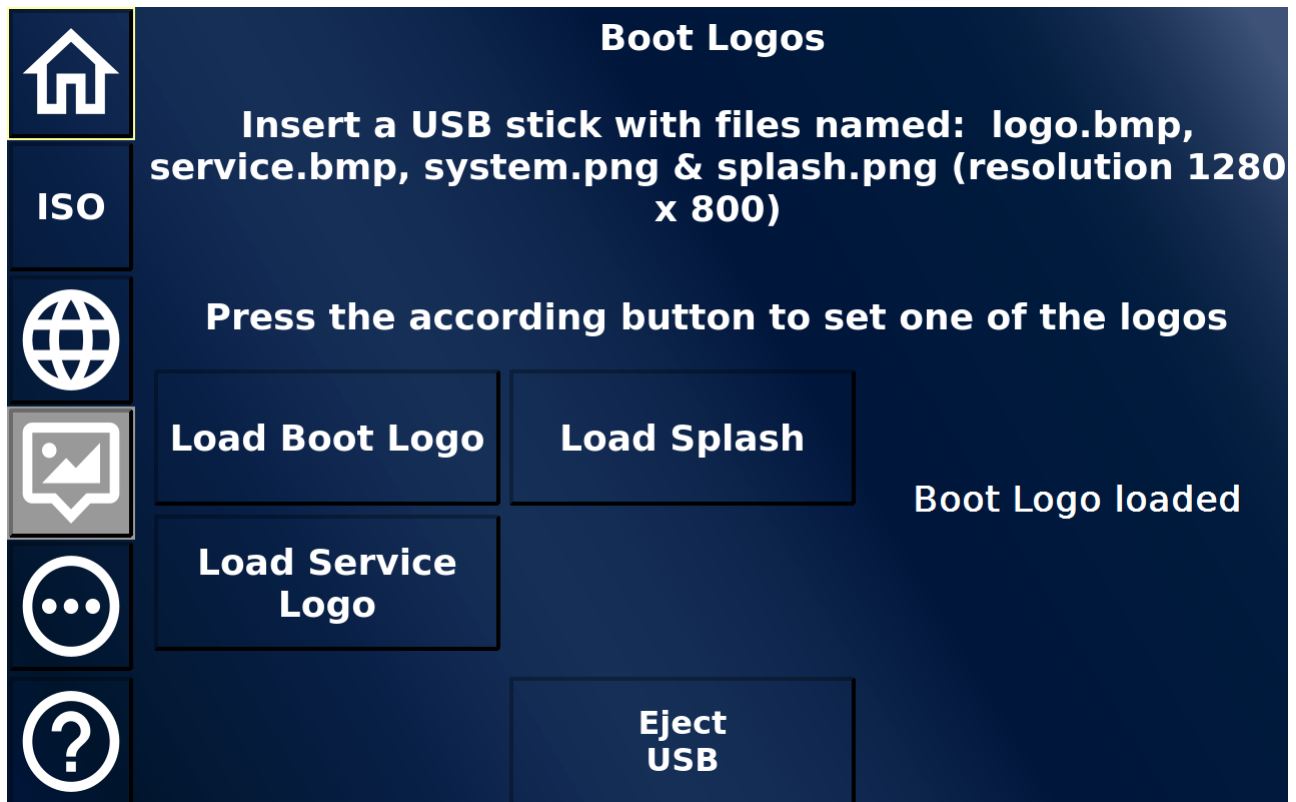


Miscellaneous Settings Screen

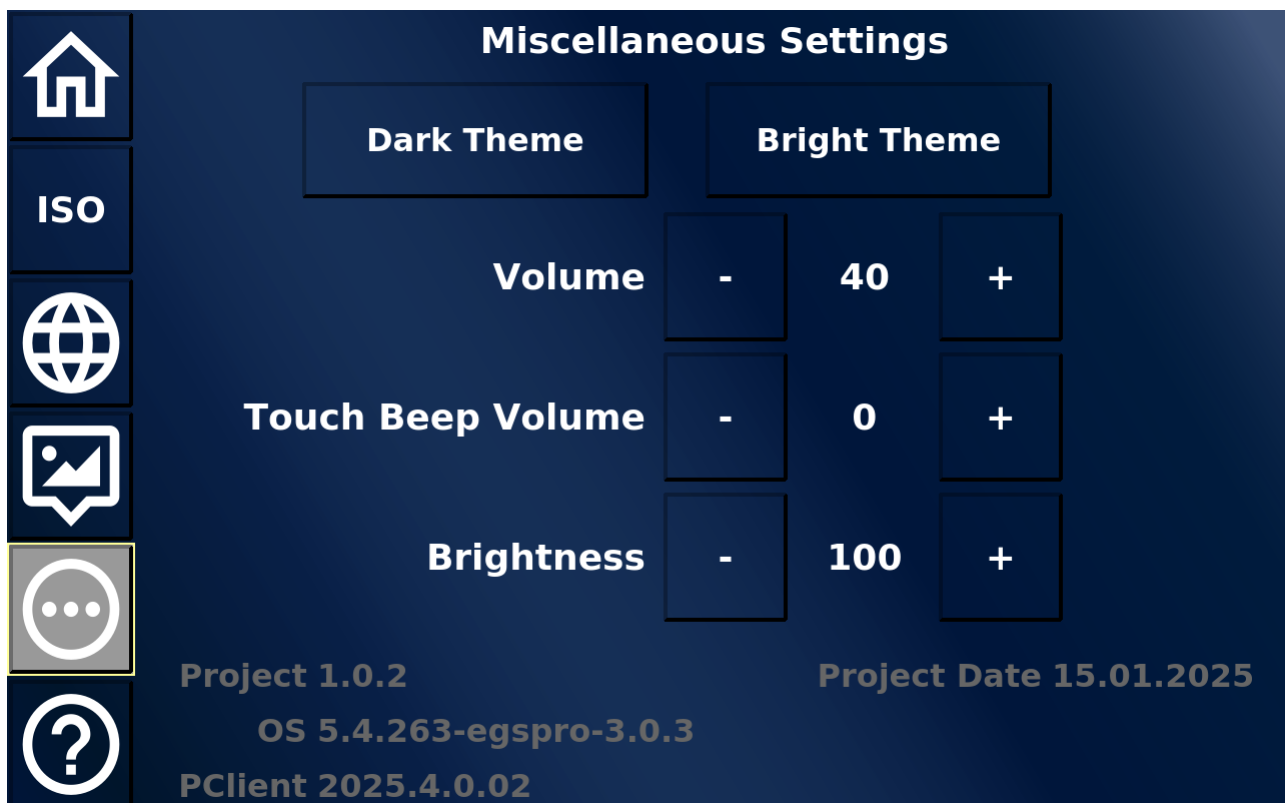

This screen allows making several system related settings.

The whole project (apart from the ISOBUS pool) can be displayed in a dark or a bright theme. The dark theme (with the blue background) is the default.

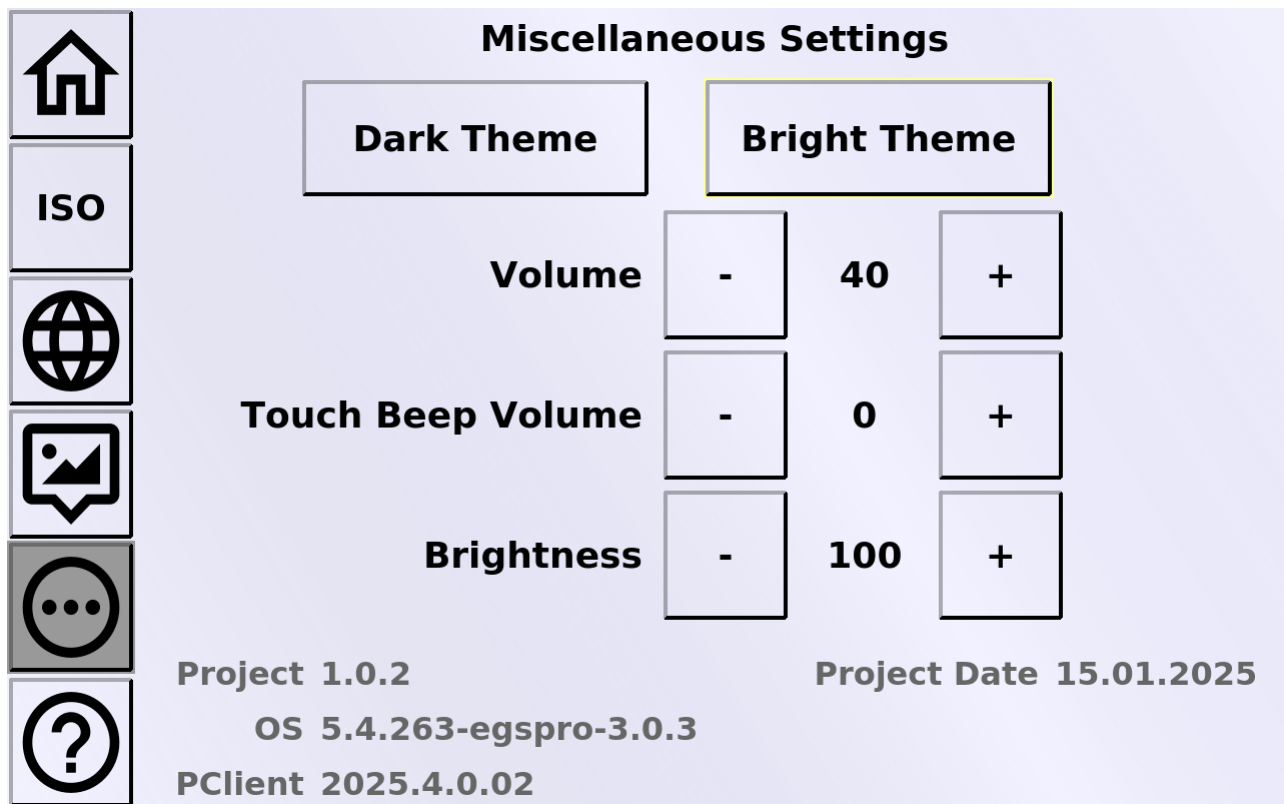

The Volume buttons regulate the master volume of the device.

The Touch Beep Volume buttons regulate the volume of the general touch beep. With this number > 0 the device will beep every time the touch screen is touched.

The Brightness buttons regulate the brightness of the device.

In the bottom the versions of PClient, OS and the project are displayed. If you have any trouble with a device running this project, please let us know these versions so we know which state your project / device has.

Simulations

9 Simulations

Two types of simulations are available (click the links for details):

- [PClient Simulation](#)⁶⁶²
- [Variable Simulation](#)⁶⁶⁵

Additionally [Simulation Settings](#)⁶⁶⁰ can be made




Tutorial video about the PClient Simulation

<https://www.youtube.com/watch?v=rzgrpzZZ9tl>

9.1 Simulation Settings

General

The settings dialog can be opened via the menu Simulation => Simulation Settings

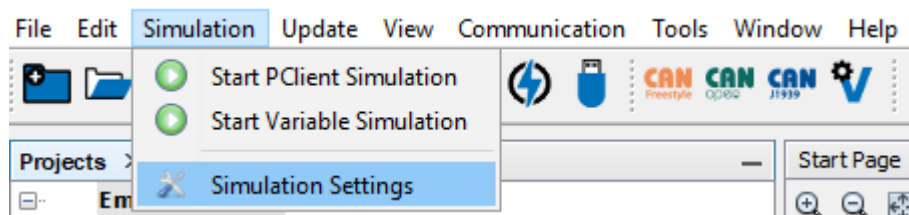

The following simulation settings can be made:

Simulation Settings for

Connection Settings

PClient runs: On local PC

IP Address: 127 0 0 1 Port: 1337

Local PClient Settings

Select CAN Hardware: Peak CAN USB

Peak Mapping Table

Port	Peak Net Name
1	
2	
3	
4	

Expert Settings

OK

Cancel

Connection Settings

Connection settings only need to be adjusted if the PClient shall not be run as a simulation on the local PC. If it is run as simulation don't change anything.

If a connection to a running PClient on a device via ethernet shall be used, the IP Address and Port for that connection can be entered. See [here](#) ⁶⁶⁶ for details.

CAN Hardware Type

Currently two options for the CAN hardware are available:

Peak CAN USB

Peak CAN USB dongle(s) with one CAN port per dongle.

For each CAN port a PEAK net can be defined to associate a certain dongle with the right CAN port. Note that the nets have to exist and they have to use the correct bit rate, otherwise they will not be used.

For the simple use case of having one dongle, no settings are necessary, the existing PCAN dongle will automatically be used. The settings are only necessary if >1 PEAK dongles are to be used.

Don't use CAN


No CAN bus will be used for the simulations. Navigation, scripts, etc. can still be simulated.

If you are not 100% sure that your CAN settings are correct and your PC is connected to a CAN bus with other devices on the bus or even in a vehicle, you should use this setting.

The CAN baudrate that the simulation will use is taken from the current project's settings.

Expert Settings

The Expert Simulation Settings dialog can be opened by clicking on the **Expert Settings** button on the bottom of the Simulation Settings dialog.

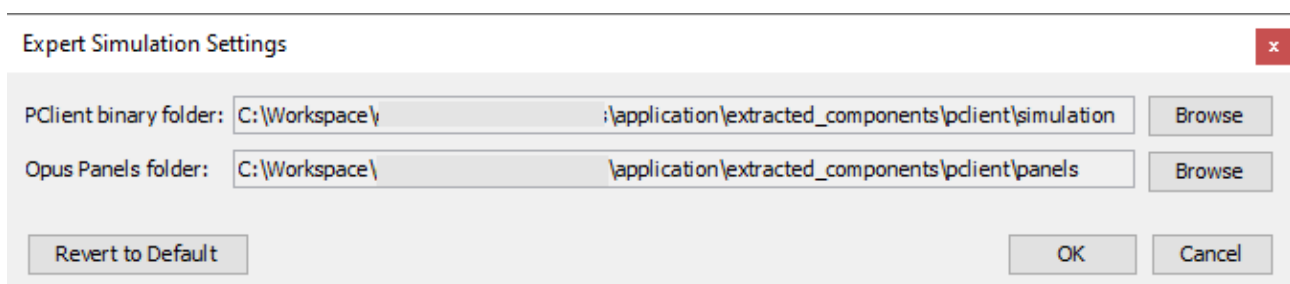

This dialog can be opened via Simulation Menu => Simulation Settings and then clicking the **Expert Settings** button

The following settings can be made:

PClient binary folder

This is the path to the directory where PClient is installed.

Under normal conditions it is not necessary to change this path. It is set by the tool installer. If another PClient version shall be run with the current tool, the path of the PClient can be chosen via the **Browse** button.

Panel Folder

This is the path to the directory where the hardware panel templates are installed

Under normal conditions it is not necessary to change this path. It is set by the tool installer. Via the **Browse** button another path can be chosen.

If the PClient simulation does not show the housing of the device, make sure that this path is correct.

Revert to Default

With the "Revert to Default" button at the lower left of the dialog all settings made in this dialog can be set to the default setting.

9.2 PClient Simulation

What is the PClient Simulation?

The PClient is the application that reads and runs the saved project.

The PClient Simulation was developed to make it easy to test small changes in a project without having to transfer the project to the device. It allows to run a version of the PClient directly on the Windows PC with the currently active project from the tool.

The PClient Simulation shares a lot of its code with the version installed on the devices but since the simulation is run on a very different hardware and operating system it can not run 100% the same as on the device. Please keep this in mind and don't forget to test everything on the final hardware. Especially file operations that contain absolute paths or relative paths outside the project directory will not work on a Windows PC (e.g. changing images in JavaScript with the `setProperty()` functions).


Additionally it is possible to start a simulation mode on the PClient running on the device. In this mode, it is possible for applications like the [Variable Simulation](#)⁶⁶⁵ to connect to a PClient running on the device. See [Simulation Settings](#)⁶⁶⁰ for details about how to enable that mode.

Starting the PClient Simulation

It is possible to start a simulation of the currently active project using PClient:

- via [Simulation Toolbar](#)⁶⁶²
- via [Simulation Menu](#)⁶⁶³

Before the simulation is started, it should be checked if the simulation settings are correct. To do that open the **Simulation Menu** on [Simulation Settings](#)⁶⁶⁰:

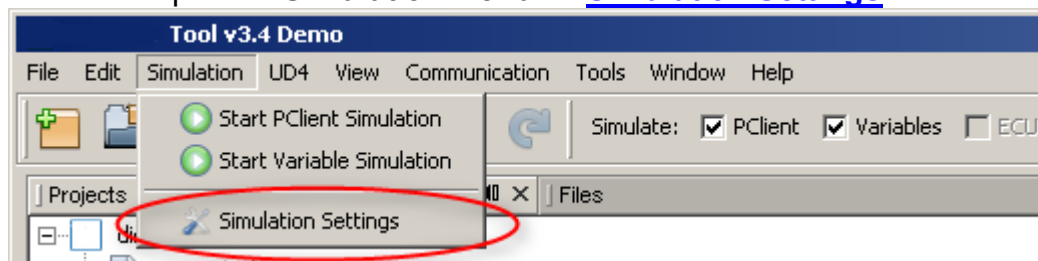


Important Notes:

- The PClient simulation will always use the last saved version of the active project. So make sure that the project you want to simulate contains no unsaved changes.
- Starting PClient Simulation on PC is not possible if the connection settings are not set to "Local PC"

- Starting PClient the first time may take several seconds. Please be patient until it shows up. All following starts will be significantly faster.


Starting from Simulation Toolbar

- Select the project you want to simulate from the project tree.
- Make sure that the **PClient** checkbox is set.
- After that just hit the **(Re)Start** button.

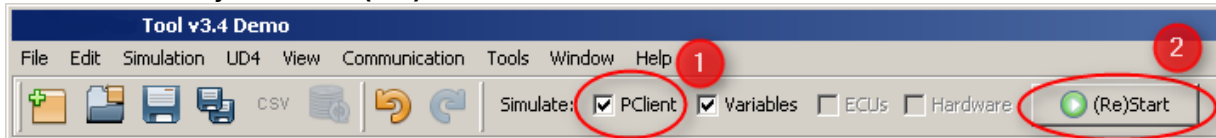

Starting from Menu

- Select the project you want to simulate from the project tree.
- Open the **Simulation** menu and click on **Start PClient Simulation**.

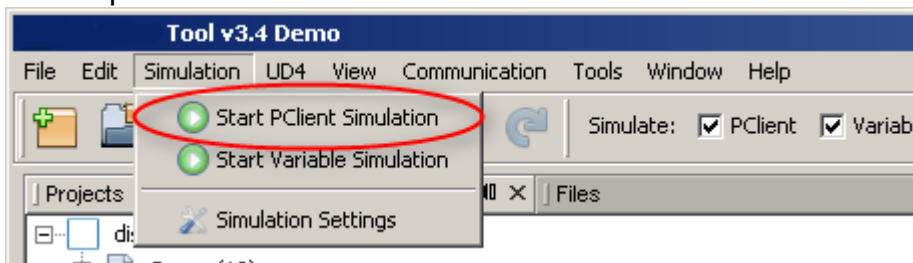

Note: If the connection mode of the PClient was configured to connect via ethernet to a running PClient on a device, the local PClient simulation cannot be started (checkmark in the simulation toolbar is disabled).

The running PClient Simulation

The running PClient should behave like the "real" PClient on the device with the exception of some hardware and operating system depending functions that can not be simulated properly (yet). This includes for example that all hardware variables will not work with the simulated PClient when running on local PC.

Navigation

The running PClient can be operated via keyboard or mouse.

Mouse / Touchscreen Navigation

All painted elements will react to mouse clicks like they would on touches on the real hardware. Input objects and Softkeys can be clicked and the assigned actions will be executed.

Additionally the keys directly on the housing will react like the real hardware keys: The softkeys on the sides, ESC, 3-Arrow and Home key on the housing can be clicked.



Above: A running PClient simulation on the device with the click areas on the housing marked with red rectangles and the associated keyboard keys.


Navigation via keys

The following keys simulate the hardware keys:

Hardware Key	Key on PC Keyboard
Softkeys	The F-Keys (F1 to FX, depending on device type, starting from Top-Left)
ESC	Esc
3 Arrow Key	Tab
Home Key	Home Key
Encoder Press	Enter
Encoder Turn	Up/Down or mouse wheel

The output of the PClient console will be printed into the Output Window of the OPUS Projektor to make simulation debugging easier.

The output will be in a separate tab in the Output Window.

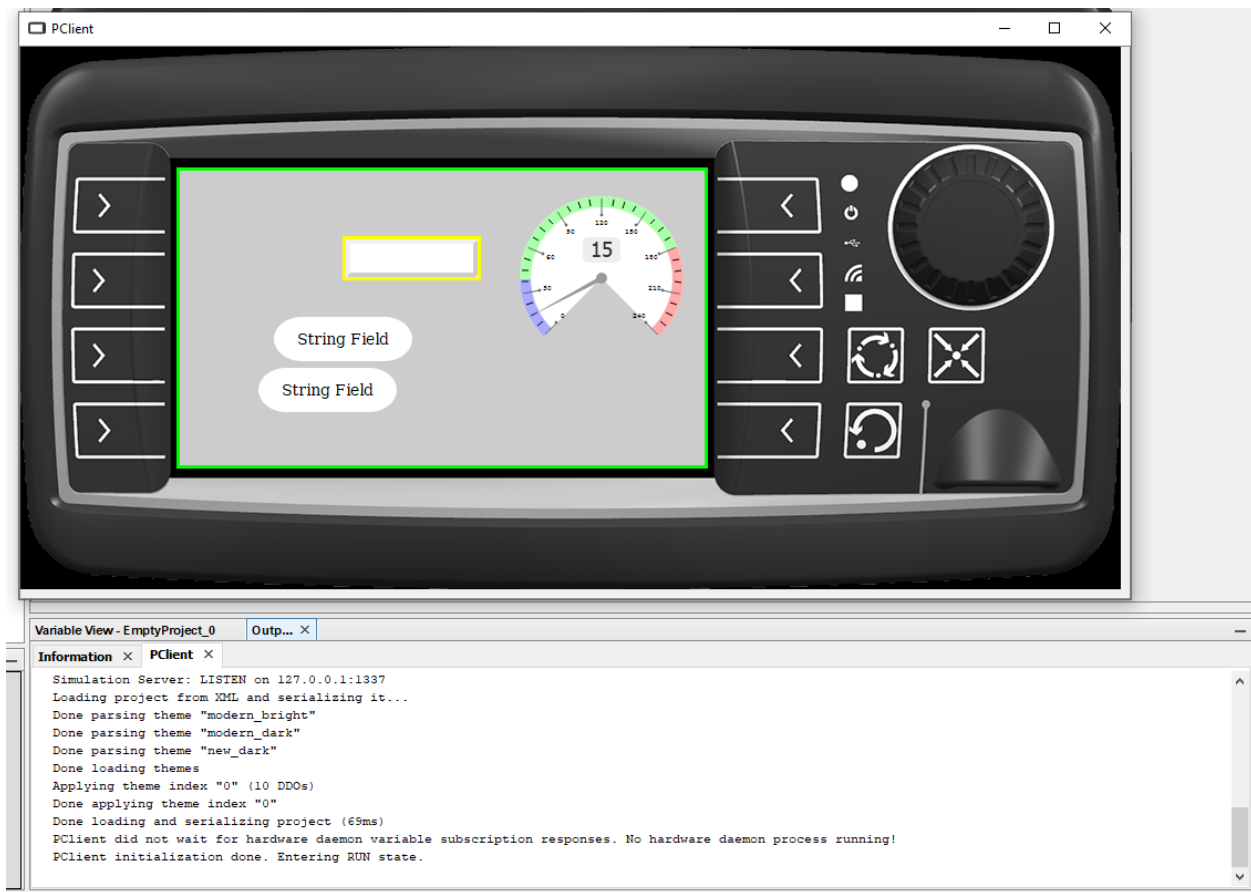

Stopping the PClient simulation

Simply close the window like any other window or hit ALT+F4.

9.3 Variable Simulation Overview


What can be achieved with the variable simulation?

The variable simulation is an application that connects to a PClient (simulated or on a device) and provides ways to view and change variable values. With the variable simulation the following can be done:


- Monitor the values of a running PClient project
- Manually change the value of each variable
- Create automatic value generators that can automatically change the value of variables in different ways
- Create lists that can set the values of different variables to defined values

How to start the variable simulation

The variable simulation can be started individually or together with a PClient simulation. To start the variable simulation set the "Variables" checkbox in the tool's simulation toolbar and then press the (Re)Start button.

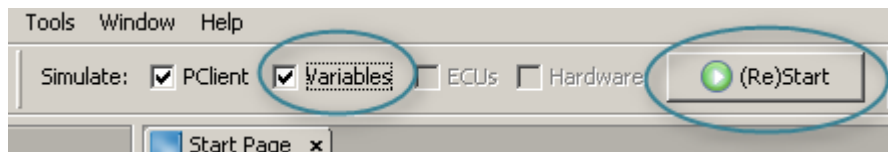

Or go to the simulation menu and then select "Start Variable Simulation".

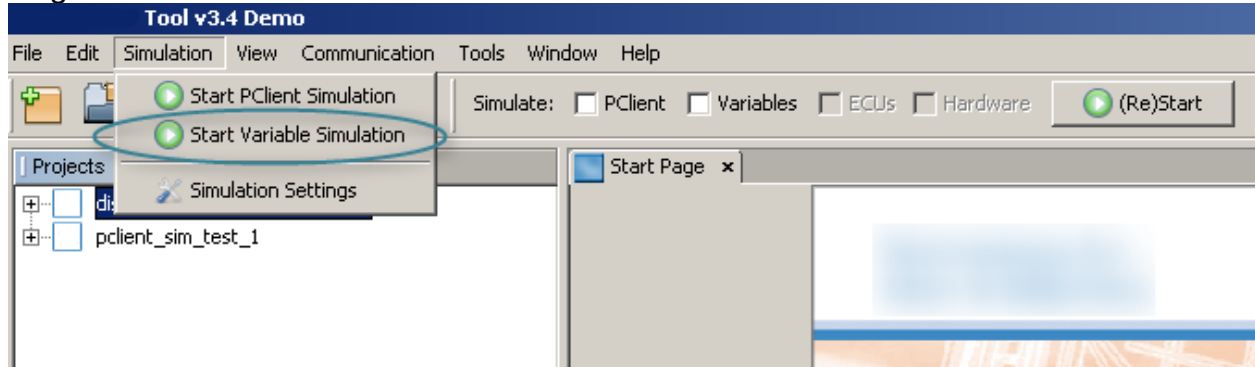


Please Note:

- A variable simulation without a running PClient simulation is useless.
- A project needs to be open and active in the tool before the simulations can be started.

Connecting to local PClient simulation

To connect to a local PClient simulation the following settings have to be made in the [Simulation Settings](#) dialog (these are the default settings):

- Connection Settings
 - PClient runs: On local PC
 - IP Address and Port: will be set automatically

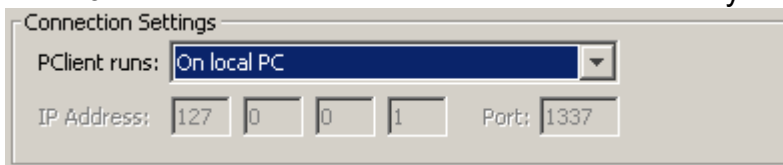

Connecting to a PClient running on a device

To connect to a PClient running on a device, the settings in the Simulation Settings dialog and some settings in PClient itself have to be adjusted.

Enable Ethernet and Simulation Mode in PClient

1. IP Address
The IP address that PClient uses is stored in the variable **@Ethernet0_IPAddress**. This address can be changed to fit to the Network of the connecting PC. Also check the other variables in the Ethernet variable group if they need adjusting (like netmask **@Ethernet0_Netmask**). Contact the local network admin if there is a doubt about the correct IP settings.
2. Port
The port that is used for simulation can be changed if it collides with other applications in the network. Use the variable **@PClientSimulationPort** in the Projekt variable group to change the port.
3. Enable Ethernet

To start the ethernet interface the value 1 needs to be written to the variable **@Ethernet0_applynstart**. After that the network interface should be running. This only has to be done if the value of variable **@Ethernet0_UpAtStart** is not set.

To enable ethernet automatically at each cold boot use the variable **@Ethernet0_UpAtStart**. Set value 1 to this variable if the ethernet interface shall be automatically started. If value 0 is set, the variable **@Ethernet0_applynstart** has to be set (see above).

4. Enable or disable simulation mode

To enable simulation mode write the value 1 to the variable

@PClientSimulationMode in the Projekt variable group. After that the PClient will listen to connection attempts from variable simulation on ethernet.

Steps 1 to 3 only have to be done only once since PClient remembers those settings. A common way to enable simulation mode is:

- Set the variable values from step 1 to 3 in a script (e.g. project init)
- Create a kind of service page where the simulation mode can be enabled (e.g. with a latching button)

Troubleshooting

If the connection via ethernet fails, the following might help:


- Make sure that **@PClientSimulationMode** is set to 0 before changing any network variable or port. When setting the network variables is finished enable simulation as last step (set 1 to **@PClientSimulationMode**)
- Make sure that all network variables were correctly written to the hardware interface: Log in via serial console and type the command **ifconfig eth0**. Make sure that "*inet addr*" contains the correct IP address and "*Mask*" contains the correct netmask for your network.
- Another way to check if the connection settings are OK, the device can be "pinged". Open a DOS command prompt and type **ping <IP_ADDRESS>**. Where **<IP_ADDRESS>** is the address set in step 1 above (e.g. ping 192.168.135.2). If the output of that command shows timeouts, something is wrong with the settings.
- Restart the the complete device after setting the network variables. Enable network interface and simulation mode after the restart.
- Contact the local network admin to get help about the correct IP address and port that should be used in the network.

Ethernet settings for the variable simulation


To connect to a PClient running on a device with enabled simulation mode, the following settings have to be made in the [Simulation Settings](#)⁶⁶⁰ dialog:

- Connection Settings
 - PClient runs: On panel
 - IP Address: The IP address used by PClient on the device (see **@Ethernet0_IPAddress** and step 1 above)

- Port: The simulation port used by PClient on the device (see @PClientSimulationPort and step 2 above)

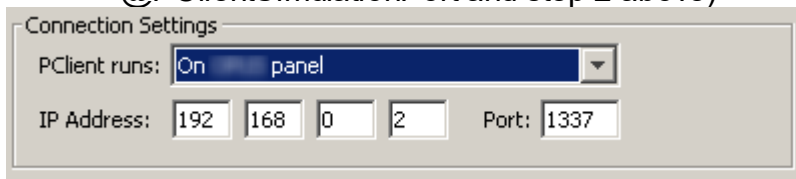

How to work with the variable simulation

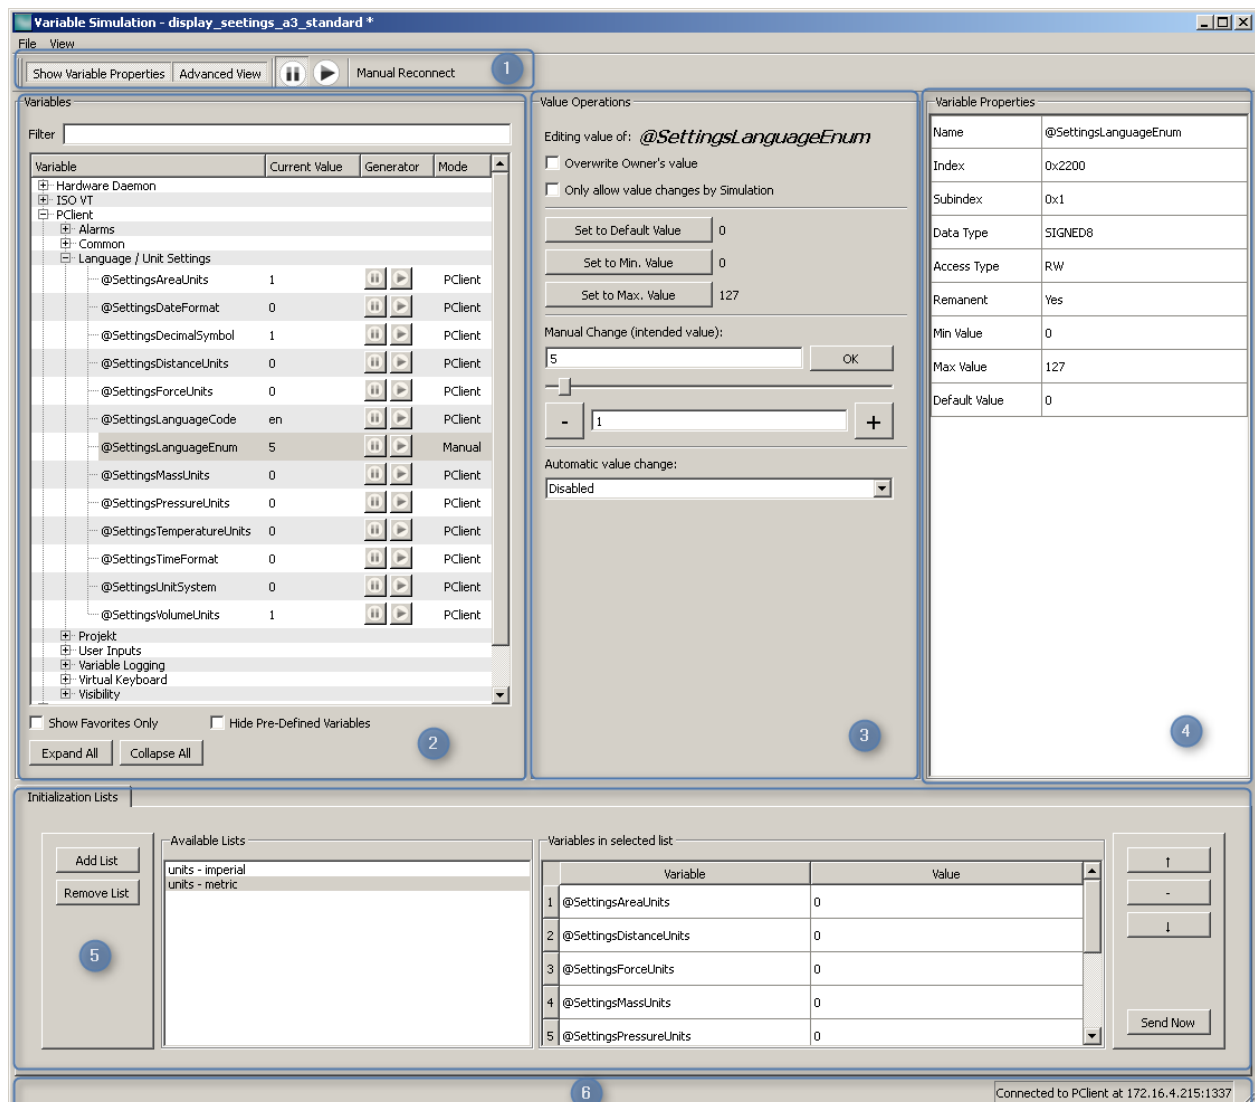

The variable simulation basically consists of the following parts (for detailed descriptions click the respective link):

1. [The tool bar](#)⁶⁷⁰
2. [The variable view](#)⁶⁷¹
3. [The value operations view](#)⁶⁷³
4. [The variable properties view](#)⁶⁷⁸
5. [The initialization lists](#)⁶⁷⁸
6. The status bar

The left side of the status bar shows some important status messages, e.g. when the connection to PClient is lost.


On the right side the connection status to PClient is displayed.

Saving and loading settings

Default settings

The default settings for a project are loaded automatically when starting the variable simulation and a connection to PClient was successful. The default settings will be saved individually for each project.

Each time a setting was changed and the variable simulation is closed, the user will be asked if the changed settings shall be saved. This close operation can then be cancelled, the settings discarded or saved.

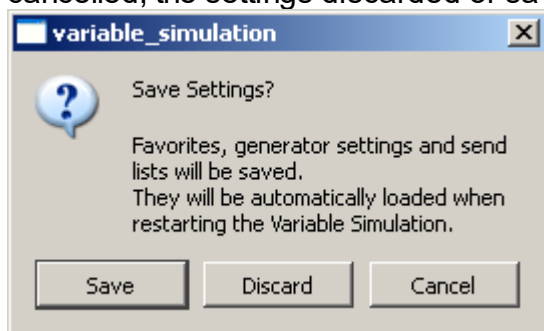

The current settings can also be stored as default settings via **File -> Save as Default**.

The default settings can also be loaded manually via **File -> Load Last Default**.


Note: When starting the variable simulation again from within the tool, it will be restarted and any changed setting will be lost!

Saving settings as a file and loading from a file

It is possible to save the current settings in a file via **File -> Save Settings As**. A file dialog will appear where the save directory can be chosen and a file name for the settings file can be specified. Name and suffix of the file are not important.

A saved settings file can be loaded by **File -> Load Settings**. A file dialog appears in which the settings file that shall be loaded can be selected.

If a settings file is loaded that was saved from another project, a warning will be displayed.

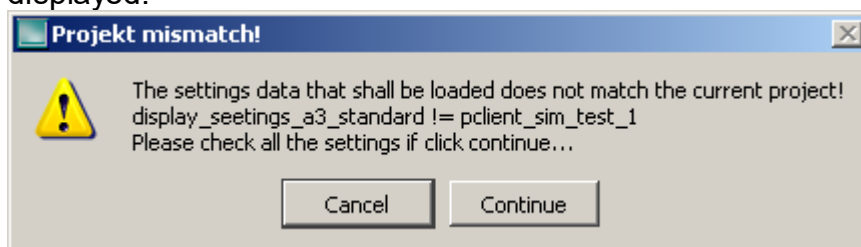




FAQ

For frequently asked questions click [here](#)⁶⁸⁰.

 
9.3.1 Variable Simulation Toolbar

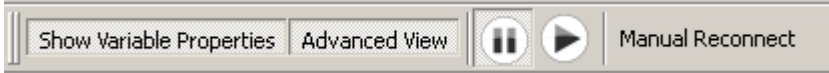The tool bar of the variable simulation contains the following elements:



- Button "Show Variable Properties"
With this button the [Variable Properties](#)⁶⁷⁸ view can be shown or hidden.
- Button "Advanced View"
With this button the Advanced view can be shown or hidden.
- Button 
Use this button to pause all automatic value generators
- Button 
Use this button to continue all automatic value generators
- Button "Manual Reconnect"
This button can be used to manually reconnect to a running PClient. If any settings were changed, a popup asking to save the settings will pop up before the reconnect is done.

9.3.2 Variable Simulation Variable View

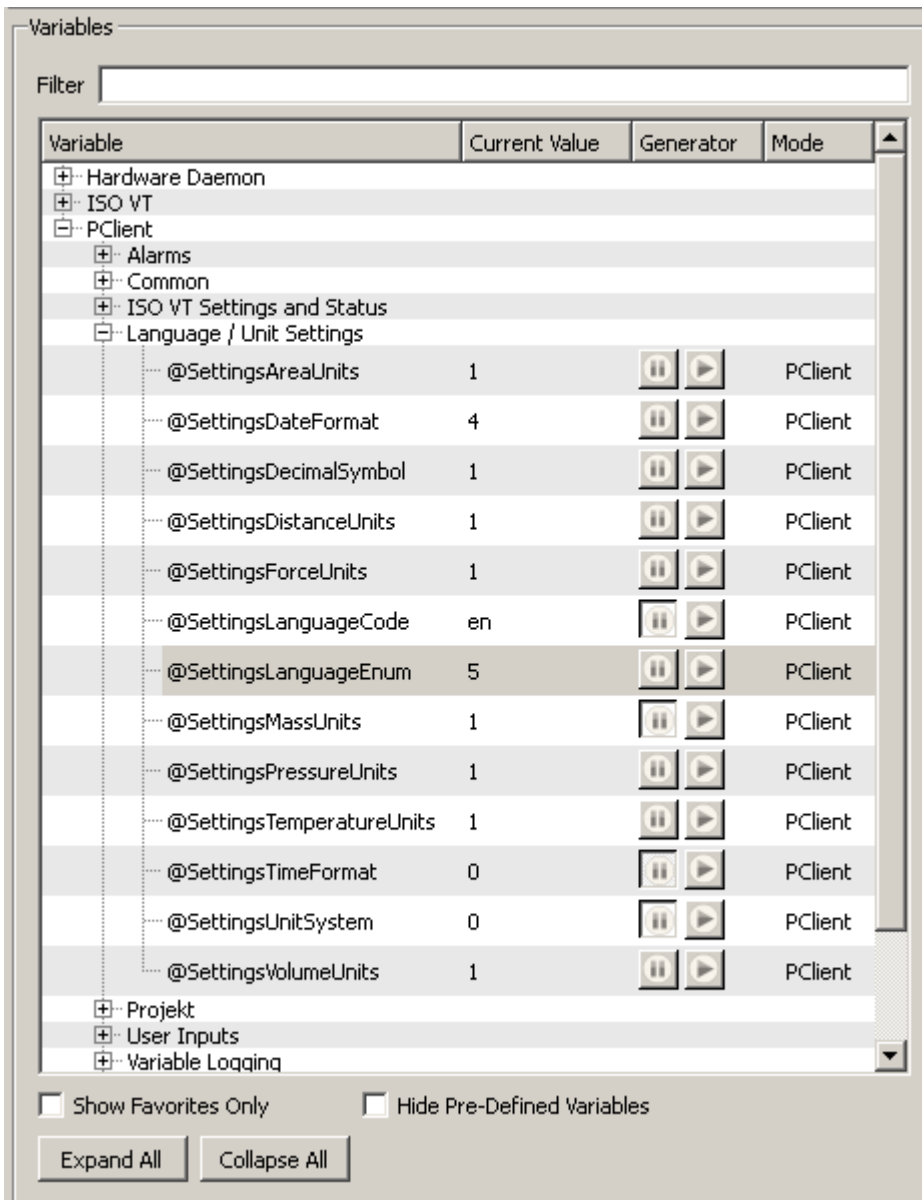



The variable view shows all variables that are configured for the currently simulated project. The data is obtained by the running PClient simulation.

The variable tree

The variables are shown in a tree. The top level node of that tree are the variable owners. Below the owners are the variable groups as configured in the project. The groups again contain the variables.

The tree is sorted alphabetically.

To go to a deeper level of the tree simply click the  symbol of a node in the tree or double-click the node itself. To collapse a node click the  symbol or double-click the node.

The whole tree can be expanded or collapsed with the "Expand All" and "Collapse All" buttons at the bottom of the variable view.

The variable node

The variable node in the tree shows the following information:

- The variable name
- The current variable value as reported by the PClient
 - If the value of the variable is grey, the value of the variable is invalid
 - If the value of the variable is black, the value of the variable is valid
- [Automatic Value Generator](#)⁶⁷³ Play and Resume buttons
 - If a generator was configured for this variable and the generator settings are in the valid range for that variable, the buttons are enabled and can be clicked
 - If no generator is configured for the variable or the generator settings contain invalid values, the buttons are disabled
- The "Mode" column show how the current value was set:
 - **PClient**: The value was retrieved by PClient. The simulation did not change the value (yet).
 - **Manual**: The value was manually changed via the [manual value change](#)⁶⁷³ by the simulation.
 - **Auto**: The value was changed by an [automatic value generator](#)⁶⁷³.
 - **Stopped**: An [automatic value generator](#)⁶⁷³ was just stopped

By clicking on a variable node, the [value operations view](#)⁶⁷⁸ and the [variable properties view](#)⁶⁷⁸ will be populated with the data of the selected variable.

Favorites

Add and remove favorites

To add a variable as a favorite simply right-click on the variable. In the context menu select **"Add to Favorites"**.

To remove a variable from the favorites simply click on the variable with the **right** mouse button. In the popup menu select **"Remove from Favorites"**.

When a variable was added to the favorites, it's name will appear **bold** in the variable tree. It is also possible to select multiple variables and add or remove them from the favorites list. Simply hold the CTRL key while selecting multiple variables with the left mouse button. When the desired variables are selected, do a right-click on one of the selected variables and follow the description above to add or remove all selected variables to/from the favorites.

To add or remove all variables of one group to or from the favorites, right-click on the group and follow the instructions above (Note that only the variables inside the group will be displayed bold when they are favorites, not the group itself).

Show only favorite variables

To only show favorites in the variable tree, enable the checkbox **"Show Favorites Only"** below the variable tree.

To show all variables, remove the check mark from the "Show Favorites Only" checkbox.

Hide pre-defined variables

A project contains a lot of pre-defined variables that might render the variable tree a little confusing. To hide the pre-defined variables and only show user created variables set the checkmark in the **"Hide Pre-Defined Variables"** checkbox.


Filter / Search

To filter the variable tree or to search for a certain variable, a part of the variable name can be entered in the filter field above the variable tree.

The search is case insensitive: It makes no difference if you search e.g. for CAN, Can, CaN, cAn, etc.

Wildcards (like *) are not supported in the search.

The following screenshots shows all variables that contain "can" in their name:

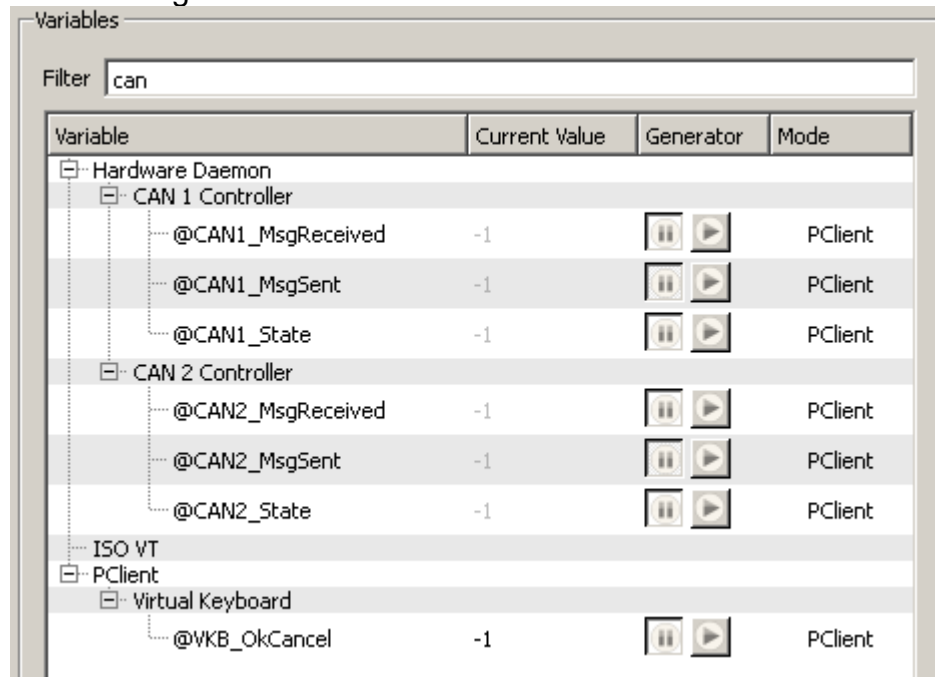

To show all variables again just remove any text from the filter field.

Note about filtering and filter checkboxes

The text filter and the two checkboxes **"Show Favorites Only"** and **"Hide Pre-Defined Variables"** work in combination. It is possible to filter for a certain text while one or both checkboxes are active, the result will then only contain favorites and/or user defined variables.

If you can't see any results, check the checkboxes and maybe remove one or both of the checkmarks.

9.3.3 Variable Simulation - Value Operations

Common

In the value operations view the value of a selected variable can be changed in various ways.

The screenshot shows a 'Value Operations' dialog box for the variable '@SettingsLanguageEnum'. It includes checkboxes for 'Overwrite Owner's value' and 'Only allow value changes by Simulation'. Below these are buttons for 'Set to Default Value' (0), 'Set to Min. Value' (0), and 'Set to Max. Value' (127). The 'Manual Change (intended value):' section has a text input with '5', an 'OK' button, a slider, and a numeric input with '1' and '+'/'-' buttons. The 'Automatic value change:' section has a dropdown set to 'Value Range', a play/pause button, and fields for 'Start Value' (0), 'End Value' (18), 'Steps' (1), and 'Increment every' (1000 ms). A 'Repeat' checkbox is checked, and there are two waveform icons at the bottom.

On top of the view the name of the selected variable is shown (right besides "Editing value of:").

Below that the checkbox "**Overwrite Owner's value**" is located. This is an important setting for each variable whose owner is not the PCClient:

- If the owner of that variable is running and connected to the PCClient
 - checkmark is not set:

A request to update the value of the variable is sent to the owner and the owner decides if the value is valid and accepts or declines it
 - checkmark is set

No request will be sent to the owner but internal variable value will be overwritten. E.g. the value of a variable owned by a CAN ECU will be overwritten with the configured value in the simulation regardless of what was received over CAN bus.
- If the owner of the variable is not running
 - checkmark is not set:

Changing the value in the simulation will have no effect
 - checkmark is set:

The value set in the simulation will be accepted by PClient

Please note that all value operations (manual and automatic) use the setting of this checkbox when sending requests to the PClient.

Important note regarding the **"Overwrite Owner's value"** check box in combination with **internal variables owned by PClient**: Predefined internal PClient variables have a special action assigned (e.g. jumping to a page via @ProjectCurrentPage or managing visibility with one of the visibility variables). If the check box for **Overwrite Owners Value** for one of this variables is set, **the action for this variable will not be executed**. The value is directly written to the variable bypassing the action.

If the PClient is configured to run using a CAN interface (see [Simulation Settings](#)⁶⁶⁰), this checkbox is disabled (security reasons).

The checkbox **"Only allow value changes by Simulation"** will cause the PClient to decline any variable value change requests that were not originated by the variable simulation.

Use this checkbox for variables that are updated automatically and frequently by PClient so that the value can be simulated and no conflicts arise.

Manual Value Change

There are several ways to change the value of a variable manually:

Min., Max. and default value

To quickly set minimum, maximum or the default value of the variable, the three buttons

- **Set to Default Value**
- **Set to Min Value**
- **Set to Max Value**

can be used. The value that will be sent to the PClient is shown right beside the buttons. Please note that Min. and Max. value operations are **not available for string variables**.

Manual value changes and incrementing

Below the "Manual Change (intended value)" label there are three ways to change the value of the variable manually:

- Just enter the value that shall be set in the **manual value field** and press **enter** or the **OK** button right besides that field.
Note: The value in this field always shows the intended value and not necessarily the current value of the variable. Check the current value shown in the variable tree to check if setting the value was successful.
- Use the **slider** below the manual field to change the value between minimum and maximum value of the selected variable (not available for string variables)
- Use the **-** or **+** button to **decrement** or **increment** the variable value. The amount of decrement/increment can be set in the field between the **-/+** button. (not available for string variables)

Automatic Value Change

If the value of a variable shall be changed automatically, different value generators can be configured for each variable.

To chose a generator use the drop down box below "Automatic Value Change". The default for this is **"Disabled"**.





Note: The settings made for automatic variable change can be saved and loaded along with other settings.

Note: Automatic value change generators are not available for string variables.

Value Range Generator

The value range generator changes the value of a variable within a given range. The value is incremented or decremented within a configured period.



Use the following elements to configure the value range generator:

-   buttons
Pause or resume the generator (make sure that the rest of the configuration is correct)
- **Start Value** field
The starting value of the value range. This value needs to be less than End Value
- **End Value** field
The end value of the value range. This needs to be greater than Start Value
- **Steps** field
The current value of the variable will be incremented or decremented by this value. Use positive values to increment and negative values to decrement.
- **Increment every** field
This is the period after which every increment/decrement happens. The period is in milliseconds and may not be below 10ms.
- **Repeat** checkbox
When the range was completed, repeat the sequence. See also the two buttons below that checkbox
-  button
When the end of the range is reached, the generator will start over with the start of the range
-  button
When the end of the range is reached, the generator will run backwards to the start of the range


Value Switch Generator

The value switch generator is a simple generator that allows switching between two values in a given period.

Use the following elements to configure the value switch generator:




 


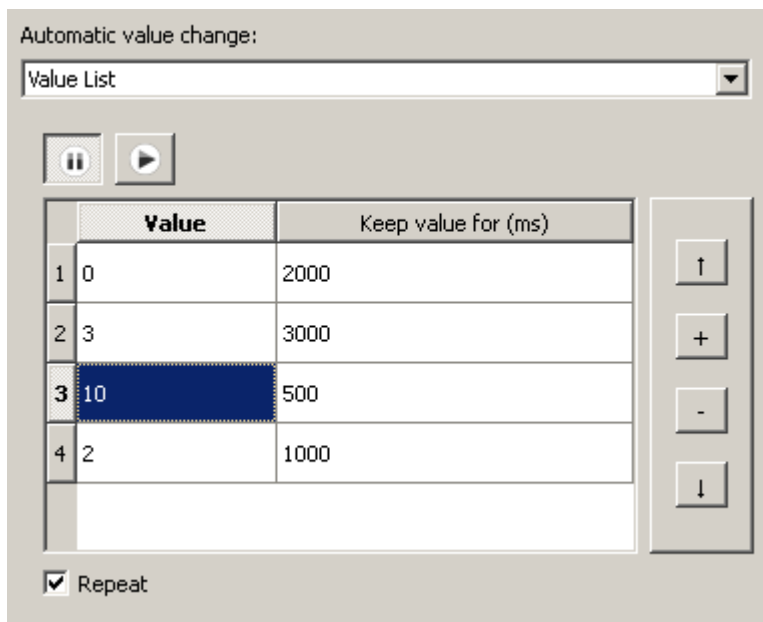-   buttons
Pause or resume the generator (make sure that the rest of the configuration is correct)
- **Switch between** fields
Enter the two values that shall be switched in these two fields
- **every** field
Enter the period with which the values shall be switched. The period is in milliseconds and may not be below 10ms.

Value List Generator



The value list generator can be used to set certain distinctive values to a variable in a defined sequence and at defined times.



Use the following elements to configure the value list generator:

-   buttons
Pause or resume the generator (make sure that the rest of the configuration is correct)
-  button
Move the selected row up in the value list
-  button
Add a new row to the value list
-  button
Remove the selected row from the value list
-  button
Move the selected row down in the value list
- The **value list** itself
To change the value in the list just double click a cell in the left column of the list.
To change the amount of time that a value stays, just double click a cell in the right column of the list.
- **Repeat** checkbox
If the end of the list is reached, the generator will begin again at the top of the list

Random Generator

Automatic value change:

Random

Generate a random value between



0 and 127

Generate new random value every

1000 ms

The random value generator can be used to set random values within a defined range to a variable.

Use the following elements to configure the random value generator:

-   buttons
Pause or resume the generator (make sure that the rest of the configuration is correct)
- **Generate a random value between** fields
Use these two fields to define a range for the random values.
- **Generate new random value every** field
Enter the period in milliseconds in which the random value shall be generated (may not be below 10ms)

9.3.4 Variable Simulation - Variable Properties

The most un-spectacular but sometimes useful view in the variable simulation is the variable properties view.

The view can be shown or hidden via the [tool bar](#)⁶⁷⁰.

Variable Properties	
Name	@SettingsLanguageEnum
Index	0x2200
Subindex	0x1
Data Type	SIGNED8
Access Type	RW
Remanent	Yes
Min Value	0
Max Value	127
Default Value	0


The property table shows the variable properties as they were configured in the tool.

9.3.5 Variable Simulation - Initialization Lists

The initialization lists are part of the advanced view. The advanced view can be shown or hidden via the [tool bar](#)⁶⁷⁰.

Initialization lists are meant to provide an easy way to set values of several variables at once. This can be helpful for initialization purposes, end of line programming or just to test certain scenarios with different value sets.

Note: All initialization lists and their settings will be saved when the Variable Simulation settings are saved.

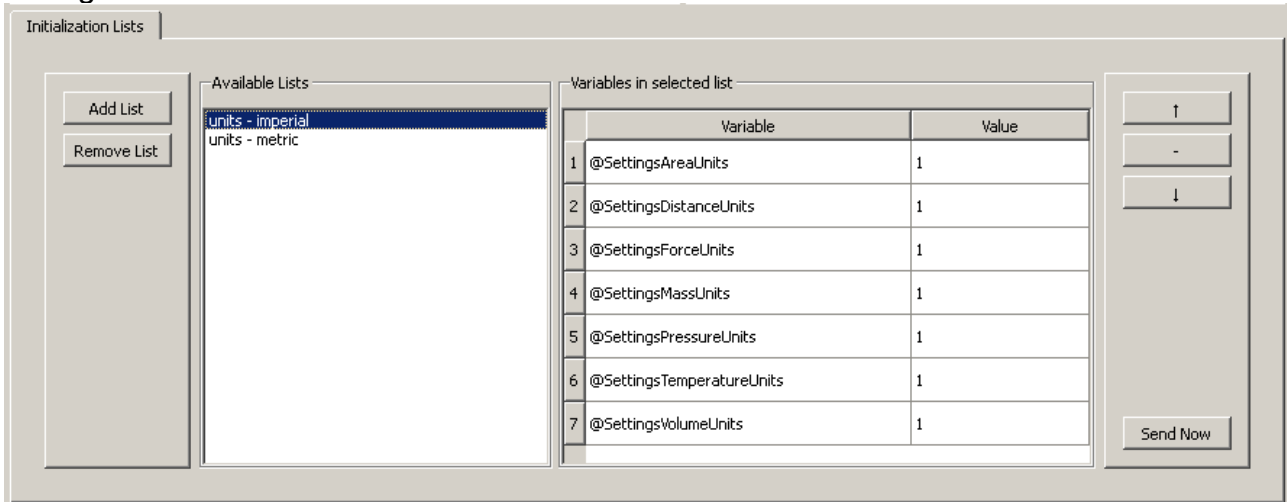

Create and remove initialization lists

To create a list click the **Add List** button on the left of the view. A new list will be generated, the name of the list can be entered directly.

To remove a initialization list select a list and click the **Remove List** button.

Working with variables in the initialization lists

Add variables to a initialization list




Make sure that a initialization list is selected. A variable can be dragged from the [variable tree](#) into the initialization list table (labeled *Variables in selected list*).

After dropping the variable in the table a new row will be created with the variable's name and the current value of that variable.

This also works when multiple variables were selected and dragged & dropped to a list (select multiple variables by holding the CTRL key when clicking variables).

Sorting and removing variables

Three buttons are available with which the list can be sorted or variables can be removed:

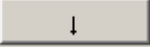-  button:
Select a variable in the initialization list table and press the button to move the selected variable one row **up**
-  button
Select a variable in the initialization list table and press the button to **remove** the variable from the selected initialization list
-  button
Select a variable in the initialization list table and press the button to move the selected variable one row **down**

Changing the value of a variable in the initialization list

Just double-click the value in the table that shall be changed and enter the new value.

Sending an initialization list

Select an initialization list then click the **Send Now** button on the lower right of the view. The variable simulation will send requests for all variables in the list with the configured values to the PClient.

9.3.6 Variable Simulation FAQ

Why is the current value of a variable not updated after changing the value in the simulation?

The reason is a possible wrong setting of the "Overwrite Owner's Value" checkbox in the value operations view. See [here](#) ⁶⁷⁴ for a detailed description.

Why can't I see anything in the variable tree?

If the variable tree is completely empty, the variable simulation has probably lost connection to PClient (see status bar messages).

Make sure that PClient runs. The variable simulation will automatically try to reconnect to the PClient.

The variable tree shows only the owners but no variables

This can be caused by:

- A **filter text** was set but no matching variable was found
- **Show Favorites Only** was selected but no variable was marked as favorite
- **Hide Pre-Defined Variables** was selected but no user defined variables are present in the project
- A combination of the three points above

Why is the checkbox to start the PClient simulation disabled?

This checkbox is disabled if the connection settings were configured to connect to a running PClient via ethernet in the [Simulation Settings](#) ⁶⁶⁰.

Device Software Update

10 Device Software Update

10.1 Project Update



Tutorial video about the Updater

https://www.youtube.com/watch?v=eSW_P0Z3imU

The **Updater** is a small GUI application which allows the user to transfer a project to the device via **CAN bus** or to a **USB drive**.

The Updater has two parts.


One part is just called **Updater** or **HostUpdater**. This is the GUI application which runs on the **PC** and is described here.

The second part is running on the **device** and is called **ClientUpdater**.

How to start the Updater?

The **Updater** can only be started if a project is selected in the project tree. If the condition is achieved, the **tool bar icon** is enabled.

The **tool bar icon** can be found here:

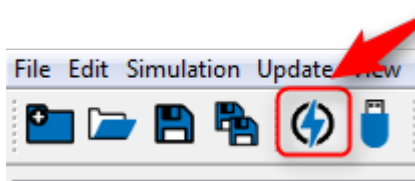


Updater Wizard

When the **Updater icon** in the toolbar is pressed, first the project will be saved, then the **Updater** will be opened, which helps you to transfer the project. It guides you step by step. First the **Start Page** (Wizard 1/3) is shown, where you can choose the transfer mode.

Currently you can choose between 3 update modes:


- [USB update](#)⁶⁸³ and
- [CAN update](#)⁶⁸⁹
- [ETH update](#)⁶⁸²

Start Page

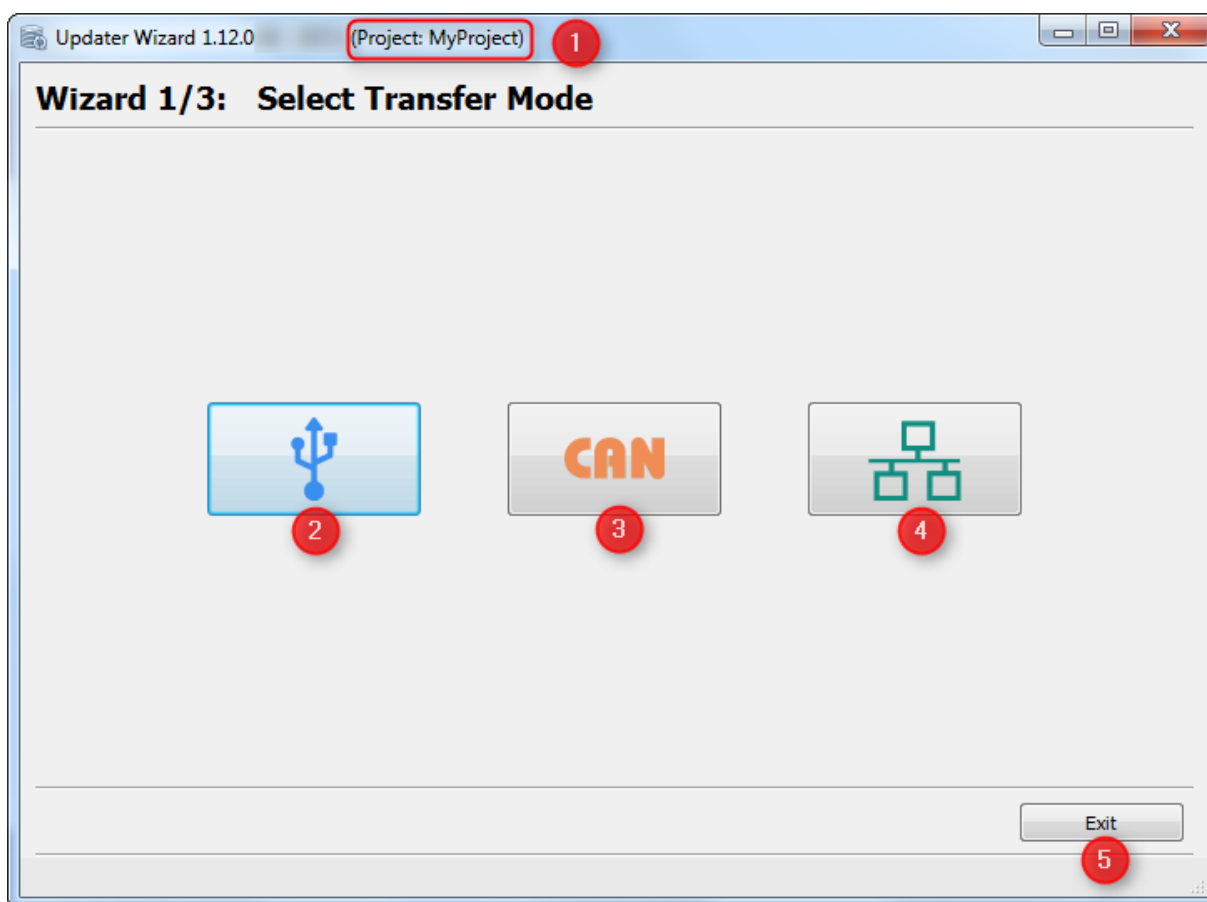**Legend:**

- (1) The application title shows you the name of the project which will be transferred
(Please do always check if the correct project is chosen)
- (2) Start USB update
- (3) Start CAN update
- (4) Start Ethernet update
- (5) Exit application

First we will start with the USB update mode.

	NOTE: The Start Page (Wizard 1/3) will only be shown the first time you opened the Updater . Once a transfer via CAN/Ethernet or USB has successfully finished, the Start Page will be skipped the next time you open the Updater and it will start with the mode you have selected the last time. You can always go back in the dialog to change to a different mode.
---	---

USB Update



If the **USB** button is clicked on the **Start Page**, the **USB Settings Page** is shown. Here you can set the USB drive to transfer the [Project Package](#) to.

USB Settings Page

Updater Wizard 1.12.0 - RELEASE (Project: MyProject)

Wizard 2/3: USB Settings

Select Path

Transfer Settings

Select path to store project package:

1 ☐ Select Path C:/ Browse...

2 ☒ Select Device G:/

Total Space: 1.82 GB / Available Space: 1.37 GB

3

Note: USB auto-detection is active. New drives will be automatically selected.

☐ Edit Device CAN Settings ☐ Edit Device Ethernet Settings

4 Edit User Files...

5 Back 6 Transfer

Legend:

(1) The text box shows the path or USB drive name, the **Project Package** will transferred to. If the application is started for the first time, the standard path "**C:**" is shown. You can edit the text box or choose a path via 'Browse...' button.

⚠	NOTE:
	<p>Please always select the root directory (5, 6) of the USB drive (e.g. "E:\") otherwise the ClientUpdater application on the device won't be able to install the project package.</p> <p>Do NOT create or select any folder on the USB drive.</p> <p>Afterwards accept the dialog with the button "Choose Folder" (7).</p>


- (2) The combo box contains all connected devices of the computer and is automatically selected. So you can easily select the one you want transfer the project. (The selected device will be saved in the 'MainSettings.ini' file of the updater. For all other projects the device will be chosen, too)
When the device is available at program start the 'green check' is visible, otherwise a red cross is shown.
- (3) The dialog has an USB auto-detection, so whenever a new USB drive is plugged-in the new device will be automatically chosen in the device combo box.
- (4) Opens the 'Add User Files' page. The page helps to add separate files which shall be transferred to the device.
- (5) Go back to the **Start Page**
- (6) Start **USB Transfer**.

Edit Device CAN/ETH Settings

If the checkbox is selected a new tab is shown, where the **CAN/ETH Device Settings** can be set. (=> this is only important if you want to prepare to transfer projects via CAN or Ethernet, otherwise you can ignore it)

These settings are important if the CAN or Ethernet update shall be enabled. Please have a look at the [CAN Checklist](#)⁷⁰⁹ in this case.

Please have also a detailed look at the chapter [How to configure CAN parameters](#)⁶⁹⁴

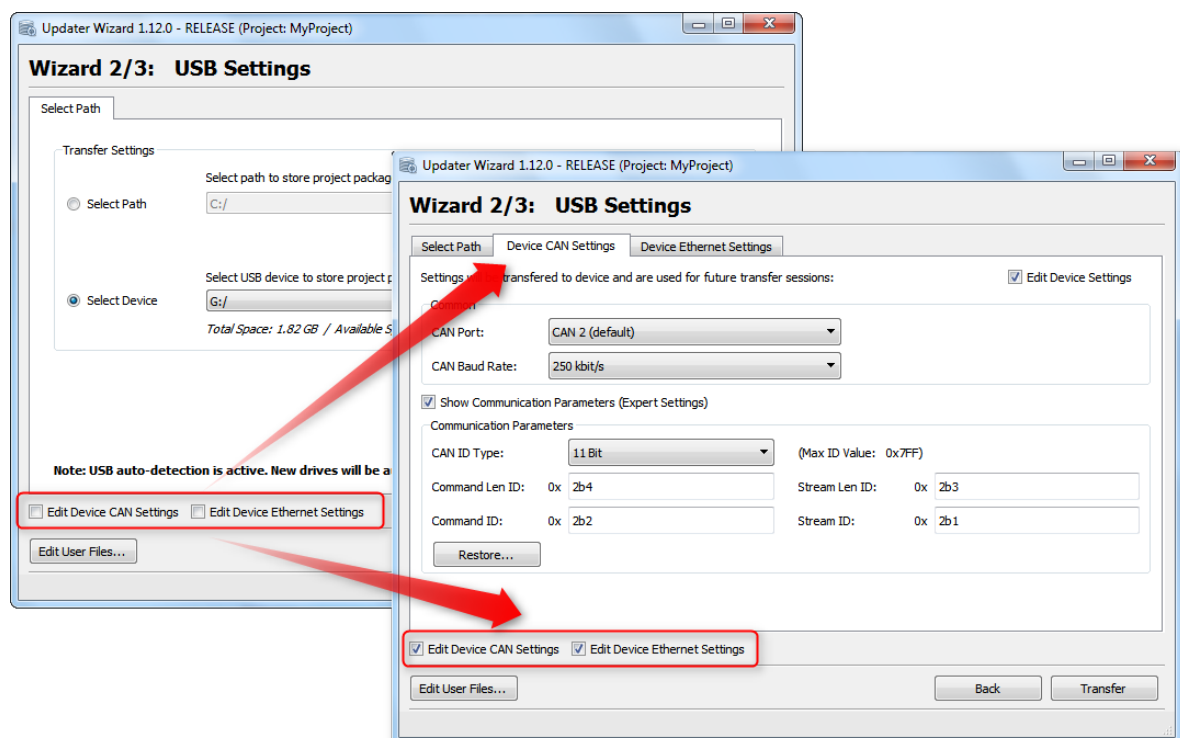

Legend:


- (1) If the checkboxes are checked, the tab "Device CAN Settings" and/or "Device Ethernet Settings" are opened.
- (2) In these tabs it is possible to edit the CAN/Ethernet settings for the device.

USB Transfer Page

When the **Transfer** button is pressed, this page appears and shows the current USB transfer progress and its result.


The USB Transfer is divided in 3 steps.

1. Creating Project Package,
2. Connecting to the USB drive and
3. Transferring the project.

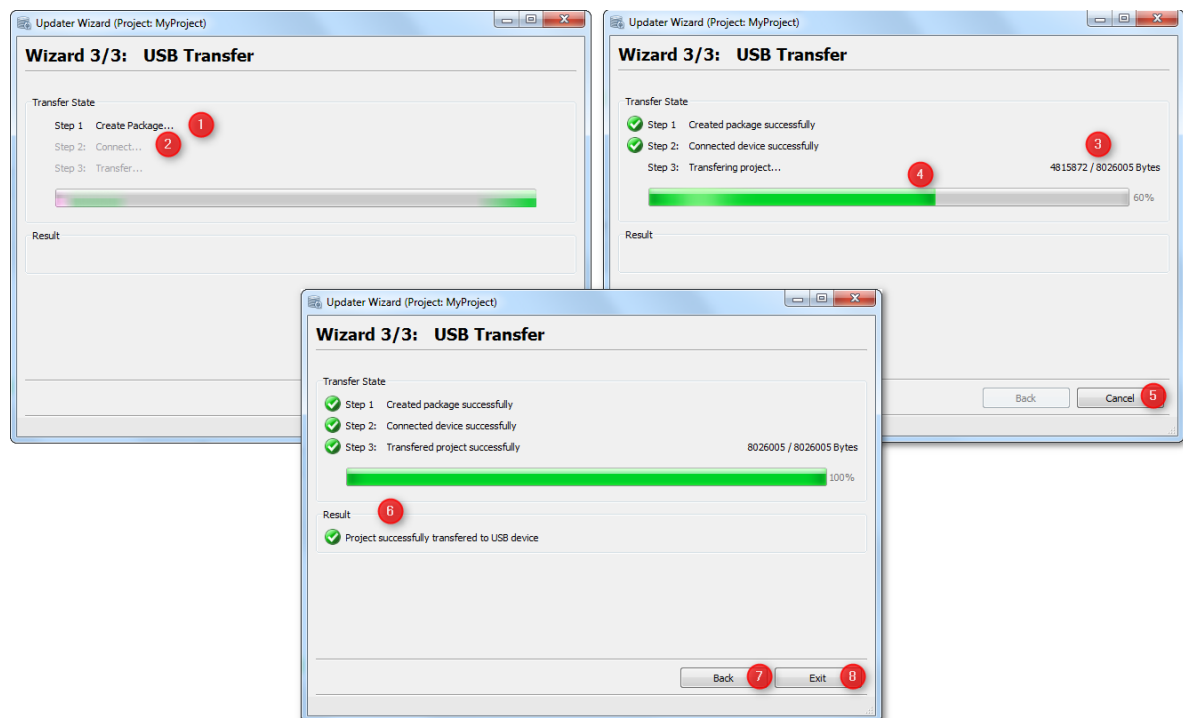

Legend:

- (1) Shows status of create package.
 - (2) Shows if USB drive is successfully connected.
 - (3) (4) Shows current transfer progress in percentage and bytes.
 - (5) When Transfer is started, it can be aborted with the **"Cancel"** button.
 - (6) Shows if the project package has been successfully created on the USB drive.
 - (7) Button to go back to the USB Settings page. (During transfer, **"Back"** button is disabled)
 - (8) Exit application. (During transfer **"Exit"** button is renamed to **"Cancel"**)
- If the application is closed via **"X"** button during the active transfer, a dialog is shown with a warning that current transfer will be aborted.

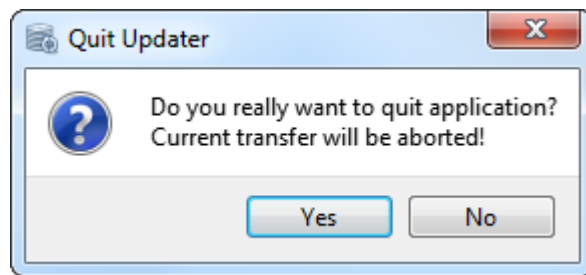

Step 1: Creating Project Package

This step shows if the Project Package was created successfully.

Step 2: Connecting device

This step shows if the USB device is connected successfully.

Step3: Transferring project

This step shows the progress of the project transfer to the USB drive.

If the transfer fails an error code and error text is shown under the progress bar.

Otherwise a message (6) is shown that the project was successfully transferred to the USB drive.



NOTE 1:

If the project package was successfully transferred to the **USB drive**, a new directory "**updater**" has been created. It contains **2 files**, a file called "**mmscript.xml**" and the project package file, here called "**MyProject.ud4**".

Once the **Project Package** was transferred to the **USB drive** successfully, the USB drive has to be plugged into the USB port of the **device** to update the project on the device.

The project will only be installed on the device if the variable [@enableUpdater](#)⁷⁰⁸ is set to **0x1** or **0x3**. The default value is **0x1**.



NOTE 2:

The next time you open the **Updater** for the same project, the last used path or USB drive will be set again.

The path or USB drive is saved in [HostSettings.ini](#)⁷⁰⁷ file.


The USB drive is **not unmounted** when the project is transferred to the USB drive.

Error Codes during Transfer

If the **USB Transfer** has not finished properly, an **Error Code with Error Message** is shown on the **USB Transfer Page**. This shall help to identify the issue quickly.

In these examples the **Step 2: Transferring project...** shows an error:

1. Unable to create folder on USB drive

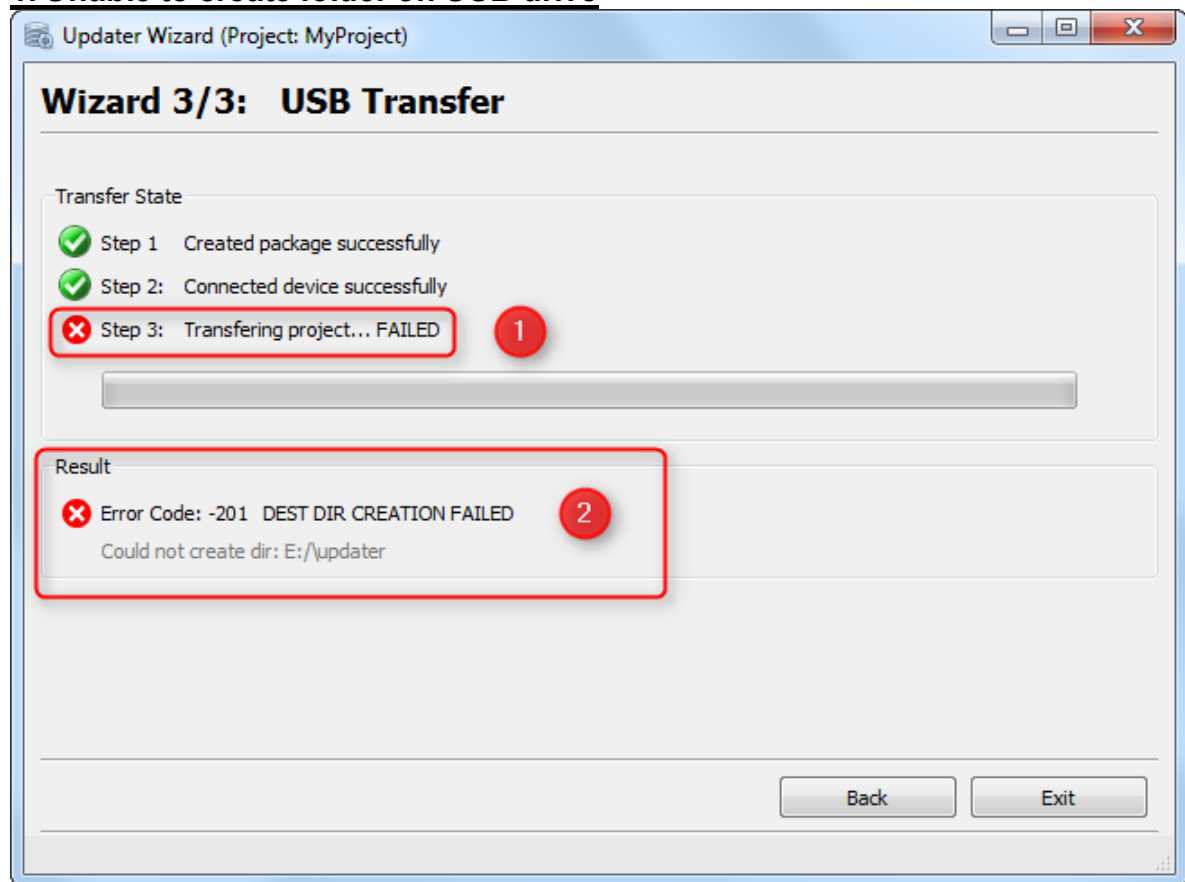

Legend:


(1) **Step 2:** The Transfer to USB drive failed.

(2) The **Error Code** (here: **-201**) is shown under the progress bar. After the code the appropriate **Error Message** is shown (here: **DEST DIR CREATION FAILED**).

In this case the **Updater** could not write the **Project Package** to **USB drive**. Possible reason for this error is:

- USB drive was disconnected during transfer.

2. Unable to write file on USB drive

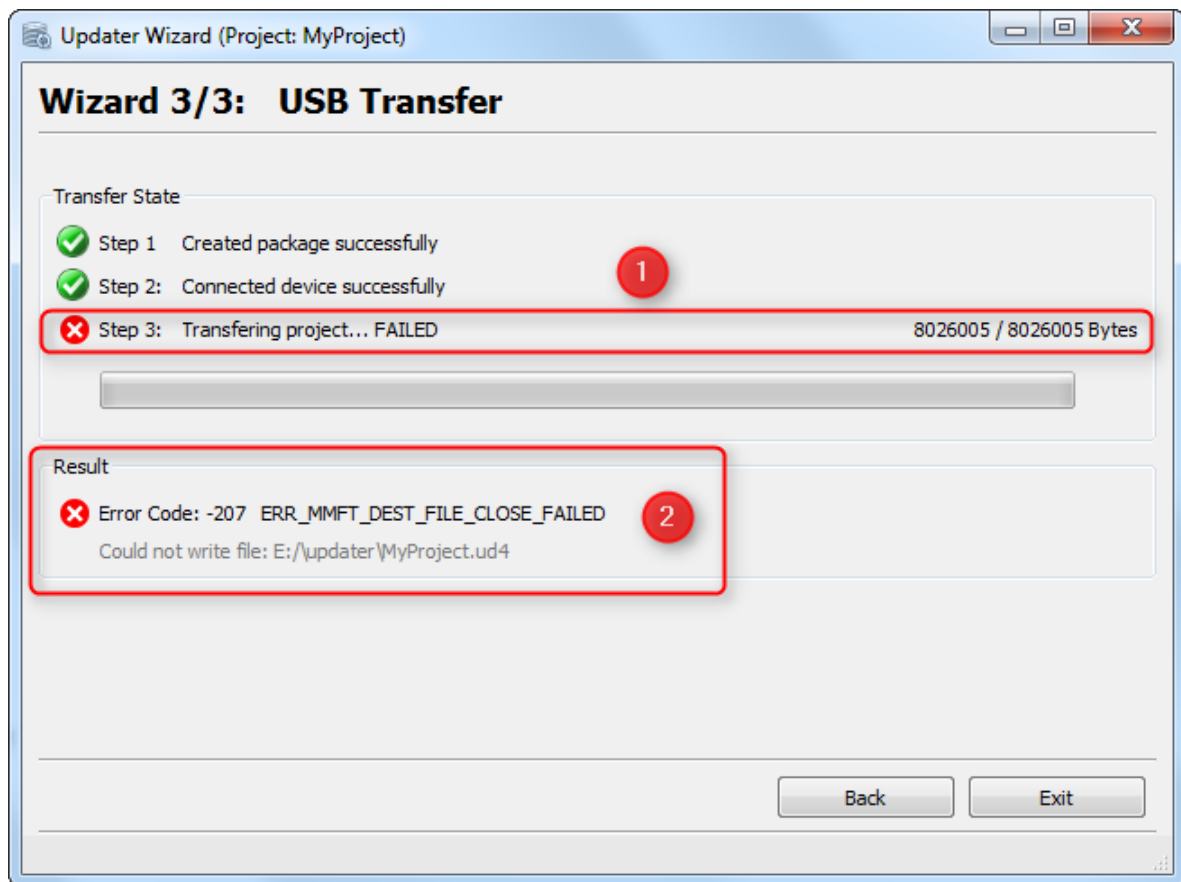

Legend:

(1) **Step 2:** The Transfer to USB drive failed.

(2) The **Error Code** (here: **-207**) is shown under the progress bar. After the code the appropriate **Error Message** is shown (here: **ERR_MMFT_DEST_FILE_CLOSE_FAILED**).

Additionally an detailed message is shown what exactly went wrong: **Could not write file: E:\updater\MyProject.ud4**

In this case the **Updater** could not write the **Project Package** to **USB drive**. Possible reason for this error is:

- USB drive has not enough disk space left.

CAN Update



If the **CAN** button is clicked on the **Start Page**, the **CAN Settings Page** is shown. Here you can modify the CAN settings for the project transfer. Afterwards you can start the transfer.

Disclaimer about using CAN


The **CAN Update mode** is a little more complex than the **USB Update mode**. Many things have to be considered. Otherwise the transfer won't work or the **CAN network** can be **damaged**.

1. The **ClientUpdater** uses as default **CAN Port 2** on the device. If you want to use instead **CAN Port 1** you can change the port [here](#)⁶⁸².
If the **ClientUpdater** uses the same CAN Port as a **CAN Protocol** in the project, please always check that the **Baud rate** for the **ClientUpdater** is the same as the one in the used **CAN Protocol** in the project.
2. To transfer the project between **HostUpdater** and **ClientUpdater**, **4 CAN IDs** will be used. These **4 CAN IDs** are necessary and will all be used.
The IDs can be changed [here](#)⁶⁸². Please check, in case another protocol is running on the same CAN Port, that the CAN IDs won't be used by any other entity connected to the port.
3. The **ClientUpdater** only enables the **CAN Interface** if the value of the pre-defined variable [@EnableUpdater](#)⁷⁰⁸ has been set to **0x2** or **0x3**. So check if the variable is set properly in the project (e.g. in a script for the event OnProjektInit).
4. The first project update has to be done via the [USB drive](#)⁶⁸³. With this update the new CAN Settings for the device will be set. Only then the CAN interface can be enabled and will not damage your CAN network.


Please **follow** these steps **carefully**.

CAN Disclaimer Page

The **CAN Disclaimer Page** is only shown once in a Tool session when the **CAN** button on **Start Page** is clicked.

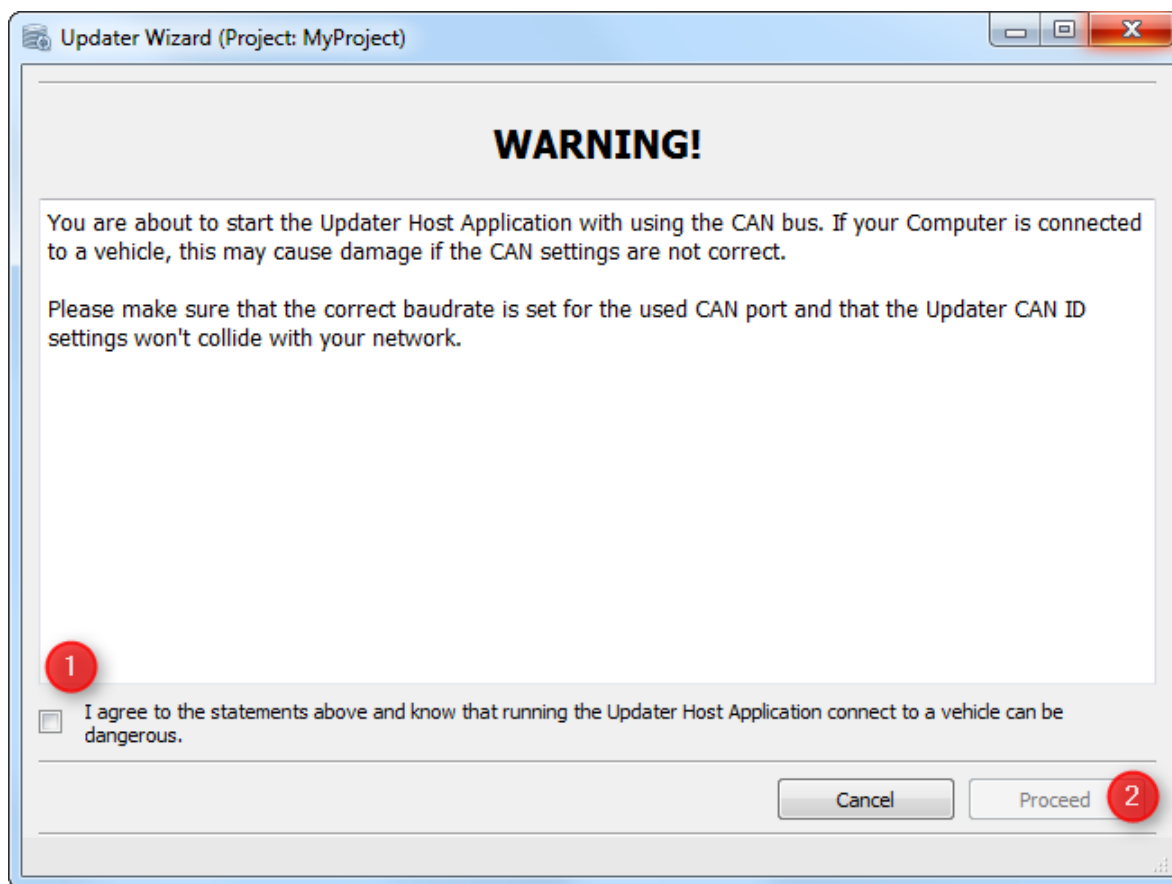
**Legend:**

- (1) When the **agree checkbox** is checked, the **Proceed** button will be enabled.
- (2) If **Proceed** button is pressed you will see the **CAN Settings Page**.
- (3) With **Cancel** you get back to **Start Page**.

	<u>NOTE:</u>
When the Tool is started and you want to transfer a project via CAN bus you have to accept the CAN Disclaimer once. The next time in this Tool session the CAN Disclaimer will not be visible again.	

PC CAN Settings Page

These settings will be used for the **current project transfer**. The settings shown here have to be same as they were configured for the device, otherwise the transfer will not work.

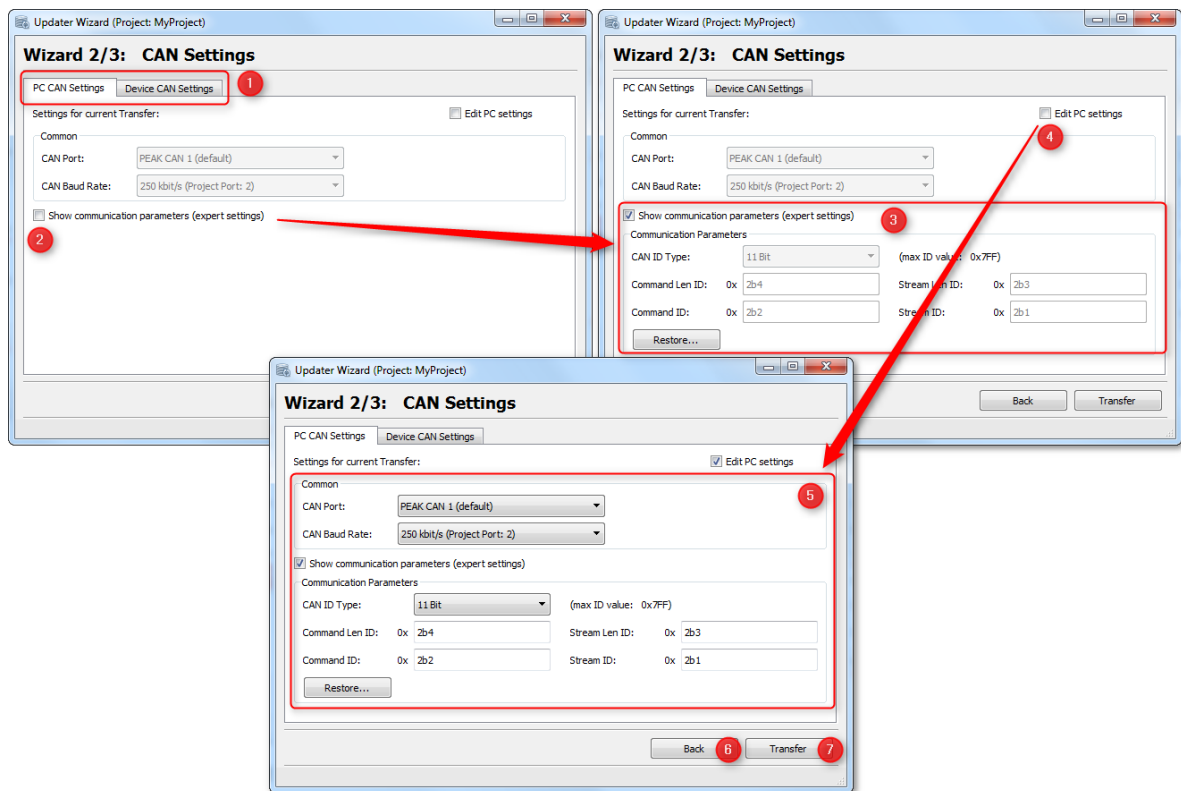

Legend:

- (1) With the **Tabs** you can choose between **PC** and **Device CAN Settings**.
- (2) **Show communication parameters (expert settings)** shows the communication parameters (3).
- (4) **Edit PC settings** enables the settings mask. If it is checked, all parameters can now be edited (5).
- (6) Back button to go back to **Start Page**.
- (7) Starts **CAN Transfer** with current settings.

PC CAN Parameter

1. Common Settings

☐ **CAN Port**

- Port Number of the CAN dongle. Currently **only PEAK CAN dongles** are supported on **Port 1/2**.

☐ **CAN Baud Rate**

- **Baud Rate** in [kbit/s]. The Project Package will be transmitted with this Baud Rate
- Allowed Baud Rates are (20, 50 , 83.333, 100 , 111.11, 125, 250 ,500 ,1000)

1. Expert Settings

☐ **CAN ID Type**

- Setting **CAN ID Type** for IDs. Either **11 Bit** or **29 Bit**.

☐ **Command Len ID**

- ☐ **Command ID**
- ☐ **Stream Len ID**
- ☐ **Stream ID**

- These for IDs will be used for CAN communication between **HostUpdater** on PC and **ClientUpdater** on device.
- It is important that these IDs are set properly, otherwise the connection or transfer can not be established.
- Each ID has to be in the valid range and must be unique.




NOTE (DANGER):

Please make sure that the **CAN IDs** which will be used for the **CAN Transfer** are **not used** in the **project** and **are not used** from **any other entity** on the CAN bus.

Device CAN Settings Page

These settings will be **transmitted to the device** in **this transfer session**. The transmitted settings are **available** after the **update has successfully finished**.

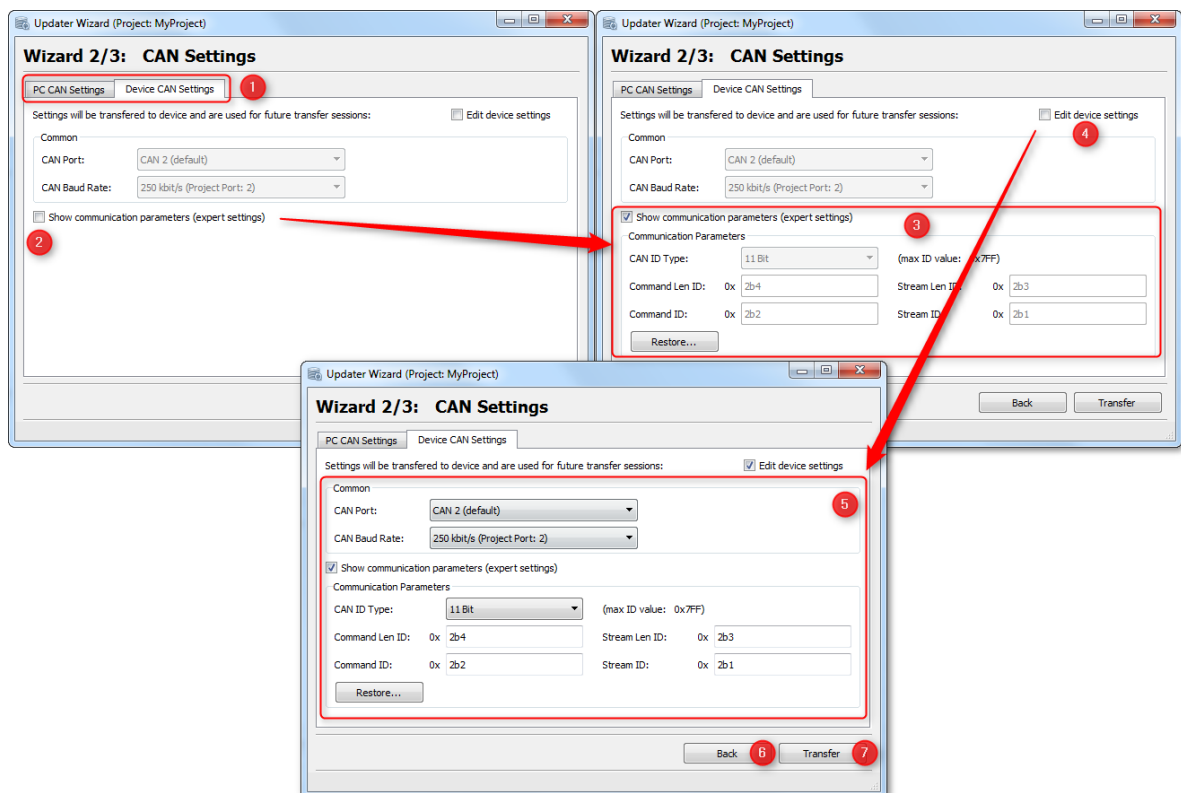

Legend:

- (1) With the **Tabs** you can choose between **PC** and **Device CAN Settings**.
- (2) **Show communication parameters (expert settings)** shows the communication parameters (3).

(4) **Edit device settings** enables settings mask. If it is checked all parameters can now be edited (5).

(6) Back button to go back to **Start Page**.

(7) Starts **CAN Transfer** with current settings.

Device CAN Parameter

1. Common Settings


☐ **CAN Port**

- Choose the CAN Port for using project updates. Either **CAN 1** or **CAN 2** can be used.

☐ **CAN Baud Rate**

- Baud Rate** in [kbit/s]. HostUpdater will use this Baud Rate for project updates.
- Allowed Baud Rates are (20, 50 ,83.333, 100 111.11,,125, 250 ,500 ,1000)

1. Expert Settings (same as [PC Expert Settings](#) ⁶⁹¹)

	<p>NOTE:</p> <p>The CAN Settings (PC and device) are saved when the project transfer has successfully finished.</p> <p>Next time you open the Updater for the same project, the last used CAN Settings will set again.</p> <p>The CAN Settings are saved in HostSettings.ini ⁷⁰⁷ file.</p>
---	---

How to configure CAN Parameters

When the Updater is started for a project the first time the **default values** will be set for the **CAN Parameters**:

Default CAN Parameters:

	PC	Device
CAN Port	PEAK CAN 1	CAN 2
CAN Baud Rate	250 kbit/s	[250 kbit/s] Project dependent
CAN ID Type	11 Bit	11 Bit
Command Len ID	0x2b4	0x2b4
Command ID	0x2b2	0x2b2
Stream Len ID	0x2b3	0x2b3
Stream ID	0x2b1	0x2b1

CAN Port settings

1. PC

Port of **PEAK CAN dongle (Port 1/2)**.

2. Device

As default the **CAN Port 2** is used for CAN updates on the device. But it is also possible to use **CAN Port 1**. Simply set the **CAN Port** combo box in **Device CAN Settings** appropriate.

CAN Baud Rate setting

During the start, the **Updater** reads the project file and checks if **CAN Protocols** are used and on which **CAN Ports** the protocols are running.

If protocols are used, the appropriate baud rate is read. If a protocol uses the same port as the **Updater**, the appropriate baud rate is set in the **Device CAN Settings** (also for the first start of the **Updater**).

The baud rate combo box shows whether a baud rate is configured for a CAN Port which uses a CAN Protocol. The appropriate baud rate then gets an extension like this "**250 kbit/s (Project Port: 2)**"

The **Updater** usually should always set the baud rate for **PC** and **device properly** and it is not necessary to set them manually. So please be careful if you change the baud rate.

If the **Updater** uses a **CAN Port** which is not used by other protocols, the baud rate is set to **250 kbit/s as default**, but in this case you can set a preferred Baud rate by yourself.

CAN ID Type setting

Here you can define whether **11 Bit** or **29 Bit CAN IDs** shall be used for the CAN communication.

For **11 Bit CAN IDs** all values between **0x0 - 0x7FF** are allowed.

For **29 Bit CAN IDs** all values between **0x0 - 0x1FFF FFFF** are allowed.

Please check the **CAN IDs** after updating the **CAN ID Type**.

CAN ID settings (Command Length ID, Command ID, Stream Length ID and Stream ID)

These **IDs** will be used for the **CAN communication** between the **HostUpdater** and **ClientUpdater**.


Each **ID** has to be **valid** (in the range of the **CAN ID Type**) and **unique**.

If the **IDs** are **not valid**, the **Transfer** button is **disabled**.

It is very important that the configured **IDs** won't be used by other entities which also use the same CAN bus, otherwise the project update process won't work properly and/or other entities won't work properly.

Restore CAN Settings

With the button "**Restore...**" you can restore the CAN parameters for PC or Device

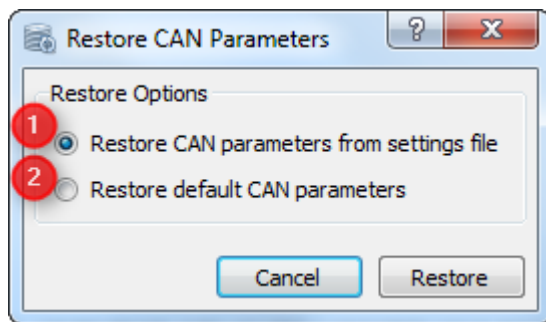


You can choose between **2** options:

- (1) Restore CAN parameters from settings file. This option can be used to restore the last working CAN settings. The settings will be restored from the HostSettings.ini file.
- (2) Restore default CAN parameters. This option can be used to restore the factory default CAN settings. Could be reasonable if the device was updated with the latest OS.

CAN Transfer Page


The CAN Transfer Page shows the current transfer progress and if the current transfer finished successfully or with an error.

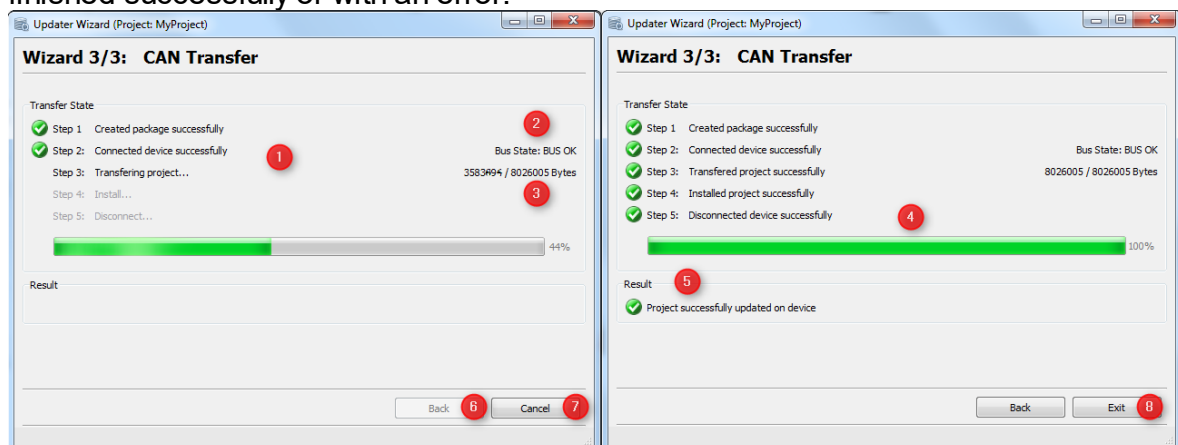

Legend:

- (1) On the left side you can see the current step which is performed. Last Step with black font color => current performed step (here Transferring Project), grey font color steps which have not been performed yet.
- (2) Shows the current **CAN BUS State** (States are: **BUS_OK**, **BUS_LIGHT**, **BUS_HEAVY** and **BUS_OFF**)
- (3) Transferred Bytes and Project Package size. (4) Progress bar with transferred bytes in percentage.
- (5) Shows the result of the Transfer. If the transfer fails, an error code and error message are shown.
- (6) **Back** button which is disabled during active transfer. When transfer finishes, the button is enabled.
- (7) **Exit/Cancel** button. During transfer button is renamed to "**Cancel**". When the transfer finishes, the button is renamed to "**Exit**".

If the application is closed via the "X" button during active transfer, a dialog is shown with a warning that the current transfer will be aborted.

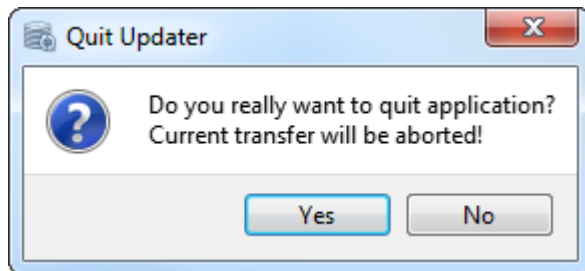

The Transfer is divided in **5 Steps**:

1. **Creating Project Package** => Creates the Project Package which is transmitted.
2. **Connecting** => Tries to connect the device via CAN bus.
3. **Transferring** => Transfers the Project Package
4. **Installing** => Installs the Project Package on the device
5. **Disconnecting** => Disconnects device.

If a step has finished successfully, a **green check mark** is shown and the next step is starting.

If a step fails, a **red x** is shown and the update progress stops. In this case an **error code with error text** is shown.

The current step is always shown in bold font (highlighted).

Step 1: Creating Project Package:

It can take **several seconds** until the [Project Package](#)⁷⁰⁸ is created.

If this step fails, an error code with error text is shown in the GUI.

Step 2: Connecting device

In this step the **HostUpdater** tries to establish a connection to the **ClientUpdater**.

The **HostUpdater** awaits a reply within **10 seconds**.

This step can be aborted by pressing the **Cancel** button.

Step 3: Transferring project

In this step the **HostUpdater** sends the **Project Package** to the **ClientUpdater**. If the connection is interrupted for more than **10 seconds**, the transfer is aborted.

This step can be aborted by pressing the **Cancel** button.

If the **CAN transfer** does not work properly, please have a look at the chapter **FAQ: Why do the CAN Transfers not work?**

Step 4: Installing project

The transferred **Project Package** will be installed in this step. This step will automatically start on the device when **Step 3** has successfully finished.

Step 4 continues on the device, even if the CAN connection is interrupted after **Step 3** or during **Step 4**.

This step **CAN NOT** be aborted by pressing the **Cancel** button. Once the install step has started on the device, it will keep running until it is finished.

Don't disconnect the device from power supply during Step 4, otherwise the project is not installed properly and will probably not start.

If the CAN Transfer does not work properly please have a look at the chapter [FAQ: Why does the CAN Transfer not work?](#)⁷¹⁶

Step 5: Disconnect device

This step disconnects the **HostUpdater** from **ClientUpdater**.


If the CAN connection is interrupted, the ClientUpdater will automatically disconnect itself after **3 seconds**.

Afterwards the project is starting on the device.

Error Codes during Transfer

If the CAN Transfer does not work properly, an **Error Code with Error Message** is shown on the **CAN Transfer Page**. This shall help to identify the issue quickly.

In this example, the **Step 2: Connecting** device runs into a **time out**:

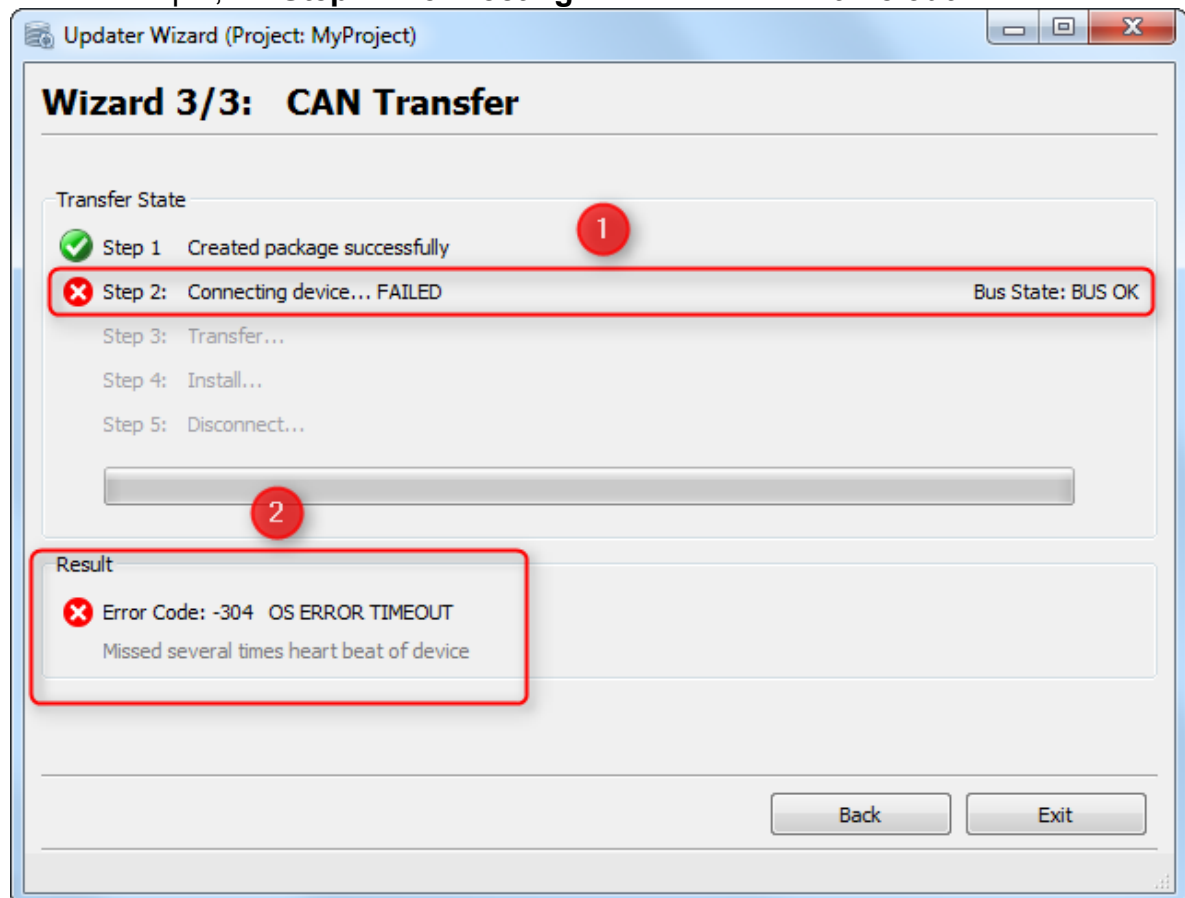**Legend:**

(1) **Step 1**: The connection process failed and a **red x** icon is shown.

(2) The **Error Code** (here: **-304**) is shown under the progress bar. After the code, the appropriate **Error Message** is shown (here: **OS ERROR TIMEOUT**).

In this case the **HostUpdater** gets no response from the **ClientUpdater**. Possible reasons for this error are:

- The **ClientUpdater** is not running on device
- Pre-defined variable **@EnableUpdater** is not set properly
- **CAN IDs** are not set properly.
- **NOTE**: Bus State shows **BUS OK** which indicates that the baud rate is set properly. If Bus State shows **BUS HEAVY**, **BUS_LIGHT** or **BUS OFF** it indicates that the baudrate is not set properly.

Other popular Error Codes are:

- **(- 1) UD_FAILURE:** It seems an unexpected error occurs. Just try again, and/or restart the HostUpdater and ClientUpdater (device reboot).
- **(-22) DEVICE MODEL MISMATCH:** It seems the device model name of the project does not match with the device model name of the device connect on the CAN bus.
- **(-27) ACTIVE CAN INTERFACE:** ClientUpdater has been already connected via CAN. If the connection is broken during transfer, please wait a few seconds before you try again to transfer the project.
- **(-42) OPEN PORT FAILED:** The HostUpdater can not open the CAN Interface. (E.g. PEAK CAN Dongle is not plugged-in)
- **(-408) BUS ERROR:** It seems the CAN network is used with different baud rates.

Ethernet Update

If the **Ethernet** button is clicked on the **Start Page**, the **Ethernet Settings Page** is shown. Here you can modify the Ethernet settings for the project transfer.

Afterwards you can start the transfer.

Disclaimer about using Ethernet

The **Ethernet Update mode** is a little more complex than the **USB Update mode**. Many things have to be considered. Otherwise the transfer won't work.


1. To transfer the project between **HostUpdater** and **ClientUpdater**, **2 Ports** will be used and must be configured properly.
2. The **ClientUpdater** only enables the **Ethernet Interface** if the value of the pre-defined variable [@EnableUpdater](#)⁷⁰⁸ has been set to a value between **0x4** and **0x7**. So check if the variable is set properly in the project (e.g. in a script for the event OnProjektnit).
3. The first project update has to be done via the [USB drive](#)⁶⁸³. With this update the new Ethernet Settings for the device will be set.

Please **follow** these steps **carefully**.

PC Ethernet Settings Page

These settings will be used for the **current project transfer**. The settings shown here have to be same as for the connected device, otherwise the transfer will not work.

Scan Network (Broadcast):

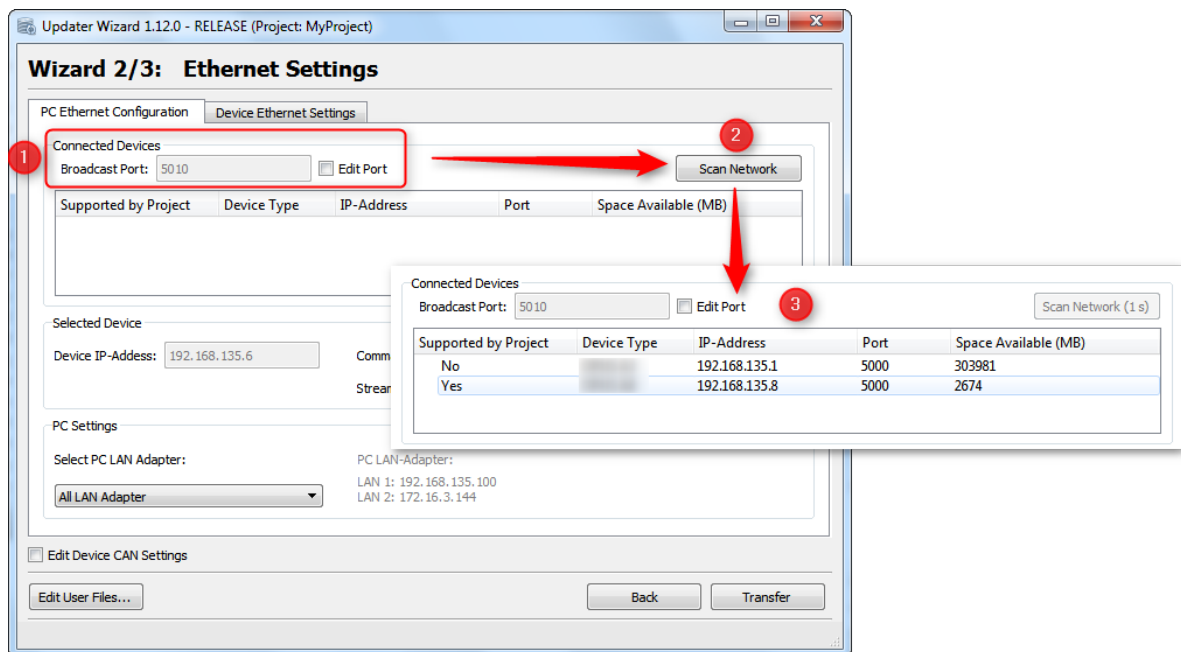

Legend:

- (1) When the ethernet interface of an device is activated, it is possible to scan the network for that device. For the communication between Host and Client the **'Broadcast Port'** is used. When Host and Client are using different ports the communication won't work.
- (2) When the correct **'Broatcast Port'** is configured, it is possible to search after devices with the button **'Scan Network'**
- (3) The list box shows all available devices in the network with some details.

PC Ethernet Parameter

1. Broadcast Settings:

☐ **Broadcast Port**

- Port Number for Broadcast message to find connected devices.

☐ **Select PC LAN Adapter**

- When the PC has more than 1 LAN Adapter you can select the Adapter (**Device Net**), where the Broadcast messages should be sent to.

2. Selected Device Settings

☐ **Device IP-Address**


- Here you can configure the IP-Address of the device, where the project package shall be sent to.
- If a device from the **Connected Devices List** is chosen, the IP-Address will be set automatically.

☐ **Command Port**

☐ **Stream Port**

- These Ports will be used for Ethernet communication between **HostUpdater** on PC and **ClientUpdater** on device.
- If a device from the **Connected Devices List** is chosen, the Ports will be set automatically.
- Only the **Command Port** can be edited, the **Stream Port** will be set automatically. (**Command Port + 1**)


Device Ethernet Parameter

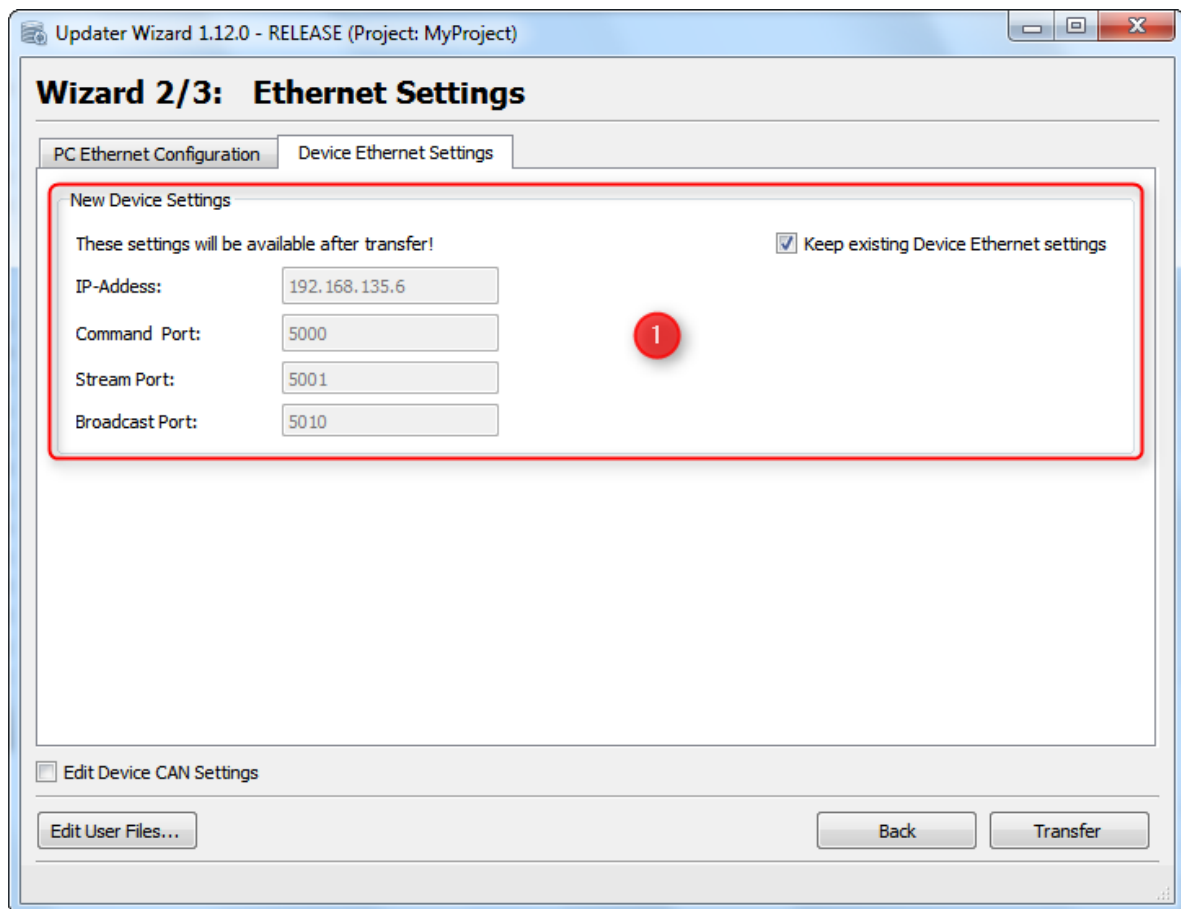

- **New Device Settings:**
 - ☐ ***New Device IP-Address***
 - The new IP-Address for the device.
 - ☐ ***Command Port***
 - ☐ ***Stream Port***
 - New Port Numbers, which will be used for Ethernet communication between **HostUpdater** on PC and **ClientUpdater** on device.
 - Only the **Command Port** can be edited, the **Stream Port** will be set automatically. (**Command Port + 1**)
 - ☐ ***Broadcast Port***
 - New Broadcast Port, which is used to scan the network for connected devices.
 - ☐ ***Keep existing Device Ethernet settings***
 - Keep this checkbox enabled, when you don't want to change the ethernet settings for a device.

Ethernet Transfer Page

The Ethernet Transfer Page shows the current transfer progress and if the current transfer finished successfully or with an error.

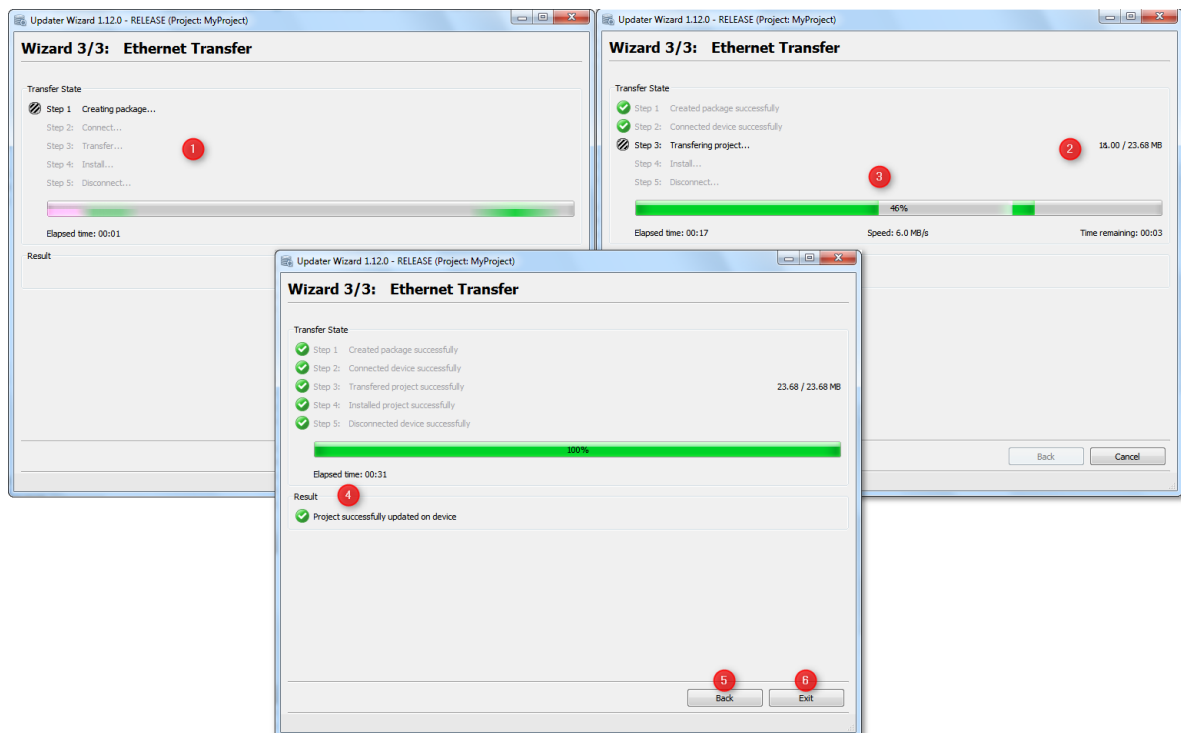

Legend:

(1) On the left side you can see the current step which is performed. Last Step with black font color => current performed step (here Transferring Project), grey font color steps which have not been performed yet.

(2) Transferred Bytes and Project Package size. (3) Progress bar with transferred bytes in percentage, Elapsed Time, Transfer-Speed and Time Remaining.

(4) Shows the result of the Transfer. If the transfer fails, an error code and error message are shown.


(6) **Back** button which is disabled during active transfer. When transfer finishes, the button is enabled.


(7) **Exit/Cancel** button. During transfer button is renamed to "**Cancel**". When the transfer finishes, the button is renamed to "**Exit**".

If the application is closed via "**X**" button during active transfer, a dialog is shown with a warning that the current transfer will be aborted.

Adding User Files to Project Package


On the pages **USB Settings**, **CAN Settings** and **Ethernet Settings** it is possible to open the page '**Edit User Files**'. On this page you can add additional files, which shall be transferred to the device with the current project.

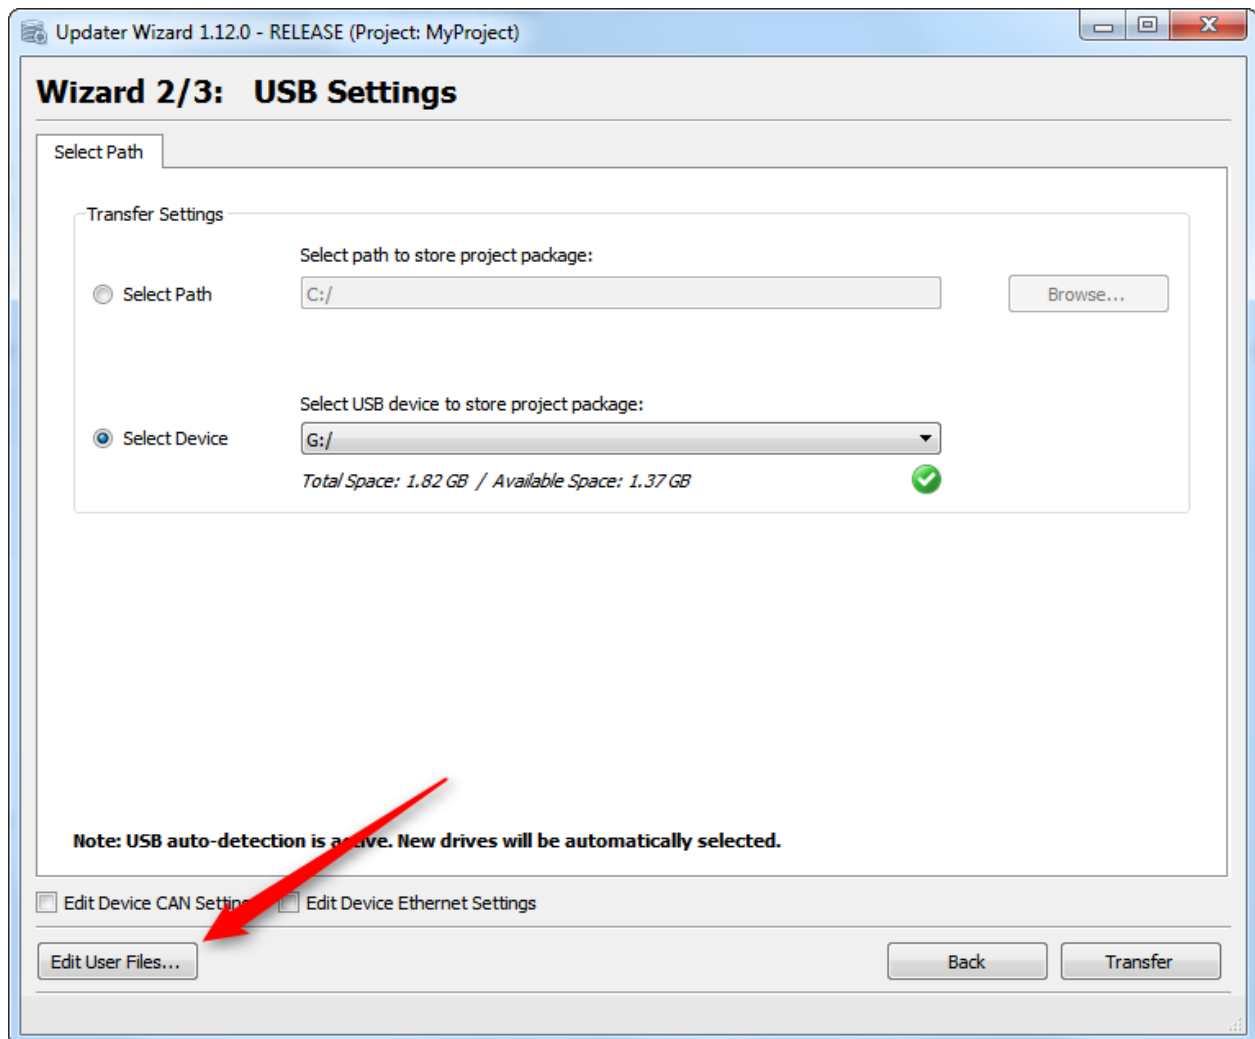

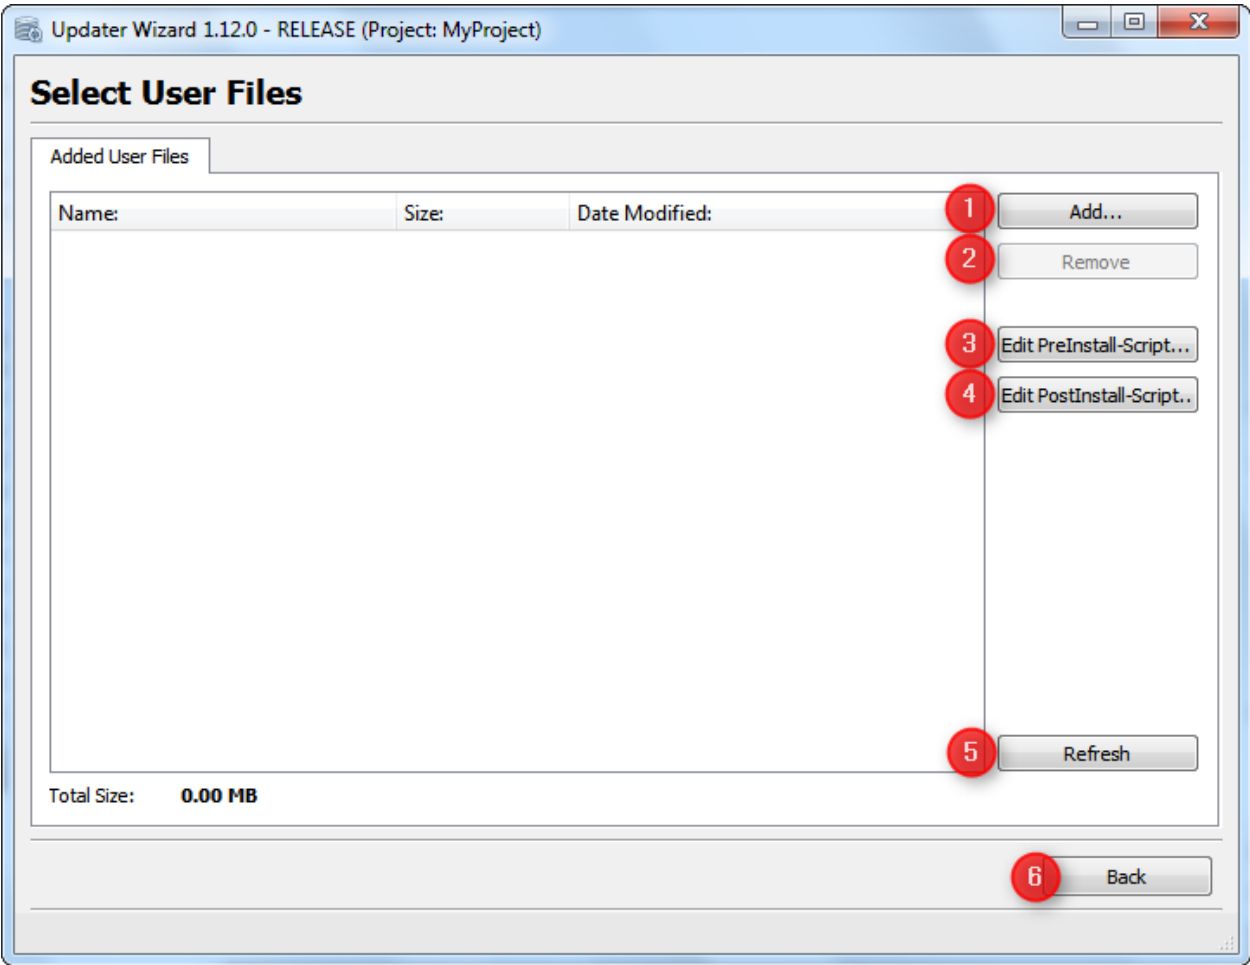

Legend:

(1) Add.. button opens a file browser to selecte a file which shall be added to the project package.

	NOTE: The user is responsible to delete unused files manually (by console or by using the "post-/preinstallscrip.sh")
---	---

(2) Remove button removes selected files from the list. (Only activated if at least one file is selected in the list).


(3/4) Opens the **Pre/Post-Install** scripts in the default application for shell scripts.

(5) If the file list is not updated properly, you can refresh the view manually with **Refresh** button.


(6) Back goes back to the last settings page.

Add Files


When the **Add...** button is clicked, a File Chooser dialog is opend where you can select a file which shall be added to the user files folder.

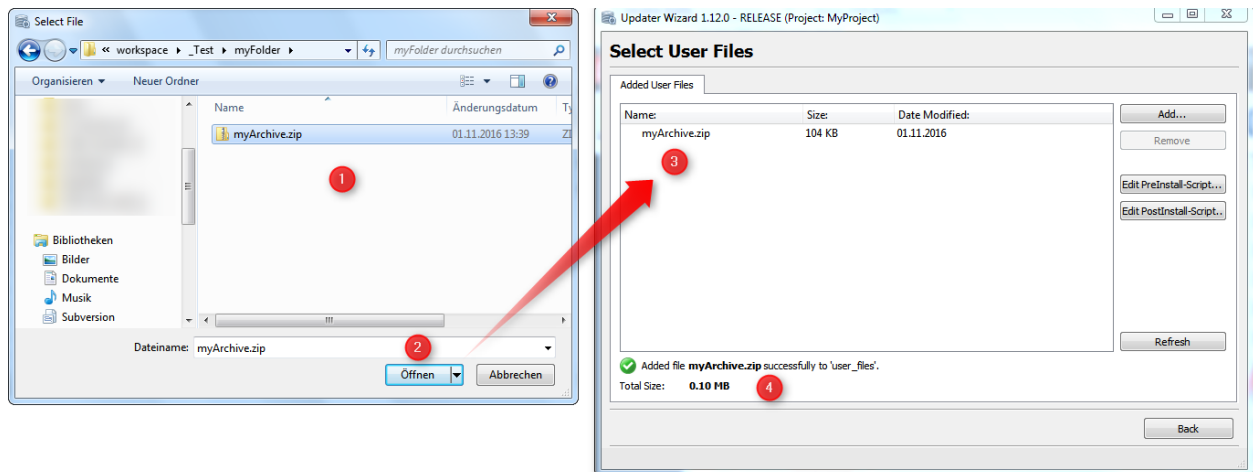
**Legend:**

- (1) Select a file which shall be added to project package.
- (2) Click on **Open** to add the file.
- (3) The file list view shows all files which are added to the **user_files** folder.
- (4) The green check shows that the file could be copied to the folder, and below the size of all files shown.

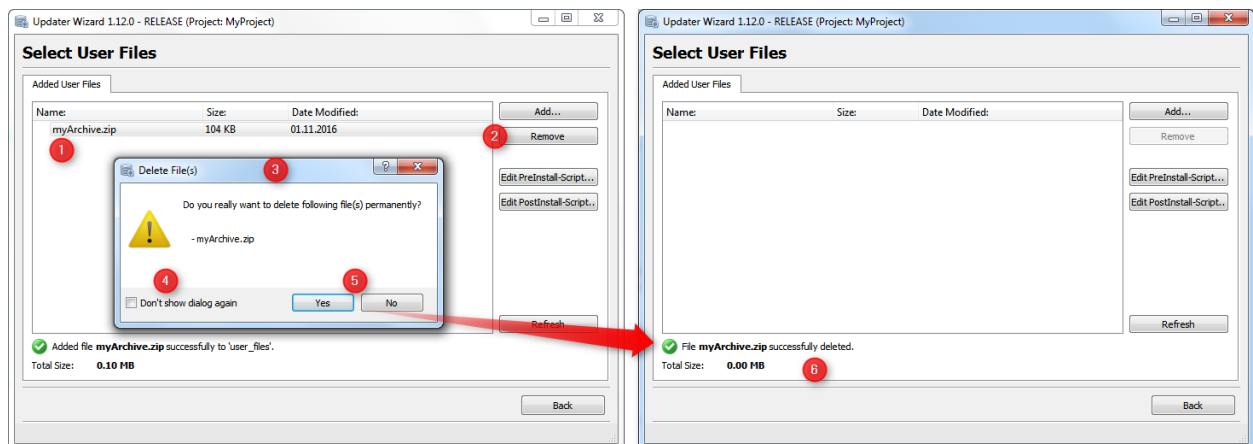Remove Files**Legend:**

- (1) Select a file which shall be removed from **user_files** folder.
- (2) Click on **Remove** button.
- (3) A dialog **Delete File(s)** is shown, where you have to confirm the delete operation.
- (4) If the dialog shall not be shown again you can check the checkbox **Don't show dialog again**.
- (5) With click on **Yes** the file will be deleted, click on **No** closes the dialog without an action.
- (6) After click on **Yes**, the file will be deleted and the files view is updated.

	<p><u>NOTE:</u></p> <p>All files in the user_files folder will be copied to the directory /op/pclient/projekte/default_prj on the device.</p>
---	---

	NOTE:
	With the postinstall_script.sh you can, it is possible to edit the file after download process.

Setting Files

PC (HostSettings.ini)

The **HostSettings.ini** file saves the settings (**USB Settings**, **Device CAN Settings** and **Device Ethernet Settings**) which can be changed in the **Updater** application. **BUT** the settings will only be saved if the Transfer (to **USB drive**, or via **CAN/Ethernet** was successful).

The **HostSettings.ini** file is saved in the folder [updater](#)⁷⁰⁷ of the **project directory**.

Do not delete or modify this file!

Device (ClientSetting.ini)

Whenever a project is transferred to a **USB drive** or to the device via **CAN bus**, the **ClientSetting.ini** will be created. The file is saved to the project package (e.g. **MyProject.ud4**) which will be transmitted.

The **ClientSetting.ini** file contains the **project name** and the [Device CAN/ETH Settings](#)⁶⁸².

The **ClientUpdater** on the device reads this file set up the **CAN Interface** appropriate.

Do not delete or modify this file on the device!

Updater Folder

The subfolder **updater** which is located in the **project directory**, contains the following files:

- **HostSettings.ini**
 - This file contains the **USB** and **Device CAN Settings**.
- **preinstall_script.js** (included in [Project Package](#)⁷⁰⁸)
 - This script is executed during Install step on the device **before** the *project is installed*.
 - This file can be edited by the user.
- **postinstall_script.js** (included in [Project Package](#)⁷⁰⁸)
 - This script is executed during the Install step on the device **after** the *project was installed*.
 - This file can be edited by the user.
- folder **user_files** (include in [Project Package](#)⁷⁰⁸)
 - All files in this folder will be added to the **Project Package** and will be transmitted to the device.
 - The files will be copied during the project install step to the following location on the device:
 - /opt/pclient/projekte/default_prj/

☐ The files are already available in the [postinstall_script.sh](#)⁷⁰⁸ at the above location



NOTE:

The folder **user_files** may only contain **less than 8 files**. If the folder contains more than 8 files only the first 8 files will be transmitted. **File names may not contain empty spaces or UTF8 characters like ('ä', 'ö', 'ü', or 'é')**. **Subfolders in user_files won't be transmitted** to the device.


Do **not delete** any of these files or folders, otherwise **no Project Package** can be created anymore:

- **preinstall_script.js**
- **postinstall_script.js**
- folder **updater**

Project Package

For each transfer, a **Project Package** (*.ud4) file is created, which contains all the important files for a project update.

The **Project Package** contains:

- **Project archive** (terminal_files.zip)
- **Preinstall_script.js**
- **Postinstall_script.js**
- **ClientSettings.xml**
- files from **user_files** folder in [Updater folder](#)⁷⁰⁷ 

Variable @EnableUpdater


With this variable the **ClientUpdater** on the device can be **enabled** or **disabled**.

Additionally, you can set the **active interfaces**, which allows you to update the project on the device.

The following values can be set:

- Updater is **disabled**
- **0x0** => **NO** project update can be performed.
- Updater is **enabled (Single Interface)**
- **0x1** => Project update can **ONLY** be performed via **USB drive**.
- **0x2** => Project update can **ONLY** be performed via **CAN bus**.
- **0x4** => Project update can **ONLY** be performed via **Ethernet**.
- Updater is **enabled (Multiple Interfaces)**
- **0x3** => Update possible via **USB drive** or **CAN bus**.
- **0x5** => Update possible via **USB drive** or **Ethernet**.
- **0x6** => Update possible via **CAN bus** or **Ethernet**.
- **0x7** => Update possible via **USB drive**, **CAN bus** or **Ethernet**.

@EnableUpdater value	Update over USB	Update over CAN	Update over Ethernet
0	✗	✗	✗
1 (default)	✓	✗	✗
2	✗	✓	✗
3	✓	✓	✗
4	✗	✗	✓
5	✓	✗	✓
6	✗	✓	✓
7	✓	✓	✓

	NOTE (DANGER):
	Please be aware, if you set the pre-defined variable to '0x0', the Updater on the device is disabled and NO project update is possible anymore. Please always add a possibility to change the value of the pre-defined variable in your project.

CAN Transfer Checklist

The CAN update is disabled by default on the device. This is important to protect the CAN network and to avoid undesired CAN traffic.

If you want to activate update over CAN please follow these steps:

1. Common:

- Please first read the chapter: [Disclaimer about using CAN](#)⁶⁸²

2. Project settings:

- If CAN shall be activated, the variable [@EnableUpdater](#)⁷⁰⁸ must be set properly in the project. The value must be set to **0x2** or **0x3** (**Please have a look [here](#)**⁷⁰⁸)

3. Updater settings:

You need to enable the update by changing the @EnableUpdater variable. If the existing project on the device allows such a setting, you can make it on the device.

Otherwise:

- The first project update has to be done via [USB update](#)⁶⁸³. [Here](#)⁶⁸⁴ you have to check or edit the CAN settings you want to use.
- Transfer project to USB drive
- Update device via USB.

Now the **ClientUpdater** on the device should be **enabled for CAN** and the [CAN Update](#)⁶⁸⁹ mode can be used for future project updates.

Errors and Warnings

If an error occurs in the **Updater** application, the warning is shown in the status bar. By clicking the icon or label in the status bar, a dialog with detailed information is shown. All **error messages** will **disable** the **Transfer** button until the error is resolved.


Warnings do not **disable** the **Transfer** button, but it is recommended to check why the warning is shown.

Common

Warning reading HostSettings.ini file

If the **HostSettings.ini** file can not be read by the **Updater**, a warning is shown. The warning shows which parameter could not be read properly.

In this example, the "**Baud Rate**" was removed in the settings file.

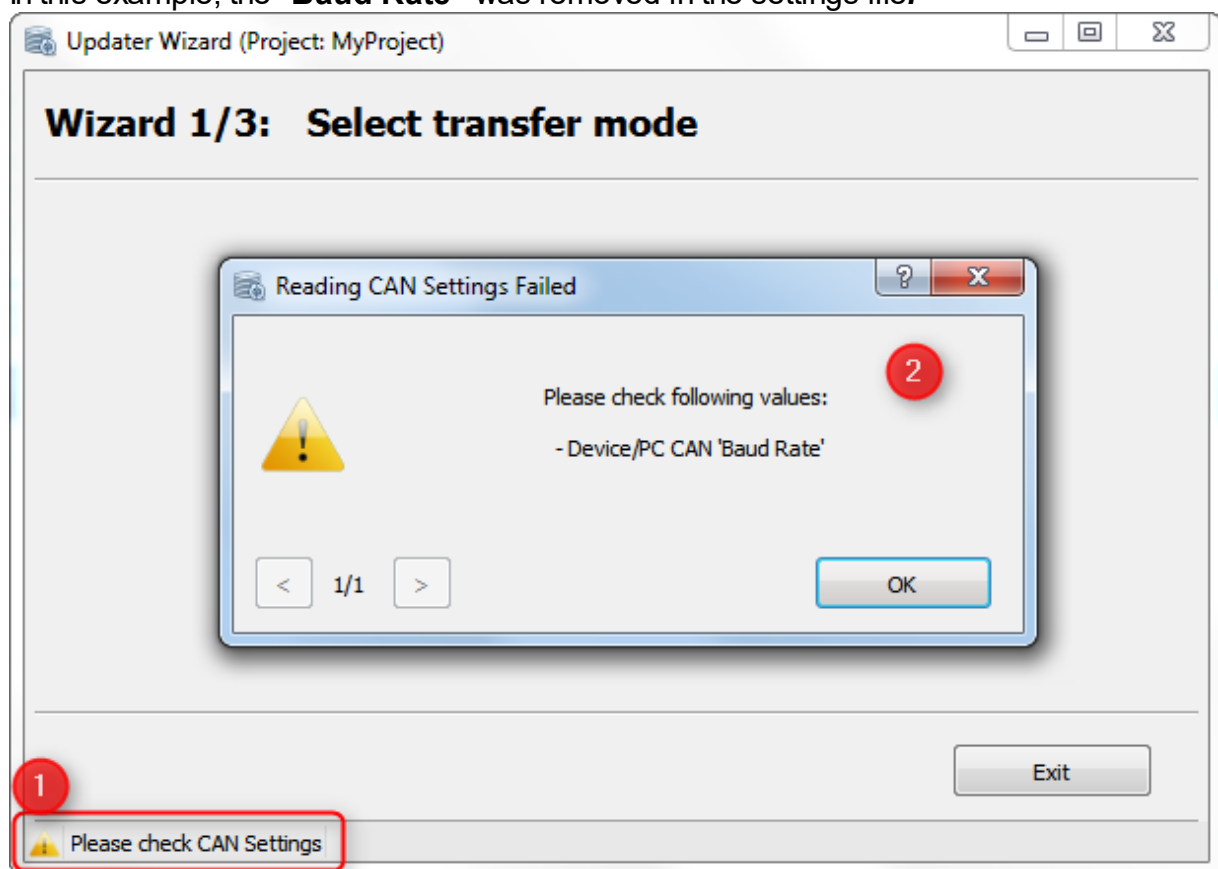


(1) By pressing on the warning icon in bottom left corner a dialog appears with detailed information.

(2) A dialog is shown that the user shall check the **Baud Rate** in the **CAN Settings** for Device and PC.


Missing Files (postinstall_script.sh, preinstall_script.sh, terminal_files.zip)

If one of these files is missing, an error is shown, and the **Transfer** button will be **disabled**. These files are mandatory for the updater to install the **Project Package** on the device. If the file(s) are available again, the message will disappear and **Transfer** button gets **enabled** again.

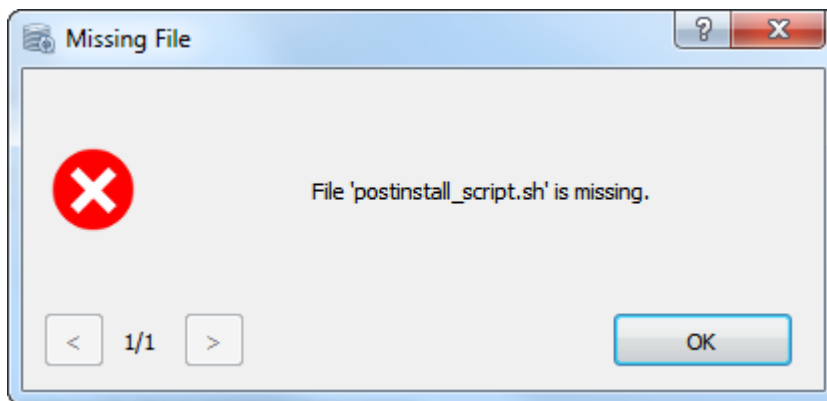


Too many files in 'user_files' folder

If more than **8 files** are copied to the **user_files** folder, this message will appear. In this case only the first **8 files** will be copied to the [Project Package](#)⁷⁰⁸. Please also have a look [here](#)⁷⁰⁷.

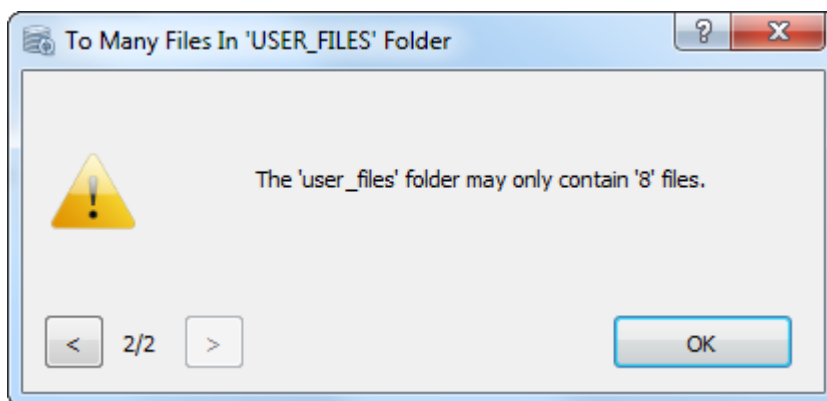

Subdirectories in 'user_files' folder


If subdirectories are copied to the **user_files** folder, this message will appear. In this case the subdirectories won't be copied to [Project Package](#)⁷⁰⁸. Please also have a look [here](#)⁷⁰⁷.

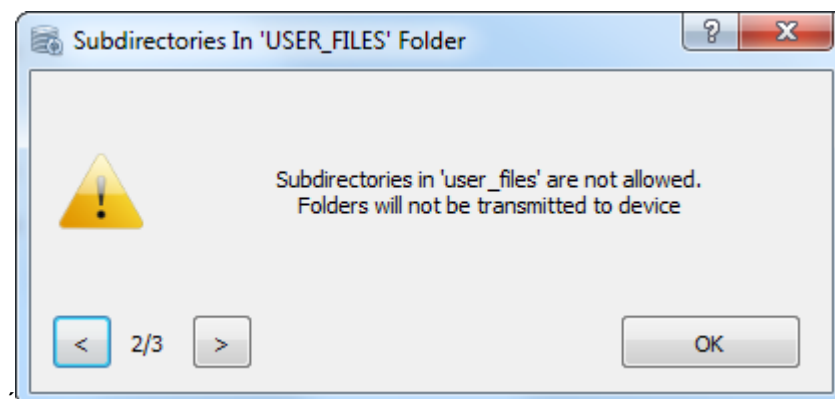

No terminal_files.zip

If no terminal_files.zip file is located in the project folder, this error appears.

To create the file, close the wizard and save the project. This will create the file.

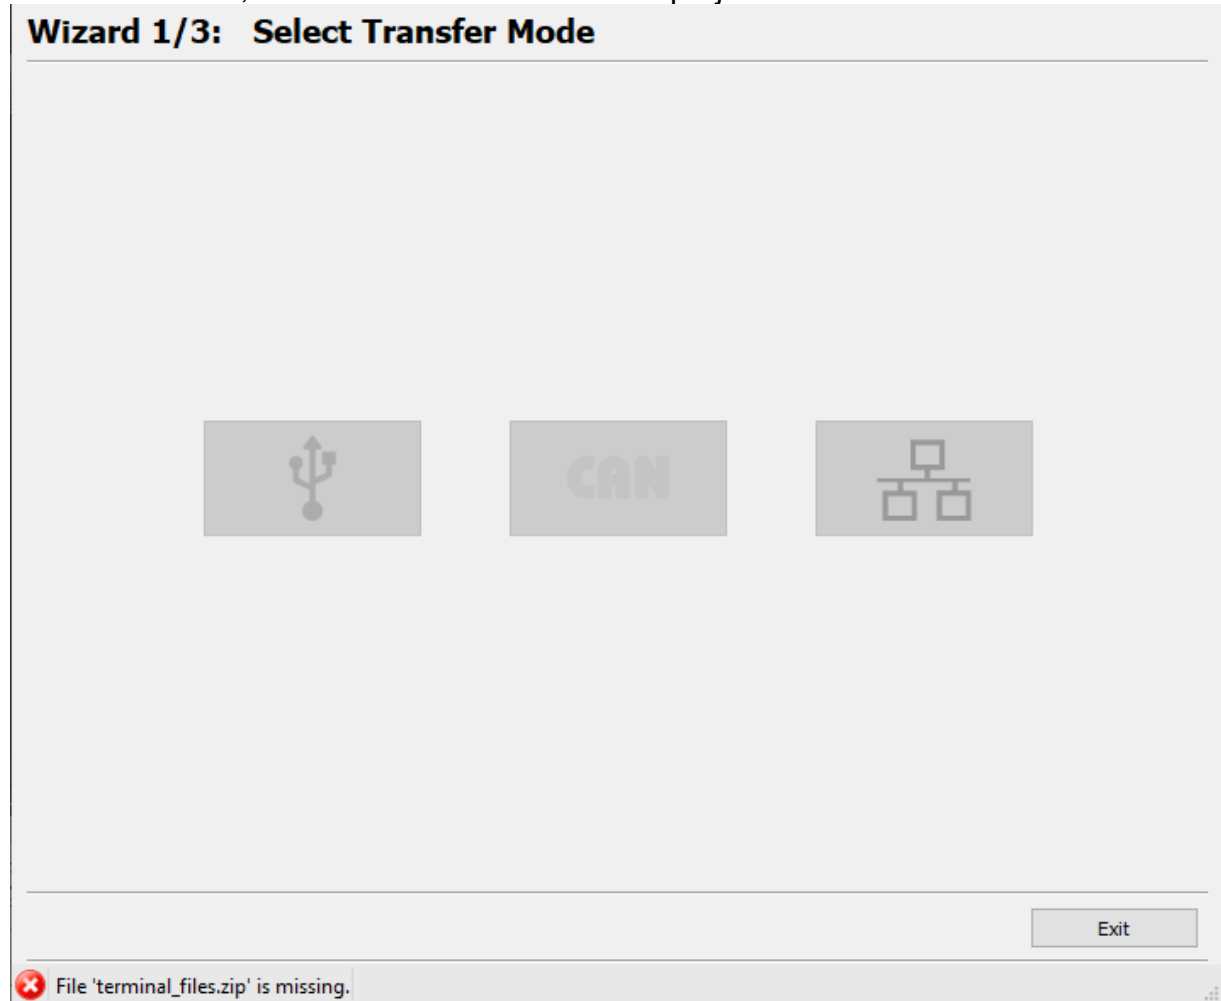

CAN Settings


PC Duplicate CAN IDs

CAN IDs have to be unique, otherwise the CAN communication does not work properly. If an error occurs, the **Transfer** button is **disabled**.

This error is only shown on the **CAN Settings Page**.

Device Duplicate CAN IDs

CAN IDs have to be unique, otherwise the CAN communication does not work properly. If an error occurs, the **Transfer** and **Back** buttons are **disabled**.

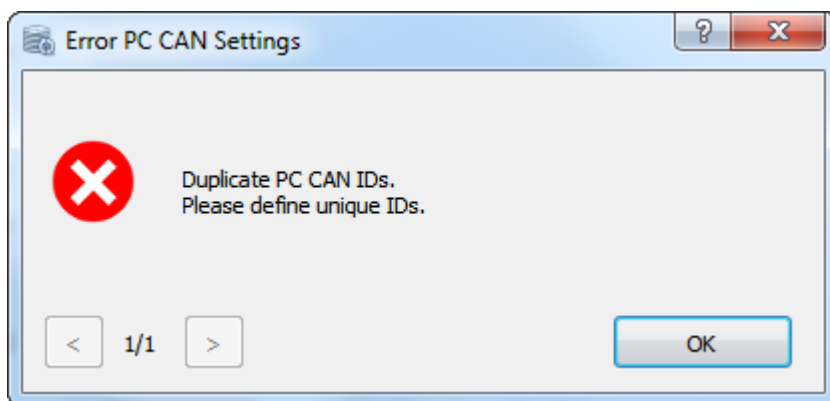


PC Empty CAN ID

CAN IDs must have valid values, otherwise the CAN communication does not work properly. If an error occurs, the **Transfer** button is **disabled**.

This error is only shown on **CAN Settings Page**.

Device Empty CAN ID

CAN IDs must have a valid value, otherwise the CAN communication does not work properly. If an error occurs, the **Transfer** and **Back** buttons are **disabled**.

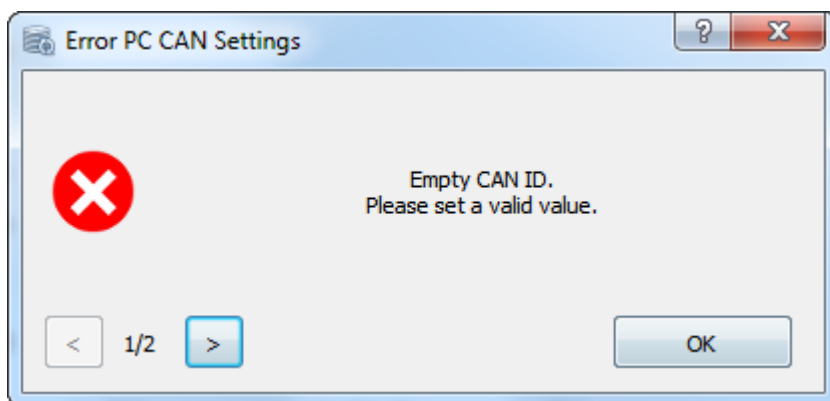


USB Settings

Invalid drive

If the **USB drive** is not available anymore, this error message will appear and the **Transfer** button gets **disabled**.

The currently chosen drive is checked continuously, which means if the drive is available again the message will disappear and the **Transfer** button gets **enabled**.


This error is only shown on the USB Settings Page.

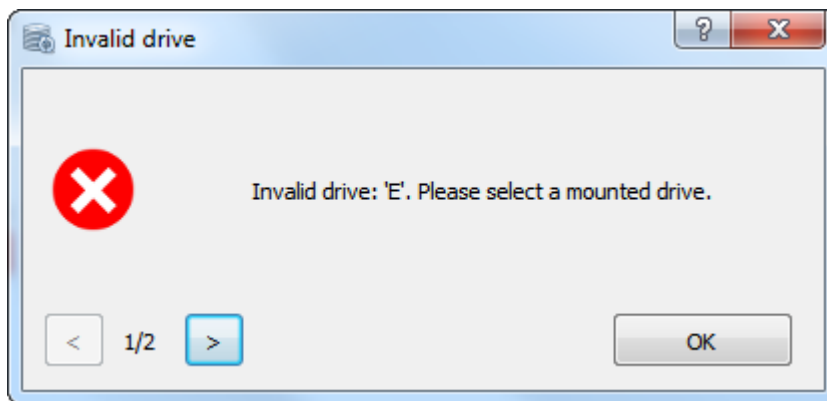


Ethernet Settings

Error -93

If error -93 is displayed during an Ethernet project transfer:

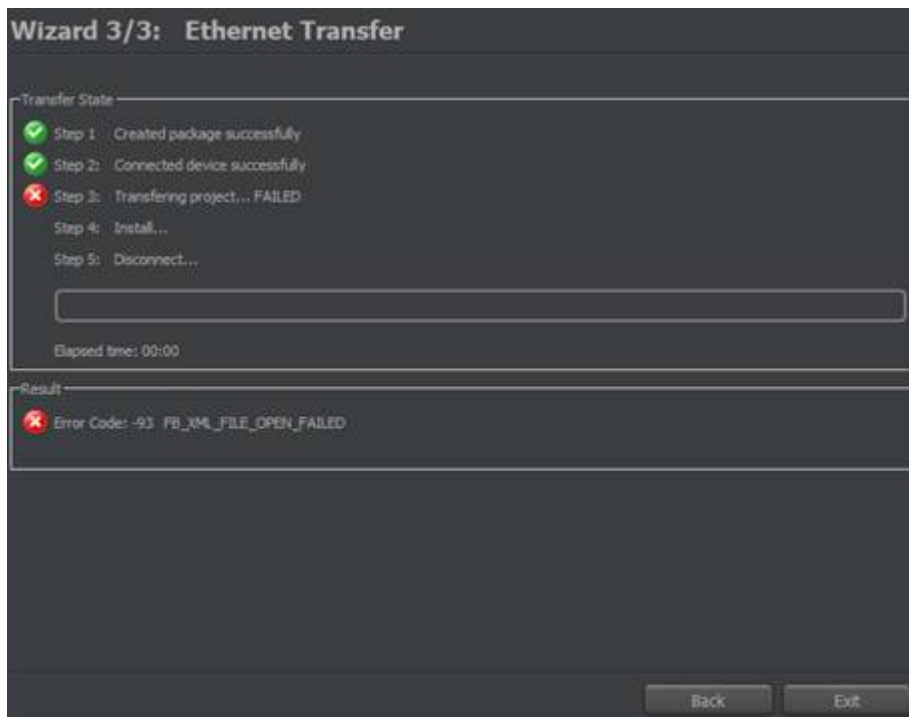

The solution might be to allow the updater wizard executable file, HostUD.exe in your firewall. Upon the first use, a popup like this should be displayed (from Windows Defender):

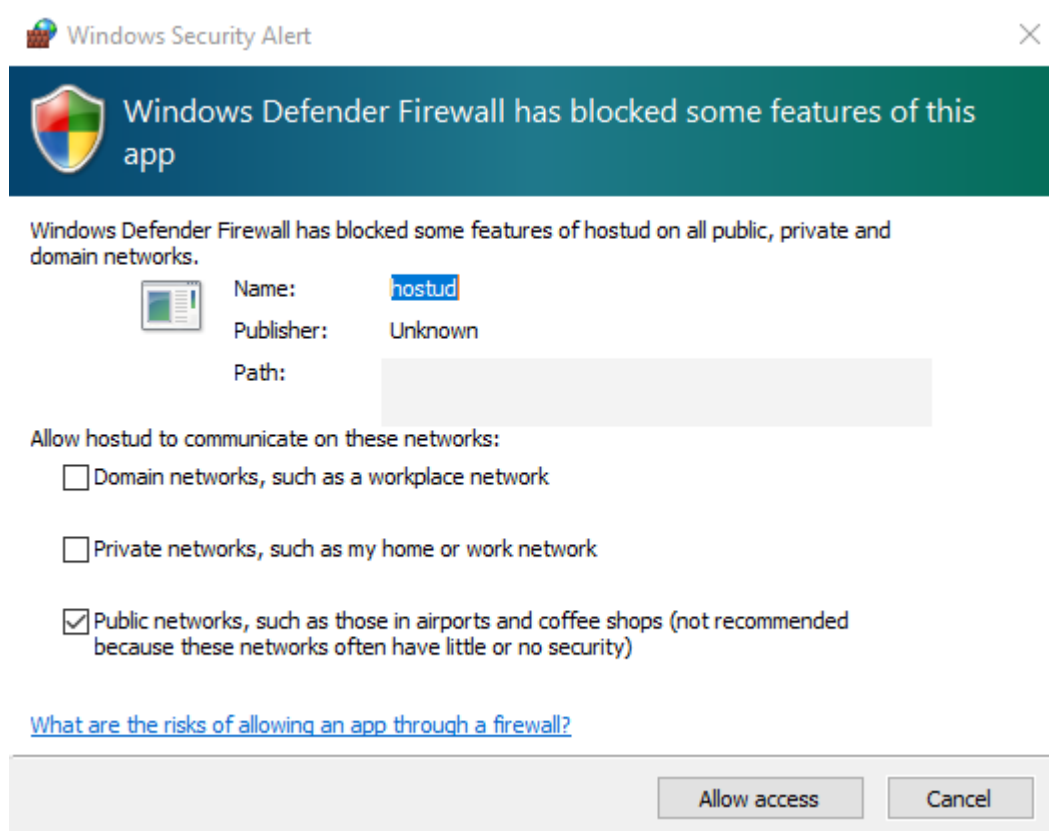

Please check all network types and allow access. Similar settings should be made for other firewall solutions.

■ Command Line Interface

It is possible to start the updater program through a command line.

The updater executable is located in
<program_path>\userdir\extracted_components\updater
named HostUd.exe

There is an example batch file showing how the updater can be started with the user interface.

It is also possible to start the updater without a user interface, allowing for an automatic project download to a USB stick or via CAN.

These two lines are mandatory in the batch file for the executable file to find all necessary libraries:

```
set PATH=%PATH%;..\shared_libraries\  
set QT_PLUGIN_PATH=%QT_PLUGIN_PATH%;..\shared_libraries\
```

The executable has the following parameters:

- ProjectPath (required) - the path to the project that should be downloaded - **example: ProjectPath=C:\Workspace\Projects\customer_project2**
- GUI (optional) - flag whether the updater should start with the gui (true) or silently (false) - **example: gui=false**
- AppName (optional) - A name that will be displayed in the gui title (only considered if gui=true) - **example: AppName=MyPersonalUpdater**
- ShowCANWarning (optional) - Flag whether the CAN warning screen should be shown in the gui (only considered if gui=true) - **example: ShowCANWarning=true**
- interface (CAN/USB)- Defines where the project should be downloaded to (when no gui is used) / which target should be selected in the gui (if the gui is used) - **example: interface=USB**
- path - Defines the target path if the program is used without gui and USB is set as target - **example: path=D:**

Example for a download to USB without gui:

HostUD.exe projectpath=C:\Workspace\Projects\customer_project2 gui=false
interface=USB path=D:\

FAQ

How can I add my own files to a Project Package?

You can add your own files to the folder user_files of the [updater folder](#)⁷⁰⁷. The updater folder is a subdirectory of the project directory.

All files which are copied to user_files will be added to the [Project Package](#)⁷⁰⁸.

With the shell scripts postinstall_script.sh and preinstall_script.sh you can edit your files on the device.

You can also add user files in GUI, see here: [Add User Files To Project Package](#)⁷⁰³

How can I figure out which CAN settings the ClientUpdater uses on the device?

The settings for the ClientUpdater are stored in the file **ClientSetting.ini** in the folder **/opt/ud4/bin/**

Why does the CAN Transfer not work?

- ☐ Please first read the [CAN Transfer Checklist](#)⁷⁰⁹ before you try to transfer a project via **CAN mode**.
- ☐ If all steps are done and the CAN Interface on the device is enabled, please check the CAN network:
 1. Check if the device is connected to the CAN network (check if CAN Port 1 and/or CAN Port 2 is connected).
 2. Check if the baud rate of the ClientUpdater is set properly.
 3. Check the bus status of CAN network.
 4. Check the ID settings of the Updater (Client and Host)
- ☐ Check if the ClientUpdater is running on the device and/or restart device.

Is it possible to update more than 1 device parallel via CAN?

No, it is not possible. Please connect only 1 device to CAN network when a project update is performed.

Why is the project not updated on the device via USB drive?

1. Please check if the the folder "updater" is created on the USB drive properly as described [here](#)⁶⁸³.
2. Please check the value of the predefined variable [@EnableUpdater](#)⁷⁰⁸.


10.2 OS / PClient Update

This feature provides the copying of all necessary files to a USB drive for a device update. Read more about the update process [here](#)⁹⁰⁵.

Afterwards the USB drive can be plugged into the device. When device is booted in **service mode**, the selected and copied files will be installed automatically. The dialog to create a bootable USB drive is located in **Menu - Update - Update PClient / OS** or via the [tool bar](#)³⁹.

Create Bootable USB Drive Dialog


When the menu entry **Menu - Update - Update PClient / OS** is clicked, the following dialog appears:

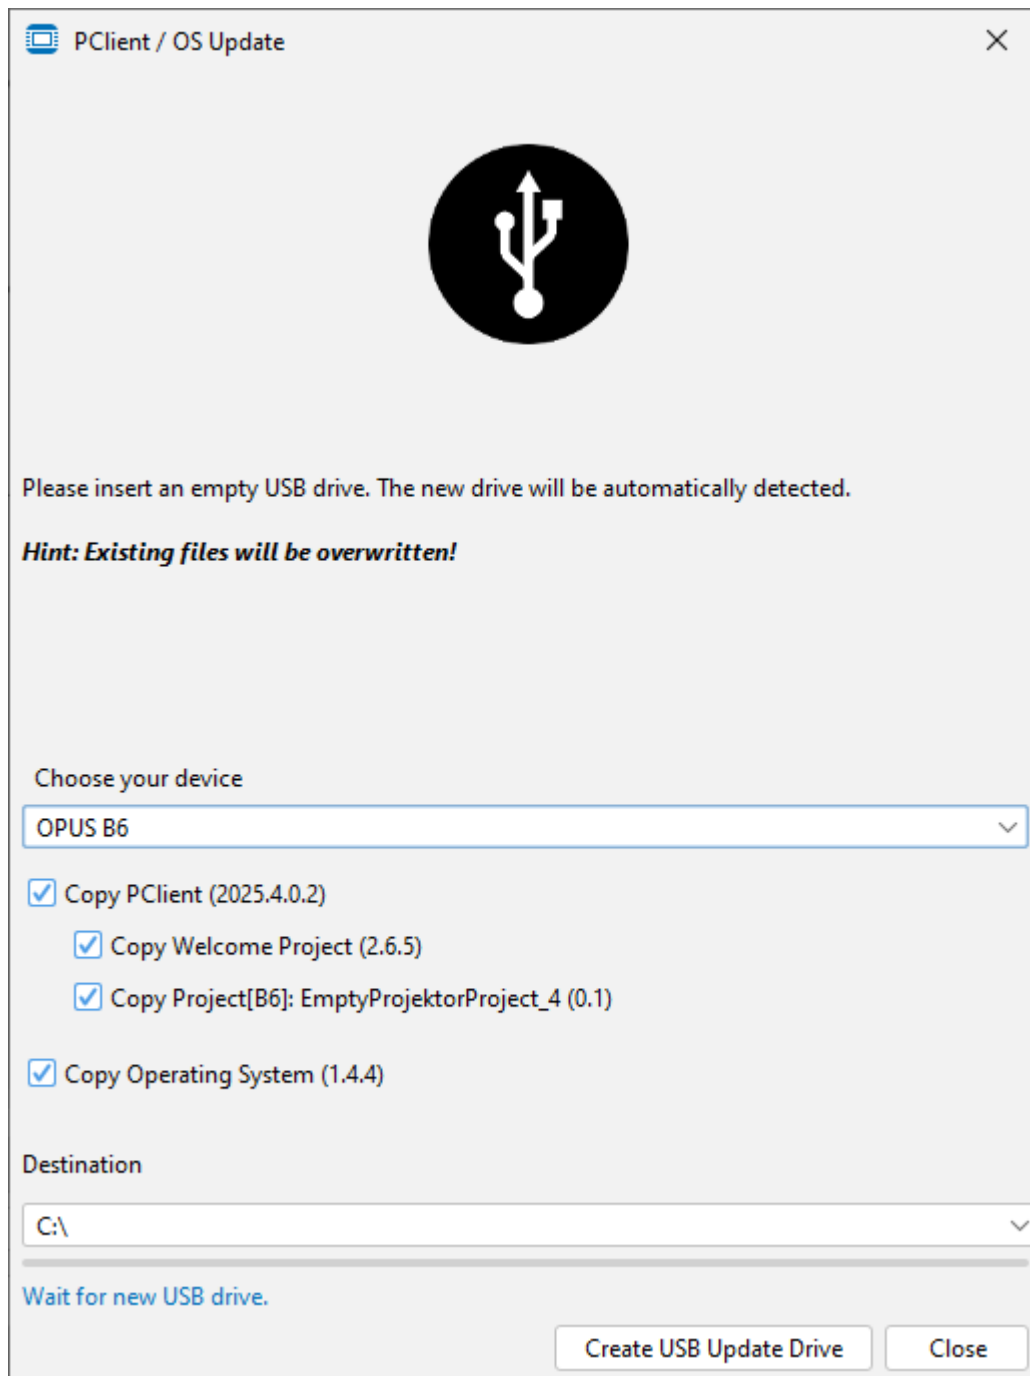

In the dropdown menu the device that the files should be downloaded for, can be selected. If a project is selected, the device from that project will be selected in the dropdown menu. Below the elements that should be copied can be selected.

- Copy PClient - This is the runtime that displays the project on the device
- Copy Welcome Project - This is the Welcome Project, which used to be installed by default on the device with the PClient. Now it is a separate package and it is installed to a separate location.
- Copy Project [Project name] - This is the currently selected project. If this is selected, the current project will be packed as an additional user tar file and can be installed in one fell swoop with the OS/PClient
- Copy Operating System - This is the operating system for the selected device.


USB Auto Detection

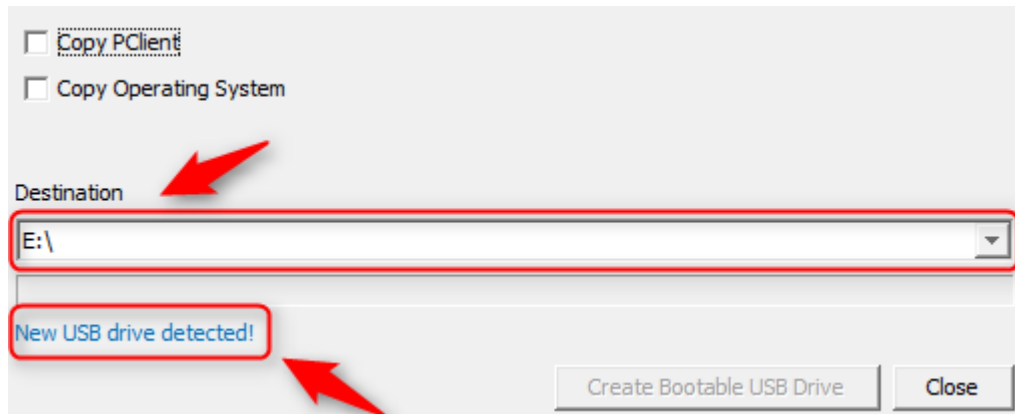

This feature provides a USB auto detection. Newly inserted usb mass storage drives will be selected automatically.

You can also select your desired device manually.

Copy Process

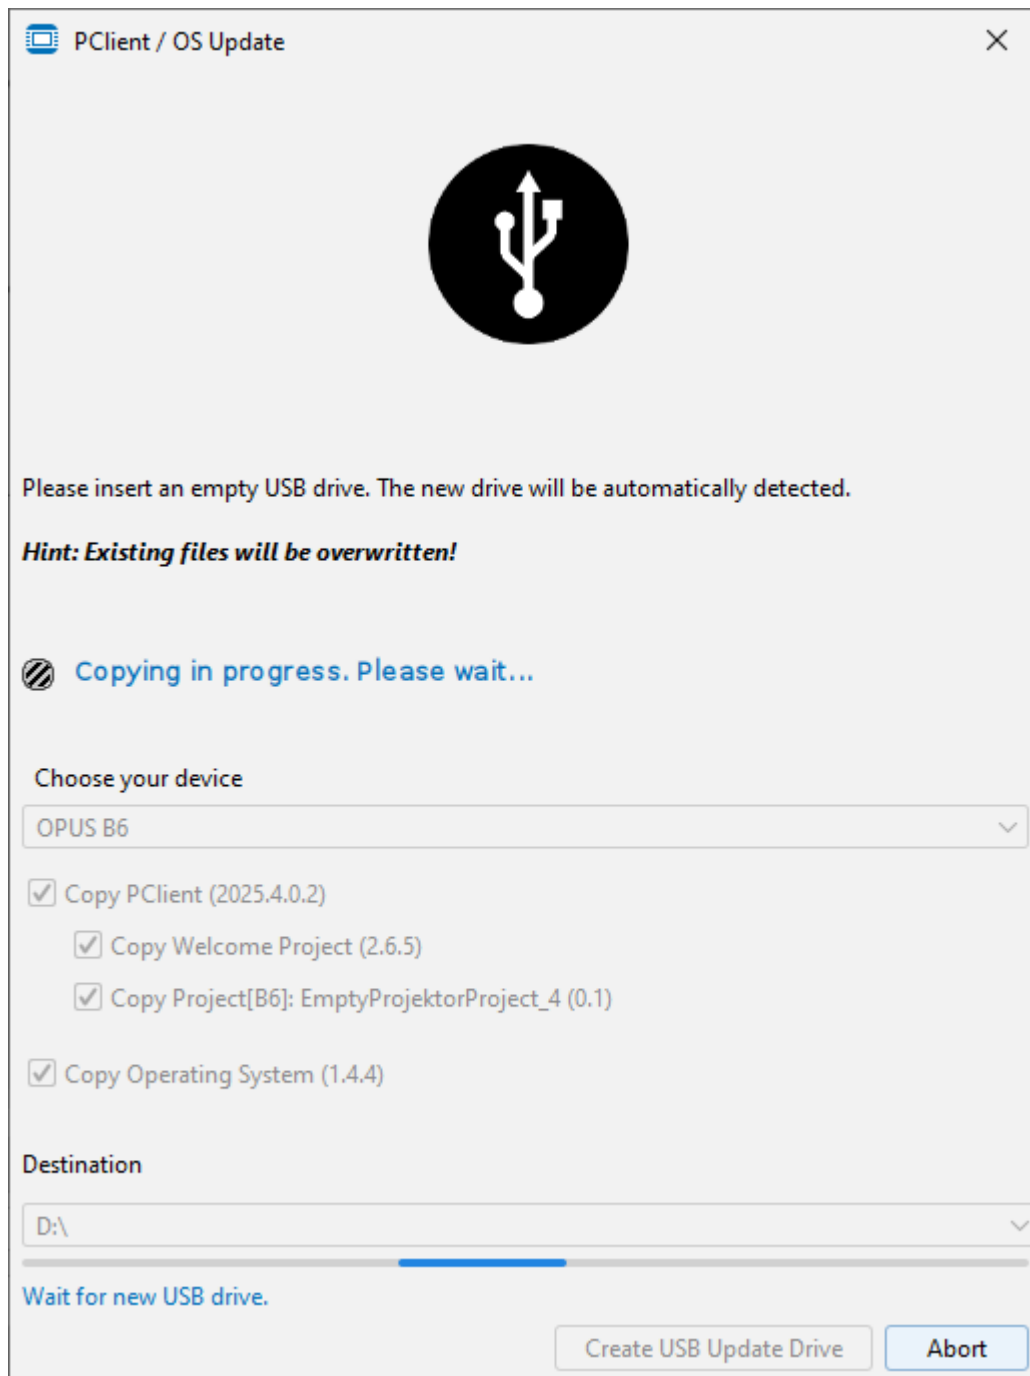


When the button 'Create Bootable USB Drive' is clicked, the current copy state is shown here.


During copy progress, the activity bar is running to indicate ongoing activity.

When the copy process starts, the button 'Create Bootable USB Drive' will be disabled. To abort the copy process, please press 'Abort'.

Copy process successfull

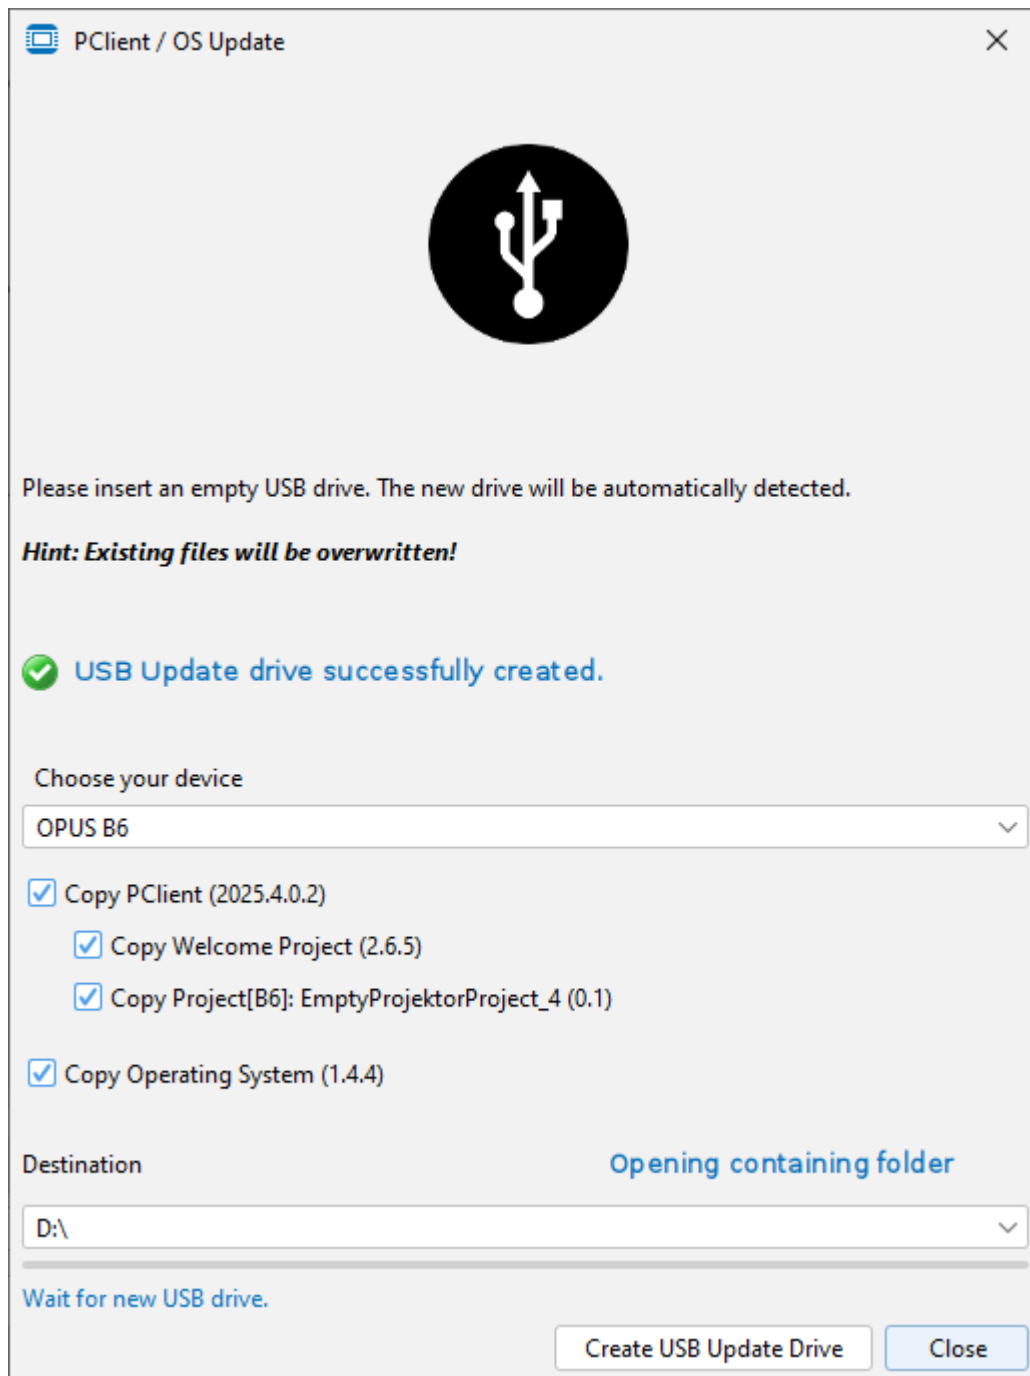**Legend:**

 When the copy process is finished successfully, the green check icon is visible.
A link is offered to open the destination folder directly after the copy process is finished.
After the copy process, the button 'Create Bootable USB Drive' is enabled again.

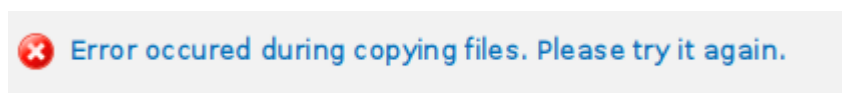Copy process failed

When the copy process fails, a red cross icon is visible.

NOTE:

The copy process fails e.g. if disk space is too low, or USB device is removed during the copy process.

10.2.1 Software Versions Overview

This page provides an overview of released OPUS Projektor versions and what OS/application combinations should be used on the devices.

Note: Since version 1.12 the version numbers of all components of the program are the same (PC program/PClient/Updater/etc.)

Note: When the hardware of a device has to be changed, it might be necessary to release a new OS for that device family. The table below reflects the latest OS versions that can run on all series versions of the devices (newest and oldest).

Program Version	OS Version for I.MX35 Devices	OS Version for I.MX6 EGSPRO Devices	OS Version for I.MX6 EGSCORE Devices	OS Version for I.MX6 ULL Devices
2024.4.0	- (no longer supported)	3.0.3	1.4.4	1.0.0
2023.4	- (no longer supported)	3.0.3	1.4.3	-
2022.4	2.2.6	2.4.0	1.4.0	-
2021.4	2.2.6	2.3.4	1.2.2	-
2020.4	2.2.5 (2.2.6 for EA devices)	2.3.4.	1.1.1 (only B3)	-
2020.1	2.2.3 (2.2.6 for EA devices)	2.3.2	0.6.1	-
2019.4	2.2.2 (2.2.6 for EA devices)	2.2.0 (2.3.4 for newer devices)	-	-
2018.4	2.2.0 (2.2.6 for EA devices)	2.2.0 (2.3.4 for newer devices)	-	-
1.12.1 (Releasedate: 2017/05/05)	2.2.0 (2.2.6 for EA devices)	1.1.3	-	-
1.12.0 (Releasedate: 2017/04/10)	2.2.0 (2.2.6 for EA devices)	1.1.3	-	-
1.11.16 (Releasedate: 2016/10/28)	2.2.0 (2.2.6 for EA devices)	1.1.3	-	-
<ul style="list-style-type: none"> - program version 3.11.16 - PClient 2.15.16 => 2.15.20 - Universal Downloader 4.3.14 				
1.9.16 (Releasedate: 2016/10/21) or lower	1.4.7	-	-	-

Program Version	OS Version for I.MX35 Devices	OS Version for I.MX6 EGSPRO Devices	OS Version for I.MX6 EGSCORE Devices	OS Version for I.MX6 ULL Devices
<ul style="list-style-type: none">- program version 3.9.16- PClient 2.13.40 or lower- Universal Downloader 4.3.06				

Please Note: All PClient versions lower than 2.13.40 were not explicitly tested for I.MX35 OS version 1.4.4 or higher. They are very likely to run on devices with this OS but validation needs to be done by the vehicle manufacturer / system integrator.

Miscellaneous

11 Miscellaneous

11.1 Crash, Issue, Feedback reports

With this version we are introducing the possibility to send crash reports and give us general feedback or report an issue directly through the OPUS Projektor.

We want to ask you to send us reports, especially Crash Reports, but also your feedback, issues or feature requests.

We can guarantee you that your report will be looked at, carefully reviewed and treated seriously.

We are not a huge faceless company that doesn't care about its products' users.

We want to know your problems with and thoughts about our software, because we want to improve it.

The following types of reports can be sent:

- Crash reports (those are opened automatically when an exception occurs)
- Feedback (for general feedback about our program, positive or negative)
- Feature request (for ideas about new features)
- Issue/Bug (for problems that don't have to do with an exception directly)

Crash report

If a crash, or, more correctly, an exception occurs, a dialog is opened automatically.

Report an issue, request a feature or give feedback

Name

customer

E-Mail

customer@company.com

Your concern

Crash

Subject

java.util.concurrent.ExecutionException

Description

Attach files

WorkflowHis... messages.lo... messages.lo... messages.lo...

☐ Attach current project as zip-file to the report

☒ Attach application log files

☒ Attach workflow details

☒ Attach system-information to help us understand the surroundings

☒ Attach the latest error-information

Latest error-information

Lastly occurred error [2021-11-29 16:35:50.2211356 (+01:00 Europe/Berlin)]:

 java.util.concurrent.ExecutionException: java.lang.NullPointerException

 Stacktrace:

These settings are saved independently of sending the report

☐ Don't show this error again
 ☐ Don't show any errors

Send

Don't send

Good news first: if you want to send us that report, but you don't want to bother with all the things we ask, just click Send, the crash report will be accepted anonymously.

But it will definitely be more helpful if you fill out the fields in the report dialog.

Name - can be your personal name and/or company name (optional for crash reports). The name will be stored for future reports. You can delete the stored data in the [Options dialog](#)⁷¹.
Email - if we have questions regarding your report, it would be good if we could reach out to you (optional for crash reports). The email address will be stored for future reports. You can delete the stored data in the [Options dialog](#)⁷¹. With newer versions it is also possible to

contact you through the program itself, so look out for info bubbles when starting the program. But it still won't hurt if you enter your email.

Subject - is automatically filled with the exception name

Description - Anything you can tell us about what lead to the exception will be helpful (optional for crash reports)

You can attach files to the report.

Attach current project as zip-file to the report - You can choose to attach the current project to the report. Regardless of existing NDAs with your company we can assure you that we will use your project only to try to replicate the issue. We will never give customer projects to any third party. (optional)

Attach application log files - You can choose to attach the current application log files from the program. These will not contain any sensitive information, but rather informational outputs and errors from the program, so these can be very helpful to diagnose the problem (optional)

Attach workflow details - You can choose to attach the last actions that were recorded in the undo/redo system. This can help us pinpoint what exactly happens. Additionally, some statistical information about the current project will be attached. Such a workflow looks e.g. like this:

```
1: =====
Workflow => TS: 2021.11.24-14:30:45
[Project] "EmptyProject_85" | Loaded | Duration: 3s
Version                : 2021.4.4.1
Orig-Version           : 2021.4.4.1
Versioning              : false
Panel                  :
Warnings               : false
Themes                 : [modern_bright]
Languages              : [english, german, chinese,
russian, spanish]
Language-/Unit Objects : 0 / 0
Day-/Night-Mode (Objects) : false (0)
Visibility (Objects)    : false (0)
Original Images (unused) : 10 (10)
Unused Images          : [PowerSwitchObject_Pressed.svg,
PowerSwitchObject_Released.svg, PushSwitchObject_Pressed.svg,
PushSwitchObject_Released.svg, RockerSwitchObject_Pressed.svg,
RockerSwitchObject_Released.svg,
RockerSwitchHorizontalObject_Pressed.svg,
RockerSwitchHorizontalObject_Released.svg,
LampObject_Pressed.svg, LampObject_Released.svg]
References             : 0
Objects                : 4
-----
Frame                  : 1
Page                   : 1
Softkey Frame          : 2
-----
```

```

JS-Files                : 0
Variables               : 0
Protocols               : [No Protocols]
CAN-Mappings            : 0
2: =====
  DummyEdit => TS: 2021.11.24-14:30:45
  Page: Project
  Edit: Start: EmptyProject_85
3: =====
  Workflow => TS: 2021.11.24-14:30:51
  [Action] "Report an issue or give feedback" |
Action_Performed
4: =====
  Workflow => TS: 2021.11.24-14:30:51
  [Dialog] "Report an issue, request a feature or give
feedback" | Opened
5: =====
  Workflow => TS: 2021.11.24-14:31:14
  [Dialog] "Report successful" | Opened
6: =====
  Workflow => TS: 2021.11.24-14:31:16
  [Dialog] "Report successful" | Closed
7: =====
  Workflow => TS: 2021.11.24-14:31:16
  [Dialog] "Report an issue, request a feature or give
feedback" | Closed | => 'Cancelled'
8: =====
  Workflow => TS: 2021.11.24-15:17:29
  [Action] "Open Project..." | Action_Performed
9: =====
  Workflow => TS: 2021.11.24-15:21:28
  [TC_Page] "Home Page [35]" | Opened
10: =====
  Workflow => TS: 2021.11.24-15:21:29
  [TC_Page] "SPLASH SCREEN [16449]" | Opened
11: =====
  JSAddRemoveEdit => TS: 2021.11.25-07:44:20
  Page: JavaScripts
  Edit: Add
  Old Value:
  New Value: File: newEmpty_JavaScript.js
12: =====
  JSUpdateEdit => TS: 2021.11.25-07:44:21
  Page: JavaScripts
  Edit: Update
  Old Value:
  New Value: newEmpty_JavaScript.js
13: =====
  Workflow => TS: 2021.11.25-07:44:22
  [Dialog] "Hint" | Opened
14: =====

```

```

Workflow => TS: 2021.11.25-07:44:23
[Dialog] "Show this dialog again" | Action_Performed | =>
'Selected: false'
15: =====
Workflow => TS: 2021.11.25-07:44:24
[Dialog] "Show this dialog again" | Action_Performed | =>
'Selected: true'
16: =====
Workflow => TS: 2021.11.25-07:44:25
[Dialog] "Show this dialog again" | Action_Performed | =>
'Selected: false'
17: =====
Workflow => TS: 2021.11.25-07:44:25
[Dialog] "Hint" | Closed | => 'Cancelled'
18: =====
Workflow => TS: 2021.11.25-07:51:53
[Dialog] "Variable Manager" | Opened
19: =====
Workflow => TS: 2021.11.25-07:51:59
[Dialog] "Variable Manager" | Closed | => 'Closed'
20: =====
Workflow => TS: 2021.11.25-10:01:39
[Action] "Help" | Action_Performed
21: =====
Workflow => TS: 2021.11.25-10:01:57
[Action] "Help" | Action_Performed
22: =====
AddRemoveEdit => TS: 2021.11.29-09:04:03
Page: Home Page
Object(s): Button 1[45]
Parent(s): Frame 1[36]
Edit: Add
23: =====
MoveEdit => TS: 2021.11.29-09:04:04
Page: Home Page
Object(s): Button 1[45]
Edit: Move
Old Value: POS [168, 46]
New Value: POS [178, 19]
24: =====
AddRemoveEdit => TS: 2021.11.29-09:04:09
Page: Home Page
Object(s): Numeric Field 1[46]
Parent(s): Frame 1[36]
Edit: Add
25: =====
MoveEdit => TS: 2021.11.29-09:04:10
Page: Home Page
Object(s): Numeric Field 1[46]
Edit: Move
Old Value: POS [227, 125]

```

```

    New Value: POS [178, 97]
26: =====
    PropertyEdit => TS: 2021.11.29-09:04:21
    Page: Home Page
    Object(s): Numeric Field 1[46]
    Edit: Absolute Max Value
    Old Value: 100
    New Value: 1000
27: =====
    Workflow => TS: 2021.11.29-09:04:28
    [Action] "Report an issue or give feedback" |
Action_Performed
28: =====
    Workflow => TS: 2021.11.29-09:04:28
    [Dialog] "Report an issue, request a feature or give
feedback" | Opened
ct(s): Button 1[45]
    Edit: Move
    Old Value: POS [168, 46]
    New Value: POS [178, 19]

```

Attach system-information to help us understand the surroundings - You can choose to send us your system information. These will be all technical details of your hard- and software, as far as we can get this information. You can click the "system information" to see this information before sending it to us. The information looks e.g. like this:

OS info:

Name: Windows 10

Version: 10.0

Architecture amd64

Available processors (cores): 4

Memory info:

Free heap memory: 1.040.218

Allocated heap memory: 2.656.256

Max heap memory: 4.194.304

Total free heap memory: 2.578.266

Total physical memory: 8.006.560

Disk info:

File system root: C:\

Total space (bytes): 252974198784

Free space (bytes): 31004663808

Usable space (bytes): 31004663808

Attach the latest error-information - For the crash report this will be the most important option, which is why it cannot be de-selected. It is a stack trace of the internal exception. This will be the most valuable information to try to understand what just happened, and how we can prevent it from happening again. A stack trace looks e.g. like this:

Lastly occurred error [2020-02-20 13:02:03.1671769 (+01:00 Europe/Berlin)]:


```
java.util.ConcurrentModificationException
    at java.base/java.util.HashMap$HashIterator.nextNode(Unknown Source)
    at java.base/java.util.HashMap$KeyIterator.next(Unknown Source)
    at
org.netbeans.api.visual.model.ObjectScene.setSelectedObjects(ObjectScene.java:217)
    at
org.netbeans.core.gui.sceneDesigner.PageTopComponent$3.resultChanged(PageTopComponent.java:328)
    at
org.netbeans.openide.util.lookup.SimpleProxyLookup.checkLookup(SimpleProxyLookup.java:89)
    at org.netbeans.openide.util.lookup.SimpleProxyLookup.lookup(SimpleProxyLookup.java:134)
    at
org.netbeans.modules.openide.windows.GlobalActionContextImpl.blickActionMapImpl(GlobalActionContextImpl.java:107)
    at
org.netbeans.modules.openide.windows.GlobalActionContextImpl.blickActionMap(GlobalActionContextImpl.java:81)
    at
org.netbeans.modules.openide.windows.GlobalActionContextImpl.propertyChange(GlobalActionContextImpl.java:180)
    at java.desktop/java.beans.PropertyChangeSupport.fire(Unknown Source)
    at java.desktop/java.beans.PropertyChangeSupport.firePropertyChange(Unknown Source)
    at java.desktop/java.beans.PropertyChangeSupport.firePropertyChange(Unknown Source)
    at java.desktop/java.awt.KeyboardFocusManager.firePropertyChange(Unknown Source)
    at
java.desktop/java.awt.KeyboardFocusManager.setGlobalPermanentFocusOwner(Unknown Source)
    at java.desktop/java.awt.DefaultKeyboardFocusManager.dispatchEvent(Unknown Source)
    at java.desktop/java.awt.Component.dispatchEventImpl(Unknown Source)
    at java.desktop/java.awt.Container.dispatchEventImpl(Unknown Source)
    at java.desktop/java.awt.Component.dispatchEvent(Unknown Source)
    at java.desktop/sun.awt.SunToolkit$1.run(Unknown Source)
    at java.desktop/java.awt.event.InvocationEvent.dispatch(Unknown Source)
    at java.desktop/java.awt.EventQueue.dispatchEventImpl(Unknown Source)
    at java.desktop/java.awt.EventQueue$4.run(Unknown Source)
    at java.desktop/java.awt.EventQueue$4.run(Unknown Source)
    at java.base/java.security.AccessController.doPrivileged(Native Method)
    at
java.base/java.security.ProtectionDomain$JavaSecurityAccessImpl.doIntersectionPrivilege(Unknown Source)
    at java.desktop/java.awt.EventQueue.dispatchEvent(Unknown Source)
    at org.netbeans.core.TimableEventQueue.dispatchEvent(TimableEventQueue.java:136)
    at java.desktop/java.awt.EventDispatchThread.pumpOneEventForFilters(Unknown Source)
    at java.desktop/java.awt.EventDispatchThread.pumpEventsForFilter(Unknown Source)
```

```
at java.desktop/java.awt.EventQueueDispatchThread.pumpEventsForHierarchy(Unknown
Source)
at java.desktop/java.awt.EventQueueDispatchThread.pumpEvents(Unknown Source)
at java.desktop/java.awt.EventQueueDispatchThread.pumpEvents(Unknown Source)
at java.desktop/java.awt.EventQueueDispatchThread.run(Unknown Source)
```

Don't show this error again - You can choose to not send this error again. If there happens to be an exception that occurs rather often in your work flow, it will be annoying for you to have the dialog pop up all the time, and receiving the same report over and over again will not be increasingly helpful for us, either. For that case you can disable to show the error that just occurred, again. You can reset this setting in the [Options](#) ⁷¹ dialog.

Don't show any errors - Please don't enable that. Normally it will not be helpful if you check that option. It will not be of direct harm to you, but if you don't send error reports, we have no chance of recognizing the underlying problem and no chance to repair it. You can reset this setting in the [Options](#) ⁷¹ dialog.

Send - This will send the report, close the dialog, and, when the transmission is finished, show a feedback dialog with the ticket number your report has created.

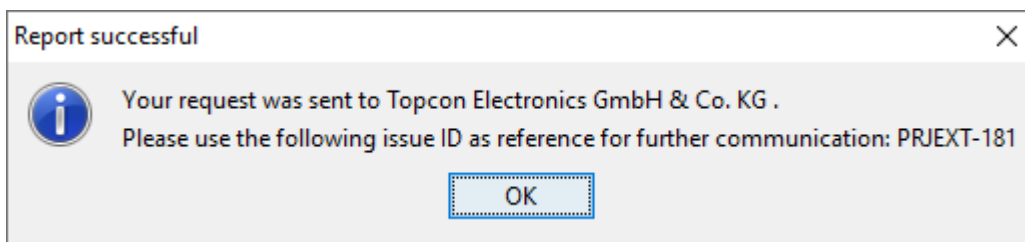

You can use this ID as a reference to contact us with more information, questions, etc.

Don't send - This will close the report dialog without sending the report. We hope that you will rarely choose that option. Once again, we are neither Microsoft nor Apple, we want to work with you on creating the best program possible and your report will not end up unread in the trash bin.

Feedback / Feature Request

The feedback dialog can be opened through the menu Help -> Report an issue or give feedback.

Report an issue, request a feature or give feedback

Name

customer

E-Mail

customer@company.com

Your concern

Feedback

Subject

Description

Attach files

☐ Attach current project as zip-file to the report

☒ Attach undo/redo history to help us to understand the circumstances of the error

Send

Don't send


Choose Feedback in the Your concern drop down list to send a general feedback report.
Choose Feature Request in the Your concern drop down list to send a feature request report.

The dialog for feedback and feature request are both very similar to the crash report with the following differences:

Name, Email, Subject - These fields are necessary fields now because the probability that we will want to discuss your report with you are much higher. The name and email will be stored for future reports.

Report Issue / Bug

The Report Issue / Bug dialog can be opened through the menu Help -> Report an issue or give feedback.

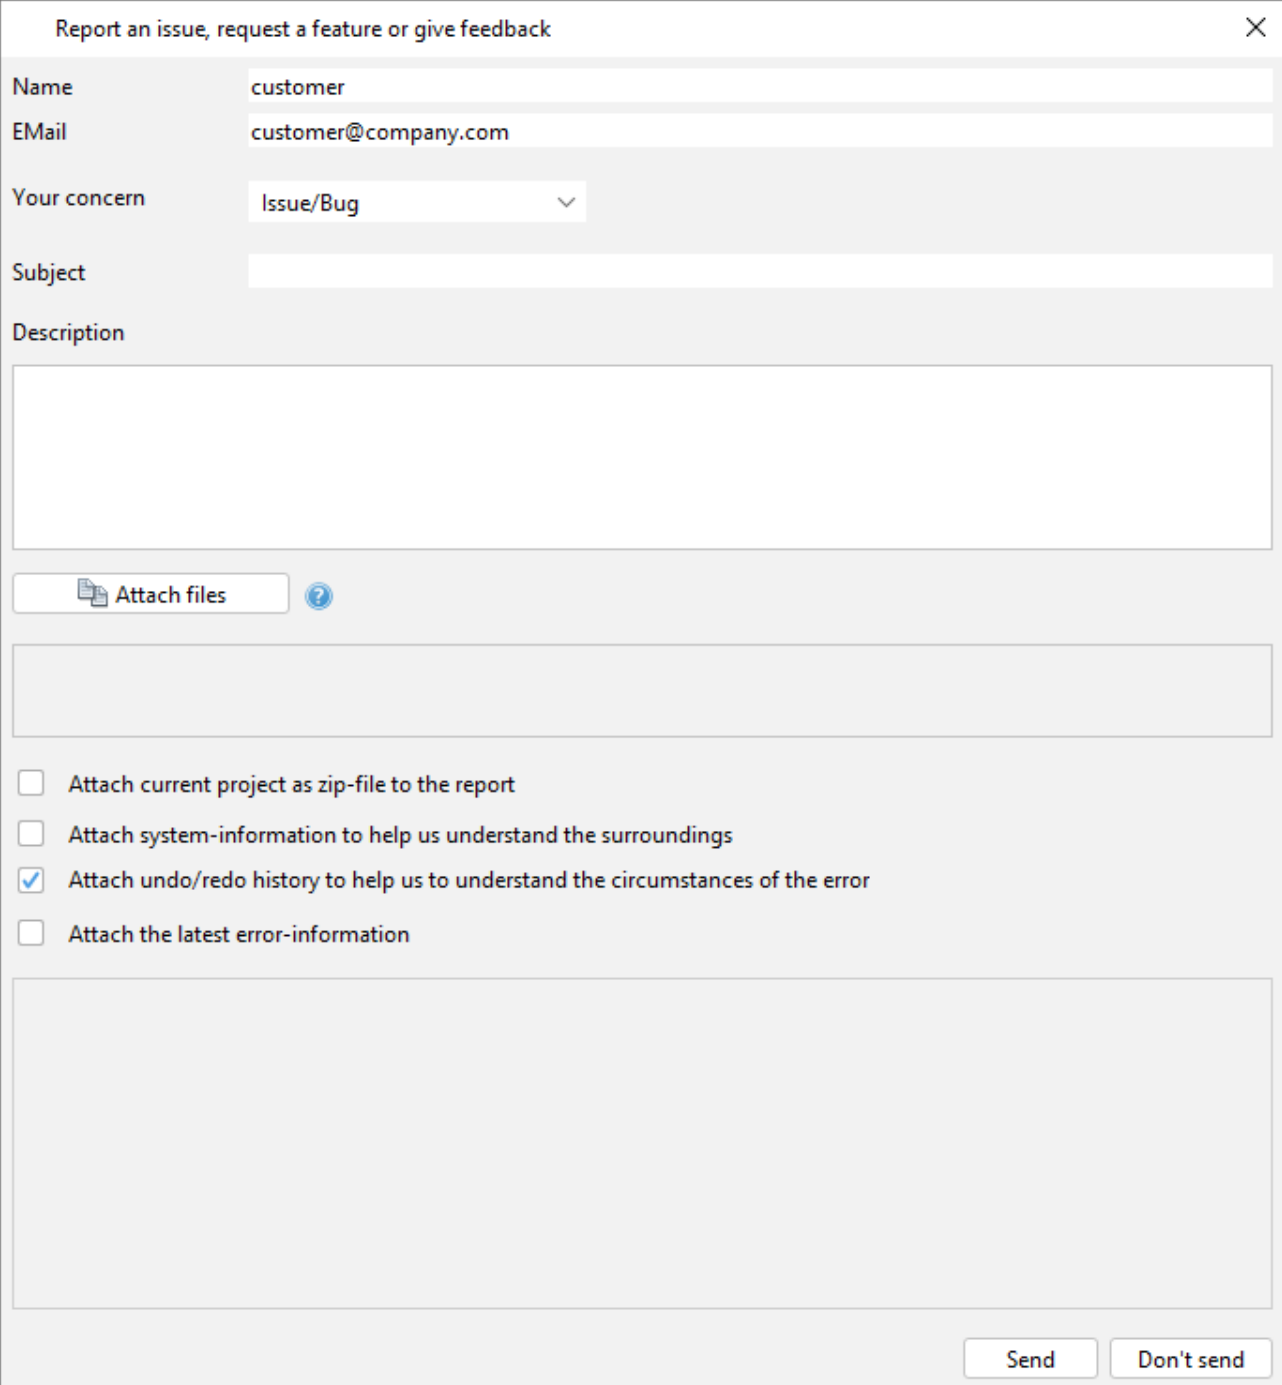

The dialog box is titled "Report an issue, request a feature or give feedback" and has a close button (X) in the top right corner. It contains the following fields and options:

- Name:** A text field containing "customer".
- E-Mail:** A text field containing "customer@company.com".
- Your concern:** A dropdown menu with "Issue/Bug" selected.
- Subject:** An empty text field.
- Description:** A large empty text area.
- Attach files:** A button with a file icon and a question mark icon.
- Options:** A list of four checkboxes:
 - ☐ Attach current project as zip-file to the report
 - ☐ Attach system-information to help us understand the surroundings
 - ☒ Attach undo/redo history to help us to understand the circumstances of the error
 - ☐ Attach the latest error-information
- Buttons:** "Send" and "Don't send" buttons at the bottom right.


Choose Issue/Bug in the Your concern drop down list to send an issue / bug report.

The dialog for Issue/Bug is similar to the crash report, with the following differences:

Undo/redo history is not available.

Name, Email, Subject - These fields are necessary fields now because the probability that we will want to discuss your report with you are much higher.

Reported Issues View

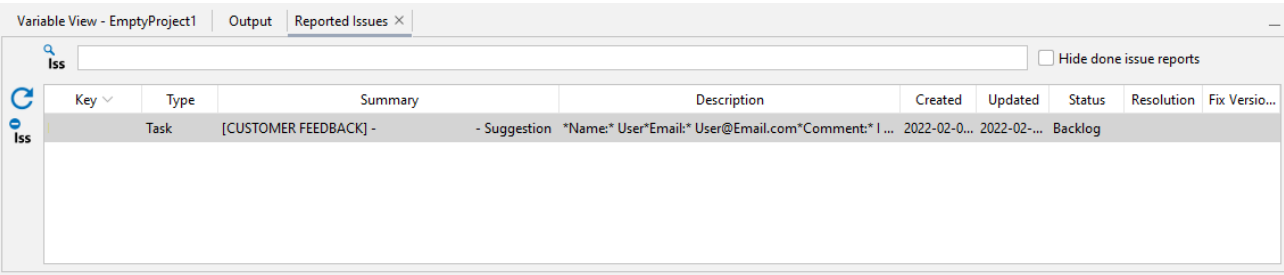

In this view all crash reports and feedback from this installment of the program are listed. The list can be sorted by either of the columns.
A double click opens the Reported Issue Details Window.




In this window the details about the issue can be viewed, including the current status and all comments, both by the user and by us. Changed fields will be highlighted in blue.
A new comment can be added in this window by you to add more information. Also files can be added to the issue.

If anything has changed in one of the issues, this symbol will be displayed in the lower right:



When the user clicks on the symbol, a bubble with information about the update is displayed. The blue underlined text can be clicked and opens the Reported Issue Detail window with this issue and the new information.

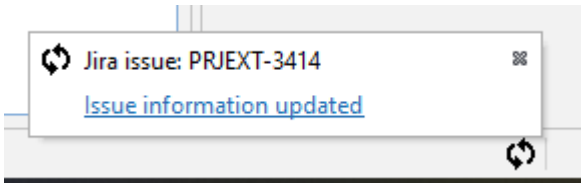

FAQ

Why shouldn't I just click "Don't send" mindlessly if a report pops up? Why should I care?

If you use the program regularly, you surely want the best experience possible when using it. We know that the program is not perfect (yet), but we want to make it as good as we can, and you can help make it a little better with your error reports and your feedback and ideas.

Will I get a feedback from you if I send reports?

Yes. With the new Issue View you have an overview of all your reports and the measures we take.

Will you do everything I suggest?

Probably not, except if you only have so very excellent ideas that we just need to implement them all. We will consider every suggestion though, and if we deem it a good idea for lots of customers, you may see your suggestion become reality in one of the next versions.

What will you do with my data and my project?

We will not use your email address for anything other than contacting you in case it is necessary to solve the issue at hand. We will only use your project to replicate the problem that you have. Neither will ever go to a third party.

How is my report sent to you?

We use a JIRA server to process reports. Every report creates a ticket in JIRA, which will then be looked at and processed by us. The ticket number will be displayed in a dialog after you have sent the report. You also have an overview of all your reports in the Issue View.

The undo/redo history looks like you are recording all my activities - are you spying on me?

No. Yes, we are recording your activities in the current session, but only for the purpose of being able to understand what you did before an exception occurred. You can see the complete history that you send to us beforehand. There is no sensitive data that could reveal any kind of intellectual property or sensitive information.

My report wasn't sent - why?

We see the following possible reasons why a report couldn't be sent:

- You don't have an Internet connection - nothing we can do about that, but when you reconnect you can send your reports again, see below.
- Our server is down - nothing you can do about that. Hopefully it will be back up quite soon. If in doubt, contact the technical support to find out what happened

- Computer says no - I hope you laughed now. This is a little easter egg, and by the way, thank you for reading our manual so deeply! Let's stay serious now and continue.
- The report is too big - There may only be short of 30.000 characters in a report. If you wrote a LOT in the description, maybe shorten it a bit and send the rest as a comment through the Issue View. If it happens that the exception stack trace is too large, please send it as a comment later instead.

My report wasn't sent because I don't have Internet connection. Is it lost now?

No, we buffer unsent reports until our JIRA server can be reached again. They will be sent the next time a report is successfully sent. We buffer up to 10 MB of report data (excluding attachments and project data).

11.2 EULA

IMPORTANT-READ CAREFULLY: This End-User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Topcon Electronics GmbH Corporation for the Topcon Electronics GmbH software product identified above, which includes computer software and may include associated media, printed materials, and "online" or electronic documentation ("Product"). **YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA BY INSTALLING, COPYING, OR OTHERWISE USING THE PRODUCT. IF YOU DO NOT AGREE, DO NOT INSTALL OR USE THE PRODUCT.** In addition, by installing, copying, or otherwise using subscription updates that you receive as part of the Product ("UPDATES"), you agree to be bound by the additional license terms that accompany such UPDATES. If you do not agree to the additional license terms that accompany such UPDATES, you may not install, copy, or use such UPDATES.

The Product is licensed by Topcon Electronics GmbH.

1. **Applicability Of License.** The licence is applicable to the OPUS Projektor and the included tools such as Updater. Future upgrades will be part of this EULA if not stated in a separated licence agreement for this upgrade or tool.

2. **General Grant of License.** In general, for each license you have acquired for the Product, one individual is authorized to use the Product according to the terms of this EULA. Unless expressly stated otherwise, the Product may not be separated for use by more than the one individual authorized to use the Product. For additional licences Topcon Electronics GmbH must be achieved from Topcon Electronics GmbH.

Without Licence the OPUS Projektor can be used as a demo version with limited functionality.

3. **Additional Rights And Limitations-General.**

3.1. **Limitation On Reverse Engineering, Decompilation, and Disassembly.** You may not reverse engineer, decompile, or disassemble the Product, except and only to the extent that it is expressly permitted by applicable law notwithstanding this limitation.

3.2. **Termination.** Without prejudice to any other rights, Topcon Electronics GmbH may cancel this EULA if you do not abide by the terms and conditions of this EULA, in which case you must destroy all copies of the Product and all of its component parts.

3.3. Not For Resale Software. All Software provided by Topcon Electronics GmbH is not for resale. The only party to sell Topcon Electronics GmbH Software is Topcon Electronics GmbH, if not stated in extra agreements.

Topcon Electronics GmbH holds no rights on the projects created with the OPUS Projektor.

3.4. Separation of COMPONENTS. The Product is licensed as a single product. Its COMPONENT parts may not be separated for use by more than one user (or for use on more than one computer for Server Software).

3.5. Prerelease Code. Portions of the Product may be identified as prerelease code ("Prerelease Code") or as Release Candidate (□RCx□). Such Prerelease Code or RC is not at the level of performance and compatibility of the final, generally available product offering. The Prerelease Code may not operate correctly and may be substantially modified prior to first commercial shipment. Topcon Electronics GmbH is not obligated to make this or any later version of the Prerelease Code commercially available. The grant of license to use Prerelease Code expires upon availability of a commercial release of the Prerelease Code or Release Candidate Code from Topcon Electronics GmbH.

3.6. Update License Terms. All UPDATES shall be considered part of the Product and subject to the terms and conditions of this EULA. Additional license terms may accompany UPDATES (as defined in the first paragraph of this EULA). By installing, copying, or otherwise using any UPDATE, you agree to be bound by the terms accompanying each such UPDATE. If you do not agree to the additional license terms accompanying such UPDATES, do not install, copy, or otherwise use such UPDATES.

4. Licenses Applicable to OPUS Projektor and its Plugins (Updater)

4.1. Demoversions. By providing the software to you, Topcon Electronics GmbH grants you the right to make and use up to 5 copies on your computer. The software has limited functionality and is intended for evaluation only.

4.2. Licenced Version Topcon Electronics GmbH will licence the OPUS Projektor if requested, latest together with the purchase of the development kit. Each licence file is linked to the computer the OPUS Projektor is installed on. For each installation copy a new license must be provided.

The licence grants access to the complete functionality of the OPUS Projektor.

4.3. Giving the software away: THE OPUS Projektor MUST NOT GIVEN AWAY TO A THIRD PARTY WITHOUT WRITTEN APPROVAL BY Topcon Electronics GmbH. This applies for demo versions as well as for licenced software versions.

4.4. DISCLAIMER OF WARRANTIES. Topcon Electronics GmbH provides the Product and support services AS IS AND WITH ALL FAULTS, and hereby disclaim all other warranties and conditions, either express, implied, or statutory, including, but not limited to, any (if any) implied warranties, duties or conditions of merchantability, of fitness for a particular purpose, of accuracy or completeness of responses, of results, of workmanlike effort, of lack of viruses, and of lack of negligence, all with regard to the Product, and the provision of or failure to provide support services. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT.

4.5. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL, AND CERTAIN OTHER DAMAGES. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL Topcon Electronics GmbH OR ITS PARTNERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT, OR BREACH OF WARRANTY OF Topcon Electronics GmbH , AND EVEN IF Topcon Electronics GmbH OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

4.6. LIMITATION OF LIABILITY. Topcon Electronics GmbH is not responsible for the functionality and safety of the projects created with the OPUS Projektor. The complete responsibility including testing and verification is within the responsibility of the customer using the OPUS Projektor. This includes all liabilities that might occur by not correctly working projects.

4.7. The Product is protected by copyright and other intellectual property laws and treaties. Topcon Electronics GmbH owns the title, copyright, and other intellectual property rights in the Product. The Product is licensed, not sold.

11.3 ISO 17215 Camera Configuration


The ISO 17215 standard provides a standardized way to configure ethernet cameras in an automotive environment.

The ISO 17215 ethernet camera configuration tool is a small desktop application that allows configuration of ethernet cameras that support ISO 17215. It is intended for end of line configuration.

To open the tool, select **Tools => Camera => ISO 17215 Camera Configuration**.

The tool allows retrieving and setting of some of the standardized mandatory settings and also camera manufacturer specific settings if available.

To be able to change camera settings, the tool has to be licensed. See Licensing chapter below for more details.

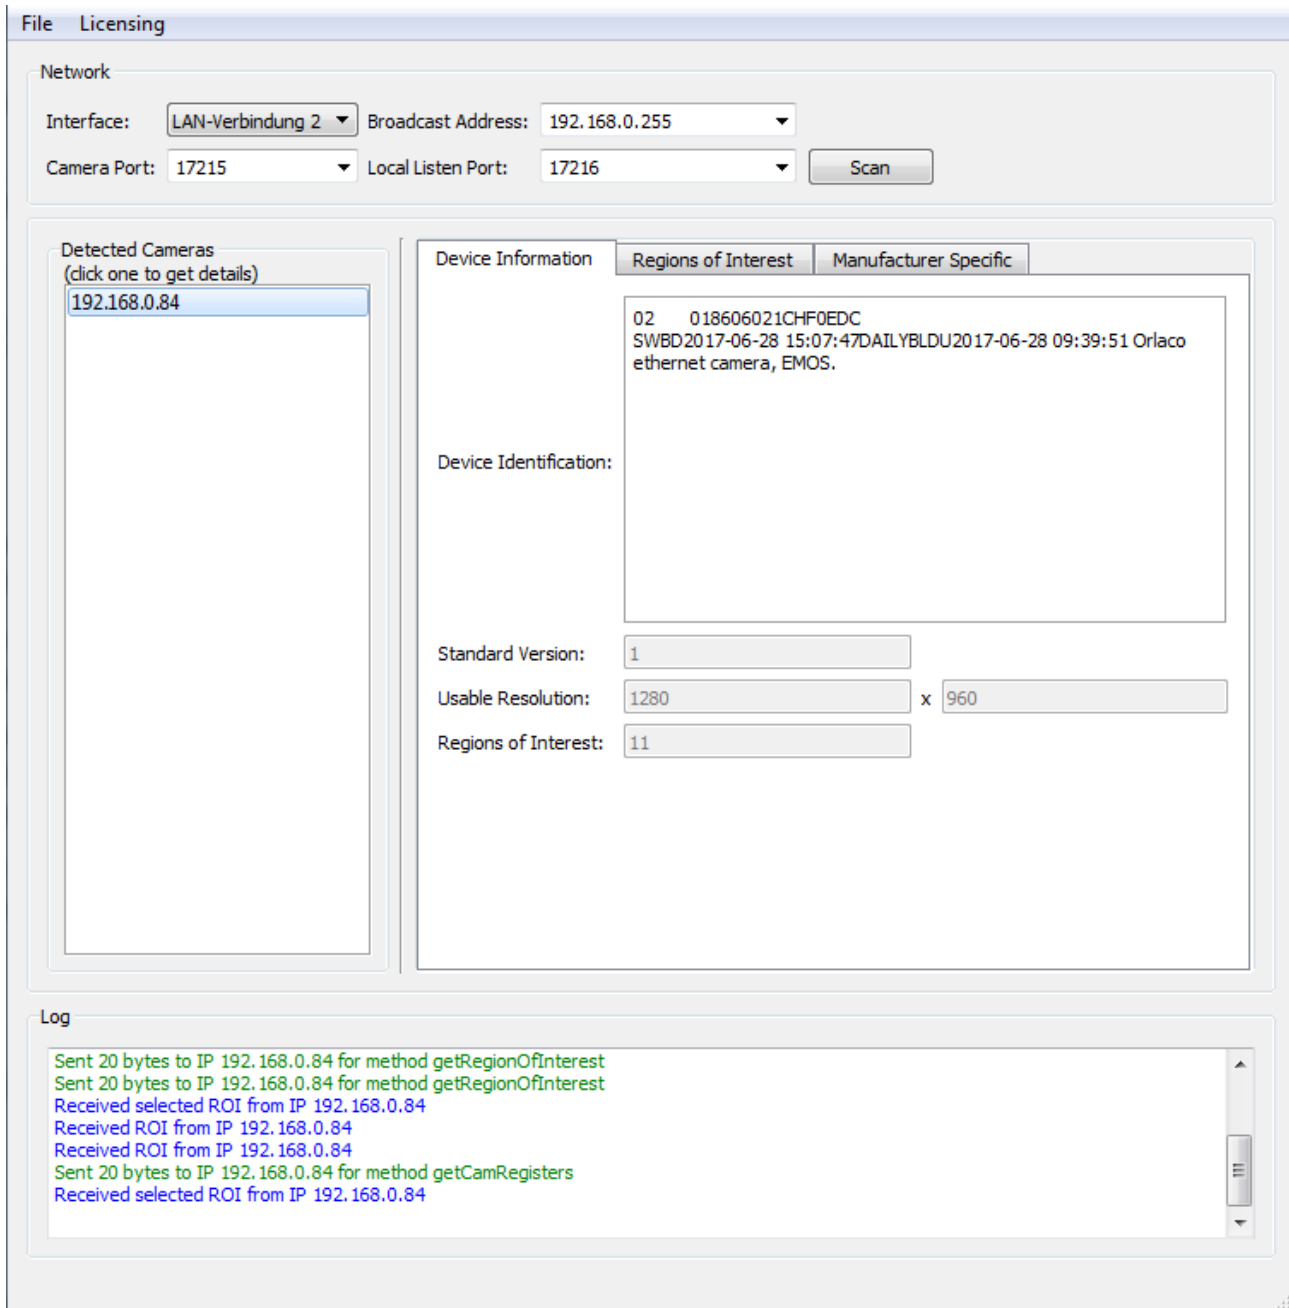

Network settings and scanning

On start up, the tool automatically scans the available ethernet interfaces of the PC and lists them in the **Interfaces** drop down box. It only lists interfaces that are up and running (e.g. are configured and a cable is connected). Choose the interface to which the camera is connected.

The **Broadcast Address** field will automatically be filled with the matching IPv4 broadcast address of the chosen interface but can be changed manually if needed. Note that the network address of the interface has to be configured so it matches the network of the camera (e.g. if the camera has the address 192.168.135.16, the interface on the PC should also have an address in the 192.168.135.X network (where X needs to be an unused number, typically 1)).

If the IP address of your network interface can't be changed, consider using a second network card / USB-Ethernet interface.

The **Camera Port** field needs to contain the UDP communication port number on which the camera listens. This is not the port for the actual video stream but the one for the ISO 17215 communication. Typical values are 17215 (ISO 17215), 30490 (SOME/IP-SD) or 30391 (SOME/IP).

The **Local Listen Port** field contains the UDP port to which the camera will send its answers (the port on which the PC tool will listen). Typically this is **Camera Port + 1**.

Refer to the manufacturer documentation of the camera to get the matching addresses and port numbers.

When hitting the Scan button, a service discovery broadcast message is sent on the selected network. If one or more camera answer the request, they will be listed in the **Detected Cameras** list.

☐ Camera settings and configuration

When a camera is detected, it will be listed in the **Detected Cameras** list. Select one of the detected IP addresses to select the camera.

The data set of the camera will automatically be requested and the information is presented in the **Device Information** tab.

☐ Device Information

The **Device Identification** typically shows the name and/or type of camera along with manufacturer and hardware software revisions. The content of this field is manufacturer specific.

The **Standard Version** field contains the supported ISO 17215 standard version.

The **Usable Resolution** Fields represent the horizontal and vertical resolution of the camera's sensor.

The **Regions of Interest** field contains the number of available regions of interest that can be configured (see below).

☐ Regions of Interest

The screenshot shows the 'Regions of Interest' configuration window. It features three tabs: 'Device Information', 'Regions of Interest' (active), and 'Manufacturer Specific'. The 'Regions of Interest' tab is divided into several sections: 'General' with a 'Select Region of Interest' dropdown menu set to '1' and an 'ROI Configuration Wizard' button; 'Sensor Geometry' with input fields for P1 X (1280), P1 Y (960), P2 X (0), and P2 Y (0); 'Output' with 'Output Resolution' set to 800 x 600; 'Stream' with 'Video Compression' set to (M)JPEG and 'Max. Bitrate' set to 15 MBit/s; and an 'Apply above settings' section with a button 'Apply the above settings of the selected ROI to Camera' and a checked checkbox 'Subscribe to this ROI'.

A Region of Interest (ROI) defines a setting that consists of

- the region of the camera's sensor that shall be used (Sensor Geometry)
- the output resolution
- video compression
- maximum bit rate that shall be used for the video stream

The **Select Region of Interest** drop down box lets you select one of the available ROIs of the camera. The current setting of each ROI will be downloaded from the camera when changing the selection.

Note: ROI 0 is typically read-only! Select another number to make changes.

To change the camera sensor geometry, two points on the sensor surface can be changed (P1 and P2). The points form a rectangle on the sensor surface where P1 is the top left point of the rectangle and P2 is the lower right point of the rectangle. The orientation of the points can also be changed to create a horizontal and/or vertical mirroring of the camera image (e.g. if P2 is moved to the left and above P1, the image will be horizontally and vertically mirrored). The rectangle defined by P1 and P2 define the resolution of the captured image.

The **Output Resolution** fields define the resolution of the actual video stream. If the sensor resolution is different to the output resolution, the camera will scale the image accordingly. Choose the lowest possible output resolution to save bandwidth (e.g. if your

display has a resolution of 800x480, it makes no sense to choose an output resolution of 1280x960).

WARNING: A certain combination of sensor geometry and output resolution may not be supported by the camera. This is a manufacturer specific limit and can not be checked. Please check camera documentation and error output!


In the **Video Compression** drop down box the type of video compression can be selected. Select the type that is supported by the display.

The **Max. Bitrate** field defines the maximum bit rate used by the camera. The lower the value, the higher the compression and the lower the used bandwidth will be:

- Low Bitrate: High compression, worse picture quality, better display performance
 - High Bitrate: Low compression, better picture quality, worse display performance
- Select a bitrate limit that gives the best compromise in picture quality and performance.

To save the settings for the selected ROI, hit the **Apply the above settings of the selected ROI to Camera** button. If the check box **Subscribe to this ROI** is enabled, the camera will directly use this ROI for video streaming. If the checkmark is not enabled, the ROI settings will be saved but the camera will still stream with the settings of the previously selected ROI (only if another ROI than the currently selected was active).

To make the settings of sensor geometry and output resolution more intuitive, a ROI Configuration Wizard is available. Hit the **ROI Configuration Wizard** button to open it.

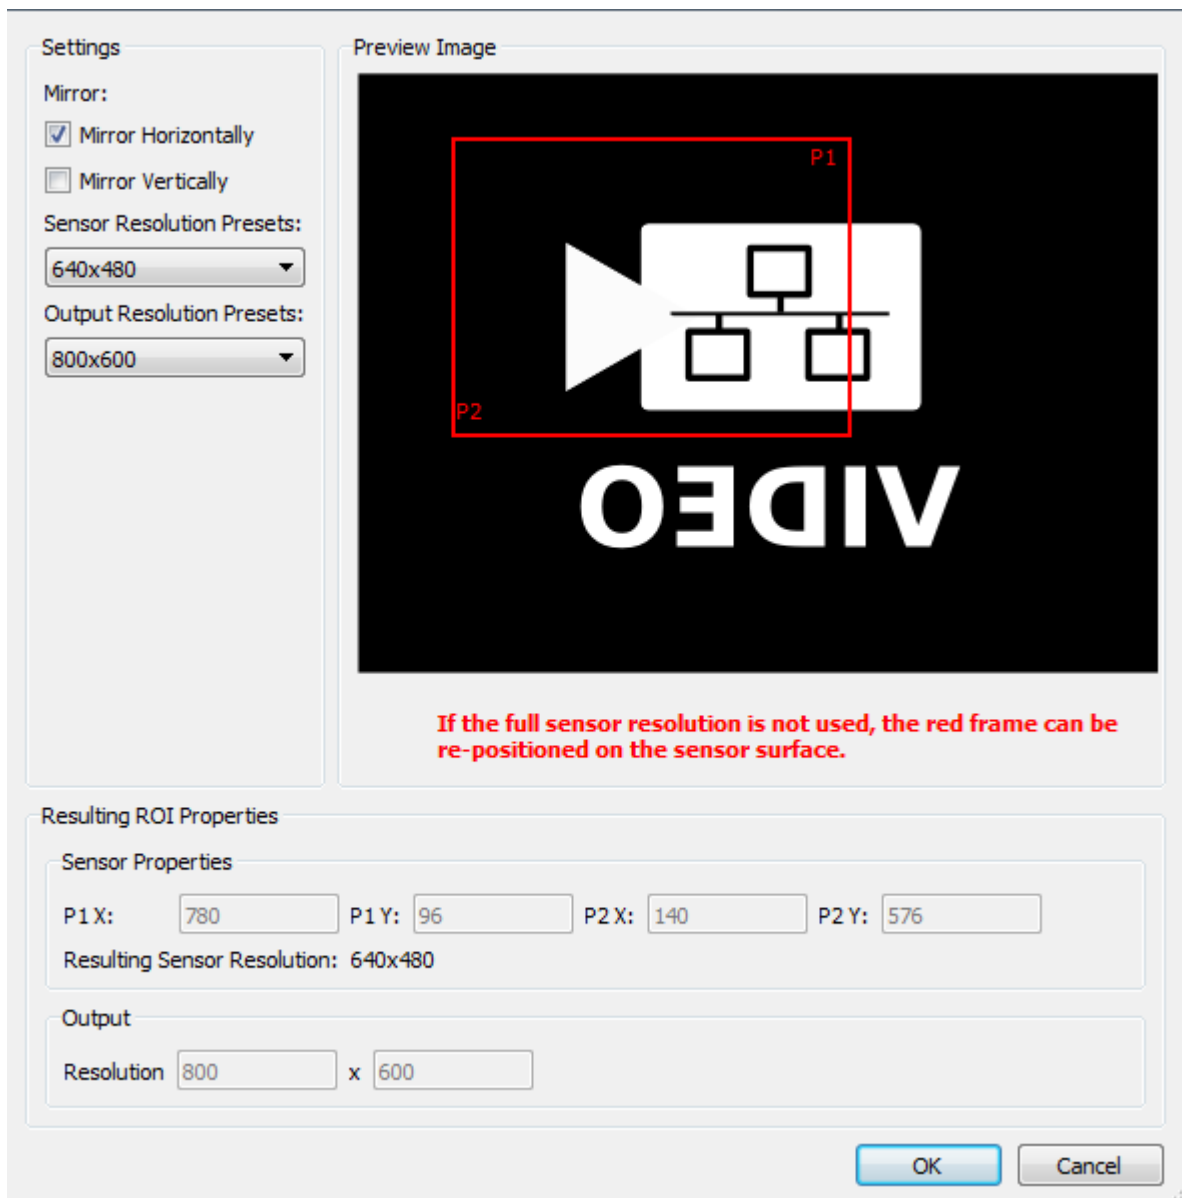

Use the **Mirror Horizontally** (left will be right, right will be left) and **Mirror Vertically** (up will be down, down will be up) check boxes to configure mirroring of the camera. The preview image will change according to the mirror settings.

Use the **Sensor Resolution Presets** drop down box to select a region of the camera sensor.

Use the **Output Resolution Presets** drop down box to select the resolution of the video stream.

If the resolution selected in **Sensor Resolution Presets** does not cover the full sensor area, the red rectangle in the **Image Preview** can be positioned with the mouse to select the desired region of the camera sensor that shall be used.

The resulting ROI properties (P1/P2 and output resolution) are displayed at the bottom.

Note: The sensor and output resolution presets are currently designed to work with an Orlaco Emos camera. Not all presets can be combined with this camera. A warning will be displayed if a resolution combination will not work for that camera. Other cameras might support that combination so it is still possible to apply this to the camera. Note the error output in the **Log** window for error messages.

When pressing the **OK** button, the ROI settings from the wizard will update the settings in the Regions of Interest tab of the tool itself. Press the **Apply...** button to save it to the camera.

Manufacturer Specific

The **Manufacturer Specific** tab contains settings for a certain camera manufacturer. The settings that can be made here are not part of the ISO 17215 standard. Therefore special implementations for every camera manufacturer and even model need to be implemented.

Currently only settings specific to an Orlaco EMOS camera are supported. If manufacturer settings for other brands and models are needed please contact support.

Warning: These settings should only be changed if the meaning of the settings are very clear and match the target / configuration platform. Setting a wrong value here might make the camera unresponsive and not being able to work or be configured after that! Changing settings here is on your own risk. The provider of this tool is not responsible for any harm that a misconfiguration may cause!

Orlaco EMOS

Only change the settings in this tab if an Orlaco EMOS camera is connected and selected. When enabling the **I am sure that this is an Orlaco EMOS camera** check box, the current settings are downloaded from the camera and can be changed. Every setting needs to be changed separately with the matching **Set** button. After the **Set** button was clicked, the field will be cleared and the new setting will be downloaded from the camera. Watch the **Log** section for error messages.

Note that some of the settings will only have an effect after switching the camera off and on again.

Device Information
Regions of Interest
Manufacturer Specific

Orlaco

☒ I am sure that this is an Orlaco EMOS camera

Change manufacturer specific settings at own risk!

Static IP Address:	192.168.0 .84	Get	Set
Static Network Mask:	255.255.255.0	Get	Set
MAC Address:	70:b3:d5:ea:e7:20	Get	
DHCP:	disabled	Get	Set
DHCP Host Name:		Get	Set
RTP Stream Destination Port:	50004	Get	Set
RTP Stream Destination IP Address:	255.255.255.255	Get	Set
RTP Stream Destination MAC Address:	ff:ff:ff:ff:ff:ff	Get	Set
RTP Stream Source Port:	50004	Get	Set
HDR:	enabled	Get	Set
Overlay:	enabled	Get	Set
LED Mode:	auto	Get	Set
Stream Protocol:	RTP	Get	Set
Flash Mode:	normal	Get	Set
VLAN ID:	101	Get	Set
Stream ID:	DBTEST	Get	Set
UDP Communication Port:	17215	Get	Set
Sensor Temperature (°C):	42		
Board Temperature (°C):	38		
LED Temperature (°C):	32		
LED Percentage:	0		

Static IP Address

The static IPv4 address of the camera. Change this to an address that matches the target system network. DHCP can also be enabled.

Static Network Mask

The static IPv4 network mask of the camera. Change this to a mask that matches the target system network. DHCP can also be enabled.

MAC Address

The MAC address of the camera. This setting is read-only and can not be changed.

DHCP

Select if DHCP shall be used or not. If DHCP is enabled, the camera will only work if a DHCP server is available in the network. If DHCP is disabled, the static IP address and mask will be used.

DHCP Host Name

It is not 100% clear what this field means. Therefore we don't allow to change anything here. Maybe this will contain the DHCP host name if the camera was configured by a DHCP server?

RTP Stream Destination Port

To this UDP port the actual video stream will be sent.

RTP Stream Destination IP Address

In this field either a specific destination IP address or a broadcast address (e.g. 255.255.255.255) can be entered. If a specific address was set, only the display with that address can receive the video stream.

RTP Stream Destination MAC Address

In this field either a specific destination MAC address or a broadcast address (e.g. ff:ff:ff:ff:ff:ff) can be entered.

If a specific MAC address was set, only the display with that address can receive the video stream. This can be used if an intelligent switch is used in the network. This switch then routes the video stream packets only to the port where the display with the specified MAC is connected.

If a broadcast MAC address is entered, the ethernet packages will be sent to every participant in the network.

RTP Stream Source Port

The UDP source port of the video stream. Can be same or different as/to **RTP Stream Destination Port**.

HDR

Enable or disable the HDR (High Dynamic Range) setting of the camera. If enabled the camera can produce pictures with different light conditions better.

Overlay

If enabled, two rotating arcs are overlaid to the video stream. This helps the user to detect video freezes and is a safety feature.

LED Mode

LED Mode can be either **enabled**, **disabled** or set to **auto**. The effect of this setting is currently unknown.

Stream Protocol

Select **RTP** or **AVB** for setting the stream protocol. Many displays only support RTP.

Flash Mode

This property can be set to **normal**, **flash** or **flashed**. The purpose of this is unknown.

VLAN ID

Here the ID (tag) of a VLAN can be set. Set to 0 to disable VLAN tagging. Any other value will tag the ethernet stream packages with the configured VLAN ID.

Stream ID

Here the name or ID of the stream can be set. This is for identification purposes only (e.g. set the name of the camera to be able to identify it later in the vehicle: frontCAM, backR, backL, etc.). Max. 8 characters.

UDP Communication Port

The UDP port for doing ISO 17215 communication with.

Sensor Temperature (°C)

The current temperature of the camera sensor. Read only.

Board Temperature (°C)

The current temperature of the camera board. Read only.

LED Temperature (°C)

The current temperature of the camera LED. Read only.

LED Percentage

The current camera LED brightness in %. Read only.

Selected ROI

The currently selected ROI. This can also be changed in the Regions of Interest tab.

No Stream at Boot

Select **stream** or **no stream**. If stream is selected, the camera will begin streaming the video directly after connecting it to power. If no stream is selected, the camera will only stream after someone subscribed to a ROI.

Wait for MAC:

do not wait or **wait** can be selected. It is currently unknown what this setting means. This may make the camera unresponsive for any configuration messages. **This setting should NOT be set to wait currently.**

Wait for PTP sync:

do not wait or **wait** can be selected. It is currently unknown what this setting means. If wait is selected, the camera will wait for a PTP (precision time protocol) message on startup before it will do something else. If this PTP mechanism is not supported on the system, this makes the camera unresponsive for any configuration messages. **This setting should NOT be set to wait currently.**

Log

Check the Log window for message with the tool and the camera. Error messages are shown in red color. Reception messages are shown in blue. Sent messages in green.

Licensing

If the OPUS Projektor is not licensed, settings from cameras can be read but no changes can be sent to the camera.

Please contact your vendor to obtain a license for the tool.

If a license was already obtained and the tool is started from within the program, the existing license file will automatically be provided to the tool.

If this tool shall be used as a stand-alone version, existing customers may also send a license request to the vendor. This request needs to contain the key file which can be generated via **Licensing => Generate Key File**. The vendor will return a license file which can be loaded via **Licensing => Load License File**. The location of the license file will be remembered and only needs to be done once (or whenever the license file is moved on the file system).

11.4 Online Update

With this version we are introducing the possibility to receive online updates of the OPUS Projektor. These can be bug-fixes, new features or updates of the device software.

Please note: The update is modular, but it always comes in one package, i.e. you cannot update only some of the parts that are updated, either you keep the version you have or you update to the new one available.


Please note: If OS or PClient files are updated, they will overwrite the existing files. If you still need the old versions, please create a backup for yourself. The OS and PClient files can be found in the user folder under the program name, then in extracted components and then os / pclient.

Please note: During deinstallation of the program, the version shown will be the version originally installed, not the version reached through the online updates.

Please note: Files that were downloaded for the online updates will not be deleted during deinstallation, as they were not part of the original installation. If needed, delete these files yourself.


Settings

All relevant settings can be made in the menu Tools -> Plugins.

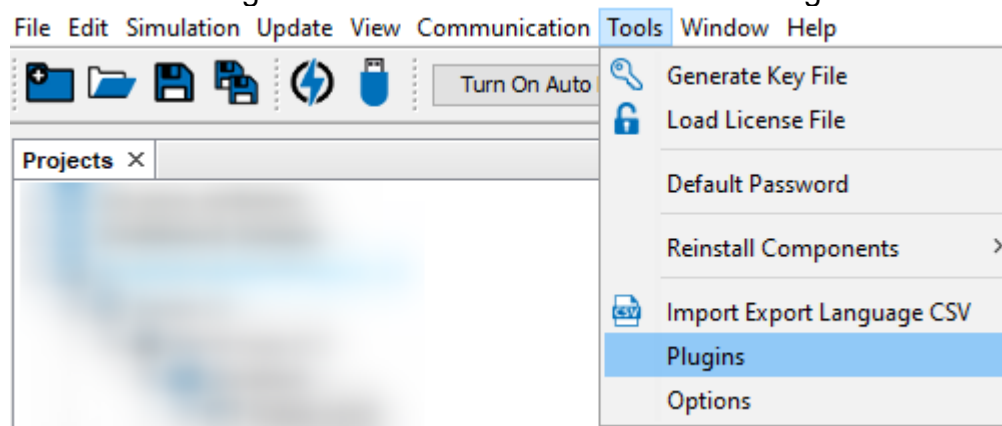

In the Settings tab, the URL for the update check is set. Normally this setting should not be modified by the user.

In the bottom, the interval for the check of available updates can be changed. By default, the program will check for updates at every startup.

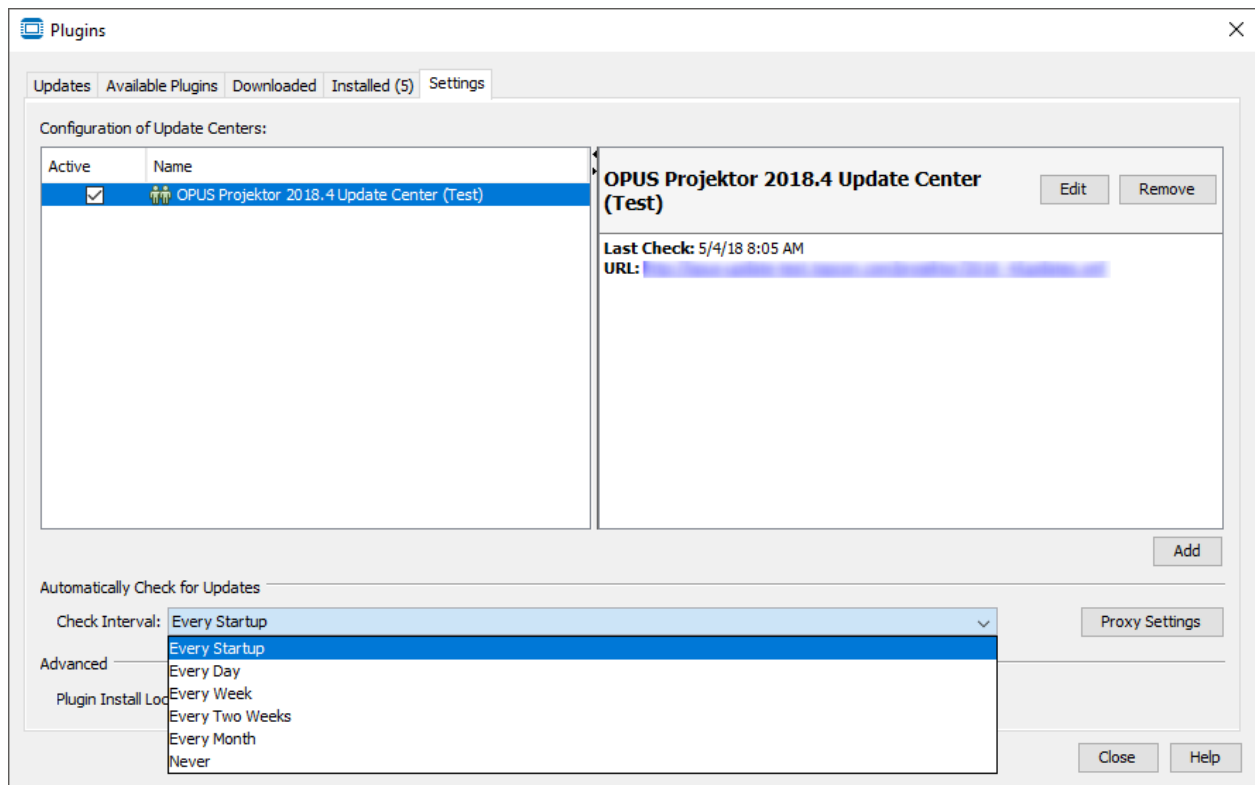


If you don't want to receive notifications about updates, set this to Never.


Please note that you should never deactivate or uninstall modules in the Installed tab. This will break the functionality of the program.

Update Process

When an update is available, you will be notified with this symbol in the lower right corner:

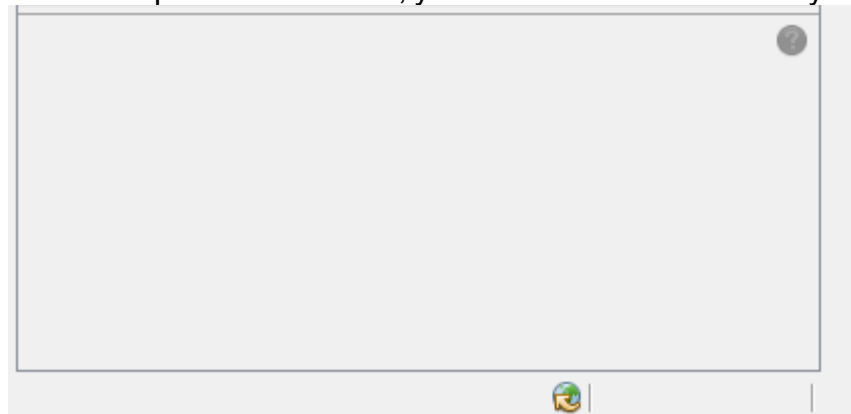


Additionally, an information bubble will be shown when the update is first recognized:

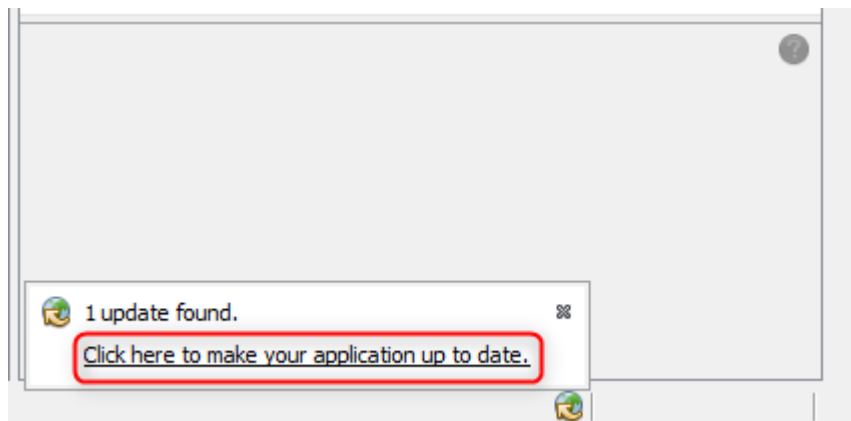


If you close the bubble, you will not be notified again until the set check interval occurs. Click the link in the bubble to see the content of the update.


Alternatively, you can check for updates yourself in the dialog Tools -> Plugins in the tab Updates and click the button Check for Updates. Click the button Update to start the update process.

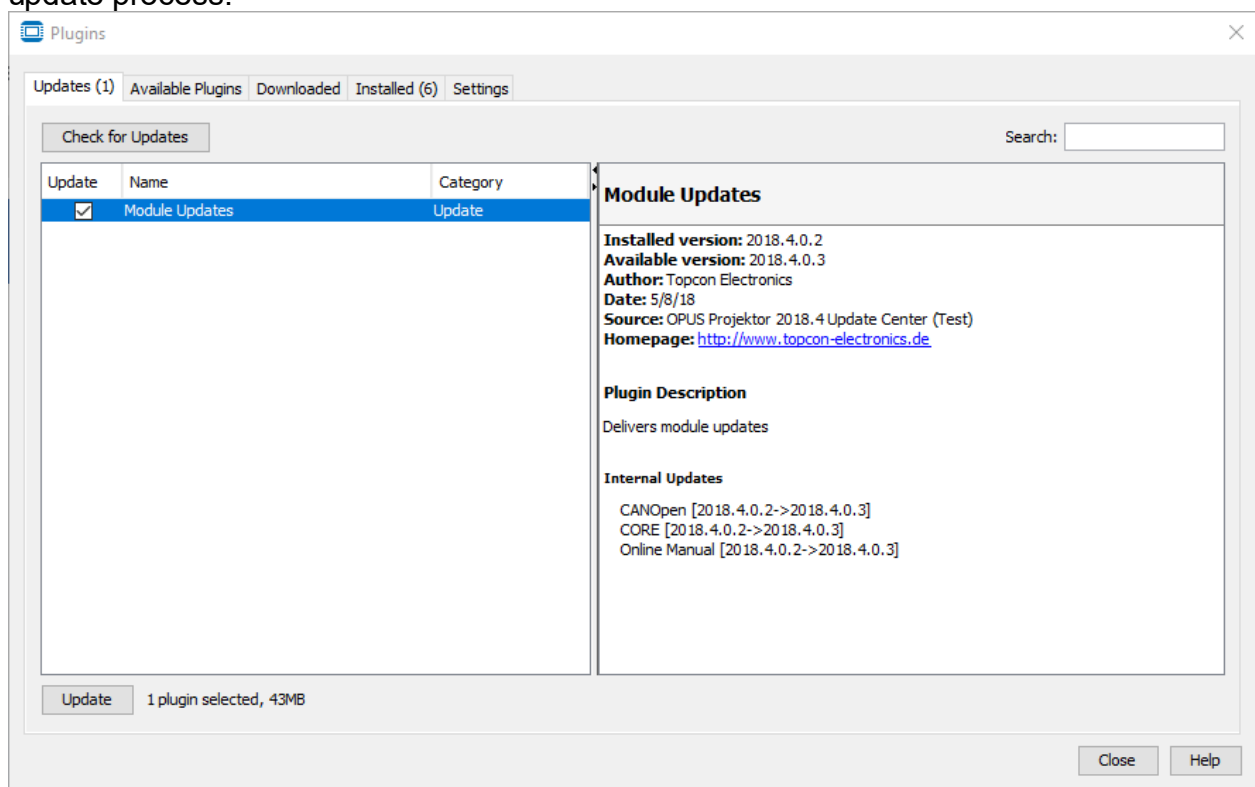

In the next screen you can see the list of modules, i.e. parts of the OPUS Projektor, that are updated. Cancel stops the update process and you will not be notified again about this update until the set check interval occurs. Click Next to continue.

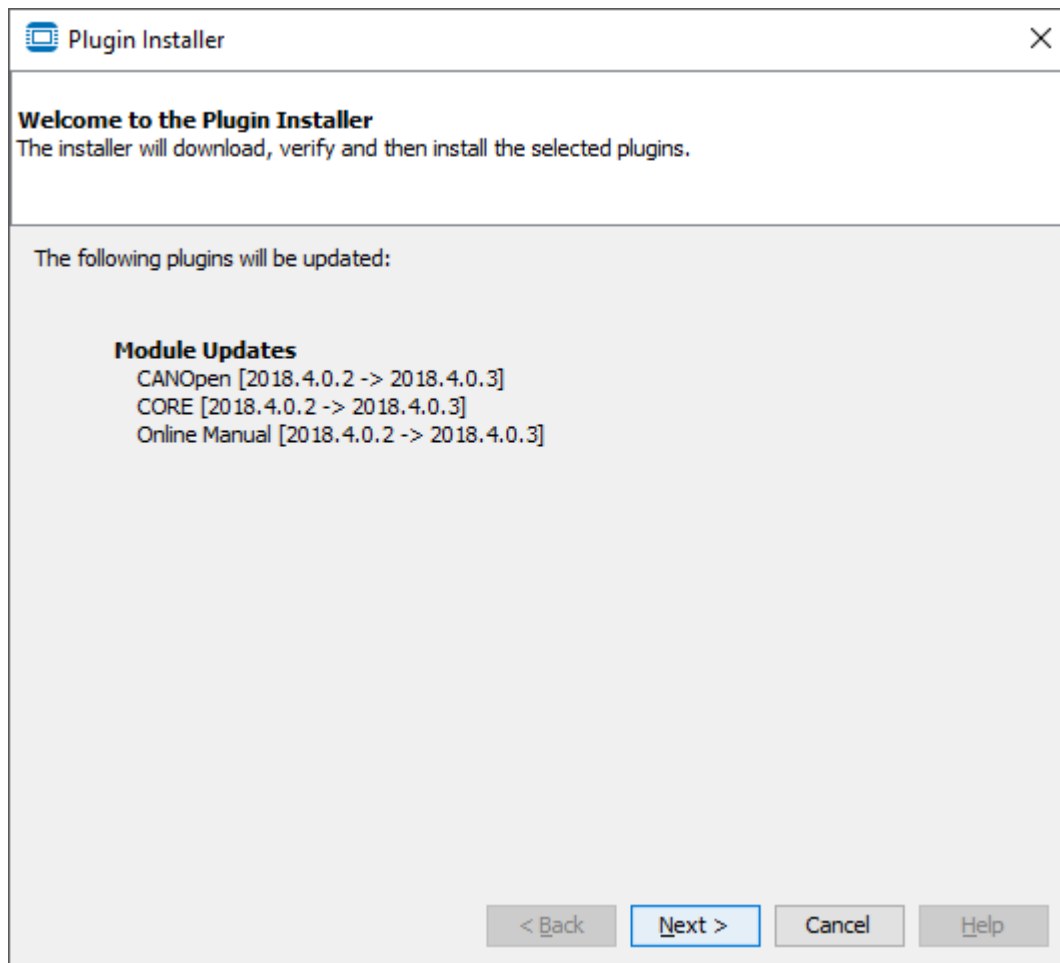


In the next screen you might see a license agreement for each module (depending on whether a new update is already available at the time of the original installation). In most cases these will be identical for all modules. Cancel stops the update process.

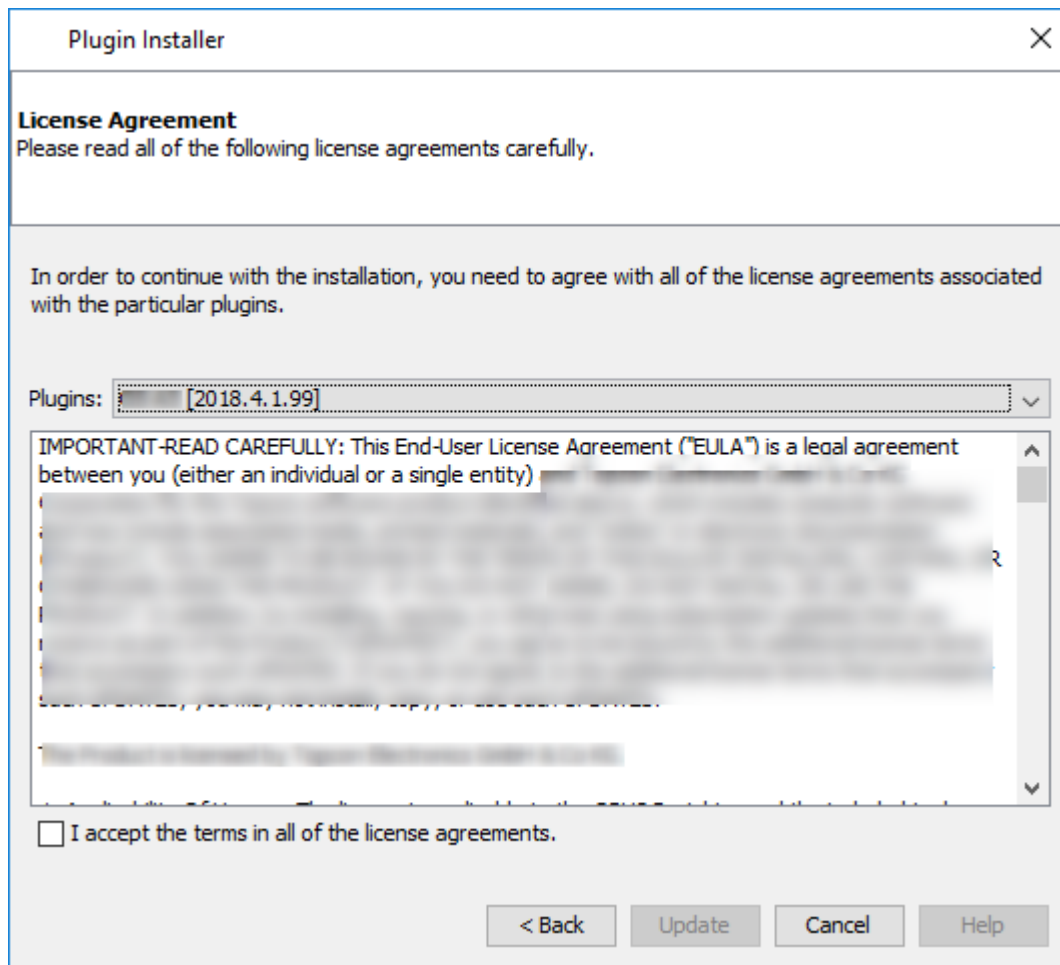


Click the check box to accept the license agreements and then click Update to continue with the update.

 
If you have started the update from the bubble, it will be downloaded in the background, so you can continue to work. The download progress will be shown in the bottom right. Clicking the X symbol stops the download of the update content.

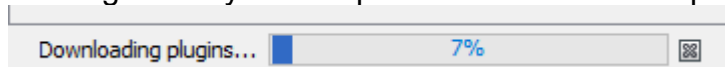

If you have started the update from the Plugins dialog, you will see a popup with information about the download. If you activate the check box Run In Background, the popup will be closed and the download will be shown in the status bar in the bottom right.

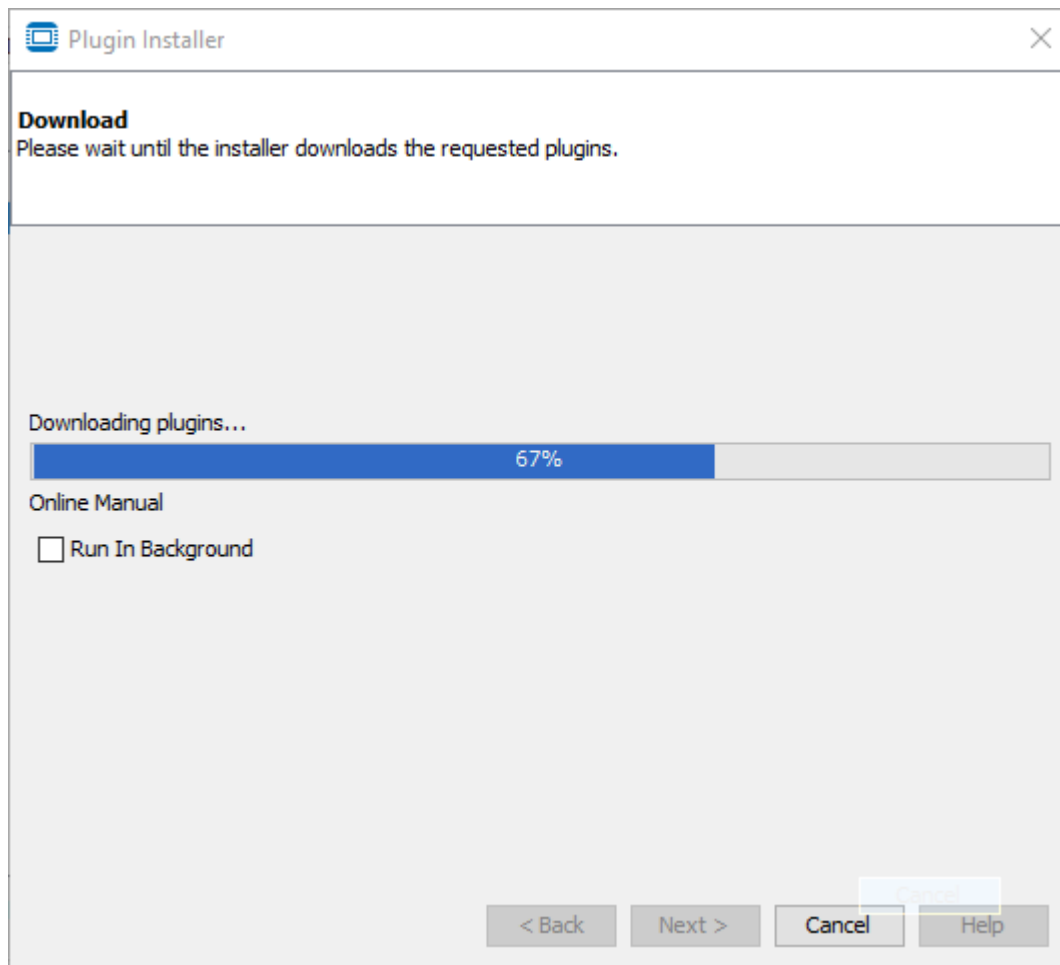


Once downloading has finished, a dialog with the module certificate verification pops up.

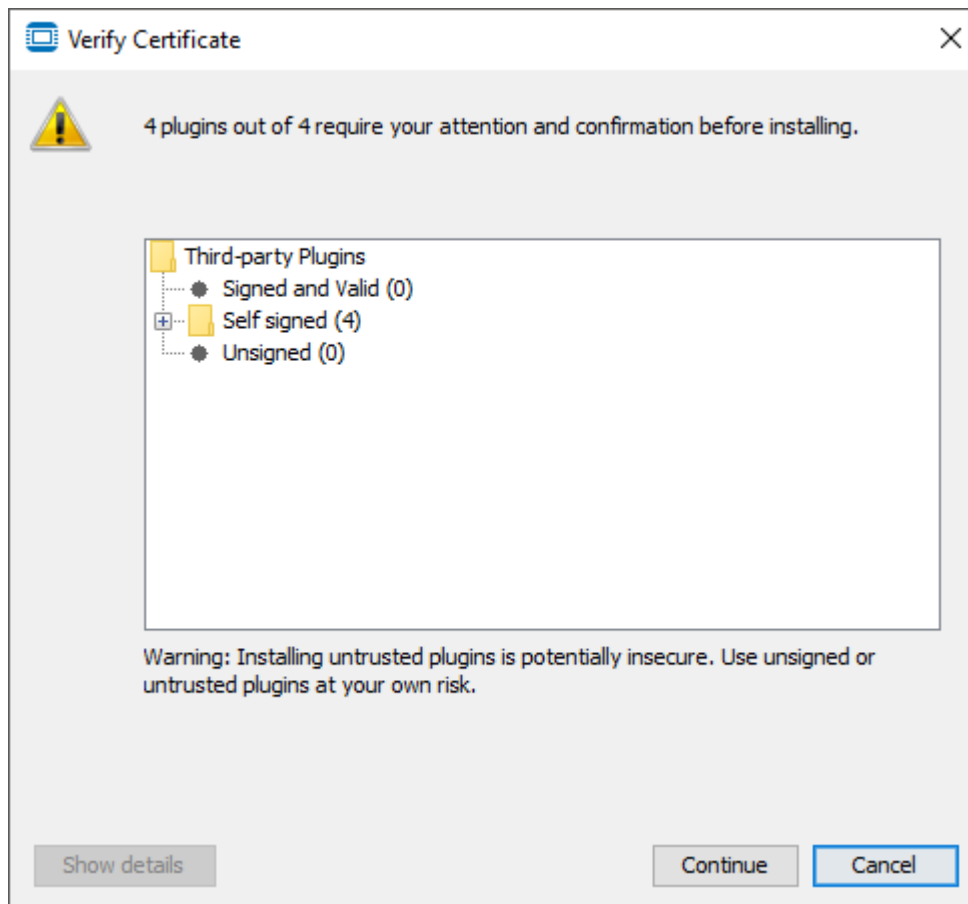

There are 3 possibilities for modules:

- Signed and Valid - This will not be used by us since we can't let our modules be validated externally
- Self Signed - This is where our modules will be. We have signed them ourselves
- Unsigned - Our modules will never be unsigned. If you ever have an unsigned module listed here, contact us with a screenshot and don't install the update


You can check the certificate for each module by selecting a module and clicking Show details.

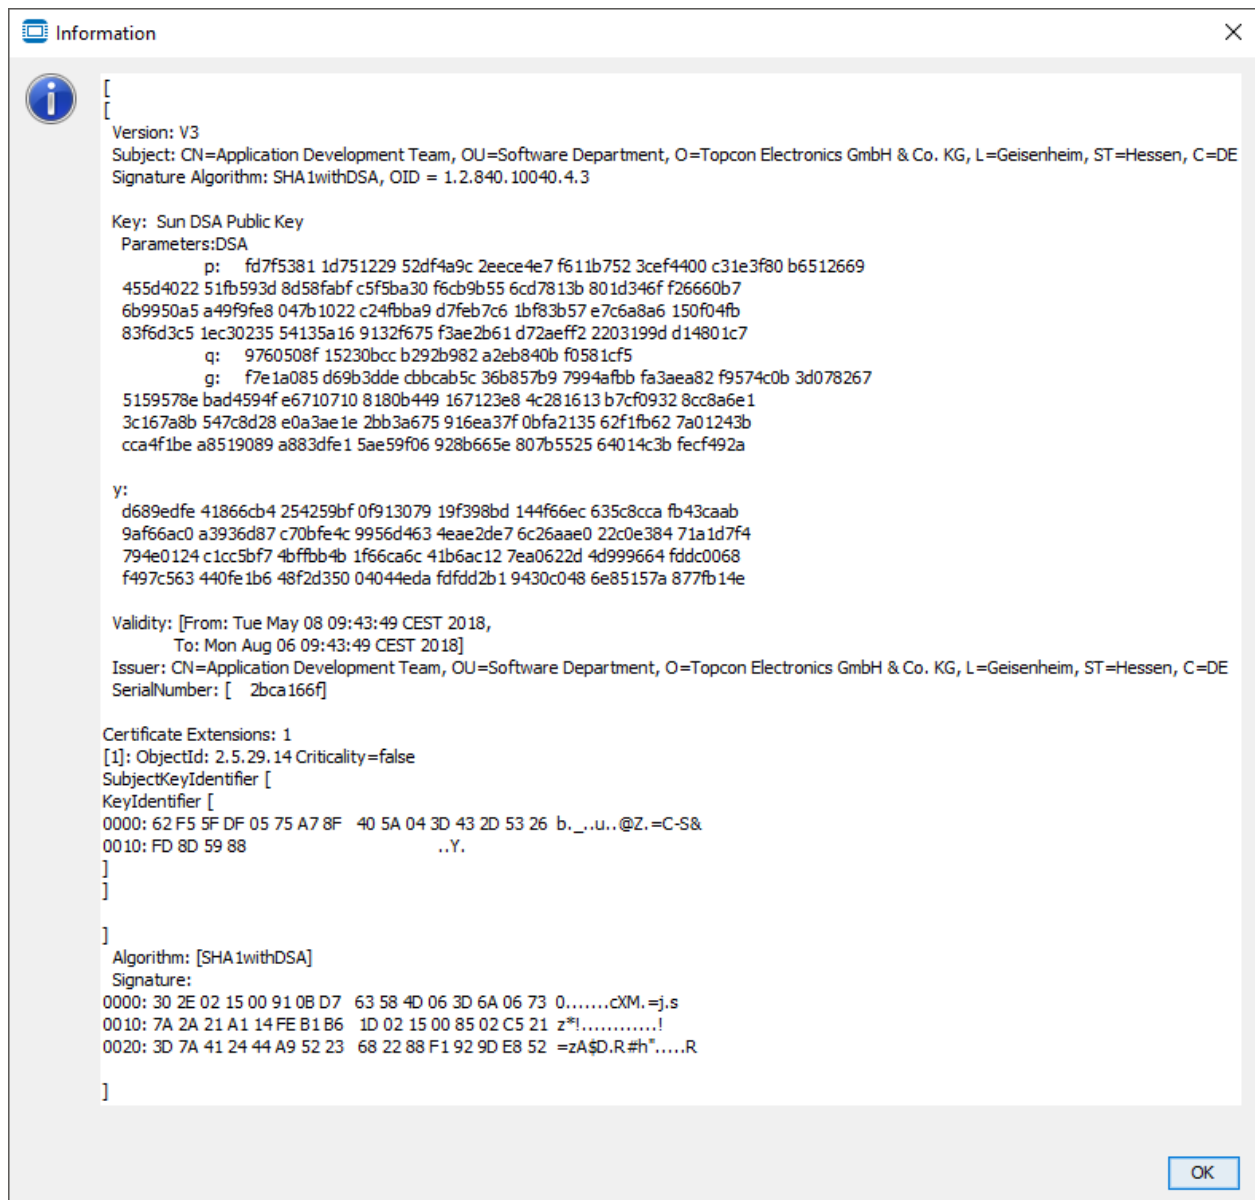

Click OK to close the certificate information.

In the certificate verification dialog, press Continue to progress in the update installation. Cancel stops the update process. Click Next to start downloading the update.


After the verification, a bubble will show up that asks you to restart the program to complete the installation.

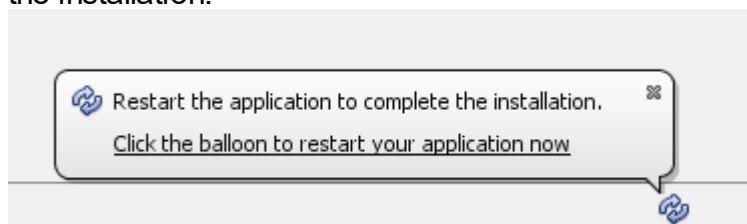

Click the balloon to restart the program and finish the update installation.

Alternatively, if you started the update from the Plugins Dialog, you will see a confirmation dialog that asks you to restart the program. Cancel stops the update process. Select Restart Now and then click Finish to install the update. Select Restart Later to continue working and restart later. The bubble shown above will pop up in the status bar in the bottom. Click the bubble to restart the program. You can also close the OPUS Projektor manually and at the next start, the update will be finished.

You will first see a screen with the update progress and information what is installed.

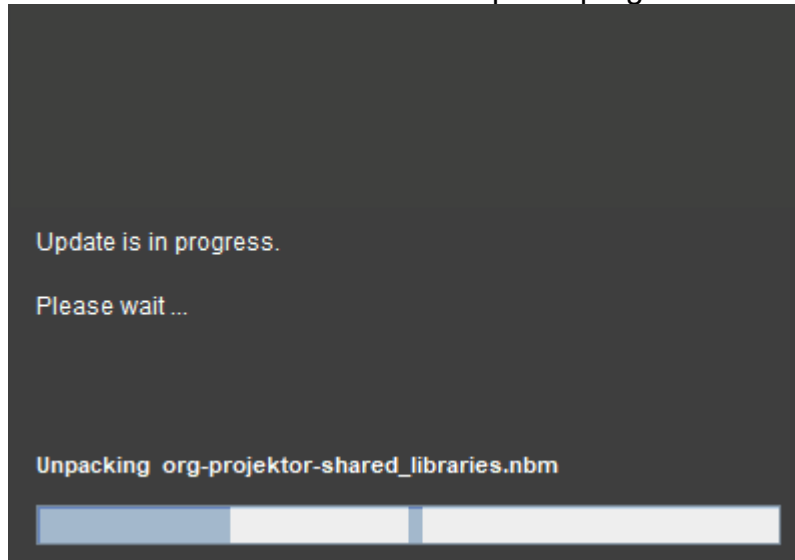

Afterwards the OPUS Projektor will start again and the update is finished. Please note that it might take a while until the splash screen pops up.

After the program has opened, check the release notes in the Start Page for information about the update.

Information about the modules

The following modules can be part of updates:

Branding - This module contains some visual elements and formatting.

[Camera ISO17215](#)⁷³⁹ - This module contains the Ethernet camera tool.

[CANFreestyle](#)³⁴⁰ - This module contains CANFreestyle CAN protocol functionality.

[CANOpen](#)³⁶⁰ - This module contains CANOpen CAN protocol functionality.

CAN IO - This module contains the [DBC import](#)⁴¹³ functionality.

[Converter](#)⁴⁴ - This module contains the project conversion functionality.

CORE - This module contains the core functionalities of the program.

Data Storage - This module contains functionalities for the project storage.

[Encoding Support](#)⁵⁹⁹ - This module contains functionality for UTF8 support.

Java Runtime Environment - Java runtime to run the program.

[J1939](#)³⁷⁴ - This module contains J1939 CAN protocol functionality.

Module Updates - This module doesn't contain specific functionalities, it is a master module for the [update process](#)⁷⁴⁹.

[Object Themes](#)⁶³³ - This module contains the object theme functionality.

[Online Manual](#)¹³⁸ - This module contains the offline version of the manual you are reading right now.

[OS](#)⁷¹⁷ - These modules contain the OS files for the different devices.

[PClient](#)⁷¹⁷ - This module contains the PClient files for the different devices.

[Project Samples](#)¹³⁸ - This module contains the sample projects.

SharedLibraries - This module is used by external C++ applications (Updater, Simulation GUI).

[Symbols ISO7000](#)¹⁴⁹ - This module contains the ISO 7000 symbol library.

Third Party - This module includes third party libraries used by other modules.

[Updater](#)⁷¹⁷ - This module contains the updater functionality.

Utilities - This module contains some general functionalities.

[Variables](#)¹⁸⁸ - This module contains the predefined variables.

[Visual CAN Mapping](#)⁴²⁹ - This module contains the visual CAN mapping functionality.

Welcome - This module contains the contents of the start page that is shown when the program starts.

11.5 Open Source Information

Both the OPUS Projektor and the client on the device use open source software.

On the PC, the licenses for the used open source software can be viewed in the menu Help -> About. A click on the button Show Open Source Licenses opens a browser with the open source licenses used for the PC program.

The licenses for open source software used on the device can be read in the [Welcome Project](#)⁷⁵⁹ in the menu Service Project -> System -> OSS Licenses.

11.6 Tutorial Videos

We have created a number of tutorial videos about the OPUS Projektor and its usage. Some of them are linked within the topics of this manual.

For a complete list, please visit [the Topcon Electronics Projektor Tool tutorial video page](#).

11.7 Welcome Projects

When you purchase a new device, a welcome project is usually installed on the device.


Additionally, the welcome project can be chosen to be part of the [OS / PClient update](#)⁷¹⁷.

Please note that the welcome project is installed in a separate location and will only start automatically if no user project is installed.

The Welcome Project can also be triggered to start if the key combination F1 + F3 (first and third key (on the left for devices with two rows of keys)) is pressed during the start of the device.


Finally, the Welcome Project is also started if a file /opt/LOAD_WELCOME_PROJECT exists (this can be created within the customer project, with e.g.
runSystemCommand("touch /opt/LOAD_WELCOME_PROJECT");
and a reboot afterwards.

Please note that the welcome project is also available as a [sample project](#)¹³⁸.

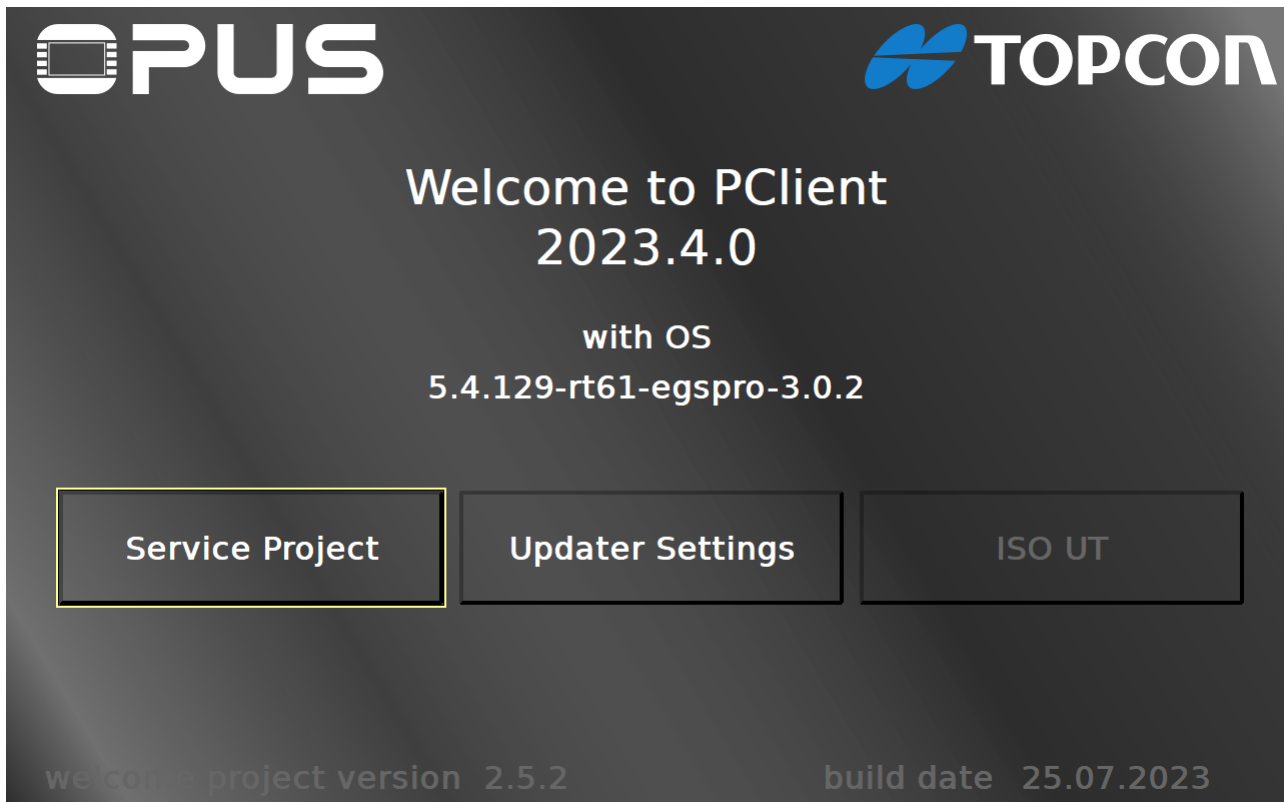

No Touch Mode

If your device has no input method, i.e. no keys and no touch, the welcome project will start in a no touch mode.

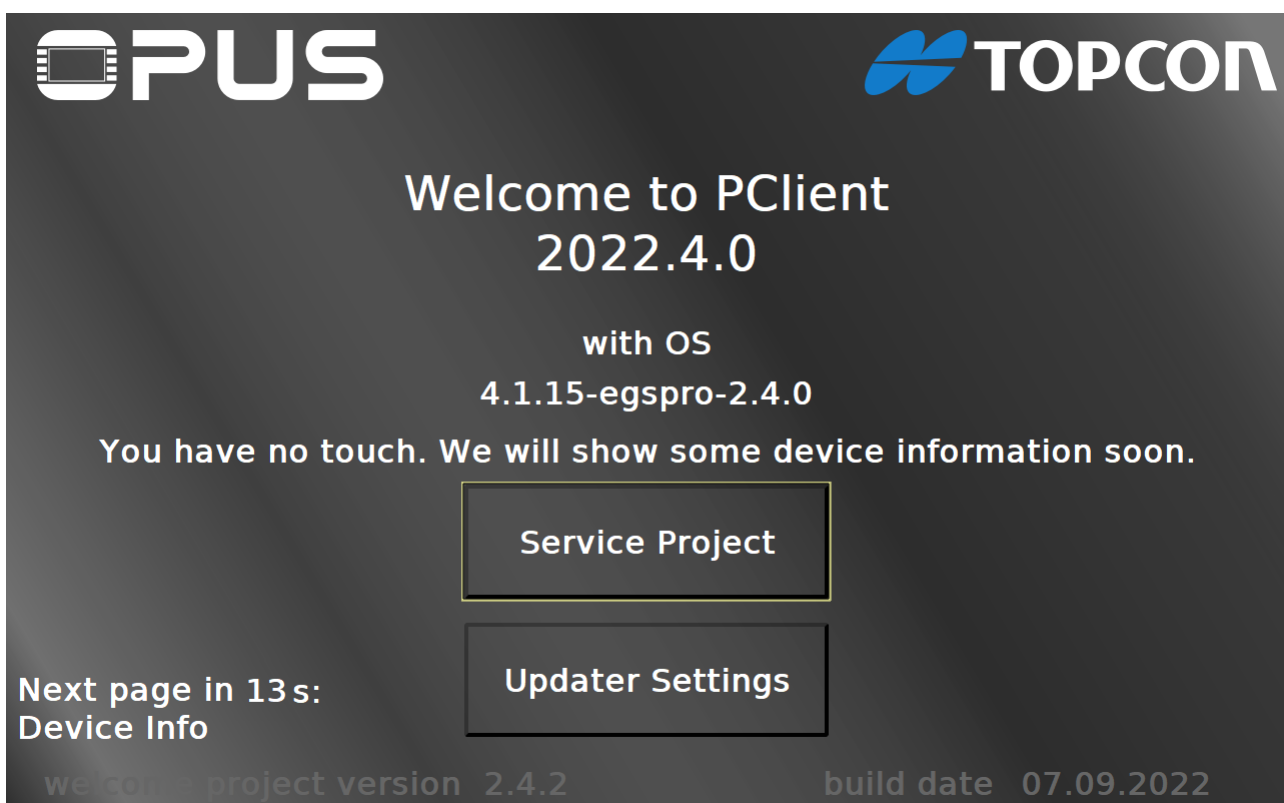

In this mode, the project will show different screens to show some information about the device. The pages are


Home page -> Device Info -> Sensors -> Power Modes -> Power Mode Time Settings -> Power Modes Configuration -> Info to USB

There will be a counter in the lower left, showing when the next page will be shown. The next page will be written there, as well.

On the Info to USB page it is possible to copy the information files to the USB stick by disconnecting the ignition for a short time (just a couple of seconds, make sure you reconnect before the low-power time out time).

OPUS B2 Standard Basic Navigation

If you run a PClient on the OPUS B2 Standard Basic (or the B2 Plus Standard Basic), the first four softkeys on the right substitute as navigation buttons.

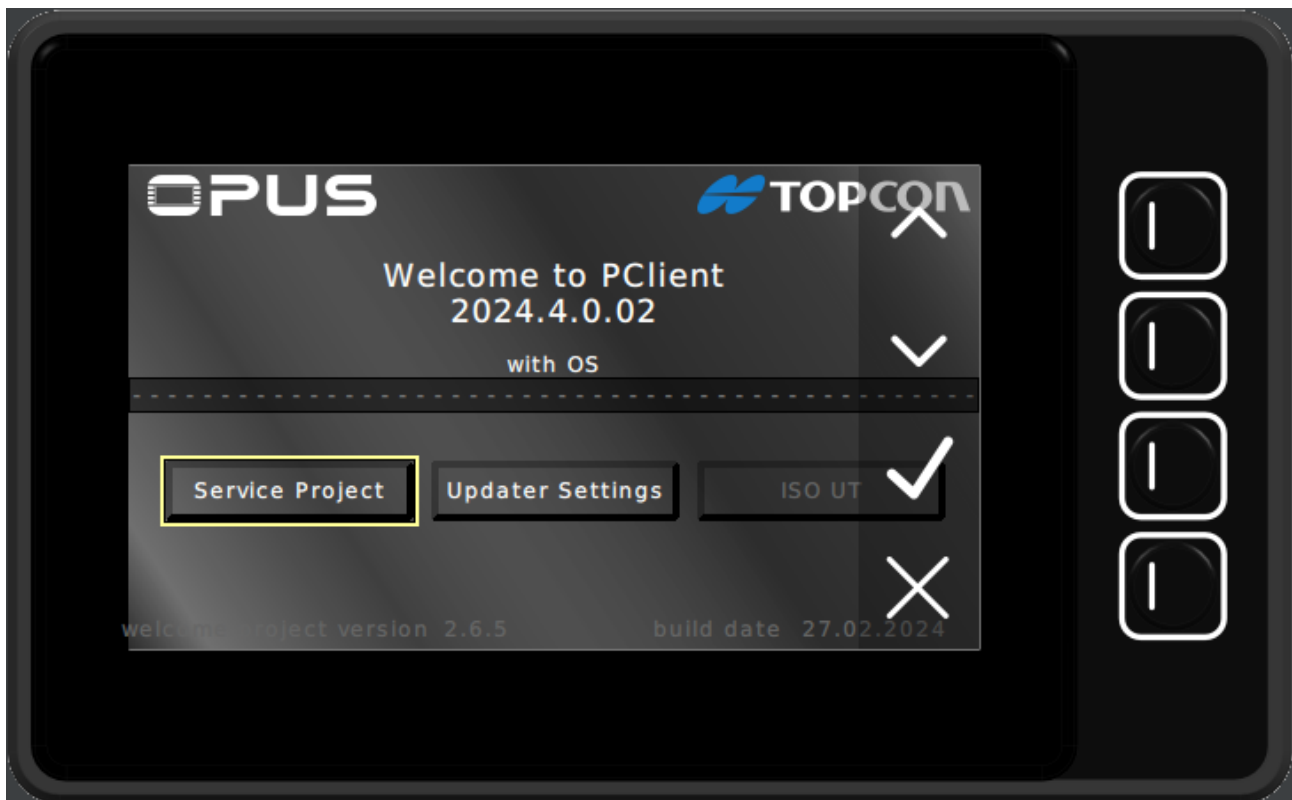

From top to bottom these are

- Navigate Up
- Navigate Down
- Navigate Confirm
- Navigate Cancel


These buttons correspond with the [JavaScript Navigation actions](#) ⁵⁷⁶.

With these four buttons the welcome project can be navigated. The navigate up and down actions correspond with encoder rotations, Navigate Confirm corresponds with a Press-


Release of the encoder, and Navigate Cancel corresponds with a press-release of the Escape key.

Updater Settings

By pressing the Updater Settings button you can navigate to the Updater Settings page.

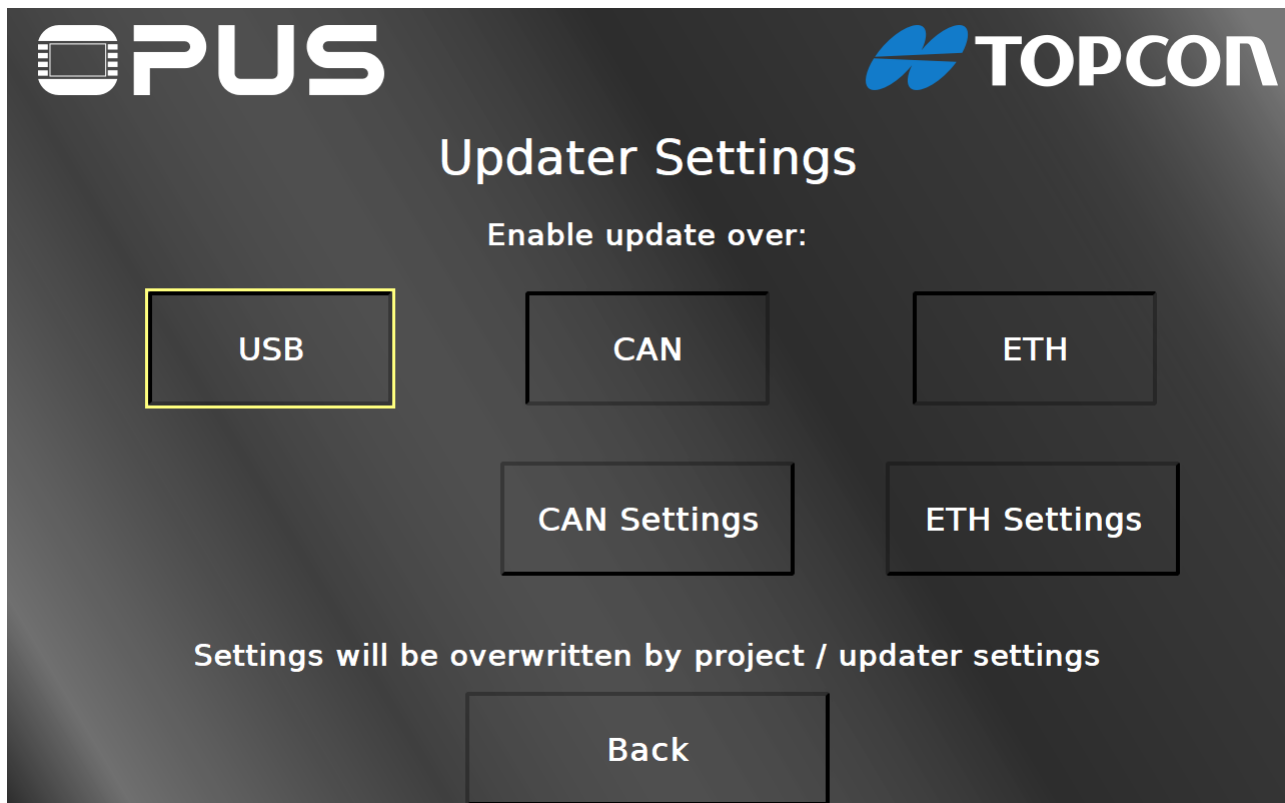

On this page you can enable / disable the project download over USB, CAN and ETH (Ethernet) by pressing the according buttons. Pressing them again will inverse the current setting. By pressing the CAN Settings button you can navigate to the CAN Settings page. By pressing the ETH Settings button you can navigate to the Ethernet Settings page. Both settings buttons will only be visible when the according transfer medium is enabled. Back returns to the main welcome page.

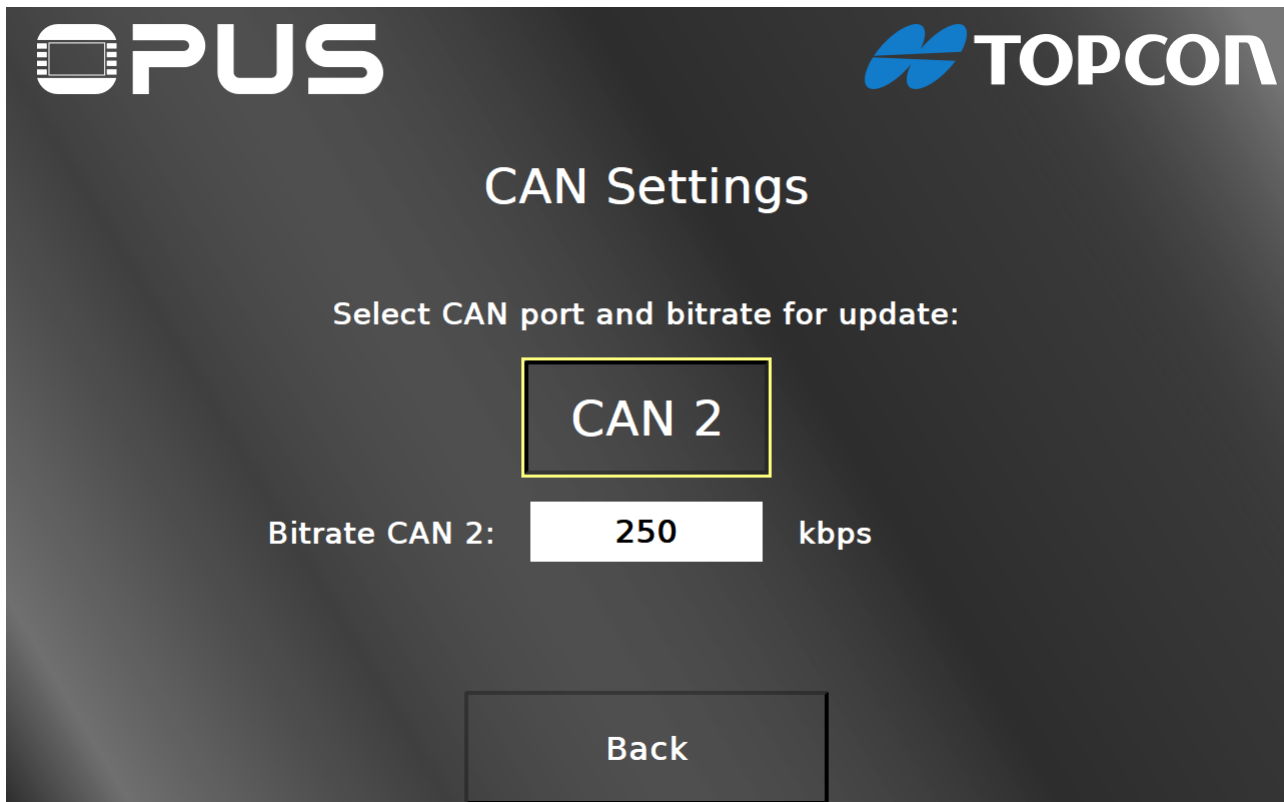

The screenshot shows the 'CAN Settings' screen. At the top left is the 'OPUS' logo and at the top right is the 'TOPCON' logo. The title 'CAN Settings' is centered. Below it, the instruction 'Select CAN port and bitrate for update:' is displayed. A yellow box highlights the 'CAN 2' option. Below this, the text 'Bitrate CAN 2:' is followed by a white box containing '250' and the unit 'kbps'. At the bottom, there is a 'Back' button.

OPUS TOPCON

CAN Settings


Select CAN port and bitrate for update:

CAN 2

Bitrate CAN 2: 250 kbps

Back

On the CAN Settings page you can set the CAN port that should be used for the project download and the Bitrate for the project download for that port. Back returns to the Updater Settings page.

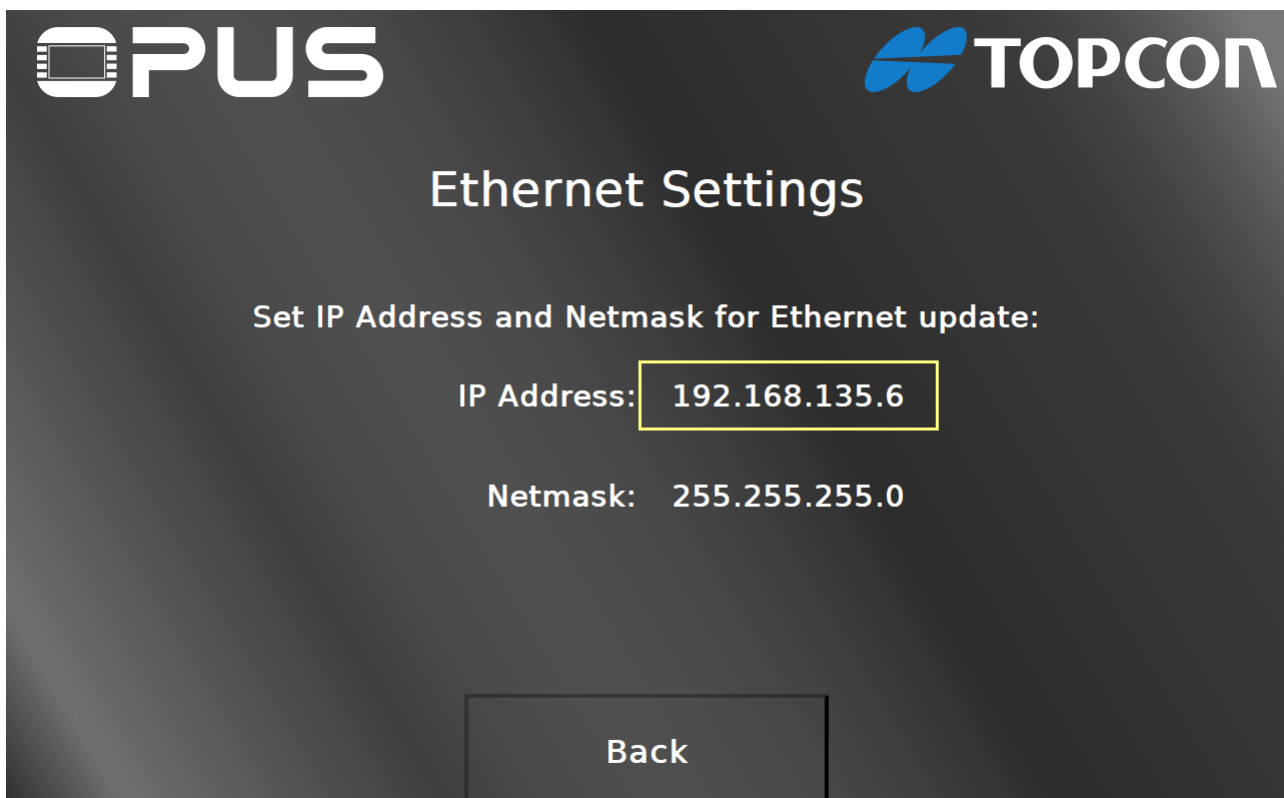

The screenshot shows the 'Ethernet Settings' screen. At the top left is the 'OPUS' logo and at the top right is the 'TOPCON' logo. The title 'Ethernet Settings' is centered. Below it, the instruction 'Set IP Address and Netmask for Ethernet update:' is displayed. A yellow box highlights the 'IP Address: 192.168.135.6' field. Below this, the text 'Netmask: 255.255.255.0' is displayed. At the bottom, there is a 'Back' button.

OPUS TOPCON

Ethernet Settings

Set IP Address and Netmask for Ethernet update:

IP Address: 192.168.135.6

Netmask: 255.255.255.0

Back

On the Ethernet Settings page you can set the IP Address (10) and Netmask (11) that the device should have in the network. With the **Back** button (12) you can go back to the Updater Settings page.

Please note: All settings made in this project are temporary and only valid for the first project transfer. All settings will be overwritten by settings in the transferred project.


You should make the according settings in the project you want to transfer to the device:

- The variable @EnableUpdater variable controls which update is allowed
- The CAN bus bitrate will be taken from the bitrate set in the transferred project
- The CAN port used for the transfer can be set with the variable @CANx_Bitrate
- The IP address can be set with the variable @Ethernet0_IPAddress
- The Netmask can be set with the variable @Ethernet0_Netmask

Back returns to the Updater Settings page.

Service Project

By pressing the **Service Project** button you can navigate to the Service Project main page.

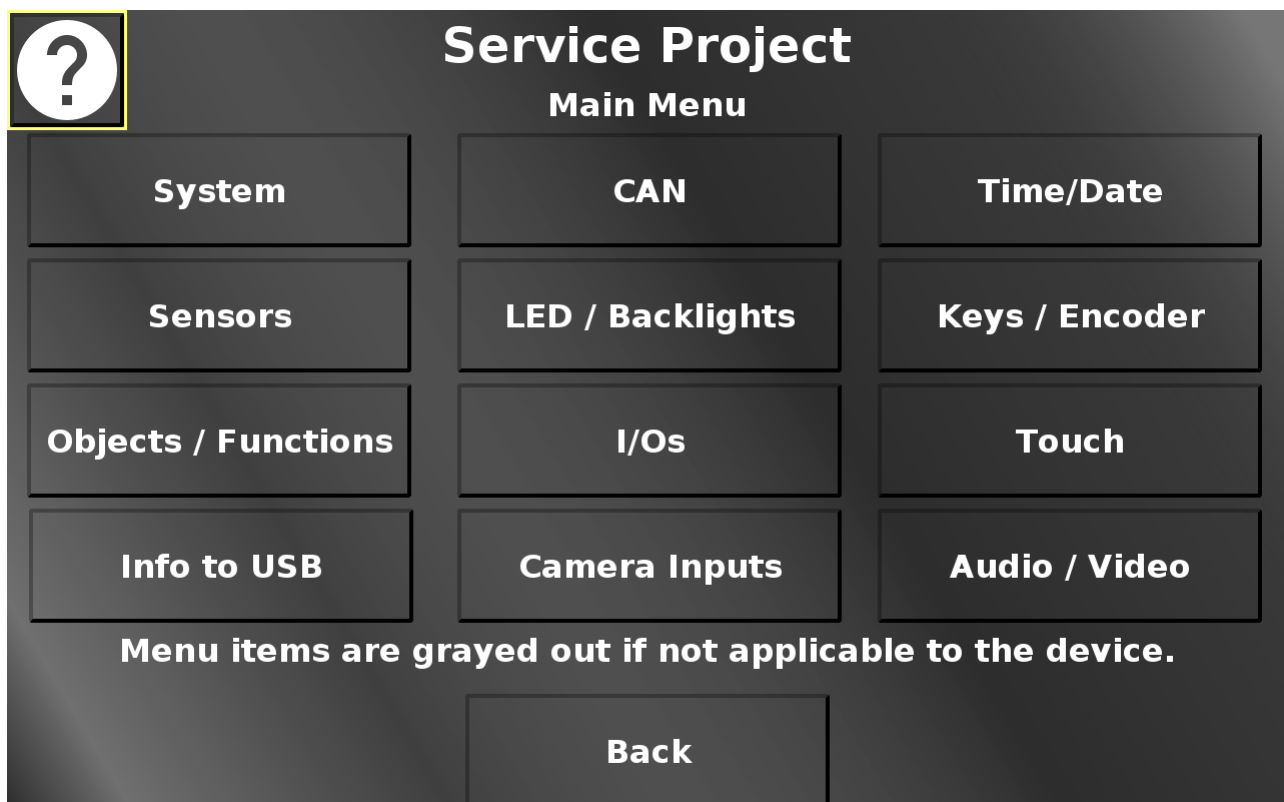

In this screen the different main menu items can be chosen. Back returns to the main screen.

On every page, a help button is available, which gives a short explanation what can be done on the page.

Menu items, behind which there are only features that are not available for the current device will be grayed out. It is still possible to go into the according pages or use the according buttons, but nothing will happen or work.


On most pages in the Service Project an "Eject USB" button will be displayed next to the help button if a USB stick is connected to the device. If you want to unplug the USB stick, press this button first to unmount it properly from the device.

Service Project -> System



In this screen different system information and system settings can be chosen. Back returns to the main menu.

Service Project -> System -> Device Info



Eject
USB

Service Project


System - Device Info

Article number: OPUSA8SN1ISOF000	# Power On
Serial number: 1845001AD	554
Device type: A8 standard full	# Power Off
OS version: 5.4.263-egspro-3.0.3	156
PCClient version: 2024.4.0.02	# Crashes
Operating time: 44 d, 19 h, 39 m	397
Current Uptime: 2 h, 21 m, 40 s	
Mass storage: 255.60 MB used, 2750.740 MB free	CPU load (%)
RAM: 755 / 994 MB free	5

Back

Always show
system data

In this screen different device data is displayed. With the button Always show system data a small "widget" will be displayed on almost all pages showing the free and used RAM and the CPU load. On most pages it will be shown in the top right corner. Pressing the button again makes the values invisible again.



Eject
USB

Service Project

System - Device Info

RAM: 755 / 994
CPU: 5


Article number: OPUSA8SN1ISOF000	# Power On
Serial number: 1845001AD	554
Device type: A8 standard full	# Power Off
OS version: 5.4.263-egspro-3.0.3	156
PCClient version: 2024.4.0.02	# Crashes
Operating time: 44 d, 19 h, 39 m	397
Current Uptime: 2 h, 21 m, 56 s	
Mass storage: 255.60 MB used, 2750.740 MB free	CPU load (%)
RAM: 755 / 994 MB free	5

Back


Always show
system data

Back returns to the system menu.

Service Project -> System -> Service Mode

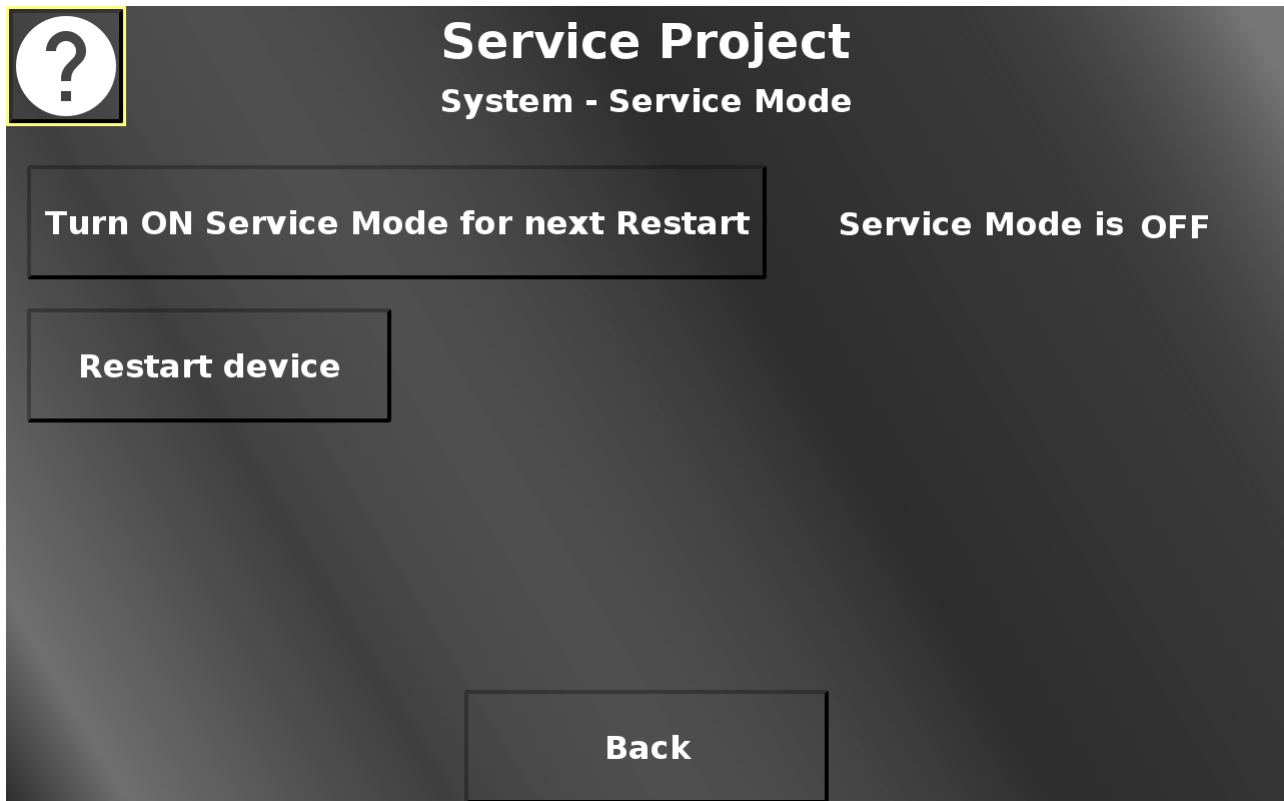


In this screen the service mode can be activated for the next reboot to update OS / PClient. Pressing the restart button opens a confirmation dialog.

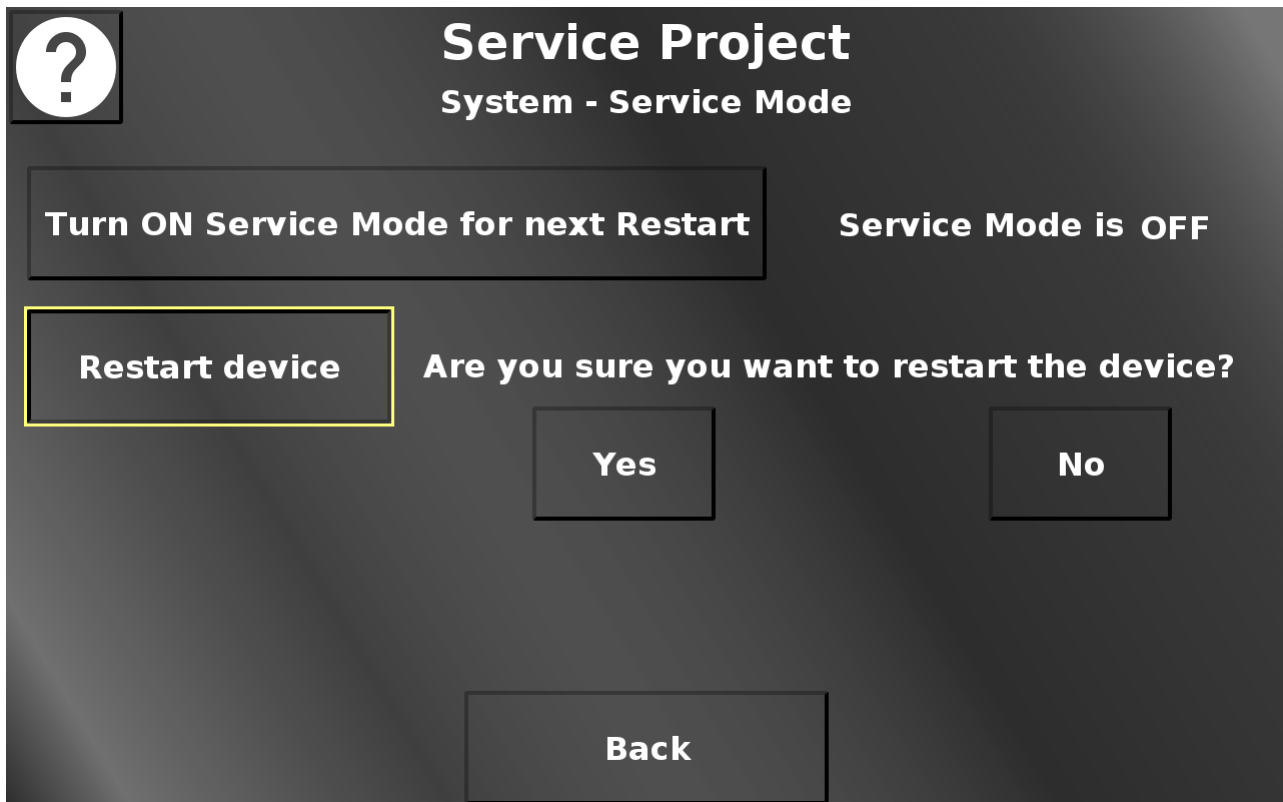

By pressing Yes the device will reboot. By pressing No the dialog will be closed again. The service mode setting will be kept. Back returns to the system menu.

Service Project -> System -> Power Modes

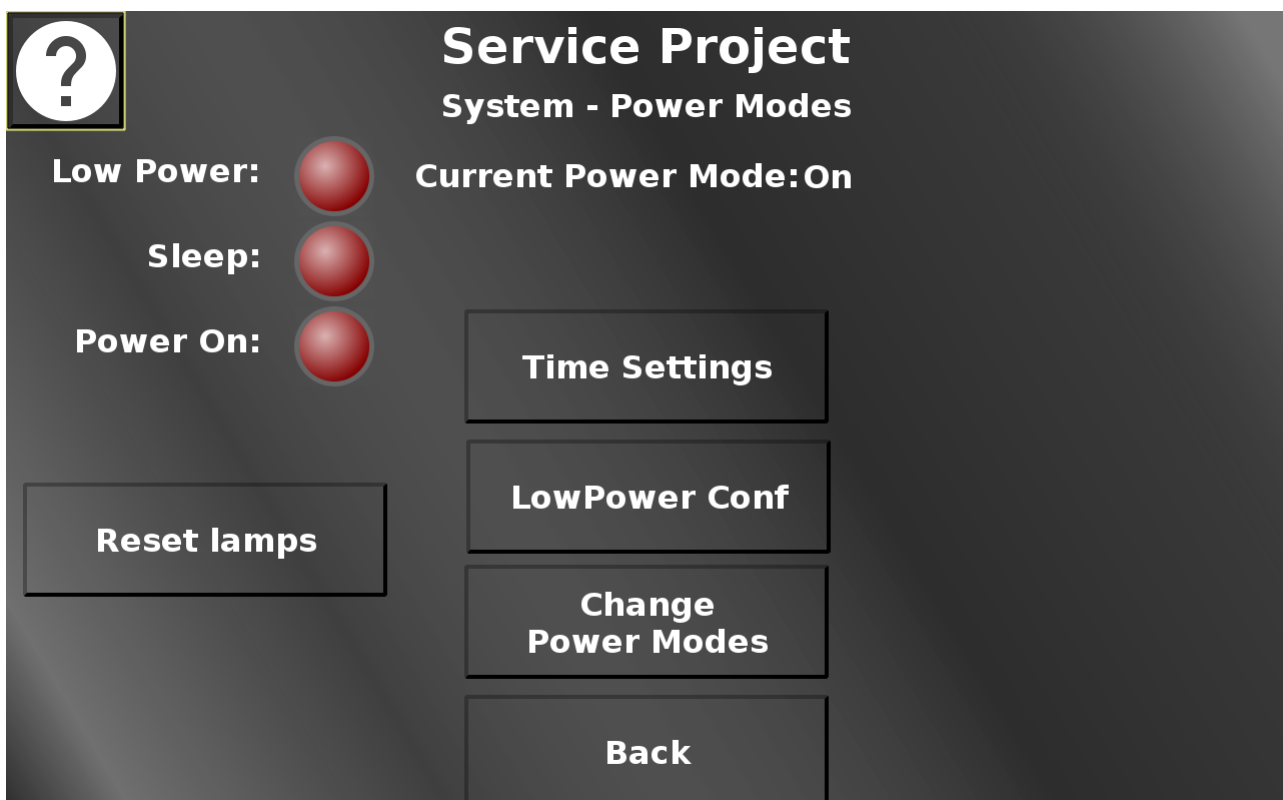

In this screen the different [power events](#)⁸³⁹ can be tested. The current power mode is shown in the top. The lamps will light up when the according power event is used. Disconnect clamp 15 /ignition pin to enter low-power mode, and then sleep mode, after which the device will turn off. Reset lamps turns all lamps off.

Additionally, three configuration screens can be entered. Time settings allows setting the times for the different power modes. LowPower Conf leads to a page where hardware elements can be configured for the low-power mode. On Change Power Modes some power modes can be entered.

Back returns to the system menu.

Service Project -> System -> Power Mode Time Settings

Service Project
System - Power Modes - Time Settings

Modifier: **1s**


Low Power Time **0 d, 0 h, 0 m, 5 s** - +

Sleep Time **0 d, 0 h, 2 m, 0 s** - +

Back

In this screen the times for the low-power mode and the sleep mode can be set. - (minus) decreases the time, + (plus) increases the time. For some devices, the silent on to low power time can be set, as well. The amount that the current value is modified by, can be chosen with the modifier drop down. Back returns to the Power Modes screen.


Service Project -> System -> Low Power Configuration

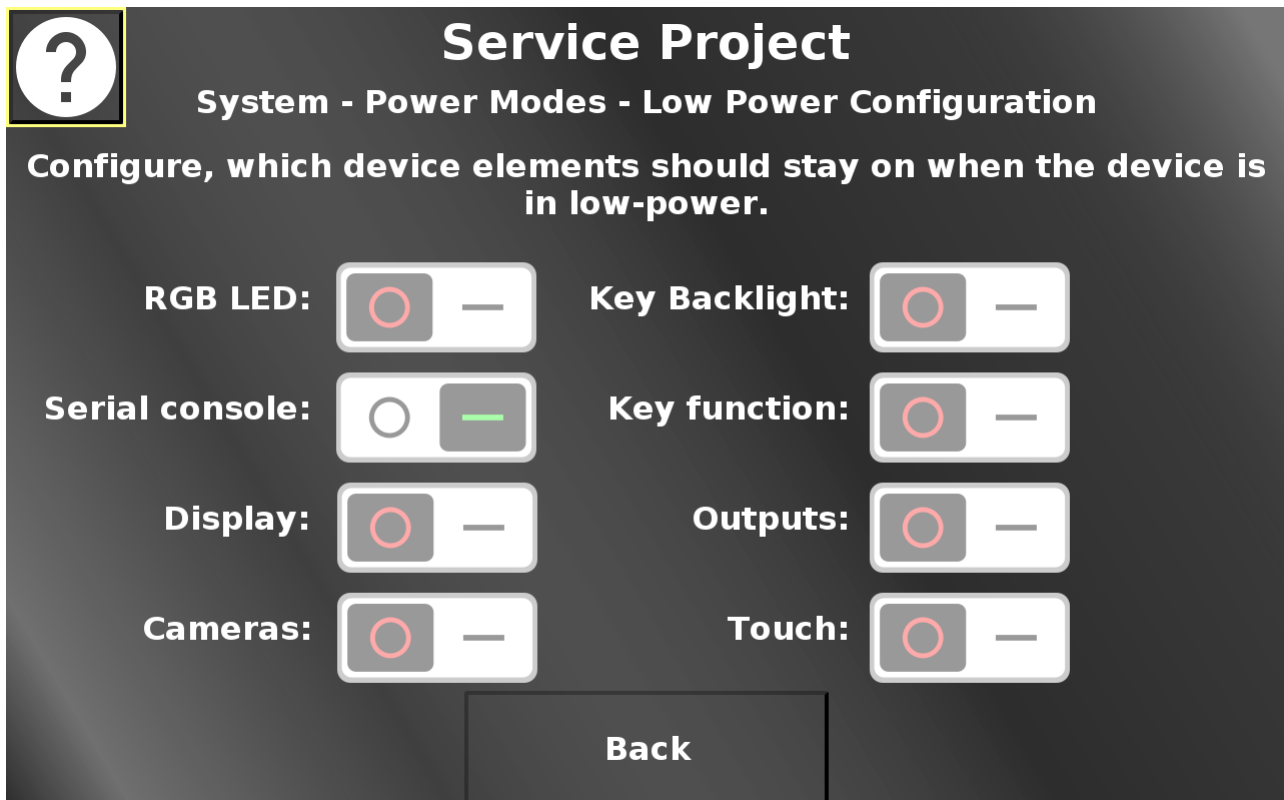

In this screen, hardware elements can be configured to stay on or turn off when low power mode is entered. If the switch is in the OFF position, the element will turn off when low-power mode is entered. If the switch is in the ON position, the element will stay on in low-power mode.


The elements that can be configured here vary depending on the device.
Back returns to the power mode screen.

Service Project -> System -> Change Power Modes

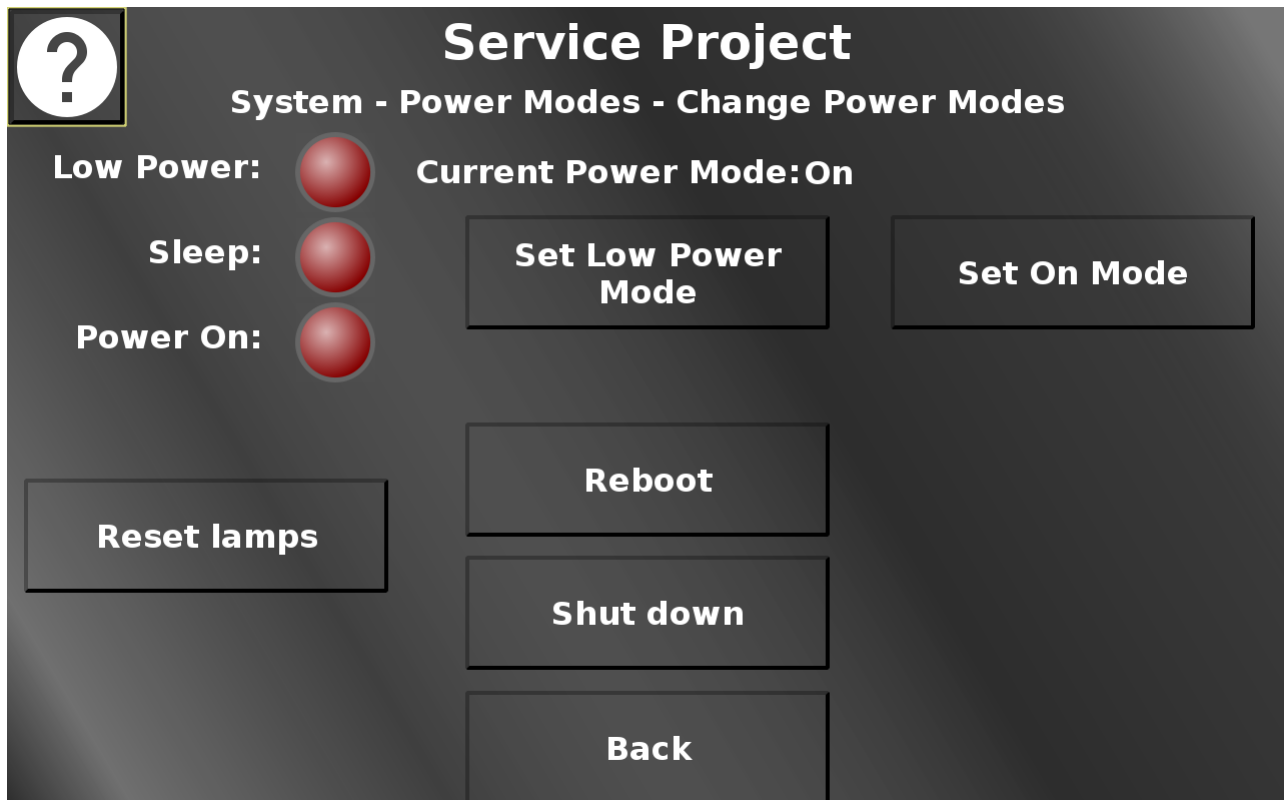

In this screen different power modes can be activated. Low power and on mode can be set here. For some devices, a timed low power mode can be set, as well. For both low power modes a pop up will be shown, warning that a way back to on mode should be considered, either by disconnecting and re-connecting ignition, or by setting display, touch and or keys to still work in low power mode. Additionally, the device can be rebooted and shut down. The lamps and the current mode are identical to the power mode screen. Back returns to the power mode screen.

Service Project -> System -> Simulation

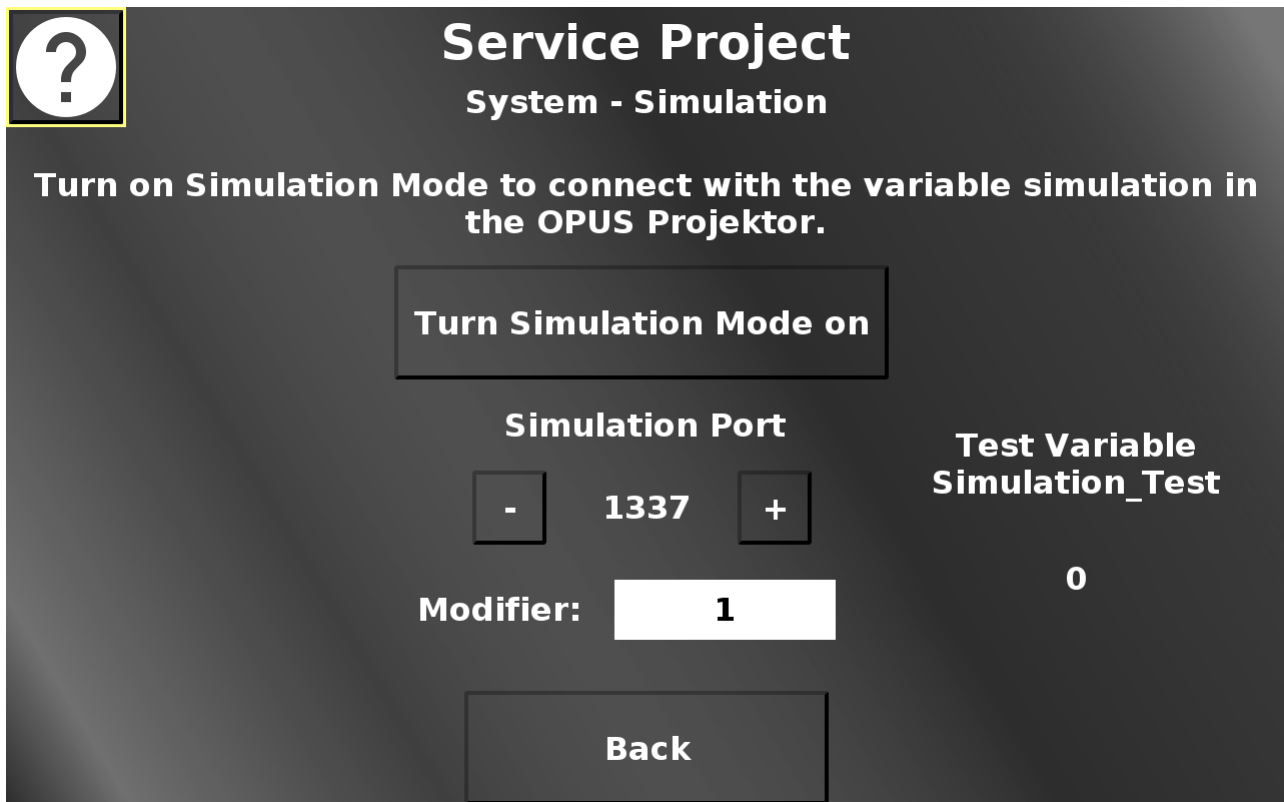

Service Project
System - Simulation

Turn on Simulation Mode to connect with the variable simulation in the OPUS Projektor.

Turn Simulation Mode on

Simulation Port

- 1337 +

Modifier: 1

Test Variable Simulation_Test

0

Back

In this screen the simulation mode can be enabled to be able to use the [variable simulation](#) ⁶⁶⁵ in the OPUS Projektor for the device.

Additionally, the port for the simulation can be set by pressing the - (minus) and + (plus) buttons.

The modifier drop down chooses the value by which the - and + buttons change the port value. Back returns to the system menu.

Service Project -> System -> Touch Calibration




In this screen the touch screen calibration can be started. 5 cross hairs will appear one after another (top left, top right, bottom right, bottom left, center). Press the cross hairs to calibrate the screen.

Please note that the PClient stays on during this operation, so the cross hairs will be painted over this screen.

Please note that the calibration is only available for A3/A6 G1 touch screens. Devices with capacitive touch screens do not need this calibration.

Back returns to the system menu.

Service Project -> System -> Encoder Settings

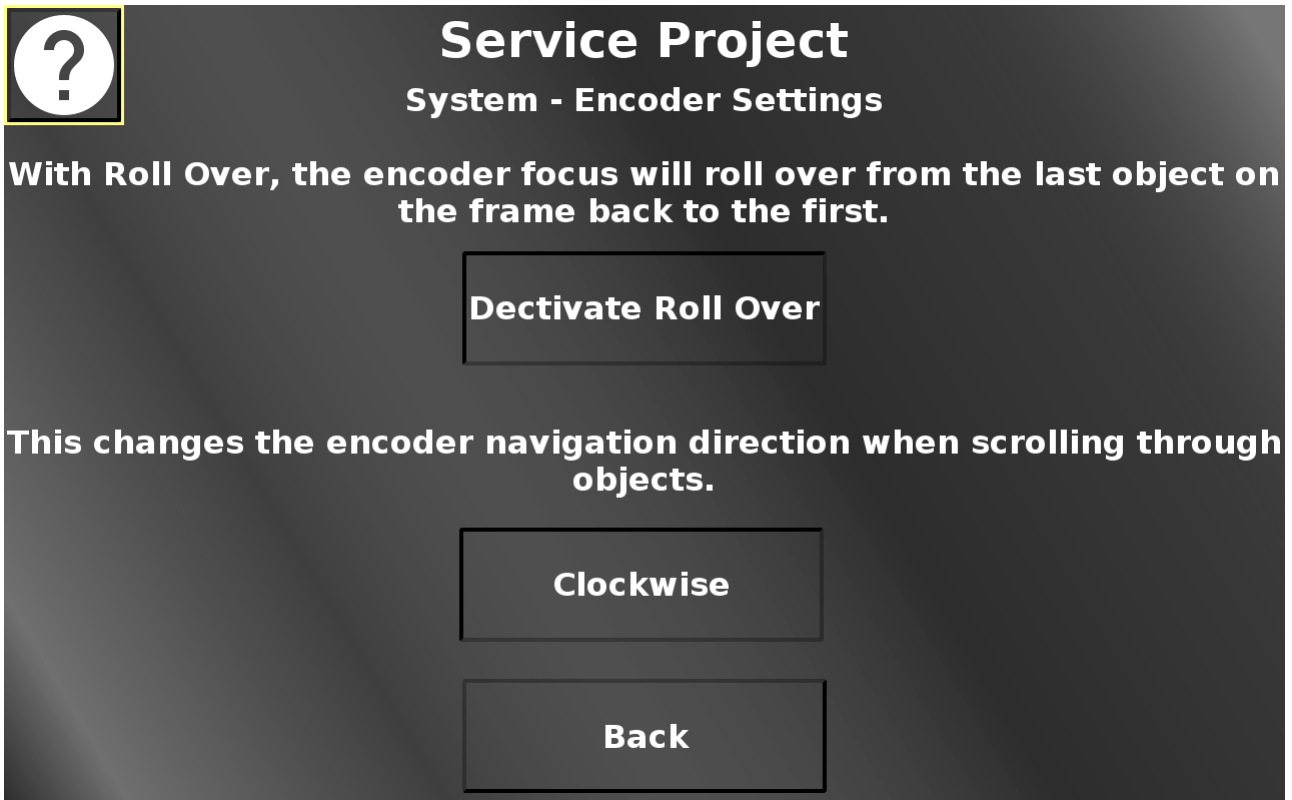

In this screen two encoder settings can be made.

Roll over means that the yellow selection rectangle will not stop at the last object, but it will roll over to the first object again.

Additionally, the navigation direction for the encoder can be switched between clockwise and anti-clockwise.

Back returns to the system menu.

Service Project -> System -> Ethernet Settings




In this screen, the IP address and Netmask can be set, similarly to the updater screen described above.

Additionally, SSH can be enabled here. On devices with Automotive Ethernet, the mode can be switched between master and slave here, as well.

Back returns to the system menu.

Service Project -> System -> USB Browser

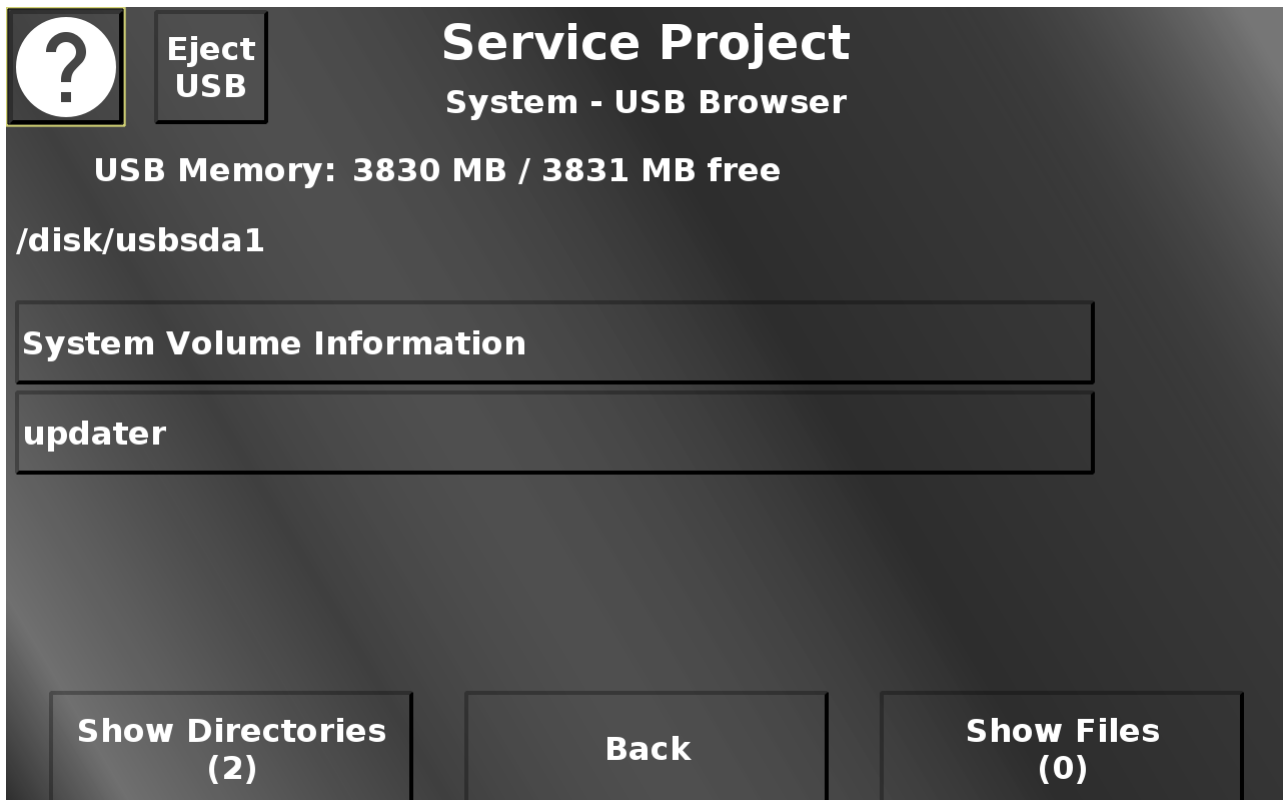


In this screen a rudimentary USB file browser is implemented. If a USB stick with a valid file system is plugged in, the content will be shown. Next to the help button, an eject/unmount button will be shown to unmount the USB stick before unplugging it. The view in the browser can be switched between directories and files.

For directories, a press of the according button will show the content of this directory. The current path is shown in the top of the screen. When directories are entered, a "back" button will be displayed to go back up to the root of the USB stick. Both for files and directories, "up" and "down" buttons will be shown if more than 4 directories / files are present in the current directory.

For files, a button press will open an alarm with a preview of the file. For image files the image will be shown. Note that the aspect ratio will not be correct. For compatible audio and video files an alarm with a multimedia player will be shown to play the file. Note that the aspect ratio of the video will not be correct. For pdf files the pdf reader will be opened. For all other file types the beginning of the file (up to 2MB) will be shown as text. The text can be scrolled to see more content. Back returns to the system menu.

Service Project -> System -> Send Linux Command



Service Project

System - Send Linux Command

Select the string below to edit the Linux command. Note that you should only execute commands that "end", otherwise the system is blocked forever. Don't send "top" which repeats forever.

command string

Execute


Back

In this screen a Linux command can be executed. Select the field that says "command string" and a virtual keyboard will open. Enter a command of your choice. With the Execute button the command will be executed in the Linux system. If the command is faulty, it will be displayed that there was an error executing this command.

Please note that only valid commands should be entered, and only commands that will finish in a finite time. Since the execution of the command is done in JavaScript, the PClient will wait until the Linux command has finished before continuing. So a simple command like "top" will lead to a non-reactive device, because top will show the CPU usage of the processes and refresh that forever. In such a case the device has to be rebooted.

Back returns to the system menu.


Service Project -> System -> USB Update Check

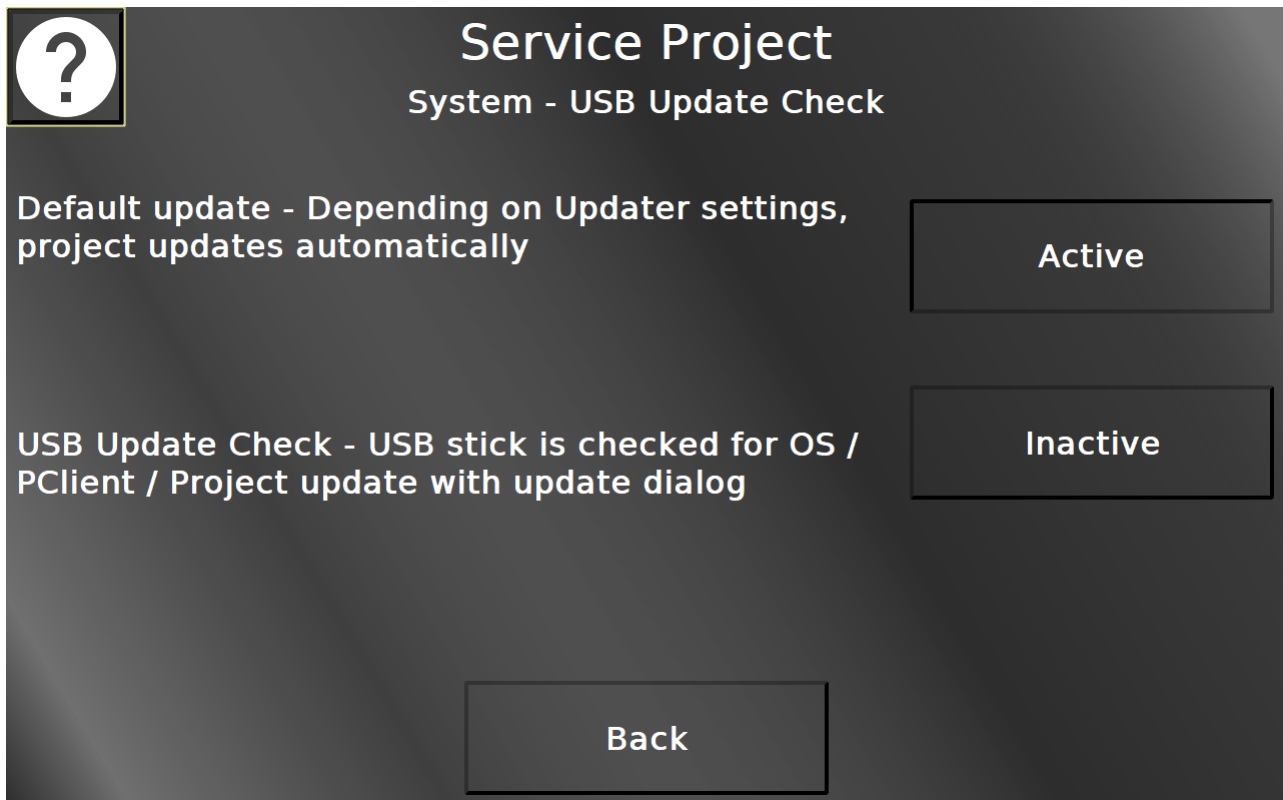

In this screen the update behavior when inserting a USB stick can be selected. The default update option (active by default) is the behavior as you know it - when a USB stick with a project is inserted and USB update is enabled in the Updater section, the project will be loaded.

With the USB Update Check the behavior will be different. If a USB stick is inserted, it is checked whether the USB stick contains a project and/or OS/PClient files. If it contains either of those, a pop up alarm will be displayed, giving the options to load the project or to reboot in service mode to install the OS / PClient files.

Back returns to the system menu.

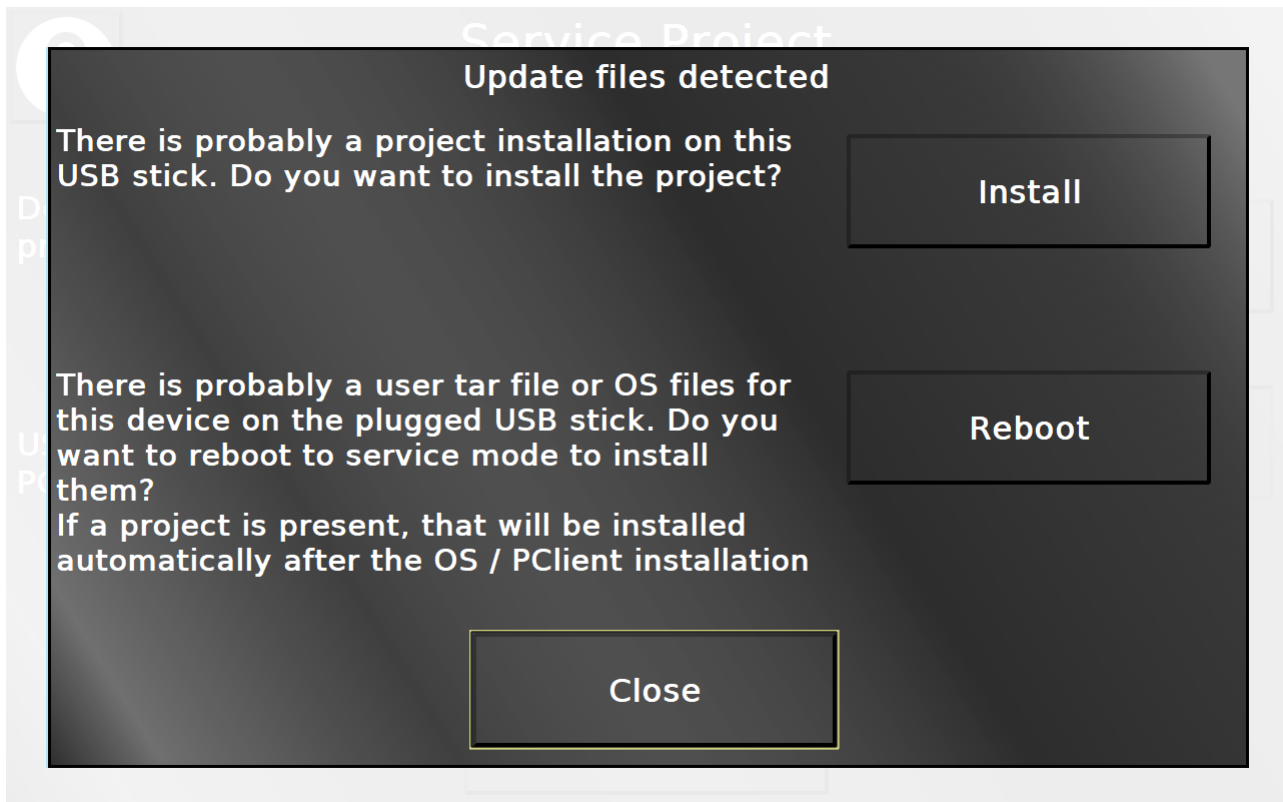

By pressing Install, the project on the USB stick will be installed.

By pressing Reboot, after a confirmation the device will be rebooted in service mode in which the OS / PClient files will be installed. Note that afterwards the device reboots again, starts in service mode, and if a PClient is installed and a valid project is on the USB stick, that project will be installed automatically, since the USB Update Check settings are volatile.

Close will return to the page that was shown before.


Service Project -> System -> Open Source Software Licenses



In this screen the open source licenses from the OS and the PClient can be viewed. Pressing the OS Licenses button shows the OS Licenses, pressing the PClient Licenses button shows the PClient licenses.

Back returns to the system menu.

Service Project -> System -> Open Source Software Licenses -> OS / PClient Licenses

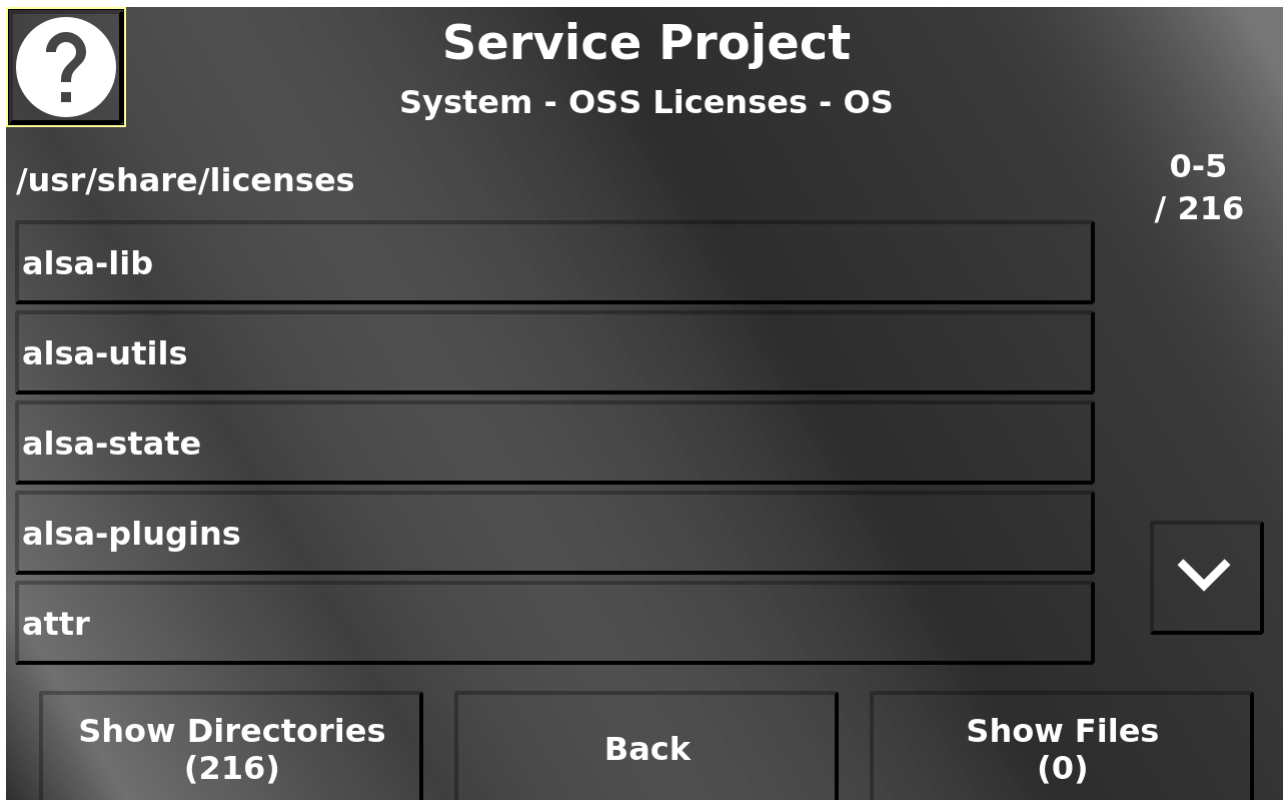


This page shows the open source licenses for the OS or for the PClient (depending on which button was pressed on the OSS licenses page). The view can be switched between directories and files.

For directories, a press of the according button will show the content of this directory. The current path is shown in the top of the screen. When directories are entered, a "back" button will be displayed to go back up to the root of the OSS licenses folder. Both for files and directories, "up" and "down" buttons will be shown if more than 5 directories / files are present in the current directory.


For files, a button press will open an alarm with a preview of the file. The license text can be scrolled to see more content. Back returns to the OSS Licenses page.

Service Project -> System -> Watchdog

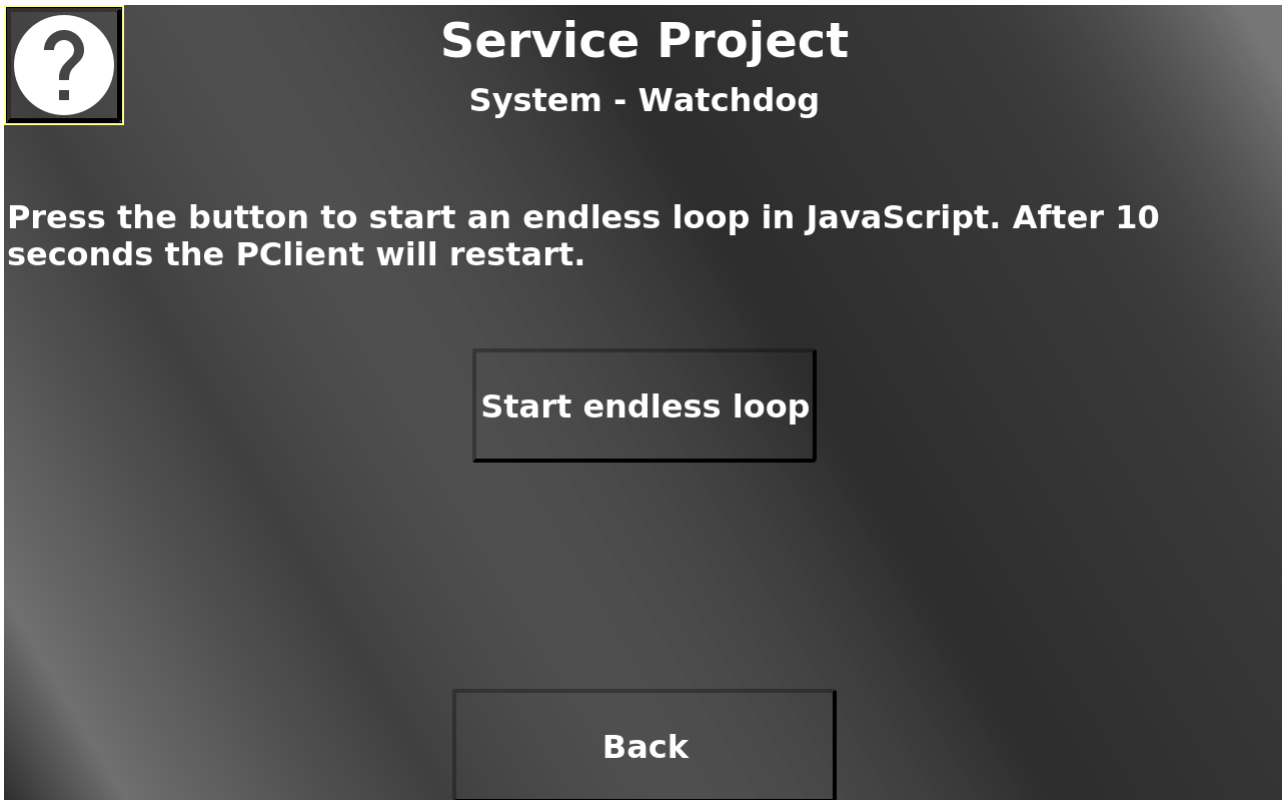


The PClient has an integrated watchdog that can be tested here. Pressing the "Start endless loop" button starts a JavaScript with an endless loop. Thus the PClient cannot continue its main loop. The Welcome Project is configured to restart the PClient after 10 seconds of being stuck. So 10 seconds after pressing the button the PClient will restart.

Service Project -> Sensors

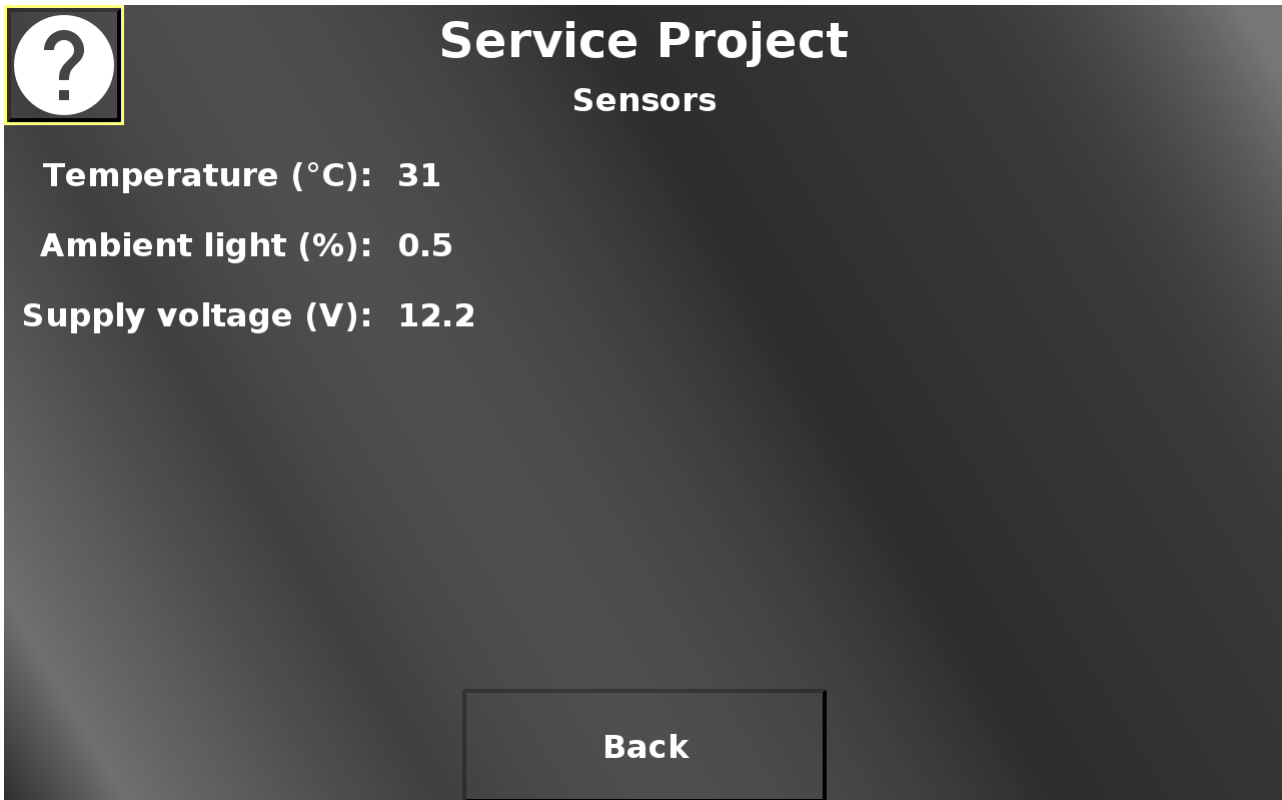


In this screen, the available hardware sensor values can be viewed. Back returns to the main menu.

Service Project -> Objects and Functions

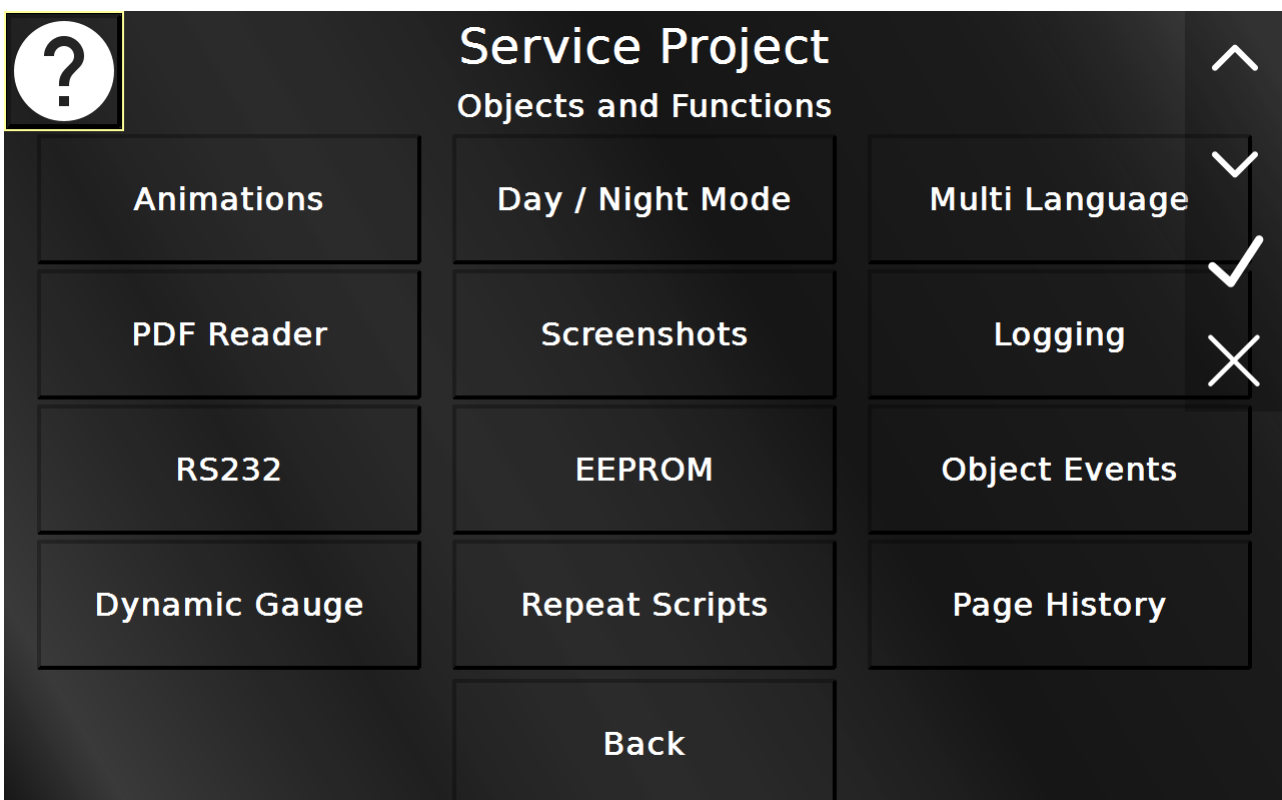


In this screen some functionalities of the OPUS Projektor and the PClient can be tested. Back returns to the main menu.

Service Project -> Objects and Functions -> Animations

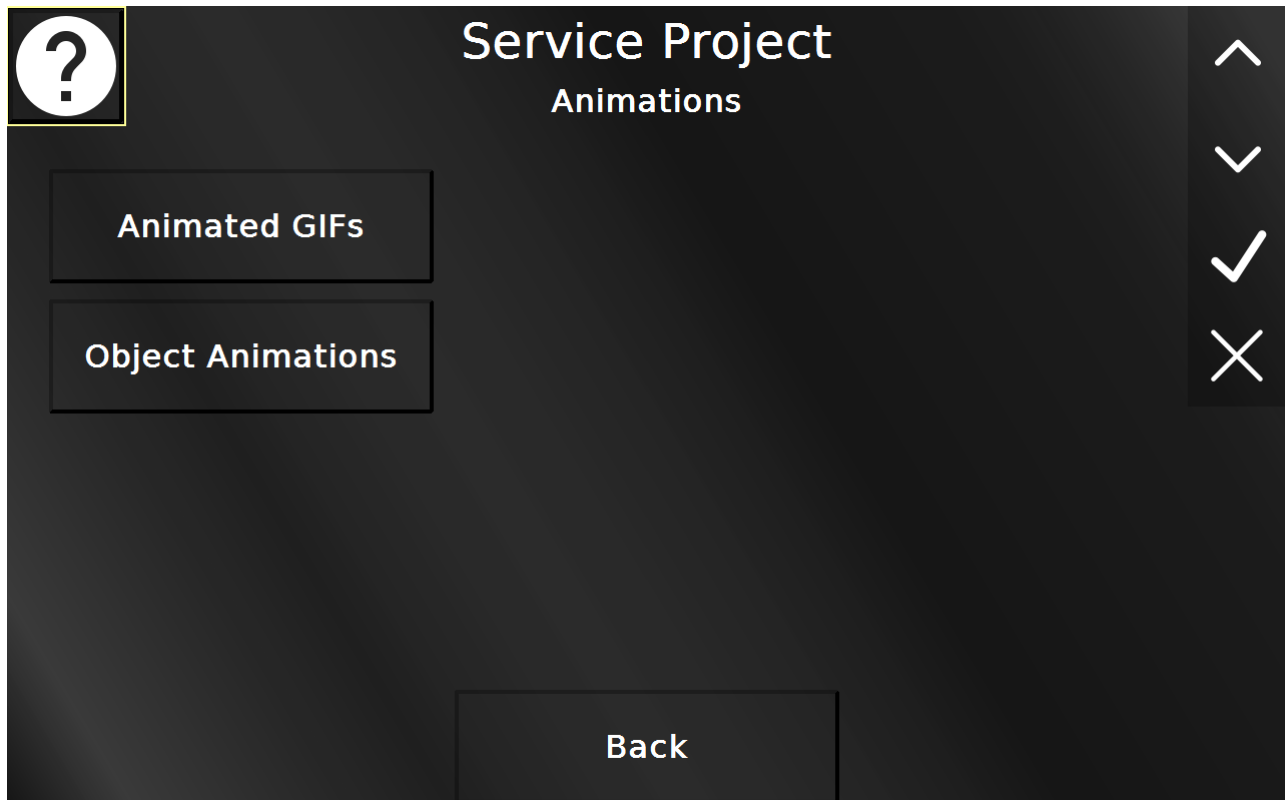

In this screen two possibilities for animation can be selected to observe, animated GIF files and the new [object animations](#)⁵²⁰.
Back returns to the Objects and Functions menu

Service Project -> Objects and Functions -> Animated GIFs

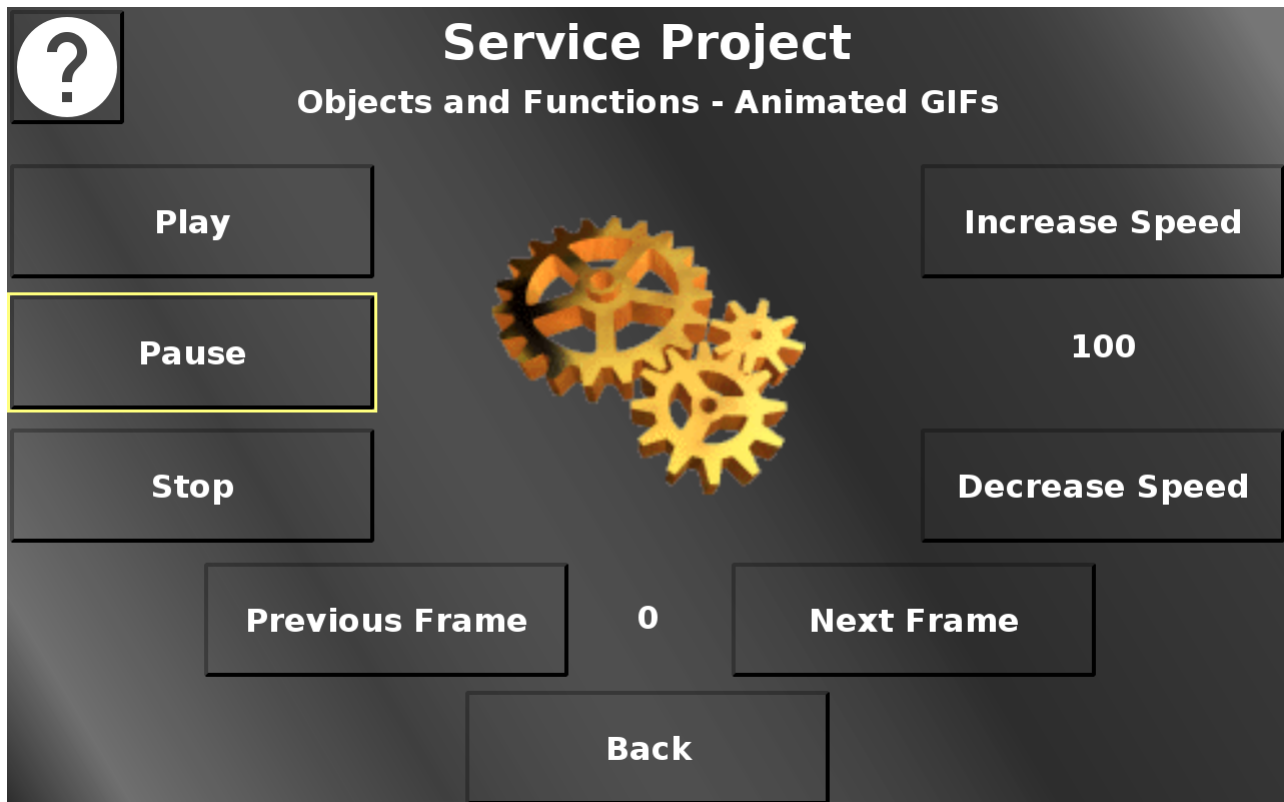

In this screen, an exemplary animated GIF file can be controlled.

Play starts the animation.

Pause pauses the animation (but stays at the current frame).


Stop stops the animation (and resets it to the first frame).

Increase speed increases the playing speed.

Decrease speed decreases the playing speed.


Back returns to the Animations menu.

Service Project -> Objects and Functions -> Object Animations

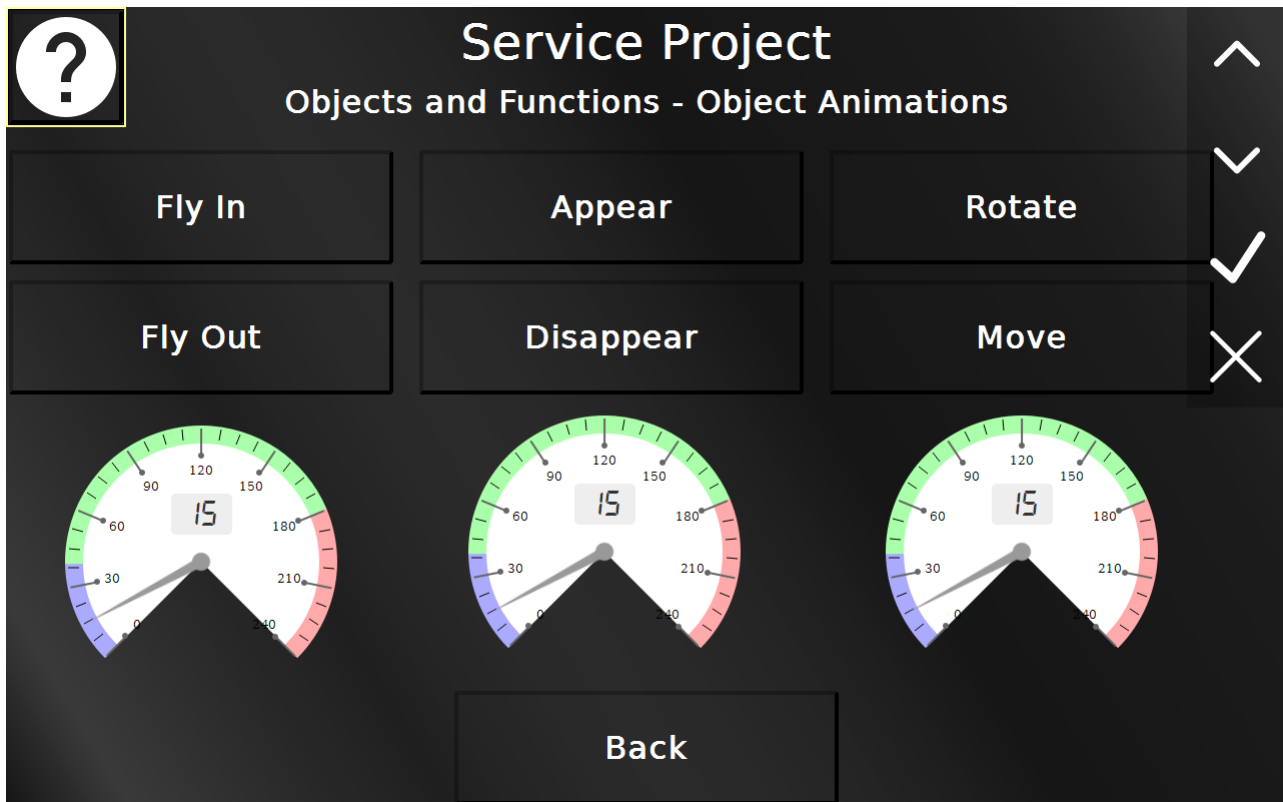


In this screen the new [object animations](#) ⁶²⁰ can be tested. The buttons execute the written animation to the gauge below them. Back returns to the Animations menu.

Service Project -> Objects and Functions -> PDF Reader

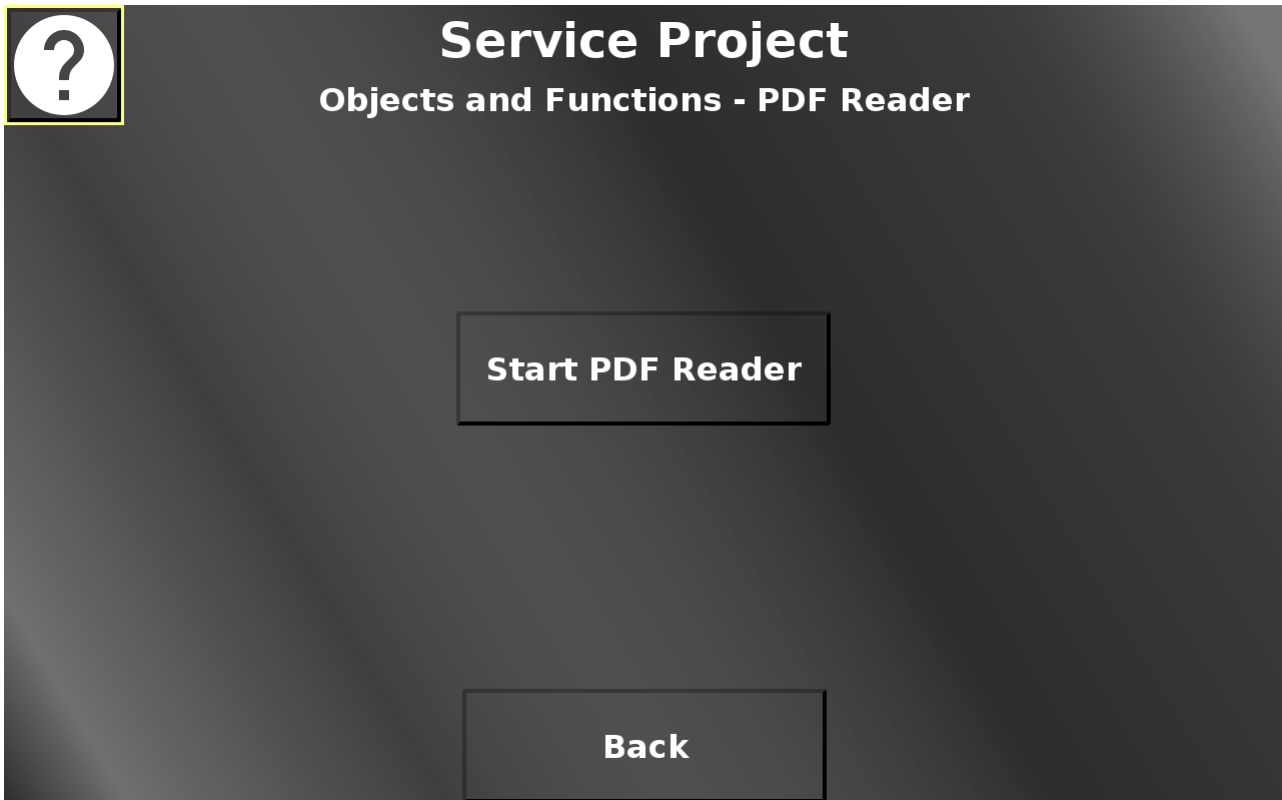

In this screen the PDF reader can be started with an exemplary PDF file.
Please note that it might take a while for the PDF reader to be started. Please be patient.
Please note that the PDF reader opens as a separate full screen application. Close it to go back to the PClient.
Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> RS232 Setup Page

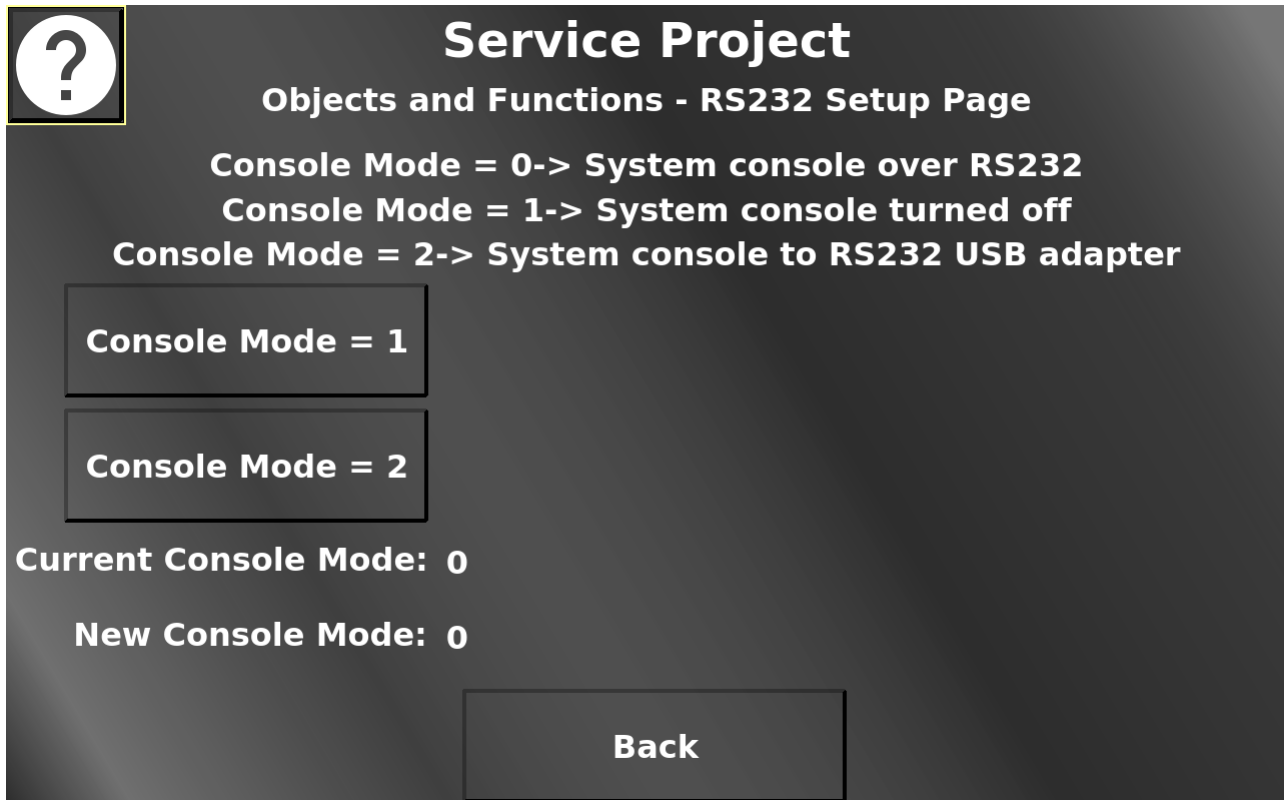

In this screen necessary settings to use the RS232 port for data communication can be made. By default, the RS232 port will be used by the device operating system console. To be able to use the RS232 port for data communication, the console mode needs to be set to 1 (system console off) or 2 (system console goes to the first USB-RS232 adapter (with USB side plugged into the device)).

Please note that this screen is only displayed if the current console mode is 0.

The device needs to be restarted for this setting to be activated.

The current console mode and the new selected console mode is displayed below the two console mode buttons.

Once a new console mode is selected, a restart button is made visible.

Service Project
Objects and Functions - RS232 Setup Page

Console Mode = 0-> System console over RS232
Console Mode = 1-> System console turned off
Console Mode = 2-> System console to RS232 USB adapter

Console Mode = 1

Restart device

Are you sure you want to restart the device?

Yes No

Current Console Mode: 0

New Console Mode: 1

Back

Yes restarts the device with the chosen console mode setting. No closes the dialog and resets the console mode back to 0. Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> RS232 Data Page

Service Project
Objects and Functions - RS232 - Data Page

Port: 0 Baudrate: 115200

Read from RS232: test

Read

Write to RS232: Hello World Data Array

Change baud rate: 115200

Set Console Mode back to 0

Console Mode: 1

Back Restart device

In this screen, RS232 data communication can be tested.

Please note that this screen is only shown if the console mode is 1 or 2 (see previous screens).

Read reads the RS232 buffer and displays the result (if it is text).

Hello World writes a "Hello World" to the RS232 port to be received by the other end.

Write Arrays writes a data array to the RS232 port to be received by the other end.

Set Console Mode back to 0 sets the console mode back to 0.

Restart device opens a confirmation dialog.


The screenshot shows a dark-themed interface titled "Service Project" with a question mark icon in the top left. Below the title is the subtitle "Objects and Functions - RS232 - Data Page". The interface contains several sections: "Port:" with a value of "0", "Baudrate:" with a value of "115200", "Read from RS232:" with a value of "test" and a "Read" button, "Write to RS232:" with two buttons labeled "Hello World" and "Data Array", "Change baud rate:" with a text input field containing "115200" and a "Set Console Mode back to 0" button, and a confirmation dialog at the bottom asking "Are you sure you want to restart the device?" with "Yes", "No", "Back", and "Restart device" buttons. The "Restart device" button is highlighted with a yellow border. The "Console Mode:" is set to "0".

Yes restarts the device with the current console mode setting.

No closes the dialog and reverts the changed console mode setting.

Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Dynamic Gauge

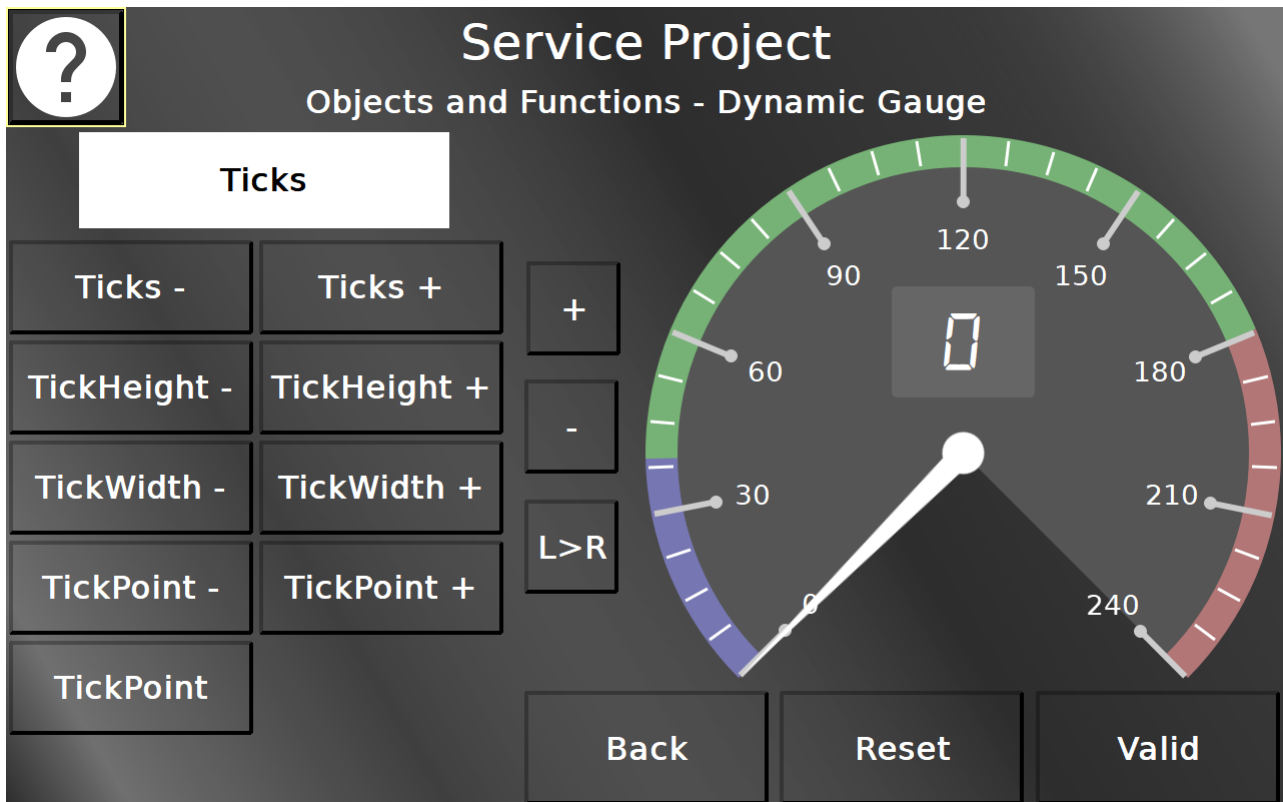


In this screen the dynamic possibilities of the Gauge object can be tested. The white list object contains 9 different categories of properties. The different buttons change the according properties of the gauge at run time.

+ and - change the value of the connected variable. L>R switches the direction of the gauge. Reset resets the object to the default setup. Valid switches between valid and invalid state of the variable connected to the gauge.

Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Day / Night Mode

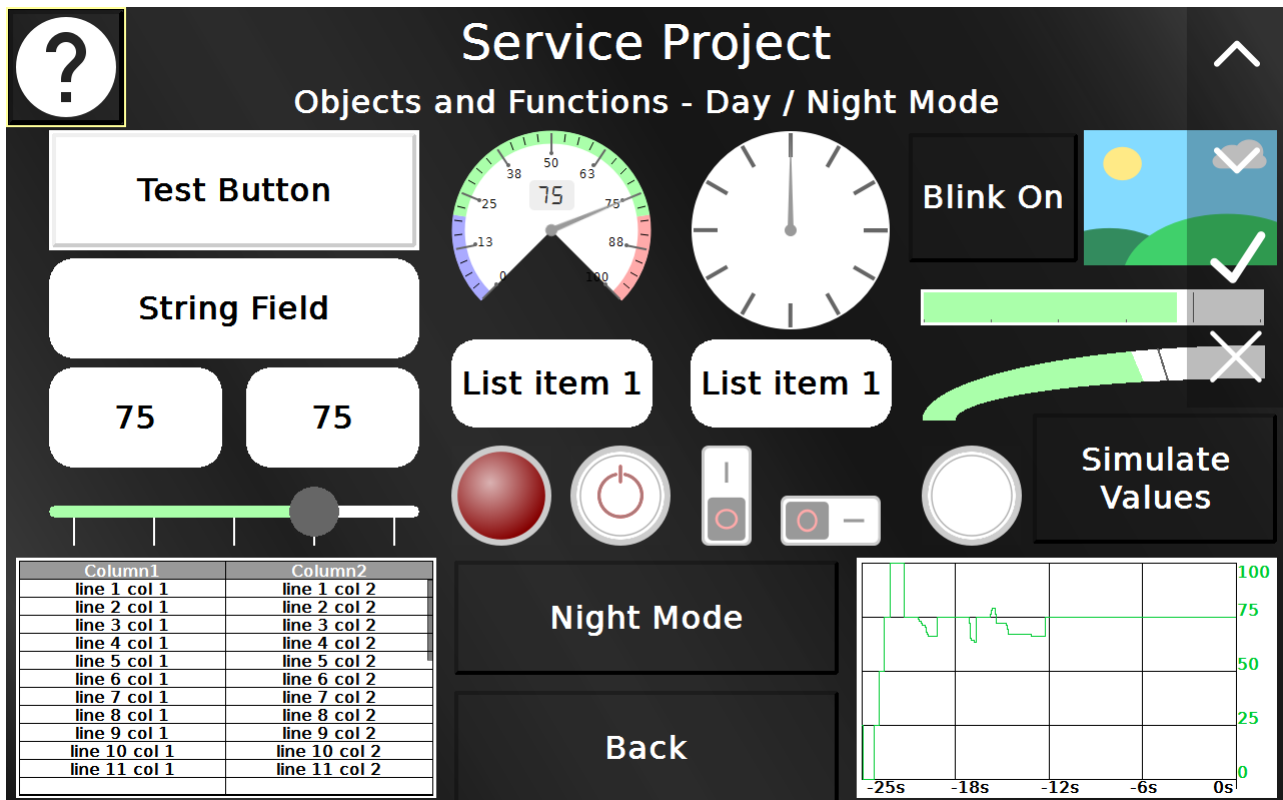

In this screen the day / night mode can be tested.

The Night Mode / Day Mode button switches all objects between their day mode / night mode theme.

The input objects can be tested, including the standard and touch input for the list object and Encoder and Virtual Keyboard editing for the Numeric Fields.

The Blink On button lets all objects blink. The Simulate Values button starts an automatic value change from 0 to 100.


Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Screenshots



In this screen, screenshots can be enabled by pressing "Enable Screenshots". When screenshots are enabled, a screenshot can be taken on every page by either pressing the camera button in the upper right, or by long-pressing the 3 arrow key on the device. Screenshots will be stored on the file system. If a USB stick is plugged in and mounted, the screenshots can be copied to the USB stick by pressing "Copy Screenshots". The USB stick can be unmounted by pressing "Unmount USB stick". Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> EEPROM

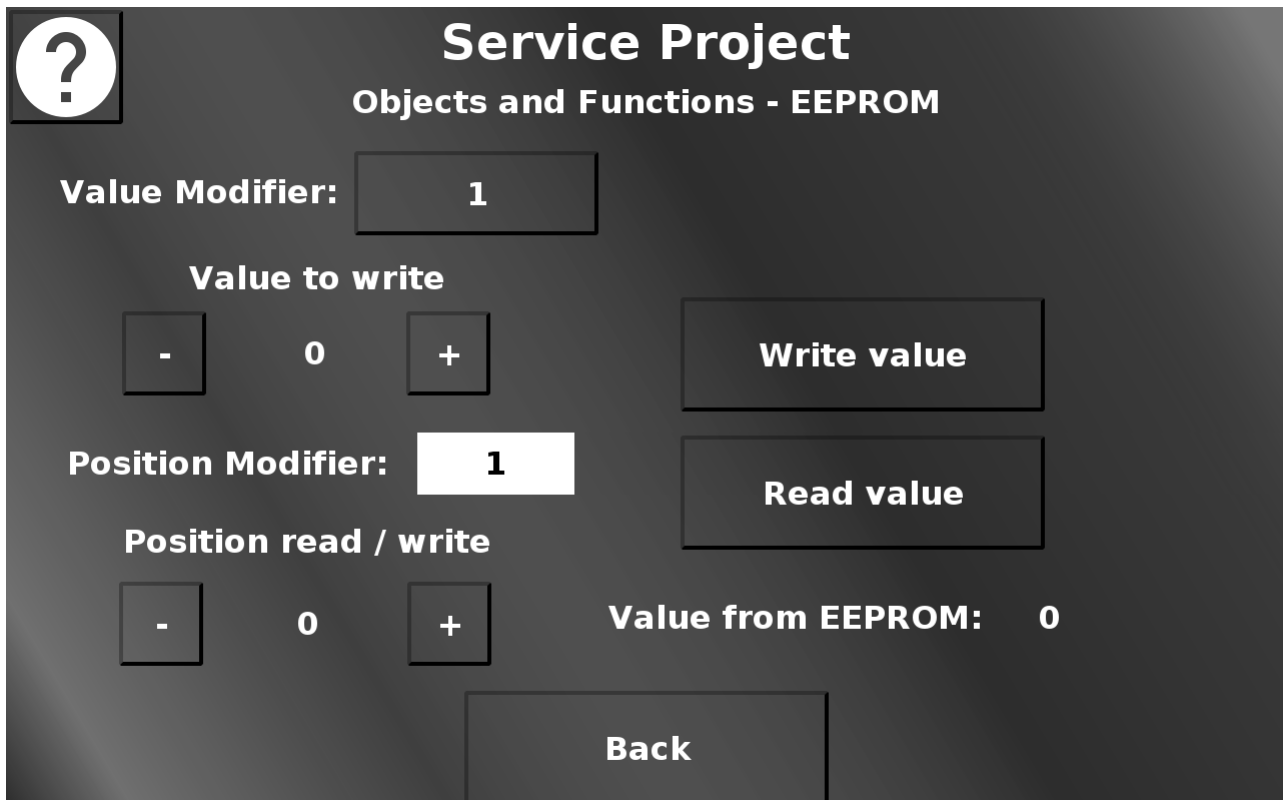


The screenshot shows a dark-themed interface titled "Service Project" with a subtitle "Objects and Functions - EEPROM". In the top left corner is a circular icon with a question mark. The interface includes several interactive elements: a "Value Modifier" dropdown set to "1", a "Value to write" section with minus, zero, and plus buttons, a "Write value" button, a "Position Modifier" dropdown set to "1", a "Read value" button, a "Position read / write" section with minus, zero, and plus buttons, a "Value from EEPROM" display showing "0", and a "Back" button at the bottom center.

In this screen the EEPROM can be tested by writing to it and reading from it. The value that should be written into an EEPROM position can be set between 0 and 255 with the + and - buttons. They will increment and decrement either by 1 or 10, depending on the value modifier setting. Write value will write the currently set value to the currently set position. The position can be set between 0 and the maximum for the device with the + and - buttons. They will increment and decrement by the value chosen in the position modifier drop down. Read value will read the value from the currently set position and display it. Back returns to the Objects and Functions menu.

Please note that EEPROMs have limited write cycles, so avoid writing into the same position too many times without reason to do so.
Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Repeat Scripts

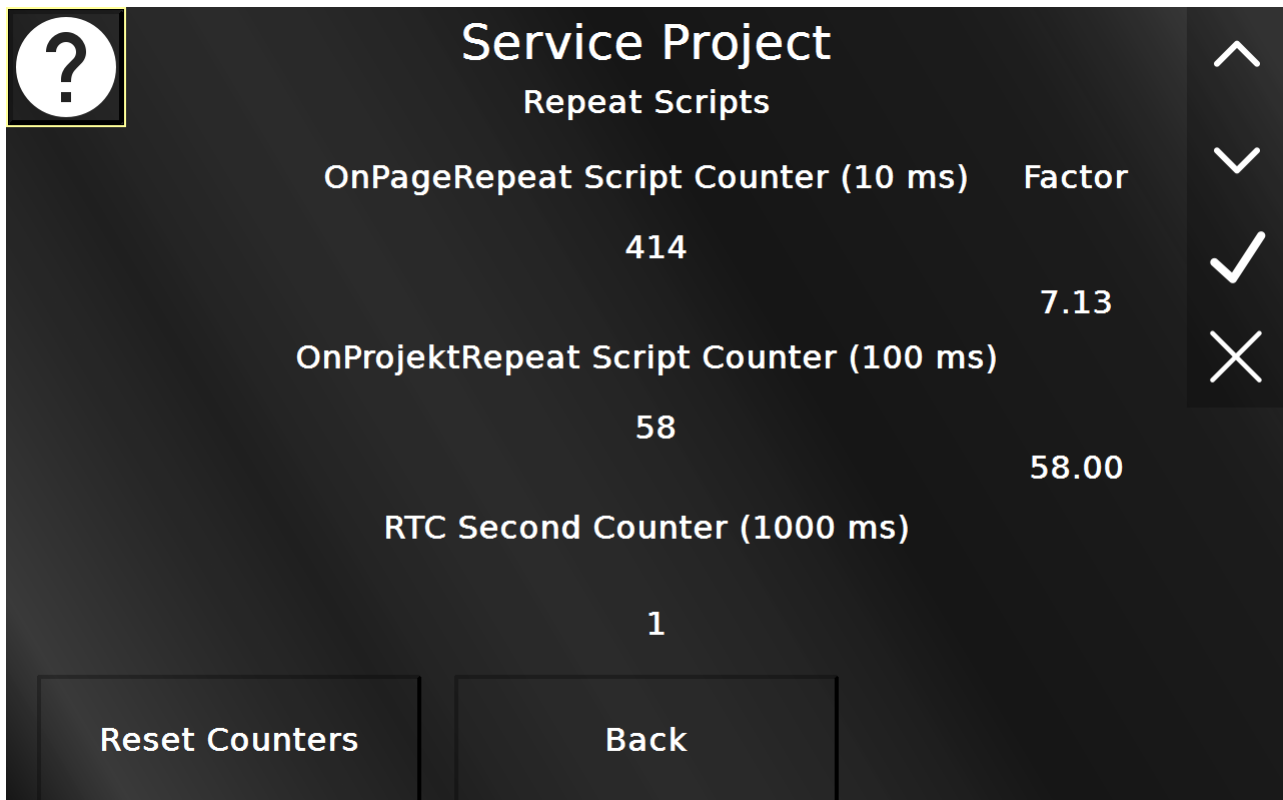

In this screen the performance of the repeated JavaScripts with [reduced cycle times](#)⁴⁶³ can be observed. One script is running every 10 ms and one every 100 ms. The value is compared to the real time seconds. The Reset Counters button resets all counters. Back returns to the Objects and Functions menu.


Service Project -> Objects and Functions -> Multi Language



In this screen the multi language functionality can be tested. The five language buttons switch the texts and the image between the languages. Back returns to the Objects and Functions menu.

The used language flag icons were created by [Freepik](https://www.flaticon.com/) from www.flaticon.com. The Unit Settings button leads to the Unit Settings page. Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Multi Language -> Unit Settings




Service Project

Objects and Functions - Unit Settings

Decimal symbol - point	1.5	Volume - metric
Date - ddmmyyyy	2.34	Mass - metric
Time - 24h	123456.789	Temperature - metric
Distance - metric		Pressure - metric
Area - metric	Back	Force - metric


In this screen several unit settings can be tested. Each button changes the unit settings for the according topic. All settings are only for the displayed objects and will be reverted when leaving the page. Back returns to the Multi Language page.

Service Project -> Objects and Functions -> Logging

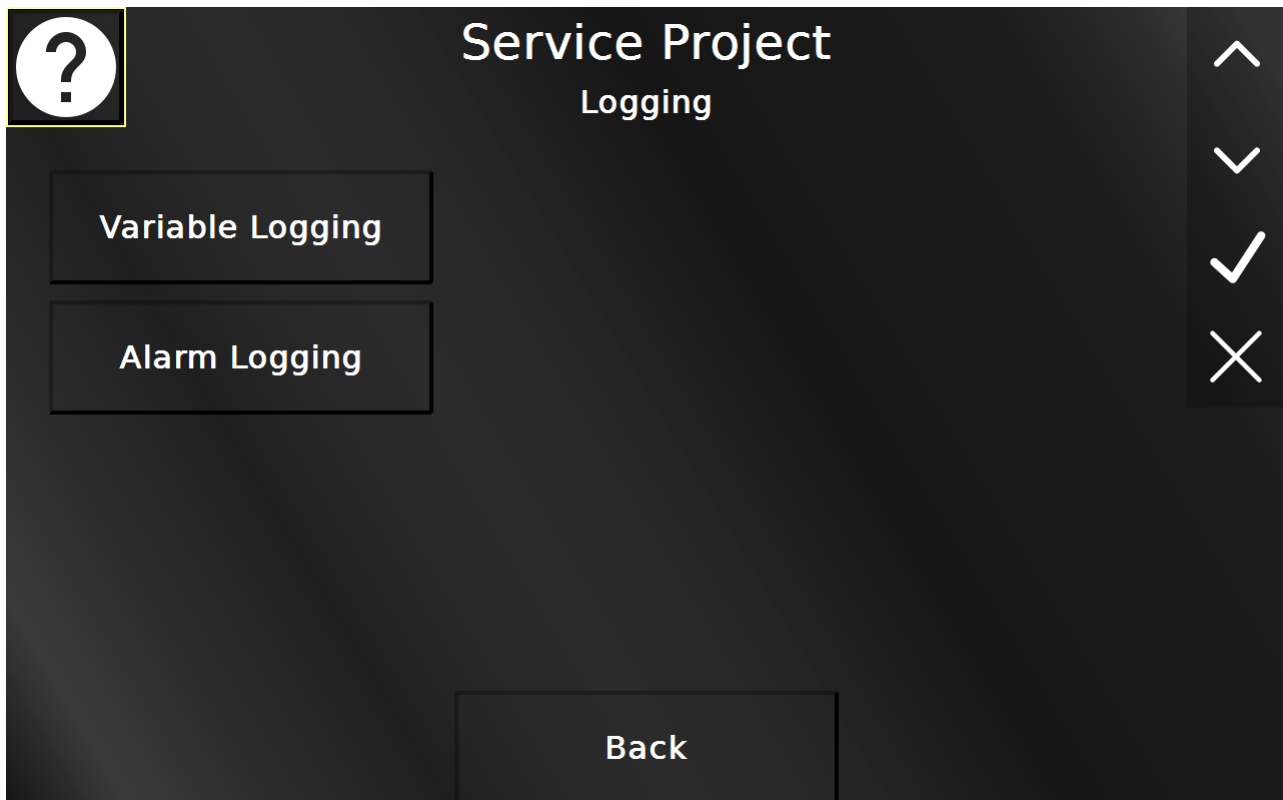


In this screen the Variable Logging and Alarm Logging screens can be entered. Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Variable Logging

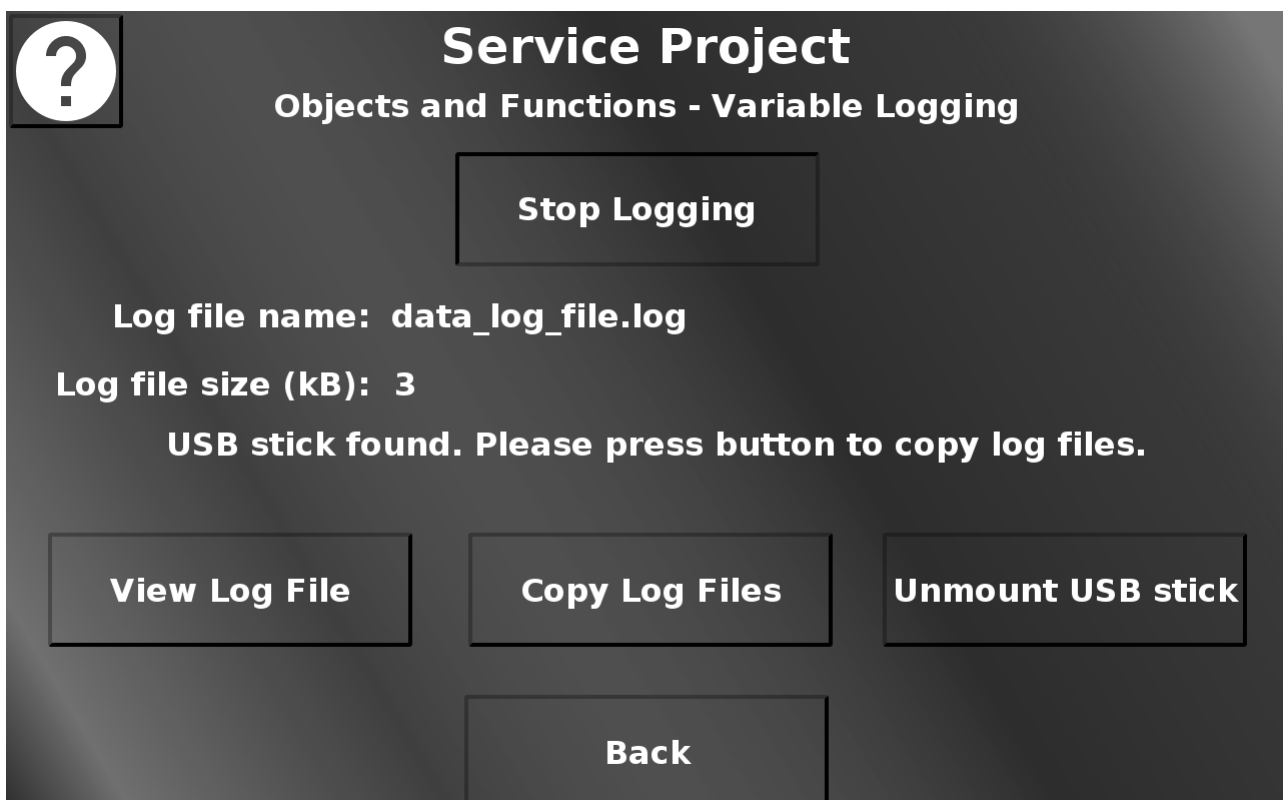

In this screen the variable logging functionality can be tested. Press Start Logging to start the variable logging. The logged variable is the RTC seconds variable, so there will be one event each second. The file can be viewed by pressing View Log File. This opens up an alarm showing the content of the file. Close the alarm by pressing Close. The Log File(s) can be copied to a connected USB stick by pressing Copy Log Files. Press Unmount USB stick to unmount the USB stick. Back returns to the Logging menu.


Service Project -> Objects and Functions -> Alarm Logging

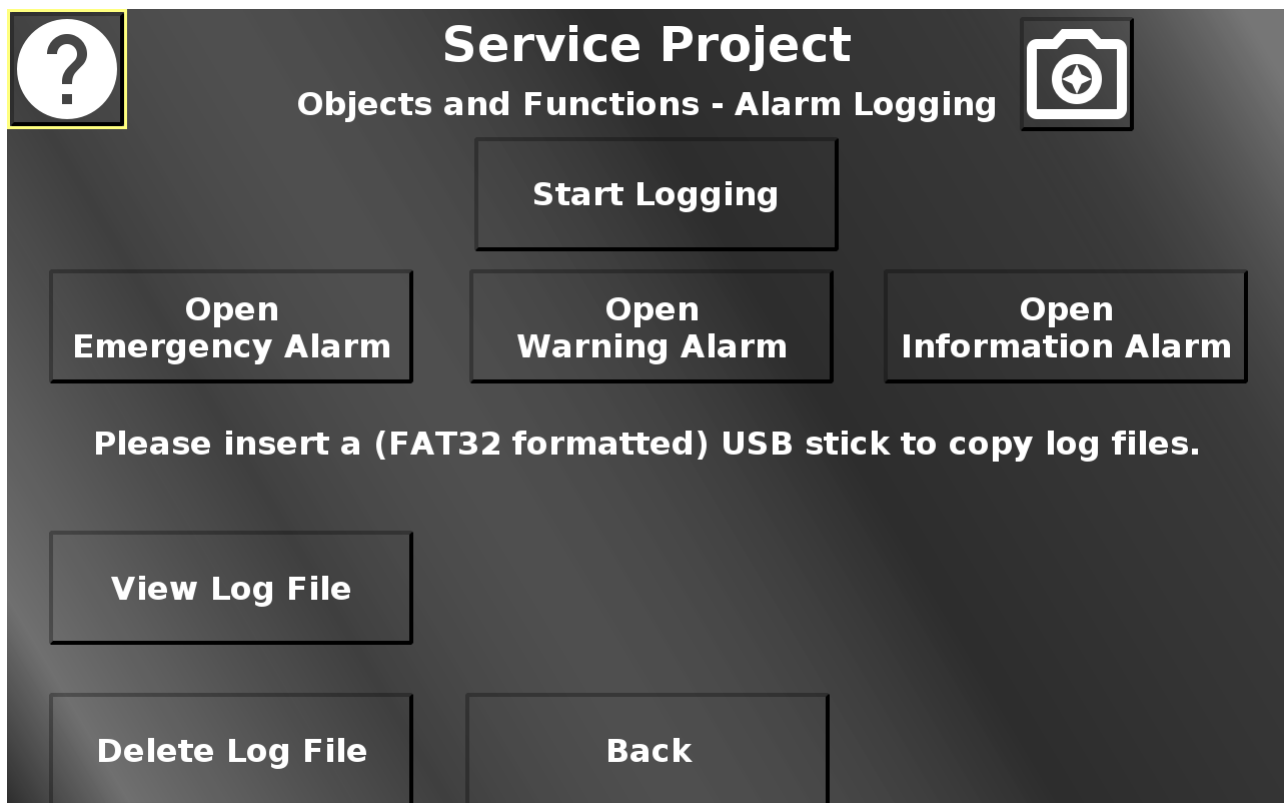

In this screen alarms and alarm logging can be tested. To enable alarm logging, press the Start Logging button. To stop it, press it again. The three Open ... Alarm buttons open an alarm from one of the categories Emergency, Warning or Information(al). From the opened alarm pop up, the alarms of the other two categories can be opened as well, to demonstrate the enqueuement and priority of the different alarm categories. View Log File opens an alarm that shows the newest entries in the alarm log file. Press Delete Log File to delete the current log file. If a USB stick is inserted, the alarm log file can be copied to the USB stick. The USB stick can also be unmounted.

Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Object Events

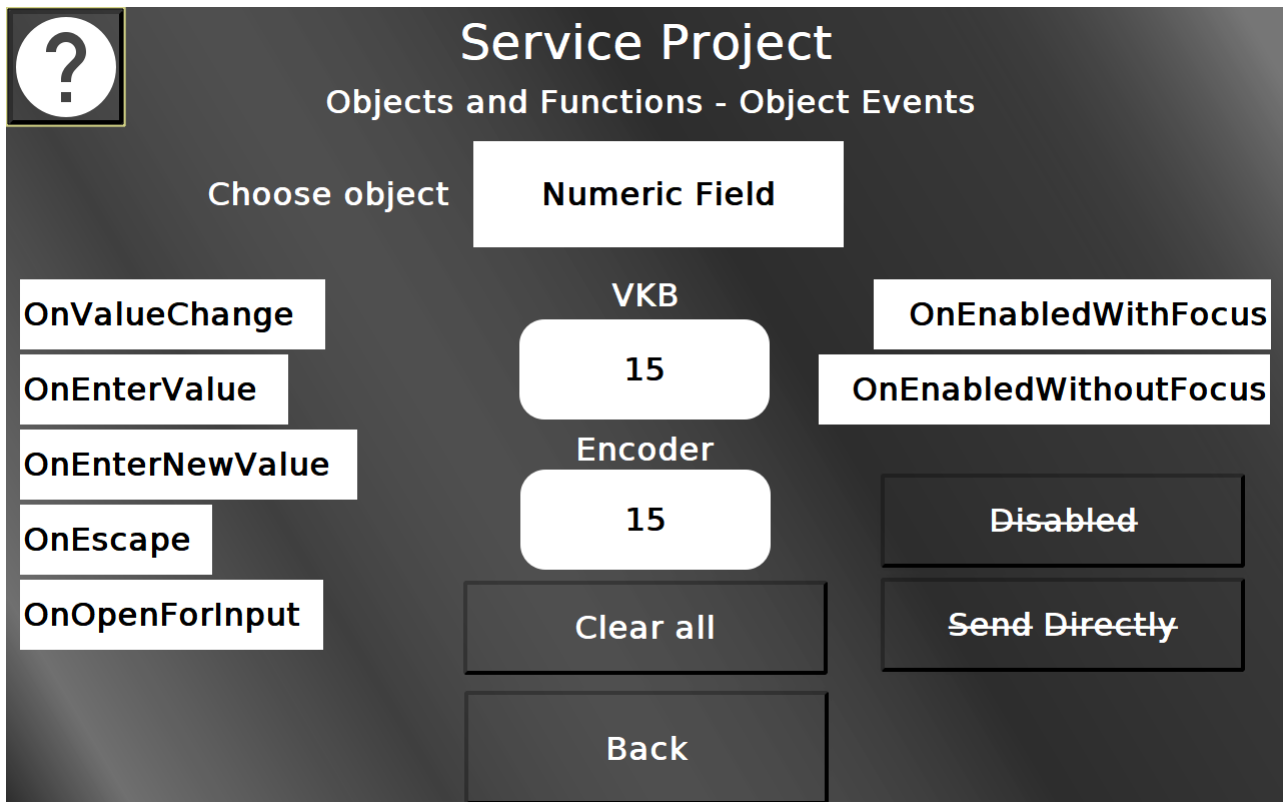

On this page most object events of all input objects can be tested. In the list object in the top an object type can be selected, from String Field, Numeric Field, Button, Table, List, Meter, Gauge, Arched Bargraph, Linear Bargraph.

For the selected object type, the available events are listed on the left and right of the object in the center. Use the object and/or change its value to activate the events. An activated event will get a green background.


With Clear all, the event backgrounds can be reverted to white.

With the disabled button the object under test can be disabled. That will deactivate it as an input, and it will be shown grayed out and strike through.

With the Send Directly button the behavior of the according object can be changed. With send directly, each encoder rotation will directly invoke a value change. Without it, only when confirming the value, it will actually be changed.


Back returns to the Objects and Functions menu.

Service Project -> Objects and Functions -> Page History

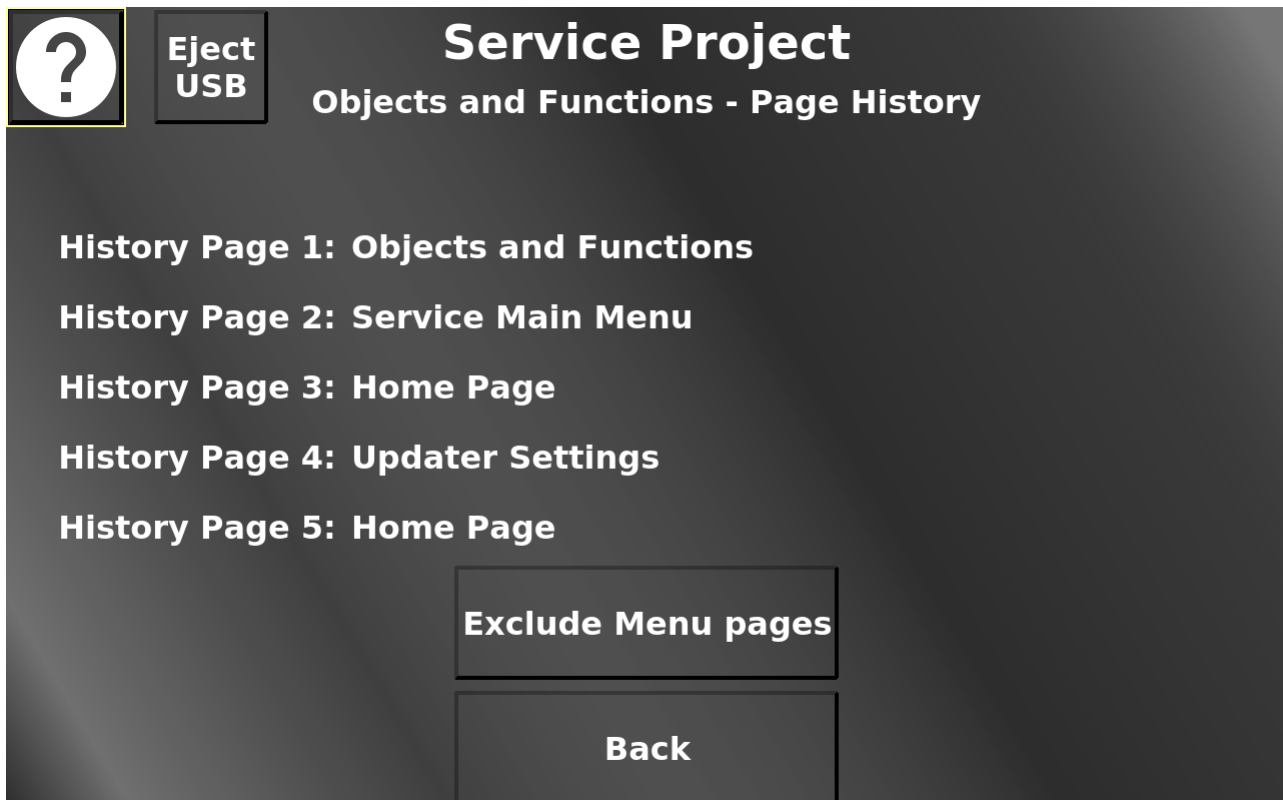

In screen the last 5 pages that were visited are shown. To de-clutter the list, menu pages can be excluded from the history list. Note that this will change the behavior of the escape button.

Service Project -> Info to USB

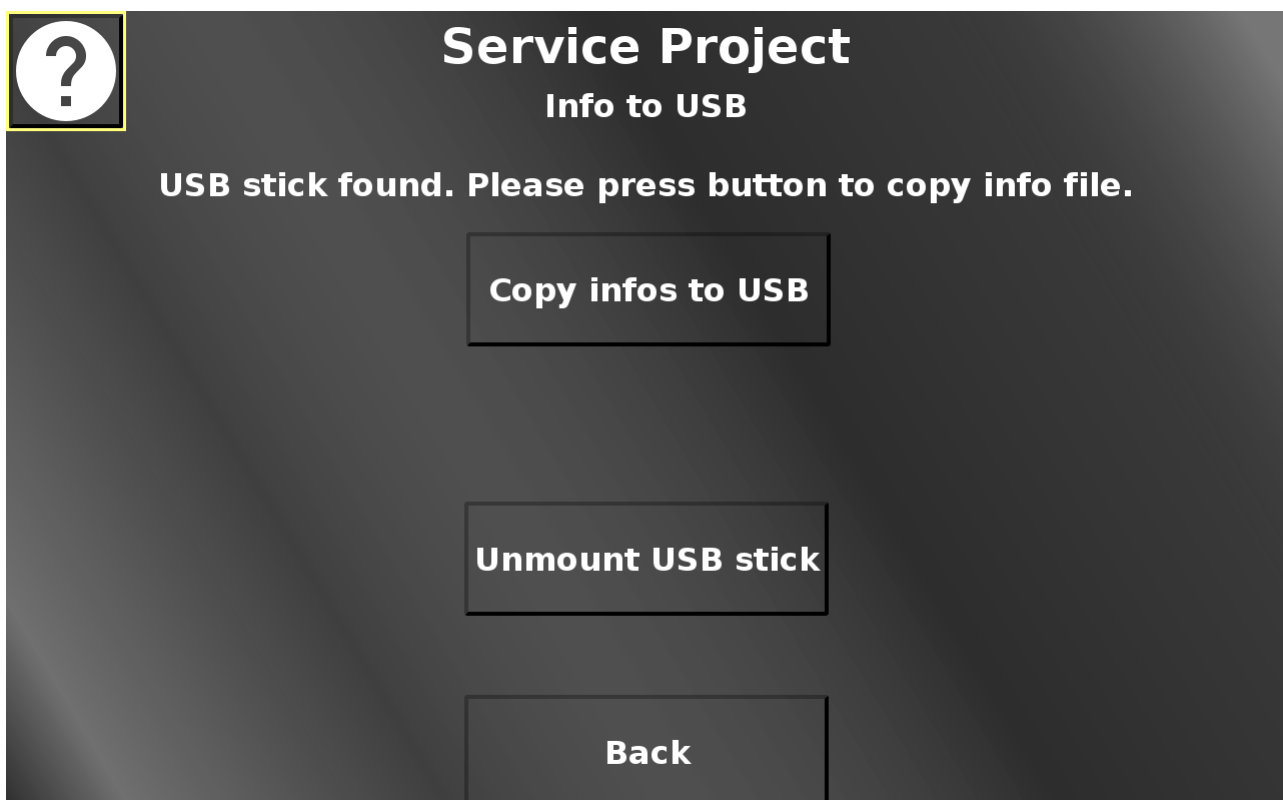

In this screen a file with information about the device can be written to a connected USB stick for analysis or to be sent to technical support.

Copy infos to USB creates the info file and puts it on the USB stick. Please note that this button is only shown if a valid USB stick is connected.

This is an exemplary content of an info file:

Device Info

Article number: OPUSA8SN1CANB000

Serial number: 1611001AA

Device type: 12.1" Standard Basic

OS version: 4.1.15-egspro-2.3.2-1

PClient version: 2020.4.0.2

Project version: 0.1

Operating time: 2 d, 7 h, 12 m

System Uptime: 0 h, 6 m, 28 s

Date / Time: 2020/2/28 - 14/16/18

System memory: 1192.784 MB / 1312.900 MB

Device temperature: 41.2 °C

Device voltage: 24.4 V



After copying, the file name of the created file will be shown.


Unmount USB stick unmounts the USB stick so it can be ejected from the device.

Please note that until the USB stick is mounted, the file might not be finalized on the USB stick. Ejecting the USB stick before unmounting means a probable loss of the info file.




When the USB stick is successfully unmounted, an information will be displayed on the screen that the stick can be ejected.
Back returns to the main menu.

Service Project -> CAN

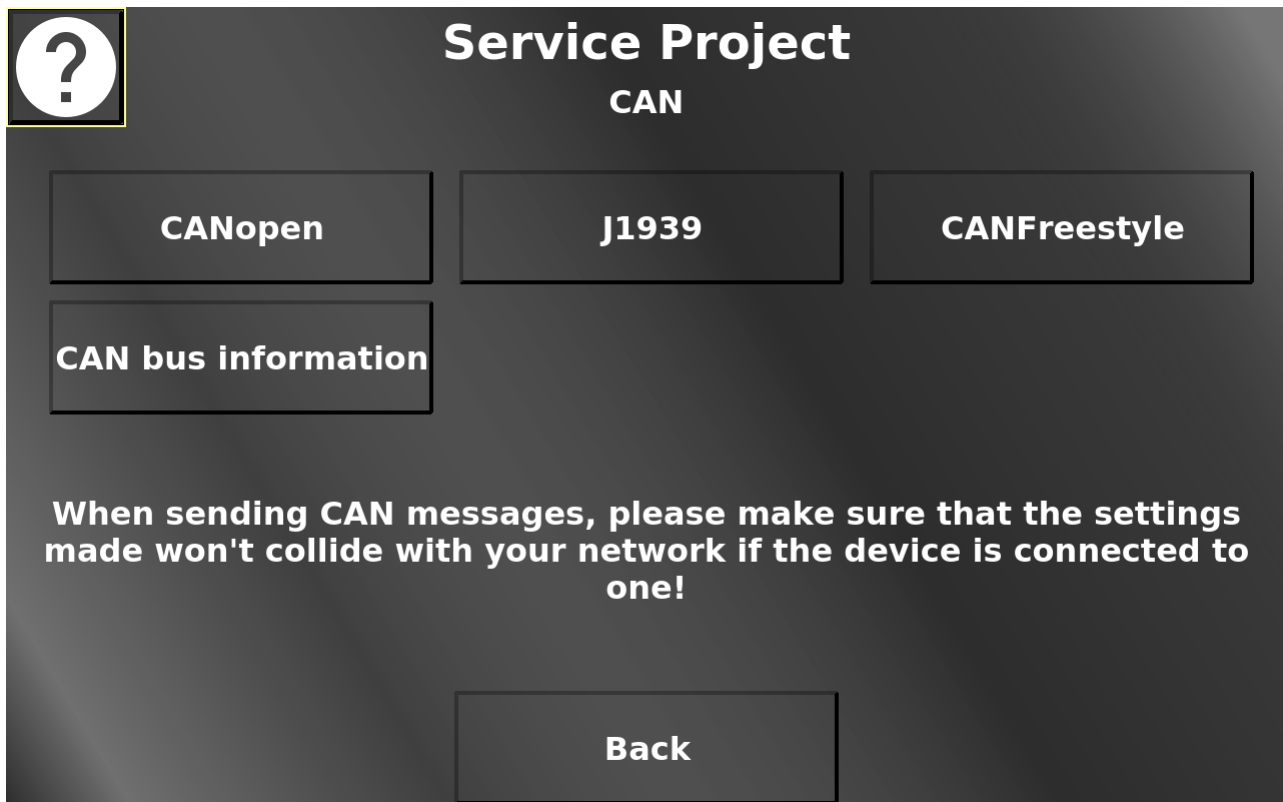


In this screen the different CAN protocols can be selected for some tests. Please note that if the device is connected to a CAN network, it is your responsibility that the messages created in these tests don't collide with the CAN network. Back returns to the main menu.

Service Project -> CAN -> CANopen

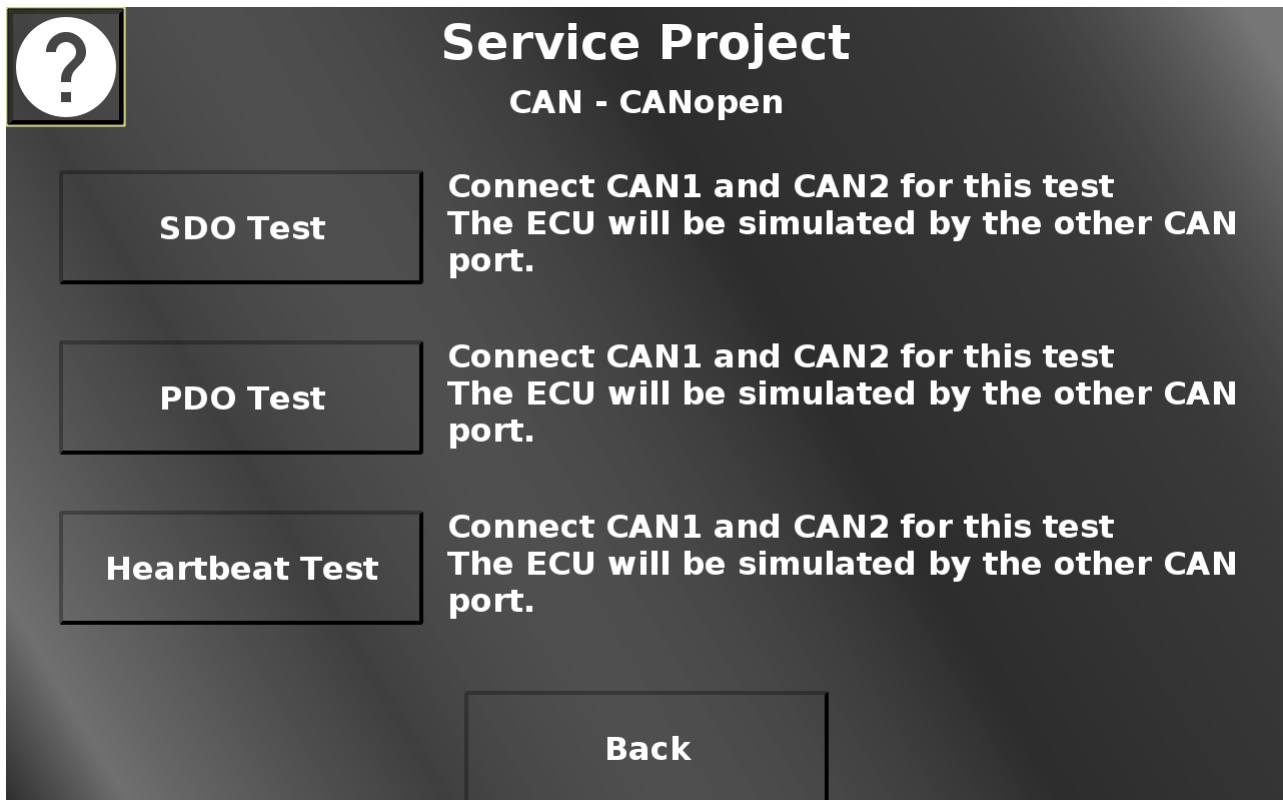

In this screen the SDO and the PDO Test can be selected. Please note that for these tests to work, the device ports CAN 1 and CAN 2 need to be connected. Back returns to the CAN menu.

Service Project -> CAN -> CANopen -> SDO Test

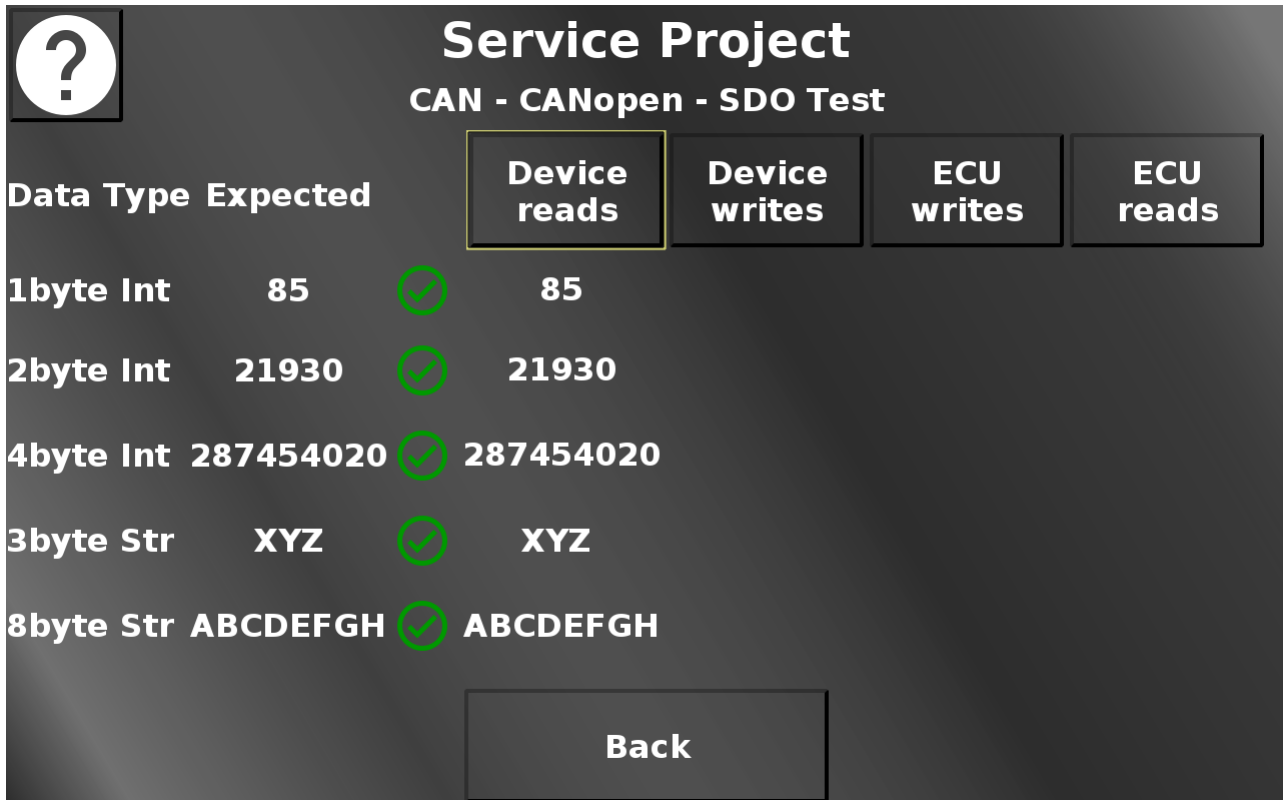

Data Type Expected			Device reads	Device writes	ECU writes	ECU reads
1byte Int	85	✓	85			
2byte Int	21930	✓	21930			
4byte Int	287454020	✓	287454020			
3byte Str	XYZ	✓	XYZ			
8byte Str	ABCDEFGH	✓	ABCDEFGH			

Back

In this screen different SDO functionalities can be tested.

Device reads means that the OPUS device will ask the ECU (aka CAN port 2) for some data values. If the communication is successful, the values in the Expected column should be the same as in the ask ECU column. The check boxes show if the values match. Create a CAN trace to see the communication process.


Device writes means that the OPUS device will send a write request to some variables belonging to the ECU (aka CAN port 2). If the communication is successful, the values in the Expected column should be the same as in the Device writes column. The check boxes show if the values match. Create a CAN trace to see the communication process.

ECU writes means that the ECU (aka CAN port 2) writes some variables in the OPUS device. If the communication is successful, the values in the Expected column should be the same as in the ask ECU writes column. The check boxes show if the values match. Create a CAN trace to see the communication process.

ECU reads means that the ECU (aka CAN port 2) reads some variables from the OPUS device. If the communication is successful, the values in the Expected column should be the same as in the ECU reads column. The check boxes show if the values match. Create a CAN trace to see the communication process.

Back returns to the CANopen menu.

Service Project -> CAN -> CANopen -> PDO Test

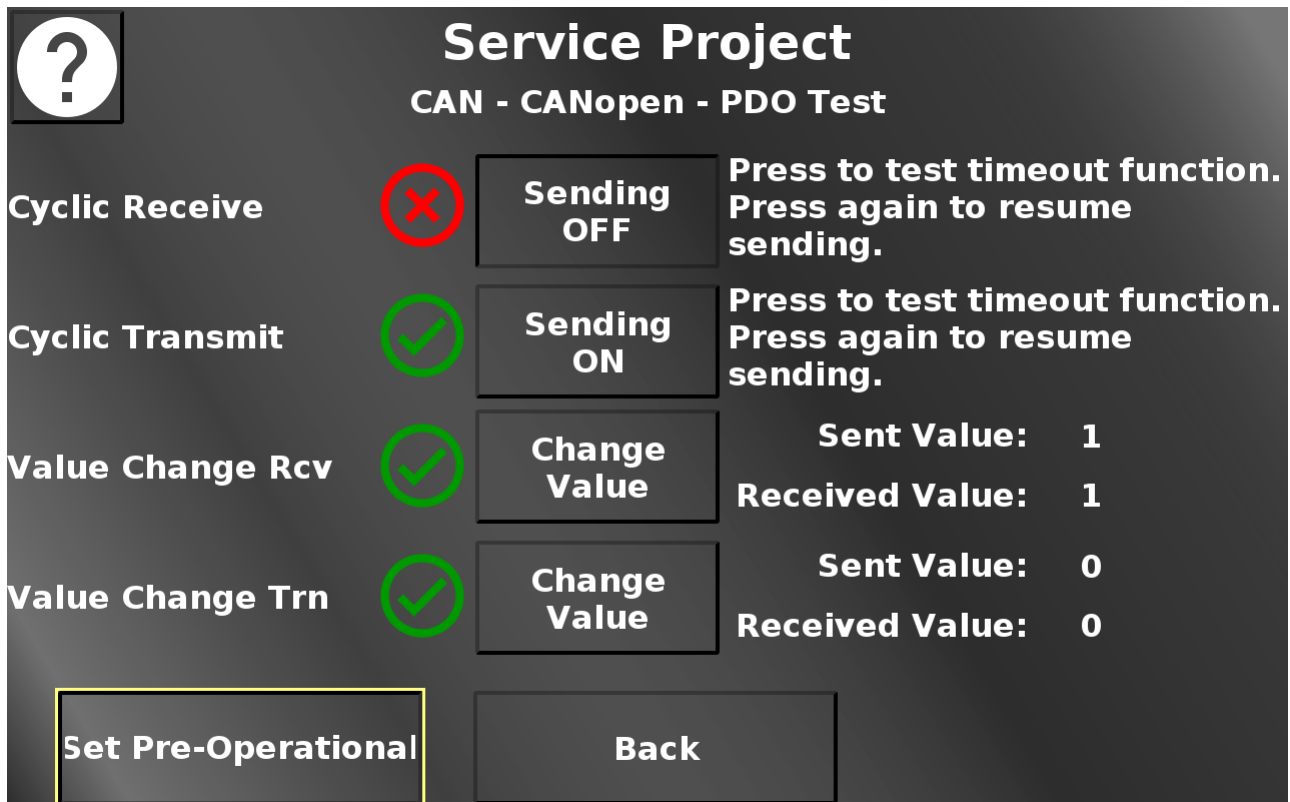


In this screen some PDO functionalities can be tested. For the PDO communication to start, the device first needs to be set into operational mode with the button in the bottom left.

The first two indicators show a green check mark if the cyclic receive and transmit communication work correctly. You can disable the sending of the appropriate message with the according button. This should make the red X appear. Note that the ECU is simulated with CANFreestyle mappings on CAN port 2.

The second two indicators show a green check mark if the sent value and the received value of a CANopen Receive(Rcv) and Transmit (Trn) mapping are identical. Press the buttons to change the sent value. The received value should change to the same almost instantly. Only very quick taps on these buttons should make the red X appear. Initially, the received values are set to invalid, so the red X will appear for both values. Once this communication was established, the green check mark will be displayed as long as the values are the same, even if the device is set to pre-operational (i.e. it cannot send or receive messages). Press the buttons to change the sent value and the red X should appear. Also note that once the device is back to operational, only the Transmit (Trn) value might automatically update. This is a property of the CANopen standard, when a device first goes into operational mode, it will once send all transmit mappings with their current values. The Receive (Rcv) value is being sent by a CANFreestyle mapping on CAN port 2 which does not have such a feature. Press the Change Value button, then the received value should also update and the green check mark appears.

Back returns to the CANopen menu.

Service Project -> CAN -> CANopen -> Heartbeat Test

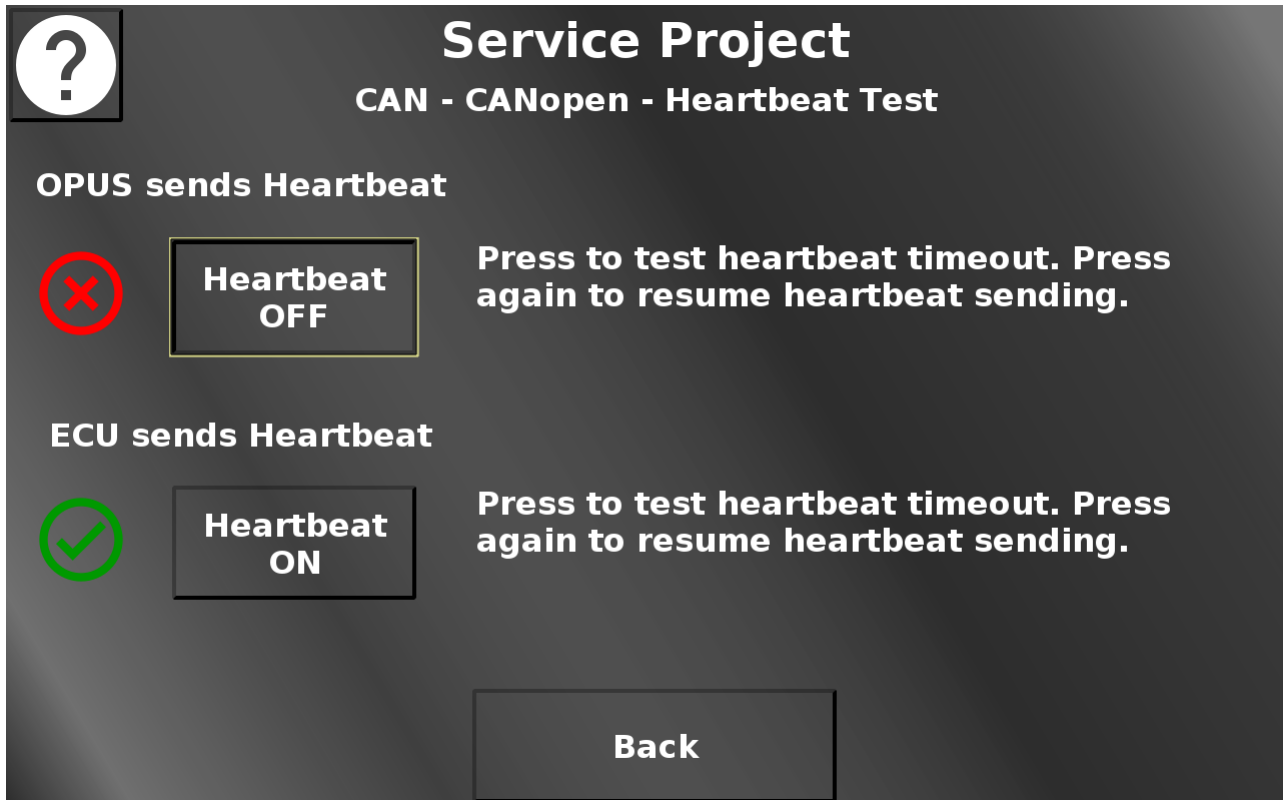


In this screen the CANopen heartbeat functionality can be tested.

When entering this page, the CANopen stack on the device will produce a heartbeat message every 100 ms (ID 0x701) on CAN bus 1. A CANFreestyle receive message on CAN bus 2 checks for this message and shows the red X if the heartbeat isn't received for more than 200 ms. If the heartbeat is received again, the green check mark is displayed.

Simulating an ECU, a CANFreestyle transmit message on CAN bus 2 will be sent to imitate a heartbeat message from the ECU every 100 ms. The CANopen stack on CAN bus 1 will evaluate the message. If it hasn't been received for 200 ms, the red X will be shown. If the heartbeat message is received again, the green check mark is displayed.


Back returns to the CANopen menu.

Service Project -> CAN -> J1939

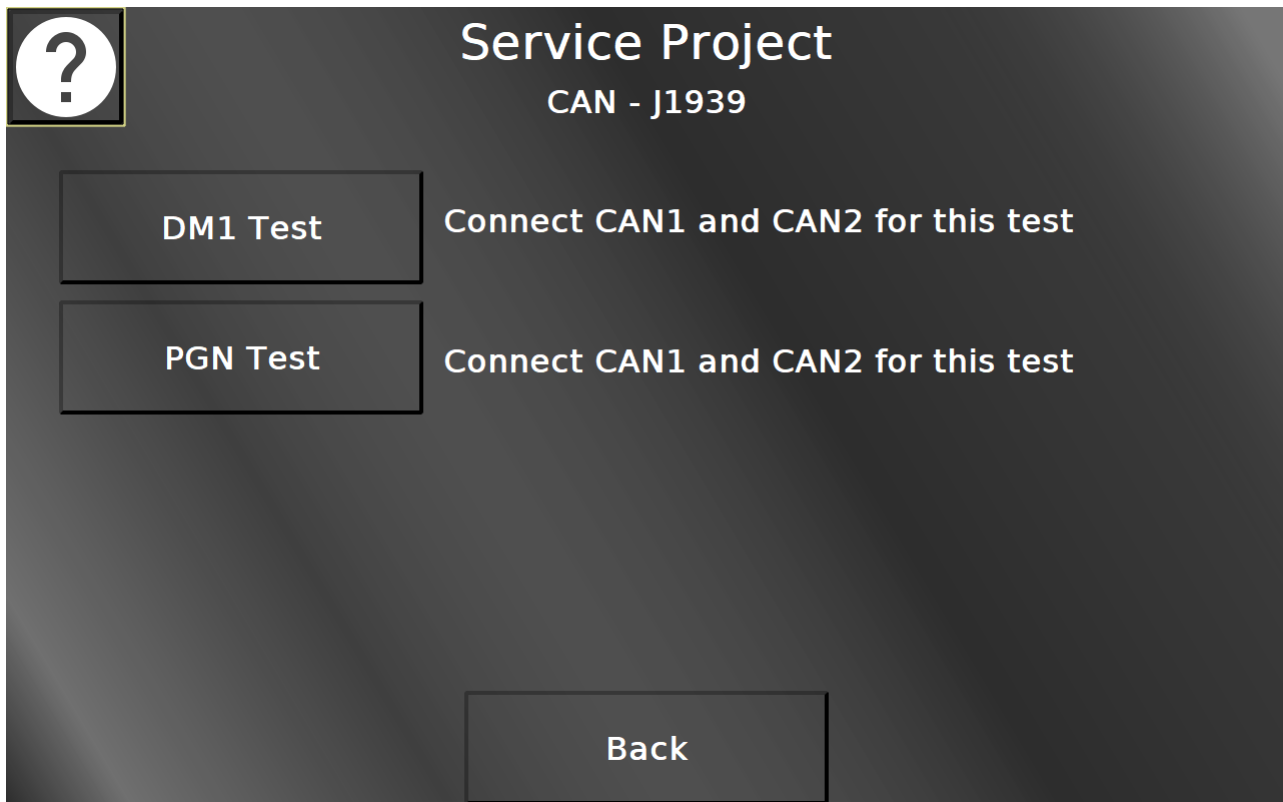

In this screen the test pages for DM1 and PGNs can be opened. Please note that for these tests to work, the device ports CAN 1 and CAN 2 need to be connected. Back returns to the CAN menu.

Service Project -> CAN -> J1939 -> DM1

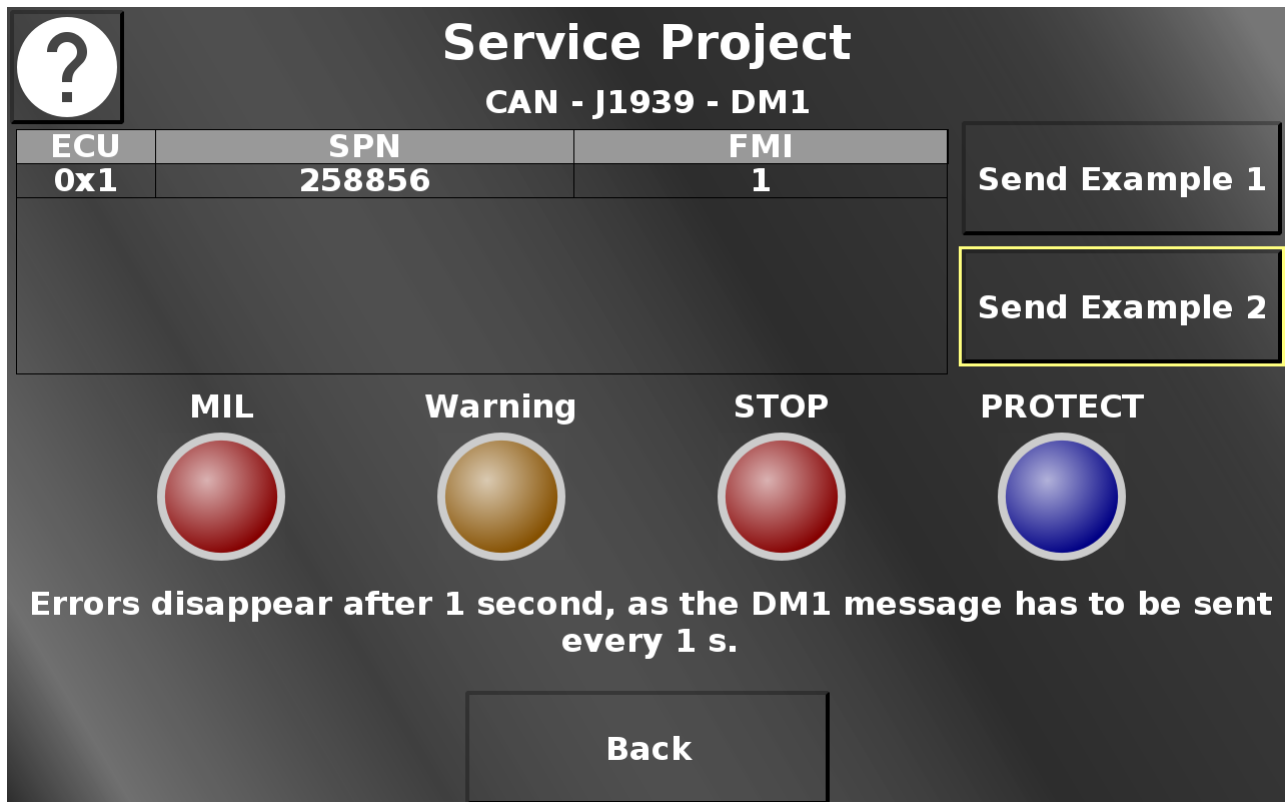

In this screen two DM1 tests can be performed.

Send Example 1 will send an error to the OPUS device and let one lamp blink slowly.

Send Example 2 will send a different error to the OPUS device and let all lamps blink fast.

Please note that the errors will disappear after 1 second. DM1 messages have to be sent every 1 s which is why the buffer is automatically cleared after 1 second.

Back returns to the J1939 menu.

Service Project -> CAN -> J1939 -> PGN Test

Service Project

CAN - J1939 - PGN

Send PGN FDC5

Enable PGN 0

Sent			Received	
Part Number	OPUSA8SN1CANF000	✓	OPUSA8SN1CANF000	
Serial Number	1825137AD	✓	1825137AD	
Location	Front	✓	Front	
Type	Display	✓	Display	
Manufacturer	Topcon Electronics	✓	Topcon Electronics	
Hardware ID	1	✓	1	

Back

On this screen, two PGNs can be tested. PGN FDC5 contains some device information. With Send PGN FDC5 the PGN is sent from CAN bus 1 to 2 and the received values are compared to the actual values on the left. If they are correct, green check marks will be displayed. If they are not, a red cross will be displayed instead. The values for Location, Type, Manufacturer and Hardware ID can be edited.

Service Project

CAN - J1939 - PGN

Send PGN FDC5

Enable PGN 0

Sent

✓

Received

-


+

Back

Pressing Enable PGN 0 starts the periodic transfer of PGN 0, usually used to transfer the target RPM. The gauge on the left side shows the value that is transferred, the gauge on the right shows the received value. With the plus / minus buttons the value can be changed. If the values are identical, a green check mark will be displayed. If they are not, a red cross will be displayed instead.

Back returns to the J1939 menu.

Service Project -> CAN -> CANFreestyle

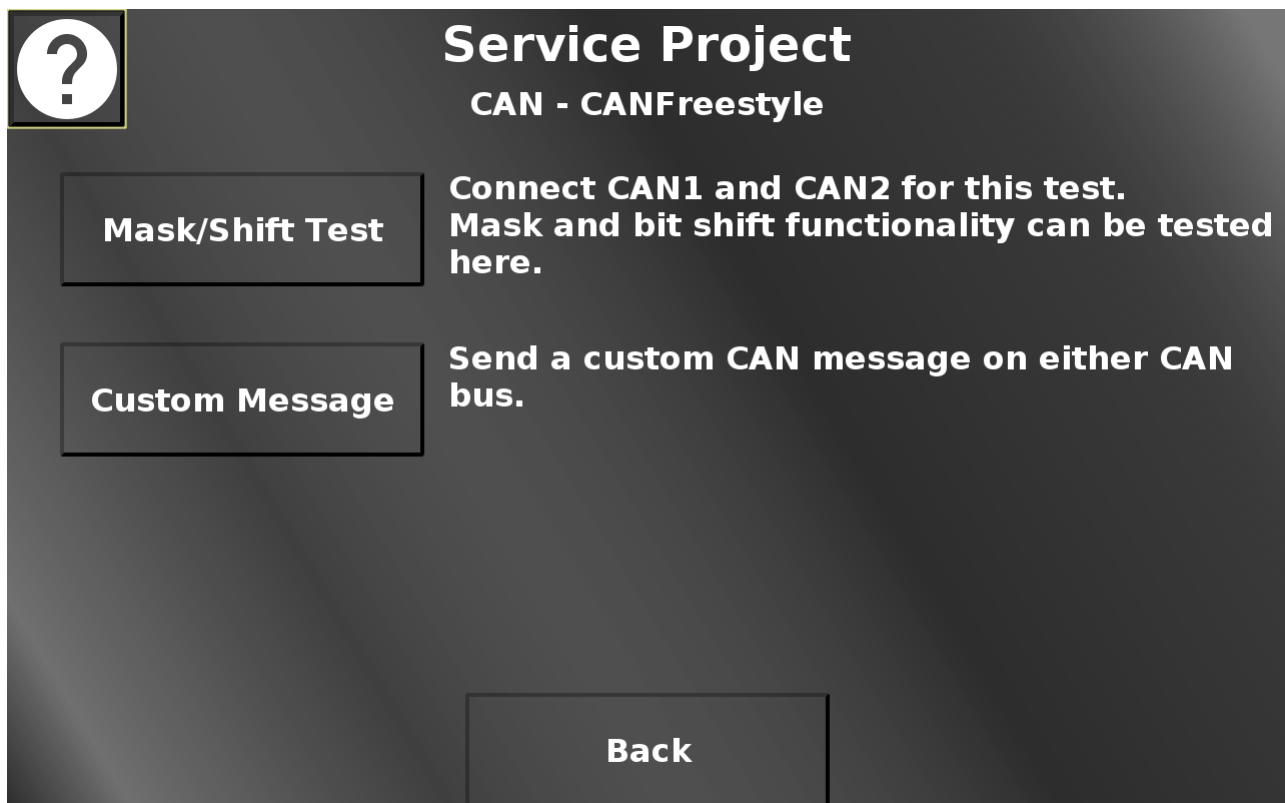

In this screen the mask, bit shift, scaling and offset test page and a page to send a custom CAN message can be opened. Back returns to the CAN menu.

Service Project -> CAN -> CANFreestyle -> Mask / Shift Test

?

Service Project

CAN - CANFreestyle - Mask / Shift Test

Original Value: 0x8

-

+

Modifier: 0x1

2 bytes, 1 bit right:	0x4	✓	0x4
2 bytes, 1 bit left:	0x10	✓	0x10
2 bytes, offset1 50, scale 0.5:	0x1D	✓	0x1D
2 bytes, scale 0.5, offset2 50:	0x36	✓	0x36
2 bytes, mask 0x5555:	0x0	✓	0x0
4 bits, 3 bits left:	0x40	✓	0x40
4 bits, 2 bits right, mask 0x2, scale 2:	0x4	✓	0x4
Kelvin -> Fahrenheit:	-445	✓	-445

Back

Expected Values

On this page, different masking, bit shift, scaling and offset functionalities can be tested. For this test to work, CAN1 and CAN2 have to be connected.

In the top the original value can be changed (shown in hexadecimal). The Modifier dropdown chooses the modifier by which plus and minus buttons change the value. In each line below some modifications of the original value are configured in the CAN receive mapping. The left value shows the modified value. The right value shows the same modification done in JavaScript. The two value are compared every time the value is changed and the CAN message is sent again. If the values match, a green check mark is shown. If the values don't match, a red X is shown.

Back returns to the CAN Freestyle menu.

Service Project -> CAN -> CANFreestyle -> Custom CAN Message

Service Project
CAN - CANFreestyle

Send a custom CAN message

Port: **CAN 1** Bitrate: **250** kbps DLC: **8**

CAN ID: **14A1** - + Modifier: **0x10**

	Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
	+	+	+	+	+	+	+	+
Data:	01	03	04	05	02	30	40	50
	-	-	-	-	-	-	-	-

Modifier: **x10** **Back** **Send Message**

In this screen a custom CAN message can be set up which will be sent to the chosen CAN bus.

Please note that creating the "wrong" message can be dangerous for the system the device is connected to.

The CAN 1 / CAN 2 button chooses over which CAN bus the message should be sent.

In the Bitrate dropdown the bitrate can be chosen with which the message should be sent.

In the DLC dropdown the length of the message can be chosen. Values from 0 to 8 are possible.

The CAN ID - (minus) and + (plus) buttons change the value of the CAN ID of the message.

The Modifier dropdown chooses the modifier by which the CAN ID will be changed. In the displayed setup, a press of the + button will change the CAN ID from 0x1A0 to 0x1B0.

The + and - buttons of the data bytes change the data value of each byte.

The segments for the data bytes will be made invisible depending on the DLC selection.

The modifier button in the bottom switches between 0x1 and 0x10. The - / + buttons for the data bytes modify the value by the selected modifier.

Send Message sends the CAN message with the chosen settings.

Back returns to the CAN menu.

Service Project -> CAN -> Can bus information

?

Service Project

CAN - CAN bus information

CAN bus 1		CAN bus 2	
250	Bitrate	250	Bitrate
Active, no errors	State	Active, no errors	State
4	Max Messages received / s	4	Max Messages received / s
0	Current Messages received / s	0	Current Messages received / s
2	Max Messages sent / s	2	Max Messages sent / s
0	Current Messages sent / s	0	Current Messages sent / s

50ms On

20ms On

40ms On

25ms On

Turn Off

Clear

Back

Turn Off


Bitrates

On this screen some information about the CAN ports can be seen. To change the current and maximum messages, two CAN messages can be activated for each CAN port. The maximum values can be reset by pressing the Clear button. The Turn Off buttons turn the appropriate CAN bus off to simulate error cases. The Bitrates button opens an alarm where the bit rates of each CAN bus can be changed to simulate errors.

On devices with 4 CAN buses, an additional button CAN 3/4 is displayed. That page offers an identical information about CAN busses 3 and 4, but has no possibility to simulate CAN traffic or errors, that has to be done externally.

Back returns to the CAN menu.

Service Project -> LED / Backlights

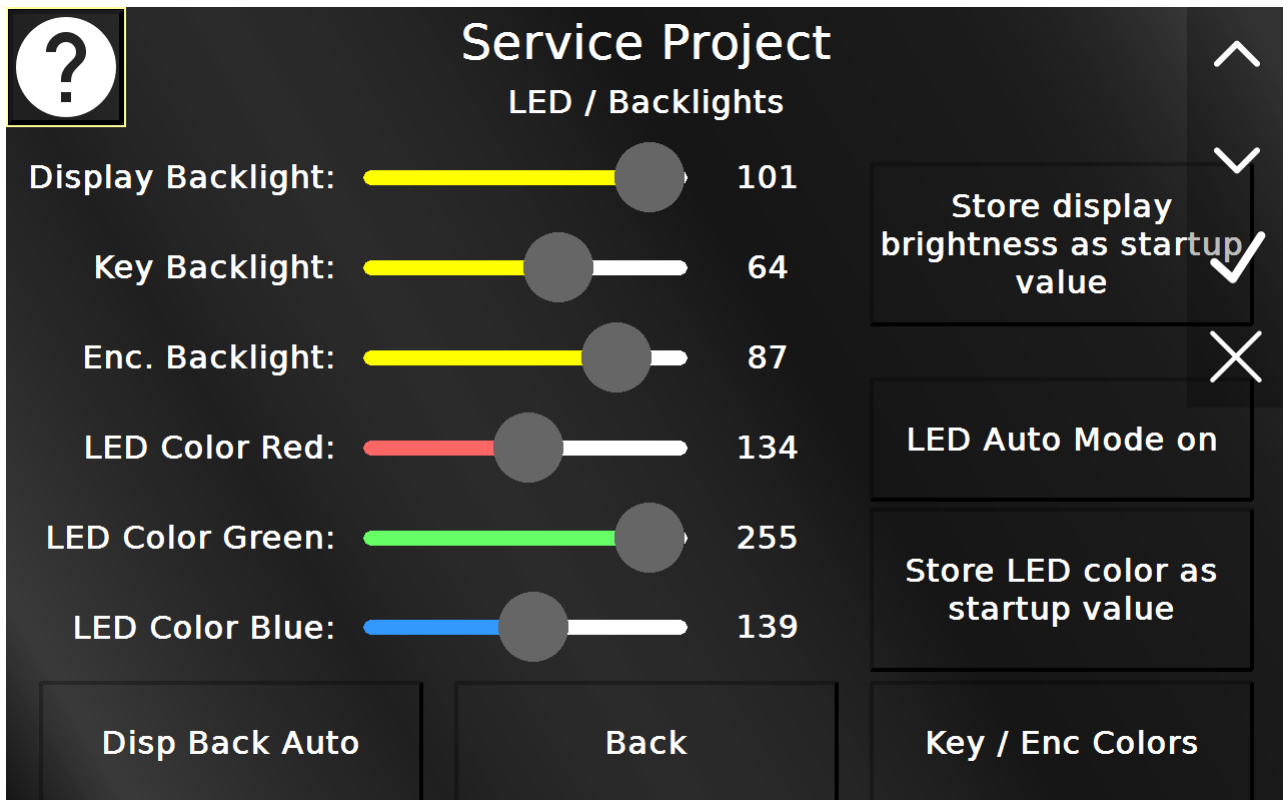

The LED / Backlights screen allows changing the values for display, key, encoder backlight and the multicolor LED.

The - (minus) and + (plus) buttons change the according value. The amount that the current value is modified by, can be chosen with the Modifier dropdown.

Store display brightness as startup value changes the startup display brightness (i.e. the screen brightness when the device is powered on until the application setting sets in).

LED Auto Mode on starts gradual color changes for the multi color led.


Store LED color as startup value (not available for all device types) stores the currently set multicolor LED value for the startup period (i.e. before the PClient can set a value).

Disp Back Auto opens the automatic backlight setup screen.

Key / Enc Colors opens the screen for key and encoder backlight colors.

Back returns to the main menu.

Service Project -> LED / Backlights -> Display Backlight Auto Mode

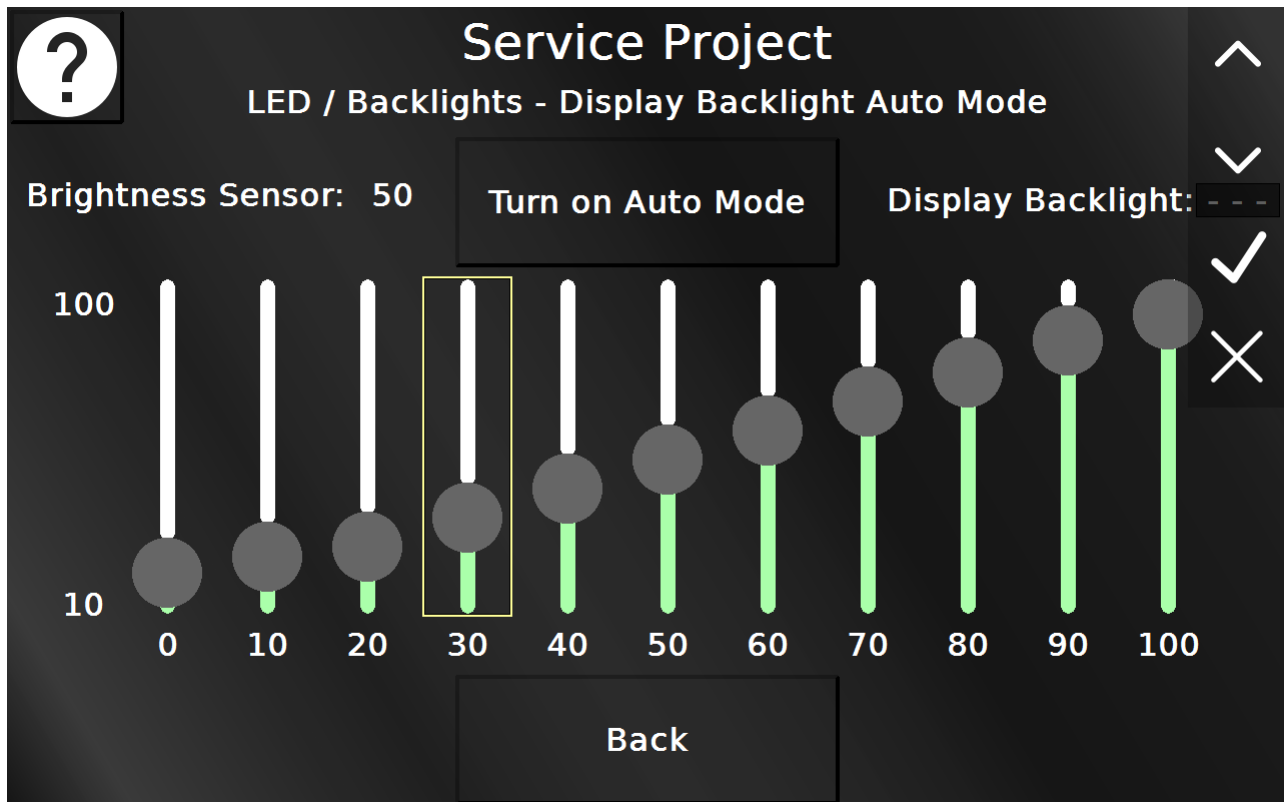

In this screen the automatic backlight control can be activated / deactivated.

Additionally, the backlight curve for the different brightness sensor values can be adjusted.


The first bar sets the brightness of the screen for an ambient brightness of 0 to 10 %.

The second bar sets the brightness of the screen for an ambient brightness of 10 to 20 %, and so on.

The - (minus) and + (plus) sections decrease / increase the brightness value for the according ambient brightness.

Back returns to the LED / Backlight menu.

Service Project -> LED / Backlights -> Keyboard / Encoder Colors

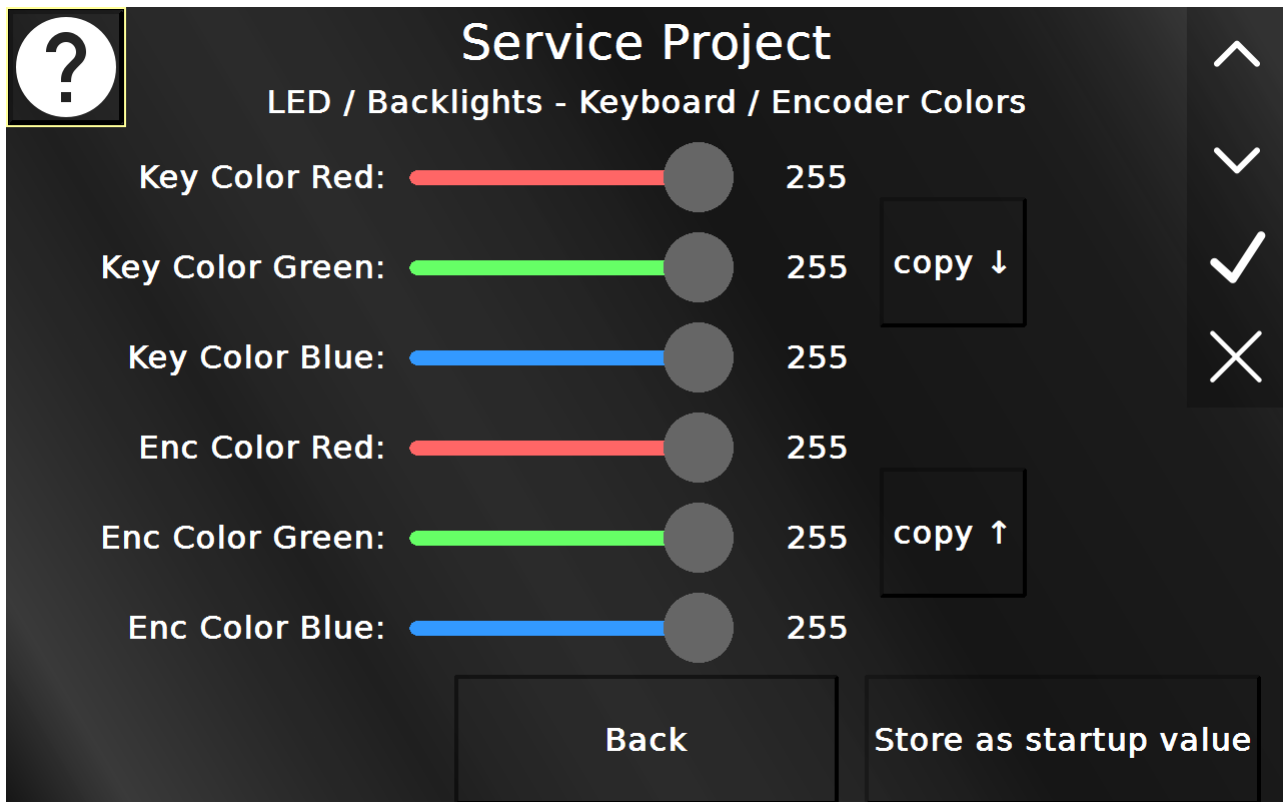

In this screen the colors for the key backlight and the encoder backlight can be adjusted (only available on certain devices).


The - (minus) and + (plus) buttons change the according value. The amount that the current value is modified by, can be chosen with the Modifier dropdown.

Store as startup value will set the backlight color that keys and encoder will have at startup until the application setting sets in.

The copy > and < buttons will duplicate the key color values to the encoder values and vice versa.

Back returns to the LED / Backlight menu.

Service Project -> Inputs / Outputs

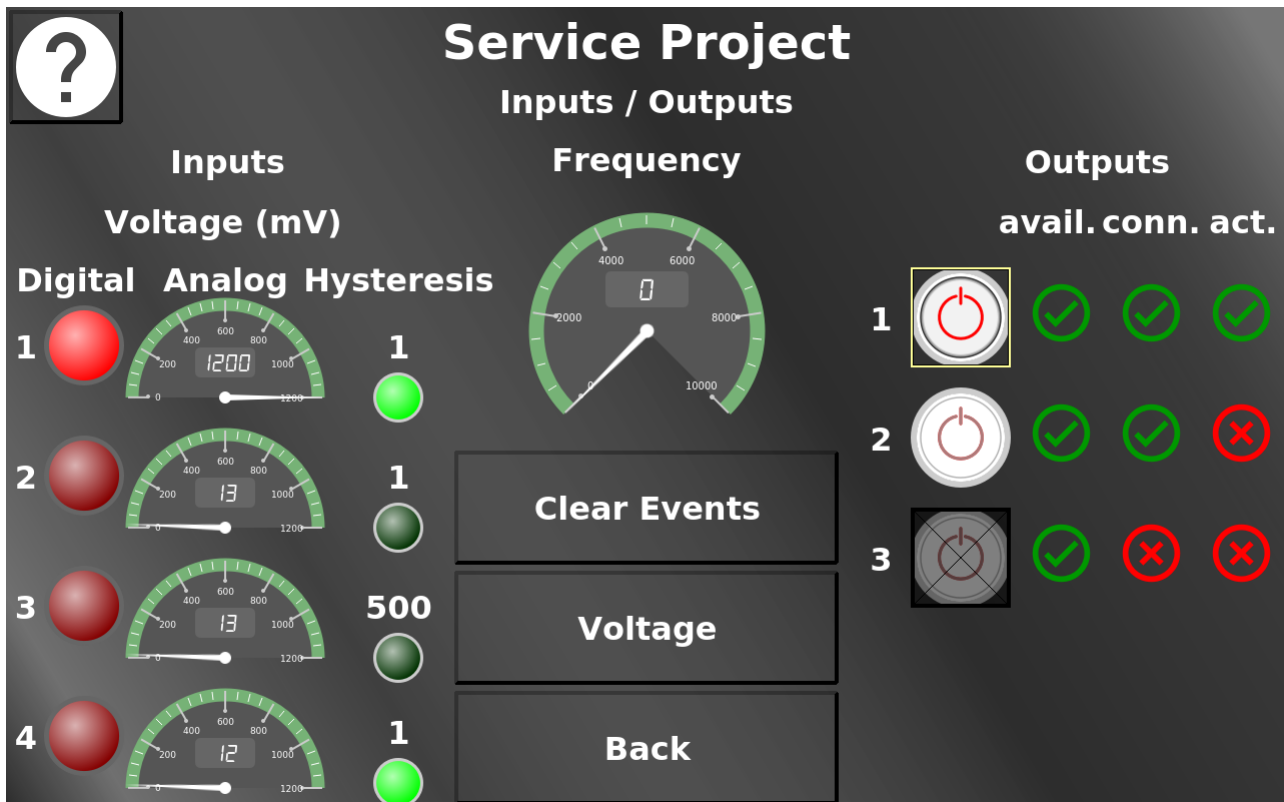

In this screen the analog / digital / current / frequency (where available) inputs can be viewed and the digital outputs can be set and their status can be viewed.

The Power Buttons for outputs 1 to 3 are inputs and can be activated / deactivated. This activates the according output.


The three symbols next to the buttons show the status of the according output. The first one (avail. for available) shows if the output is available on the device. The second one (conn. for connected) shows if the output is connected properly. The third one (act. for active) shows if the output is switched to active.

With the Voltage button the inputs can be switched between voltage and current inputs. The Hysteresis values can be edited to change the voltage / current difference that is needed to activate an event for each input variable. If an event occurs, the green lamps below the hysteresis values are lit up. Clear Events resets these event lamps.

Please refer to the [how-to](#) ⁸⁴² on digital outputs.

Back returns to the main menu.


Service Project -> Cameras

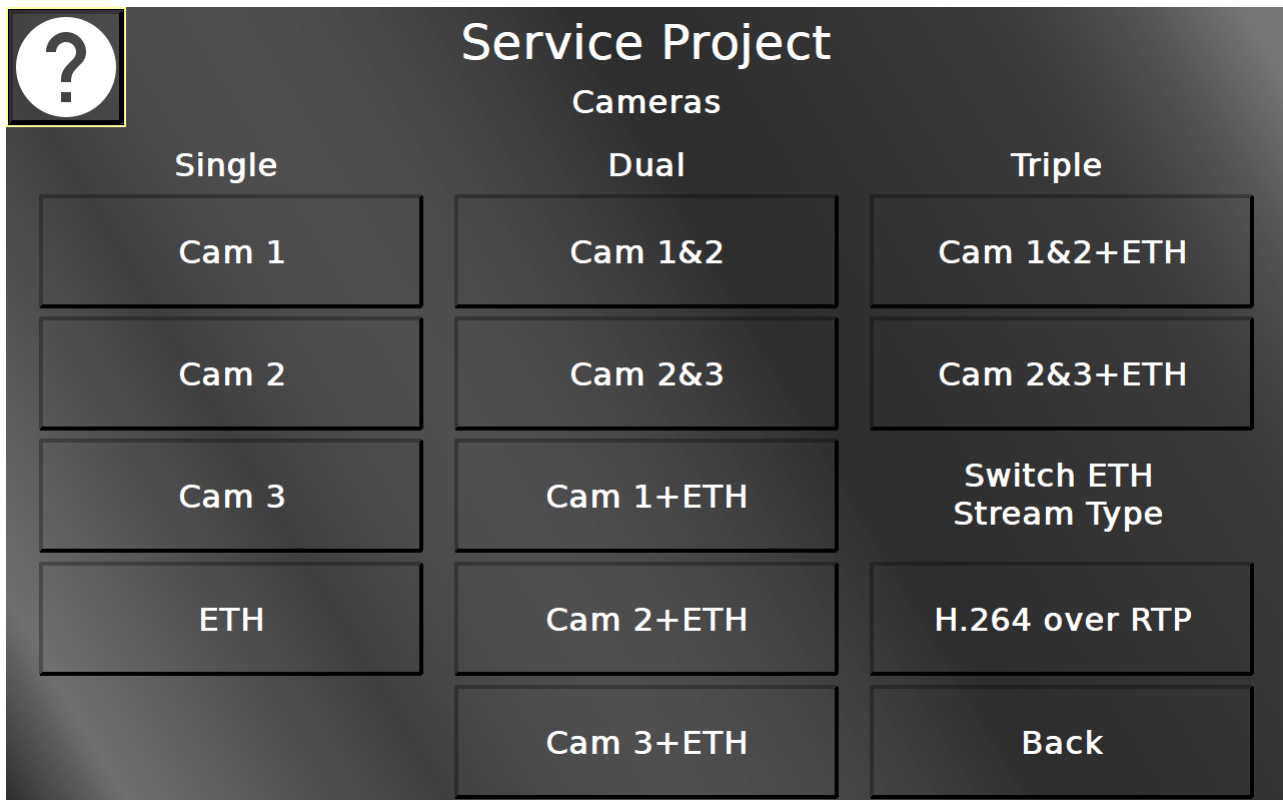

In this screen different camera screens can be chosen. Please note that only the available screens should be opened.

With the Switch ETH Stream Type button the Ethernet Camera input can be switched between H.264 over RTP / UDP, MJPEG over RTP / UDP and H.264 over RTSP protocols. Back returns to the main menu.

Service Project -> Cameras -> Single Camera Pages

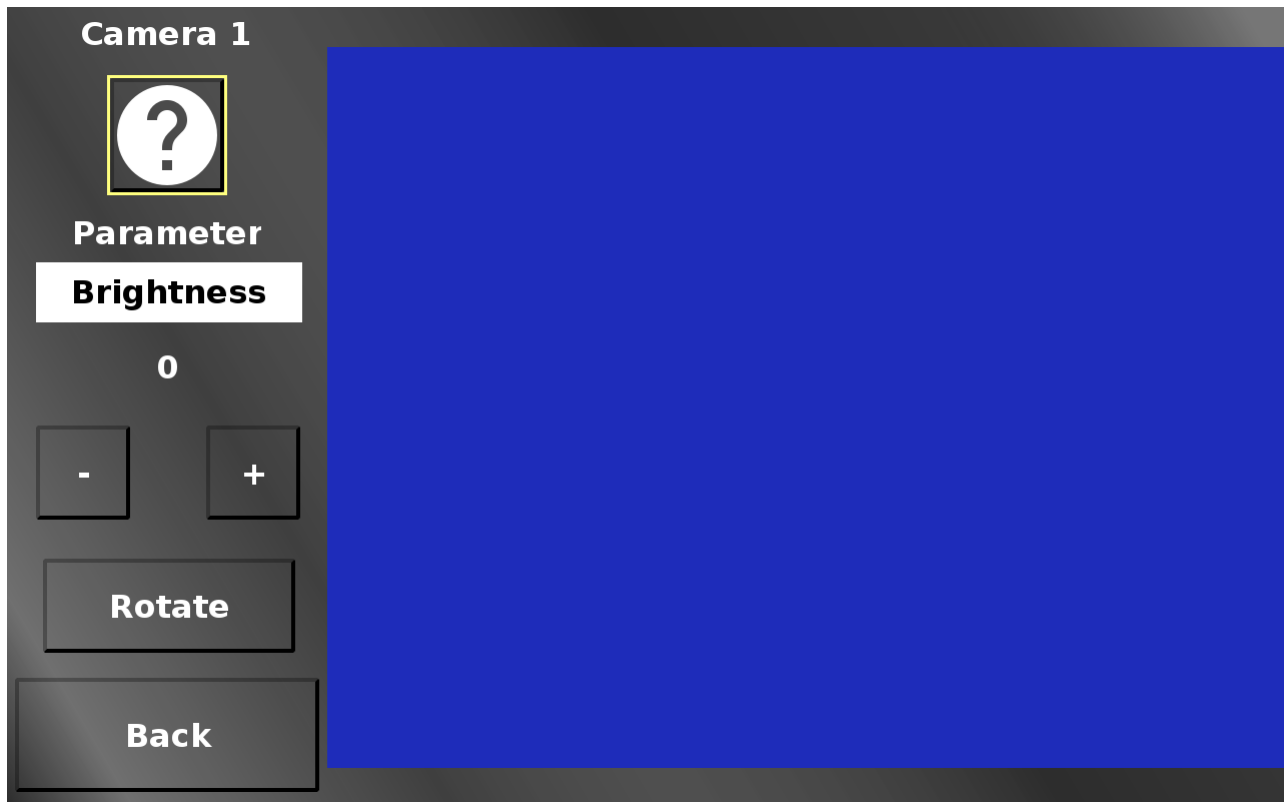


The parameter drop down in the single camera view screens chooses between the available camera image manipulations (brightness, contrast, saturation, height, width, rotation, mirror, x-position, y-position).

The - (minus) and + (plus) buttons change the according value.

Rotate rotates the image in steps of 90 degrees. This will set a combination of rotation and mirror values.

Back returns to the camera main menu.

Service Project -> Cameras -> Ethernet Camera (H.264 over RTP)

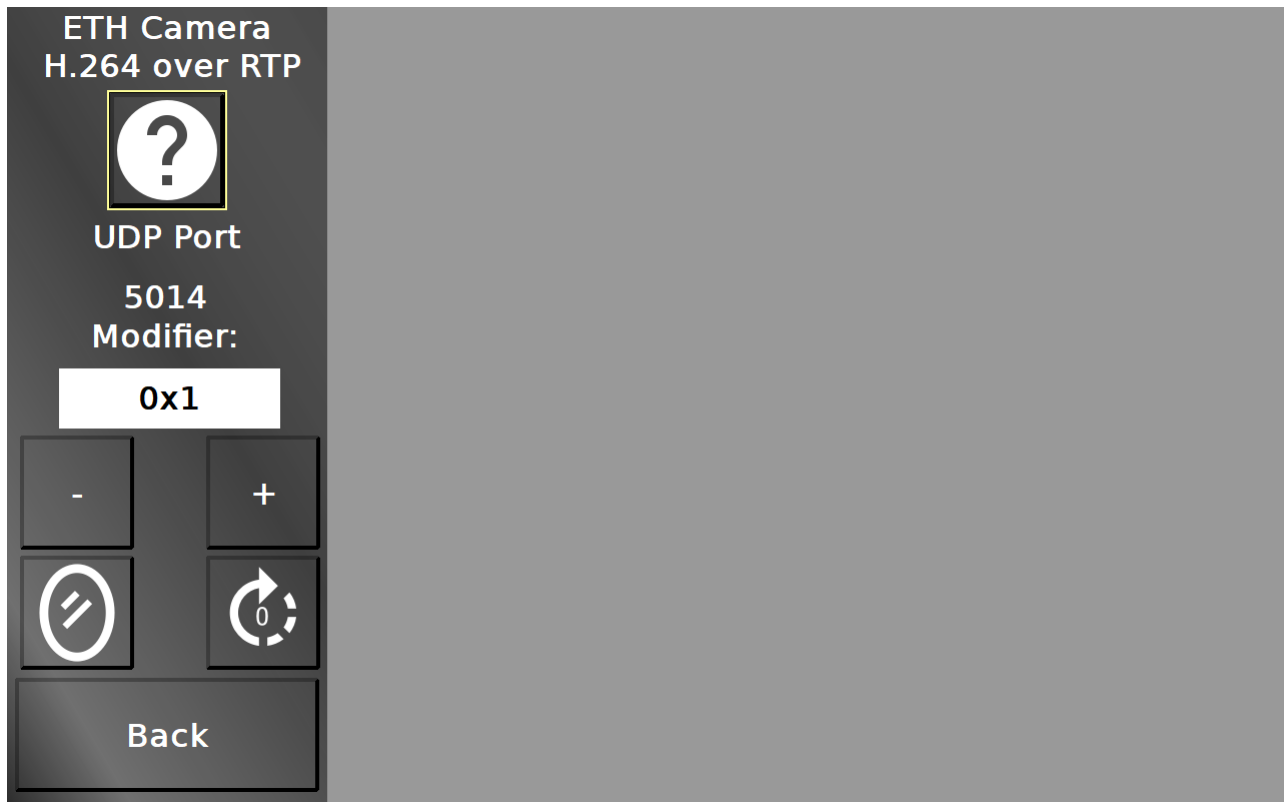

In this screen an Ethernet camera stream can be viewed. Note that only RTP over UDP is supported with the selection of H.264 over RTP in the main camera screen.

The UDP port can be set with the - (minus) and + (plus) buttons. The Modifier dropdown chooses the modify value.

The mirror button switches between not mirrored, horizontally mirrored, vertically mirrored and mirrored in both directions.

The rotation button switches between 0 °, 90 °, 180 ° and 270 °.

Back returns to the camera main menu.

Service Project -> Cameras -> Ethernet Camera (H.264 over RTSP)



In this screen an Ethernet camera stream can be viewed. Note that only H.264 over RTSP / UDP is supported with the selection of RTSP protocol in the main camera screen.

The RTSP address can be set by selecting the String Field.

The mirror button switches between not mirrored, horizontally mirrored, vertically mirrored and mirrored in both directions.

The rotation button switches between 0 °, 90 °, 180 ° and 270 °.

Back returns to the camera main menu.

Service Project -> Cameras -> Ethernet Camera (MJPEG over RTP)



In this screen an Ethernet camera stream can be viewed. Note that only MJPEG over RTP / UDP is supported with the selection of RTSP protocol in the main camera screen.

The UDP port can be set with the - (minus) and + (plus) buttons. The Modifier dropdown chooses the modify value.


The mirror button switches between not mirrored, horizontally mirrored, vertically mirrored and mirrored in both directions.

The rotation button switches between 0 °, 90 °, 180 ° and 270 °.

Back returns to the camera main menu.

The other pages in the camera menu can show different multi camera settings. Note that not all combinations work with all device types. The combinations that are not possible, should be shown grayed out.

Service Project -> Clock

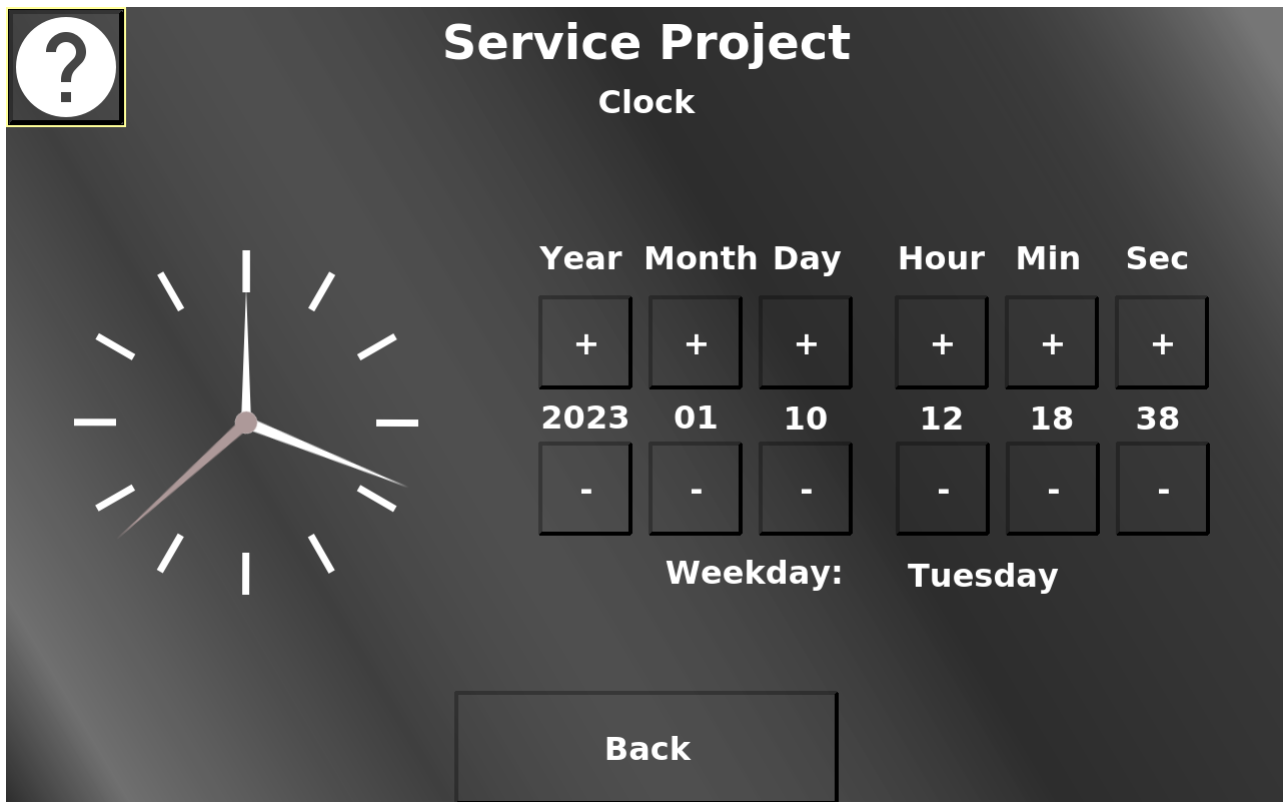


In this screen the date and time can be set. The - (minus) and + (plus) buttons change the according value.

The week day will be calculated automatically.

Back returns to the main menu.

Service Project -> Keys

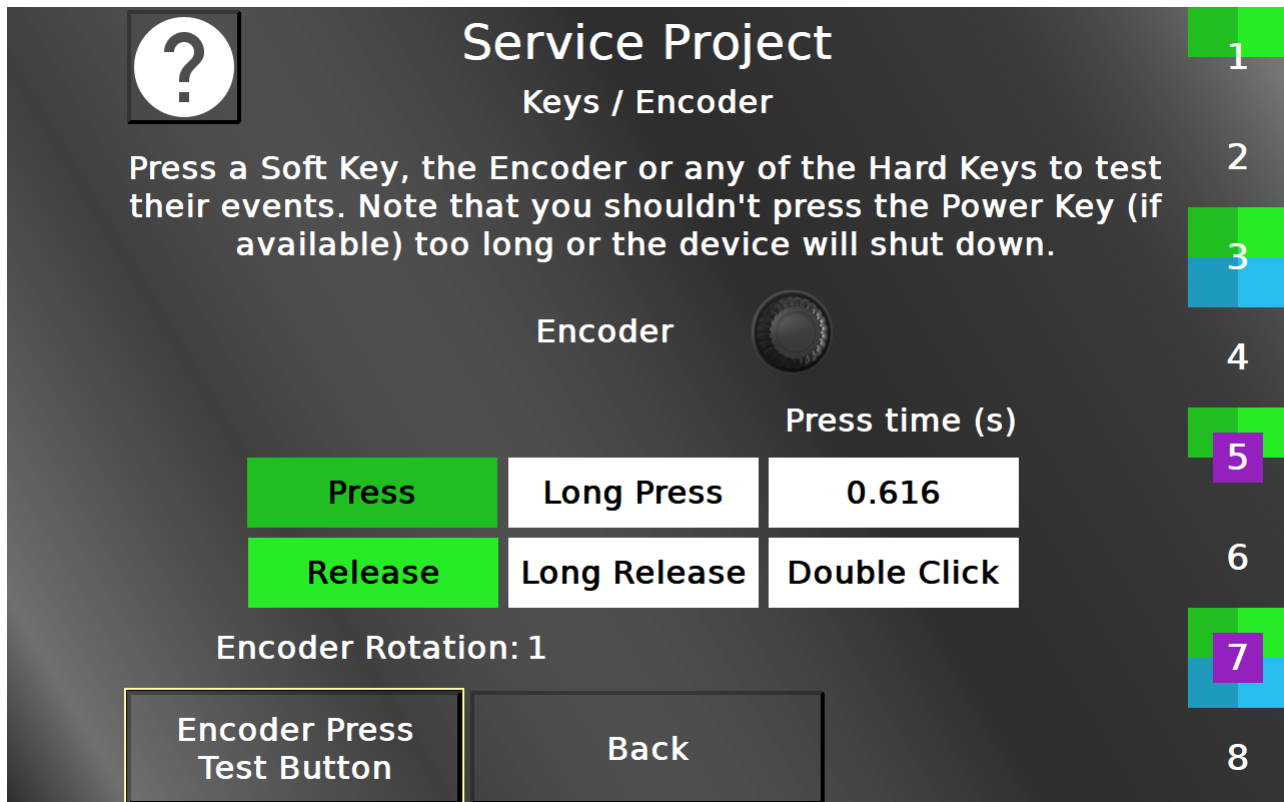

In this screen the soft- and hard keys as well as the encoder can be tested.

For the soft keys, both the actual physical key and the according touch region can be used to test.

For each event, the according field will be colored (Press - dark green, Release - light green, Long Press - dark blue, Long Release - light blue, Double Click - purple).

The background of the soft key touch regions will be colored in the same way when the according events are executed.

The pressed object will also be displayed in the center.

Additionally, the press time will be displayed for the last / current key being pressed.

The rotation of the Encoder is displayed in the Numeric Field in the bottom. The Encoder Test button below that does nothing, it can be used to test the press and release events of the encoder without executing any unwanted action.

The event fields and keys are cleared when re-entering the page.

Back returns to the main menu.

Service Project -> Touch



In this screen the touch input can be tested. Each squared button will be colored green if it has been touched, so a well-working screen should be able to color all buttons, and a button should only be colored green if it actually has been touched.

Additionally, the touch coordinates for X and Y both for pressing and releasing are displayed, as well as a counter number for the presses and releases of the touch.

With the button Touch calibration the touch screen calibration can be started. 5 cross hairs will appear one after another (top left, top right, bottom right, bottom left, center). Press the cross hairs to calibrate the screen.


Please note that the PClient stays on during this operation, so the cross hairs will be painted over this screen.

Please note that the calibration button is available only for resistive touch screens. Devices with capacitive touch screens do not need a calibration.

The button Multi touch leads to the multi touch test page. Please note that the multi touch functionality is not available on OPUS A3 and OPUS A6 G1.

Back returns to the main menu.

Service Project -> Touch -> Multi Touch

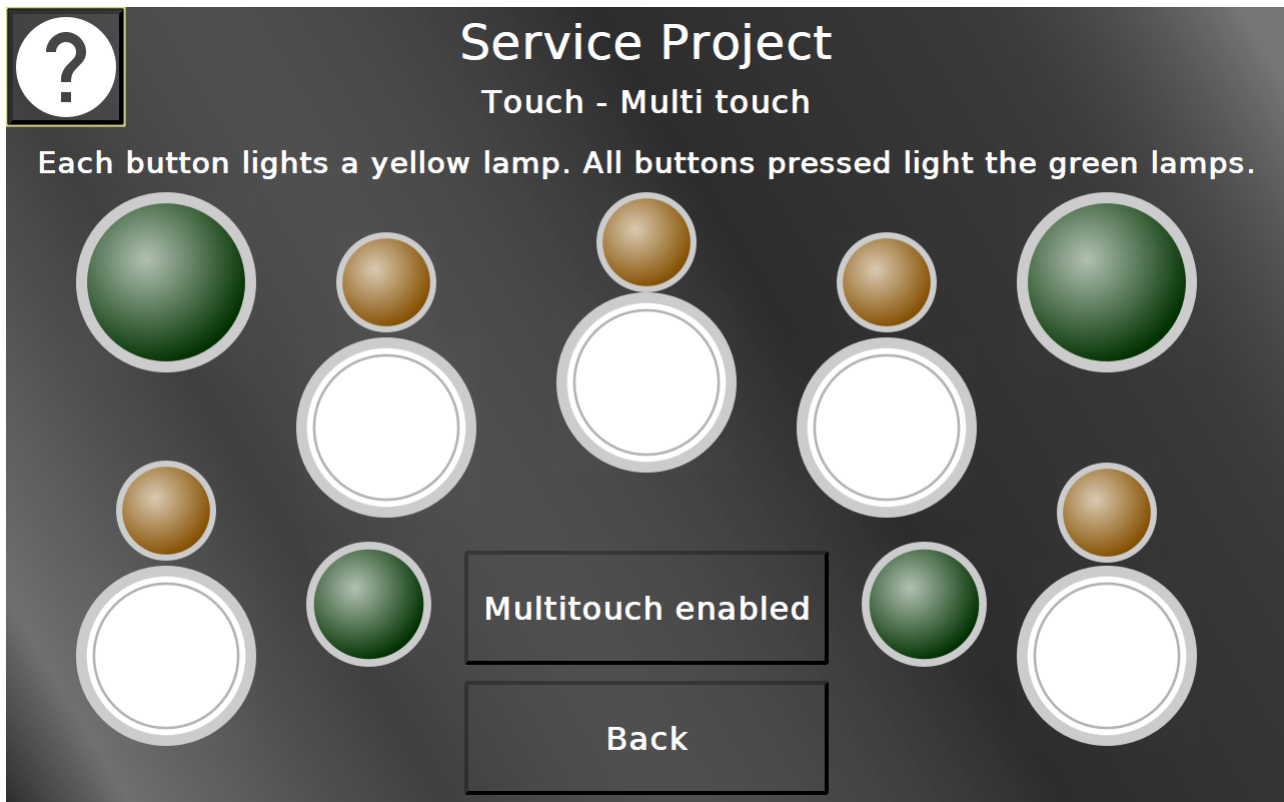


In this page the multi touch functionality can be tested. Depending on the capabilities of the hardware, 2 or 5 buttons, each with a lamp, will be displayed.

Each button lights up the according lamp. If all buttons are pressed at the same time, the green lamp lights up.

With the multi touch button the multi touch functionality can be disabled. After that the touch screen should only react upon the first finger press.


Back returns to the main menu.

Service Project -> Audio / Video

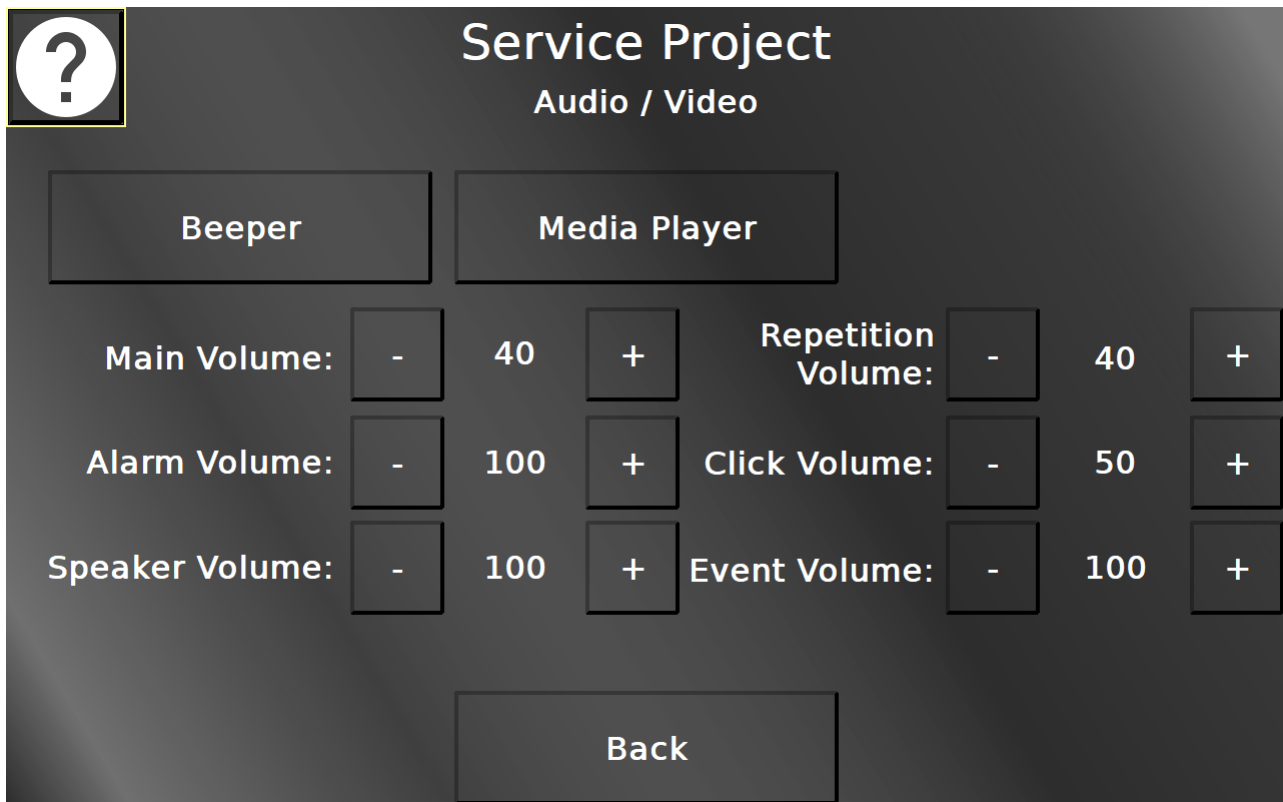


In this screen most volumes for speaker / beeper can be set and the Beeper and Media Player pages can be reached.
Back returns to the main menu.

Service Project -> Audio / Video -> Beeper

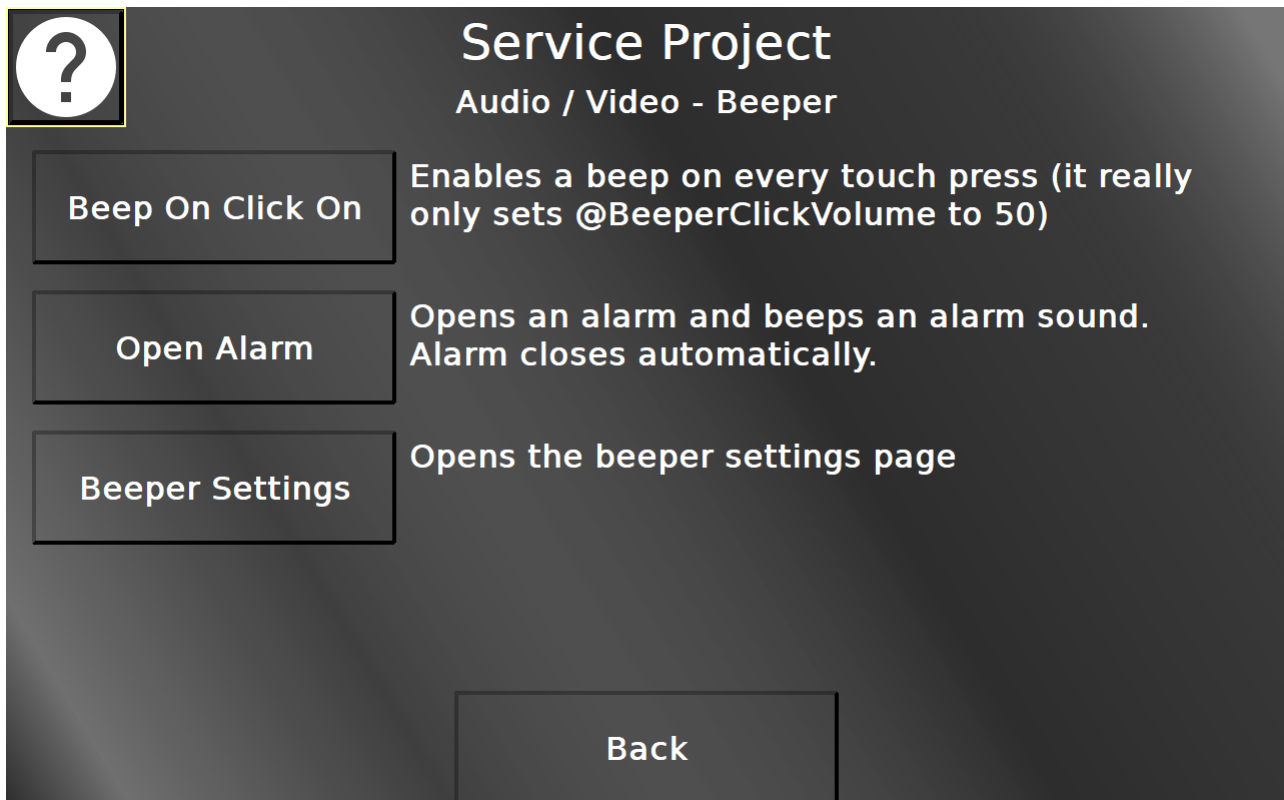


In this screen the beep on click function can be enabled / disabled. With this enabled, the device will beep whenever the touch screen has been pressed. Additionally, an alarm can be opened which also triggers a beep. The alarm will close itself after 2 seconds. Finally, the Beeper Settings Page can be reached. Back returns to the Audio / Video menu.

Service Project -> Audio / Video -> Beeper Settings

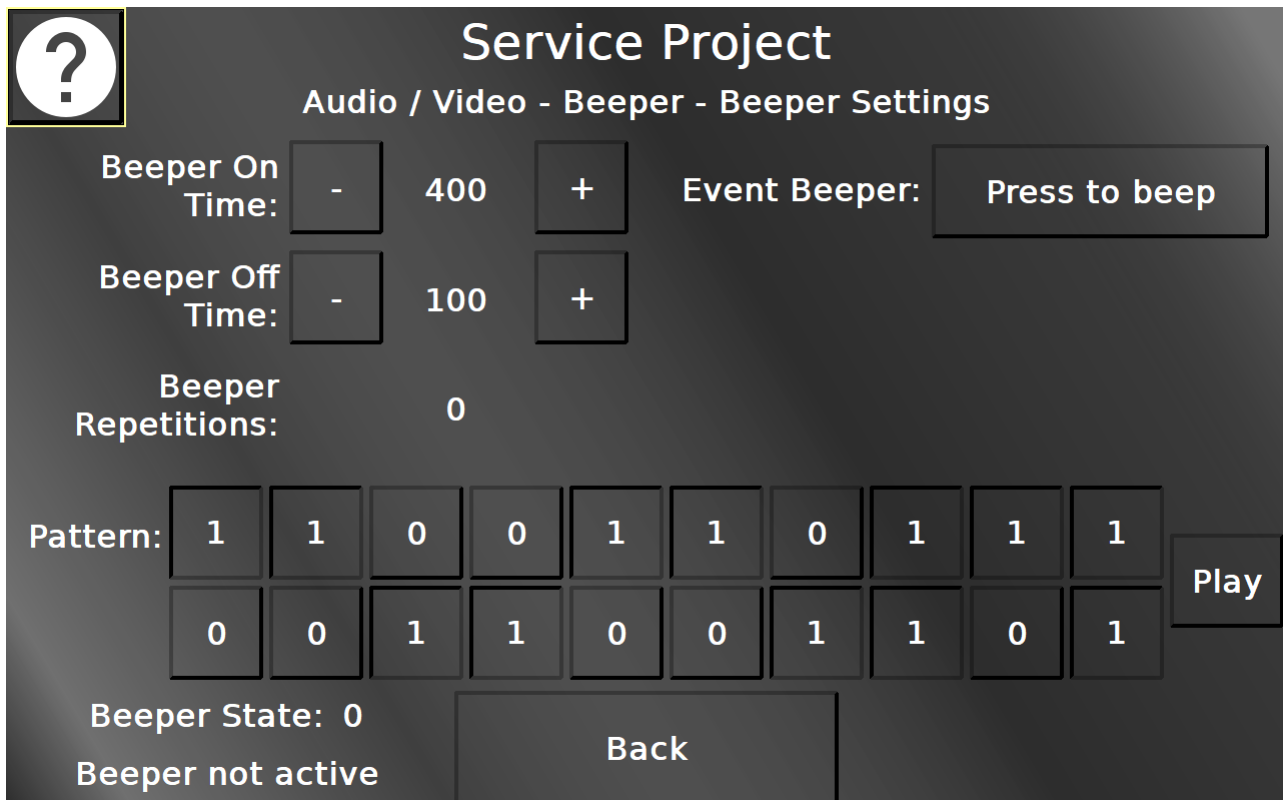

In this screen different possibilities to use the beeper / beeper simulation can be tested. Back returns to the Beeper menu.

Service Project -> Audio / Video -> Multimedia Player

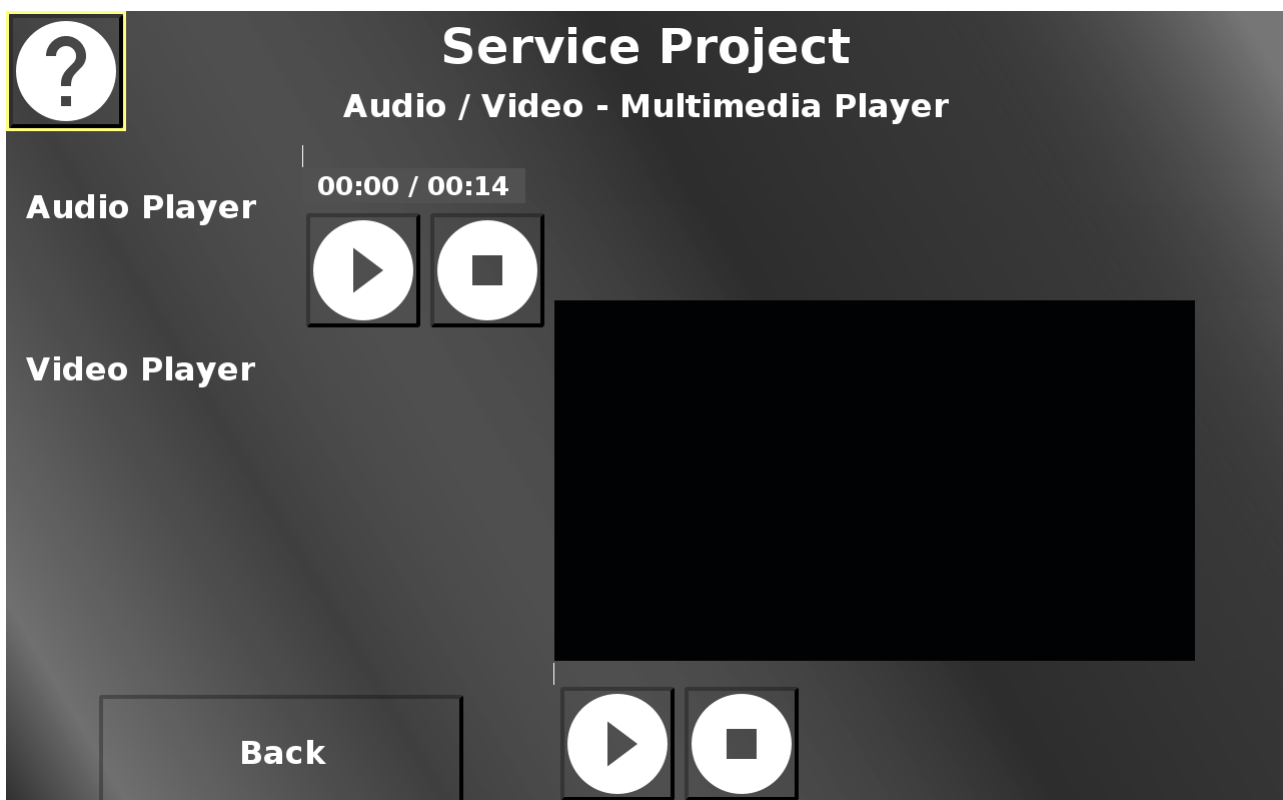


In this screen an exemplary audio and video file can be played.
Both players have a play / pause button and a stop button to control the playback.
Back returns to the Audio / Video menu.

ISO UT

With the introduction of the [UT Plugin](#)⁶⁴⁷ we have integrated some pages similar to the [ISOBUS sample project](#)¹⁴⁰ so users can test the ISO UT functionality out of the box.

ISO UT -> Homepage

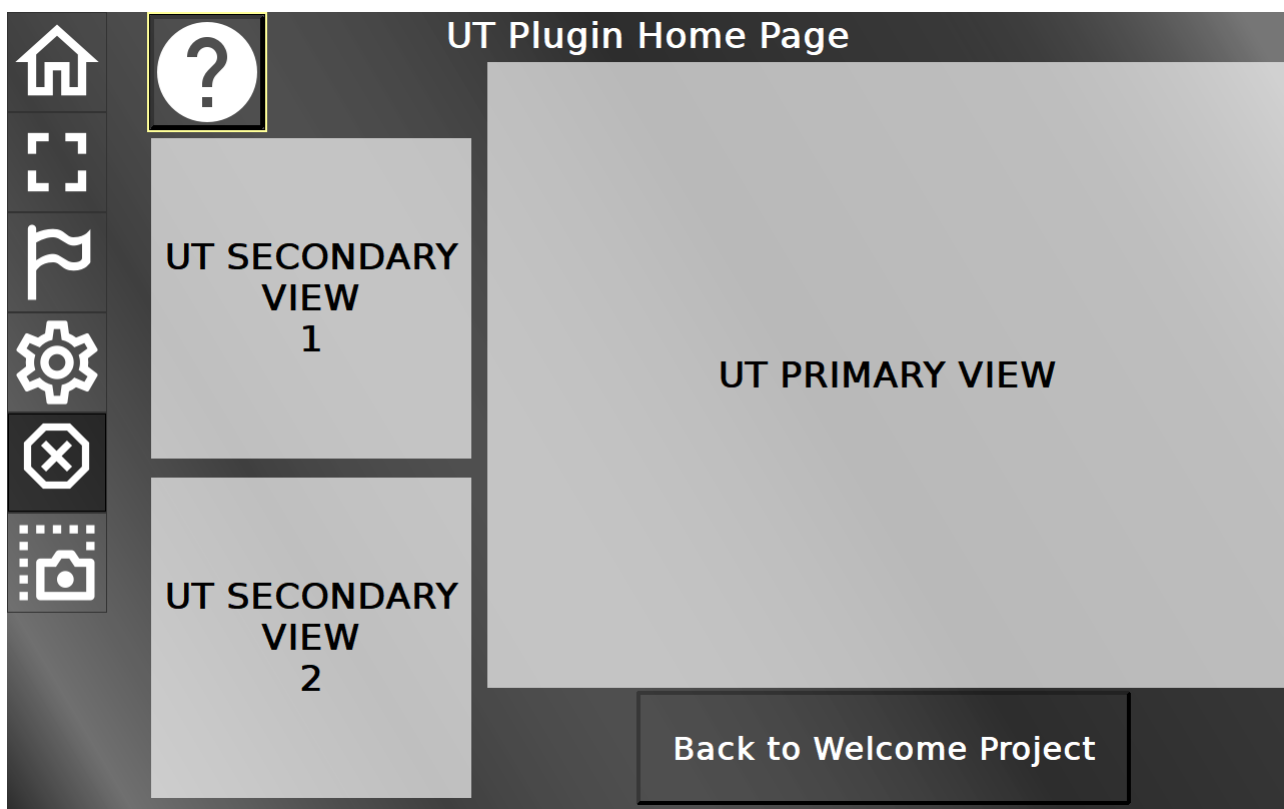

This screen shows a UT primary view and two UT secondary views. If an ISOBUS UT pool is loaded successfully, it will be shown in the primary view. If there is more than one pool, they will be shown in the secondary views. A swipe from a secondary view to the primary view will put the pool from the secondary view to the primary view and vice versa.


On the left side there are 6 soft keys to access the different pages of the ISO UT part of the Welcome Project and some functionalities, from top to bottom:

- Home button - this page
- Full Screen button - a larger primary view with some additional functions in buttons
- Language button - a configuration screen for language and unit settings
- Settings button - a configuration screen for ISO UT related general settings
- ISB button - ISOBUS ISB stop button
- Screenshot button - Creates a screenshot of the current view

These soft keys stay identical in all ISO UT pages.

The "Back to Welcome Project" button leads back to the home page of the Welcome Project.

ISO UT -> Full Screen View

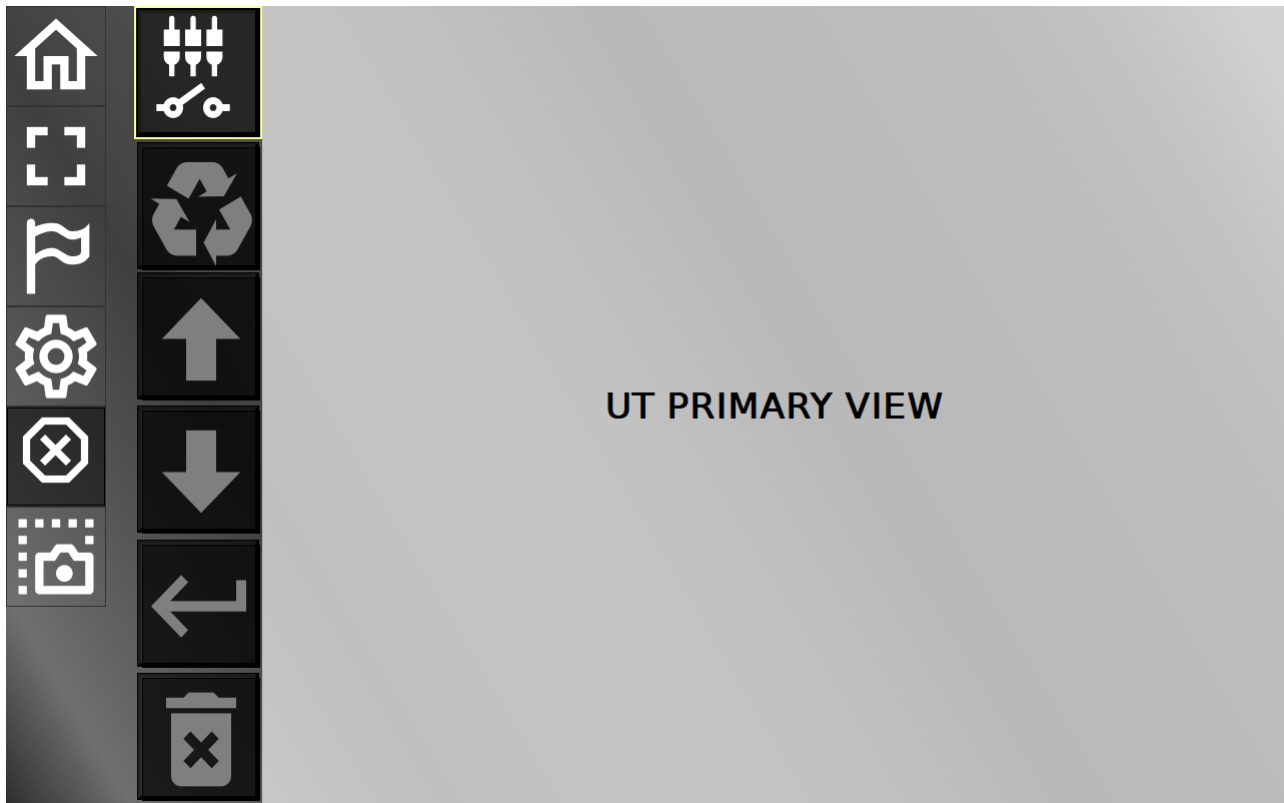

In this screen the primary UT view will be shown larger. Additionally, some buttons with ISO UT related functions are displayed, from top to bottom:

- AUX configuration button - opens the AUX configuration screen
- Cycle button - cycles between loaded ISO UT pools
- Focus up button - navigates up or increases the value in the ISO UT screen
- Focus down button - navigates down or decreases the value in the ISO UT screen
- Enter button - confirms something in the ISO UT screen
- Delete pools button - deletes all cached pools (NOT currently active pools that are already loaded)

If the full screen button is pressed in this screen again, a complete full screen UT will be shown without any other objects. Only for devices without hard keys, a back button will be displayed to be able to return to the normal full screen page. If this Back button is in the way of UT content, long press it and it will jump to a different location. On devices with hard keys, press the ESC key to return to the normal full screen page.

To return to the Welcome Project home page, click the home button and then "Back to Welcome Project".

ISO UT -> Language / Unit Settings

UT Language / Unit Settings			
Language	EN	Weight	kg
Date	YYYYMMDD	Temperature	°C
Time	12h	Pressure	Pa/(N/m²)
Distance	in/ft/mi	Force	kp/lbf
Area	ft²/acre	Volume	l/m³
Decimal Symbol	,	Unit System	imperial
Send To UT			

In this screen several language and unit settings can be made. The Send To UT button will send the updated settings to connected UT clients.

To return to the Welcome Project home page, click the home button and then "Back to Welcome Project".

ISO UT -> UT Settings

In this screen several settings regarding ISO UT can be made.
To return to the Welcome Project home page, click the home button and then "Back to Welcome Project".

How To

12 How To

Here you will find some quick short solutions for common use cases. Feel free to contact us if something you think should be there is missing.

12.1 How to create switch buttons with changing colors

You want to create buttons that activate and deactivate certain settings (like a switch). The background color of the button should indicate if the setting is activated or not.

- Create a button object
- Set the property Latching to true
- If applicable, put a String Field or a Picture Graphic object into the button (set them to transparent to still see the button background)
- Put a script with the following code into the OnPress event of the button:

```
setProperty(<button_ID>, "Background Color", <"pressed" color in [r,g,b,a] array format>);
```
- Put a script with the following code into the OnRelease event of the button:

```
setProperty(<button_ID>, "Background Color", <"released" color in [r,g,b,a] array format>);
```

If the button background color shouldn't change directly when the button is pressed but instead after a confirmation message from the CAN bus, put the script on the OnValueChangeByOwner event of the related variable.

12.2 How to use one script for several buttons

You want to have a set of buttons that should basically perform a similar action, but a bit different depending on which of the buttons has been pressed.

- Create some buttons
- Create a variable "button_id"
- On the OnPress event of each button, set the variable button_id to a certain value (e.g. on button 1 to 1, on button 2 to 2 and so on)
- Create one JavaScript
- Put the script file on the OnRelease event of each button
- In the script use a switch-case statement to differentiate what should happen with which button

New since version 2019 of the OPUS Projektor:

We have a function called [GetCallerID](#)⁶⁰¹ now which tells you in a script from which object the script was executed. So alternatively to the solution above this function could be used in a generic script to find out which button was being pressed.

12.3 How to create a drop down menu

You want to create a drop down menu where the user can select one of several options.

- Create a list object
- Reference a variable menu_id with the list object
- Put e.g. 10 String Fields (or images) into the list object (every object is one option in the menu)

- Activate the Set as Input property of the list object
- Set the Items Visible (Editing Mode) to e.g. 5
- Put a JavaScript to the event OnEnterValue of the list object
- In the script, read the variable menu_id to find out which option in the menu was selected and perform the according action (e.g. jump to a certain page)

12.4 How to use the automatic backlight dimming

You want the device to change the backlight intensity automatically depending on the ambient light.

- Set the variable @DispBacklightIntensity to a value outside of its normal value region 0 to 100, e.g. -1 or 101
- To disable the automatic backlight mode, set the variable @DispBacklightIntensity back to a value between 0 and 100
- The ambient brightness is readable in the variable @DispBacklightAmbient-LowPassed
- The brightness at different ambient brightness levels can be set with the variables @DispBacklightIntensity0 to @DispBacklightIntensity100. You set e.g. @DispBacklightIntensity0 to 20, then the display brightness will be set to 20 when @DispBacklightAmbient-LowPassed has a value of 0 (%). Set @DispBacklightIntensity10 to 30, then the display brightness will be set to 30 when @DispBacklightAmbient-LowPassed has a value of 10 (%). Values in-between will be interpolated linearly
- The variable @DispBacklightAmbient-LowPassed will be calculated from @SensorAmbientLight using @DispBacklightFilterFactor. The formula is:

$$\frac{(@DispBacklightAmbientLowPassed * @DispBacklightFilterFactor) + (@SensorAmbientLight * (1000 - @DispBacklightFilterFactor))}{1000}$$

In words, the lower @DispBacklightFilterFactor is, the faster changing ambient brightness values will influence the display brightness.

This formula will be calculated every @DispBacklightTimeConstant milliseconds.

12.5 How to set up SDO communication

You want to

- a) request a value from an ECU / sensor
- b) read a value with the ECU from the display device
- c) write a value with the ECU to the display device

- [include the CANopen protocol](#)³⁶⁰ for the [CAN port you want to use](#)³³⁹
- set up IDs for PClient SDO Server Channel and PClient SDO Client Channel in the [Terminal and Owner ECU Configuration](#)³⁶⁰ dialog

- so make it clear:

COB-ID Client ->Server (rx) is the ID that the ECU uses to read / write a value from / to the display device (used for b) and c))

COB-ID Server->Client (tx) is the ID that the display uses to respond a read / write request from the ECU (used for b) and c))

COB-ID Client ->Server (tx) is the ID that the display device uses to read a value from the ECU (used for a))

COB-ID Server->Client (rx) is the ID that the ECU uses to respond a read request from the display device (used for a))

a)

- create the variable you want to read from the ECU (data type must match!)
- open the [Variable Manager](#)¹⁷⁷
- set the ECU as the owner of the variable
- set the ECU index and ECU sub index of the variable according to the index / sub index the variable has in the ECU
- use the JavaScript function [requestVariableValueFromOwner](#)¹⁵⁹⁷ to request the value of the variable from the ECU

b)

- create the variable that the ECU wants to read (here the internal index / sub index are used)
- the ECU needs to send a read request message for the variable

c)

- create the variable that the ECU wants to read (here the internal index / sub index are used)
- the ECU needs to send a write request message for the variable

12.6 How to remember variable values when the device is powered off

You want to remember variable values when the device is shut down and use them when it is started again.

The most important setting is the property **Remanent** in the [Variable Manager](#)¹⁷⁷.

The property can only be activated for user-defined variables with the PClient as the [owner](#)¹⁶⁶. For pre-defined variables or variables with an owner other than the PClient this setting is not possible.

Remanent variable values will be saved on the file system automatically, whenever their value changes.

Removing power completely (disconnect clamp 15) directly after a value change might lead to the loss of the last change.

Please note: When a project update with the same name is downloaded to the device, the remanent variable values will be kept.

If a project with a different name is installed on the device, the remanent variable values from the old project are not used. However, they will still be stored on the device, so if the old project (i.e. a project with the old name) is installed, the remanent variable values are used.

12.7 How to use the power management


You want to be able to use the power management in your system to save power and / or shut down the device safely.

All devices have an integrated power management.

There are 4 power modes, **On**, **Low Power**, **Sleep** and **Off**.

When the device starts up, it starts in the **On** mode.

The **Low Power** mode is reached by disconnecting clamp 15 (ignition pin).

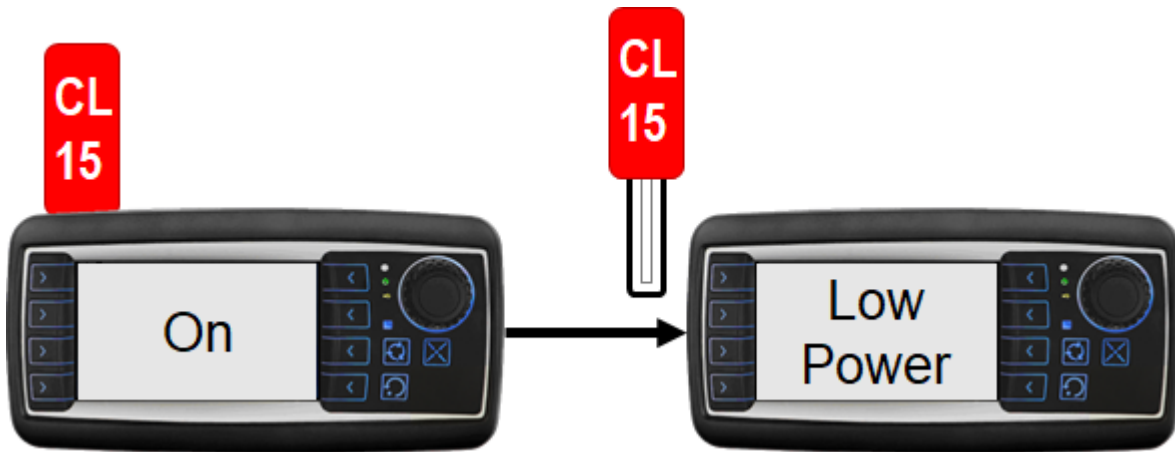

In **Low Power** mode the device is basically functional, all scripts, CAN messages etc. are still running.

Some elements of the devices can be turned off to save power and / or give the user the illusion that the device is already off:

- Display function (@PWR_LowPowerDisplayState)
- Display backlight (@PWR_LowPowerDisplayBacklightState)
- Key backlight (@PWR_LowPowerKeypadBacklightState)
- Key function (@PWR_LowPowerKeypadState)
- Encoder function (@PWR_LowPowerEncoderState)
- Digital outputs (@PWR_LowPowerOutputXState)
- Multicolor LED (@PWR_LowPower_RGB_LED_State)
- Beeper / Speaker (@PWR_LowPowerBeeperState)
- Touchscreen (@PWR_LowPowerTouchState)
- System console (@PWR_LowPowerConsoleState)
- Video processing (@PWR_LowPowerVideoState)
- Camera output voltage (@PWR_LowPowerCamOutputState)


By default, all but the console are turned off.

After a time that can be set with @PWR_TimeToSleepMode (anywhere from 0 to 2332800 seconds (27 days), time will be rounded up to multiples of 60s for EGScore devices) the device goes into **Sleep** mode.



In **Sleep** mode the device is basically not running anymore, no CAN, no scripts, nothing.


After another time, set with @PWR_TimeToPowerOff (again between 0 and 2332800 seconds), the device turns **Off**.

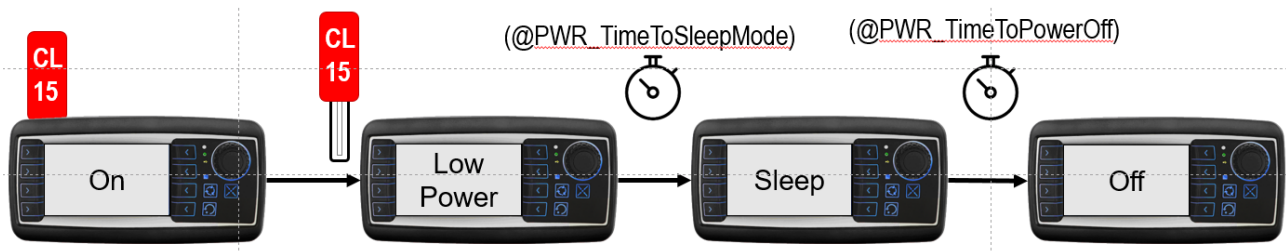


Here is a rough overview how much power the devices draw in which mode.

	4.7" iMX.35	7" iMX.25	7" iMX.6	12" iMX.6
On	430	900	1000	1600
Low Power	160	200	200	300
Sleep	≤ 90	≤ 100	≤ 100	≤ 200
Off	< 3	< 3	< 3	< 3

Only in **Sleep** or **Off** mode it's safe to remove clamp 30 (power plus). Disconnecting clamp 30 in **On** or **Low Power** is not good and can damage data.

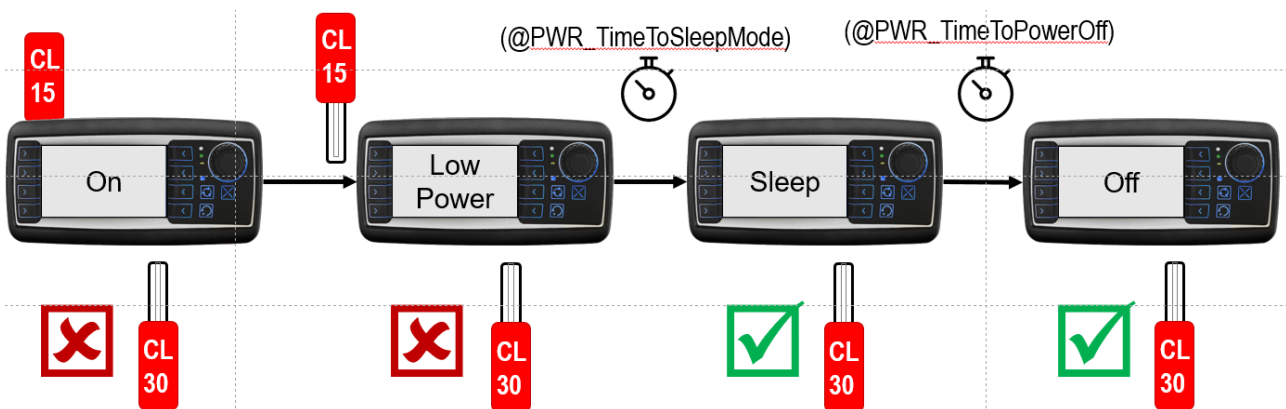

When returning to **On** mode, the starting time is highly reduced when starting from **Low Power** or **Sleep** mode.

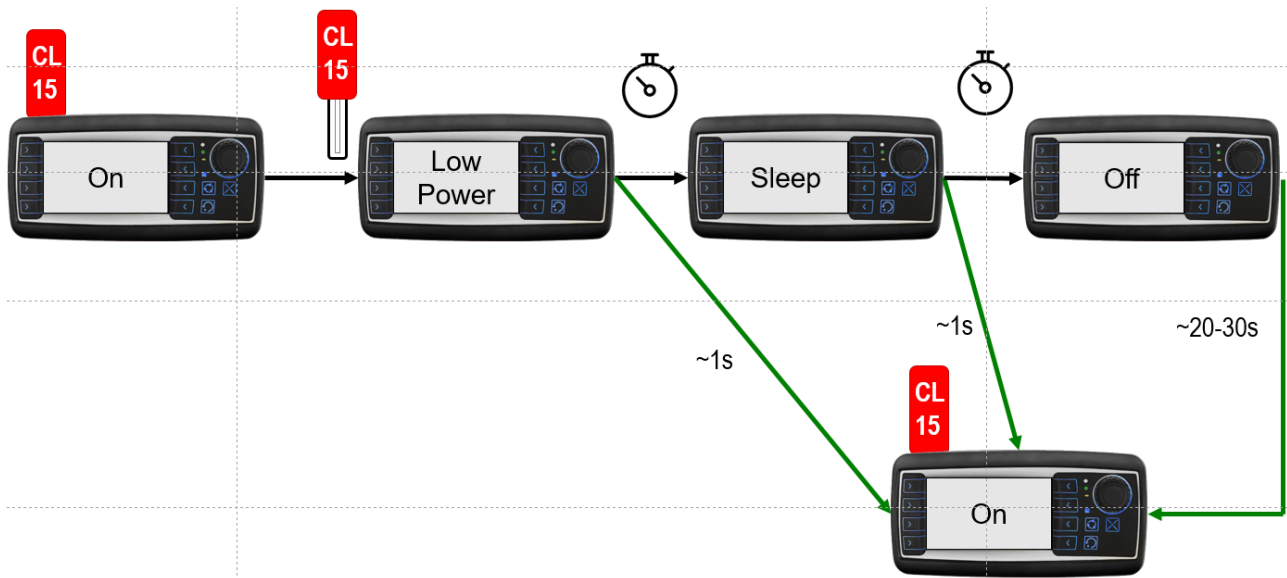

When returning from **Low Power** or **Sleep** mode, the device will continue where it was instead of starting freshly.

If disconnecting clamp 15 is not possible, consider using the variable

`@PWR_CurrentPowerMode`.


You can shut down by setting it to 0x4A17.

12.8 How to use the digital outputs

The digital outputs that are available on some of the variants of our displays are open-drain outputs.

This means that they are not actively pushing any voltage.

Instead, they connect an external power source to ground, closing the circuit and thus enabling the external element.

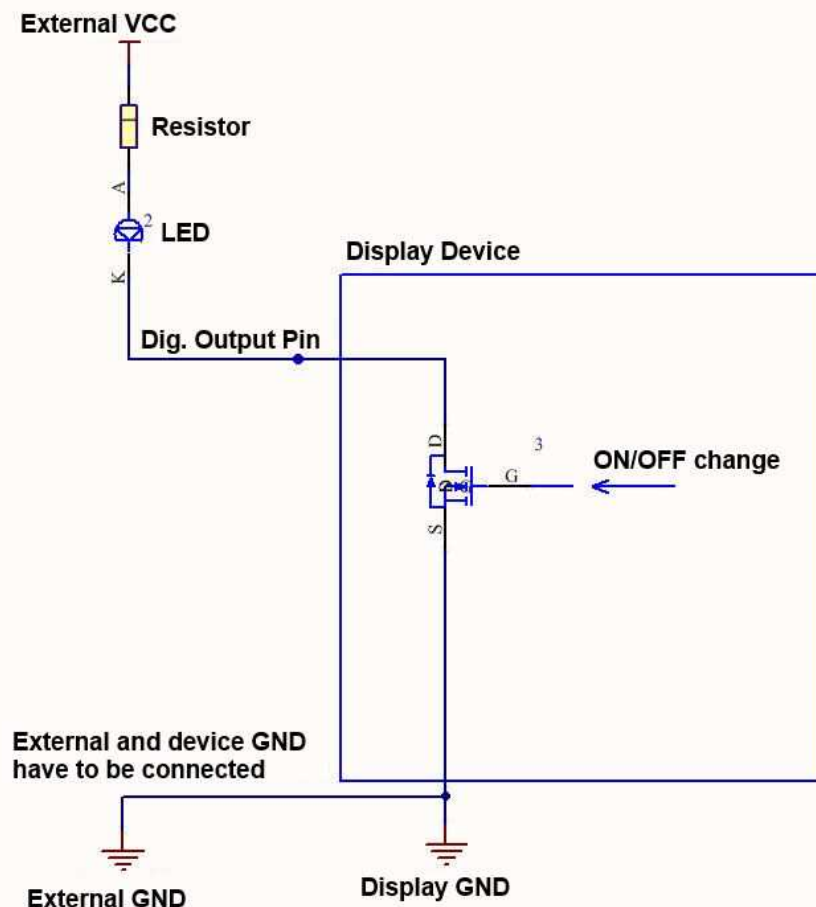

The external VCC and the power source of the display device can be the same.
 The grounds have to be connected (i.e. have to be the same).
 The LED in the image is only an example, it is not limited to LEDs.

12.9 How to process CAN messages with a multiplexer bit

You need to process CAN messages from an ECU that uses one CAN-ID and a multiplexer bit to differentiate the data.

The best way to do that is to create the "same" CAN mapping several times, i.e. with the same CAN-ID, length etc.

In the Visual CAN Mapping, put a constant into the multiplexer byte and set this constant to the first relevant value, e.g. 1.

The other bytes you fill with variables that should contain the data from the CAN message with multiplexer byte set to 1.

The next mapping with identical settings you put a constant into the multiplexer byte and set this to 2, and you put in the variables that should receive those data, and so on.

12.10 How to create dynamic icons

You want to put 40 icons in your UI, but you only have space for 10, so you want to display them dynamically.

- Create a list object
- Put a String Field in as the first child, delete its text and make it transparent. This will be shown when no icon needs to be displayed.
- Put all images into the list object
- Create 9 shallow copies of the list object. Now you have the 10 icon "spaces". Put them where they should be in the UI.
- Create 10 variables and reference one of them to each list object. The variables will switch the shown icon in each list object.
- Create another variable, "icon_event_flag". This variable will be used as a trigger to refresh the icons.
- Create a script for the event OnProjektInit. Fill it with this code:

```
//Definition of the variable names for the listen objects
icon_variable_names = ["New Variable_1","New Variable_2","New Variable_3","New Variable_4",<until 10>];
```

```
num_icons = 40;//global variable with number of icons
num_lists = 4;//global variable with number of list objects
icon_enable = [];//global array to switch each icon visible
```

```
//initialize all icons with 0
for (var i = 0; i < num_icons; i++)
{
    icon_enable[i] = 0;
}
```

- Create a script show_icons.js with this code:

```
//always start with the first list object
var list_position = 1;
```

```
//set all list objects transparent first
for (var i = 0; i < num_lists; i++)
{
    setVariableValue(icon_variable_names[i],0);
}
```

```
//go through icon list and show icon if necessary
for (var i = 0; i < num_icons; i++) { //go through all icons
    if (icon_enable[i] != 0) //check if icon i should be shown
    {
        setVariableValue(icon_variable_names[list_position-1],(i+1)); //show icon i at position "list_position"
        list_position = list_position + 1; //increase list_position to next value
    }
}
```

- Put this script to the event OnValueChange of the variable "icon_event_flag".
- For each event that should show a certain icon, put this code in a script:

```
icon_enable[<n>] = 1; //show Icon n
```

```
//change flag
var flag = getVariableValue("icon_event_flag");
flag = flag + 1;
setVariableValue("icon_event_flag", flag);
```

- For each event that should remove a certain icon, put this code in a script:

```
icon_enable[<n>] = 0; //hide Icon n

//change flag
var flag = getVariableValue("icon_event_flag");
flag = flag + 1;
setVariableValue("icon_event_flag", flag);
```

- To test this without actual events, you can put latching buttons on the screen with the above 2 scripts on OnPress and OnRelease, respectively. Each button should show/hide one icon, so you need to vary <n> in each script.

Please note:

There are no safety procedures in place here. If more than 10 events can occur at once, this needs to be considered, e.g. by discarding the oldest entries.

The icons will always be sorted in the order that they are put in the list. If there should be a FIFO or LIFO or any kind of other order, a second array with the position within the list objects would be needed.

12.11 How to to communicate between an additional C++ program and the PClient

You want to create an additional C++ program for special tasks and have it communicate with the PClient.

Hopefully you are an expert in C++ programming so you won't really have questions about that.

But what you might miss is the link between your program and the PClient.

For that we have included our DEI and WEAPI package to the OPUS Projektor release.

You can find these packages (which include examples and documentation) in the OPUS Projektor folder under \user_dir\extracted_components\pclient\weapi_dei

FAQ

13 FAQ

Can I rearrange the pages in the tree?

You can change the order of pages in the project tree by selecting a page and pressing the keyboard shortcut <ALT> + <Page Up> / <Page Down>. You can bring them to the top / bottom with <ALT> + <Pos1> / <ALT> + <End>.

Note that this order has no meaning for the project on the device.

Can I load projects from older versions?

With this version you can load projects as old as from version 1.6.x (or IDE version 3.6.x). Any older version should be opened with version 1.12.1 first.

I have a terminal with CoDeSys and would like to work with the PClient now. What should I do on the terminal side?

Just install the PClient with the normal update procedure. Codesys will be removed with this. If you want to work with Codesys again, you can re-install it.

Is it possible to shorten the startup time of the terminal?

The starting time of the terminal is caused by the 32 bit Linux operating system involved that is similar to a normal PC. Therefore it is not possible to shorten it directly. But it is definitely possible to make the process more suitable using the [power management](#)⁸³⁹.

This contains two variables:

@PWR_TimeToSleepMode – defines the time in seconds after which the terminal should go into sleep mode (maximum is 2332800 s - 27 days);

@PWR_TimeToPowerOff – defines the time after which the terminal should switch off completely (maximum is 2332800 s - 27 days).

How can I adjust Power Management settings?

The [power management](#)⁸³⁹ settings can only be configured using variables from the Power Modes group (Index 0x2030). Using these variables, the timeouts can be configured (when going into sleep mode and when switching off completely) and what components shall be switched on/off when entering low power mode.

Please refer to the [power management variables](#)¹⁸⁶ for more information.

PLEASE NOTE: The configuration file /opt/etc/pm_state.conf is not considered anymore. Only the settings made with the variables will apply.

How can I execute actions when entering different Power Modes?

Power Management variables are available, please refer to the [pre-defined variable list](#)¹⁸⁶. PLEASE NOTE: The maximum value for a timeout setting is 27 days.

The devices support four power modes:

- Off: The device is completely off, no power is consumed
- On: The device is fully running
- LowPower: Ignition pin (clamp 15) was pulled. The core program is running, but the device switches off configured modules to consume less power.

- Sleep: When the device is in LowPower mode and a timeout expires (@PWR_Time_To_Sleep_Mode), the device enters sleep mode. In this mode only the RAM is supplied with power. Power consumption is very low.

Three events are defined for the project to which actions can be assigned: OnPowerOn, OnLowPower and OnSleep. Actions can be assigned to these events by clicking on the project name in the project tree and then select "Events" in the property pane.

The OnPowerOn Event is executed as soon as the device wakes up from sleep mode or from LowPower mode (Ignition is plugged in again), but NOT when starting with a cold boot.

The OnLowPower event is executed as soon as the ignition is pulled.

The OnSleep event currently gets executed as soon as the device wakes up from sleep mode (before the OnPowerOn event). This may change in future so that the event is executed as soon as sleep mode is entered.

To each of these events one of the following actions can be assigned:

- Execute Script
- Set Value

Some ideas for what these events can be useful:

- Jump to the home (start) page when entering LowPower mode by setting the Page ID to variable @ProjektCurrentPage.
- Initialize variables with default values.
- Mimic the same behavior like a cold boot when the device returns from LowPower or Sleep Mode.

By using a script, the ideas mentioned above can be combined.

How can I show a screen with progress bar while the project is loaded?

The loading screen image should have the same resolution as the target device (e.g. 480x272, 800x480 or 1024x768)

Only PNG images are allowed as loading screen image.

The selected image will be renamed to 'loading_screen.png' and placed in the 'terminal_files/additional_files' directory in the project folder.

PCClient will display the loading screen image as soon as it starts on the device.

How to show a progress bar:

PCClient automatically draws a progress bar BEHIND the loading screen image. That means if you want to show the progress bar, you have to make parts of the loading screen transparent. Through this transparent area the progress bar will be shown.

The progress bar runs from left to right of the display. It starts at 10% of the display resolution and ends at 90% of the display resolution. For a device with 480x272 resolution that would mean that it runs from X = 48 to X = 432. The height of the progress bar is the complete display resolution. If no loading screen image is selected, no progress bar will be shown.

CANopen: Can I change the Node-ID of the device at runtime?

The LSS services used for this purpose are currently not supported by the terminals.

How can I change the default backlight intensity at startup?

The default intensity for the display and the keypad backlight can be adjusted with the following variables:

@DispBacklightStartupIntensity
@KeyBacklightStartupIntensity

Both variables take values from 0 to 100, representing the percentage of the backlight intensity. For security reasons the lowest accepted value for the display backlight intensity is 5%.

Please make sure to not write too frequently to these variables since the value is directly stored in the devices EEPROM.

How can I use the multi color LED?

To turn on the multicolor LED in the desired color, set the variable @LED_MultiColor to the desired color value (in hexadecimal format, 0xRRGGBB, e.g. red 0xFF0000, blue 0x00FF00, green 0x0000FF).

To let the LED blink, set the @LEDMultiColorRepetitions to the desired value, then the color as explained above, and lastly set the @LEDMultiColorPattern to the desired value. Here every bit of 20 bits stands for 100ms, so setting the variable to 0xF000F will light up the LED for 400 ms, then it's 1200ms off and then again 400ms on.

When this variable is set, the repetitions are counted down to 0 and the color will be set alternating to 0 and the chosen color. At the end both the repetitions and the color will be set to 0.

Example project: [Download this example](#) to see how to use the multi color LED

Why is my device crashing when using .svg images?

First you have to make sure that you are using the tiny svg format. A second cause can be that you are using shadows. If so please disable them and try again.

How can I use the beeper in my project?

There are 3 ways to use the beeper. First of all, the general beeper volume (@BeeperMaxVolume) has to be set. Then you can use:

- alarm beeper (@BeeperAlarmVolume)
- key beeper (@BeeperClickVolume)
- general event beeper (@BeeperEventVolume)

The alarm beeper will sound when an alarm with a configured beeper pattern is opened on the display.


The key beeper will beep whenever the touch screen is touched by the user.

The general event beeper can be used freely for any chosen events. If @BeeperEventOn is set to 1, the beeper will beep, if it is set to 0, it won't.

You can also program a pattern here with @BeeperEventPattern and @BeeperEventRepetitions.

How can I use the hard keys in my project?

Encoder: The encoder is automatically used for selection and editing when you set the "Set as Input" property for objects. Additionally, you can use encoder events directly by configuring the events of the encoder. You can do this for every page.

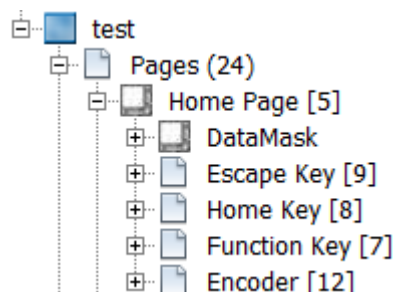

Function Key (three arrow key): You can use the events of that key for every page. When using ISO-VT, this key is fixed to switch between the ISO-VT pool(s) and PClient project.

Escape Key: This key has a fixed function to go back one page in the project. However, its function can be changed / removed using [navigation scripts](#)⁴⁸⁶. Then the events for the key on each page can be configured. An example of that can be seen in the [Welcome Project](#)⁷⁵⁹.

Home Key: This key has a fixed function to go back to the home page in the project. However, its function can be changed / removed using [navigation scripts](#)⁴⁸⁶. Then the events for the key on each page can be configured. An example of that can be seen in the [Welcome Project](#)⁷⁵⁹.

Power Key: This key can be configured in general in the [Project Properties](#)⁸¹. Alternatively, specific settings can be made on each page.

Please note that if ANY event is configured for a specific page, NO action from the project properties will be executed while on that page, i.e. if you want a specific action OnPress but the general action OnRelease, you need to put that action into the page event configuration for the Power Key, as well.

Please note that not all keys are available on all devices. Please refer to the corresponding device manual.

How can I change the page with JavaScript?

The currently shown page can be changed with JavaScript by changing the value of the variable `@ProjektCurrentPage`. The variable needs to be set to the ID of the page. The ID can be seen in the project tree behind the page name.

How can I convert a project?

This is described in the [project conversion](#)⁴⁴ chapter.

Audio, Video and Multimedia

For multimedia playback questions see the [FAQ of the MediaPlayer](#)⁵²⁵.
 For a description of event and alarm sound configuration see [Events and Actions](#)⁴⁶³.

Everything about beeper and audio volume

In general all volume settings are made with the [beeper volume variables](#)¹⁸⁶.

General volume settings

The main variable to control the general volume level is `@BeeperMaxVolume`. This variable can be seen as the main volume level. It has an influence on all other volumes. The next two general volume variables are `@VolumeLevelSpeaker` and `@VolumeLevelLineOut`. These variables can be seen as mixer volume levels. If the device is equipped with an internal speaker and an audio line out, the volume level of these outputs can be adjusted (they have no influence on a device that is only equipped with a beeper). These variables directly accesses the hardware volume settings so that all other volumes will be raised or lowered when their value changes.

Alarm Volume

The following variables have an influence on the volume of an alarm sound pattern or audio file:

- `@BeeperMaxVolume`
- `@BeeperAlarmVolume`
- `@BeeperMinEmergencyAlarmVolume`

Sound Pattern

The beeper volume when playing an alarm sound pattern is calculated like this:

```
beeperVolume = (@BeeperAlarmVolume * @BeeperMaxVolume) / 100
if (@BeeperMinEmergencyAlarmVolume > beeperVolume)
{
    beeperVolume = @BeeperMinEmergencyAlarmVolume
}
```

Audio Output

The sound volume when playing an alarm audio file is calculated like this:

```
soundVolume = (configuredVolume * ((@BeeperAlarmVolume *
    @BeeperMaxVolume) / 100)) / 100
if (@BeeperMinEmergencyAlarmVolume > soundVolume)
{
    soundVolume = @BeeperMinEmergencyAlarmVolume
}
```

While *configuredVolume* is the volume that was configured in the [Audio Output settings](#)⁴⁶⁵.

Note that the final volume also still depends on `@VolumeLevelSpeaker` and `@VolumeLevelLineOut` (see [above](#)⁸⁵¹).

Event Volume

The following variables have an influence on the volume of an event sound pattern or audio file:

- `@BeeperMaxVolume`
- `@BeeperEventVolume`

Sound Pattern

The beeper volume when playing an event sound pattern is calculated like this:

```
beeperVolume = (@BeeperEventVolume * @BeeperMaxVolume) / 100
```

Audio Output

The sound volume when playing an event audio file is calculated like this:

```
soundVolume = (configuredVolume * ((@BeeperEventVolume *  
@BeeperMaxVolume) / 100)) / 100
```

While *configuredVolume* is the volume that was configured in the [Audio Output settings](#)⁴⁶⁵.

Note that the final volume also still depends on *@VolumeLevelSpeaker* and *@VolumeLevelLineOut* (see [above](#)⁸⁵¹).

Click Volume

The following variables have an influence on the click volume:

- @BeeperMaxVolume
- @BeeperClickVolume

The beeper/sound volume when touching the touch screen is calculated like this:

```
volume = (@BeeperClickVolume * @BeeperMaxVolume) / 100
```

Note that on devices with an internal sound card the final volume also still depends on *@VolumeLevelSpeaker* and *@VolumeLevelLineOut* (see [above](#)⁸⁵¹).

Multimedia Volume

The following variable has an influence on the volume when playing back multimedia files with the [MultimediaPlayer](#)⁵²⁵ object:

- @BeeperMaxVolume

The sound volume when playing back multimedia contents is calculated like this:

```
volume = (currentMediaPlayerVolume * @BeeperMaxVolume) / 100
```

While *currentMediaPlayerVolume* is the volume that is currently set for the [MultimediaPlayer](#)⁵²⁵ object.

Note that the final volume also still depends on *@VolumeLevelSpeaker* and *@VolumeLevelLineOut* (see [above](#)⁸⁵¹).

How can I let objects blink?

Visual objects can be configured to blink in a certain frequency.

To do this, the JavaScript [setProperty](#)⁵⁸⁷ function has to be used.

The properties to configure are "Flashing" and "Flashing Cycle".

Flashing enables or disables the blinking, while Flashing Cycle takes a time in milliseconds from 100 to 5000.

The Flashing Cycle time can be changed dynamically while the object is blinking. It will then blink with the newly set frequency.

How can I copy or move files on the device file system?

To copy or move files on the device file system (or to / from the USB stick), you need to use 4 variables in the following form and order (example to move an alarm log file to the trash, i.e. to a folder that will be deleted upon restart):

```
//Set the current directory to where the log file is situated  
setVariableValue("@CurrentDirectory",  
"/opt/pclient/logfiles/");
```

```
//Set the current file name to "alarm.log", the name of the
file
setVariableValue("@CurrentFile", "alarm.log");
//Set the destination to a temporary folder which will be
deleted after restart
setVariableValue("@DestinationDirectory", "/dev/null/");
//Execute the copy/move process
setVariableValue("@CopyFileOrFolder", 2);
```

Please note:

- no slash before or after the file name
- @CurrentDirectory needs to be set before @CurrentFile

How can I rename my project?

There are two ways to rename a project. One is by performing a Save As action. This menu entry can be found in the menu File -> Save As

Please note that the project will be stored in the path that is written in the **Folder name** field, so the new project name has to be added after the existing path with a \ in front, e.g.: C:\projects is the existing path, then the Folder name field needs to be C:\projects\new_project_name.

The second way is to right-click on the project name in the project tree and select **Rename** in the context menu. This will keep the project location and just change the project name (and thus the project folder).

Please note: Manually changing the project folder name does not rename the project, and it will lead to problems. Only use one of the methods described here.

How can I change the order in which the Encoder navigates between objects?

The order is dependent on the [Z-Order](#)¹⁶³ of the objects. By changing the Z-Order you can modify in which order objects are selected.

How can I create landscape / portrait projects?

All devices can be used in landscape (widescreen / horizontal) or portrait (vertical) mode. The distinction is made when creating a project. For every device type, a landscape or portrait mode project can be created. This cannot be changed later (only by [converting](#)⁴⁴).

Please note: For i.MX 6 device projects, when changing from a landscape to a portrait project on the device, a restart is necessary to apply the setting.

What can I do if a font file can't be imported?

A font file can only be imported if there isn't already a font file with the same name imported in the project. If a font comes with several files for bold, italic etc, it is possible that they have the same name in their meta data. If this is the case, give the fonts unique names and make sure that all name fields have the same name. Please refer to the passage [Imported Fonts](#)⁸¹ in the chapter [Project Properties](#)⁸¹.

How can I calculate with numbers in unsigned32 in JavaScript

You can force the interpretation of a number in JavaScript in unsigned32 by executing this code:

```
var number_us32 = number_original >>> 0;
```

How can I set the IP of the device?

To change the IP of a device while it is running, use the variable [@Ethernet0_IPAddress](#)¹⁸⁶. But this is not a permanent setting!

The IP address that will be set on startup can and has to be defined in the [project updater](#)⁶⁸². The Ethernet port will be available as soon as the address is set.

I connected an Ethernet camera and did everything right, but why don't I see an image?

1. The camera needs to be set to H.264
2. The UDP output port of the camera needs to be set in the video frame/page properties
3. Even when all camera settings are correct and the project is set up correctly, it's important to remember that Ethernet needs to be activated, this does not happen automatically with an Ethernet Camera configured and connected.

How can I make changes to the file system when loading the project?

Sometimes you may want to make certain changes to the file system upon project installation. An example would be the creation of the path /opt/user_files or to copy some external files somewhere. You can add files in the [project update process](#)⁷⁰³. There you can also edit the post-installation script which can be modified to add necessary commands (e.g. mkdir /opt/user_files).

How can I change the line appearance in the 2D Graph?

Line attributes define the look of the lines in the [2D Graph](#)⁴⁹¹. They can be modified and new attributes can be created in the [project properties](#)⁸¹.

How can I display languages with other characters?

The possible characters depend on the font supporting them.

Please find free fonts for the language you need and import them in the [project properties](#)⁸¹.

For asian characters e.g. consult this list: https://en.wikipedia.org/wiki/List_of_CJK_fonts

Why is the save button disabled?

The save button is only enabled if any change to a project has been made. No changes - no need to save the project.

A consequence of that is that if a project has been saved and the program is closed, no saving dialog will pop up, the program will just close.

(How) Can I make screenshots of my project on the device?

You can save screenshots of your project (i.e. what is currently shown on the screen) by using the variable [@ProjektTakeScreenshot](#)¹⁸⁶

Why aren't my GIF files displayed in the project?

We support the GIF file format mainly because of its animation possibility. GIF files are only supported for the Image to Display property of Picture Graphics. For all other places and for inanimated images, please use one of the other supported image formats.

Can I show a PDF file on the device?

Yes! We have a PDF reader included in the PClient. You can open a PDF file on the device by using [button events](#)⁴⁷⁵ or by using the JavaScript function [openPDFReader](#)⁶⁰⁴. Note that the PDF reader doesn't work in the PClient simulation.

Tips & Tricks

14 Tips & Tricks

In this chapter we want to give you some more or less small tips, guidelines and little tricks for a better project.

Images in the project

Images in a project can make the difference between a "functional" or rather minimal or even bleak project and a lush eye catcher that still provides an intuitive user interface.

But one thing you should try to avoid: Creating your page layouts with (multiple) full screen images. This can lead to a memory shortage if the project becomes large (large means > 100 full screen images), because all bitmap images will be stored uncompressed in the RAM.

The almighty OnProjektRepeat script

I get it. It's just nice and simple. A script that is repeated all the time, no matter where you are in the project, no matter what happens with the variables and you have all your code in one place.

But there's a catch - the bigger a repeat script is, the longer it takes to execute, the more resources it needs. Worst case is if it takes so long that it's longer than the configured cycle time.

A lot of code usually comes down to variable value changes. That's when you need to calculate your formula again, that's when that converted value needs to be updated.

So instead of doing everything all the time no matter if it makes sense or not, make use of our many events, e.g. the OnValueChangedByOwner event of variables.

Release Notes

15 Release Notes

In this chapter you will find the release notes with the latest changes of the current version of the OPUS Projektor.

The notes are sorted chronologically, so you will find the latest changes on top.

Release Notes for OPUS Projektor Distribution - 2024.4.3

Opus Projektor 2024.4.3

This OPUS Projektor Release contains the following software:

Projektor 2024.4.3

PCClient 2024.4.3

OS OPUS-B2 1.0.0

OS EGSCORE 1.4.4

OS EGSPRO 3.0.3

Projektor 2024.4.3

info

- No change to 2024.4.2

PCClient 2024.4.3

bugfixes

- Fixed VKB input functionality of String Fields / Numerics.
- Fixed JS function readEEPROM.

Opus Projektor 2024.4.2

This OPUS Projektor Release contains the following software:

Projektor 2024.4.2

Projektor 2024.4.2

bugfixes

- Fixed that the CAN port configuration settings aren't stored in the project. (PRJEXT-10177)

Opus Projektor 2024.4.1

This OPUS Projektor Release contains the following software:

Projektor 2024.4.1

PCClient 2024.4.1

OS OPUS-B2 1.0.0

OS EGSCORE 1.4.4

OS EGSPRO 3.0.3

Projektor 2024.4.1

features

- UT-Plugin is now available for B2.

-

bugfixes

- Version Control System: Fixed possible CheckoutConflictException, which could occur in some rare cases during save. (PRJEXT-9981)
- Palette: UT-Primary/Secondary View is now available for B2/B2+ UT-Projects.
- Fixed issue that on some Windows 10/11 machines the tools (Update, Simulation, ISO 1725 Camera Configuration) did not start properly.
- Reinstall Components: Avoid showing exception dialog if reinstall is not

successful. (PRJEXT-10110)

- Now Project Format (.prj): Fixed updating Projektor file if a manual commit is triggered without save.

PClient 2024.4.1

features

-

bugfixes

- Arched bargraph only draws full circle for end of high resolution range, not for the start. I.e., filling less than one degree doesn't draw as a full circle anymore.
- Editing a list that is the first child doesn't crash anymore on confirm or ESC.
- Fixed size of disabled patterns for software rendered Opus B2.
- Don't follow stale pointers in cached navigation events. Could crash if the event referred to an object that got deleted meanwhile.
- Avoid crash when scripts are called from different threads, e.g. 'repeat' scripts from main thread and scripts triggered by CAN receive mappings.

Opus Projektor 2024.4.0

This OPUS Projektor Release contains the following software:

Projektor 2024.4.0

PClient 2024.4.0

OS OPUS-B2 1.0.0

OS EGSCORE 1.4.4

OS EGSPRO 3.0.3

Projektor 2024.4.0

infos

- Updated built-in Java Runtime Version to latest LTS 21.0.2
- Updated PClient-Simulation, Variable-Simulation and Updater to 64bit.

features

- B2/B2 PLUS support.
- New project save format: If the project will be saved a .prj archive file be created. For more information please have a look at the manual.
- Softkey: Added new Softkey action 'Navigate Escape'.
- JavaScript-Editor: Added search/replace feature.
- Variables: Added new variables @PowerOnCycles, @PowerOffCycles and @CrashCount, @CPULoad, @FreeRAM, @TotalRAM.
- Undo/Redo: Improved undo/redo of opened JavaScript files. Content is now updated directly.
- Reporting: If a ticket was updated, the updated fields are marked with blue color in JiraIssueView component.
- JavaScript-Editor: Save button was removed. The script files will be saved automatically during project save now. Additionally the scripts will be saved if the editor loose focus.

bugfixes

- Undo/Redo: Fixed undo/redo for shallow paste operations.
- JavaScript-Handler: Fixed possible deadlock during save.
- JavaScript: Fixed handling of opened JavaScript files, which are deleted/renamed on the file system.(PRJEXT-5789, PRJEXT-5788, PRJEXT-5203, PRJEXT-3800, PRJEXT-2890)

PClient 2024.4.0

features

- B2/B2 PLUS ProtoB support.

- JavaScript: Changed JS engine from QtScript to QJSEngine.
- PClient simulation and other Windows tools are now 64 bit programs.
- Beta feature: Can provide ground speed for UT-Plugin's ISOBUS from a GNSS receiver.

bugfixes

- Fix softkey fadeout timing, esp. for softkey frames which are empty or hidden via visibility and allow setting fadeout time from script.
- Make sure one can touch objects below empty softkey frames.
- Make Javascript parameter format checks less restrictive and thus similar to the former JS engine.
- Make screenshot store on user defined location - if desired and don't overwrite existing files.
- Image cache now also considers image size, not only image content (file name). Prevents crash if image is used in different sizes.
- Navigation events get cached instead of dropped while navigation gets re-initialized (e.g. on page switch or visibility change). I.e. one doesn't lose 'release' event if doing something 'on press'.
- Fix some issues using line breaks in virtual keyboard used with UT-Plugin. Also make this VKB work on home page if loading screen is used.
- This VKB now also supports 'button cancel' and the button doesn't stay pressed if 'release' happens outside of the button.
- Gauge's 'valuesDistanceFactor' now has the desired effect. Before it internally used a hardcoded value of 0.12.
- Don't prolong beep period if clock is set backward while beeping.

OS OPUS-B2 1.0.0**infos**

- See the corresponding os release notes.

OS EGSCORE 1.4.4**infos**

- See the corresponding os release notes.

OS EGSPRO 3.0.3**infos**

- See the corresponding os release notes.

Opus Projektor 2023.4.4

This OPUS Projektor Release contains the following software:

Projektor 2023.4.4

PClient 2023.4.4

OS EGSCORE 1.4.3

OS EGSPRO 3.0.3

Projektor 2023.4.4**bugfixes**

- ImageList: Fixed possible internal exception. (PRJEXT-6741)
- Scene: Fixed possible exception in 'AlignWithMoveStrategy'. (PRJEXT-6576)
- Scene/Flex-Converter: Fixed calculation of the size of children inside a button if property 'Draw Shadow' is enabled.
- VCS: Now a warning dialog is shown if 'index.lock' already exists and is blocked by another application (i.e. OneDrive) during load/save. (PRJEXT-6596)
- JS: Enhanced error management for opened/modified JS files which are removed on the file system. If the file can not be saved a warning dialog will be shown now. (PRJEXT-5789, PRJEXT-5788, PRJEXT-5203, PRJEXT-3800,

PRJEXT-2890)

- Undo: Fixed possible exception during Undo which tries to open a page and select the involved object in the scene. (PRJEXT-6543)
- Clipboard: Fixed possible exception for unsupported/unknown objects in the clipboard. (PRJEXT-6371, PRJEXT-6109)
- J1939 DM1/DM2: Fixed possible exception in the DM1/DM2 settings dialog. (PRJEXT-6215)
- Project-Tree: Fixed overwriting object name if another object is selected during inline name editing.
- Project-Tree: Now warnings of ECUs are shown in the project tree.
- CAN-Protocols: In the Event sheet of ECUs the name of the variable for 'Set Value' actions are now shown properly.
- Save: Now the creation date won't be saved for zip files during save anymore. So the checksum does not change for zip files with the same content.

PClient 2023.4.4

features

- Introduce new variables @minFreeRAM and @onlyKeepShownImagesInRAM.

bugfixes

- Fix problems regarding asian fonts.
- Fix crash when trying to load an invalid ISOBUS pool regarding asian fonts.
- Fix that variables with certain index were not properly added to DEI and could therefore not be used.
- Fix that changes to @SettingsDecimalSymbol were only visible after a page change.
- CAN key remote settings: Fix reading of the Encoder CAN ID from settings file.
- Fix possible crash when entering a page with an invisible camera frame.
- UT-Plugin: Various bug fixes and stability improvements.
- Fix possible crash in Windows simulation when PEAK CAN was enabled in the simulation settings but no PEAK USB dongle was connected.
- Fix that the invalid pattern of gauge object is not properly displayed.
- Fix possible crash if multiple list objects share the same background image.

OS EGSCORE 1.4.3

infos

- See the corresponding os release notes.

OS EGSPRO 3.0.3

infos

- See the corresponding os release notes.

Opus Projektor 2023.4.2

This OPUS Projektor Release contains the following software:

Projektor 2023.4.2

PClient 2023.4.2

OS EGSCORE 1.4.1

OS EGSPRO 3.0.2

Projektor 2023.4.2

bugfixes

- Project load: Fixed possible exception during load for orphaned objects with Language dependency.(PRJEXT-6009, PRJEXT-6035)

PClient 2023.4.2

bugfixes

- VKB: Fixed that VKB does not opened for Numeric Fields.(PRJEXT-6036)

OS EGSCORE 1.4.1

infos

- See the corresponding os release notes.

OS EGSPRO 3.0.2

infos

- See the corresponding os release notes.

Opus Projektor 2023.4.1

This OPUS Projektor Release contains the following software:

Projektor 2023.4.1

PCClient 2023.4.1

OS EGSCORE 1.4.1

OS EGSPRO 3.0.2

Projektor 2023.4.1

features

- Projects of G1 devices (A3, A6G1) can now loaded and converted to a new device type.
- Updated 'Navigation Scripts'.

bugfixes

- Graph Object: Fixed a bug in 'Variables to draw' dialog of the Graph object. Now it is possible to updated the property values of a assigned variable.
- New Project Wizard: Fixed error messages which appears if an ISOBus Sample project was created in 'New Project' wizard.
- Toolbar: Fixed a bug which leads to missing toolbar icons (i.e. Save Project)
- VCM: Fixed a logic bug for the buttons 'Move Up' and 'Move Down' in ConfigureMapping dialog.
- VCS: Improved handling of broken Git-Repositories.

PCClient 2023.4.1

bugfixes

- Input: Avoid crash on 'long press' if object gets deleted with 'press'.
- Input: Redesigned touch handling to be consistent when using multi-touch.
- String display: Don't switch line if another font is used to display a character. With 'autowrap' enabled that could happen where hyphen was added.
- Z-order: Maintain consistent z-order when editing lists and showing/hiding multiple alarms. Before a button of an alarm sometimes didn't trigger its action anymore while it still worked via the 'ESC' key.
- Navigation: Prevent triggering long press events in case the event source disappears - e.g. because changing page 'on press'. This also prevents crashes caused by trying to access the removed object. Additionally navigation now checks validity of object pointer before forwarding events.
- Make touch press/release symmetric in navigation - i.e. both get forwarded to the touched object, even if it is a softkey. Before only one of them was forwarded if navigation did something else with the event and softkeys were excluded as they are not considered 'inputs' (they typically cannot get focus).
- Navigation: Generally re-design touch evaluation to better find e.g. buttons behind containers and avoid crashes on multi-press of multiple buttons.
- Alarms: Fix detection whether an alarm is already open or not. Use the existing one instead of opening again.
- UT-Plugin: UT secondary views can now also be used via encoder (switch pool by changing value, toggle with primary view by double press). Note that this is of limited use if there is a primary view visible on the page as that will

keep focus.

- UT-Plugin: UT views get their navigation border drawn now. Note that this could reduce the data mask size reported on ISOBUS. Should consider NOT drawing the border if there is only one big primary view on the page which anyways keeps focus.
- Simulation: In Windows simulation the built-in UT VKB is now shown for UTplugin projects. Before none of the VKBs worked for this project type.
- Fixed crash if an image cannot be found.
- Fonts: Do not change line on dash character with some fonts.
- Graph Widget: Values are displayed again at the cursor of graph objects.

OS EGSCORE 1.4.1

infos

- See the corresponding os release notes.

OS EGSPRO 3.0.2

infos

- See the corresponding os release notes.

Opus Projektor 2023.4.0

This OPUS Projektor Release contains the following software:

Projektor 2023.4.0

PClient 2023.4.0

OS EGSCORE 1.4.1

OS EGSPRO 3.0.2

Projektor 2023.4.0

features

- UT-Plugin
- B2 (prototype) support.
- Configurable Navigation. See manual for more information.
- Pages and JS files are now colored in the tab panel. Each project has its own color for an easier identification.
- JavaScript: Subfolders are now supported and are shown in the Project tree.
- Search: Improved search for @Visibility variables.
- VCS: Now commits can be done independently of save. Added now commit options in Tool - Options - Versioning.
- Look And Feels: Removed 'Metal' and 'System' theme.

bugfixes

- Save: Enhanced save process. If files can not be written properly e.i. when a file is blocked by another application a dialog is shown and the save can be repeated.
- Scene: Fixed possible endless loop for reference copies.
- Scene: Fixed possible exception on the 'Scene' if multiple items in List are deleted. (PRJEXT-4323)
- Project-Tree: Fixed possible disabled 'Delete' entry in the context menu.
- Project-Tree: Fixed exception which occurs if i.e. 2 JavaScript/Image files are moved in the tree.(PRJEXT-5142)
- CAN: Now a same ecu name can be used in different protocols.
- CAN: Fixed possible exception in Visual CAN Mapping view while deleting a Variable Mapping.(PRJEXT-3976)
- Tool Settings: Fixed exception which occurs while checking the 'proxy settings'. (PRJEXT-3811)
- Image Library: Fixed possible exception if an image was added to 'Favourites' the first time.

- Image Library: Fixed possible exception if image folder are deleted while loading.
- Symbol Library: Fixed an exception which occurs if a folder of the library contains unsupported images. (PRJEXT-5432)
- Property-Sheet: Fixed possible exception if Variable editor is opened. (PRJEXT-4521)
- Tools: Updated 7zip version to 19.00.
- Version-Handler: Fixed possible 'IndexOutOfBoundsException' in Revision dialog.
- Project-Properties: Added missing category Hardkey-Settings for B4/B6.
- Active-Project is now recognized properly if several projects are opened and a JS tab is selected.
- 2D-Graph: Fixed saving 'Line Attributes'.
- 2D-Graph: Added new property 'Refresh Cycle Time'. With this property the refresh cycle time in milliseconds can be set (how often the widget repaints its content)
- Project-Conversion: Fixed exception if target folder already exists.
- Visual CAN Mapping: CANopen: Fixed that variables can overlap each other.
- Scene: Fixed possible NullPointerException in 'Inplace Editor'. (PRJEXT-5587)

PCient 2023.4.0

features

- Introduced a 'Watchdog' for PCient.
- Improved cold boot time.
- Modernization and improvement of PCient and WEapi code and interfaces.
- Complete rework of the GUI implementation. Make use of graphics hardware acceleration.
- Further improvements of navigation scripts. Home and escape keys can now be configured individually.
- Cleanup of PCient configuration files. Move CAN remote options into separate file.

bugfixes

- CANopen: Fixed that PDOs are accepted which are too short.
- Fixed crash which occurs if property 'Input Character Attribute' is set for 'Language' dependent String Fields.
- Video: Fixed possible crash which occurs when writing camera DDO properties or camera variables from CAN.
- J1939: (E)TP connection abort messages are sent and evaluated including transfer direction now. I.e. they only abort sending or receiving if parallel transfer of the same PGN should be running.
- @Terminal variable now contains the node name of the device based on device tree information.
- Improve analog and digital camera stability.
- Fix crash when writing to @ProjektTakeScreenshot variable was triggered via CAN.
- Fix validity of predefined CAN variables based on used device.
- The power key is now also supported by predefined @UserButtonPressed, @UserButtonReleased, @UserButtonDoubleClick and @UserMultiButtonPressed_02 variables. The variables from the User_Inputs group are now available on all devices.
- Bargraph: Fix drawing of bargraph fill and target line.

OS EGSCORE 1.4.1

infos

- See the corresponding os release notes.

OS EGSPRO 3.0.2**infos**

- See the corresponding os release notes.

Opus Projektor 2022.4.2

This OPUS Projektor Release contains the following software:

Projektor 2022.4.2

PCClient 2022.4.2

Projektor 2022.4.2**infos**

- New built-in Java Runtime 17.0.4.

features

- Added some additional informations in workflow files to improve our analyzing in error case.

bugfixes

- Fixed initializing Delimiter-Mapping in VisualCANMapping table.
- Fixed exception which occurs if a JS-Node is copied and afterwards.
- Fixed possible deadlock and improved in save process. (PRJEXT-4341)
- Fixed possible exception by rendering SVG images. (PRJEXT-4908)
- Fixed issues in the object locking on scene feature
- Fixed exception by using raster graphics in SVG images. Embedded PNG/TIFF/JPEG in SVG images are now supported. (PRJEXT-5103)
- Fixed exception on the scene if "Line Attributes" in the project properties is set to 0. (PRJEXT-4838)
- Fixed exception if a invalid font without font family name is used. (PRJEXT-4459)
- Fixed possible exception by loading an image folder by the image library. (PRJEXT-4314)
- Fixed possible exception by closing a project. (PRJEXT-4748)
- Fixed exception by drag multiple selected nodes e.g. JavaScripts / images inside the tree.

PCClient 2022.4.2**bugfixes**

- Fixed crash when switching pages using the OnPress event. (PRJEXT-4765)

Opus Projektor 2022.4.1

This OPUS Projektor Release contains the following software:

Projektor 2022.4.1

PCClient 2022.4.1

Projektor 2022.4.1**bugfixes**

- Improved performance for all reporting functionalities (create reports, get ticket informations, send ticket comments)
- Images node: Fixed threading issue for updating image nodes in project tree during project save. (PRJEXT-4176)
- Undo/Redo: Now resize changes on Projektor-Scene can be undone/redone, again.
- Search: Fixed possible exception if search commands are connected with && or '|' which contains more than 1 empty space.
- Search: Fixed opening possible wrong page if a double click on a Page node

in the search tree is performed.

- Jira Issue View: Fixed possible exception if a ticket via the notification bubble is opened, which is currently not present in the Jira Issue View.
- Jira Issue View: Fixed that the Jira Issue View 'steals' focus every 5 min if an ticket exists.
- Scene: Fixed an exception in Numeric Field if an invalid value is entered in the property 'Preview Value' e.g. '-'. (PRJEXT-4109)
- Scene: Fixed possible exception during project close.
- Scene: Fixed exception in Projektor scene if a speial character is use in 'Input Character Attribute' of a String Field.
- Settings: Now the Versioning user data (Name, Email, Auto-Commit) are saved and loaded properly.

PCient 2022.4.1

features

- MultiTouch events can now be enabled/disabled by setting the variable @MultiTouchEnabled.
- Added new event 'OnCancel' for Buttons and Softkeys.

bugfixes

- Alarms: Fixed possible crash if Alarms are opened and closed very fast.
- Virtual Keyboard: Fixed possible loose of focus while switching layers with Encoder.

Opus Projektor 2022.4.0

This OPUS Projektor Release contains the following software:

Projektor 2022.4.0

PCient 2022.4.0

OS EGSCORE 1.4.0

OS EGSPRO 2.4.0

Projektor 2022.4.0

infos

- New built-in Java Runtime 17.0.3.

features

-
- B6 (prototype) support
- Jira Issue View: A new view was added which shows all JIRA issues or feature requests. It is now also possible to write comments for the tickets and updates will be shown directly in the application.
- A new 'Images' node is now shown in Project tree. It shows all used images in the project. Images can now be easily updated and renamed.
- Added new event "OnProjectInitFinished".
- Multi-deleting of Variables and CAN-Mappings is now possible in Project tree.
- The limit of 255 character of a String Field was removed. New limit is now 65535 character.
- Added new context menu entry "Create JavaScript ID Array" for object multiselection in Project tree, which can be added in JavaScript files.
- Project-Search: Added new search option 'Parent-TypeID' / 'Parent-ObjectType'.
- Project-Search: Minor improvements.
- Crash-Report: Minor improvements.
- Project: Language names and two letter code can be updated now.
- Project: Error message is shown if terminal_files.zip can not be created during save.

- JavaScript Editor: Added getTriggerEvent() to auto completion.
- Version Control: desktop.ini files will be ignored now, since this can make trouble for checkouts.
- Version Control: Improved performance of Revision-History dialog.
- CAN-Mapping/Variable-Mapping: The max size of the property 'Mask' and 'Shift X Bits' depends now on the original Variable size and not on the mapped Variable size.
- Border-Profile: Enhanced management of Border-Profiles in the Project-Properties. See manual for detailed information.
- J1939: DM1/DM2 translation file is now directly validated after selection.
- Image-/Symbol-Library: Loading images does not block the whole application anymore.
- Image-Library: Drag'n'Drop folder/images from Windows-Explorer is now possible. Folder will be loaded recursively. Updated/improved the image table view. Selected folder will be scanned for updates automatically.

bugfixes

- Fixed possible exceptions in the scene of Pages.
- Fixed Undo/Redo for deleting CAN protocols.
- Fixed Undo/Redo for adding/removing variables to a Graph Object.
- Fixed several possible exceptions which could be appear during close project.
- Fixed some memory leaks during convert project and for close projects.
- Fixed heigh memeory usage which could be appear if an huge image folder is loaded in ImageLibrary or ImageChooser dialog.
- If Variable Name or Index/SubIndex is updated all Variable-Refences in the project will updated properly.

PCient 2022.4.0**bugfixes**

- Fixed painting background color of Bargraph, if overlapping objects gets visible/invisible.
- Fixed resetting value of Variable @CopyFileOrFolder after copy/move was done.
- Fixed showing correct value in String Field, if a connected Variable changes state from invalid to valid.
- Fixed the color of the Navigation Buttons of a Input-List object accordingly to current set day/night mode.
- Fixed possible crash if an Alarm is closed.
- Fixed issue that Button keeps in 'Pressed State' if the Button is pressed quickly with 'Encoder'.
- Fixed restart of fadeout time of Softkey-Frame if a Softkey is pressed.
- Fixed setting a List object invisble which is in state 'Open For Input' via property 'Visibility' in a JavaScript file.
- Updated value for Variable '@Terminal' for B4/B6 devices.
- Updated/improved navigation in Alarms with new Navigation Concept.
- Fixed possible crash if an Image is set very often and quickly via method 'setProperty()' in a JavaScript file.
- Fixed remembering old focused object on a Page if i.e. an Alarm pops up and is closed again.

OS EGSCORE 1.4.0**infos**

- See the corresponding os release notes.

OS EGSPRO 2.4.0

infos

- See the corresponding os release notes.

Opus Projektor 2021.4.3

This OPUS Projektor Release contains the following software:

Projektor 2021.4.3

PCClient 2021.4.3

OS EGSCORE 1.3.0

Projektor 2021.4.3**infos**

- B3/B4 ProtoC support
- All binaries (.exe) of the OPUS Projektor are signed now. (Digital certificate, valid until: 16.09.2024). Some customers had some trouble with security applications caused by unsigned binaries.

features

- The issue reporting was improved to help our customers in a more efficient way.

bugfixes

- Fixed the project rename feature if the GIT version control system is used.
- Fixed issues regarding deleting folders on the filesystem. This was reported by several customers. (Customer report: PRJEXT-566, PRJEXT-550, PRJEXT-2722, PRJEXT-2589, PRJEXT-2587)
- Improved stability of the application.

PCClient 2021.4.3**infos**

- B3/B4 ProtoC support

bugfixes

- Fixed uninitialized '@Terminal' predefined variable for operating system EGSCORE.

OS EGSCORE 1.3.0**infos**

- See the corresponding os release notes.

Opus Projektor 2021.4.2

This OPUS Projektor Release contains the following software:

PCClient 2021.4.2

PCClient 2021.4.2**bugfixes**

- Set and update boolean properties only if they really change. Some people use PLC methods and set the same value every few milliseconds.
- Only start updating/re-initializing navigation 200ms after it was triggered by a property change. That should allow all properties to be set before we actually perform the update.
- Navigation is blocked/operator input is ignored while waiting for this initialization.
- Use hard coded method again to traverse object tree while initializing/updating navigation. Script based approach had too much overhead.
- Fix memory leak caused by navigation scripts.
- '@UserEncoder1Clicks' respects rotation direction again.
- Add synchronization for some string based properties. Has only a limited effect on Opus A3 and A6G1 - let the property show on screen before modifying it again!

- Avoid crash if virtual keyboard is selected for a DDO but no VKB is defined in the project. DDO falls back to encoder input in this case.

Opus Projektor 2021.4.1

This OPUS Projektor Release contains the following software:

Projektor 2021.4.1

PClient 2021.4.1

Projektor 2021.4.1

bugfixes

- PClient Simulation: Fix that a restart of PClient simulation does not work correctly when JavaScript debugger window is open.
- Version Control System: Fixed an exception if a project is opened with a not fully initialized git repo.
- Version Control System: Fixed that the repository is locked caused by a previously interrupted commit. JGitInternalException - source: org.eclipse.jgit.api.AddCommand:225::call() (Customer report: PRJEXT-2576, PRJEXT-2615)
- Version Control System: Commits in large projects are now much faster. (Customer report: PRJEXT-2576, PRJEXT-2615)
- Version Control System: The graphical user interface is only released when the commit process is finished. (Customer report: PRJEXT-2576, PRJEXT-2615)

PClient 2021.4.1

bugfixes

- Key focus is on PClient again after sleep mode. Didn't work on 'egspro' systems anymore.
- Navigation is only re-initialized if visibility was changed on an object of current page. Before it was re-initialized whenever a visibility value changed.
- Re-initialization of navigation now leaves focussed object unchanged. Before this was problematic esp. if a list was object 'open for input'.
- Encoder events trigger actions again even if there's no input object on the page.

Opus Projektor 2021.4.0

This OPUS Projektor Release contains the following software:

Projektor 2021.4.0

PClient 2021.4.0

OS EGSCORE 1.2.2

OS EGSPRO 2.3.4

OS A3 2.2.6

OS A6 2.2.6

Projektor 2021.4.0

infos

- New built-in Java Runtime 11.0.10.
- The 'String Inplace Editor' is not supported anymore. If it is used a warning will be shown. Please change to a Virtual Keyboard.

features

- New sample project 'Tradeshaw Dashboard' added. This project sample shows a sophisticated highly dynamic animated dashboard.
- New object themes 'stunning_dark' and 'stunning_bright' added.
- Undo/Redo 2.0. See manual for more details.
- Generic Project Search. See manual for more details.

- Integrated a Version Control System for Projects.
- Support for OPUS B4.
- JavaScript: Added new function `getTriggerEvent()`.
- JavaScript: Added new function `runSystemCommand()`.
- JavaScript: Added new function `openPDFReader()`.
- Variable View: Now the owner of Variables which are mapped in a CANMapping can be changed.
- Variable View: Column names and width will now be saved during close and restored during start of the application.
- Added possibility to close several project at once.
- Improved CAN-Mappings dialog. Infos/Warnings/Errors will be shown directly.
- Variable-Import: Now is possible to import ECU Variable Index/SubIndex via CSV import.
- Softkeys: Softkeys can now be deleted. During load only saved Softkeys will be shown.
- Open File dialog: Now the dialog opens much faster. Added option to avoid slow folder navigation. See manual (extended file browser) for more details
- Changed Topcon device names X18/40 to XD/XD+
- Save button will now only be enabled, if current project has changes.
- Configure Events dialog: OnPress/OnLongPress: A warning is now shown that for these events now page jump shall be performed.
- List-Object: Added new property 'Touch Input' to enable/disable OK/Cancel button for List objects.
- New "Tip of the day" section in the 'Start Page'.
- Save button is now disabled if no modifications and no uncommitted changes are detected.
- The FlexView conversion process only creates softkeys for the levels if these also existing in the original project.
- 'Gauge' object now allows to set a background image in combination with activated property 'Draw Boundary Bar'.
- New font 'Xolonium' added.

bugfixes

- Fixed many memory leaks. Reduced unnecessary memory usage. Memory will be freed properly after project is closed.
- Rename JavaScript files does now work properly, if script was modified before.
- FlexView: Fixed possible crash in FlexView dialog if Previous button is pressed.
- Fixed several possible uncritical exceptions during close of a project.
- Fixed possible preview painting issue in Table object.(Customer report: PRJEXT-133)
- DBC-Export:[CANFreestyle] 29bit can ids the 'extended bit' is set properly.
- DBC-Export:Now the attribute GenMsgSendType is set properly, if a can message is sent periodically.
- Simulation: Imported fonts will now be used properly.
- Now properties will be shown properly, for multiselections.(Customer report: PRJEXT-484)
- Recent Projects: Possible duplicated entries will be avoided.
- Fixed possible exception in Object Themes Panel.(Customer report: PRJEXT-415)
- Fixed possible exception on scene if objects are selected/moved with CTRL pressed.(Customer report: PRJEXT-488)

- Fixed possible exception in ImageFile chooser dialog. (Customer report: PRJEXT-578)
- Image Library: Reduced memory allocation for SVG images.
- Fixed exception during load if a 32bit variable is set as 'Visibility Variable'. (Customer report: PRJEXT-1512)
- Fixed exception if an image from the image library is drag'n'drop to a Picture Graphic object with Language/Unit dependency.
- Fixed draw issues in ListItems dialog of an InputList object. Fixed possible exception if multiple images are selected in the dialog.
- Fixed exception if the Toolbar will be customized. (Customer report: PRJEXT-1646)
- Variable Simulation: Option 'Only allow value changes by Simulation' will now be considered properly.
- Now the extended id bit will be set also for CAN-IDs less or equal 0x7ff, if 'CAN ID Type' is set to '29Bit'.
- Added the method 'setTouchInput' to the Projektor JS auto-completion.
- Fixed that the 'Save as' functionality do not modify the original project. (Customer report: PRJEXT-1916)
- Fixed unsharp SVG graphics on the Projektor scene.
- Changed the default value of the property 'Inplace Editor' of String Fields from 'Encoder' to 'VKB'.
- Error handling implemented if no default browser is defined in the operating system. (Customer report: PRJEXT-1968)
- Now the 'Owner' of a mapped variable can be changed in Variable-View.
- Fixed possible 'java.lang.IllegalArgumentException'. (Customer report: PRJEXT-1967)
- Fixed possible 'java.lang.NullPointerException'. (Customer report: PRJEXT-2085)
- Fixed possible 'java.lang.ConcurrentModificationException'. (Customer report: PRJEXT-2069)
- FlexView: Loading Screen image will be scaled properly now, during FlexView conversion.

PCient 2021.4.0

features

- Improved JavaScript error messages on the console.
- Improved PDF Reader. Added a loading lable.
- Touchscreen can be enabled/disabled during runtime. Added JavaScript function setTouchInput(true/false).
- Java Script: Allow JS function writeToFile() to also write to /opt/data. Also raise max. used space in /opt/user_files and /opt/data from 10MiB to 100MiB.
- Power Management: Add support for new states in @PWR_CurrentPowerMode (2: low power with timer enabled to change to sleep mode, 3: silent-on)
- Power Management: Add new variable @PWR_TimeFromSilentOnToLowPower to be able to adjust the silent on to low power timer.
- CANopen: Allow SDO Read Responses without size information.
- Video: Fixed possible video issues, if same video settings will be set repeatedly via JavaScript.
- Events/Navigation: Internal redesign - should not have external effects.

bugfixes

- Expedited write request does work with Strings.
- 'Force Writing' does work for CANopen write requests now.
- PDF Reader: Home-Key closes now the PDF Reader.
- Fixed/improved setting correct backlight intensity during automatic mode.
- Fixed possible wrong state of Digital Input values when returning from Low-Power, or Sleep mode.
- Fixed possible painting issues for Arched bargraphs, with a high value range when value is low.(Customer report: PRJEXT-484)
- Fixed possible crash in JS method sendCANMessage() if paramter DLC is set > 8.
- Escaping from button's 'release' and 'long release' event now works on multitouch devices.
- 'moveDDO' command now moves all instances of the DDO on current page.
- Numeric virtual keyboard now handles offsets and scaling.
- Avoid screen flickering after leaving a page showing ETH camera stream.

OS EGSCORE 1.2.2

infos

- See the corresponding os release notes.

OS EGSPRO 2.3.4

infos

- See the corresponding os release notes.

OS A3 2.2.6

infos

- See the corresponding os release notes.

OS A6 2.2.6

infos

- See the corresponding os release notes.

Opus Projektor 2020.4.3

This OPUS Projektor Release contains the following software:

Projektor 2020.4.3

PClient 2020.4.3

OS EGSCORE 1.1.1

OS EGSPRO 2.3.4

OS A3 2.2.5

OS A6 2.2.5

Projektor 2020.4.3

infos

- New built-in Java Runtime 11.0.9 (Please note that the application launcher might show a different Java runtime version. The used version is displayed in the About dialog.)

features

- A default icon will be set automatically in project settings for ISOBUS projects during load.
- The Image-Chooser dialog shows now an thumbnail images icon for all image types. (PNG, SVG, JPEG, BMP, GIF). The preview panel had been removed.

bugfixes

- New welcome project added. New page USB browser with File Viewers and fixed RS232 initialization.
- Fixed Exception by pressen 'ESC' in String property editor.
- Updated method to create an SVG thumbnail image for ImageChooser dialog.

This save a lot of memory during creation.

- Stability improvements
- Fixed sometimes occurring exception during the send process of a crash report if it could not be send the first time.
- Fixed possible exception if Z-Order is changed on page scene.
- Fixed possible remove of images during project conversion (only for projects versions lower than 3.7.x), if the image name contains invalid characters like empty space.
- Fixed that the font property of the table object is saved correctly.
- Fixed exception on page scene if an object with an assigned image, is set to width/height '0'.
- Fixed creating duplicate Alarm Numbers if an alarm is copied.
- Fixed showing Volume Bar Buttons and Playlist properly for Multimedia Player.
- Fixed possible exceptions during FlexView conversion process.
- Fixed memory leak during project save and close.

PCient 2020.4.3

bugfixes

- Fixed that the PCient screen was still (partly) visible when calibrating the touchscreen via JavaScript.
- Fixed possible crash in Welcome-Project, for Page RS232, if the RS232 port is used for data transfer.
- Fixed restarting PCient properly, if project gets updated directly after boot.

OS EGSCORE 1.1.1

infos

- See the corresponding os release notes.

OS EGSPRO 2.3.4

infos

- See the corresponding os release notes.

OS A3 2.2.5

infos

- See the corresponding os release notes.

OS A6 2.2.5

infos

- See the corresponding os release notes.

Opus Projektor 2020.4.2

This OPUS Projektor Release contains the following software:

Projektor 2020.4.2

PCient 2020.4.2

Projektor 2020.4.2

infos

- New built-in Java Runtime 11.0.8 (Please note that the application launcher might show a different Java runtime version. The used version is displayed in the About dialog.)

features

- New sample project (sums game) added.

bugfixes

- Fixed that the font property of the gauge object is saved correctly.
- Fixed issue regarding wrong default values by using the csv variable import.
- Fixed crash will loading invalid svg images. If a svg is invalid an error message is shown.

- Fixed saving DM1/DM2 settings.
- Fixed possible crash while loading invalid projects.

PCClient 2020.4.2

features

- Fonts imported to a project but are not installed as Windows fonts are now loaded in the PCClient simulation.

bugfixes

- Fix sequence of logged variables in time based logging when the tag LIST_OF_LOGGED_VARIABLES is used.
- Fix when changing to a new page with touch press event that a release event could be triggered for an object on the new page while the finger still touches the screen (capacitive touches only).
- Fix that continuous touching of a frame object with one finger blocks touch events for other objects (multi touch only).
- Fix that a DM1 log file is not created again after it was moved/deleted.
- The list DDO supports items disabled via visibility now and can be switched to 'touch mode' at runtime.

Opus Projektor 2020.4.1

This OPUS Projektor Release contains the following software:

Projektor 2020.4.1

PCClient 2020.4.1

Projektor 2020.4.1

infos

- New built-in Java Runtime 11.0.6

features

- Welcome project 2.0.0 with many new service features.
- New Reporting functionality integrated. When an error occurs a new report dialog will be shown for given detailed feedback.
- New icon sets Materials and Remix in the Symbol Library are now available.
- Optimized datamask sizes for Isobus projects.
- New DBC Export feature is available for customers with DBC license.
- Enable DBC import of Variables greater than 32bit.

bugfixes

- Fixed an issue in the day / night mode feature regarding storing theme informations.
- Fixed that the auto save projects function saves no JavaScript files.
- Fixed that copy and paste of some images formats doesn't work over projects.
- Fixed that the data type and length of variables is not set properly.
- Fixed sometimes occurring exception on the scene by multi selection objects and switching between pages.
- Fixed possible exception when creating a project while a project loads.

known issues

- Sometimes occurring exceptions when the z-Order is changed on the scene.

PCClient 2020.4.1

bugfixes

- Fixed that the Variable Simulation shows no variables are when connecting to real Opus B3
- Fixed crash when dis- and reconnecting during variable transfer.
- Fixed background/foreground painter handling.
- Fixed crash when Ethernet camera frame is switched with visibility.

Opus Projektor 2020.1.0

This OPUS Projektor Release contains the following software:

Projektor 2020.1.0

PClient 2020.1.0

OS EGSCORE 0.6.2

Projektor 2020.1.0

infos

- New device OPUS B3 is now supported.
- The new Projektor is shipped with an built-in Java runtime (OpenJDK11). In conclusion, there is no commercial Java license needed.

features

- Introduced Day/Night Mode. For more information please have a look at the manual.
- Added new icons in Project-Properties dialog.
- Introduced new launcher dialog with setup options.
- It is now possible to set recovery and service boot logos.
- The Graph History Tool can now be started in Application.
- Project will be saved automatically if PClient Simulation or Downloader will be started.
- Console output of PClient Simulation will now be in Output window.
- Objects can now be locked on the scene.
- Introduced Linebreaks for String Field objects.
- Introduced drag'n'drop functionality for JavaScript files in project tree.
- Now it is possible to keep aspect ratio of objects while resizing on the scene.
- Enhanced swim lanes on the scene.

bugfixes

- Many bug fixes for scene.
- Enhanced FlexView-Converter.
- Fixed that same variable can't be drag 'n' drop several time to 2D Graph.
- Many minor bug fixes and improvements.

known issues

- Multimedia Player and Ethernet Camera streaming are not yet available for OPUS B3. These features will be available in a later version.

PClient 2020.1.0

features

- Now the release event will be cancelled if sliding away from a pressed button on the touch.
- Multi Touch support for e.g. press several buttons (only for devices with Qt5 and multi touch, no gestures, yet)

bugfixes

- Now the release event will be cancelled by sliding away from a pressed button on the touch.
- Fixed drawing shadow for Buttons although drawing shadow is disabled.
- Fixed applying theme properties for VKB-Buttons.
- Fixed possible crash of Variable Simulation.
- Fixed possible drawing issues in 2D-Graph.
- Fixed drawing correct line attributes in 2D-Graph.
- Fixed possible flickering of objects if moveDDO function is used.

OS EGSCORE 0.6.2

infos

- See the corresponding os release notes.

Opus Projektor 2019.4.1

This OPUS Projektor Release contains the following software:

Projektor 2019.4.1

PCClient 2019.4.1

OS A3 2.2.3

OS A6 2.2.3

Projektor 2019.4.1

infos

- Object Scene: Removed following items in context menu of the Property-Sheet: Disable / Enable Property, Enable All Properties, Disable All Properties.
- Object Scene: Removed Property 'Border Profile' from Object Themes. This is not a Theme property anymore, because it is managed by Project Settings.

features

- Show Open Source Licenses in Projektor in the About dialog.
- DBC-Import: Now a preview of DBC-Import is available.
- Variable View: The tooltip of the VariableView can be disabled/enabled in VariableView-Settings.

bugfixes

- Fixed that list object reference children are sorted wrong.
- Fixed when a new page / miniview page / alarm / vkb is created, that all children nodes are expanded.
- Fixed that the property "Display Video" for "Camera2" / "Camera3" is always set to "None" after conversion to a "Generation1" device.
- Added check for NullPointerException if scaled image could not be created e.g. if width or height was set to '0'.
- Creating variable via Variable Manager is not refreshed in variable view with subindex 0x0.
- Fixed a sometimes occurred "ConcurrentModificationException" during the FlexView conversion process.
- Add Reset Softkey Option for context menu of Softkey on Scene.
- Visibility with 32bit Integer does not work.
- Variable Properties are not updated properly.
- Symbol-List Drag and Drop Page/Datamask.
- Needle color does not change properly.
- Duplicate IDs: The IDs of each CAN-Message is checked and updated to an unique one if necessary.
- CANOpen Dummy Variables won't be deleted anymore if a project is converted from e.g. A6 to A3.
- Scene: Needle image will be scaled properly now.
- Object Themes will be stored properly now. It is now possible to switch themes on the scene properly (Images will be updated).
- Default Value for Repeat-Events is set to '5' (Script will be executed every 500 ms).
- Image Library: Enhanced search performance and caught exception for special characters in search field.
- DBC-Import: Fixed parser exception for files with Keyword 'SIG_GROUP_' and fixed import for Big Endian messages if message is unordered.
- Fixed 'Dependency Editor Dialog'. The value of a cell in the editor could be updated by pressing on an other cell.

PCClient 2019.4.1

bugfixes

- Fixed possible bluescreen after waking up from sleep mode multiple times.
- Fix shaky camera image on iMX6 devices.
- Fix possible crash when coming back from low power mode and video was showing.
- Fix possible crash when switching between PAL and NTSC cameras.
- UserXXX.tar.gz files can be edited again with 7zip.
- Fix that @UserMultiButtonPressed variable was not correctly reset after a double press event.
- Add 'wait_on_read' as a parameter for RS 232 init function.
- CallerID can now also be retrieved in JavaScripts when it was triggered by a CAN mapping.
- Synchronize 2D graph logging files when exporting them to USB.
- Fixed shaky camera image for imx 6 based devices. Now the camera image does not move +/-1 Pixel anymore.
- Fixed crash for Portrait projects on imx 6 based devices if video is shown and device goes into Low Power mode with configured Camera off and it is switched ignition off/on again during Low Power.

OS A3 2.2.3**infos**

- See the corresponding os release notes.

OS A6 2.2.3**infos**

- See the corresponding os release notes.

Opus Projektor 2019.4.0

This OPUS Projektor Release contains the following software:

Projektor 2019.4.0

PClient 2019.4.0

Projektor 2019.4.0**infos**

- Increase variable logging max file size from 10MB to 50MB
- 32Bit Java runtime support removed. Now the installer only accepts 64bit Java runtimes. In conclusion the OPUS Projektor 2019 runs only on 64Bit operating systems.
- Project loading performance and memory management improved.
- Scene performance improved (moving / resizing objects).

features

- Added new RSS feed on the Start Page.
- Image Library allows to add different image pools / folders. The images can be dragged on scene.
- DBC file import feature added. (Paid Feature)
- Provide Ethernet camera configuration tool using ISO 17215 protocol. (Paid Feature)
- New sample project added: "RS232 Project" - This project sample demonstrates a basic usage of RS232 interface. Connect to a serial communication device, e.g. printer / terminal program and write or read data.
- New sample JavaScript added: "RS232 Sample" - This script shows examples of the commands for RS232 configuration and communication.
- J1939 now provides "ForwardDontCare" property in order to even write a value where all bits are set into the variable.
- JavaScript editor auto completion for eeprom functions.

- Enabling Drag and Drop of JavaScripts on FunktionKeys and Encoder.
- Option to clear recent projects (Tools -> Options -> Projects).
- Show Font and Line attributes preview with different background colors.
- Add new property "SDO Timeout" for CANopen instances.
- Added new Property Object Status to mapping objects of CANFreestyle and J1939.
- Add Show in Explorer button in project properties at project location.
- Add JavaScript auto completion for new getCallerID() function.
- Use normal Variables for Visibility Bit.
- CTRL + X shortcut for "cutting" objects added.
- Add JavaScript auto complete for createUSBDirectory(), getDirectoryContent() and deleteFileOrDirectory() functions.
- Add "Gauges" to the supported objects of "Softkeys".
- Left / Top softkey frames are now allowed for Opus A8.
- New drag and drop context menu "Add as Visibility Variable" for variables added.
- Drag and drop support of Mapping Objects for JavaScript Editor added.
- Make object names editable in project tree. Now the names of object can be renamed by pressing 'F2'.
- New improved "Save As" / "Rename" projects dialog.
- Lock function for scene objects implemented in context menu. This feature avoids that objects on the scene can't be accidentally moved by using the mouse.
- "Rocker Switch Horizontal" is now available in the object palette.
- List: Dashed rectangle for each list entry implemented.
- List: Better usability when the "Visible Items (Normal Mode)" / "Visible Items (Editing Mode)" is greater then 1 and objects will be added / removed.
- New icon for invisible items on the project tree.

bugfixes

- Windows Window Manager handles reduced.
- FlexView-Converter: Some issues in "Auto Set Softkey" function fixed.
- Fixed that standard shortcut Ctrl + S does not work.
- Events: Set Value - a value can be set without a variable.
- Fixed that the resizing of the Multimedia Player ddo works on all corners.
- Simulation settings aren't read correctly when a project is opened.
- Import Variables Feature: Owner UD4, and PClient can be added manually. Check now if the ECU Name is reserved.
- Frame z-order can't be changed.
- Fixed that MiniView window is correctly shown, also when objects are moved outside of containers.
- Fixed that Drag and Drop of variables / scripts doesn't work with hidden objects on top.
- Big Endian is implemented wrong for variables less then 8bit.
- Fixed that the page properties are shown by double clicking / open the page.
- Check implemented which detects that a font is successfully imported. A message appears if the font can't be imported.
- Fixed that the correct parent object ID is set by using the JavaScript function "moveDDO(...)" if the parent object is from type "Datamask".
- Open PDF Reader event, shows unexpected dialog.
- Check if it is possible to allow renaming mapped variables.
- Gauge object issues: Now the property 'Transparent' is disabled if 'Draw

Boundary Bar' is enabled and 'Transparent' state is set to 'false'.

- Fixed that the PClient simulation can be started without selecting the checkbox twice.
- Add option to not ignore "all 1" SPNs in J1939 PGN.
- Fixed that the project rename functionality throws an exception if an "Virtual Keyboard" page was opened.
- Fixed that value of Property 'Offset2' will be considered in 'Preview Value' of Numeric Field.
- Fixed Symbol Library drag and drop on Page / Datamask.
- Softkeys with no assigned event, but a pressed and/or released image is now also saved.
- Fixed that softkeys without children will not be removed after the FlexView conversion process.
- Page name editor tab isn't refreshed when page name is changed.
- SVG-Images are not drawn properly when project is opened.
- Fixed that a minor tick is not painted over the first major tick for Gauge objects.
- The Meter and Gauge needle in the Projektor looks now like in PClient.
- The corner radius will now be calculated in relation to the ddo scaling factor during the FlexView conversion process.
- Check if it is possible to allow renaming mapped variables. Now VariableMapping will also be changed in Project-Tree when Variable-Name is changed.
- Sample Project Creator: Now an warning message is displayed if an existing project of the selected slot will be overwritten.
- Clean up of some "Project Properties" dialogs.
- Fixed issue after the project conversion / load. All language / unit dependent "Vertical Alignment" properties of "Numeric Fields" was set to the default value "Center".
- Fixed an displaying issue when the meter / gauge was moved outside of the page.
- Fixed that the Softkey Frame ID's are the same after the FlexView conversion process.
- Fixed sometimes occurring "java.nio.file.AccessDeniedException" during the FlexView conversion process.
- Linear Bargraph: Wrong behaviour for "Number Of Ticks" property.
- Const Value is now shown in Visual CAN Mapping table.
- Wrong row selection in Variable View.
- The second "Function Key" is now named "Stop Key". Update old projects on loading.

PCient 2019.4.0

features

- PClient's Javascript now supports function 'setFocus(ddoID, openForInput)'.
- Introduced RS232 object in Javascript - mainly to support serial printers.
- Add new Javascript commands 'createUSBDirectory()', 'deleteFileOrDirectory()' and 'getDirectoryContent()'.
- Introduced "getCallerID()" function to Javascript.
- DM1 handler discards table entries if the ECU didn't send messages for 3 seconds.
- J1939 and CANFreestyle mappings can now be en-/disabled at runtime via 'Object Status' property.
- All CAN mappings now provide "mapping received" event/action handling.

- Javascript now supports 'readEEPROM()' and 'writeEEPROM()'.
- CANopen SDO communication has writable property "SDO Timeout (msec)" now.
- CANopen PDOs now support 'timeout', 'timeout resolved' and 'mapping received' events like the mappings in the other CAN protocols.

bugfixes

- Setting '@EnableUpdater' variable does not affect '@UpdaterCANPort' anymore.
- Improve layout for Opus A8 ISOBUS layout in Windows simulation.
- DDOs now trigger the 'OnValueChanged' event even if they have no variable attached. In the latter case a change of the 'Preview Value' triggers the event. I.e. this event is triggered whenever the value shown changes - independent of the change's origin.
- Fix duplicate handling of 'on enter value' events.
- All 'scale', 'offset' and 'offset2' values are floating point now. Before some of them were integer values only.
- Windows simulation avoid duplicating mouse wheel events - one tick of mouse wheel simulates one encoder tick.
- Graph object now properly supports negative scaling factor.
- Gauge does not draw a minor tick over the first major tick anymore.
- Meter object's 'tick width' and 'arc width' are calculated again like they were before gauge object was introduced..
- IP address for imx-6 based devices can be set again.
- Default IP address for eth0 is set to '192.168.135.6' wherever a default is initialized.
- DM handler now shows ECU addresses ≥ 128 (0x80) correctly. Before negative numbers were shown.
- Moving the child of a video DDO (frame or page) does not cause reapplication of all video settings anymore. This saves a lot of performance if 'moveDDO()' is used.
- Avoid crash if a button had only a child for 'pressed' but none for 'released' state.
- If setting an invalid language, DEI value is set back to the language used before. Until this fix the old language was kept but DEI held the invalid value.
- Clean up 'openPDFAction'.
- CANopen transmit PDOs are not sent twice anymore if the trigger variable is also mapped into a receive PDO.
- Continuous variable logging now writes the log file header even if the logfile was removed while logging was off. Before a new file without the header was created in this case.
- Beeper simulation on imx-6 based devices is quicker now and therefore does not skip single beeps anymore.
- Hardware daemon doesn't crash anymore if power management daemon is restarted while hardware daemon is running.

Opus Projektor 2018.4.3

This OPUS Projektor Release contains the following software:

Projektor 2018.4.3

PCClient 2018.4.3

Projektor 2018.4.3

infos

- License handling improved regarding the activation of additional features.

- The user manual was updated.

bugfixes

- Fixed that "Drag and Drop" of variables / scripts / symbols work with hidden objects on top of the scene.
- Fixed an issue with multi-selected objects and modified image properties.
- Fixed copy/paste issue with images.
- Fixed changing z-order of frames.

PClient 2018.4.3**bugfixes**

- Fixed sequence number for "TP Broadcast" in J1939 protocol.
- Improved performance by placing objects over video frames and using the JavaScript customer function "moveDDO(...)".
- Fixed crash for buttons with only a child for "Pressed" but none for "Released" state.

Opus Projektor 2018.4.2

This OPUS Projektor Release contains the following software:

Projektor 2018.4.2

Projektor 2018.4.2**bugfixes**

- Fixed that the install scripts are not overwritten during project load.
- Fixed that the configure mappings dialog is refreshed properly.
- Fixed that multimedia files are not removed during the save process.

Opus Projektor 2018.4.1

This OPUS Projektor Release contains the following software:

Projektor 2018.4.1

PClient 2018.4.1

Updater 2018.4.1

OS EGSPRO 2.1.1

OS A3 2.2.2

OS A6 2.2.2

Projektor 2018.4.1**bugfixes**

- Frame-Size of ISOBUS projects is now 800 px.
- Increased performance during the save process of projects with many SVG files.
- Pressed/Released image are now also shown in Projektor when button is transparent.
- Changed "OPUS Projektor 2018.4 Updater Center" to https.
- The values for the "Dependency Dialog" is now sorted.
- Removed languages will be delete in the languages folder.
- Fixed that sometimes the local absolute image path is saved to project.xml for "Boot Logo" and "Loading Screen".
- Fixed possible NullPointerException caused by "null" value in the "LogLevel" attribute.
- Fixed wrong image names for image properties of pages in the project.xml after FlexView conversion with scaling.
- The property value for a visibility bit was not correct. Removed 'Empty Space' behind ":".
- Fixed bug in the project conversion that "Auto Set Softkey" isn't available for larger projects.

- Fixed that @SettingsLanguageEnum isn't applied upon device start.
- Rename of the project folder are now supported again.
- Wrong property for CANopen transmit mapping.
- Fixed that the last ECU of a Protocol can be deleted.
- Fixed that String variables are mapped in bit instead of byte.
- Fixed wrong property value for a visibility Bit.

infos

- Full version of Symbol Library with 2426 ISO7000 SVG symbols can now be purchased and activated. Please contact our support.

PCClient 2018.4.1**bugfixes**

- Fixed that device application does not recovery from BUS OFF state.
- Fixed white stripe on the right side of non-transparent images.
- Fixed that DM2 table shows more than two digits for ECU address.
- Fixed sometimes a tone is missing at beeper sound pattern.
- Fixed that device application does not write file header again if logfile gets deleted.

Updater 2018.4.1**Bugfixes**

- Fixed that Updater GUI does not stop after project update.
- Fixed Updater problems when device is shut off after project loading.
- Fixed that Project download stops with imported fonts.
- Fixed that Updater can not connect to PCClient when Project-Folder name is modified by user.
- Fixed sometimes broken ArchiveInfo.xml file afer cold boot.

OS EGSPRO 2.1.1**Infos**

- See the corresponding os release notes.

OS A3 2.2.2**Infos**

- See the corresponding os release notes.

OS A6 2.2.2**Infos**

- See the corresponding os release notes.

Opus Projektor 2018.4.0

This OPUS Projektor Release contains the following software:

General 2018.4.0

Projektor 2018.4.0

PCClient 2018.4.0

OS EGSPRO 2.1.1

OS A3 2.2.0

OS A6 2.2.0

General 2018.4.0**infos**

- Versioning scheme was updated (again) to start with calender year.
- This should avoid the confusion created by unifying the versions of all components.
- This is the follow-up for version released as '1.12.x'.

Projektor 2018.4.0**features**

- Show the variable description and some other informations in tooltip in the variable view.
- New support function "Copy Details to Clipboard" in dialog "Help->About".
- Drag and Drop of JavaScripts / Variables / Symbols improved with a new 2-step context menu which shows all available options of the drop object and the parent object.
- The JavaScript Editor supports now UTF-8 encoding and many others.
- The new integrated online update system delivers now updates and features.
- New "Object Themes": "Modern Dark", "Modern Bright", "Classic".
- "Object Themes" can now defined for each object on scene or the whole project in "Tools->Options->Scene->Object Themes".
- Custom "Object Themes" can now be created.
- Export / Import of custom "Object Themes".
- Supports now "H264 Ethernet Stream" in the camera configuration for "Pages" and "Frames".
- New palette with many new objects ("Gauge", "Gauge 90", "Gauge 180", "Gauge 270", "Lamp", "Power Switch", "Push Switch", "Rocker Switch").
- Specific device projects can now converted to each other device with the "FlexView" converter.
- Some generic sample projects are now available for each device (Bargraph, Dashboard, Dynamic Gauge, Welcome).
- It is now possible to create your own sample project to reuse it on different devices "File->Create Sample".
- The new "Symbol Library" contains many "ISO7000" symbols. (Paid Feature)
- New search / favorites function for the "Symbol Library".
- "Symbol Library" drag and drop integration to scene.
- A Frame will now be automatically added by creating a new page.
- "Buttons" can now have an "Pressed Image" / "Released Image" for toggling images instead using two Picture Graphic objects.
- New property "Corner Radius" for String Fields" and "Numeric Fields" for painting rounded corners.
- New property "SVG Blend Color" for "Picture Graphics". This property allows to colorize graphics from the "Symbol Library".
- The JavaScript Editor can now be customized / configured with many settings in "Tools->Options->Editor".
- MiniView pages support for Isobus A8 devices.
- Horizontal and vertical swimlanes helps now to place objects on scene. The feature can be enabled / disabled on the scene toolbar "Switch Snap to Object ON / OFF".
- Some improvements on list object.
- Nodes in tree and properties in property sheets are now colorized. Modified: blue, New: green, Warning: orange.

bugfixes

- Fixed issues for property "List Items" of object "List". The property can now be used to add multiple objects / images.
- Fixed "Auto Wrap" property of "String Field objects."
- Rotation of the boot logo for portrait projects removed.
- Issues fixed in the scene to project tree synchronization

warning

- The Undo/Redo functionality is not always consistent and must be analyzed. Maybe the feature must be removed again.

known issues

- The "FlexView" project converter supports currently no ISOBUS projects.
- There is no check regarding valid camera combinations by copy / paste a frame with configured "Display to Video" property into an other Datamask as reference.
- The event "OnDbClick" on "Buttons" and objects of the category "Lamps and Switches" works not if the property "latching" is activated.

infos

- New widget move strategy on scene. CURSOR_BUTTON = 1px, ALT+CURSOR_BUTTON=5px, STRG+CURSOR_BUTTON=10px, SHIFT+ALT+CURSOR_BUTTON=50px, SHIFT+STRG+CURSOR_BUTTON=100px
- Window Layout of the application improved to get more space for the workbench.
- Auto-Backup feature removed from toolbar.

PClient 2018.4.0**features**

- Now supporting to show two analog video camera images in parallel on imx-6 based devices.
- Limited support for one additional ethernet camera on imx-6 based devices using a H264 stream.
- New gauge object is supported.
- Supporting ISOBUS variants for Opus A6G2 and Opus A8.
- Opus A8 ISOBUS supports 'miniviews' either to show the downscaled page or a specifically designed one.
- Buttons, String Fields and Numeric DDOs support rounded corners.
- Buttons support separate images for 'pressed' and 'released' state in addition to switching child shown.

bugfixes

- Some bugfixes for SDO handling.
- Visibility of button's children is not changed anymore by operating the button. I.e. visibility variables work now for buttons and their children.
- ISOBUS versions now listen to unit, language and volume changes made in the host system's setup screen.
- Encoder events are properly handled even if the page is switched (e.g. via Home key) while an alarm is active.
- Javascript function 'readFile' now returns the value 'undefined' if the file does not exist. Before it returned an empty array.
- Variable '@UserButtonReleased' is set to '-1' now even if encoder is pressed (before it was set to '0' in this case).
- Prevent crash that could happen at startup if variables were used in transmit mappings.
- Prevent crash in J1939 DM1 handling by synchronizing even reading from the table of messages.
- J1939 DM1 lamp variables are considered valid whenever DM1 handling is configured in the project. Before they only became valid once a lamp was switched on.
- CANopen SDO client request is sent correctly now by PClient.
- Alarms without value for 'display time' can be closed at any time now.
- String length is only used for operator input validation, if owner sets a longer string value it is shown now.

infos

- lmx-6 based platforms use OS version 2.1.x with Wayland instead of X-server as the windowing system.

OS EGSPRO 2.1.1

Infos

- See the corresponding os release notes.

OS A3 2.2.0

Infos

- See the corresponding os release notes.

OS A6 2.2.0

Infos

- See the corresponding os release notes.

Toolchain 1.12.0

This OPUS Projektor Release contains the following software:

Projektor Tool 1.12.0

PCClient 1.12.0

Updater 1.12.0

OS EGSPRO 1.1.2

OS A3 2.1.1

OS A6 2.1.1

Projektor Tool 1.12.0

Features

- New "JavaScript Editor", see the welcome page for more details.
- New "Visual Programming Editor", see the welcome page for more details.
- New JavaScript templates added to category "JavaScript Samples".
- JavaScript files can assigned to DDO's by Drag and Drop.
- New JavaScripts top level node in project view.
- JavaScript files are now sorted alphabetically.
- JavaScript files can be renamed over the project tree and updates related DDO events / actions.
- JavaScript files can be copied into other projects.
- JavaScript files can now be imported by using the function "Import File..." by right clicking on the JavaScripts root node.
- All available JavaScript files will be displayed in the JavaScripts node.
- New JavaScript files can be created over the project tree or the "Configure Events and Actions" dialog.
- Existing JavaScripts can now be edited / opened also over the "Configure Events and Actions" dialog.
- JavaScripts can now also be imported over the "Configure Events and Actions" dialog.
- File Save Action to JavaScript editor TopComponent toolbar added.
- Variables can now be moved from VariableView into the new "JavaScript Editor" by Drag and Drop.
- DDO's from Project Explorer can now moved into the new "JavaScript Editor" by Drag and Drop.
- QT applications: "Variable Simulation" / "PCClient" / "Updater" starts now Look and Feel dependent.
- New action in menu "Edit"->"Find In Projects..." and "Replace in Projects..." for JavaScript files.
- New "Navigator" view for JavaScript programming.
- Frame and Container DDO's on scene can now be set to the parent size by double click.

- A6G2 Standard / Eco supports now ISOBUS application.
- Preview image painting of "Palette Objects" by using DnD improved for Linux OS.
- New Variable "@UpdaterCANPort" added.
- New anthracite Look And Feel "Darcula" added.
- Optional sync parameter for JavaScript's writeToFile function (see JavaScript documentation).
- New CAN baud rate 83.333 khz added.
- The z-Order of DDO's in the Project Tree can now be changed by Drag and Drop.
- The theme of the JavaScript editor will automatically changed by changing the application appearance.
- Device Boot logo can now be set in "Project Properties".
- The Java Runtime Environment (JRE) can now be changed in the Projektor Tool over "Tools->Options->Java Runtime".
- Improved handling and rendering of SVG images.
- The bootlogo of the device can now be changed via Updater and new project property options.
- New property for the Multimedia Player: "Cyclic Playlist Navigation". See user manual for more details.

Bugfixes

- Fixes open PagesNode on double-click.
- Fixes that the font property of language dependent objects couldn't be changed.
- The integrated chinese font "HanWangHeiLight" works again on devices.
- Fixes an issue in the Imagelist handling when a PictureGraphic with size(0,0) was saved.
- Fixed resizing issues of some scene objects by clicking on the border.
- Find Usage tab will not displayed as default after the application is started.
- Fixed sometimes occuring exception by opening the "Configure Mappings" dialog.
- Copied alarms have now a unique generated alarm number.
- "Project Icon" in "Project Properties" supports now transparency.
- OS Architecture depending desktop shortcut (32/64bit) will now created after the install process.
- Fixed an issue in the user defined browser selection in "Options->General->Web Browser"
- All color choosers are now from the same instance, also across projects. Recent used colors will be saved
- Fixed resize calculation issue on scene objects (DDO's)
- Fixed Variable Import from other projects
- Fixed calculation of 'List Item Height', when a List Object was put in another List Object.
- Fixed list height clculation when "Draw Border" is enabled or disabled.
- Fixed some issues in the Multimedia Player Object.
- Fixed issue in the CSV variable import functionality.
- Fixed that the number of "Parallel Supported Cameras" was not defined on some portrait device templates. This has caused that the "Display Video" property couldn't be configured..

infos

- Open and save dialog replaced through progress bar on the right bottom

corner.

- Green selection border for pages / alarms removed on scene.
- New YouTube Playlist added for the coming new Projektor Tool tour.
- Image Handling: All images will now be scaled SMOOTH. Looks much better...
- Projektor components like PClient, OS, UD4, ..., will now be extracted to the userdir "%AppData%\Roaming\toolchain-name"
- Projektor Tool can now be installed in "C:\Program Files" or "C:\Program Files (x86)"

Known issues

PClient 1.12.0

Features

- Optional sync parameter for JavaScript's writeToFile function (see JavaScript documentation).
- Touchscreen calibration of resistive touchscreens is now possible with the new JavaScript function startTouchCalibration(). See JavaScript manual for more details.
- CANopen: Added support for SDO Upload requests via JavaScript. No need to use CANFreestyle for that purpose anymore. See SDO Upload Request Support documentation in user manual (CANopen/JavaScript).
- A project icon can now be set in Projektor's project properties. This icon will be shown in the Windows task bar when running the PClient simulation.
- CAN bitrate can now be changed with the new variables @CAN1_Bitrate and @CAN2_Bitrate. These variables will be set to the value that is configured in the project. The CAN bus can now be switched off and on with the existing variables @CAN1_State and @CAN2_State.
- It is now possible to change the console mode of the device with the variable @ConsoleMode. See user manual variable documentation for details. This currently only works on i.MX 35 devices.
- PClient now follows the new versioning scheme of all applications. When running a beta release a popup dialog when starting will be shown.
- In preparation of expanded video functionality, all camera variables are now owned by PClient and not by HardwareDaemon. They should just work as before. No need to change anything in the project.

Bugfixes

- Improved drawing of button shadow.
- Fixed drawing of border corner pixels some rectangular ddo's on scene.
- Fixed table ddo scrolling. All rows are now reachable.
- Imported fonts are now correctly copied to the system font directory on iMX6 devices.
- String value of @BrandOwnerPartNumber is now always correctly nullterminated.
- Fix that UTF-8 characters from JavaScript were not correctly displayed.
- Beeper variables should be a bit faster and not "forget" beeps on i.MX6 devices.
- Fix bad drawing performance when a variable with invalid value is connected to a list object.
- Fixed crash that could happen when using CANopen mixed with CANFreestyle and SDO Upload Responses are received.
- Fixed that analog camera images were not correctly placed on rotated devices.
- Fix that the project release data was not correctly used in PClient.
- Fixed that the OnEscape event was not triggered when pressing escape

while a string field is edited with the string inplace editor.

- Fixed that encoder release events were executed on the new page after switching to the new page via encoder press event.
- Fixed that a repetition count of 2 works as expected for audio events and alarms.
- Fixed various alarm logging issues: Now every line of the variable log file contains a line break regardless of logging options. The alarm log is now synced to disk after each log entry. The option to log alarm variables is now correctly stored.
- Fixed event handling of MediaPlayer.
- Fixed wrong font attribute to be set when value of a numeric was changed by the owner of the attached variable.
- Fixed documentation of value range of @SensorTerminalTempC and @SensorSupplyVoltage.

Updater 1.12.0

Features

- Implemented update via Ethernet connection.
- Added new page for adding user files.
- Enhanced USB-Settings page. Now the USB device can be selected via USB device combo box. Added USB device auto-detection.
- Updated Transfer-Page: Now transfer speed is shown.
- The bootlogo of the device can now be changed via Updater and new project property options.

Bugfixes

- Several minor bugfixes

OS EGSPRO 1.1.2

Infos

- See the corresponding os release notes.

OS A3 2.1.1

Infos

- See the corresponding os release notes.

OS A6 2.1.1

Infos

- See the corresponding os release notes.

Toolchain 1.11.16

This OPUS Projektor Release contains the following software:

Projektor Tool 3.11.16

Updater 4.3.14

PCClient 2.15.16

ISO-VT 1.3.8

OS EGSPRO 1.1.1

OS A3 2.1.0

OS A6 2.1.0

Projektor Tool 3.11.16

Features

- USB drive for PCClient / OS update can be created by using 'Menu - Update - PCClient / OS Update'.
- The project update can be done by using 'Menu - Update - Project Update' (before: Quick Download).
- Introduced new 'START PAGE' when Tool is started. The start page contains

- e.g. 'Recently Opened Projects', 'Release Notes', 'Tutorials' and more.
- New Look and Feel themes are available. Default theme is 'Praxis Live', a nice dark theme.
 - Components on the 'Scene' like 'Encoder' are highlighted when mouse hovers over it. New behaviour can be disabled in Menu 'Tools - Options -> Scene'.
 - Graph object has new property 'Maximum Number Of Samples'.

Bugfixes

- Added menu entry 'Menu - Window - Reset Windows' which resets all windows to default size and position.
- Removed option 'Add Existing DDO' in 'List Item' menu of List object.
- Project tree and scene are now synchronized properly when a new page is added.
- The 'Project Date' in 'Projekt Settings' is now getting saved and can be used.
- Improved en-/disabling menu items requiring an active project.
- 'Drag and drop' a variable from 'Variable View' to 'Scene' is now working properly. Before sometimes the focus of the selected variable got lost.
- Enhanced sort algorithm for variable names in 'Variable View'.
- Fixed "" button of Virtual Keyboard.
- Improved 'Auto Backup' action. Now only the button 'Turn On Auto Backup' starts the backup thread. Before thread was started by editing the backup interval value.
- Fixed double entries of variables in 'Project Properties - Variable Logging'.
- Fixed setting property 'Table Column Spacing' of Table object.
- When a project cannot be opened, now a dialog will be shown, which shows the file that could not be read.
- The 'ID' of 'Font Attribute' objects is shown in 'Project - Properties - Font Attributes'. The ID is needed e.g. in JavaScript to change the 'Font Attribute' of an object.
- Removed the limitation of 'Preview Value' for following objects: Numeric Field, Linear Bargraph and Arched Bargraph. Limitations still apply for user input on device.
- When the language of a project is changed, the whole 'Scene' is updated immediately.

Known issues

- Value for script periods has to be provided in all periodic events. If no value is entered, the script will not run. This can happen when converting projects from Toolchain version less than 1.6.
- Both the folder for the installation of the Projektor Tool as well as project folders may not contain anything other than alphanumeric characters and special characters allowed for folder names in English Windows versions.
- After creating new 'Softkey Level' the assigned 'Softkey Event' e.g. 'ON_PRESS' is not getting saved. In that case the 'Event' has to be assigned twice. Workaround: First assign a 'child' to the 'Softkey' e.g. a 'String Field' or 'Numeric Field' and then add an 'Event'.
- Avoid using Variables with 'Data Type' Boolean for the 2D Graph. This can cause draw issues.
- In 'large' projects it can take some time until the load progress visualization will be shown.
- OPUS A5 and OPUS RVC are not supported anymore. Please use toolchain version 1.7.10 if working with these devices.
- Temporarily removed button 'Add Multiple Images' in 'List Items' dialog of List

object, because sometimes images are not saved properly.

- Project tree (communication part) is not synchronized properly, if index or sub index of a variable is updated in 'Variable Manager' and afterwards 'Cancel' is pressed.

Updater 4.3.14

Bugfixes

- Imported fonts are transferred to the panel again. This functionality was disabled since CAN was included in Updater.
- Device GUI does not start on panel if USB stick without Updater files is inserted. Before it started for every USB stick.
- Some minor improvements on PC GUI.
- Update does NOT start automatically if USB stick is connected while booting.
- Project path may now contain 'white space characters'.

PClient 2.15.16

Features

- Major update: Exchanged JavaScript engine (now QtScript is used). A JavaScript debugger is now available for the Windows simulation. See user manual JavaScript documentation for more details.
- The 2D Graph object was extended to store it's value history on disk instead of RAM. Now the history survives a reboot. See user manual for the 2D Graph for more details.
- If a red screen appears at startup complaining about a missing configuration file: Make sure that the used project was saved with the latest Projektor Tool version.
- You can now run portrait or landscape projects with the same PClient version. The rotation of the display is done automatically based on the project.
- Considerably faster cold-boot times.
- A warning message will be shown at each startup if a beta release of the PClient is used.
- 'Disabled' inputs are not only overlayed with a grey rectangle but also crossed out with two diagonal lines - this improves recognition on grey designs (mainly targeting ISO-VT). The cross is NOT displayed if 'only' the value is invalid (i.e. difference is small for most cases in PClient). In both cases the border of the grey rectangle is drawn non-transparent.
- New variable @FrequencyInput01 available.
- New variable @EnableServiceMode available. It can be used to trigger the OS updater to start after a reboot without using the serviceEnable pin.
- Changed behaviour of @UserButtonPressed and @UserButtonReleased: If no button (softkey) is pressed, @UserButtonPressed is set to -1, if a button is pressed, @UserButtonReleased is set to -1 (before that change it was 0 for both variables). Now ESC key press/release can be observed with these variables.
- All Beeper repetition variables are now initialized with value 0 instead of -1.
- All camera cropping variables were removed since cropping is now always automatically done by the OS driver.
- Restricted video width and height to max. 1024 (hardware limit). If a video frame or page is larger, black bars will appear.

Bugfixes

- Fix a crash when leaving a page with a multimedia player object displaying album art of an audio file.
- Fix that the "1/10s" tag in the variable log files were not correctly replaced (a

large number was shown instead of only one digit).

- Fix a possible crash when sending out CANOpen SDO download requests while responses to earlier requests are received.
- Fix that alarms were not logged to alarm logfile if ring buffer was disabled.
- Fix that alarms are only logged if the global alarm logging option is enabled.
- Function keys do now generate release events if a page is changed while the key is pressed. On the new page the (real) release event is ignored then.
- Remove unnecessary new line in alarm log file when logging is started.
- The "Offset 2" property of numeric fields can now be changed via JavaScript.
- 'Scale' factor of numerics is modified as before only for 10^x values, all other values are directly casted to 'double' precision internally. The reduction of precision we applied to all values before was only intended to make scale values such as '0.0001' produce the expected result but it spoiled values for those designs made for floating point calculation e.g. by using 2^y as scale values.
- A string variable's value can now be set in a OnValueChangeByOwner event without freezing.
- CANOpen: Fix issue of Transmit PDOs that have an inhibit time set.
- Digital input 1 now shows correct value even at startup.
- Fix that an event appeared several times in an event based log file while other events were not logged at all.
- Improved drawing performance of arched bargraph. Projects that use this object should now be a lot more responsive.
- Fix several hardware variable related issues (e.g. Low Power mode configuration, Camera inputs, encoder backlight color, keypad startup color, @MinDispBacklightIntensity, input measure mode and hysteresis).

Known issues

- The meaning of the values of variable @ActiveCamera changed! It used to be an enumeration (e.g. camera 1: 1, camera 2: 2, camera 3: 3). Now it is a BITFIELD (e.g. camera 1: 1, camera 2: 2, camera 3: 4). See variable reference documentation of @ActiveCamera in user manual!
- On i.MX 6 devices the actions of the "Three-Arrow-Key" will not be executed on an ISO-VT release. On a PClient-only release the actions will be executed but it is not possible to switch between open windows (e.g. when the PDF reader is opened, it has to be closed to return to the PClient window).
- When jumping to a different page onEncoderPress, a configured onEncoderRelease action is executed for the encoder on the new page when the encoder is released (for softkeys the onEncoderRelease event is automatically generated before the key is released and the new page is loaded).
- The onEscape event is not generated for StringField objects when pressing escape while the object is being edited with the string inplace editor.
- If the "Repetition Count" of an audio file in the audio output configuration dialog of an event is set to 2, it will only be played back once on the device (all other repetition counts work as specified).
- When jumping to a new page with the onPress event of the multimedia player object, the release event will not be generated.
- When alarms are logged to a file (instead of the ring buffer) disabling the option "Log Alarm Variable Values" is only working for the first time the PClient is started after a project update (and then the log file will have no line breaks). The next time the device reboots or PClient is restarted, the option is enabled

again. We recommend to leave the "Log Alarm Variable Values" enabled until this behaviour is fixed with a future release.

- When updating the OS of an i.MX6 device via the new PClient/OS update function, the boot logo on the device is not included and will be removed from the device during the update. A new boot logo image can either be placed on the generated USB stick before the update (logo.bmp and logo.bmp.md5) or it has to be installed manually after the update.
- Documentation for variable '@SensorTerminalTempC' is wrong: Resolution is 1°C, not 0.1°C.
- Documentation for variable '@SensorSupplyVoltage' is wrong: Resolution is 1 mV, not 10 mV.

ISO-VT 1.3.8

Features

- Opus A6 generation 2 and Opus A8 are now supported by the VT.

Bugfixes

- Made sure that every command execution (including macros triggered by it) is completely finished before the response is sent.
- Made sure that an object is not 'open for input' anymore when VT sends out the value change messages.
- It's possible now to 'select' an object that was just made visible in the same macro. Before the command failed because the object was still invisible when the command was executed. Downside is that we now accept the command even if the object should not become visible.
- 'Control audio' command is executed even if beeper is active AND an alarm mask is shown - as long as the beeper is NOT playing the sound of the alarm mask. Before we didn't care which sound the beeper was playing and let the command fail. Then while an alarm was shown one could not even terminate a sound created with the same command.
- Meter object counts tick correctly even for a full circle. Before it was only correct for smaller angles.
- Numeric virtual keyboard shows limits more intuitively if a negative 'scale' value is used.
- String object internally uses Unix line breaks ('LF') only so that edited strings never become longer than they were in the original pool object.
- String virtual keyboard now even accepts empty strings. This is a requirement of AEF conformance test.
- Line object is now drawn as required by AEF conformance test.
- Recalculate displayed value if min- or max-value are changed at runtime. Before the limited value was still shown until e.g. the value to be shown changed. Found by conformance test at Plugfest.
- Even rectangles of width or height 1 are displayed now (before nothing was shown).
- Reducing an object to height or width 0 now makes sure it gets hidden. Before the last size stayed on screen until e.g. the whole object was moved.
- Fix some responses based on findings of conformance test at Plugfest - including 'get versions' response if nothing is stored and 'VT change string' for up to 3 characters.
- Parsing progress bar runs more smoothly, esp. for bigger pools.
- Diagnostic protocol is now reporting 'self certified by WE' rather than referencing the old DLG test.
- When editing a list object it is made sure that even the scrollbar stays within

the datamask area. Like that one can scroll down even if system buttons are shown on an ECO device.

- List objects now show an ESC and OK button while editing in order to match the virtual keyboards. Anyways OK is the same as touching the desired item and ESC the same as touching outside the list.
- Transparency and size of images can be modified independently (again). Before it could happen that changing transparency returned the image to its 'raw' size.
- Flashing via font attributes can be switched off now even if the DDO is currently not drawn on screen. Before it started flashing again when showing it again.
- J1939 tries to claim the following addresses (in this order): (1) address used last time (2) preferred address (3) any free address. Before "(2) preferred address" was missing in this enumeration.
- VT status message does not report showing a new object pool on screen while an internal alarm mask is shown actually. Before every new pool was expected to be shown in any case (but wasn't due to enforced alarm priority). Additionally it is made sure that the latest pool will show once the alarm is gone.
- Parsing bit is also set when loading a pool. Before it was only set when actually parsing a new pool.
- 'End of object pool response' now sets the 'missing object' bit correctly. Additionally the correct parent ID is returned in case a child of a data or alarm mask is missing.
- Alarms for status messages now maintain a list of up to 10 clients (although max. three are shown). This allows to correctly show pool icons once three or less are missing.
- Aux pointer objects show correct icon even if a new preferred assignment command arrives.
- Aux inputs are disabled now when last assigned function gets removed. Before they stayed active.
- Aux screen only shows after update of an aux object if it was visible before i.e. if a preferred assignment command was received already. Before it appeared whenever an aux object was updated.
- Aux screen now remembers all modifications made even when switching to another aux function pool. Before only the modifications on the pool currently shown were remembered.
- Data masks with (very) many object don't slow down the whole VT anymore. This was achieved by optimized handling of "flashing" property.
- Object loops are now broken, before the first object in the loop is shown on screen for a second time. Before they were broken after the first duplicate was created.
- 'Change string value' command now works correctly even for 3 or less character values in macros. Before command basically worked but next macro command was not found. (pConvert had/has the same bug)
- Macro commands are checked while parsing.
- Macro execution is terminated if an invalid command is found. (Should not occur anymore due to fix above)
- Pool updates replacing objects with similar objects i.e. only modifying attributes with the update are processed much faster now - the pool is still hidden and shown again in the process though.
- Images are accepted even if they contain more pixels than required for their

size. Additionally image handling is cleaned up internally.

- Colors for the system buttons is read correctly from configuration file even if most significant bit is set i.e. alpha value is greater than 127. Before these colors were transformed to 0 (fully transparent white).
- System buttons also get a nicer design by default.
- Display settings project: Time and date settings are easier to use with touch screen and use a font without serifs as the rest of the project. Additionally made sure the date format is displayed according to current settings at any point of time.
- Use grey list background while list is open for input. This prevents 'invisible' transparent objects. Before page background color was used in 'touch input mode' (more or less with VT only), now the list background color is used in any case and for ISO pools it's set to a grey color not existing in ISO color table.

Known issues

- For Opus A8 system buttons will be shown on all devices since automatic detection of keys and encoder does not work currently. In order to switch them on/off, the following section in file 'a8s.conf'/'a6s.conf' has to be modified:
[NOTE: Need paragraphs or similar in release notes.] system-buttons: { show = true; // true: show buttons, false: use dedicated function keys
- Sounds <= 100ms triggered via 'control audio' command are not played sometimes.

OS EGSPRO 1.1.1

Infos

- See the corresponding os release notes.

OS A3 2.1.0

Infos

- See the corresponding os release notes.

OS A6 2.1.0

Infos

- See the corresponding os release notes.

Toolchain 1.10.12

This OPUS Projektor Release contains the following software:

Projektor Tool 3.10.12

Updater 4.3.10

PClient 2.14.10

OS EGSPRO 0.7.0

Projektor Tool 3.10.12

Features

- Variable reference included in HTML help.
- Improved support for OPUS A8 panel.
- Introduced multimedia player object.
- Zoom on designer area is now centered on mouse cursor. Before it was centered at top left corner.
- Improved variable import feature.
- Improved WYSIWYG for string wrapping.

Bugfixes

- STOP (ISO_KEY) will now added to each page and alarm after project conversion with old "OPUS A8" panel to "OPUS A8 Standard".
- Wrong colors in table for predefined alarms fixed ("Project properties -> Alarms").

- New image handling now uses the scaled image if the original image cannot be found in respective folder. Before project conversion failed in this case.
- For the three predefined emergency alarms in project properties one can only modify the audio files. In earlier 3.10.xx versions one could edit all parameters.
- EDS file creation: All CAN baudrates defined for CANopen are covered again. In earlier 3.10.xx versions 10 kBit/s and 800 kBit/s were missing because they are no longer selectable in Projektor.
- Some variable definitions were updated. E.g. minimum camera width and height has to be 8 pixels now. @EncoderBacklightIntensity and @EncoderBacklightColor were added.
- Selectable video and audio formats e.g. for multimedia player are more restricted than in earlier 3.10.xx versions. Removed were those leading to license fees even if they are unused.
- Fix keycode on OPUS A8 portrait for new function key with octagon.
- Thumbnails in image dialog will be updated even if the file changes on disk while Application is open already. Before they were only updated when selecting another image intermediately.
- DM1/DM2 dialog is now initialized properly and combo boxes are filled correctly.
- Project converter can now handle images of size 0 bytes.
- Internal image handling now properly deals with the same image provided under more than one file name. Before this lead to loss of images because the duplicate was only recognized in one place.
- Fix some minor issues regarding new multimedia player and audio for events.
- CAN baudrates of 10 kBit/s and 800 kBit/s are not supported anymore. If they should have been used the project converter will issue a warning.
- Improved conversion of projects from ECO to standard device of the same family.
- Better integration of modified Universal Downloader.

Updater 4.3.10

Features

- New Updater GUI with CAN transfer integrated.

PCient 2.14.10

Features

- Multimediaplayer DDO added for devices with audio output (i.e. not only a beeper). It is highly configurable and can also be controlled via Javascript. See user manual for details.

Bugfixes

- Fixed crash in action queue.
- Table object has additional property 'Highlighted Row' now and makes sure that this row is visible in the object's drawing area.
- Object drawn on top of video frames are refreshed correctly.
- 'On value change' event is triggered even if no variable is attached to the DDO. I.e. it's triggered if value is edited by operator. It is not triggered though if 'Preview Value' is modified via Javascript.
- Changing visibility value does not trigger 'on value change' event of the DDO anymore.
- An object directly connected to encoder stays 'open for input' even if an alarm is shown. Before an ESC was sent and this still happens if navigation scheme is active.
- Home key only jumps to home page on key release now. Before it jumped on

press and on release which could trigger nasty side-effects.

- Virtual keyboard now correctly supports all UTF-8 characters. Before only characters encoded in one byte were supported.
- Alarm display time is now calculated from the point of time when the alarm is actually shown. I.e. now (minimal) display time is enforced correctly. Before it started when the alarm was enqueued.
- Visibility now even works for flashing objects. Events of these objects are triggered even while flashing object is in hidden state while flashing. Before visibility and flashing conflicted because they relied on the same internal attribute.
- Encoder now supports double click event and also updates variable '@UserButtonDoubleClick' accordingly.
- When encoder action is configured for a page it will NOT be executed while an alarm is shown on top of the page. Before both actions were triggered if the alarm had an action configured for the same event.
- When jumping to a page which is excluded from page history, pre-defined variables '@ProjektHistoryPage1-5' won't be updated.
- Javascript creates correct error message if trying to write to inexistent folder. Before it reported insufficient disk space in this case.
- "/opt/user_files" directory will now be created automatically if it does not exist when using the JavaScript 'writeToFile' method with a filePath parameter that starts with "/opt/user_files/".
- Variable '@EnableUpdater' has an extended value range so that it can (de)activate USB and CAN updates separately.
- Window managing for OPUS A8 is re-implemented for Qt5 on X11.
- New variable '@ProjektTakeScreenshotName' allows setting a specific name for the screenshot file. Before files had to be identified by their generation time encoded in the file name.
- PCClient simulation on Windows now supports foreign characters in image path and image name.
- PCClient simulation on Windows now simulates 'low power' state for 20 seconds when pressing 'i' on the PC keyboard. This can help checking actions configured for power events.
- Fix crash occurring when an action tried to access an object which was just deleted from screen.
- Multimedia player shows dashes ("--:-- / --:--") now rather than an invalid time.
- Multimedia player goes to 'stop' state if end of playlist is reached and loopmode is off. Before it stopped playing but e.g. play button stayed 'pressed'.
- Multimedia player does not create video object if it should play audio only. A 'shuffle' button outside of the multimedia player object can now be registered with multimedia player.
- Many smaller fixes to make multimedia player operate more smoothly.
- OPUS A8 shows rotated camera images correctly, even for the portrait variant. Camera handling of OPUS A3 and A6 is more reliable now - at the price of a 2 seconds delay before it becomes visible.
- Page history does not contain the same page consecutively anymore. This could happen if a certain page was removed from history and the same page was shown before and after the removed one.
- All hardware variable values are available in project init script already. Before the values could arrive later. This fix does not increase startup time - we only rearranged some initialization steps.

- '@FrequencyInput01' variable now works for devices providing such an input.
- A 'jump to page' in project init script does not crash the application anymore.
- '@Revision' variable does not exist anymore - never found a reliable source for the value.
- 'Light sensor limited to max value of 1000.
- '@BeeperClickOn' should work more reliable.
- Make digital output 3 writable.
- Invert logic of digital output loopback values (when 1 is set to digital output, the loopback will also show 1 now).
- 'Traditional' string input with encoder instead of virtual keyboard works again and does not crash the system anymore.
- New function key with the octagon is supported for all devices (i.e. it would even work for e.g. OPUS A3 if it would send the respective keycode internally).
- If red error screen appears at startup it can now be confirmed with touch screen. It still terminates PCClient but doesn't crash it anymore.
- Removed check for touch calibration from all start scripts - BSP does that by itself for

OPUS devices update manual

16 OPUS devices update manual

16.1 Overview

OPUS devices run different kinds of software, depending on the ordered product variant. Here is an overview of the different software types:

- **OS** – Operating System (before: BSP - Board support package)

This is the operating system of the device, a customized embedded Linux. It is installed on every OPUS A3 / A6 / A6 G2 / A8 device. If you are programming with C / C++ / Qt, you only need to install the OS files.

- **PClient** – Projektor Client

This software is installed on devices that were ordered as CAN devices (e.g. article number OPUSA3EN1**CANF**000). The PClient is the counterpart of the Projektor Tool on the PC and part of the OPUS Toolchain.

- **Codesys Runtime**

This software is installed on devices that were ordered as CDS devices (e.g. article number OPUSA3EN1**CDSF**000) or Codesys Webvisu devices (CWV, e.g. article number OPUSA3EN1**CWVF**000). It is the counterpart of the Codesys development environment on the PC. The Codesys runtime contains a per-device license and runs only on devices with CDS in the article number.

Please note that you can also install the PClient on Codesys devices.

- **ISO-VT**

This software is installed on devices that were ordered as ISO devices (e.g. article number OPUSA3EN1**ISOF**000). ISO-VT (Virtual Terminal) is part of the standard ISOBUS. ISO-VT contains a per-device license and runs only on devices with ISO in the article number.

Please note that you can also install the PClient on these devices.

Please note that this software is not developed further.

- **ISO-V2**

This software is installed on devices that were ordered as ISO V2 devices (e.g. article number OPUSA8SN1**UTLF**000). ISO-V2 is part of the standard ISOBUS. The ISO V2 software only runs on devices with UT in the article number (or ISO in case of the B3). Upgrades can be bought to extend the functionality.

- **UT Plugin**

This software is installed on ISO devices that were ordered as UT Plugin devices (e.g. article number OPUSA8SN1**ISOF**000). Note that the code is the same as the old ISO-VT solution. The UT Plugin is installed within the PClient (except for B2 where there are 2 sets of PClient files).

To be sure you have the latest software running on the devices, please always perform a software update on devices you purchased.

© 2024 Topcon Electronics GmbH

All rights reserved. Unless otherwise specified, no part of this document may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the address below.

Topcon Electronics GmbH
Industriestraße 7
65366 Geisenheim
Germany

Phone: +49 6722 4026 0
E-Mail: opus-support@topcon.com
Web: www.topcon-electronics.com

16.2 Contents of the software update

In this chapter, the files that are used for the different update parts are described.

16.2.1 OS 1.x for A3 / A6G1

The OS 1.x contains the following files:

Redboot_RAM.bin – a binary image with the bootloader
zImage – a binary image with the Linux kernel
zImage.service – a binary image for the service mode
rootfs.jffs2 – a binary image with the JFFS2 root file system
logo.png (optional) – a boot logo which is displayed at every system start

Additionally, there is an md5 checksum file for each of the above files which are used to check the integrity of the files in the installation.

OS 1.x is not developed any further and should not be used for new development projects.

16.2.2 OS 2.x for A3 / A6G1

The OS 2.x contains the following files:

Boot_opusaX_2.X.bin – a binary image with the bootloader
Redboot_RAM.bin – a binary image with the bootloader for an update from an older (1.x) OS version (only necessary when updating from a BSP < 2.x)
linux_opusaX_2.X.bin – a binary image with the Linux kernel
service_opusaX_2.X.bin – a binary image for the service mode
zImage.service – a binary image for the service mode for an update from an older (1.x) OS version (only necessary when updating from a BSP < 2.x)
rootfs_opusaX_2.X.squashfs – a binary image with the squash root file system
logo_opusaX_2.X.png (optional) – a boot logo which is displayed at every system start

Additionally, there is an md5 checksum file for each of the above files which are used to check the integrity of the files in the installation.

16.2.3 OS EGSPRO for A6G2 / A8

The OS EGSPRO contains the following files:

boot_egspro_X.X.X.bin – a binary image with the bootloader

pmic_egspro_X.X.X.sud – a binary file with the firmware for the power management circuit

rootfs_egspro_X.X.X-we-x11-qt5.tar.gz – Root file system package including the Linux kernel

dev-tree_egspro_X.X.X.tar.gz – Device tree file to install the correct device configuration into the device

ulmage – update RAMDISK image (optional, only if a 0.x OS is installed before)

logo_egspro_a6-we-landscape.bmp (optional) – boot logo for A6 for normal start

recovery_egspro_a6-we-landscape.bmp (optional) – boot logo for A6 for service mode

logo_egspro_a8-we-landscape.bmp (optional) – boot logo for A8 for normal start

recovery_egspro_a8-we-landscape.bmp (optional) – boot logo for A8 for service mode

update.img (only for upgrade from 1.x to 2.x **and from 1.x or 2.x to 3.x**) – updater image file

Additionally, there is an md5 checksum file for each of the above files (except for the ulmage file) which are used to check the integrity of the files in the installation.

16.2.4 OS EGSCORE for B3 / B4 / B6

The OS EGSCORE contains the following files:

boot_egscore_X.X.X.bin – a binary image with the bootloader

boot-recovery_egscore_X.X.X.bin – a binary image with the service mode bootloader

rootfs_egscore_X.X.X-we-x11-qt5.tar.gz – Root file system package including the Linux kernel

dev-tree_egscore_X.X.X.tar.gz – Device tree file to install the correct device configuration into the device

copro_egscore_X.X.X.tar.gz – PMIC and COMIC update file

service_egscore_x.bin – Service kernel

logo_egscore_b3-te-landscape.bmp (optional) – boot logo for normal start

recovery_egscore_b3-te-landscape.bmp (optional) – boot logo for service mode

update.img – updater image file (not in all releases)

Additionally, there is an md5 check sum file for each of the above files which are used to check the integrity of the files in the installation.

16.2.5 OS 1.x for B2 / B2+

The OS 1.x for the OPUS B2 / B2+ contains the following files:

boot_opus-b2_1.0.0.bin – a binary image with the runtime bootloader

spl_opus-b2_1.0.0.bin – a binary image with the very first bootloader

rootfs_opus-b2_1.0.0-te-linuxfb-qt5.tar.gz – Root file system package including the Linux kernel

dev-tree_opus-b2_1.0.0.tar.gz – Device tree file to install the correct device configuration into the device

service_opus-b2_1.0.0.bin – Service kernel

logo_opus-b2-te-landscape.bmp (optional) – boot logo for normal start

recovery_opus-b2-te-landscape.bmp (optional) – boot logo for start in service mode

Additionally, there is an md5 check sum file for each of the above files which are used to check the integrity of the files in the installation.

16.2.6 OPUS Toolchain – PClient (and UT Plugin)

The PClient consists only of one file:

user.tar.gz – zipped package with PClient executable, additional files and standard project
(**user_opusax_x.y.tar.gz** for OS 2.x, **user_egspro_x.y.tar.gz** for EGSPRO OS,
user_egscore_x.y.tar.gz for EGSCORE OS, **user_opus-b2_x.y.tar.gz** for B2 OS 1.x)

Additionally, there is an md5 checksum file for this file which is used to check the integrity of the files in the installation.

The UT plugin is always included in the PClient file except for B2 where there are two files, one with and one without because of startup time optimizations.

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

16.2.7 Codesys

The Codesys runtime consists only of one file (OS 1.x):

user.tar.gz – zipped package with Codesys executable, additional files and service project

For OS 2.2.4 and newer, there are two files:

user_opusaX_x.y.tar.gz – zipped package with Codesys executable and additional files
user2_opusaX_x.y_Service.tar.gz – zipped package with service project

For OS EGSPRO there are two files:

user_egspro_x.y.tar.gz – zipped package with Codesys executable and additional files
user2_egspro_x.y_Service.tar.gz – zipped package with service project

For OS EGSCORE there are two files:

user_egscore_x.y.tar.gz – zipped package with Codesys executable and additional files
user2_egscore_x.y_Service.tar.gz – zipped package with service project

For OS 1.x for B2 there are two files:

user_opus-b2_x.y.tar.gz – zipped package with Codesys executable and additional files
user2_opus-b2_x.y_Service.tar.gz – zipped package with service project

Additionally there is an md5 checksum file for these files which are used to check the integrity of the files in the installation.

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

16.2.8 ISO-VT (deprecated)

The ISO-VT program consists only of one file:

user.tar.gz – zipped package with PClient and VT (virtual terminal) executable, additional files and ISO-VT settings project (**user_opusax_2.x.tar.gz** for OS 2.x,
user_egspro_x.x.tar.gz for EGSPRO OS)

Additionally there is an md5 checksum file for this file which is used to check the integrity of the files in the installation.

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

16.2.9 ISO-V2-Horizon

The ISO-V2 Horizon program consists of these files:

\boot – folder with device tree files

Console.ini – settings file

egspro-quad/egscore-checksums.txt – checksums for all the other files, to control file validity during installation

egspro-quad/egscore-x-extras.img – additional install packages

egspro-quad/egscore-x-install.sh – install script for the update

egspro-quad/egscore-x-rootfs.img – package with the OS and ISO application

hostnames – reference file for device MAC addresses

pkginfo.sign – checksum file

pkginfo.json – checksum file

ulmage – updater image that installs the update

There are currently three types of this release:

A6_TELE: only for OPUS A6 Generation 2 Dual Core devices (e.g. OPUSA6EN2UTXD000)

A8_TELE: only for OPUS A8 Quad Core devices (e.g. OPUSA8EN2UTXF000)

BSERIES_TELE: only for OPUS B3 / B4 / B6 devices (e.g. OPUSB4EN1UTXF000)

**Please note that no other OS files from other releases are
needed in addition to the files listed here! These files contain
everything**

Please note that the boot logo cannot be changed with these devices like it can for OPUS devices. If you need to change the boot logo, please contact opus-support@topcon.com

16.3 Updating the device

In this chapter, the update process for the different device types is described.

16.3.1 OPUS A3 / A6 G1

The first step to update the device is to **copy the update files on a USB stick**. The USB stick has to be **FAT32 formatted** with only **one partition**.

Copy the OS and/or the files for the application that should run on the device into the root folder of the USB stick. The USB stick may contain other data, they will be ignored.

You can find the update files in the extracted zip file that you downloaded / got on your USB stick.

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

For **OPUS Projektor**: Starting from OPUS / WE Toolchain 1.11, the update files for the devices are included in the Projektor Tool. Go to the menu Update -> PClient / OS Update. In the dialog you can choose for which device you want to copy the OS and PClient files on the USB stick.

For older versions, check the downloaded zip file:

\\PClient\\OPUSAx\\OPUSA3L(andscape)_BSP_PClient_Update (for landscape, for portrait it's OPUSA3P(ortrait)_BSP_PClient_Update)


For **ISO-VT**: \\OPUS Ax

For **Codesys**: \\CustomerFiles\\Device\\OPUSAx

Power off the device and connect the USB stick with the update files with the USB port of the device (both the front USB slot and the USB cable from the main connector can be used).

There are **two ways to start the device in update mode**, you can use either one of them (but you don't need to do both!):

- a) **Connect the clamp "Serv_EN" (service enable) with clamp 15 and 30 and then power on the device.**

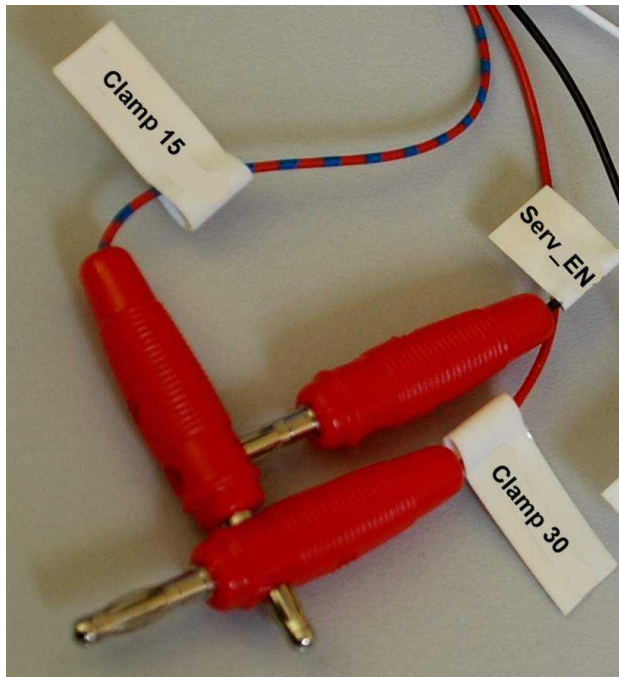

After some seconds a screen with “Maintenance” will be displayed. At this point please **disconnect the clamp “Serv_EN”**, otherwise the update will be done again after restart.

- b) **Press the left keys 1 and 2** and then **power on the device** while holding the keys (works only if you have a product version with keys).



After some seconds a screen with “Maintenance” will be displayed. At this point you can let go of the keys.

Sometimes it happens that the update doesn't start initially and asks for a USB stick. If the update process didn't start for about a minute, please disconnect the USB stick and connect it again. Then the update will start.

Let the update run through completely. Don't disconnect the power when the reboot countdown is displayed

Once the device restarted, there will be a touch screen calibration process, if the device has a touch screen. You can read about that process here.

16.3.1.1 Updating from OS 0.x / 1.x to 2.x

Warning: All files in /opt will be deleted with this update.

You can't update from OS 0.x to 2.x directly, please update to 1.x first

If you still have an OS 0.x on your device, please first update to a 1.x OS. You can't directly update from OS 0.x to OS 2.x!

Due to a change in the file system the update from 1.x to 2.x will be done in **two steps**. In the first step only the two files redboot_RAM.bin and zImage.service will be installed.

After that the device is restarted and the other files are installed.

The second start can take up to 3 minutes because the mass storage has to be initialized with the new file system.

16.3.1.2 Downgrading from OS 2.x to 1.x

Warning: All files in /opt and /diag will be deleted with this update.

Due to a change in the file system the **downgrade from 2.x to 1.x has to be done in two steps**. In the first step, the updater will only install the following files from the OS 1.x update:

- redboot_RAM.bin
- zImage
- zImage.service
- rootfs.jffs2

There **MUST NOT** be any files from an OS 2.x on the USB stick, because then the updater will try and install these files and ignore the 1.x update files. You can put all OS 1 files on the stick, though.

After this downgrade has been installed, a second update can be done which includes the boot logo and the desired application (user.tar.gz file).

16.3.2 OPUS A6 G2 / OPUS A8

The first step to update the device is to **copy the update files on a USB stick**. The USB stick has to be **FAT32 formatted** with only **one partition**.

Copy the OS files and/or the files for the application that should run on the device into the root folder of the USB stick. The USB stick may contain other data, which is okay, they will be ignored. You can find the update files in the extracted zip file that you downloaded / got on your USB stick.

Warning: When upgrading to OS EGSPRO 2.x, a downgrade to EGSPRO 1.x is NOT POSSIBLE!

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

**To update from EGSpro 1.x to EGSpro 2.x, the additional files
update.img and update.img.md5 must be included on the
update USB stick.**

**To update from EGSpro 1.x or 2.x to EGSpro 3.x, the additional
files update.img and update.img.md5 must be included on the
update USB stick.**

For **OPUS Projektor**: Starting from OPUS / WE Toolchain 1.11, the update files for the devices are included in the Projektor Tool. Go to the menu Update -> PClient / OS Update. In the dialog you can choose for which device you want to copy the OS and PClient files on the USB stick.


For older versions:

\PClient\EGSPRO\OPUSA3L(andscape)_BSP_PClient_Update (for landscape, for portrait it's OPUSA3P(ortrait)_BSP_PClient_Update)

For **ISO-VT**: \EGSPRO

For **Codesys**: \CustomerFiles\Device\EGSPRO

Power off the device and connect the USB stick with the update files with the USB port of the device (both the front USB slot and the USB cable from the main connector can be used). **Connect the clamp "Serv_EN"** (service enable) **with clamp 15 and 30** and then **power on the device**.

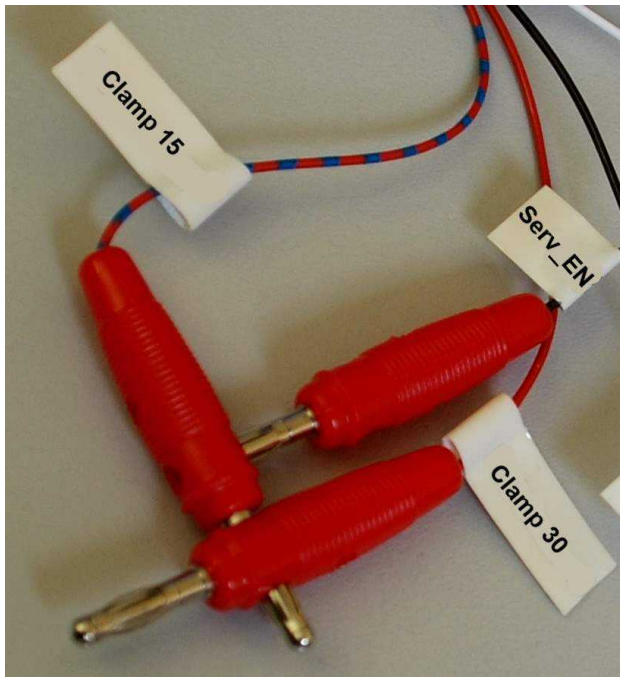

or



Alternatively, you can also press left keys 1 + 2 for A6 G2 Standard, keys 1 and stop for OPUS A8 Standard, during power on.

After some seconds a screen with "Maintenance" will be displayed. At this point please **disconnect the clamp "Serv_EN"**, otherwise the update will be done again after restart.

The service mode can also be reached via software, i.e. you could integrate a "start into service mode" functionality in your project. Please check the corresponding application documentation for details.

With a new device you can set the flag directly in the default project. For a PClient device navigate to Service Project -> System -> Service Mode. For a Codesys device navigate to Daemon -> HMD -> Bootmode.

16.3.3 OPUS B3 / B4 / B6

The first step to update the device is to **copy the update files on a USB stick**. The USB stick has to be **FAT32 formatted** with only **one partition**.

Copy the OS files and/or the files for the application that should run on the device into the root folder of the USB stick. The USB stick may contain other data, which is okay, they will be ignored. You can find the update files in the extracted zip file that you downloaded / got on your USB stick.


Warning: When upgrading to OS EGSCORE 1.4.x, a downgrade to EGSCORE 1.y with $y < 4$ is NOT POSSIBLE!

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

For **OPUS Projektor**: Go to the menu Update -> PClient / OS Update. In the dialog you can choose for which device you want to copy the OS and PClient files on the USB stick.

For **Codesys**: \CustomerFiles\Device\EGSCORE

Power off the device and connect the USB stick with the update files with the USB port of the device (both the front USB slot and the USB cable from the main connector can be used). **Connect the clamp "Serv_EN"** (service enable) **with clamp 15 and 30** and then **power on the device**.

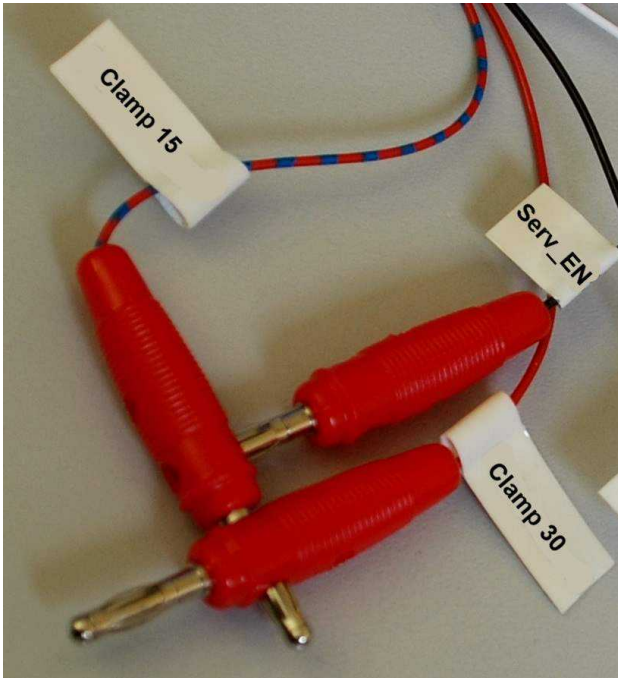

or



After some seconds a screen with “Maintenance” will be displayed. At this point please **disconnect the clamp “Serv_EN”**, otherwise the update will be done again after restart.

The service mode can also be reached via software, i.e. you could integrate a "start into service mode" functionality in your project. Please check the corresponding application documentation for details.

With a new device you can set the flag directly in the default project. For a PClient device navigate to Service Project -> System -> Service Mode. For a Codesys device navigate to Daemon -> HMD -> Bootmode.

16.3.4 OPUS B2

The first step to update the device is to **copy the update files on a USB stick**. The USB stick has to be **FAT32 formatted** with only **one partition**.


Copy the OS files and/or the files for the application that should run on the device into the root folder of the USB stick. The USB stick may contain other data, which is okay, they will be ignored. You can find the update files in the extracted zip file that you downloaded / got on your USB stick.

**In Windows, the user.tar files are often shown as zip files.
Never unzip these files or the update won't work!**

For **OPUS Projektor**: Go to the menu Update -> PClient / OS Update. In the dialog you can choose for which device you want to copy the OS and PClient files on the USB stick.

For **Codesys**: \CustomerFiles\Device\OPUS_B2

Power off the device and connect the USB stick with the update files with the USB port of the device (both the front USB slot and the USB cable from the main connector can be used). **Connect the clamp "Serv_EN"** (service enable) **with clamp 15 and 30** and then **power on the device**.

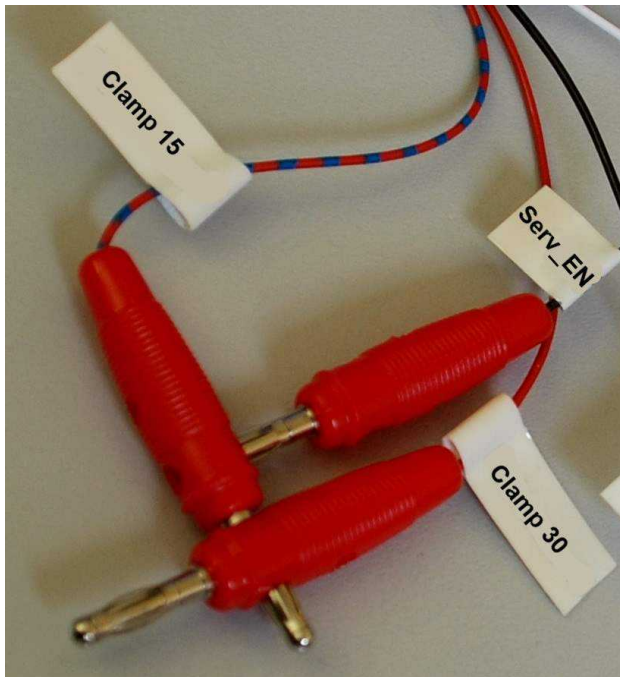

or



After some seconds a screen with “Maintenance” will be displayed. At this point please **disconnect the clamp “Serv_EN”**, otherwise the update will be done again after restart.

The service mode can also be reached via software, i.e. you could integrate a "start into service mode" functionality in your project. Please check the corresponding application documentation for details.

With a new device you can set the flag directly in the default project. For a PClient device navigate to Service Project -> System -> Service Mode. For a Codesys device navigate to Daemon -> HMD -> Bootmode.

16.3.5 ISO-V2-Horizon

The first step to update the device is to **copy the update files on a USB stick**. The USB stick has to be **FAT32 formatted** with only **one partition**.

Copy the correct update files for the device into the root folder of the USB stick. The USB stick may contain other data, which is okay, they will be ignored. You can find the update files in the extracted zip file that you downloaded / got on your USB stick.

There are two ways to start the update process.

1. Via Setup menu (Please use this method)

Insert the USB stick with the update files into the running device.

On the device, go to the menu

User -> Utilities or **System -> Utilities** (depending on the currently installed version)

and you will see an entry **CONSOLE SOFTWARE UPGRADE**. Please select this entry.

There will be a warning dialog "Operation Requires Restart". Confirm the dialog by pressing the green checkbox button.

Then the device will restart and the update will be installed.


Please note that the menu entry is only active if valid update files are on the USB stick.

2. Via Service mode (Please DON'T use this method, as licenses and settings can be deleted)

Power off the device and connect the USB stick with the update files with the USB port of the device (both the front USB slot and the USB cable from the main connector can be used).

There are **two ways to start the device in update mode**, you can use either one of them (but you don't need to do both!):

- a) **Connect the clamp "Serv_EN" (service enable) with clamp 15 and 30 and then power on the device.**

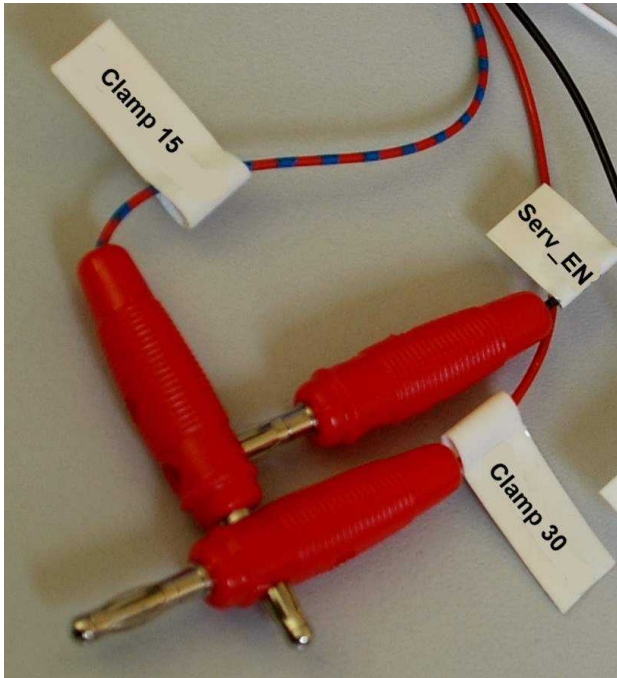

or



After some seconds please **disconnect the clamp “Serv_EN”**, otherwise the update will be done again after restart.

- b) **Press the left keys 1 and 2** and then **power on the device** while holding the keys (works only if you have a product version with keys). After some seconds please let go of the keys.



When the update starts, you will see a small bar graph in the bottom of the screen. Once the bar graph is filled, the device will restart and the update was successful.



16.3.6 Update via partition

It is possible to update OS and application without a USB stick (not valid for ISO-V2). For this, the files have to be put into a special folder that might have to be created at first.

For A3/A6G1: **/opt/var/update**

This folder might have to be created first:

```
mkdir /opt/var/update
```

For A6g2/A8/B2/B3/B4/B6: **/var/shadow/update** (without update images or ulmage files)
For A6g2/A8/B2/B3/B4/B6 you can also put a ulmage file into: **/var/shadow/boot**

To use the partition, it needs to be remounted as read-write first:

```
mount -o remount,rw /var/shadow
```

16.4 Additional information


16.4.1 Connecting to the serial console

You can connect to the serial console of the device to change the boot logo, read debug and error messages and copy files and folders.

You need to connect your computer to the RS232 interface of the device, either directly with an RS232 cable, if your computer has the according connector, or with a RS232 <-> USB cable.


You can use any shell program, such as HyperTerminal (only up to Windows XP), PuTTY or TeraTerm VT (both free and open source).

These are the settings you need to make in your software:

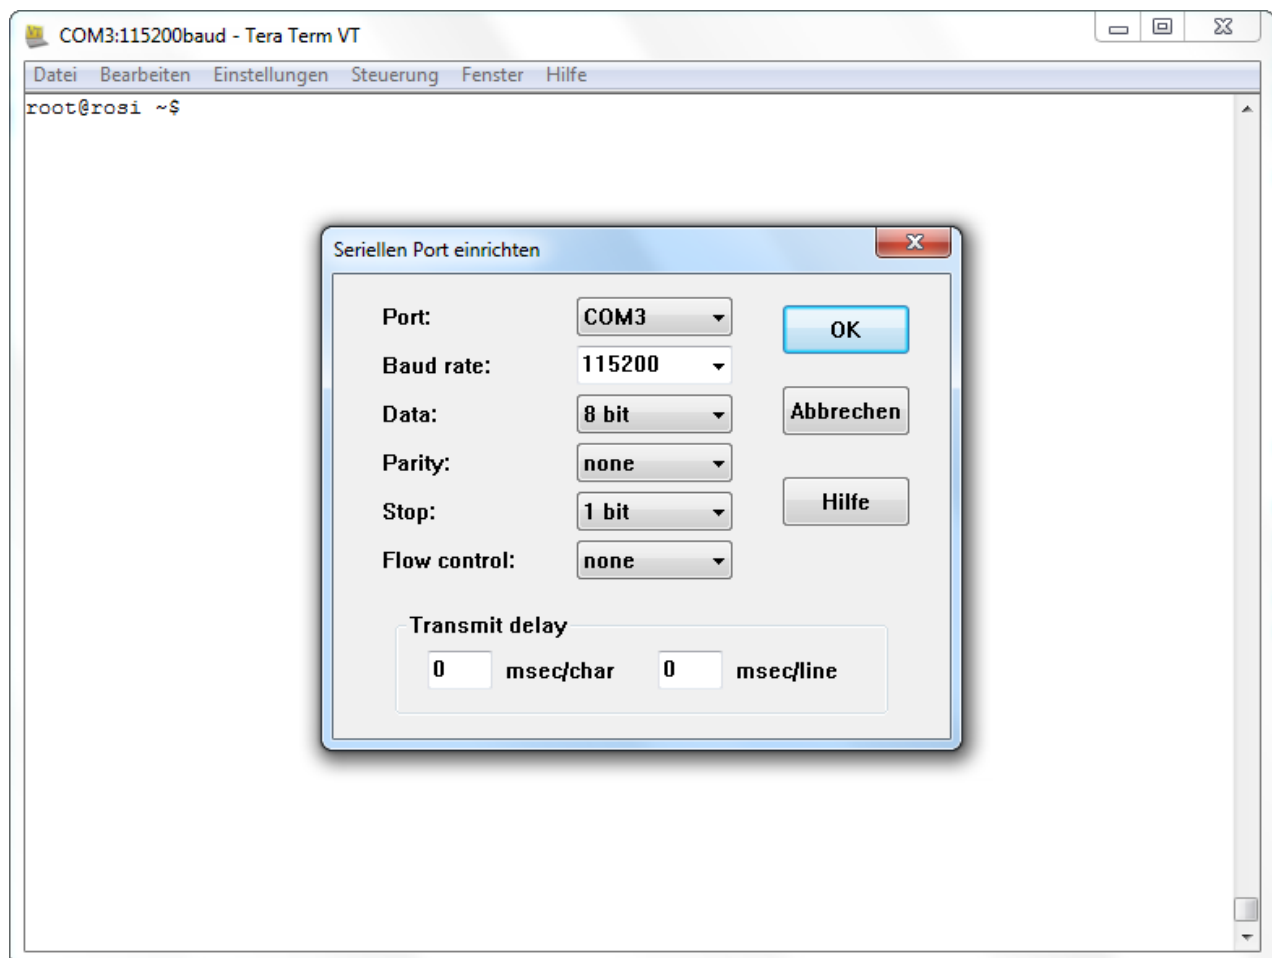

The COM-Port can differ depending on your system.

If you start up the device with the console connected, you will see a lot of startup messages. If you connect while the device is running, you might not get any messages at first. Just press enter to get the login dialog:

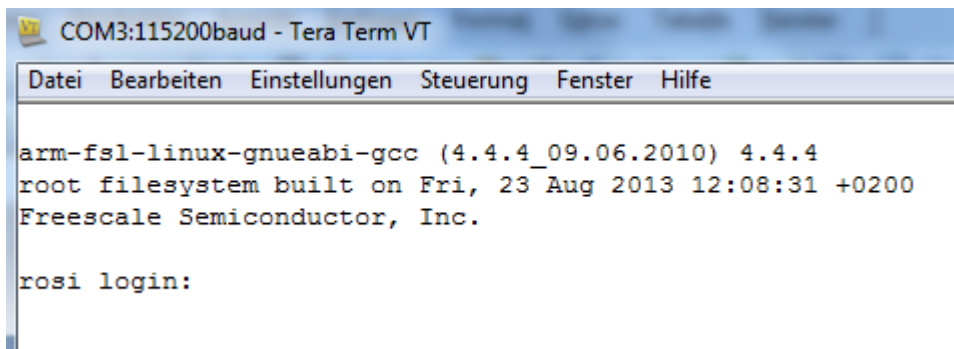

```
COM3:115200baud - Tera Term VT
Datei Bearbeiten Einstellungen Steuerung Fenster Hilfe

arm-fsl-linux-gnueabi-gcc (4.4.4_09.06.2010) 4.4.4
root filesystem built on Fri, 23 Aug 2013 12:08:31 +0200
Freescale Semiconductor, Inc.

rosi login:
```

Here are the login parameters:

login name: **root**

password:

for A3 -> **opusa3**

for A6 -> **opusa6**


for A8 -> **egspro**

for A6 G2 -> **egspro**

for B3/B4/B6 -> **egscore**

for B2 -> **opus-b2**

After logging in you will see a screen similar to this (it differs from device to device):

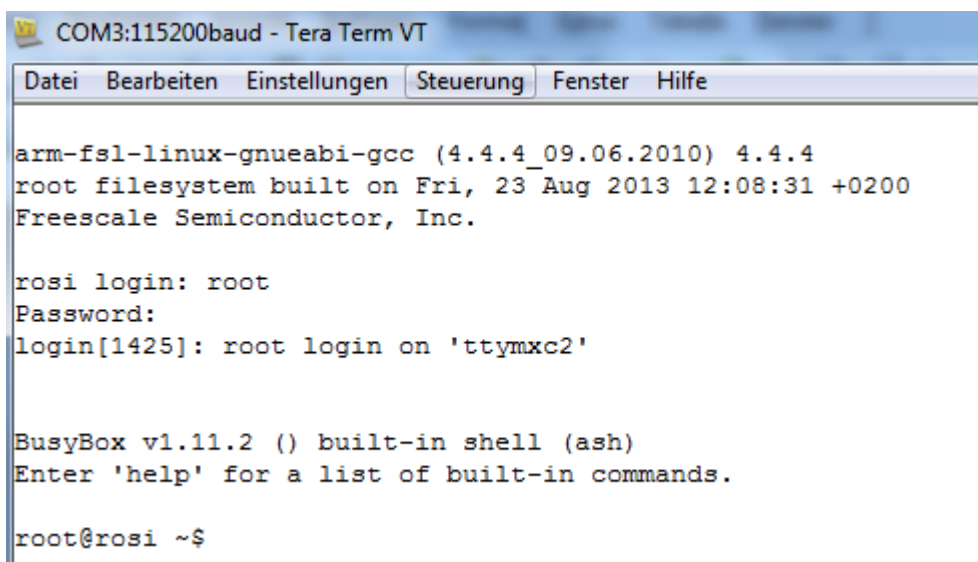

```
COM3:115200baud - Tera Term VT
Datei Bearbeiten Einstellungen Steuerung Fenster Hilfe

arm-fsl-linux-gnueabi-gcc (4.4.4_09.06.2010) 4.4.4
root filesystem built on Fri, 23 Aug 2013 12:08:31 +0200
Freescale Semiconductor, Inc.

rosi login: root
Password:
login[1425]: root login on 'ttymxc2'

BusyBox v1.11.2 () built-in shell (ash)
Enter 'help' for a list of built-in commands.

root@rosi ~$
```

Now you're logged into the Linux system on the device and you can execute commands.

16.4.2 Using a different boot logo image

Besides the processes described below, both in Codesys and OPUS Toolchain the boot logo can be changed within the

project.

To use your own boot logo image you need to prepare it for the update process. The image file(s) need to be in the correct solution:

- A3 / B2: 480x272
- A6 / A6 G2 / B3 / B4: 800x480
- A8 / B6: 1280 x 800

These are the names and formats you need to save the files in to be used in the update:

- **logo.png** for OS 1.x
- **logo_opusaX_2.X.png** for OS 2.x (exchange X with the appropriate numbers)
- **logo_egspro_a6-we-landscape.bmp** for OS EGSPRO with A6
- **recovery_egspro_a6-we-landscape.bmp** for OS EGSPRO with A6 (service mode)
- **logo_egspro_a8-we-landscape.bmp** for OS EGSPRO with A8
- **recovery_egspro_a8-we-landscape.bmp** for OS EGSPRO with A8 (service mode)
- **logo_egscore_bx-te-landscape.bmp** for OS EGSCORE with B3 / B4 / B6
- **recovery_egscore_bx-te-landscape.bmp** for OS EGSCORE with B3 / B4 / B6 (service mode)
- **logo_opus-b2-te-landscape.bmp** for OS 1.x with B2
- **recovery_opus-b2-te-landscape.bmp** for OS 1.x with B2 (service mode)

Additionally, you need to create the MD5 checksum file.

The checksum in the .md5 file needs to contain lower case letters and numbers only!

If you have an existing check sum file (e.g. from our boot logo), you can create the check sum online, e.g. on https://emn178.github.io/online-tools/md5_checksum.html and replace the existing checksum in the .md5 file with the newly created one.

You can also use a Windows tool like WinMD5sum: <http://www.nullriver.com/products/winmd5sum/>

Lastly, you can use the Linux system on our device to create the checksum file. Follow these steps to do that:

1. Create the image file as described above
2. Put the image on a FAT32 formatted USB stick
3. Log in to the serial console (login: root, password: A3: opusa3, A6: opusa6, A6 G2 & A8: egspiro)
- 3b. Connect the USB stick to the running device
4. Check that the USB stick is mounted to /disk/usb_sda1 by executing the command `df`
5. Note the path of the USB stick

6. Write and execute the command:

```
md5sum /disk/usbsda1/logo.png > /disk/usbsda1/logo.png.md5  
(for OS 1.x)
```

```
md5sum /disk/usbsda1/logo_opusaX_2.X.png  
> /disk/usbsda1/logo_opusaX_2.X.png.md5  
(for OS 2.x)
```

```
md5sum /disk/usbsda1/logo_egspro_a6-we-landscape.bmp  
> /disk/usbsda1/logo_egspro_a6-we-landscape.bmp.md5  
(for OS EGSPRO)
```

```
md5sum /disk/usbsda1/logo_egscore_b3-te-landscape.bmp  
> /disk/usbsda1/logo_egscore_b3-te-landscape.bmp.md5  
(for OS EGSCORE)
```

```
md5sum /disk/usbsda1/logo_opus-b2-te-landscape.bmp  
> /disk/usbsda1/logo_opus-b2-te-landscape.bmp.md5  
(for OS EGSCORE)
```

(Change the USB path if the stick was mounted in a different place)

```

COM7:115200baud - Tera Term VT
Datei Bearbeiten Einstellungen Steuerung Fenster Hilfe
rosi login: root
Password:
Welcome on /
i.MX35 platform
by / Wachendorff Elektronik GmbH & Co. KG

/opt          user apps (mounted before running user start scripts)
/opt/etc/init.d  user start scripts
/opt/share/fonts Qt fonts

* To start an application automatically at boot, place a user start script
  in /opt/etc/init.d and set execution flag
* Scripts are called in alphabetic order at boot (with parameter "start") and
  vice versa at shutdown (with parameter "stop")
* Qt libraries are located under /usr/local/Qt
* Qt default environment is set on console and user start scripts

For more information please read the C/C++ Developer Guide for OPUS A3
=====
login[961]: root login on 'ttymxc2'

BusyBox v1.20.2 () built-in shell (ash)
Enter 'help' for a list of built-in commands.

root@rosi ~$ df
Filesystem            1K-blocks      Used Available Use% Mounted on
/dev/root              28288        28288          0 100% /
/dev/ubi0_0            9836          20      9288   0% /diag
/dev/ubi0_1           865116       16384    843896   2% /opt
/dev/sda1             15101160      8488    15092672   0% /disk/usbsda1
root@rosi ~$ md5sum /disk/usbsda1/logo_opusa3_2.x.png > /disk/usbsda1/logo_opusa
3 2.x.png.md5
root@rosi ~$
root@rosi ~$
root@rosi ~$ ls /disk/usbsda1/
logo_opusa3_2.x.png      logs          updater
logo_opusa3_2.x.png.md5 manuals
root@rosi ~$ cat /disk/usbsda1/logo_opusa3_2.x.png.md5
23f5b92c9afae1f44b33dcaaebeabe1e1 /disk/usbsda1/logo_opusa3_2.x.png

```

7. Check if the file was created by executing `ls /disk/usbsda1` and, optionally, `cat /disk/usbsda1/<filename>.md5`

The MD5 file has to be encoded in ANSI or UTF8 without BOM. UTF8 doesn't work.

The letters in the checksum have to be lower case.

The line endings in the .md5 file have to be Linux line endings (LF only)

You can use these two files in the update process described above now and the boot logo will be changed to that image. Be aware that you always have to re-create the md5 checksum file when you change the boot logo image.

There is a second way to change the boot logo directly on one device (quicker for one device, but not suitable for several devices):

1a . (**OPUS A3/A6 G1**). Create a **png** image in the appropriate resolution (A3: 480x272, A6: 800x480)

1b . (**OPUS A6G2/A8**). Create a **bmp** image in the appropriate resolution (A6 G2: 800x480, A8: 1280x800)

1c . (**OPUS B3/B4/B6**). Create a **bmp** image in the appropriate resolution (B3/B4: 800x480, B6: 1280x800)

1d . (**OPUS B2**). Create a **bmp** image in the appropriate resolution (B2: 480x272, B2 +: 800x480)

2. Put the image on a FAT32 formatted USB stick

3. Log in to the serial console (see chapter 4.1)

3b. Connect the USB stick to the running device

4. Check that the USB stick is mounted to /disk/usbda1 by executing the command `df`

5. Note the path of the USB stick

6 a. (**OPUS A3/A6 G1**). Write and execute the command:

`setbootlogo /disk/u-sbda1/imagename.png` (change "imagename" to the actual name of the image, and change the USB path if necessary)

6 b. (**EGSPRO/EGSCORE/B2 devices**). To copy the boot logo for the normal start, please use the following command (<image.bmp> is the path to the image file):

`cp <image.bmp> /boot/logo.bmp`

To change the recovery boot logo, use this command:

`cp <image.bmp> /boot/recovery.bmp`

Afterwards, execute the command

`sync`

```

COM7:115200baud - Tera Term VT
Datei Bearbeiten Einstellungen Steuerung Fenster Hilfe

Welcome to OPUS A3 Embedded Linux Environment

rosi login: root
Password:

Welcome on /
i.MX35 platform
by /_/_/ Wachendorff Elektronik GmbH & Co. KG

/opt          user apps (mounted before running user start scripts)
/opt/etc/init.d  user start scripts
/opt/share/fonts Qt fonts

* To start an application automatically at boot, place a user start script
  in /opt/etc/init.d and set execution flag
* Scripts are called in alphabetic order at boot (with parameter "start") and
  vice versa at shutdown (with parameter "stop")
* Qt libraries are located under /usr/local/Qt
* Qt default environment is set on console and user start scripts

For more information please read the C/C++ Developer Guide for OPUS A3
=====
login[967]: root login on 'ttyMXC2'

BusyBox v1.20.2 () built-in shell (ash)
Enter 'help' for a list of built-in commands.

root@rosi ~$ df
Filesystem            1K-blocks      Used Available Use% Mounted on
/dev/root              28288        28288          0 100% /
/dev/ubi0_0            9836         20          9288  0% /diag
/dev/ubi0_1          865116       16384      843896  2% /opt
/dev/sda1            15101160       8496    15092664  0% /disk/usbsda1
root@rosi ~$
root@rosi ~$ setbootlogo /disk/usbsda1/logo_opusa3_2.x.png
Erasing 128 Kibyte @ 2e0000 -- 100 % complete
bootlogo changed successfully
root@rosi ~$


```

16.4.3 Manual update of the boot loader and service ramdisk (OS 1.x)

If the wrong boot loader and/or service ramdisk have been installed (e.g. A6 files on A3 or vice versa), you need to install the correct boot loader / service ramdisk file manually. For OS 2.x this doesn't work anymore because the filenames containing the display name prohibit a wrong installation.

16.4.3.1 Manual update of the boot loader

1. **Connect to the serial console** of the powered device (see chapter 4.1). Be aware that this **doesn't work with the program PuTTY!** Hyperterminal and Tera Term will work. Then unplug the power from the device and be sure the shell program is in focus on your PC.
2. **Press CTRL + C** on your keyboard, hold it pressed and then **power on the device**. If you were successful you will see the following screen:

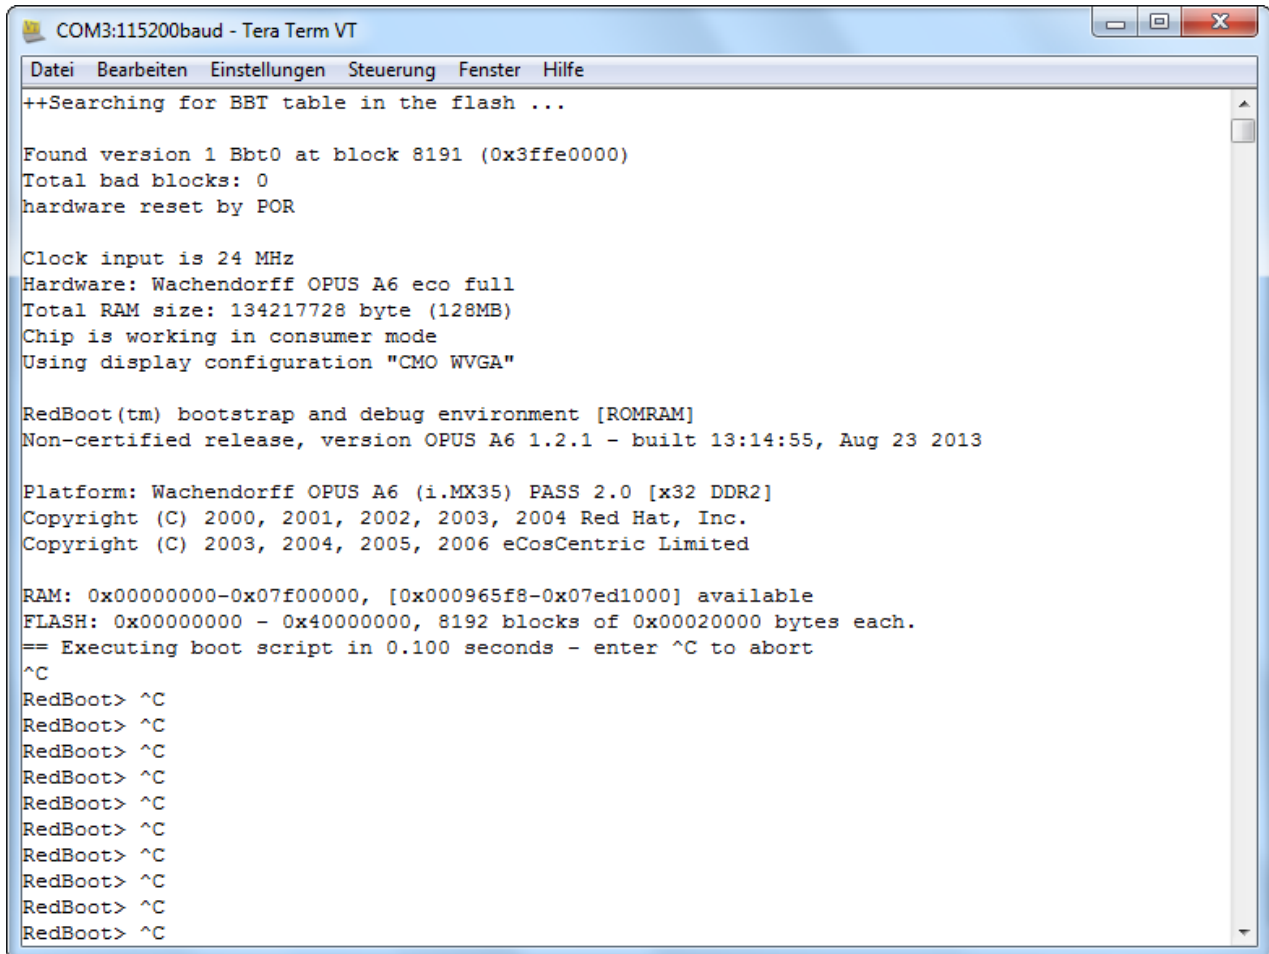

```
COM3:115200baud - Tera Term VT
Datei Bearbeiten Einstellungen Steuerung Fenster Hilfe
++Searching for BBT table in the flash ...

Found version 1 Bbt0 at block 8191 (0x3ffe0000)
Total bad blocks: 0
hardware reset by POR

Clock input is 24 MHz
Hardware: Wachendorff OPUS A6 eco full
Total RAM size: 134217728 byte (128MB)
Chip is working in consumer mode
Using display configuration "CMO WVGA"

RedBoot(tm) bootstrap and debug environment [ROMRAM]
Non-certified release, version OPUS A6 1.2.1 - built 13:14:55, Aug 23 2013

Platform: Wachendorff OPUS A6 (i.MX35) PASS 2.0 [x32 DDR2]
Copyright (C) 2000, 2001, 2002, 2003, 2004 Red Hat, Inc.
Copyright (C) 2003, 2004, 2005, 2006 eCosCentric Limited

RAM: 0x00000000-0x07f00000, [0x000965f8-0x07ed1000] available
FLASH: 0x00000000 - 0x40000000, 8192 blocks of 0x00020000 bytes each.
== Executing boot script in 0.100 seconds - enter ^C to abort
^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
RedBoot> ^C
```

Once you see the RedBoot> prompt, you can let go of CTRL + C.
If this doesn't work, close TeraTerm/HyperTerminal and start it again.

3. Have the correct boot loader file (*Redboot_RAM.bin*) ready on your computer.


Now enter the following command:

```
load -r -b 0x100000 -m ymodem
```


The device now waits for you to send a file.

Depending on the program you're using, send the boot loader file using the **ymodem** protocol.

For Tera Term:

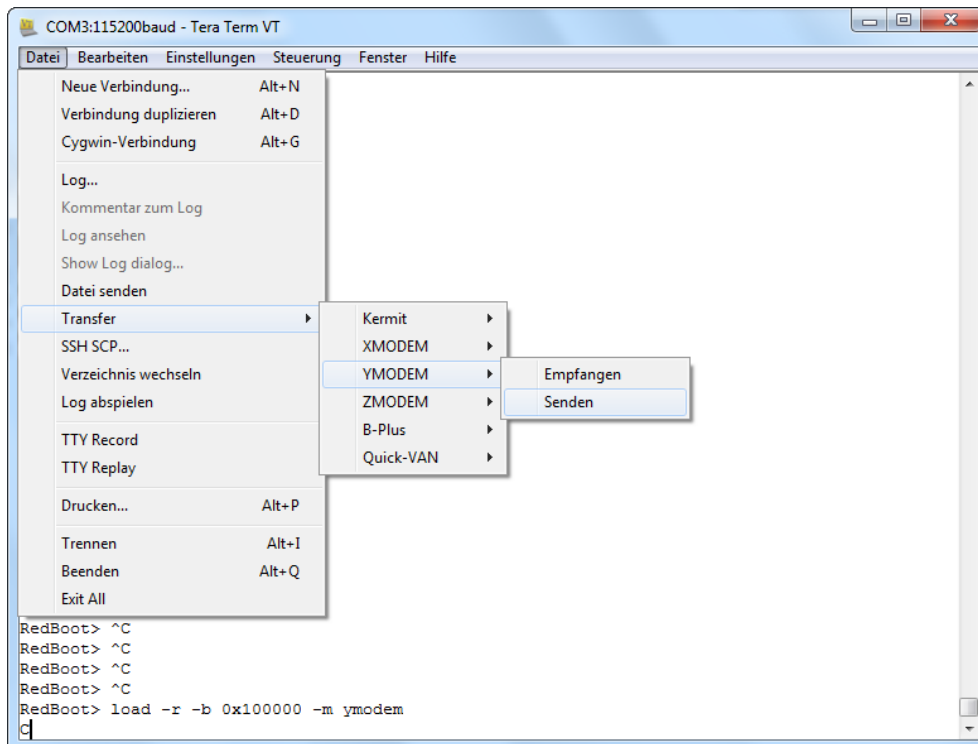


In HyperTerminal choose the menu **Transfer -> Send file** and choose the boot loader file in the dialog:

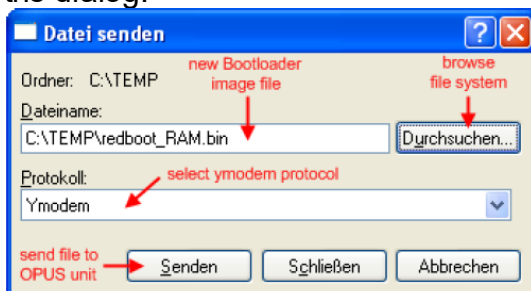


Then a dialog which shows the file transfer progress is displayed.

Tera Term:

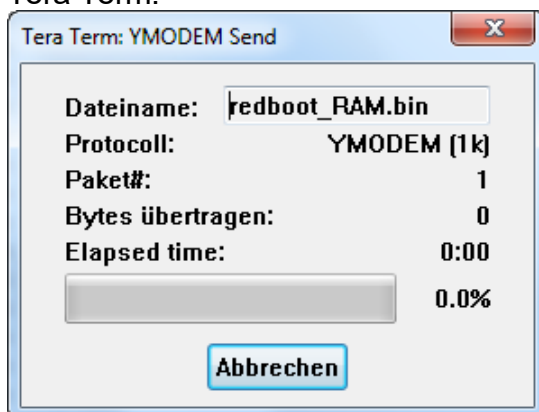

HyperTerminal:

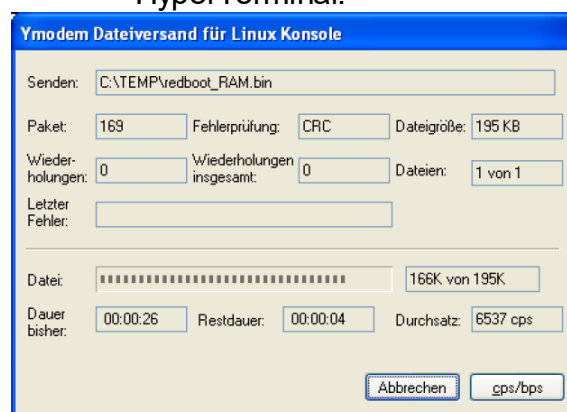

The file transfer will take about 30 seconds. After successful file transfer the dialog is closed automatically and you will retrieve the boot prompt again.

4. Now start the boot loader by entering the command

```
run
```

but

5. stop the execution of the boot script by pressing CTRL+C instantly after pressing Enter.

6. As a last step, the boot loader has to be programmed into the flash memory by entering the command

```
romupdate
```

Now power off the device and try installing the whole OS using the method described in chapter 3.

Here is what the complete process looks like on the serial console:

```
++Searching for BBT table in the flash ...
```

```
Found version 1 Bbt0 at block 8191 (0x3ffe0000)
```

```
Total bad blocks: 0
```

```
hardware reset by POR
```

```
Clock input is 24 MHz
```

```
Hardware: OPUS A3 standard full
```

```
Total RAM size: 268435456 byte (256MB)
```

```
Chip is working in consumer mode
```

```
Using display configuration "Seiko WQVGA"
```

```
RedBoot(tm) bootstrap and debug environment [ROMRAM]
```

```
Non-certified release, version OPUS A3 1.3.2-3 - built
```

```
15:12:00, Mar 25 2015
```

```
Platform: OPUS A3 (i.MX35) PASS 2.0 [x32 DDR2]
```

```
Copyright (C) 2000, 2001, 2002, 2003, 2004 Red Hat, Inc.
```

```
Copyright (C) 2003, 2004, 2005, 2006 eCosCentric Limited
```

```
RAM: 0x00000000-0x07f00000, [0x00096618-0x07ed1000] available
```

```
FLASH: 0x00000000 - 0x40000000, 8192 blocks of 0x00020000 bytes each.
```

```
== Executing boot script in 0.100 seconds - enter ^C to abort
```

```
^C
```

```
RedBoot> ^C STEP 2
```

```
RedBoot> ^C
```

```
RedBoot>
```

```
RedBoot> load -r -b 0x100000 -m ymodem STEP 3
```

```
CCRaw file loaded 0x00100000-0x0013218b, assumed entry at 0x00100000
```

```
xyzModem - CRC mode, 0(SOH)/202(STX)/0(CAN) packets, 6 retries
```

```
RedBoot> run STEP 4
```

```
load_entry_address=0x100000
```

```
virt_addr=0x100000
```



```

phys_addr=0x80100000
++Searching for BBT table in the flash ...

Found version 1 Bbt0 at block 8191 (0x3ffe0000)
Total bad blocks: 0
hardware reset by POR

Clock input is 24 MHz
Hardware: OPUS A3 standard full
Total RAM size: 268435456 byte (256MB)
Chip is working in consumer mode
Using display configuration "Seiko WQVGA"

RedBoot(tm) bootstrap and debug environment [ROMRAM]
Non-certified release, version OPUS A3 1.3.2-3 - built
15:12:00, Mar 25 2015

Platform: OPUS A3 (i.MX35) PASS 2.0 [x32 DDR2]
Copyright (C) 2000, 2001, 2002, 2003, 2004 Red Hat, Inc.
Copyright (C) 2003, 2004, 2005, 2006 eCosCentric Limited

RAM: 0x00000000-0x07f00000, [0x00096618-0x07ed1000] available
FLASH: 0x00000000 - 0x40000000, 8192 blocks of 0x00020000 bytes
each.
== Executing boot script in 0.100 seconds - enter ^C to abort
^C
RedBoot> ^C          STEP 5
RedBoot> ^C
RedBoot>
RedBoot> romupdate          STEP 6
Updating ROM in NAND flash
RedBoot>

```

16.4.3.2 Manual update of the service ramdisk

If the update still won't start, you also have to update the service ramdisk. For this, have the file *zimage.service* ready on your computer and follow the same steps as for the boot loader file up to step 3, where you send the file *zimage.service*.

The loading of this file takes about 15 to 25 minutes; please be patient and wait until it is finished!

After you've returned to the boot prompt, install the service ramdisk by entering the command

```
fis create service.
```

The line

```
"An image named 'service' exists - continue (y/n)?"
```

is displayed, confirm by entering "y". After that power off the device and install the correct OS again using the method described in chapter 3.

16.4.4 Touch Screen Calibration

Devices with a resistive touch need a calibration after an update of the user application (i.e. when the /opt folder is deleted during the update), or if the touch doesn't work as expected, anymore.

Calibration after Update

After an update that deletes the /opt folder, i.e. after the installation of a OS / user tar file through the service mode, the calibration file is deleted. Because of that the calibration is executed automatically at the first start up of the device.

Calibration because of bad touch performance

If the touch doesn't work well, it might help to re-calibrate the touch screen.
To do that, there are several ways:

1. From the application:

With Projektor/PCClient, the calibration can be started using the JavaScript command
`startTouchscreenCalibration()` ;

With CODESYS, the calibration can be started using the Driver module Driver -> System -> TSCalibrate and then in code the command `TSCalibrate.Trigger()` ;

2. Through deleting the calibration file

When the device starts up it is checked if the calibration file exists. If it doesn't, the calibration program will be executed.

So to force the calibration to be executed at start up, the calibration file can be deleted.
This can be done through the [serial console](#)⁹¹⁷.

The command to delete the file is: `rm /opt/etc/pointercal`

Afterwards execute the following command to restart the device: `reboot`

After the restart the calibration will be started.

3. Through the serial console

The calibration program can also be executed directly from the serial console, using the command `ts_calibrate`

However, this can be slightly problematic if another GUI application is running, because then both applications, the user application and the calibration program, will paint on the screen and it can be difficult to do the calibration properly.

To work around that, the running application should be stopped.

In case of **PCClient**, use the command: `/opt/etc/init.d/02_pclient stop`

Then execute the calibration program: `ts_calibrate`

And once the calibration has finished, restart the


PCClient: `/opt/etc/init.d/02_pclient start`

In case of **CODESYS**, use the command: `/opt/CoDeSysControl/Files/run stop`
Then execute the calibration program: `ts_calibrate`
And once the calibration has finished, restart the
PC client: `/opt/CoDeSysControl/Files/run start`

In case of a customer programmed **C++ application**, consult the vendor of the vehicle/system for the exact command.


Calibrating the Device

When the calibration is started, this will be the first screen:

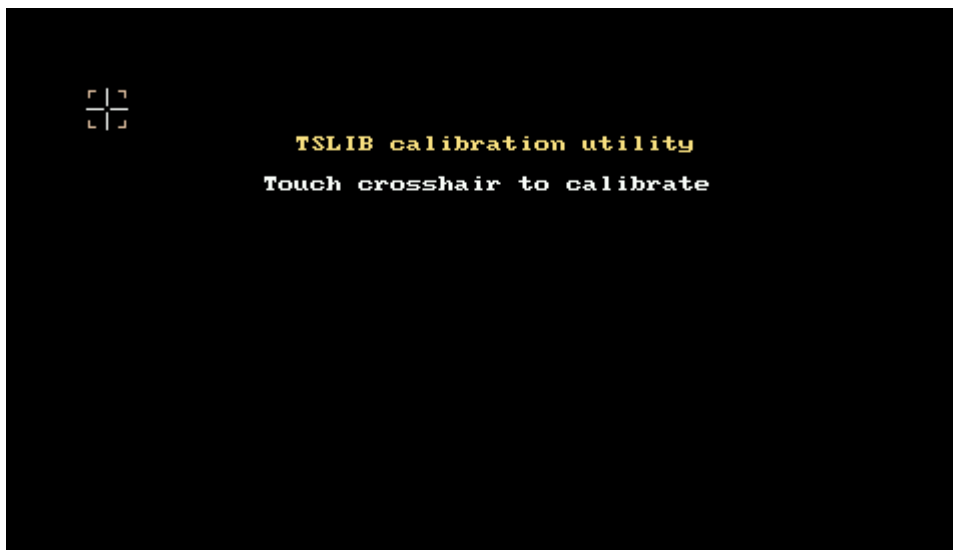

Press the cross hair in the upper left corner once, firmly, with your thumb (NOT with a touch pen or anything else).

When this is done, the cross hair will be shown in the upper right corner:

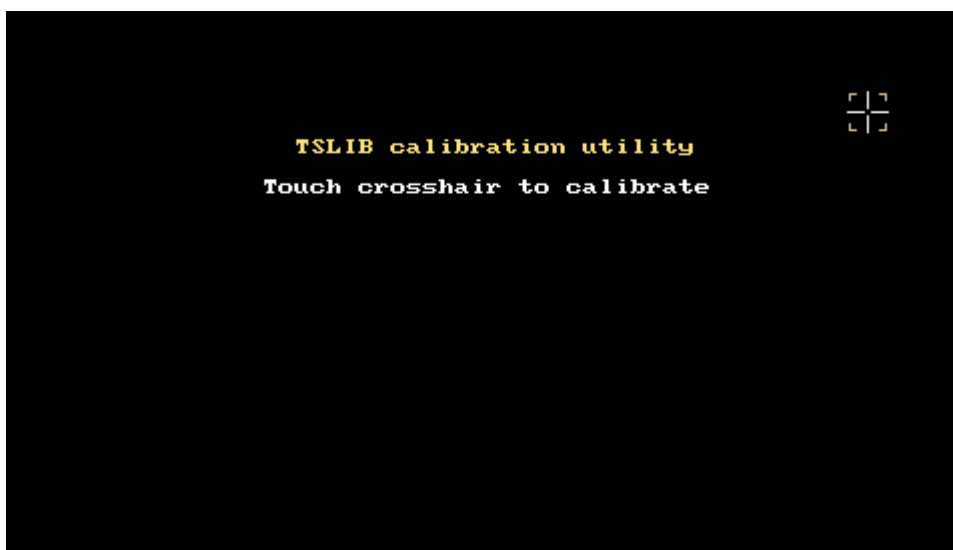

Press the cross hair again, one time, with a firm thumb press, and continue like that with the cross hairs in the lower right, lower left and center.

If the calibration went wrong, i.e. there was a double press and the cross hair "jumped" two positions at once, repeat the calibration in one of the ways described above.

On the serial console, the output while running the calibration, looks like this:

```
root@rosi /$ ts_calibrate
xres = 480, yres = 272
Took 24 samples...
Top left : X = 3593 Y = 3072
Took 34 samples...
Top right : X = 476 Y = 3211
Took 36 samples...
Bot right : X = 542 Y = 657
Took 43 samples...
Bot left : X = 3633 Y = 806
Took 46 samples...
Center : X = 2075 Y = 2098
497.903076 -0.122414 -0.002674
275.258942 0.000120 -0.070859
Calibration constants: 32630576 -8022 -175 18039370 7 -4643
65536
```

Note that xres and yres will differ depending on the device that is calibrated (the example above is from an A3, for A6 it will be 800 and 480, respectively).

Also note that the values for X and Y and the calibration constants will differ for each device depending on each individual touch screen.

Testing the touch screen

There is also a touch screen test program installed with the Linux operating system. This can be started through the serial console with the command `ts_test`

Note that for this to work best the running application should be stopped as described [above](#).

The touch screen test program can be stopped by pressing CTRL+C on the serial console.